Fluctuation data analysis in Fusion Relevant Plasmas

N. Vianello

Motivation & Outline

Diagnostics provides information with different time and spatial resolution

- 1. Localized measurements
 - (a) Measurements coming from a single point
 - (b) Spatially distributed arrays of measurements (resolving portion of the plasma or entire torus)
- 2. Line integrated measurements
 - (a) Single Line of Sight
 - (b) Arrays of LoS

Motivation & Outline

Diagnostics provides information with different time and spatial resolution

- 1. Localized measurements
 - (a) Measurements coming from a single point
 - (b) Spatially distributed arrays of measurements (resolving portion of the plasma or entire torus)
- 2. Line integrated measurements
 - (a) Single Line of Sight
 - (b) Arrays of LoS

Motivation & Outline

Diagnostics provides information with different time and spatial resolution

- 1. Localized measurements
 - (a) Measurements coming from a single point
 - (b) Spatially distributed arrays of measurements (resolving portion of the plasma or entire torus)
- 2. Line integrated measurements
 - (a) Single Line of Sight
 - (b) Arrays of LoS





▶ The Direct and Inverse fourier transform of a generic function of time x(t) is defined as :

$$X(f) = \int_{-\infty}^{+\infty} x(t) e^{-2\pi i f t} dt$$

$$x(t) = \int_{-\infty}^{+\infty} X(f) e^{2\pi i f t} \mathrm{d}f$$



The Direct and Inverse fourier transform of a generic function of time x(t) is defined as :

$$X(f) = \int_{-\infty}^{+\infty} x(t) e^{-2\pi i f t} dt$$

$$X(t) = \int_{-\infty}^{+\infty} X(f) e^{2\pi i f t} df$$

In the case of discrete signals $x_n = x(n\Delta t)$ with $0 \le n \le N-1$, sampled at frequency $f_c = \frac{1}{\Delta t}$ we have the corresponding Direct and Inverse Discrete Fourier transform

$$X_n = \frac{1}{N} \sum_{k=0}^{N-1} x_k e^{-2\pi k n/N}$$

$$x_k = \frac{1}{N} \sum_{n=-N/2}^{N/2} X_n e^{2\pi k n/N}$$



The Direct and Inverse fourier transform of a generic function of time x(t) is defined as :

$$X(f) = \int_{-\infty}^{+\infty} x(t) e^{-2\pi i f t} dt$$

$$X(t) = \int_{-\infty}^{+\infty} X(f) e^{2\pi i f t} df$$

In the case of discrete signals $x_n = x(n\Delta t)$ with $0 \le n \le N-1$, sampled at frequency $f_c = \frac{1}{\Delta t}$ we have the corresponding Direct and Inverse Discrete Fourier transform

$$X_n = \frac{1}{N} \sum_{k=0}^{N-1} x_k e^{-2\pi k n/N}$$

$$x_k = \frac{1}{N} \sum_{n=-N/2}^{N/2} X_n e^{2\pi k n/N}$$

▶ The Sampling Theorem (Bracewell 1999) ensure that a function whose Fourier transform is zero for $f > f_c$ is fully specified by values spaced at equal intervals not exceeding $\frac{1}{2}f_c^{-1}$



The Direct and Inverse fourier transform of a generic function of time x(t) is defined as:

$$X(f) = \int_{-\infty}^{+\infty} x(t) e^{-2\pi i f t} dt$$

$$X(t) = \int_{-\infty}^{+\infty} X(f) e^{2\pi i f t} df$$

In the case of discrete signals $x_n = x(n\Delta t)$ with $0 \le n \le N-1$, sampled at frequency $f_c = \frac{1}{\Delta t}$ we have the corresponding Direct and Inverse Discrete Fourier transform

$$X_n = \frac{1}{N} \sum_{k=0}^{N-1} x_k e^{-2\pi k n/N}$$


$$x_k = \frac{1}{N} \sum_{n=-N/2}^{N/2} X_n e^{2\pi k n/N}$$

▶ The Nyquist Frequency $f_N = \frac{1}{2\Delta t}$, defines the maximum frequency which can be properly resolved, or, equivalently, given the frequency of the system we would like to investigate, we had to sample at least at twice the values of this frequency.





➤ The presence of frequency higher than the Nyquist frequency may lead to the presence of spurious frequency

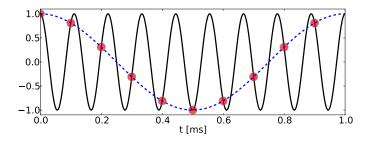

▶ A 9 kHz cosine if sampled at 10 kHz exhibits a spurious 1 kHz oscillation



Properties of Fourier transform

▶ Various theorems may be applied to FT (Bracewell 1999) among which we cite:

Theorem

<u>Convolution theorem:</u> If x(t) and g(t) have FT respectively equal to X(f) and G(f) the convolution of the two functions $h(t) = \int_{-\infty}^{+\infty} x(t')g(t-t')\mathrm{d}t'$ is equal to X(f)G(f)

Theorem

<u>Rayleigh's Theorem</u> The integral of squared modulus of a function is equal to the integral of the squared modulus of its spectrum, i.e:

$$\int_{-\infty}^{+\infty} |f(t)|^2 dt = \int_{-\infty}^{+\infty} |F(f)|^2 df$$

Single Point: the autocorrelation function

A random process x(t) is completely described by its moments, i.e. averages over the probability distribution function

$$E[x(t)]$$
 $E[x(t_1)x(t_2)]$ $E[x(t_1)x(t_2)x(t_3)]$...

▶ We define the Auto-correlation function, i.e. the second order momentum of the distribution, and the autocovariance function

$$R(\tau) = E|x(t)x(t-\tau)|$$

$$R(\tau) = E|x(t)x(t-\tau)| \qquad C(\tau) = E|(x(t)-m)(x(t-\tau)-m)|$$


being m the average of x(t)

- ▶ The Auto-correlation coefficient factor is defined as $\rho(\tau) = C(\tau)/C(0)$
- For digitized signals with N samples the estimator of $C(\tau)$ is defined as

$$C_j = \frac{1}{N} \sum_{i=j}^{N-1} (x_i - \overline{x})(x_{i-j} - \overline{x}) \qquad \overline{x} = \frac{1}{N} \sum_{i=0}^{N-1} x_i$$

Auto-correlation: practical use

Define the Auto-correlation time of a turbulent field such as the potential: $R(\tau_c) = \frac{\max(R(\tau))}{e}$

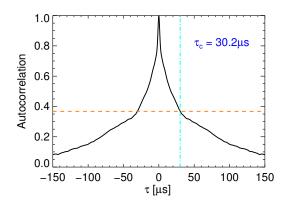



▶ The Power spectrum S(f) is defined as the Fourier transform of the Autocorrelation-function.



- ▶ The Power spectrum S(f) is defined as the Fourier transform of the Autocorrelation-function.
- ▶ It describes the frequency distribution of the *power of the signal*.


- The Power spectrum S(f) is defined as the Fourier transform of the Autocorrelation-function.
- ▶ It describes the frequency distribution of the *power of the signal*.
- It corresponds to the limit of the periodogram of limited signals $x_T(t)$ $\xrightarrow{E[FT(x_T(t))^2]} \xrightarrow{T} S(f)$

- ▶ The Power spectrum S(f) is defined as the Fourier transform of the Autocorrelation-function.
- ▶ It describes the frequency distribution of the *power of the signal*.
- It corresponds to the limit of the periodogram of limited signals $x_T(t)$ $\xrightarrow{E[FT(x_T(t))^2]} \xrightarrow[T \to \infty]{} S(f)$
- Numerically, the signal is divided into M slices, treated as independent realizations, and we compute the power spectral estimator \hat{S}_n related to the real power spectrum $S(f_n)$ according to

$$\hat{S}_n = \frac{1}{M} \sum_{k=1}^M |X_n^{(k)}|^2; \qquad \hat{S}_n \simeq S(f_n) \Delta f$$


Power spectrum: practical use


 Mode identification at a given frequency (Conway et al. 2005)

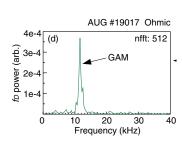


Power spectrum: practical use

 Mode identification at a given frequency (Conway et al. 2005)

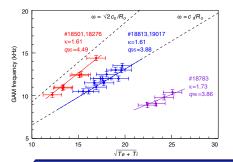

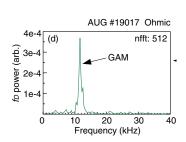

 Information must be completed. In the example Geodesic Acoustic Modes identified considering their scaling with c_s

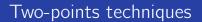



 Spatially distributed measurements allow access to spatial structure of the fluctuations



- Spatially distributed measurements allow access to spatial structure of the fluctuations
- The minimum set includes two measurements x(t) and y(t). We can define the Cross-correlation function, The cross-covariance function and the cross-correlation coefficient function

$$R_{xt}(\tau) = E[y(t)x(t-\tau)]$$

$$C_{xy}(\tau) = E[(y(t) - \overline{y})(x(t-\tau) - \overline{x})]$$

$$\rho_{yx}(\tau) = \frac{C_{yx}(\tau)}{\sqrt{C_{xx}(0)C_{yy}(0)}}$$



- Spatially distributed measurements allow access to spatial structure of the fluctuations
- The minimum set includes two measurements x(t) and y(t). We can define the Cross-correlation function, The cross-covariance function and the cross-correlation coefficient function

$$R_{xt}(\tau) = E[y(t)x(t-\tau)]$$

$$C_{xy}(\tau) = E[(y(t) - \overline{y})(x(t - \tau) - \overline{x})]$$

$$ho_{yx}(au) = rac{C_{yx}(au)}{\sqrt{C_{xx}(0)C_{yy}(0)}}$$

▶ The discrete counterpart of the cross-covariance is defined as

$$C_{y \times ,j} = \frac{1}{N} \sum_{i=i}^{N-1} (y_i - \overline{y})(x_{i-j} - \overline{x})$$



In analogy to the power spectrum we define the Cross-power spectrum $S_{XY}(f)$ as the Fourier transform of the cross-correlation function



- In analogy to the power spectrum we define the Cross-power spectrum $S_{XY}(f)$ as the Fourier transform of the cross-correlation function
- If x(t) and y(t) are real function, the cross-power spectrum is totally defined by the positive frequency only



- In analogy to the power spectrum we define the Cross-power spectrum $S_{XY}(f)$ as the Fourier transform of the cross-correlation function
- If x(t) and y(t) are real function, the cross-power spectrum is totally defined by the positive frequency only
- The cross-spectrum is complex-valued $S_{YX}(f) = |S_{YX}(f)|e^{i\Theta_{YX}(f)}$ with $\Theta_{YX}(f)$ equal to the Phase spectrum



- In analogy to the power spectrum we define the Cross-power spectrum $S_{XY}(f)$ as the Fourier transform of the cross-correlation function
- If x(t) and y(t) are real function, the cross-power spectrum is totally defined by the positive frequency only
- The cross-spectrum is complex-valued $S_{YX}(f) = |S_{YX}(f)|e^{i\Theta_{YX}(f)}$ with $\Theta_{YX}(f)$ equal to the Phase spectrum
- We define the coherence as $\gamma_{YX}(f) = \frac{|S_{YX}(f)|}{\sqrt{S_Y(f)S_X(f)}}$



- In analogy to the power spectrum we define the Cross-power spectrum $S_{XY}(f)$ as the Fourier transform of the cross-correlation function
- If x(t) and y(t) are real function, the cross-power spectrum is totally defined by the positive frequency only
- The cross-spectrum is complex-valued $S_{YX}(f) = |S_{YX}(f)|e^{i\Theta_{YX}(f)}$ with $\Theta_{YX}(f)$ equal to the Phase spectrum
- We define the coherence as $\gamma_{YX}(f) = \frac{|S_{YX}(f)|}{\sqrt{S_Y(f)S_X(f)}}$
- In the case of discrete signals with finite temporal length the following definitions hold (in analogy to single point case)

$$\hat{S}_{Y,X,n} = \frac{1}{M} \sum_{k=1}^{M} Y_n^{(k)} X_n^{*(k)} \qquad \hat{S}_{Y,X,n} \simeq S_{YX}(f_n) \Delta f$$






 The method can be applied also in the case of two quantities measured on the same location






- The method can be applied also in the case of two quantities measured on the same location
- In the case of Langmuir probes for example, electron density n_e and plasma potential ϕ_p are know in the same nominal position

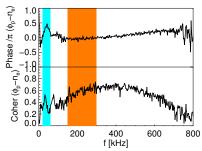

Phase spectrum



- ► The method can be applied also in the case of two quantities measured on the same location
- In the case of Langmuir probes for example, electron density n_e and plasma potential ϕ_p are know in the same nominal position

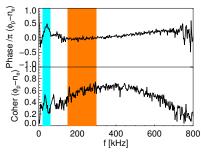

► This allow the possibility to distinguish the frequency where turbulence is Interchange-dominated from that where turbulence is Drift-dominated

Wave-vector estimate




► In the case of a reasonably deterministic dispersion relation between *k* and *f* , the phase may be used for the determination of *k*






- ▶ In the case of a reasonably deterministic dispersion relation between *k* and *f* , the phase may be used for the determination of *k*
- Wave vector is estimated from Phase spectrum

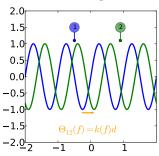

Wave-vector estimate



- ▶ In the case of a reasonably deterministic dispersion relation between *k* and *f*, the phase may be used for the determination of *k*
- ▶ Wave vector is estimated from Phase spectrum

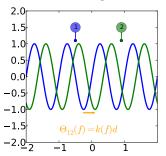

▶ Distance *d* must be less than a wave length, less than a correlation length, but far enough the detect a measurable phase difference



- Fluctuations induced particle flux is defined as $\Gamma = E[\tilde{n}(t)\tilde{v}(t)] = E[\tilde{n}(t)\tilde{E}(t)]/B$
- According to previous definitions and properties

$$\Gamma = \frac{1}{B}R_{nE}(\tau = 0) = \frac{2}{B}\int_0^{+\infty} \text{Re}[S_{nE}(f)]df$$

In quasi-static approximation $\tilde{E}=-\nabla\tilde{\phi}$, with finite record length T, and assuming a deterministic dispersion relation


$$\Gamma(f) = \frac{2k(f)}{B} \operatorname{Im} \{ S_{n\phi}(f) \}$$



$$\Gamma(f) = \frac{1}{M} \sum_{k=1}^{M} \Gamma^{k}(f) = \frac{2}{BM} \sum_{k=1}^{M-1} k^{(k)}(f) \operatorname{Im} \{ N^{(k)}(f) \Phi^{*(k)}(f) \}$$




$$\Gamma(f) = \frac{1}{M} \sum_{k=1}^{M} \Gamma^{k}(f) = \frac{2}{BM} \sum_{k=1}^{M-1} k^{(k)}(f) \operatorname{Im} \{ N^{(k)}(f) \Phi^{*(k)}(f) \}$$

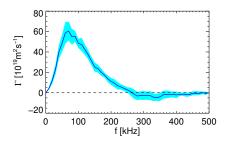




$$\Gamma(f) = \frac{1}{M} \sum_{k=1}^{M} \Gamma^{k}(f) = \frac{2}{BM} \sum_{k=1}^{M-1} k^{(k)}(f) \operatorname{Im} \{ N^{(k)}(f) \Phi^{*(k)}(f) \}$$

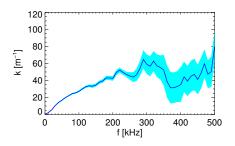




$$\Gamma(f) = \frac{1}{M} \sum_{k=1}^{M} \Gamma^{k}(f) = \frac{2}{BM} \sum_{k=1}^{M-1} k^{(k)}(f) \operatorname{Im} \{ N^{(k)}(f) \Phi^{*(k)}(f) \}$$

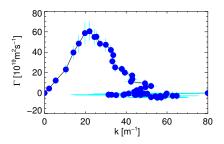



More than transport of particles

Similar method may be used for the determination of the *Reynolds stress* $\langle \tilde{v}_r \tilde{v}_\perp \rangle$ which play a role in the momentum generation for both Tokamak and RFPs as $\partial_t (V_\phi) \propto -\partial_r \langle \tilde{v}_r \tilde{v}_\phi \rangle + \dots$ (see e.g. (Vianello et al. 2005a,b, 2006))

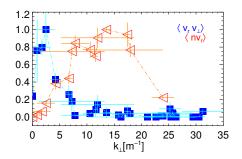



Beyond Fourier: Wavelet transform

▶ The Fourier decomposition uses trigonometric functions as orthogonal basis




Beyond Fourier: Wavelet transform

- ▶ The Fourier decomposition uses trigonometric functions as orthogonal basis
- ▶ These functions oscillates forever, i.e. the information spreaded



Beyond Fourier: Wavelet transform


- ▶ The Fourier decomposition uses trigonometric functions as orthogonal basis
- ▶ These functions oscillates forever, i.e. the information spreaded
- We need functions localized in time and scales ⇒ Wavelet Transform (Farge 1992; Mallat 1999).

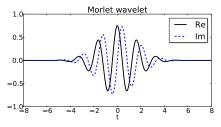

D

Beyond Fourier: Wavelet transform

- ▶ The Fourier decomposition uses trigonometric functions as orthogonal basis
- ▶ These functions oscillates forever, i.e. the information spreaded
- We need functions localized in time and scales ⇒ Wavelet Transform (Farge 1992; Mallat 1999).

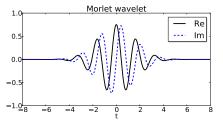


▶ Defining time-frequency atoms as $\psi_{s,\tau} = \frac{1}{\sqrt{\tau}} \psi\left(\frac{t-s}{\tau}\right)$ the Continuous Wavelet Transform is defined as

$$w(s,\tau) = \frac{1}{\sqrt{\tau}} \int_{-\infty}^{+\infty} f(t) \psi^* \left(\frac{t-s}{\tau}\right) dt$$



Wavelet application

► In analogy to Fourier we can define Wavelet Cross power spectrum and Corresponding phase spectrum (well localized in time/frequency)

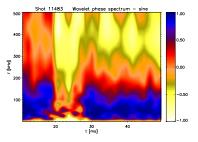

Phase spectrum between density and potential varies because of variation of the shear → responsible for transport reduction (Antoni et al. 2000)

Summary

- High temporal and spatial resolution are needed for better characterization of the plasma. But two points still gives a bunch of information
- Fourier transform allows estimate of quantities directly comparable with theories
- Often localized events (in space or time) require more sophisticated tools which maintain the locality of the information
- As much as possible correlation between different diagnostics are generally needed for an appropriate comprehension

Bibliography I

- V Antoni et al. "Electrostatic transport reduction induced by flow shear modification in a reversed field pinch plasma". In: *Plasma Physics and Controlled Fusion* 42.2 (2000), pp. 83–90.
- [2] Ronald Bracewell. *The Fourier Transform & Its Applications*. 3rd ed. McGraw-Hill Science/Engineering/Math, June 1999.
- [3] G D Conway et al. "Direct measurement of zonal flows and geodesic acoustic mode oscillations in ASDEX Upgrade using Doppler reflectometry". In: *Plasma Physics and Controlled Fusion* 47.8 (July 2005), pp. 1165–1185.
- [4] M Farge. "Wavelet Transforms and Their Applications to Turbulence". In: *Annual Review Of Fluid Mechanics* 24 (1992), pp. 395–457.
- [5] Stephane Mallat. A Wavelet Tour of Signal Processing, Second Edition (Wavelet Analysis & Its Applications). 2nd ed. Academic Press, Sept. 1999.
- [6] Nicola Vianello et al. "Reynolds and Maxwell stress measurements in the reversed field pinch experiment Extrap-T2R". In: *Nuclear Fusion* 45.8 (July 2005), pp. 761–766.
- [7] Nicola Vianello et al. "Self-Regulation of E×B Flow Shear via Plasma Turbulence". In: *Physical Review Letters* 94.13 (Apr. 2005), p. 135001.
- [8] Nicola Vianello et al. "Turbulence, flow and transport: hints from reversed field pinch".In: Plasma Physics and Controlled Fusion 48.4 (Mar. 2006), S193–S203.