# Operation Manual For The Silent Timer™

Timing Matters...



www.SilentTimer.com

# **TABLE OF CONTENTS**

I.	Features of The Silent Timer	3
II.	Diagram	5
III.	Set Up	6
	A. Installing the Battery	6
	B. Preparing the LCD Screen	
	C. Set Up	
	D. Turning the Timer Off	8
IV.	Introduction/Quick Directions	9
	A. Overview	9
	B. Quick Timer Setup	10
	C. Quick Timer Setup for Selected Tests	11
	D. Additional Options	
V.	Feature Definitions	13
	A. LCD Screen	13
	B. Control Buttons	16
	C. Numeric Keypad	21
	D. Preset Buttons	22
	E. Memory Buttons	24
	F. Answer Button	25
	G. Auto Mode Button	
	H. Passage Mode Button	
	I. Light	
	J. Reset Button	29

VI.	Using Your Timer	30	
	A. Clock Mode B. Test Mode		
	C. Auto Mode D. Passage Mode		
VII.	Frequently Asked Questions	44	
VIII.	Caring for Your Timer		
IX.	Legality		
X.	Troubleshooting		
XI.	Specifications		
XII.	Warranty		
XIII.	Terms and Conditions		
XIV.	Contact Information		

## I. FEATURES OF THE SILENT TIMER


Read the manual to find how these features work.

The Silent TimerTM:

- Is completely silent.
- Has a flashing light that alerts you when:
  - o you spend too much time on a question
  - o you are half-way through your test
  - o you have one minute remaining
- Tells you how many questions you have finished and how many questions you have left.
- Tells you how much time should be spent on each question.
- Allows you to track your time more accurately on test sections with reading passages
- Counts down time for each question.
- Counts total test time down and up, and you can switch between them during your test.
- Allows a clear view of the clock during testing.
- Has time functions that you can easily start and stop.

- Keeps counting after you have run out of time. When used on practice tests, this function tracks your time improvement until ultimately you finish in the allotted time.
- Use the kickstand to stand the timer on your desk, or fold the kickstand to lay it flat.
- Has rubber pads on the bottom of the timer to help keep it from sliding on your desk.

# II. DIAGRAM

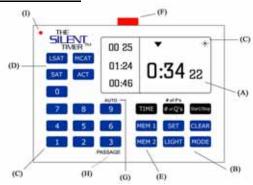

- (A) LCD screen
- (B) Control keypad
- (C) Numeric keypad
- (D) Preset memory buttons
- (E) User-defined memory
- (F) Answer button

- (G) Auto Mode activation button
- (H) Passage Mode activation button
- (I) Light
- (J) Reset Button (on back of timer)

# III. SET UP

## A. Installing the Battery

You must install the supplied CR2032, 3-volt button cell battery before using your Silent Timer<sup>TM</sup>.

- Remove the cover to the battery compartment on the back of The Silent Timer<sup>TM</sup>.
- Remove the battery from packaging. The battery is found in the plastic tray behind the quick start card.
- Slide the battery into the compartment between the case and the metal bridge. Writing should be face up.
- Replace the cover to the battery compartment.

When the display dims after prolonged usage, replace the battery with a fresh one. Bring an extra battery on test day just in case.

#### **Battery Warnings**

- Keep button-celled batteries away from children. Swallowing can be fatal.
- Dispose of old batteries promptly and properly. Do NOT burn or bury them.

## Removing the battery

The battery is removed by opening the battery compartment, then gently sliding the battery out towards you. You may need to use a fingernail or pen tip to help pry it out.

## B. Preparing the LCD Screen

A protective film protects the LCD screen. This film is removed by pulling on the pull-tab on the top right of the film. You can save the film for use during transportation.

# C. Set Up

The Silent Timer<sup>TM</sup> is built to sit still and sturdy on your writing surface. The angle of the case and the kickstand allow the timer to sit flat, and the non-slip rubber pads keep the timer in place.

#### Using the Kickstand:

- Locate the kickstand on the back of The Silent Timer<sup>TM</sup>.
- Simultaneously pull both edges of the kickstand away from the body of the timer. Stop pulling when fully extended.
- Place The Silent Timer<sup>TM</sup> in the upright position on any flat surface.

#### Alternate Use:

The Silent Timer<sup>TM</sup> may also be used without the kickstand by folding the kickstand and laying the timer flat on any surface.

## D. Turning Off The Silent Timer<sup>TM</sup>:

The Silent Timer<sup>TM</sup> does not have an "OFF" button. It has been designed to run at low power, and the battery should last approximately six to nine months. See <u>Chapter X</u> for more information and specifications.

To conserve battery power, leave the timer in Clock Mode when not in use. You can also remove the battery if you will not be using it for an extended period.

## IV. QUICK START INSTRUCTIONS

How to quickly set up your timer for tests.

#### A. Overview

The Silent Timer™ is a great time management tool for students. It allows students to track their time through their test so that they can finish on time.

Enter the time allotted for your test, and the number of questions you have to answer. The timer calculates the average time you have to answer each question. If you finish each question within the allotted time, you will be able to finish the test on time. If you take too long on a question, you will lose time on the rest of the questions.

The time-per-question feature does not have to be used. You can set up the timer to simply count up or count down your test time.

A new feature has been added to this model. It involves passages. Some tests have reading passages followed by a series of questions. Passage Mode allows for the time you need to read the passage and then allots the remaining time to the questions. As with time-per-question, this function does not need to be utilized.

Now that you have a general idea of what the timer is capable of, you can set it up quickly and begin studying!

## B. Quick Timer Set-up

- Follow the instructions in \_ to set up the timer for use (removal of the LCD screen cover and installation of the battery).
- 2. Press MODE until you see:



- 3. Press TIME and enter your total test time.
- 4. Press # of Q's and enter the number of questions on your test.\*
- 5. Press to turn on the light.
- 6. Press Start/Stop
- Press the red button after finishing each question.\*

<sup>\*</sup> To use as a simple count-down/up timer, skip both Steps 4 and 7.

## C. Quick Timer Set Up for ACT, LSAT, MCAT, or SAT:

Press MODE until you see:



- 2. Press TIME
- While the zeros are flashing, select your test (either ACT, SAT, MCAT, or LSAT) by pressing the corresponding button:



- Press the test's button repeatedly to scroll through the preset times.
- 5. Press # of Q's and enter your number of questions.\*
- 6. Press to turn on the light.
- 7. Press Start/Stop
- Press the red button after finishing each question. The timer will automatically recalculate your average time after each question.
   See <u>Chapter V, Section F</u> for more on the red button.\*

<sup>\*</sup> To use as a simple count-down/up timer, skip both Steps 5 and 8.

See Chapter V, Section D for the preset times.

## D. Additional Options

<u>Auto Mode</u>: automatically changes the question when the average time per question is up. See <u>Chapter VI</u>, <u>Section C</u> for more information.

<u>Passage Mode</u>: allows the user to input how much time he/she wants to spend reading each passage. The timer then calculates how much time should be spent on the questions. See <u>Chapter VI</u>, <u>Section D</u> for more information.


## V. FEATURE DEFINITIONS

This section defines the keypad buttons and their function as well as other timer features.

#### A. LCD Screen

The LCD screen is where all of your time and test data is displayed. This section defines the icons and tells you what the numbers mean.

The diagram below is an example of some of the numbers and icons you might see. You might not see all of the icons at the same time as shown; it depends on which modes and/or functions you are using.

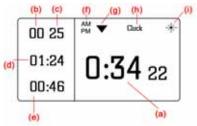

## (a) Total Time

When the arrow (g) is pointing downward, the timer is counting down from the start time. When the arrow is pointing upward (not shown), the timer is counting upwards from zero.

#### (b) Number of Questions Answered

The value at (c) is the number of questions that have been answered so far. As you press the red button (see <u>Section F</u>), this number will increase

## (c) Number of Questions Remaining

The value at (b) is the number of questions that have not been answered. As you press the red button (see <u>Section F</u>), this number will decrease

#### (d) Average Time per Question

The time on the test is divided by the number of questions to give the average time that can be spent on each question. This number updates after the red button (see Section F) is pressed.

## (e) Time Remaining per Question

This value reflects the amount of time you have left on that particular question. When it begins counting the time for that question, it is equal to the Average Time per Question (letter **d** above). It counts down from that value. As it approaches zero, the light flashes three times to indicate that you should move on to the next question. It will continue counting negative time until you press the red button (See Section F).

#### (f) AM / PM Icons

When in **Clock Mode** (see <u>Chapter VI, Section A</u>), the AM and PM icons indicate if the hour is in the morning (AM) or in the evening (PM). They cannot appear simultaneously when in Clock Mode.

When in **Test Mode** (see <u>Chapter VI, Section B</u>), the AM indicates that Auto Mode (see <u>Chapter VI, Section C</u>) is active. The PM indicates that Passage Mode (see <u>Chapter VI, Section D</u>) is active. The AM and PM may be visible at the same time.

#### (g) Downward / Upward Arrow Icon

The downward arrow indicates that the total time (letter **a**) is counting down. This reflects how much time you have remaining on the test section.

The upward arrow (not shown) indicates that the total time is counting up. This reflects how much time has been spent already.

#### (h) Clock Icon

The clock icon (see <u>Chapter VI, Section A</u>) is visible when you are in Clock Mode. It is not seen in any other mode.

## (i) Light Icon

When the Light icon is visible, the light function is on. This means that the light will flash at the preset intervals. When the function is disabled, the icon will not be visible. See <u>Section I</u> for more information on the Light.

## B. Control Keypad

The control keypad contains the buttons that start and stop time, change modes, and perform other functions.



#### (a) TIME

The **Time** button sets the time. When in Test Setup Mode or Passage Setup Mode, pressing **Time** allows the user to input the time using the numeric keypad (<u>Section C</u>).

## (b) # of Q's / # of P's

When in Test Setup Mode, the # of Q's button allows the user to input the number of questions using the numeric keypad. This button shares functionality with # of P's when in Passage Setup Mode.

#### (c) Start/Stop

Pressing **Start/Stop** in Test Setup Mode begins the time counting. Pressing it again pauses the time (all of the current values remain). Pressing **Start/Stop** a third time, restarts the time and continues where you left off.

#### (d) MEM 1 and MEM 2

These two buttons are used to store custom times and number of questions. See Section  $\underline{E}$  for more on the memory buttons.

#### (e) SET

The **SET** button has several functions. In Clock Setup Mode, pressing **SET** allows the user to input the current time. During Test Mode, **SET** switches between Count Down and Count Up mode (the arrows defined in <u>Section A</u> display the current direction). It is disabled in Passage Mode

#### (f) CLEAR

This button allows the user to clear out any data previously input into the timer. While inputting time in Test Setup Mode, pressing CLEAR clears back to zeros. After the time has been running, and you press Start/Stop, pressing CLEAR once sets the time and number of questions to the initial setting. Pressing twice clears the screen to all zeros. It is disabled when the timer is counting down. In Clock Setup Mode, pressing CLEAR resets the time back to 12:00.

## (g) LIGHT

The **LIGHT** button turns the light function on/off. When on, you will see the icon in the upper right corner of the LCD screen (See <u>Section A</u>). You can turn the light on/off only in Test Mode and Passage Mode. See Section I for more info on the light.

#### (h) MODE

The **MODE** button changes the set-up mode of the timer. Setup modes allow the user to input information into the Timer. Test Setup Mode looks like this:



**Test Setup Mode** 

Test Mode is when time is running and you are taking your test. The screen may look like this in Test Mode:



Clock Setup Mode is where you set the clock. It looks like this:



**Clock Setup Mode** 

Clock Mode shows the current time of day and it looks like this:



Passage Setup Mode allows the user to input time and the number of passages. The screen looks like this:



Passage Setup Mode

Passage Mode is when you have activated it, and are currently reading a passage. The display may look like this:



Passage Mode

Auto Mode does not have a setup mode; it is either on or off. It can only be activated in Test Mode. When Auto Mode is activated, it looks like this:




**Auto Mode** 

If the time has already started, pressing **MODE** will display the clock for three seconds, and then return (the timer continues to count). You cannot change modes when you are setting time, passages, questions, or the clock.

For more information on Clock Mode, see <u>Chapter VI, Section A</u>; for Test Mode, see <u>Chapter VI, Section B</u>; for Auto Mode, see <u>Chapter VI, Section C</u>; for Passage Mode, see <u>Chapter VI, Section D</u>.

# C. Numeric Keypad

The numeric keypad allows users to input clock time, test time, number of questions or passages, and other numerical values.

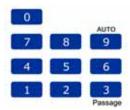

In Test Mode, two of the numbers have other functions. The numbers 3 and 9 double as the Passage Mode activator and the Auto Mode activator respectively.

Pressing 3 while time is running activates Passage Mode (only if data were input, see <u>Chapter VI, Section D</u> for more info on Passage Mode).

Pressing 9 activates Auto Mode. Auto Mode automatically counts down the questions for you, so you do not have to press the red answer button after every question (more on Auto Mode in <u>Chapter VI, Section C</u>).

#### D. Preset Buttons

The Silent Timer™ comes with four preset buttons for the LSAT, MCAT, SAT and ACT.



Each of these buttons has the amount of time allotted for each test stored in memory. They *do not* store numbers of questions, only times. Use these buttons to quickly set up your timer before your test.

- Go to Test Setup Mode (follow instructions in the Test Mode section <u>Chapter VI, Section B</u>).
- Press the TIME button.
- Press the button for your test ( ACT , SAT , LSAT or MCAT ). Press repeatedly to scroll through the test times.

*Example*: If taking the LSAT, press **TIME** then **LSAT**, until either 35 minutes or 30 minutes appears on the screen.

 See <u>Chapter VI, Section B</u> for further instructions on the Test Mode.

**Note:** If your test is not on one of the buttons (e.g. GRE\* or GMAT\*), you can still use the timer for your test. The preset times are not stored for these tests, but you can store them yourself using the memory

buttons  $MEM\ 1$  and  $MEM\ 2.$  The memory buttons are discussed in Section E.

## Tests\* and the amounts of time stored:

ACT	0:35:00
	0:45:00
	1:00:00
LSAT	0:35:00
	0:30:00
MCAT	1:40:00
	1:25:00
	0:30:00
SAT	0:20:00
	0:25:00
	0:35:00

<sup>\*</sup>See Terms and Conditions for legal disclaimers.

## E. Memory Buttons

You can also store your own amount of time and number of questions. The Silent Timer<sup>TM</sup> has two memory buttons, **MEM 1** and **MEM 2**.

#### To store in memory:

- In Test Setup Mode, press TIME. Enter the amount of time.
- Press # of Q's. Enter the number of questions.
- Press # of Q'S again to stop the question digits from flashing.
- Press and hold either the screen will flash three times. When the screen stops flashing, release the button.
- The amount of time and number of questions is now stored.

## To Recall from Memory:

- In Test Setup Mode, press TIME, until the hour position flashes.
- Press either the MEM 1 or MEM 2 button, depending on which settings you want to recall.
- The stored time <u>and</u> questions will appear on the screen.
- Press Start/Stop to begin.

#### F. Answer Button

The **red button** on the top of the timer is used during Test Mode. If you have entered questions into the timer, and you have finished the one you are on, pressing this button counts down the total questions remaining by one, and increases the total questions answered by one.

#### Example:

 You have 25 minutes to finish 25 questions. Input these numbers into the timer (see <u>Chapter VI, Section B</u>). When you press Start/Stop, your screen looks like this:



- The screen above shows that you have one minute to answer the
  questions (on average), you have 25 questions to answer, zero
  questions completed so far, and one minute left on the 1st
  question.
- Let's say you answer the 1st question in 30 seconds, less than the
  one minute allotted. Press the red button on top (to indicate you
  finished the question) and the screen now shows:



- You have answered one question and have 24 remaining. Your
  average time per question went up one second to 1:01 because
  you answered the 1st question before the minute was up. The
  remaining 30 seconds from the 1st question were distributed
  among the remaining 24 questions.
- The light flashes when the time on the question runs out. If the 2<sup>nd</sup> question takes you longer, and you reach the 1:01 mark, the light flashes 3 times. This serves as a guideline so that you know you are taking too long. Taking too much time on one question leaves less time for the remaining questions.
  - For instance, if the 2<sup>nd</sup> question takes you 2 minutes, then the average time per question drops from 1:01 to 59 seconds.
- If you answer your questions before the time per question is up, then you get more time on the rest of the questions. One second is not a lot, but the more questions you answer in faster time, the more time you will have at the end of the test to check your work.

#### Note:

If pushing the button after each question seems distracting, push it five times after every five questions. The time will not be accurate until you update it. After you finish the fifth question, push it five times in a row to catch up.

You can also activate Auto Mode (see <u>Chapter VI, Section C</u>) where the timer counts down the questions for you.

#### G. Auto Mode Activation Button

The Auto Mode activation button is shared with the **9** on the numeric keypad.



You can press **9** in Test Setup Mode (as long as no digits are flashing) and in Test Mode while time is running. Auto Mode automatically counts down the questions and passages for you, so you do not have to press the button after every question. More on Auto Mode in <a href="Chapter VI"><u>Chapter VI</u></a>, Section C.

## H. Passage Mode Activation Button

The Passage Mode activation button is shared with the 3 on the numeric keypad.



Pressing 3 activates Passage Mode. You must turn on Passage Mode before you press **Start/Stop** to begin your test. Passage Mode cannot be activated while time is running, or when time is paused. Passage Mode can only be activated if you input the number of passages and the time per passage in Passage Setup Mode. If there is nothing there, pressing 3 will have no effect. Go to <u>Chapter VI</u>, <u>Section D</u> for more information on Passage Mode.

## I. Light

Since The Silent Timer $^{\text{TM}}$  is completely silent, the red flashing light is the perfect tool to alert you of special times during your test.



#### The light flashes when:

- You have spent too much time on one question compared to the average amount of time available for each question (i.e. with ten minutes and ten questions remaining, the light will flash after one minute has passed). (flashes 3 times)
- Halfway through your test (i.e. with ten minutes total, the light flashes after five minutes). (flashes 5 times).
- When you have only one minute remaining on your test (flashes from one minute all the way to 0:00:0).
- The light stops flashing once the time reaches 0:00:00.

You know the light is on when the appears in the upper right hand corner of the LCD screen.

#### Turning On/Off the Light

- To turn on the light, press until the light icon appears.
- To turn off the light, press until the light icon disappears.

If you want to turn the light off while it is flashing, press and hold the **LIGHT** button until the light goes off. Be sure to turn the light back on if you want it to flash during the remainder of your test.

#### J. Reset Button

The reset button is located in a small hole on the back of the timer, to the left of the battery compartment.

You will want to use the reset button should your timer freeze or malfunction

To press the button, use the end of a paper clip, mechanical pencil lead (careful not to break the lead), or other long, skinny point to reach inside the hole. The tip of a pen is probably too thick and not long enough.

See troubleshooting in Chapter X if you need more help.

## VI. USING YOUR TIMER

#### A. Clock Mode

Your timer is equipped with a clock. To view the clock, press the **MODE** button until the clock icon appears on the LCD.



#### To set the time:

- Go to Clock Mode.
- Press the SET button.
- Enter the time in hours, minutes, and seconds.
- After the seconds are entered, the "AM/PM" will flash. To change AM/PM, press
- Press TIME to store the time.

## B. Test Mode

Use Test Mode during your exam. Mastering this mode is the key to better time management. See the diagram in this section for layout.

The Silent Timer one of two ways: without questions and with questions.

## **Using Test Mode without Questions:**

Without questions means that you want to track just your total test time, regardless of how many questions your test section has. If your test is 35 minutes long, you want the timer to count down (or up) from 30 minutes.

• Press the MODE button to access Test Setup Mode. You will see a on the LCD screen.



- Press TIME, and the hour position will start flashing.
- Enter the amount of time on the test (or section). Enter the time starting with hours, then minutes, and then seconds.

*Example*: If you want to enter 35 minutes, you press 0, 3, and 5. If you want to enter 1 hour 35 minutes and 15 seconds, you press 1, 3, 5, 1, and 5.

- Press Start/Stop
- Switch between count up ▲ and count down ▼ by pressing SET
- Turn on the light by pressing the button. A the upper right corner indicates the LED light is on.

#### Using Test Mode with Ouestions:

With questions refers to the timer's ability to break your total test time into average time per question. In this case, you may have a 35-minute test with 28 questions. You input both values into the timer as shown in the following example.

• Press the will see a on the LCD screen.



- Press TIME, and the hour position will start flashing.
- Enter the amount of time on the test (or section). Enter the time starting with hours, then minutes, and then seconds.

*Example*: If you want to enter 35 minutes, you press 0, 3, and 5. If you want to enter 1 hour 35 minutes and 15 seconds, you press 1, 3, 5, 1, and 5.

- Press # of Q's. The first digit of the number of questions will start flashing.
- Enter the number of questions on your test (or section).
   Input this number starting with the first digit, then the second.

Example: for 28 questions, press 2 then 8.

- Press Start/Stop to start the time.
- Turn on the light by pressing the button. A in the upper right corner indicates the LED light is on.
- If you prefer to use Auto Mode, turn it on by pressing AUTO

on the keypad.

More information about **Auto Mode** is found in <u>Section C</u>.

Press the **red Answer** button located on top of the timer after you finish each question. This updates all values on the left-hand side of the screen. Pressing this button allows you to know how much time you should spend on the remaining questions.

*Note*: If using Auto Mode, you do not need to push the red "Answer" button. The timer will do that for you.

You do not have to press the **Answer** button after each question. You can press it five times after every five questions or any other number of questions you choose. Your per question time will not be completely accurate until the timer's # of Q's matches the question you are on.


#### Stopping and Starting Timer

While in the middle of a test section, you may pause and restart the timer. Press the **Start/Stop** button to stop the time and then press the **Start/Stop** button to resume.

#### Viewing the Clock

You can view the clock while taking your test. Press the **MODE** button and the Clock appears for 3 seconds. After 3 seconds, The Silent Timer<sup>TM</sup> automatically returns to the testing screen without disrupting the test.

#### Test Mode LCD Diagram

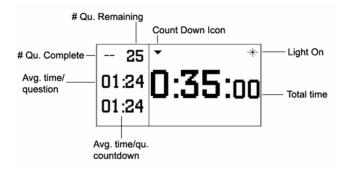

### Test Mode LCD Description

The total time counts down on the right side of the screen.

The number of questions answered, number of questions remaining, average time per question, and time per question count down appear on the left side of the screen, as shown.

#### C. Auto Mode

Auto Mode is a new feature to The Silent Timer<sup>TM</sup>. When activated, the timer automatically counts down the questions and passages for you.

Auto Mode tells you which question you should be on.

Activating Auto Mode is easy. After you have input your time and questions, press **Start/Stop**. To activate Auto Mode, press **9** on the numeric keypad while the time is running. The icon "AM" will appear.



Deactivate by pressing 9 again.

#### Example:

If you have 25 questions in 25 minutes, then you have, on average, one minute to answer each question. When the time is up on the first question, the timer moves on to the next question automatically. You will always have one minute per question.

However, you can override this feature (while activated) by pressing the **red button** yourself. It will continue to operate automatically at the end of the next question.

Deactivate Auto Mode at any time during the test by pressing 9 on the numeric keypad.

### D. Passage Mode

Passage Mode is a new feature designed for test sections with passages or logic games. These sections include multiple reading passages (or logic games), each followed by a series of questions.

The advantage of this feature is that it takes into account the amount of test time you will spend *reading* each passage and lets you know exactly how much time you can spend *answering* each question.

You do not have to use this feature. You can deactivate it when in Test Setup Mode by pressing 3 until the "PM" disappears from the screen. You cannot activate or deactivate Passage Mode while Test Mode is running.

### Setting up Passage Mode

In order to use Passage Mode, you need to have an idea of how much time you want or need to spend reading each passage. Sometimes it is recommended to spend three minutes or five minutes per passage (depends on your test).

Choose the amount of time you want to spend reading each passage and then follow the steps below:

*Note*: The time you input in this step will apply to every reading passage in the section.

1) Press MODE until you get to the Passage Setup Mode screen.



2) Press , and the leftmost digit (see arrow below) will flash.



- 3) Enter the time in minutes and seconds that you want to spend reading each passage. For example, if you want to spend 4 minutes and 30 seconds reading each passage, then enter 0, 4, 3, and then 0.
- To enter the number of passages, press the button that says # of P's right above it. The digits to the right of the "PA" will flash.



- 5) Enter the number of passages. For four passages, enter **0** then **4**.
- Push # of P's again to make the screen stop flashing.

You are now set up to use Passage Mode. In our example, you want to spend 4 minutes and 30 seconds reading each of the four passages. This takes a total of 18 minutes away from your total test time.

#### Using Passage Mode for a Test:

 After you have set up the Passage Mode values (see previous steps), press MODE to get to Test Setup Mode.



- Press TIME and enter the amount of time you have to finish the entire section (all questions and passages). Continuing from our previous example, let's say you have 30 minutes for the four passage reading section.
- 3) Press # of Q's and enter the number of questions you have total (not for each passage). For our example, we have 20 questions total on the test (5 questions per passage).

*Note:* Notice how the timer says you have 1 minute and 30 seconds per question. This is true if you did not have any reading passages.



- 4) Press # of Q's again to make the digits stop flashing.
- 5) Now activate Passage Mode by pressing 3.



The time per question changes to 36 seconds per question (instead of 1 min, 30 sec) because you have to spend 18 minutes of your 30-minute total test time on reading the passages.

You know Passage Mode has been activated when "PM" appears to the left of the count down (or up) arrow.

Now you are set up to take the test. The next part describes how to tell the timer when you are finished with a passage and when you are finished with a question.

Remember that a typical reading passage section has a reading section followed by questions, then another reading section, followed by more questions, and so on.

6) Press Start/Stop and immediately press # of P's. Since you start with a reading passage, you want to switch to the Passage Count Down screen, which allows you to see how much time you have remaining to finish reading the passage you are on.

The screen looks like this when passage mode is activated and you are reading a passage:



- (a) Shows that you have four passages remaining.
- (b) Shows that you have 4 minutes and 30 seconds to read each of the passages.
- (c) Shows that you have 4 minutes and 29 seconds left to read the first passage
- (d) Shows that you have a total of 29 minutes and 58 seconds left to finish the whole test section (all four passages and all 20 questions).

*Note*: When you press **Start/Stop**, the timer starts counting down for the first question. You are not ready for the first question because you need to read the passage first. That is why you switch to the Passage Count Down immediately.

7) Now read your passage. When you are finished reading the passage, you are ready to answer the questions. Switch back to Question Count Down by pressing # of Q's. Pressing # of Q's takes you to the Question Count Down screen, which allows you to see how much time you have remaining to answer the questions that follow the passage you just read.

You do <u>NOT</u> press the **red button** when finished with reading a passage. Going to Question Count Down automatically changes the number of passages remaining from four to three. Any time not used reading is distributed among the remaining questions on the test. Your time allotted per passage remains constant regardless of your reading speed.

Back to our example, let's say you finished the reading passage one minute early. When you go back to Question Count Down, you now have 39 seconds instead of 36 seconds per question. The remaining minute from the first passage is distributed among the remaining questions (it does not add more time to the remaining passages).



 Begin answering your questions normally, pressing the red button as you finish each question.

For our example, let's say the first passage had 5 questions, and you finished them on time (each within 39 sec).



- 9) When you finish the questions for that passage, go back to Passage Count Down by pressing # of P's again. You are now ready to begin reading the next passage.
- 10) After switching back to Passage Count Down, you will see that the number of passages has been reduced to 3, and that you still have 4 minutes and 30 seconds per passage.



- 11) When finished with the second passage, press # of Q's to go back to the Question Count Down screen.
- 12) This process is repeated until you are finished with your test.

#### Tips and Advice:

- It may seem complicated at first, but practice will make you comfortable with the process.
- When you go faster on the Passages and do not use your full time, the extra time is distributed among the remaining questions, not passages. You always have the same amount of time to read each passage.
- The Silent Timer™ Time Management Guide has more tips on how to effectively utilize the timer for tests. Log in at www.SilentTimer.com to download your copy.

### VII. FREQUENTLY ASKED QUESTIONS

#### **Functionality**

# 1) Can I switch between count down and count up while time is running?

Yes. When time is running, press **SET**. This will toggle between count down and count up. If you did not enter a total time, and started in count up mode, then you cannot switch to count down because there is nothing from which to count down.

### 2) What is the maximum time I can input?

The maximum time is 19 hours, 59 minutes, and 59 seconds (19:59:59). The trick is inputting 9:59:59 first, and then a flashing '1' will appear before the '9'. Press 1, and then you will have 19 hours, 59 minutes, and 59 seconds.

# 3) What is the maximum number of questions I can input into the timer?

The maximum number of questions is 99. If your test has more than 99 questions, you might have to be creative with how you track your time.

# 4) Do the preset test buttons (LSAT, MCAT, SAT, and ACT\*) store number of questions?

No, they only store the times that are used during the test. The number of questions varies, so it cannot be predicted how many there will be. If you want to store times and questions, use the memory buttons **MEM1** and **MEM2**.

#### 5) Can I turn The Silent Timer<sup>TM</sup> off?

No, but it has been designed to use minimal power during Clock Mode. If you wish to conserve battery power, leave the timer in Clock Mode when idle or remove the battery.

#### 6) Can I view the clock during a test?

Yes, you can. While time is running (during Test Mode), press **MODE**. The current time will display on the screen for 3 seconds and then return without interrupting the test session.

#### 7) How do I set the clock?

It is very easy to set the clock. See Chapter VI, Section A.

#### 8) How do I turn the light on/off?

Use the **LIGHT** button on the control keypad. A light icon appears above the total time if the light is on, and disappears when off.

# 9) Is The Silent Timer<sup>TM</sup> completely silent?

Yes. It is incapable of emitting any noise.

#### **Specifications**

#### 1) How long does the battery last?

The battery should last six to nine months, but it can vary depending on use. Heavy use involving the LED light can drain the battery faster. Leave the timer in Clock Mode when not in use to conserve the battery or remove the battery when not in use. You know you need a new battery when your screen starts to fade.

#### 2) Where do I buy a new battery?

The timer uses a CR2032 button cell battery. This type of battery is on our web site and can be found at most major grocery stores.

#### Legality

# 1) Can I use it for a test other than the ACT, LSAT, MCAT and SAT\*?

The Silent Timer<sup>TM</sup> can be used in practice for any test. The preset buttons are for the major tests, but you can set your own times. Custom times and number of questions can be stored in the memory buttons **MEM1** and **MEM2**.

### 2) Is it legal on test day?

The Silent Timer<sup>TM</sup> is legal for any test that allows such devices in the test. It does not make any noise to distract other test takers. We include a proctor card on the back of the Quick Start Card that can be shown to skeptical proctors. It is best to check with your test or testing center before bringing it in, so you will not be surprised. We are not responsible for proctors or tests that do not allow a timing device in their testing centers.

#### General

#### 1) How should I transport my timer?

Safe transport of your timer is a key concern. If you have space, keep it stored in its original box. If you are worried about scratching the LCD screen, keep the LCD decal and use it during transportation. Do not allow the timer to be loose in your backpack or purse where it can be bumped or crushed. This type of damage is not covered by our warranty. The idea is to protect the screen and the buttons from being damaged. Protecting

internal components is achieved by keeping the timer from being tossed about harshly.

#### 2) What is the Proctor Card and where is it?

The Proctor Card is a special card that tells proctors or other test administrators that The Silent Timer<sup>TM</sup> is completely silent, and that it is not a calculator, camera, communication, data recording or computing device. It is found on the back of the Quick Start Card that is included with the manual in your Silent Timer<sup>TM</sup> box.

3) My timer is having trouble. How do I find out how to fix it? Check out <u>Chapter X</u> for Troubleshooting tips. If you still have questions, please contact us. We will be glad to help you. Call 800-552-0325 or email info@silenttimer.com.

# 4) I have a question that is not answered in this manual. What do I do?

Contact us with any other questions or suggestions. We are glad to help, and always glad to hear your reviews on how The Silent Timer<sup>TM</sup> helped you. Offer suggestions on anything you think might be helpful. See <u>Chapter XIV</u> for contact information.

<sup>\*</sup>See Terms and Conditions for legal disclaimers.

# VIII. CARING FOR YOUR TIMER

Proper care of your Silent Timer<sup>TM</sup> will keep it in good working order.

- Keep The Silent Timer<sup>TM</sup> dry. (If it gets wet, wipe it dry immediately and allow to air dry thoroughly.)
- Use and store the timer within normal temperature ranges.
   Do not leave in a hot car.
- Handle the timer carefully; do not drop it.
- Keep the timer away from dust and dirt. You may wipe it with a damp cloth to keep it looking new.
- Be careful not to allow foreign objects to get beneath the buttons or to dislodge the top button.
- Modifying or tampering with The Silent Timer<sup>TM</sup>'s internal components may cause a malfunction and will invalidate its warranty.

# IX. LEGALITY

Test companies vary in their rules and regulations concerning the use of timing devices during tests. Know the rules of your test, what you can and cannot bring, and what sorts of timing devices will be allowed in the test room

We provide a card to present to any proctor who might question the functionality of The Silent Timer<sup>TM</sup>. To those unfamiliar with our timer, it may appear to be a calculator or some other device not allowed in the test. If questioned, show the proctor the disclaimer printed on the back of The Silent Timer<sup>TM</sup> and present this card. This card is found on the reverse side of the Quick Start Card.

For example, during the SAT\* test, students are not allowed to have a calculator that stands up on the desk. Some proctors might not allow The Silent Timer<sup>TM</sup> to stand up on the desk for fear is it a calculator or that information can be shared with other students. Use The Silent Timer<sup>TM</sup> flat on the desk in this case.

Silent Technology LLC, its representatives, affiliates, and distributors are not responsible for timers taken up by proctors or disallowed in tests. It is important that you check with test or test administrators before test day just to be sure.

\*See Terms and Conditions for legal disclaimers.

# X. TROUBLESHOOTING

This section provides guidance if you have a problem with your timer. If you need further assistance, call us at 800-552-0325 or email info@silenttimer.com

Please check the warranty section (<u>Chapter XII</u>) for details on product replacement. Here is a summary:

- We do not replace your timer if the damage or failure is caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current.
- We will replace the timer if the problem is caused by manufacturing defects in material and workmanship under normal use.
- The warranty is good six (6) months after the purchase date. If your problem occurs after this date, you will need to buy a new timer. We will not issue refunds or send replacements.

#### Possible problems and solutions:

#### 1. My timer froze.

If your timer is frozen, there are two ways to fix it. You can remove the battery for 30 seconds, and then replace it. You can also press the RESET button on the back of the timer next to the battery compartment. A paper clip or mechanical pencil lead will fit in the small hole.

#### 2. The screen flickers when the light goes off.

This is usually an indication that the battery is low or there is a bad connection. First, try removing the battery and wiping it with a dry cloth. Then wipe the inside of the battery compartment. Put the battery back in. Sometimes a film or static electricity builds that prevents a good connection. If this does not work, try replacing the battery with a new one. You can find the CR2032 button cell battery on our website and at most major grocery stores.

#### 3. The digits on the screen are faint and hard to see.

This is an indication that the battery is low. You will need to replace it with a new one. You can find the CR2032 button cell battery on our website and at most major grocery stores.

#### 4. The battery is stuck in the compartment.

Using a fingernail or slim prying device (small knife or stiff piece of paper), gently try to get your nail or device in the small crack between the battery and the case. The goal is to slide the battery forward. Once you have it loose, use your finger to slide the battery from the case. Call if you are still having trouble.

#### 5. The timer will not turn on.

There are several reasons why this might be happening. First, check that you have inserted the battery correctly. The writing should be face up, and the battery slides into the battery compartment between the case and the metal bridge. If this is not the problem, try pressing the RESET button on the back of the timer using a paper clip or mechanical pencil lead. You may need to replace the battery. The CR2032 button cell battery is found on our website and at most major grocery stores.

# XI. SPECIFICATIONS

Operating Voltage	3 Volts
Power Source	CR2032 Button Cell
Battery Life (approx.)	6-9 months
Dimensions (H-W-D)	3.5" x 2.75" x 0.5"
Weight	2.6 ounces

# XII. WARRANTY

#### **Limited Six-Month Warranty**

Silent Technology LLC warrants this product against manufacturing defects in material and workmanship under normal use for six (6) months from the date of purchase from SilentTimer.com or other authorized Silent Technology LLC retailers, EXCEPT AS PROVIDED HEREIN, SILENT TECHNOLOGY LLC. MAKES NO EXPRESS WARRANTIES AND NO IMPLIED WARRANTIES. INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN, EXCEPT AS PROVIDED HEREIN, SILENT TECHNOLOGY LLC WILL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY. LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR RISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME. DATA, PROPERTY, REVENUE, OR PROFIT, OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF SILENT TECHNOLOGY LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, call us at 800-552-0325 or email info@silenttimer.com. You must be the original purchaser, and have your Order Number and sales receipt to receive warranty service. All instructions for warranty process are found on the web site. Silent Technology LLC will, at its option, unless otherwise provided by law:

- (a) correct the defect by product repair without charge for parts and labor:
- (b) replace the product with one of the same or similar design; or
- (c) refund the purchase price.

All replaced parts and products, and products on which a refund is made, become the property of Silent Technology LLC. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a Silent Technology LLC Authorized Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Silent Technology LLC 9111 Jollyville Road Suite 245 Austin, TX 78759

May 2006

# XIII. TERMS AND CONDITIONS

The Silent Timer<sup>TM</sup> is a Trademark of Silent Technology LLC.

The Silent Timer $^{TM}$  is patent pending with the United States Patent and Trademark Office. No reproduction of this product or any other similar testing product may be produced without the express consent of Silent Technology LLC. All violations will be persecuted to the fullest extent of the law.

LSAT, MCAT, SAT, ACT, GMAT and GRE are all trademarks of their respective holders and have no connection with Silent Technology LLC or The Silent Timer<sup>TM</sup>. They do not specifically endorse this product.

LSAT is a registered trademark of the Law School Admission Council, Inc.

MCAT is a registered trademark of the Association of American Medical Colleges.

SAT is a registered trademark of the College Entrance Examination Board.

ACT is a registered trademark of the ACT.

GMAT is a registered trademark of the Graduate Management Admission Council.

GRE is a registered trademark of Educational Testing Service.

# XIV. CONTACT INFORMATION

#### Address:

Silent Technology LLC 9111 Jollyville Road Suite 245 Austin, TX 78759

Phone Number:

(800) 552-0325

Website:

http://www.SilentTimer.com

Email:

info@SilentTimer.com

AOL Screen Name:

Silent Timer