CSS332: Microcontrollers and Applications Final Mock Exam

curated by The Peanuts


Name Nonprawich I. ID 6622772422 Section 4 No ...

Conditions: Semi-Closed Book (A4 Both Sides)

Directions:

- 1. This exam has 15 pages (including this page).
- 2. Calculators (Casio 991 Series) are allowed.
- 3. Write your name clearly at the top of each page.
- 4. You may cry silently. Loud sobs will be graded as participation.
- 5. If you finish early, triple-check your work.
- 6. Do not cheat.
- 7. Good luck! May the bugs forever stay in your code and not in your answers.



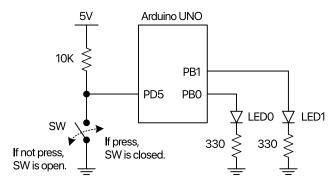

You need to write an Assembly program to implement the following tasks:

- Task 1: The microcontroller monitors the status of the switch SW: if SW is pressed, LED0 turns on; if not pressed, LED0 turns off.
- Task 2: The microcontroller keeps turning LED1 on and off every 0.5 seconds using the Timer0 overflow interrupt.

The Timer0 should be set up in normal mode with a pre-scaling factor of 1024. Each Timer0 overflow will generate an interrupt every 4000 μ s.

Part A: Timer Calculations

a) What value should be loaded into TCNT0 to generate an overflow interrupt every 4000 μ s with a 16 MHz clock and a prescaler of 1024?

$$4000 = \left[\left(\frac{(255 - A + 1) \times 102^4}{3} \times 3 \right) + 2 + 14 \right] \times 0.0625$$

$$A = 193.51$$

$$A \approx 194 = 0 \times 02$$

$$\therefore \text{TCNTO} = 0 \times 02$$

b) How many Timer0 overflow interrupts are required to achieve the 0.5-second toggle for LED1?


$$\# | oops = 0.5 = 125$$

Part B: Complete the Assembly Program

Complete the following Assembly program by filling in the missing parts to implement both tasks.

```
.ORG 0x0
                ; Set the origin for the reset vector
      JMP MAIN ; Jump to the main program
   .ORG <u>Ox20</u>
      JMP TO_OV_SSP ; Jump to the TimerO Overflow Interrupt Service
           Routine
               ; Start of the main program
   .ORG 0x100
  MAIN:
      LDI R16, HIGH(RAMEND)
      OUT SPH, R16
10
      LDI R16, LOW(RAMEND)
11
      OUT SPL, R16
12
13
      CALL PIN_SETUP
                           ; Call subroutine to set up pins
14
15
                           ; Enable TimerO overflow interrupt
      LDI R16, _<u>OxO</u>____
16
      STS TIMSKO, R16
                           ; Store in Timer Interrupt Mask Register
17
                            ; Enable global interrupts
      SEI
18
19
      CALL TIMERO_SETUP
                            ; Call subroutine to set up TimerO
20
      LDI R21, _125____
                            ; Load counter value for 0.5-second
21
          toggling
  LOOP:
      SBIC PIND, 5
                           ; Check if switch is pressed
      RJMP L_OFF
                            ; If switch is not pressed, jump to turn
           LEDO off
      RJMP L_ON
                            ; Otherwise, turn LEDO on
26
27
28 L_OFF:
      CBI PORTB, 0
                            ; Turn LEDO off
      RJMP LOOP
                            ; Loop back
  L_ON:
32
      SBI PORTB, 0
                           ; Turn LEDO on
```

```
34
      RJMP LOOP
                            ; Loop back
  ; Subroutine to configure I/O pins
37 PIN_SETUP:
      SBI DDRB, 0
                           ; Set PBO as output (LEDO)
       CBI PORTB, 0
                            ; Ensure LEDO is off initially
       SBI DDRB, 1
                            ; Set PB1 as output (LED1)
40
                           ; Ensure LED1 is off initially
       CBI PORTB, 1
41
                            ; Set PD5 as input (Switch)
       CBI DDRD, 5
42
       SBI PORTD, 5
                            ; Enable pull-up resistor on PD5
43
       RET
                            ; Return from subroutine
44
  ; Subroutine to configure TimerO
   TIMERO_SETUP:
      LDI R20, _<u>oxc2</u>___
                           ; Load initial value for TimerO
48
       OUT (TCNTO), R20
                           ; Set TimerO initial value
49
                           ; Set normal mode (TCCROA = ?)
      LDI R20, _oxoo____
50
       OUT TCCROA, R20
                           ; Store in Timer Control Register A
51
      LDI R20, _<del>005</del>____
                            ; Set pre-scaler to 1024 and start
52
          TimerO (TCCROB = ?)
                            ; Store in Timer Control Register B
      OUT TCCROB, R20
      RET
                            ; Return from subroutine
54
55
   .ORG 0x200 ; Start of TimerO Overflow Interrupt Service Routine
   TO_OV_ISR:
      DEC R21
                            ; Decrement overflow counter
       BRNE HERE
                            ; If not zero, skip the toggling part
      LDI R21, <u>125</u>
                            ; Reset counter for 0.5-second cycle
       IN R17, PORTB
                           ; Read current PORTB state
                           ; Load mask for PB1 (LED1)
      LDI R18, (1441)
62
       EOR_____ R17, R18
                           ; Toggle PB1 state
63
64
       OUT PORTB, R17
                            ; Output new state to PORTB
65
66 HERE:
      LDI R18, OxC2
                            ; Reload initial TimerO value
67
       OUT TCNTO, R18
                            ; Store in TimerO counter register
68
       RETI
                            ; Return from interrupt
```

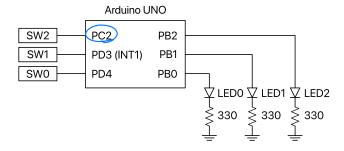

You need to write a C program to implement the following tasks:

1ain program

- Task 1: The microcontroller monitors the status of switch SW0: if SW0 is pressed, LED0 turns on; if not pressed, LED0 turns off.
- Task 2: The microcontroller monitors the status of switch SW1 (connected to INT1): if SW1 is pressed, LED1 toggles (on → off or off → on). The INT1 should be configured for rising-edge trigger.
- Task 3: The microcontroller monitors the status of switch SW2 (connected to PC2): LED2 toggles only after SW2 has been pressed and released 4 times (using the pin change interrupt).

Part A: Interrupt Configuration


a) For INT1 (external interrupt) with rising-edge trigger, what values should be configured for the following registers?

$$EIMSK = _{\bigcirc \times \bigcirc 2}$$

$$EICRA = _{\bigcirc \times \bigcirc C}$$

b) For the pin change interrupt on PC2, what values should be configured for the following registers?

c) To make LED2 toggle only after 4 button presses of SW2, what initial value should variable z be set to? Explain your answer.




Part B: Complete the C Program

Complete the following C program to implement all three tasks. Fill in the blanks with appropriate code.

```
#include <avr/io.h>
   #include <avr/interrupt.h>
   unsigned char z = \frac{8}{2}; // Initial value for counting SW2 presses
   void PIN_SETUP() {
       // Configure LED outputs
7
      DDRB |= (1<<0); // Set PBO as output for LEDO
      PORTB &= ~(1<<0); // Set PBO initial state to low
9
      DDRB |= (1<<1); // Set PB1 as output for LED1
10
      PORTB &= ~(1<<1); // Set PB1 initial state to low
11
       DDRB |= (1<<2); // Set PB2 as output for LED2
       PORTB &= ~(1<<2); // Set PB2 initial state to low
13
14
       // Configure switch inputs with pull-up resistors
15
      DDRD &= ~(1<<4); // Set PD4 as input for SWO
16
      PORTD |= (1<<4); // Enable pull-up for PD4
17
      DDRD &= ^{(1<<3)}; // Set PD3 as input for SW1 (INT1)
18
      PORTD |= (1<<3); // Enable pull-up for PD3
      DDRC &= ~(1<<2); // Set PC2 as input for SW2
20
      PORTC |= (1<<2); // Enable pull-up for PC2
21
   }
22
23
   int main() {
24
      PIN_SETUP();
25
26
```

```
27
       // Configure INT1 for rising edge trigger
       EIMSK = _OxO2___; // Enable INT1
28
       EICRA = _{oxoc}_{int}; // Set for rising edge
29
30
       // Configure Pin Change Interrupt for PC2
31
       PCICR = __oxo2___; // Enable PORTC pin change interrupts
       PCMSK1 = 0x04 ; // Enable interrupt for PC2
33
34
       sei(); // Enable global interrupts
35
36
       while (1) {
37
           if (\underline{\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ } { // Check if SWO is pressed
               PORTB |= (1<<0); // Turn on LEDO
           } else {
40
               PORTB &= ~(1<<0); // Turn off LED0
41
42
       }
43
44
       return 0;
45
  }
46
  // ISR for INT1 (Task 2)
   ISR(_INT1_vect___) {
       PORTB ^= (1<<1) ; // Toggle LED1
50
<sub>51</sub> }
52
   // ISR for Pin Change Interrupt (Task 3)
   ISR(PCINT1_vect ) {
                             // Decrement counter
55
       z--;
       if (z == 0) {
56
           PORTB ^= (1<<2);
                             // Toggle LED2
57
           z = \frac{8}{2};
58
                             // Reset counter to initial value
       }
59
60 }
```

In this exercise, you will implement serial communication between two Arduino UNO boards. Board 1 will have two switches connected, while Board 2 will have two LEDs connected. When a switch on Board 1 is pressed, it will send a command through UART to toggle the corresponding LED on Board 2.

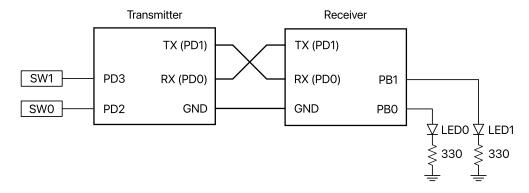

Part A: Board 1 - Transmitter

Complete the following C program for Board 1, which will monitor the switch states and send commands to Board 2 when a switch is pressed:

```
#include <avr/io.h>
   #define F_CPU 1600000UL
   #include <util/delay.h>
   // Function to initialize UART
   void usart_init(void) {
       UCSROB = (1 << \underline{TXENO});
                                  // Enable USART transmitter
       UCSROC = (1<<UCSZ01) | (1<<UCSZ00); // Async, 8 bits
       UBRROL = _{403};
                                  // Baud rate = 9600
9
   }
10
11
   void pin_setup(void) {
12
       DDRD &= ~(1<<2); // Set PD2 as input (Switch 0)
13
       PORTD |= (1<<2); // Enable pull-up for Switch 0
14
       DDRD &= ~(1<<3); // Set PD3 as input (Switch 1)
15
       PORTD |= (1<<3); // Enable pull-up for Switch 1
16
17 }
```

```
while (!(USCROA & (1<< UDREO)));
```

```
18 // Function to send a character over UART
  void usart send unsigned char data) {
       while (!(_____); // Wait until UDRO is empty
      UDRO = data; Send data
22 }
23
   int main(void) {
      pin_setup();
25
      usart_init();
26
27
      while(1) {
28
          // Check if Switch 0 is pressed (PD2 is LOW)
          if (__!(PIND & (1<<2))____) {
              usart_send(_'1'___); // Send command to toggle LEDO
31
              _delay_ms(200);
32
          }
33
34
          // Check if Switch 1 is pressed (PD3 is LOW)
35
          if (__!(PIND & (1<<3))____) {
              usart_send(_'2'___); // Send command to toggle LED1
              _delay_ms(200);
38
          }
39
40
          _delay_ms(50); // Small polling delay
41
       }
42
43
      return 0;
44
45 }
```

Part B: Board 2 - Receiver

Complete the following C program for Board 2, which will receive commands from Board 1 and toggle the corresponding LEDs:

```
void usart_init(void) {
       UCSROB = (1 << \underbrace{RXENO});
                                   // Enable USART receiver
       UCSROC = (1<<UCSZ01)|(1<<UCSZ00); // Async, 8 bits
                                   // Baud rate = 9600
       UBRROL = 103;
  }
5
   void pin_setup(void) {
       DDRB |= (1<<0); // Set PBO as output (LEDO)
       PORTB &= ~(1<<0); // Set LEDO initial state to OFF
       DDRB |= (1<<1); // Set PB1 as output (LED1)
       PORTB &= ~(1<<1); // Set LED1 initial state to OFF
  }
12
13
   int main(void) {
14
       unsigned char received_data;
15
       pin_setup();
16
       usart_init();
^{17}
       while(1) {
19
           // Wait until data is received
20
           while (!(UCSRDA & (1 << RXCO)); // Check if data is available
21
22
           // Read the received data
23
           received_data = _UDRO___;
24
           // Process received commands
           if (received data == '1') {
27
              PORTB ^= (1<<0) // Toggle LED0
28
29
           else if (received_data == '2') {
30
               PORTS ^= (1<<1);
                               // Toggle LED1
31
           }
32
       }
       return 0;
34
35
  }
```

Part C: Questions

a) What value should be loaded into UBRR0L to achieve a baud rate of 9600 with a 16 MHz clock? Show your calculation.


UBRR =
$$\frac{F_{CPU}}{16 \times Baud}$$
 -1 = $\frac{16 \times 10^6}{16 \times 9600}$ -1 \times 103 #

b) What command (character) should be sent from Board 1 when Switch 0 is pressed to toggle LED0 on Board 2?

c) What command (character) should be sent from Board 1 when Switch 1 is pressed to toggle LED1 on Board 2?

d) Which pins must be disconnected before uploading code to the Arduino boards? Explain why this is necessary.

Phn PDO (RX) and PD1 (TX) must be disconnected before uploading code to Arduino Because these pins are used for serial communication between Arduino and the computer. If they remained connected, it can interfere with the upload process, or preventing code from being properly uploaded

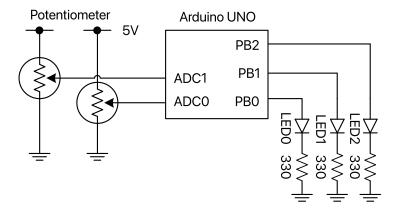

You need to write a C program to implement a voltage comparator using two analog inputs on the microcontroller. The circuit consists of two potentiometers connected to ADC0 and ADC1 pins, with three LEDs connected to pins PB0, PB1, and PB2.

Write a complete C program that performs the following tasks:

- 1. Read the voltage values from two potentiometers connected to ADC0 and ADC1 pins.
- 2. Compare the two voltage values and control LEDs based on these conditions:
 - (a) If voltage at ADC0 > voltage at ADC1, turn on LED1 (PB0) and turn off other LEDs.
 - (b) If voltage at ADC0 < voltage at ADC1, turn on LED2 (PB1) and turn off other LEDs.
 - (c) If voltage at ADC0 = voltage at ADC1, turn on LED3 (PB2) and turn off other LEDs.

Hint: You may need to configure two separate ADC channels in your program. Consider using a function to read the ADC value from a specific channel.

```
#include <avr/io.h>
#define F_CPU 16000000UL
#include <util/delay.h>
// Function to initialize pins
void pin_setup(void) {
   DDRC = 0x00; // Set PORTC as input (ADC0 and ADC1)
   DDRB = 0x07; // Set PB0, PB1, PB2 as outputs (LEDs)
   PORTB = 0x00; // Initialize all LEDs as OFF
}
// Function to initialize ADC0
void ADC0_setup(void) {
   ADCSRA = 0x87; // Enable ADC, set prescaler to 128
   ADMUX = 0x40; // Vref = AVCC, select ADCO channel, right-justified
}
// Function to initialize ADC1
void ADC1_setup(void) {
   ADCSRA = 0x87; // Enable ADC, set prescaler to 128
   ADMUX = 0x41; // Vref = AVCC, select ADC1 channel, right-justified
}
// Function to read from ADC
int read ADC(void) {
   ADCSRA |= (1 << ADSC);
   while ((ADCSRA & (1 << ADIF)) == 0);</pre>
   return ADC;
}
int main(void) {
   int adc0_value, adc1_value;
   pin_setup();
   while (1) {
       ADC0_setup();
        adc0_value = read_ADC();
        ADC1_setup();
        adc1_value = read_ADC();
        PORTB = 0 \times 00; // Turn off all LEDs
        if (adc0_value > adc1_value) {
            PORTB = 0 \times 01;
        } else if (adc0_value < adc1_value) {</pre>
           PORTB = 0x02;
        } else {
           PORTB = 0x04;
        }
        _delay_ms(100);
   }
   return 0;
}
```

In this problem, you will implement the functionality from Problems 1-4 using Arduino programming language (C++ with Arduino libraries) instead of AVR C or Assembly. Select ONE of the previous problems (1-4) and reimplement it using Arduino code.

Random Question Selection:

Visit **npwitk.com/css332-random** to randomly determine which problem (1-4) you should implement in Arduino.

Roblem 1

```
According to Lecture 13
#include <TimerOne.h>
const int switchPin = 2;
const int led0Pin = 9;
const int led1Pin = 10;
// Variable to track LED1 state
volatile boolean led1State = LOW;
void setup() {
 pinMode(led0Pin, OUTPUT);
 pinMode(led1Pin, OUTPUT);
 pinMode(switchPin, INPUT_PULLUP);
 digitalWrite(led0Pin, LOW);
 digitalWrite(led1Pin, LOW);
 // Initialize Timer1 with a period of 0.5 seconds
 Timer1.initialize(500000);
 Timer1.attachInterrupt(toggleLED1);
}
void loop() {
 // Task 1: Monitor switch status
 if (digitalRead(switchPin) == LOW) { // Switch is pressed (LOW because of pull-up resistor)
   digitalWrite(led0Pin, HIGH);
                                       // Turn LED0 on
 } else {
   digitalWrite(led0Pin, LOW);
                                       // Turn LED0 off
}
// Timer interrupt service routine
void toggleLED1() {
 led1State = !led1State;
 digitalWrite(led1Pin, led1State);
```

Roblem 3

Transmitter

```
const int switch0Pin = 2;
const int switch1Pin = 3;
int switch0PrevState = HIGH;
int switch1PrevState = HIGH;
void setup() {
  pinMode(switch0Pin, INPUT_PULLUP);
  pinMode(switch1Pin, INPUT_PULLUP);
  Serial.begin(9600);
void loop() {
  int switch0State = digitalRead(switch0Pin);
  int switch1State = digitalRead(switch1Pin);
  if (switch0State == LOW && switch0PrevState == HIGH) {
   Serial.write('1'); // Send '1' character to toggle LED0
  }
  if (switch1State == LOW && switch1PrevState == HIGH) {
    Serial.write('2'); // Send '2' character to toggle LED1
   delay(50);
  switch0PrevState = switch0State;
  switch1PrevState = switch1State;
  delay(10);
}
```

Receiver

```
const int led@Pin = 8;
const int led1Pin = 9;
boolean led@State = LOW;
boolean led1State = LOW;
void setup() {
  pinMode(led0Pin, OUTPUT);
  pinMode(led1Pin, OUTPUT);
  digitalWrite(led0Pin, led0State); // RESET here
  digitalWrite(led1Pin, led1State);
  Serial.begin(9600);
void loop() {
 if (Serial.available() > 0) {
    char receivedChar = Serial.read();
    if (receivedChar == '1') {
      led0State = !led0State;
      digitalWrite(led0Pin, led0State);
    else if (receivedChar == '2') {
      led1State = !led1State;
      digitalWrite(led1Pin, led1State);
    }
}
```

```
const int pot1Pin = A0;
                         // First potentiometer
const int pot2Pin = A1; // Second potentiometer
const int led1Pin = 8;
                         // LED1 (for A0 > A1)
const int led2Pin = 9;
                         // LED2 (for A0 < A1)
const int led3Pin = 10; // LED3 (for A0 = A1)
void setup() {
 pinMode(led1Pin, OUTPUT);
 pinMode(led2Pin, OUTPUT);
 pinMode(led3Pin, OUTPUT);
 pinMode(pot1Pin, INPUT);
 pinMode(pot2Pin, INPUT);
 digitalWrite(led1Pin, LOW);
 digitalWrite(led2Pin, LOW);
 digitalWrite(led3Pin, LOW);
void loop() {
 int pot1Value = analogRead(pot1Pin); // Read from A0 (0-1023)
 int pot2Value = analogRead(pot2Pin); // Read from A1 (0-1023)
 digitalWrite(led1Pin, LOW);
 digitalWrite(led2Pin, LOW);
 digitalWrite(led3Pin, LOW);
 if (pot1Value > pot2Value) {
   digitalWrite(led1Pin, HIGH); // Turn on LED1
 } else if (pot1Value < pot2Value) {</pre>
    digitalWrite(led2Pin, HIGH); // Turn on LED2
 } else { // Values are equal
    digitalWrite(led3Pin, HIGH); // Turn on LED3
 }
 delay(100);
}
```