CSS332: Microcontrollers and Applications Final Mock Exam

curated by The Peanuts


Name			
Name 1D Section No	Marsa	Castian	Ma
	Name	Section	N()

Conditions: Semi-Closed Book (A4 Both Sides)

Directions:

- 1. This exam has 15 pages (including this page).
- 2. Calculators (Casio 991 Series) are allowed.
- 3. Write your name clearly at the top of each page.
- 4. You may cry silently. Loud sobs will be graded as participation.
- 5. If you finish early, triple-check your work.
- 6. Do not cheat.
- 7. Good luck! May the bugs forever stay in your code and not in your answers.

For solution, click here.

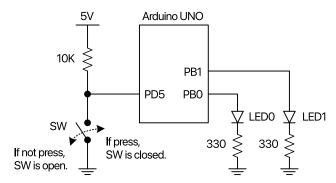

You need to write an Assembly program to implement the following tasks:

- Task 1: The microcontroller monitors the status of the switch SW: if SW is pressed, LED0 turns on; if not pressed, LED0 turns off.
- Task 2: The microcontroller keeps turning LED1 on and off every 1.25 seconds using the Timer0 overflow interrupt.

The Timer0 should be set up in normal mode with a pre-scaling factor of 1024. Each Timer0 overflow will generate an interrupt every 4000 μ s.

Part A: Timer Calculations

a) What value should be loaded into TCNT0 to generate an overflow interrupt every 4000 μ s with a 16 MHz clock and a prescaler of 1024?


b) How many Timer0 overflow interrupts are required to achieve the 1.25-second toggle for LED1?

Part B: Complete the Assembly Program

Complete the following Assembly program by filling in the missing parts to implement both tasks.

```
.ORG 0x0
              ; Set the origin for the reset vector
      JMP _____ ; Jump to the main program
                    ; Interrupt Vector Table for TimerO Overflow
   .ORG _____
      Interrupt
      JMP _____ ; Jump to the TimerO Overflow Interrupt Service
           Routine
   .ORG 0x100
                ; Start of the main program
  MAIN:
      LDI R16, HIGH(RAMEND); Load high byte of RAMEND into R16
      OUT SPH, R16
                           ; Set the high byte of the stack pointer
10
      LDI R16, LOW(RAMEND); Load low byte of RAMEND into R16
11
      OUT SPL, R16
                           ; Set the low byte of the stack pointer
12
13
      CALL PIN_SETUP
                           ; Call subroutine to set up pins
14
15
                           ; Enable TimerO overflow interrupt
      LDI R16, _____
      STS TIMSKO, R16
                           ; Store in Timer Interrupt Mask Register
17
                           ; Enable global interrupts
18
      -----
19
      CALL TIMERO_SETUP
                           ; Call subroutine to set up TimerO
20
                           ; Load counter value for 1.25-second
      LDI R21, _____
^{21}
          toggling
  LOOP:
       _____ PIND, 5
24
                           ; Check if switch is pressed
                           ; If switch is not pressed, jump to turn
      RJMP L_OFF
25
           LEDO off
      RJMP L_ON
                           ; Otherwise, turn LEDO on
26
27
  L_OFF:
       _____ PORTB, 0
                          ; Turn LEDO off
      RJMP LOOP
                           ; Loop back
32 L_ON:
```

```
_____ PORTB, 0
                         ; Turn LEDO on
      RJMP LOOP
                           ; Loop back
34
35
36 ; Subroutine to configure I/O pins
37 PIN_SETUP:
      SBI DDRB, 0
                           ; Set PBO as output (LEDO)
      CBI PORTB, 0
                           ; Ensure LEDO is off initially
39
      SBI DDRB, 1
                          ; Set PB1 as output (LED1)
40
                          ; Ensure LED1 is off initially
      CBI PORTB, 1
41
      CBI DDRD, 5
                           ; Set PD5 as input (Switch)
42
      SBI PORTD, 5
                          ; Enable pull-up resistor on PD5
43
      RET
                           ; Return from subroutine
44
  ; Subroutine to configure TimerO
  TIMERO_SETUP:
47
      LDI R20, _____ ; Load initial value for Timer0
48
      OUT TCNTO, R20
                          ; Set TimerO initial value
49
                          ; Set normal mode (TCCROA = ?)
      LDI R20, _____
50
      OUT TCCROA, R20
                          ; Store in Timer Control Register A
51
                          ; Set pre-scaler to 1024 and start
      LDI R20, _____
          TimerO (TCCROB = ?)
      OUT TCCROB, R20
                           ; Store in Timer Control Register B
53
      RET
                           ; Return from subroutine
54
55
   .ORG 0x200 ; Start of TimerO Overflow Interrupt Service Routine
  TO_OV_ISR:
      DEC R21
                           ; Decrement overflow counter
58
      BRNE HERE
                           ; If not zero, skip the toggling part
      LDI R21, _____
                          ; Reset counter for 1.25-second cycle
60
      IN R17, PORTB
                          ; Read current PORTB state
61
      LDI R18, _____
                          ; Load mask for PB1 (LED1)
62
      _____ R17, R18
                          ; Toggle PB1 state
63
      OUT PORTB, R17
                          ; Output new state to PORTB
64
65
66 HERE:
      LDI R18, _____
                           ; Reload initial TimerO value
67
      OUT TCNTO, R18
                           ; Store in TimerO counter register
68
                           ; Return from interrupt
69
```

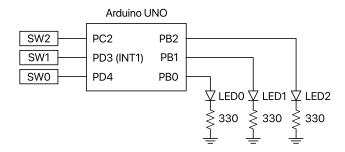

You need to write a C program to implement the following tasks:

- Task 1: The microcontroller monitors the status of switch SW0: if SW0 is pressed, LED0 turns on; if not pressed, LED0 turns off.
- Task 2: The microcontroller monitors the status of switch SW1 (connected to INT1): if SW1 is pressed, LED1 toggles (on → off or off → on). The INT1 should be configured for rising-edge trigger.
- Task 3: The microcontroller monitors the status of switch SW2 (connected to PC2): LED2 toggles only after SW2 has been pressed and released 4 times (using the pin change interrupt).

Part A: Interrupt Configuration

a)	For INT1	(externa	al interrupt)	with	rising-e	edge	trigger,	what	values	should
	be configured for the following registers?									

EIMSK = _____ EICRA = ____

b) For the pin change interrupt on PC2, what values should be configured for the following registers?

PCICR = _____

PCMSK0 = _____

PCMSK1 = _____

PCMSK2 = _____

c) To make LED2 toggle only after 4 button presses on SW2, what initial value should variable z be set to? Explain your answer.


Part B: Complete the C Program

Complete the following C program to implement all three tasks. Fill in the blanks with appropriate code.

```
#include <avr/io.h>
   #include <avr/interrupt.h>
   unsigned char z = ___; // Initial value for counting SW2 presses
   void PIN_SETUP() {
       // Configure LED outputs
      DDRB |= (1<<0); // Set PBO as output for LEDO
      PORTB &= ~(1<<0); // Set PBO initial state to low
      DDRB |= (1<<1); // Set PB1 as output for LED1
10
       PORTB &= ~(1<<1); // Set PB1 initial state to low
11
       DDRB |= (1<<2); // Set PB2 as output for LED2
       PORTB &= ~(1<<2); // Set PB2 initial state to low
13
14
       // Configure switch inputs with pull-up resistors
15
      DDRD &= ~(1<<4); // Set PD4 as input for SWO
16
      PORTD |= (1<<4); // Enable pull-up for PD4
17
      DDRD &= ~(1<<3); // Set PD3 as input for SW1 (INT1)
18
      PORTD |= (1<<3); // Enable pull-up for PD3
      DDRC &= ^{\sim}(1 << 2); // Set PC2 as input for SW2
      PORTC |= (1<<2); // Enable pull-up for PC2
21
   }
22
23
   int main() {
24
       PIN_SETUP();
25
26
```

```
27
       // Configure INT1 for rising edge trigger
       EIMSK = ____; // Enable INT1
28
      EICRA = ____; // Set for rising edge
29
30
      // Configure Pin Change Interrupt for PC2
31
      PCICR = _____; // Enable PORTC pin change interrupts
       _____; // Enable interrupt for PC2
34
       sei(); // Enable global interrupts
35
36
      while (1) {
37
          if (_____) { // Check if SWO is pressed
              PORTB |= (1<<0); // Turn on LEDO
          } else {
40
              PORTB &= ~(1<<0); // Turn off LED0
41
42
       }
43
44
      return 0;
45
  }
46
  // ISR for INT1 (Task 2)
  ISR(____) {
       _____; // Toggle LED1
50
  }
51
52
  // ISR for Pin Change Interrupt (Task 3)
  ISR(____) {
                           // Decrement counter
      z--;
55
       if (z == 0) {
56
                           // Toggle LED2
57
58
          z = \underline{\hspace{1cm}};
                           // Reset counter to initial value
      }
59
60 }
```

In this exercise, you will implement serial communication between two Arduino UNO boards. Board 1 will have two switches connected, while Board 2 will have two LEDs connected. When a switch on Board 1 is toggled, it will send a command through UART to toggle the corresponding LED on Board 2.

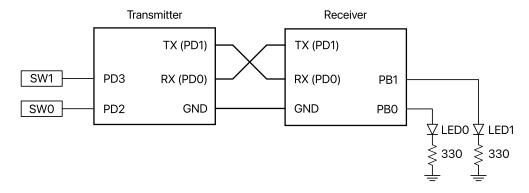

Part A: Board 1 - Transmitter

Complete the following C program for Board 1, which will monitor the button states and send commands to Board 2 when a button is pressed:

```
#include <avr/io.h>
  #define F_CPU 1600000UL
   #include <util/delay.h>
   // Function to initialize UART
   void usart_init(void) {
      UCSROB = (1<<____);
                                 // Enable USART transmitter
      UCSROC = (1<<UCSZ01) | (1<<UCSZ00); // Async, 8 bits
      UBRROL = ____;
                                 // Baud rate = 9600
9
  }
10
11
  void pin_setup(void) {
12
       DDRD &= ~(1<<2); // Set PD2 as input (Switch 0)
13
      PORTD |= (1<<2); // Enable pull-up for Switch 0
14
      DDRD &= ~(1<<3); // Set PD3 as input (Switch 1)
15
      PORTD |= (1<<3); // Enable pull-up for Switch 1
16
17 }
```

```
18
  // Function to send a character over UART
  void usart_send(unsigned char data) {
       while (!(_____)); // Wait until UDRO is empty
                          // Send data
       UDRO = data;
  }
23
   int main(void) {
25
       // Variables to track switch states
26
       unsigned char sw0_prev = 1;
27
       unsigned char sw1_prev = 1;
28
       unsigned char sw0_curr, sw1_curr;
      pin_setup();
      usart_init();
32
       while(1) {
33
          // Read current switch states
34
          sw0_curr = (PIND & (1<<2)) >> 2; // Read Switch1 state
35
          sw1_curr = (PIND & (1<<3)) >> 3; // Read Switch2 state
36
37
          // Check if Switch 0 state changed
          if (sw0_prev != sw0_curr) {
39
              usart_send(_____); // Send command to toggle LED1
40
          }
41
42
          // Check if Switch 1 state changed
          if (sw1_prev != sw1_curr) {
              usart_send(_____); // Send command to toggle LED1
          }
46
47
           // Update previous switch states
48
           sw0_prev = sw0_curr;
49
          sw1_prev = sw1_curr;
50
           _delay_ms(50); // Debounce delay
52
       }
53
54
55
       return 0;
<sub>56</sub> }
```

Part B: Board 2 - Receiver

Complete the following C program for Board 2, which will receive commands from Board 1 and toggle the corresponding LEDs:

```
void usart_init(void) {
      UCSROB = (1<<____);
                                // Enable USART receiver
      UCSROC = (1<<UCSZ01)|(1<<UCSZ00); // Async, 8 bits
                                 // Baud rate = 9600
      UBRROL = ____;
  }
5
  void pin_setup(void) {
      DDRB |= (1<<0); // Set PBO as output (LEDO)
      PORTB &= ~(1<<0); // Set LEDO initial state to OFF
      DDRB |= (1<<1); // Set PB1 as output (LED1)
      PORTB &= ~(1<<1); // Set LED1 initial state to OFF
  }
12
13
  int main(void) {
14
      unsigned char received_data;
15
      pin_setup();
16
      usart_init();
^{17}
      while(1) {
19
          // Wait until data is received
20
          while (!(_____)); // Check if data is available
21
22
          // Read the received data
23
          received_data = ____;
^{24}
          // Process received commands
          if (received_data == '1') {
              PORTB ^= (1<<0); // Toggle LED1
28
29
          else if (received_data == '2') {
30
                            // Toggle LED2
              ____;
31
          }
32
      }
      return 0;
34
35 }
```


Part C: Questions

a) What value should be loaded into UBRR0L to achieve a baud rate of 9600 with a 16 MHz clock? Show your calculation.

b) What command (character) should be sent from Board 1 when Switch 0 is toggled to toggle LED0 on Board 2?

c) What command (character) should be sent from Board 1 when Switch 1 is toggled to toggle LED1 on Board 2?

d) Which pins must be disconnected before uploading code to the Arduino boards? Explain why this is necessary.

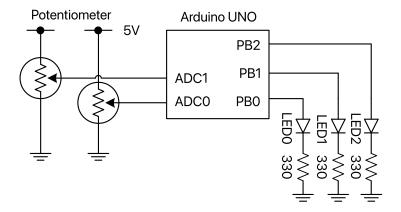

You need to write a C program to implement a voltage comparator using two analog inputs on the microcontroller. The circuit consists of two potentiometers connected to ADC0 and ADC1 pins, with three LEDs connected to pins PB0, PB1, and PB2.

Write a complete C program that performs the following tasks:

- 1. Read the voltage values from two potentiometers connected to ADC0 and ADC1 pins.
- 2. Compare the two voltage values and control LEDs based on these conditions:
 - (a) If voltage at ADC0 > voltage at ADC1, turn on LED1 (PB0) and turn off other LEDs.
 - (b) If voltage at ADC0 < voltage at ADC1, turn on LED2 (PB1) and turn off other LEDs.
 - (c) If voltage at ADC0 = voltage at ADC1, turn on LED3 (PB2) and turn off other LEDs.

Hint: You may need to configure two separate ADC channels in your program. Consider using a function to read the ADC value from a specific channel.



In this problem, you will implement the functionality from Problems 1-4 using Arduino programming language (C++ with Arduino libraries) instead of AVR C or Assembly. Select ONE of the previous problems (1-4) and reimplement it using Arduino code.

Random Question Selection:

Visit **npwitk.com/css332-random** to randomly determine which problem (1-4) you should implement in Arduino.

