♦ OpenCore Install Guide

Dortania Guides ▼ Switch theme

GitHub □

USB Creation

Creating the USB ▼

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI☐

config.plist Setup

Configs

Intel Desktop config.plist >

Intel Laptop config.plist 🔻

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

OpenCore Debugging

Miscellaneous Issues

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

Laptop Broadwell

Support	Version
Initial macOS Support	OS X 10.10, Yosemite
Last Supported OS	macOS 12 Monterey
Note	For Ventura information, see macOS 13 Ventura

Starting Point

So making a config.plist may seem hard, it's not. It just takes some time but this guide will tell you how to configure everything, you won't be left in the cold. This also means if you have issues, review your config settings to make sure they're correct. Main things to note with OpenCore:

- All properties must be defined, there are no default OpenCore will fall back on so do not delete sections unless told explicitly so. If the guide doesn't mention the option, leave it at default.
- The Sample.plist cannot be used As-Is, you must configure it to your system
- **DO NOT USE CONFIGURATORS**, these rarely respect OpenCore's configuration and even some like Mackie's will add Clover properties and corrupt plists!

Now with all that, a quick reminder of the tools we need

- ProperTree □
 - Universal plist editor
- GenSMBIOS☆
 - For generating our SMBIOS data
- Sample/config.plist
 - See previous section on how to obtain: config.plist Setup

WARNING

Read this guide more than once before setting up OpenCore and make sure you have it set up correctly. Do note that images will not always be the most up-to-date so please read the text below them, if nothing's mentioned then leave as default.

ACPI

• •		/Users/mykolagrymalyu	k/config.plist - Edited		
	Key	Туре		Value	
loot		Dictionary	8 key/value pairs		
∨ ACPI		Dictionary	4 key/value pairs		=
∨ Add		Array	4 children		
~ O		Dictionary	3 key/value pairs		
Enabl	ed		True		
Comr	nent	String	SSDT-PLUG.aml		
Path		\$ String	SSDT-PLUG.aml		=
×1		Dictionary	3 key/value pairs		=
Enabl	ed		True		=
Comr	nent	s String	SSDT-EC.aml		
Path		s String	SSDT-EC.aml		
∨ 2		Dictionary	3 key/value pairs		≡
Enabl	ed		True		=
Comr	ent		SSDT-PNLF.aml		
Path			SSDT-PNLF.aml		
∨3		Dictionary	3 key/value pairs		
Enabl	ed		True		
Comr	ent		SSDT-XOSI.aml		
Path			SSDT-XOSI.aml		
Delete			2 children		=
Patch			1 child		
∨ 0		Dictionary	12 key/value pairs		
Comr	nent		Change _OSI to XOSI		
Coun		\$ Number	0		=
Enabl	ed		True		=
Find		≎ Data	<5F4F5349>		=
Limit		≉ Number	0		=
Mask		≉ Data	<>		=
	ableId	≉ Data	<>		=
Repla		≉ Data	<584F5349>		=
	ceMask	≉ Data	<>		=
Skip		Number	0		
	_ength	Number ■	0		=
	Signature	≎ Data	<>		=
∨ Quirks		Dictionary	5 key/value pairs		=
FadtEnat		≉ Boolean	False		
	eHeaders		False		=
RebaseR			False		■
ResetHw			False		=
ResetLog	oStatus	≉ Boolean	False		
Booter		Dictionary	2 key/value pairs		=
DevicePropertie	S	Dictionary	2 key/value pairs		
Kernel		Dictionary	5 key/value pairs		
Misc		Dictionary	6 key/value pairs		
NVRAM		Dictionary	6 key/value pairs		=
PlatformInfo		Dictionary	6 key/value pairs		
> UEFI		Dictionary	9 key/value pairs		■

Add

Info

Switch theme GitHub ☐

USB Creation

Creating the USB 🔻

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI□

config.plist Setup

Configs

Intel Desktop config.plist

Intel Laptop config.plist 🔻

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

OpenCore Debugging

Miscellaneous Issues

Understanding the macOS Boot

Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics Multiboot

Miscellaneous

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

on making them found here: Getting started with ACPI

For us we'll need a couple of SSDTs to bring back functionality that Clover provided:

Required SSDTs	Description
SSDT-PLUG	Allows for native CPU power management on Haswell and newer, see Getting Started With ACPI Guide ☐ for more details.
SSDT-EC ☐	Fixes the embedded controller, see Getting Started With ACPI Guide ☐ for more details.
SSDT-GPIO	Creates a stub so Voodool2C can connect, for those having troubles getting Voodool2C working can try SSDT-XOSI™ instead. Note that Intel NUCs do not need this
SSDT-PNLF	Fixes brightness control, see Getting Started With ACPI Guide for more details. Note that Intel NUCs do not need this

Note that you **should not** add your generated DSDT.aml here, it is already in your firmware. So if present, remove the entry for it in your config.plist and under EFI/OC/ACPI.

For those wanting a deeper dive into dumping your DSDT, how to make these SSDTs, and compiling them, please see the **Getting started with ACPI** page. Compiled SSDTs have a .aml extension(Assembled) and will go into the EFI/0C/ACPI folder and must be specified in your config under ACPI -> Add as well.

Delete

This blocks certain ACPI tables from loading, for us we can ignore this.

Patch

Info

This section allows us to dynamically modify parts of the ACPI (DSDT, SSDT, etc.) via OpenCore. For us, we'll need the following:

- OSI rename
 - This is required when using SSDT-XOSI as we redirect all OSI calls to this SSDT, this is not needed if you're using SSDT-GPIO

Comment	String	Change _OSI to XOSI
Enabled	Boolean	YES
Count	Number	0
Limit	Number	0
Find	Data	5f4f5349
Replace	Data	584f5349

Quirks

Settings relating to ACPI, leave everything here as default as we have no use for these quirks.

Booter

Switch theme GitHub

USB Creation

Creating the USB ▼

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Intel Laptop config.plist v

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues

OpenCore Debugging

Understanding the macOS Boot

Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal **•**

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura


Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

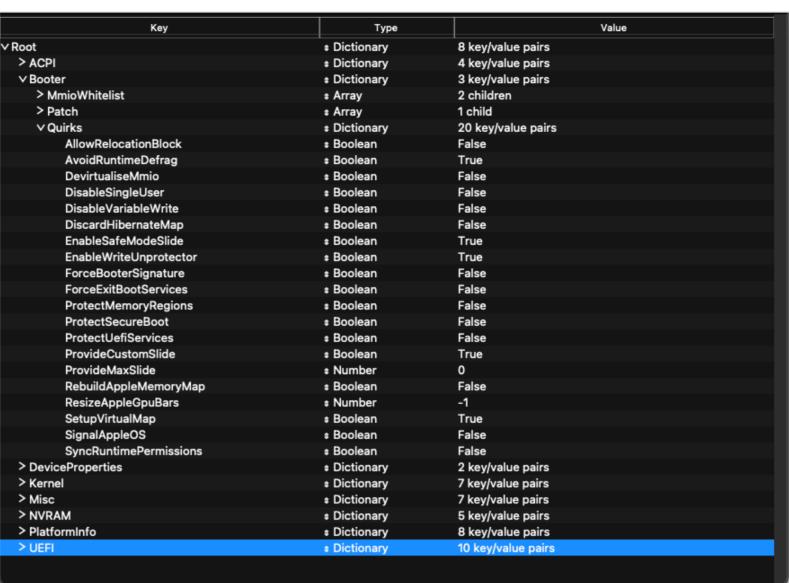

This section is dedicated to quirks relating to boot.efi patching with OpenRuntime, the replacement for AptioMemoryFix.efi

MmioWhitelist

This section is allowing spaces to be pass-through to macOS that are generally ignored, useful when paired with <code>DevirtualiseMmio</code>

Quirks

Info

Settings relating to boot.efi patching and firmware fixes, for us, we leave it as default

► More in-depth Info

DeviceProperties

		config.plist
-		Corning.plist
器 🕻 > 📗 config.plist $ angle$ No Selection		
Key	Туре	Value
▼ Root	Dictionary	(8 items)
► ACPI	Dictionary	(4 items)
▶ Booter	Dictionary	(2 items)
▼ DeviceProperties	Dictionary	(2 items)
▼ Add	Dictionary	(1 item)
▼ PciRoot(0x0)/Pci(0x2,0x0)	Dictionary	(4 items)
AAPL,ig-platform-id	Data	<06002616>
framebuffer-patch-enable	Number	1
framebuffer-stolenmem	Data	<00003001>
framebuffer-fbmem	Data	<00009000>
▶ Block	Dictionary	(1 item)
► Kernel	Dictionary	(5 items)
▶ Misc	Dictionary	(6 items)
► NVRAM	Dictionary	(6 items)
▶ PlatformInfo	Dictionary	(6 items)
▶ UEFI	Dictionary	(7 items)

Add

Sets device properties from a map.

PciRoot(0x0)/Pci(0x2,0x0)

This section is set up via WhateverGreen's Framebuffer Patching Guide ☐ and is used for setting important iGPU properties.

The config.plist doesn't already have a section for this so you will have to create it manually.

When setting up your iGPU, the table below should help with finding the right values to set. Here is an explanation of some values:

- AAPL,ig-platform-id
 - This is used internally for setting up the iGPU
- Type

 Whether the entry is recommended for laptops(ie. with built-in displays) or for Intel NUCs(ie. stand alone boxes) OpenCore Install Guide
Switch theme GitHub

USB Creation

Creating the USB 🔻

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues
Userspace Issues

-

Post-Install Issues

OpenCore Debugging

Miscellaneous Issues

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

- 1. When initially setting up your config.plist, only set AAPL,ig-platform-id this is normally enough
- 2. If you boot and you get no graphics acceleration (7MB VRAM and solid background for dock), then you likely need to try different AAPL,ig-platform-id values, add stolenmem patches, or even add a device-id property.

AAPL,ig-platform-id	Туре	Comment
06002616	Laptop	Recommended value for Broadwell laptops
02001616	NUC	Recommended value for Broadwell NUCs

Configuration Notes

• For HD 5600 you need device-id faked to 26160000:

Key	Туре	Value
device-id	data	26160000

In some cases where you cannot set the DVMT-prealloc of these cards to 96MB higher in your UEFI Setup, you
may get a kernel panic. Usually they're configured for 32MB of DVMT-prealloc, in that case these values are
added to your iGPU Properties

Key	Туре	Value
framebuffer-patch-enable	Data	01000000
framebuffer-stolenmem	Data	00003001
framebuffer-fbmem	Data	00009000

PciRoot(0x0)/Pci(0x1b,0x0)

layout-id

- Applies AppleALC audio injection, you'll need to do your own research on which codec your motherboard has and match it with AppleALC's layout. AppleALC Supported Codecs ☑.
- You can delete this property outright as it's unused for us at this time

For us, we'll be using the boot argument <code>alcid=xxx</code> instead to accomplish this. <code>alcid</code> will override all other layout-IDs present. More info on this is covered in the <code>Post-Install Page</code>

Delete

Removes device properties from the map, for us we can ignore this

Kernel

€ © OpenCore Install GuideSwitch theme GitHub ☑

USB Creation

Creating the USB •

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI

config.plist Setup

Configs

Intel Desktop config.plist

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues

OpenCore Debugging

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

Key	Туре	Value
∨ Root	Dictionary	8 key/value pairs
> ACPI	Dictionary	4 key/value pairs
> Booter	* Dictionary	3 key/value pairs
> DeviceProperties	* Dictionary	2 key/value pairs
∨ Kernel	Dictionary	7 key/value pairs
∨Add	* Array	2 children
∨0	Dictionary	8 key/value pairs
Arch	\$ String	Any
BundlePath	String	Lilu.kext
Comment	String	Patch engine
Enabled	* Boolean	True
ExecutablePath	String	Contents/MacOS/Lilu
MaxKernel	String	
MinKernel	String	8.0.0
PlistPath	String	Contents/Info.plist
>1	Dictionary	8 key/value pairs
> Block	* Array	1 child
> Emulate	Dictionary	5 key/value pairs
> Force	Array	1 child
> Patch	Array	10 children
∨ Quirks	Dictionary	22 key/value pairs
AppleCpuPmCfqLock	≉ Boolean	False Enable for 10.10 and older
AppleXcpmCfgLock	Boolean	True
AppleXcpmExtraMsrs	≉ Boolean	False
AppleXcpmForceBoost	a Boolean	False
CustomPciSerialDevice	Boolean	False
CustomSMBIOSGuid	Boolean	False Enable for Dell or VAIO systems
DisableloMapper	Boolean	True
DisableLinkeditJettison	≇ Boolean	True
DisableRtcChecksum	≄ Boolean	False
ExtendBTFeatureFlags	≇ Boolean	False
ExternalDisklcons	a Boolean	False
ForceAquantiaEthernet	a Boolean	False
ForceSecureBootScheme	♯ Boolean	False
IncreasePciBarSize	≇ Boolean	False
LapicKernelPanic	Boolean	False Enable for HP systems
LegacyCommpage	♯ Boolean	False
Panicnokextuump	* Rooleau	ırue
Power I imeoutKernelPanic	Boolean	Irue
ProvideCurrentCpulnfo	Boolean	False
SetApfsTrimTimeout	* Number	-1
ThirdPartyDrives	* Boolean	False
XhciPortLimit	* Boolean	False
> Scheme	Dictionary	4 key/value pairs
> Misc	* Dictionary	7 key/value pairs
> NVRAM	* Dictionary	5 key/value pairs
> PlatformInfo	* Dictionary	8 key/value pairs
> UEFI	Dictionary	10 key/value pairs

Add

Here's where we specify which kexts to load, in what specific order to load, and what architectures each kext is meant for. By default we recommend leaving what ProperTree has done, however for 32-bit CPUs please see below:

► More in-depth Info

Emulate

Needed for spoofing unsupported CPUs like Pentiums and Celerons

- Cpuid1Mask: Leave this blank
- Cpuid1Data: Leave this blank

Force

Used for loading kexts off system volume, only relevant for older operating systems where certain kexts are not present in the cache(ie. IONetworkingFamily in 10.6).

For us, we can ignore.

Block

Blocks certain kexts from loading. Not relevant for us.

Patch

Patches both the kernel and kexts.

Quirks

Info

Settings relating to the kernel, for us we'll be enabling the following:

Quirk	Enabled	Comment
AppleCpuPmCfgLock	NO	Need if running 10.10 or older and cannot disable CFG-Lock in the BIOS
AppleXcpmCfgLock	YES	Not needed if CFG-Lock is disabled in the BIOS
DisableloMapper	YES	Not needed if VT-D is disabled in the BIOS

Switch theme GitHub

USB Creation

Creating the USB ▼

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

UEFI

Cleaning up

PlatformInfo

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues

OpenCore Debugging

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

LapicKernelPanic	NO	HP Machines will require this quirk
PanicNoKextDump	YES	
PowerTimeoutKernelPanic	YES	
XhciPortLimit	YES	Disable if running macOS 11.3+

► More in-depth Info

Scheme

Settings related to legacy booting (ie. 10.4-10.6), for majority you can skip however for those planning to boot legacy OSes you can see below:

► More in-depth Info

Misc

• •	/Volumes/INSTALL MAC/EFI/OC/	/config.plist - Edited
Key	Туре	Value
Root	Dictionary	8 key/value pairs
> ACPI	Dictionary	4 key/value pairs
> Booter	Dictionary	3 key/value pairs
> DeviceProperties	Dictionary	2 key/value pairs
> Kernel	Dictionary	7 key/value pairs
∨ Misc	Dictionary	7 key/value pairs
BlessOverride	Array	0 children
∨ Boot	Dictionary	13 key/value pairs
ConsoleAttributes	* Number	0
HibernateMode	String	None
HideAuxiliary	* Boolean	True
LauncherOption	* String	Disabled
LauncherPath	* String	Default
PickerAttributes	* Number	17
PickerAudioAssist	* Boolean	False
PickerMode	String	Builtin
PickerVariant	* String	Auto
	* String * Boolean	False
PollAppleHotKeys ShowPicker	s Boolean s Boolean	
		True
TakeoffDelay	* Number	0
Timeout	* Number	5
∨ Debug	Dictionary	8 key/value pairs
AppleDebug	Boolean	True
ApplePanic	Boolean	True
DisableWatchDog	Boolean	False
DisplayDelay	* Number	0
DisplayLevel	Number	2147483650
LogModules	String	•
SvsReport	≇ Boolean	False
Target	Number	67
∨ Entries	a Array	1 child
v 0	Dictionary	8 key/value pairs
Arguments	String	
Auxiliary	≉ Boolean	False
Comment	String	Not signed for security reasons
Enabled	Boolean	False
Flavour	String	Auto
Name	String	CustomOS
Path	String	PciRoot(0x0)/Pci(0x1,0x1)/Pci(0x0,0x0)/NVMe(0x1,11-22
TextMode	≇ Boolean	False
∨ Security	Dictionary	13 key/value pairs
AllowSetDefault		True
ApECID	* Number	0
AuthRestart	≇ Boolean	False
BlacklistAppleUpdate	≇ Boolean	True
DmgLoading	String	Signed
EnablePassword	Boolean	False
ExposeSensitiveData	* Number	6
HaltLevel	* Number	2147483648
PasswordHash	Data	◆
PasswordSalt	* Data	*
ScanPolicy	* Number	^
SecureBootModel	* String	Set SecureBootModel to Disabled if
Vault	* String	Optional you require NVIDIA's web Driver

Boot

Info

Quirk	Enabled	Comment	
HideAuxiliary	YES	Press space to show macOS recovery and other auxiliary entries	

► More in-depth Info

Debug

Info

 $\label{thm:lemma$

OpenCore Install Guide GitHub □ Switch theme

USB Creation

Creating the USB

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Intel Laptop config.plist 🔻

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

UEFI

Cleaning up

PlatformInfo

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist ▶

AMD Desktop config.plist ▶

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

OpenCore Debugging

Miscellaneous Issues

Understanding the macOS Boot

Process

System Debugging: In-depth

Post-Install ☐

Universal >

Post Install

Laptop Specifics

Cosmetics >

Multiboot |

Miscellaneous

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Credits

Supporting the guides

AppleDebug YES ApplePanic YES DisableWatchDog YES 67

► More in-depth Info

Target

Security

Info

Security is pretty self-explanatory, do not skip. We'll be changing the following:

Quirk	Enabled	Comment
AllowSetDefault	YES	
BlacklistAppleUpdate	YES	
ScanPolicy	0	
SecureBootModel	Default	Leave this as Default for OpenCore to automatically set the correct value corresponding to your SMBIOS. The next page goes into more detail about this setting.
Vault	Optional	This is a word, it is not optional to omit this setting. You will regret it if you don't set it to Optional, note that it is case-sensitive

► More in-depth Info

Serial

Used for serial debugging (Leave everything as default).

Tools


Used for running OC debugging tools like the shell, ProperTree's snapshot function will add these for you.

Entries

Used for specifying irregular boot paths that can't be found naturally with OpenCore.

Won't be covered here, see 8.6 of Configuration.pdf ☐ for more info

NVRAM

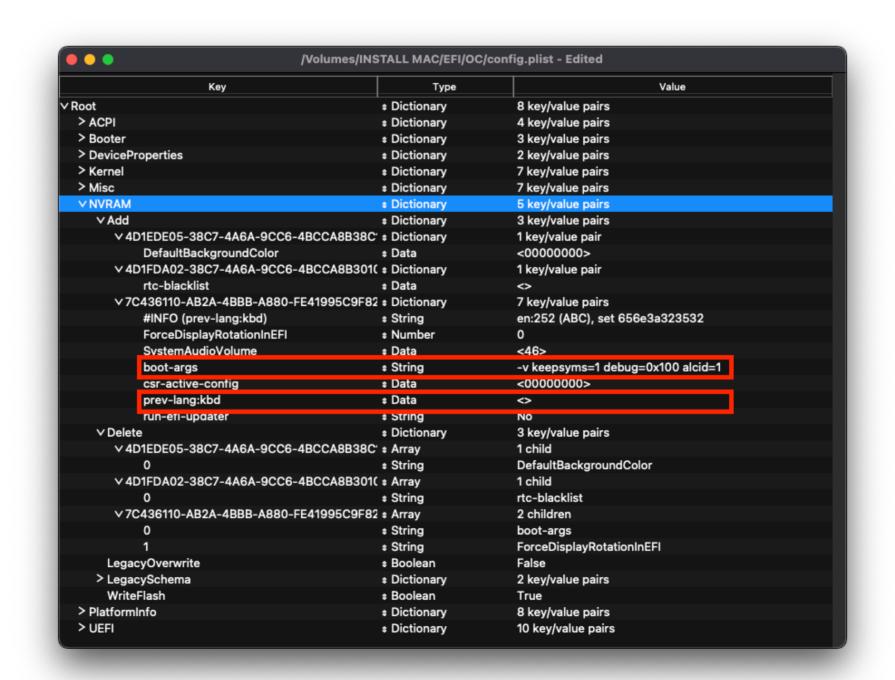

USB Creation

Creating the USB 🔻

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Intel Laptop config.plist 🔻

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

OpenCore Debugging

Miscellaneous Issues

Hadayatan din a tha was 200

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

Used for OpenCore's UI scaling, default will work for us. See in-depth section for more info

GitHub □

4D1FDA02-38C7-4A6A-9CC6-4BCCA8B30102

OpenCore's NVRAM GUID, mainly relevant for RTCMemoryFixup users

► More in-depth Info

► More in-depth Info

7C436110-AB2A-4BBB-A880-FE41995C9F82

System Integrity Protection bitmask

• General Purpose boot-args:

boot-args	Description	
-v	This enables verbose mode, which shows all the behind-the-scenes text that scrolls by as you're booting instead of the Apple logo and progress bar. It's invaluable to any Hackintosher, as it gives you an inside look at the boot process, and can help you identify issues, problem kexts, etc.	
debug=0x100	This disables macOS's watchdog which helps prevents a reboot on a kernel panic. That way you can <i>hopefully</i> glean some useful info and follow the breadcrumbs to get past the issues.	
keepsyms=1	This is a companion setting to debug=0x100 that tells the OS to also print the symbols on a kernel panic. That can give some more helpful insight as to what's causing the panic itself.	
alcid=1	Used for setting layout-id for AppleALC, see supported codecs ☐ to figure out which layout to use for your specific system. More info on this is covered in the Post-Install Page ☐	

• GPU-Specific boot-args:

boot-args	Description	
-	Used for disabling all other GPUs than the integrated Intel iGPU, useful for those wanting to	
wegnoegpu	run newer versions of macOS where their dGPU isn't supported	

• csr-active-config: 00000000

- Settings for 'System Integrity Protection' (SIP). It is generally recommended to change this with csrutil via the recovery partition.
- csr-active-config by default is set to 00000000 which enables System Integrity Protection. You can choose a
 number of different values but overall we recommend keeping this enabled for best security practices. More
 info can be found in our troubleshooting page: Disabling SIP
- run-efi-updater: No
 - This is used to prevent Apple's firmware update packages from installing and breaking boot order; this is important as these firmware updates (meant for Macs) will not work.
- prev-lang:kbd: <>
 - Needed for non-latin keyboards in the format of lang-COUNTRY: keyboard, recommended to keep blank though you can specify it(**Default in Sample config is Russian**):
- American: en-US:0 (656e2d55533a30 in HEX)
- ∘ Full list can be found in AppleKeyboardLayouts.txt ☐
- Hint: prev-lang:kbd can be changed into a String so you can input en-US:0 directly instead of converting
- Hint 2: prev-lang:kbd can be set to a blank variable (eg. <>) which will force the Language Picker to appear instead at first boot up.

Key	Туре	Value
prev-lang:kbd	String	en-US:0

Delete

Forcibly rewrites NVRAM variables, do note that Add will not overwrite values already present in NVRAM so values like boot-args should be left alone.

• LegacySchema

- Used for assigning NVRAM variables, used with <code>OpenVariableRuntimeDxe.efi</code> . Only needed for systems without native NVRAM
- WriteFlash: YES
 - Enables writing to flash memory for all added variables.

Switch theme GitHub

USB Creation

Creating the USB 🔻

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Intel Laptop config.plist v

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up
Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues

OpenCore Debugging

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal **•**

Laptop Specifics

Cosmetics Multiboot

MUITIDOOT

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐


Choosing the right SMBIOS

Misc

Supporting the guides

Credits

PlatformInfo

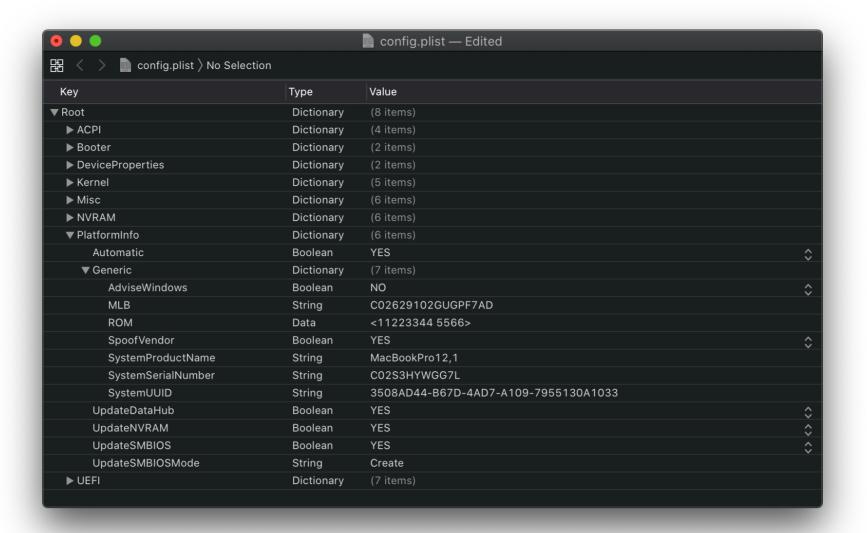

Info

For setting up the SMBIOS info, we'll use CorpNewt's GenSMBIOS ☐ application.

For this Broadwell example, we chose the MacBookPro12,1 SMBIOS. The typical breakdown is as follows:

SMBIOS	CPU Type	GPU Type	Display Size
MacBook8,1	Dual Core 7W(Low End)	iGPU: HD 5300	12"
MacBookAir7,1	Dual Core 15W	iGPU: HD 6000	11"
MacBookAir7,2	Dual Core 15W	iGPU: HD 6000	13"
MacBookPro12,1	Dual Core 28W(High End)	iGPU: Iris 6100	13"
MacBookPro11,2	Quad Core 45W	iGPU: Iris Pro 5200	15"
MacBookPro11,3	Quad Core 45W	iGPU: Iris Pro 5200 + dGPU: GT 750M	15"
MacBookPro11,4	Quad Core 45W	iGPU: Iris Pro 5200	15"
MacBookPro11,5	Quad Core 45W	iGPU: Iris Pro 5200 + dGPU: R9 M370X	15"
iMac16,1	NUC Systems	HD 6000/Iris Pro 6200	N/A

Note: MacBook8,1 was dropped in macOS Monterey. If running macOS Monterey, select another model.

Run GenSMBIOS, pick option 1 for downloading MacSerial and Option 3 for selecting out SMBIOS. This will give us an output similar to the following:

Type: MacBookPro12,1
Serial: C02M9SYJFY10
Board Serial: C02408101J9G2Y7A8

Board Serial: C02408101J9G2Y7A8
SmUUID: 7B227BEC-660D-405F-8E60-411B3E4EF055

The Type part gets copied to Generic -> SystemProductName.

The Serial part gets copied to Generic -> SystemSerialNumber.

The Smuuid part gets copied to Generic -> SystemUUID.

The Board Serial part gets copied to Generic -> MLB.

We set Generic -> ROM to either an Apple ROM (dumped from a real Mac), your NIC MAC address, or any random MAC address (could be just 6 random bytes, for this guide we'll use 11223300 0000. After install follow the Fixing iServices page on how to find your real MAC Address)

Reminder that you need an invalid serial! When inputting your serial number in Apple's Check Coverage Page , you should get a message such as "Unable to check coverage for this serial number."

Automatic: YES

• Generates PlatformInfo based on Generic section instead of DataHub, NVRAM, and SMBIOS sections

Generic

Others

USB Creation

Creating the USB 🔻

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI □

config.plist Setup

Configs

Intel Desktop config.plist

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

UEFI

Cleaning up

PlatformInfo

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues

OpenCore Debugging

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☑

Universal **•**

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐


Choosing the right SMBIOS

Misc

Supporting the guides

Credits

UEFI

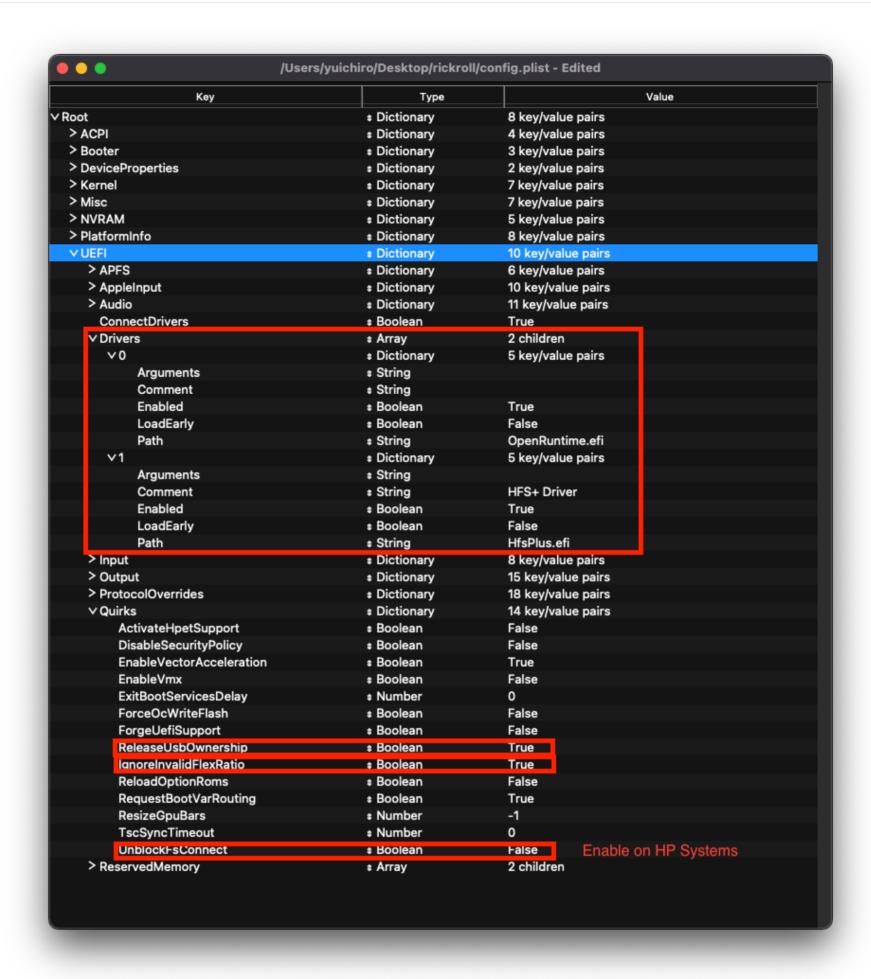

GitHub □

ConnectDrivers: YES

• Forces .efi drivers, change to NO will automatically connect added UEFI drivers. This can make booting slightly faster, but not all drivers connect themselves. E.g. certain file system drivers may not load.

Drivers

Add your .efi drivers here.

Only drivers present here should be:

- HfsPlus.efi
- OpenRuntime.efi
 - ► More in-depth Info

APFS

By default, OpenCore only loads APFS drivers from macOS Big Sur and newer. If you are booting macOS Catalina or earlier, you may need to set a new minimum version/date. Not setting this can result in OpenCore not finding your macOS partition!

macOS Sierra and earlier use HFS instead of APFS. You can skip this section if booting older versions of macOS.

APFS Versions

Both MinVersion and MinDate need to be set if changing the minimum version.

macOS Version	Min Version	Min Date
High Sierra (10.13.6)	748077008000000	20180621
Mojave (10.14.6)	945275007000000	20190820
Catalina (10.15.4)	1412101001000000	20200306
No restriction	-1	-1

Audio

OpenCore Install Guide Switch theme GitHub □

USB Creation

Creating the USB

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI ☐

config.plist Setup

Configs

Intel Desktop config.plist

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up

Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues

OpenCore Debugging

Understanding the macOS Boot Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics >

Multiboot |

Miscellaneous

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

Input

Related to boot.efi keyboard passthrough used for FileVault and Hotkey support, leave everything here as default as we have no use for these quirks. See here for more details: Security and FileVault □

Output

Relating to OpenCore's visual output, leave everything here as default as we have no use for these quirks.

► More in-depth Info

ProtocolOverrides

Mainly relevant for Virtual machines, legacy macs and FileVault users. See here for more details: Security and FileVault □

Quirks

Info

Relating to quirks with the UEFI environment, for us we'll be changing the following:

Quirk	Enabled	Comment
IgnoreInvalidFlexRatio	YES	
ReleaseUsbOwnership	YES	
UnblockFsConnect	NO	Needed mainly by HP motherboards

► More in-depth Info

ReservedMemory

Used for exempting certain memory regions from OSes to use, mainly relevant for Sandy Bridge iGPUs or systems with faulty memory. Use of this guirk is not covered in this guide

Cleaning up

And now you're ready to save and place it into your EFI under EFI/OC.

For those having booting issues, please make sure to read the Troubleshooting section first and if your questions are still unanswered we have plenty of resources at your disposal:

- r/Hackintosh Subreddit
- r/Hackintosh Discord ☑

Config reminders

HP Users:

- Kernel -> Quirks -> LapicKernelPanic -> True
 - You will get a kernel panic on LAPIC otherwise
- UEFI -> Quirks -> UnblockFsConnect -> True

Intel BIOS settings

• Note: Most of these options may not be present in your firmware, we recommend matching up as closely as possible but don't be too concerned if many of these options are not available in your BIOS

Disable

- Fast Boot
- Secure Boot
- Serial/COM Port Parallel Port
- VT-d (can be enabled if you set DisableIoMapper to YES)
- Compatibility Support Module (CSM) (Must be off in most cases, GPU errors/stalls like gIO are common when this option is enabled)
- Thunderbolt(For initial install, as Thunderbolt can cause issues if not setup correctly)
- Intel SGX
- Intel Platform Trust
- CFG Lock (MSR 0xE2 write protection) (This must be off, if you can't find the option then enable AppleXcpmCfgLock under Kernel -> Quirks. Your hack will not boot with CFG-Lock enabled)
 - For 10.10 and older, you'll need to enable AppleCpuPmCfgLock as well

Enable

USB Creation

Creating the USB ▼

Making the installer in macOS

Making the installer in Windows

Making the installer in Linux

Adding The Base OpenCore Files

Gathering files

Getting started with ACPI \square

config.plist Setup

Configs

Intel Desktop config.plist

Arrandale

Sandy Bridge

Ivy Bridge

Haswell

Broadwell

Starting Point

ACPI

Booter

DeviceProperties

Kernel

Misc

NVRAM

PlatformInfo

UEFI

Cleaning up
Intel BIOS settings

Skylake

Kaby Lake

Coffee Lake and Whiskey Lake

Coffee Lake Plus and Comet Lake

Ice Lake

Intel HEDT config.plist >

AMD Desktop config.plist

Apple Secure Boot

Installation

Installation Process

Troubleshooting

General Troubleshooting

OpenCore Boot Issues

Kernel Issues

Userspace Issues

Post-Install Issues

Miscellaneous Issues
OpenCore Debugging

Understanding the macOS Boot

Understanding the Process

System Debugging: In-depth

Post Install

Post-Install ☐

Universal >

Laptop Specifics

Cosmetics

Multiboot >

Miscellaneous >

Extras

Fixing KASLR slide values

Disabling GPU

macOS 13: Ventura

Clover Conversion ☐

Choosing the right SMBIOS

Misc

Supporting the guides

Credits

- Hyper-Threading
- Execute Disable Bit
- EHCI/XHCI Hand-off
- OS type: Windows 8.1/10 UEFI Mode (some motherboards may require "Other OS" instead)
- DVMT Pre-Allocated(iGPU Memory): 64MB or higher
- SATA Mode: AHCI

Once done here, we need to edit a couple extra values. Head to the Apple Secure Boot Page

GitHub □

Help us improve this page! ☐ Last Updated: 7/11/2023, 12:59:44 AM

— Haswell

Skylake →