1. Description


1.1. Project

Project Name	L476USBKeyBoard
Board Name	L476USBKeyBoard
Generated with:	STM32CubeMX 4.19.0
Date	02/20/2017

1.2. MCU

MCU Series	STM32L4
MCU Line	STM32L4x6
MCU name	STM32L476RGTx
MCU Package	LQFP64
MCU Pin number	64

2. Pinout Configuration

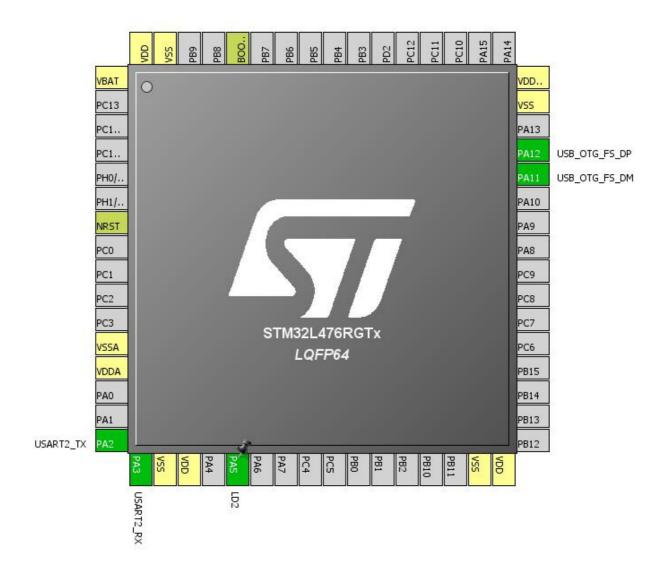


3. Pins Configuration

Pin Number LQFP64	Pin Name (function after reset)	Pin Type	Alternate Function(s)	Label
1	VBAT	Power		
7	NRST	Reset		
12	VSSA	Power		
13	VDDA	Power		
16	PA2	I/O	USART2_TX	
17	PA3	I/O	USART2_RX	
18	VSS	Power		
19	VDD	Power		
21	PA5 *	I/O	GPIO_Output	LD2
31	VSS	Power		
32	VDD	Power		
44	PA11	I/O	USB_OTG_FS_DM	
45	PA12	I/O	USB_OTG_FS_DP	
47	VSS	Power		
48	VDDUSB	Power		
60	воото	Boot		
63	VSS	Power		
64	VDD	Power		

^{*} The pin is affected with an I/O function

4. Clock Tree Configuration

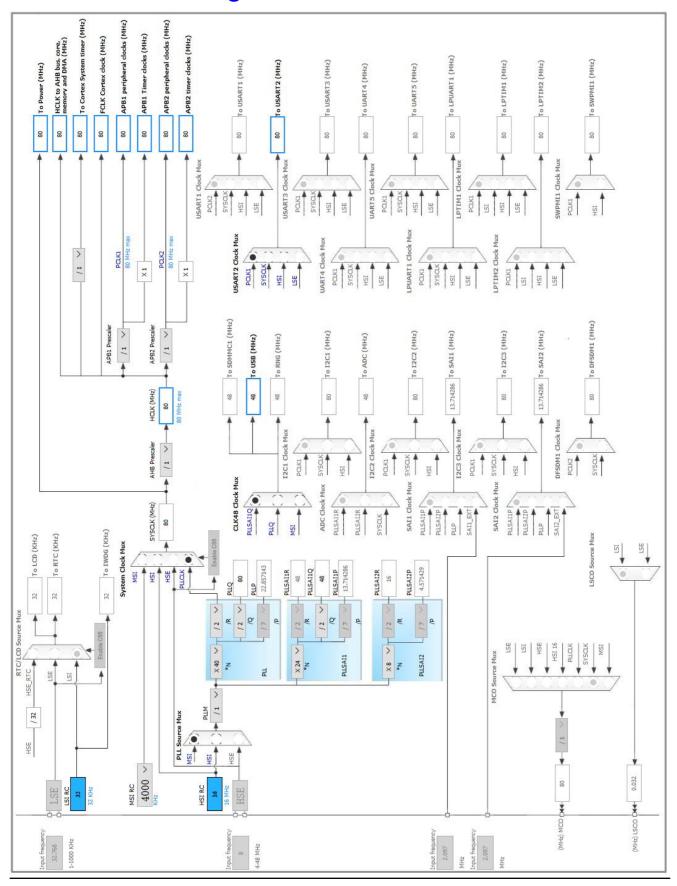

Page 4

5. IPs and Middleware Configuration

5.1. SYS

Timebase Source: SysTick

5.2. USART2

Mode: Asynchronous

5.2.1. Parameter Settings:

Basic Parameters:

Baud Rate 115200

Word Length 8 Bits (including Parity) *

Parity None Stop Bits 1

Advanced Parameters:

Data Direction Receive and Transmit

Over Sampling 16 Samples
Single Sample Disable

Advanced Features:

Auto Baudrate Disable TX Pin Active Level Inversion Disable **RX Pin Active Level Inversion** Disable Disable Data Inversion Disable TX and RX Pins Swapping Enable Overrun DMA on RX Error Enable MSB First Disable

5.3. USB_OTG_FS

Mode: Device_Only

5.3.1. Parameter Settings:

Speed Full Speed 12MBit/s

Endpoint 0 Max Packet size 64 Bytes

1: Link Power Management supported

Enable internal IP DMA Disabled Disabled Low power Disabled Link Power Management **VBUS** sensing Disabled * Disabled Signal start of frame

5.4. USB DEVICE

Class For FS IP: Custom Human Interface Device Class (HID)

5.4.1. Parameter Settings:

Basic Parameters:

VirtualMode CustomHid USBD_MAX_NUM_INTERFACES (Maximum number of supported interfaces) USBD_MAX_NUM_CONFIGURATION (Maximum number of supported configuration) USBD_MAX_STR_DESC_SIZ (Maximum size for the string descriptors) 512 USBD_SUPPORT_USER_STRING (Enable user string descriptor) Enabled USBD_SELF_POWERED (Enabled self power) Enabled

3: All messages and internal debug messages are shown *

USBD_LPM_ENABLED (Link Power Management)

USBD_DEBUG_LEVEL (USBD Debug Level)

Class Parameters:

USBD_CUSTOM_HID_REPORT_DESC_SIZE (Total length for Report descriptor (IN 61 * ENDPOINT))

USBD_CUSTOMHID_OUTREPORT_BUF_SIZE (Maximum report buffer size (OUT 64 * ENDPOINT))

5.4.2. Device Descriptor:

Device Descriptor:

VID (Vendor IDentifier) 1155

LANGID_STRING (Language Identifier) English(United States) MANUFACTURER_STRING (Manufacturer Identifier) STMicroelectronics

Device Descriptor FS:

PID (Product IDentifier) 22352 *

PRODUCT_STRING (Product Identifier) KeyBoard-By DQL *

SERIALNUMBER_STRING (Serial number) 0000000001A CONFIGURATION_STRING (Configuration Identifier) Custom HID Config Custom HID Interface INTERFACE_STRING (Interface Identifier)

L476USBKeyBoard	Project
Configuration	Report

* User modified value		

6. System Configuration

6.1. GPIO configuration

IP	Pin	Signal	GPIO mode	GPIO pull/up pull down	Max Speed	User Label
USART2	PA2	USART2_TX	Alternate Function Push Pull	Pull-up	Very High	
	PA3	USART2_RX	Alternate Function Push Pull	Pull-up	Very High	
USB_OTG_ FS	PA11	USB_OTG_FS_ DM	Alternate Function Push Pull	No pull-up and no pull-down	Very High	
	PA12	USB_OTG_FS_ DP	Alternate Function Push Pull	Pull-up *	Very High	
GPIO	PA5	GPIO_Output	Output Push Pull	No pull-up and no pull-down	Very High	LD2

6.2. DMA configuration

nothing configured in DMA service

6.3. NVIC configuration

Interrupt Table	Enable	Preenmption Priority	SubPriority
Non maskable interrupt	true	0	0
Hard fault interrupt	true	0	0
Memory management fault	true	0	0
Prefetch fault, memory access fault	true	0	0
Undefined instruction or illegal state	true	0	0
System service call via SWI instruction	true	0	0
Debug monitor	true	0	0
Pendable request for system service	true	0	0
System tick timer	true	0	0
USB OTG FS global interrupt	true 0 0		0
PVD/PVM1/PVM2/PVM3/PVM4 interrupts through EXTI lines 16/35/36/37/38	unused		
Flash global interrupt	unused		
RCC global interrupt	unused		
USART2 global interrupt	unused		
FPU global interrupt	unused		

^{*} User modified value

7. Power Consumption Calculator report

7.1. Microcontroller Selection

Series	STM32L4
Line	STM32L4x6
мси	STM32L476RGTx
Datasheet	025976_Rev4

7.2. Parameter Selection

Temperature	25
Vdd	null

8. Software Project

8.1. Project Settings

Name	Value
Project Name	L476USBKeyBoard
Project Folder	C:\Users\DengQ\Desktop\L476USBKeyBoard
Toolchain / IDE	EWARM
Firmware Package Name and Version	STM32Cube FW_L4 V1.6.0

8.2. Code Generation Settings

Name	Value
STM32Cube Firmware Library Package	Copy all used libraries into the project folder
Generate peripheral initialization as a pair of '.c/.h' files	Yes
Backup previously generated files when re-generating	No
Delete previously generated files when not re-generated	Yes
Set all free pins as analog (to optimize the power	No
consumption)	