THANGAL KUNJU MUSALIAR COLLEGE OF ENGINEERING

KOLLAM - 691 005



ELECTRONICS AND COMMUNICATION ENGINEERING

LABORATORY RECORD

YEAR 2024-25

Certified that this is a Bonafide Record of the work done by Sri Fathima Nusaiba K P 5th Semester class B22ECB75 Electronics and Communication in the Digital Signal Processing Laboratory during the year 2024-25

Name of the Examination: Fifth Semester B. Tech Degree Examination 2024

Register Number : TKM22EC053

Staff Member in-charge

External Examiner

Date



INDEX

SL No.	DATE	NAME OF THE EXPERIMENTS	PAGE NO.	REMARKS
1.	29/07/2024	Simulation of Basic Test Signals		
2.	06/08/2024	Verification of Sampling Theorem		
3.	10/08/2024	Linear Convolution		
4.	03/09/2024	Circular Convolution		
5.	10/09/2024	Linear Convolution using circular		
		convolution and vice versa		
6.	01/10/2024	DFT and IDFT		
7.	01/10/2024	Properties of DFT		
8.	08/10/2024	Overlap add and Overlap save		
9.	14/10/2024	Implementation of FIR filter		
10.	14/10/2024	Familiarisation of DSP Hardware		
11.	19/10/2024	Generation of Sine Wave using		
		DSP kit		
12.	19/10/2024	Linear convolution using DSP Kit		



Experiment No:1 Date:29-7-24

SIMULATION OF BASIC TEST SIGNALS

Aim

Simulation of basic test signals using Matlab,

Signals are:

- 1) Impulse signal
- 2) Unit step signal
- 3) Ramp signal
- 4) Sine signal
- 5) Cosine signal
- 6) Square Wave-Bipolar
- 7) Square Wave-Unipolar
- 8) Triangular signal
- 9) Exponential signal

Theory

1.Impulse signal

An **impulse signal** is an idealized, infinitesimally narrow pulse that occurs at a single instant in time, typically at t=0. It is represented mathematically by the Dirac delta function, denoted as

$$\delta(t) = \begin{cases} 0, & \text{if } t \neq 0 \\ \infty, & \text{if } t = 0 \end{cases}$$



2. Unit step signal

is a function that jumps from 0 to 1 at a specified time, typically at t=0. The unit step function is denoted as

$$u(t) = \begin{cases} 0, & \text{if } t < 0 \\ 1, & \text{if } t \ge 0 \end{cases}$$

3. Ramp signal

A ramp signal is a signal that increases linearly with time, starting from zero. The ramp function is denoted as

$$r(t) = \begin{cases} t, & \text{if } t \ge 0 \\ 0, & \text{if } t < 0 \end{cases}$$

4. Sine signal

A **sine signal** is a continuous wave that oscillates smoothly and periodically over time, following the shape of a sine or cosine function. The general form of a sinusoidal signal is given by:

$$x(t) = Asin(\omega t + \phi)$$

Where,

- Ais the amplitude of the signal (the peak value),
- ω is the angular frequency in radians per second, where $\omega = 2\pi f$, f is the frequency in Hertz,
- t is the time variable
- ϕ is the phase shift, which determines the initial angle at t=0.



5. Cosine signal

A **cosine signal** is a type of sinusoidal signal that oscillates in a smooth, periodic manner over time, following the shape of a cosine function. The general form of a cosine signal is given by:

$$x(t) = A\cos(\omega t + \phi)$$

Where:

- A is the amplitude of the signal (the peak value),
- ω is the angular frequency in radians per second, where $\omega = 2\pi f$ and f is the frequency in Hertz.
- t is the time variable
- ϕ is the phase shift, which determines the initial angle at t = 0.

6. Square Wave-Bipolar

A square wave is a type of periodic waveform that alternates between two distinct levels, typically +A and -A in a bipolar signal. It has a 50% duty cycle, meaning the signal spends equal time at both levels. The equation for a bipolar square wave can be written as:

$$V(t)=A \cdot sgn(sin(2\pi ft))$$

where A is the amplitude, f is the frequency, and sgn is the sign function.

7. Square Wave-Unipolar

A

unipolar square wave is a periodic signal that alternates between 0 and a positive voltage level (e.g., V_max) with abrupt transitions. It has no negative amplitude. The signal is typically represented as:

$$f(t)=V$$
max, for $0 \le t < T/2$ $f(t)=0$, for $T/2 \le t < T$

Where T is the period of the waveform.



8. Triangular signal

A **triangular signal** is a type of periodic waveform that linearly rises and falls between a maximum and minimum value, forming a triangular shape. The transition between the high and low levels in a triangular wave is gradual, creating a linear slope.

9.Exponential signal

An **exponential signal** is a signal whose amplitude varies exponentially with time. It can either grow or decay depending on the sign of the exponent. The exponential signal is generally expressed as

$$x(t) = Ae^{\alpha t}$$

Where:

- A is the amplitude of the signal,
- α is the exponent that determines the rate of growth or decay,
- t is the time variable.
- If $\alpha > 0$, the signal represents exponential growth.
- If $\alpha < 0$, the signal represents exponential decay.



PROGRAM

```
%unit impulse signal
clc;
close all;
t1=-5:1:5;
y1=[zeros(1,5),ones(1,1),zeros(1,5)];
subplot(3,3,1);
stem(t1,y1,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Unit Impulse Signal");
%unit step signal
t2=-5:1:5;
y2=[zeros(1,5),ones(1,6)];
subplot(3,3,2);
stem(t2,y2,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Unit Step Signal");
%unit ramp signal
t3=0:1:5;
y3=t3;
subplot(3,3,3);
plot(t3,y3);
hold on;
```




```
stem(t3,y3,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Unit Ramp Signal");
legend("Discrete", "Continuous");
%sine
t4=0:0.01:1;
f4=2;
y4=sin(2*pi*f4*t4);
subplot(3,3,4);
plot(t4,y4);
hold on;
stem(t4,y4,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Sine signal");
legend("Discrete", "Continuous");
%cosine signal
t5=0:0.01:1;
f5=2;
y5=cos(2*pi*f5*t5);
subplot(3,3,5);
plot(t5,y5);
hold on;
stem(t5,y5,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Cosine signal");
legend("Discrete","Continuous");
%unipolar signal
```



```
f6=5;
t6=0:0.01:1;
y6=sqrt(square(2*pi*f6*t6));
subplot(3,3,6);
plot(t6,y6);
hold on;
stem(t6,y6);
legend("Discrete","Continuous");
xlabel("Time");
ylabel("Amplitude");
title("Unipolar signal");
ylim([-2,2]);
%bipolar signal
f7=5;
t7=0:0.01:1;
y7=square(2*pi*f7*t7);
subplot(3,3,7);
plot(t7,y7);
hold on;
stem(t7,y7);
legend("Discrete", "Continuous");
xlabel("Time");
ylabel("Amplitude");
title("Bipolar signal");
ylim([-2,2]);
%exponential signal
t8=0:0.1:5;
y8=exp(t8);
subplot(3,3,8);
plot(t8,y8);
```



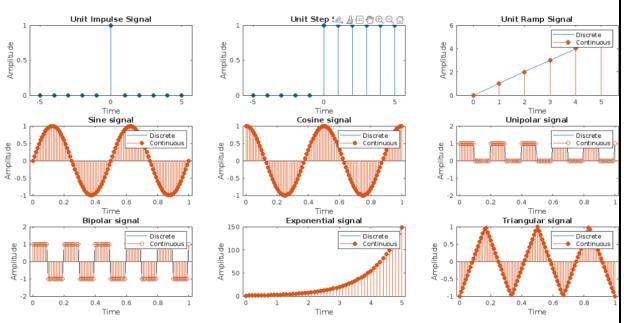

```
hold on;
stem(t8,y8,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Exponential signal");
legend("Discrete", "Continuous");
%triangular signal
t9=0:0.01:1;
f9=3;
y9=sawtooth(2*pi*f9*t9,0.5);
subplot(3,3,9);
plot(t9,y9);
hold on;
stem(t9,y9,'filled');
xlabel("Time");
ylabel("Amplitude");
title("Triangular signal");
legend("Discrete", "Continuous");
```

Result

Simulated and plotted basic test signal in Matlab.

- 1) Impulse signal
- 2) Unit step signal
- 3) Ramp signal
- 4) Sine signal
- 5) Cosine signal
- 6) Square Wave-Bipolar
- 7) Square Wave-Unipolar
- 8) Triangular signal
- 9) Exponential signal



Experiment No:2 Date:6-08-24

VERIFICATION OF SAMPLING THEOREM

Aim

To verify sampling theorem using Matlab.

Theory

The Sampling Theorem, or Nyquist-Shannon theorem, states that a continuous signal can be accurately reconstructed from its samples if it is sampled at a rate at least twice the highest frequency present in the signal. This minimum sampling rate is called the Nyquist rate and is given by:

$fs \ge 2fmax$

where fs is the sampling frequency and fmax is the maximum frequency in the signal.


Undersampling occurs when fs < 2fmax, leading to aliasing, where high-frequency components appear as lower frequencies.

Nyquist sampling is when fs=2fmax, ensuring perfect reconstruction.

Oversampling is when fs > 2fmax, which increases redundancy without aliasing, improving signal quality and noise reduction.



```
PROGRAM
clc;
clear all;
close all;
t=0:0.01:1;
fm=10;
y=sin(2*pi*fm*t);
subplot(2,2,1);
plot(t,y);
hold on;
stem(t,y,"filled");
xlabel("Time");
ylabel("Amplitude");
title("Original signal");
legend("Discrete", "Continuous");
%undersampling
fs1=fm;
t1=0:1/fs1:1;
y1=sin(2*pi*fm*t1);
subplot(2,2,2);
plot(t1,y1);
hold on;
stem(t1,y1,"filled");
xlabel("Time");
ylabel("Amplitude");
title("Undersampling");
```

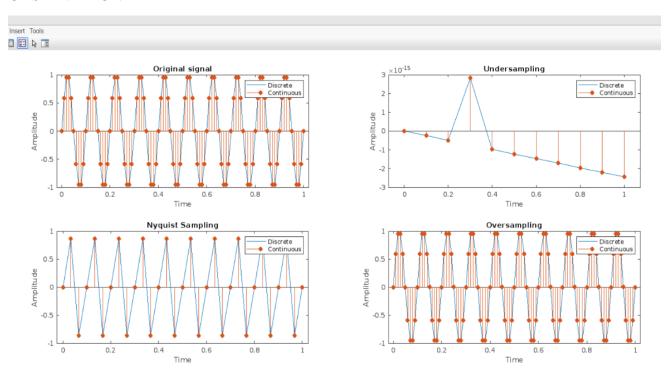

```
legend("Discrete", "Continuous");
%nyquist sampling
fs2=3*fm;
t2=0:1/fs2:1;
y2=sin(2*pi*fm*t2);
subplot(2,2,3);
plot(t2,y2);
hold on;
stem(t2,y2, "filled");
xlabel("Time");
ylabel("Amplitude");
title("Nyquist Sampling");
legend("Discrete", "Continuous");
%oversampling
fs3=10*fm;
t3=0:1/fs3:1;
y3=sin(2*pi*fm*t3);
subplot(2,2,4);
plot(t3,y3);
hold on;
stem (t3,y3,"filled");
xlabel("Time");
ylabel("Amplitude");
title("Oversampling");
legend("Discrete", "Continuous");
RESULT
```

Verified sampling theorem using Matlab.



Experiment no-3 Date:10-8-24

LINEAR CONVOLUTION

Aim

To find linear convolution of following sequences with and without built in function.

1.
$$x(n) = [1 \ 2 \ 1 \ 1]$$

$$h(n) = [1 \ 1 \ 1 \ 1]$$

2.
$$x(n) = [1 \ 2 \ 1 \ 2]$$

$$h(n) = [3 \ 2 \ 1 \ 2]$$

THEORY


Linear convolution is a mathematical operation used in signal processing to combine two signals, often to understand how one signal modifies another. It operates by sliding one function over another, multiplying corresponding values, and summing the products at each step. For two signals x(n) and h(n), their convolution y(n) is given by:

$$y(n) = \sum_{k=-\infty}^{\infty} x(k) h(n-k)$$

This process evaluates how much the signal h(n), often called the impulse response, overlaps with the input signal x(n). Linear convolution is used for filtering, smoothing, and analyzing system responses in digital and analog signal processing. The result of the convolution is usually a signal whose length is the sum of the lengths of the two input signals minus one.


1)
$$x(n) = [1 \ 2 \ 1 \ 1]$$

$$h(n) = [1 \ 1 \ 1 \ 1]$$

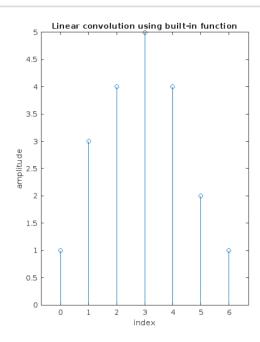

2)
$$x(n) = [1 \ 2 \ 1 \ 2]$$

$$h(n) = [3 \ 2 \ 1 \ 2]$$

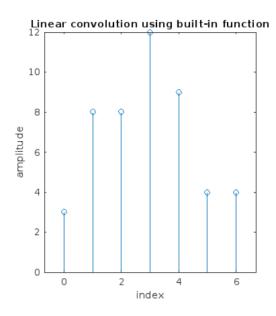


PROGRAM

```
a)LINEAR CONVOLUTION USING BUILT IN FUNCTION

clc;
close all;
x=input("enter input");
x_index=input("enter index of x");
h=input("enter impulse response");
h_index=input("enter index of h");
y_index=min(x_index)+min(h_index):max(x_index)+max(h_index);
y=conv(x,h);
disp(y);
subplot(1,2,1);
stem(y_index,y);
xlabel("index");
ylabel("amplitude");
title("Linear convolution using built-in function");
```

1)
$$x(n) = [1 \ 2 \ 1 \ 1]$$


$$h(n) = [1 \ 1 \ 1 \ 1]$$

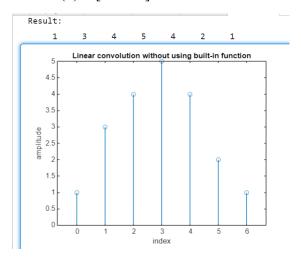

2)
$$x(n) = [1 \ 2 \ 1 \ 2]$$

$$h(n) = [3 \ 2 \ 1 \ 2]$$

3 8 8 12 9 4

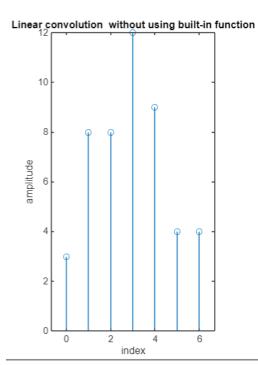

```
b)LINEAR CONVOLUTION WITHOUT USING BUILT IN FUNCTION
% without using built in
clc;
close all;
x=input("enter input");
x index=input("enter index of x");
h=input("enter impulse response");
h_index=input("enter index of h");
y_index=min(x_index)+min(h_index):max(x_index)+max(h_index);
n=length(x);
m=length(h);
len_y=length(y_index);
y=zeros(1,len_y);
for i=1:n
    for j=1:m
        y(i+j-1)=y(i+j-1)+x(i)*h(i);
    end
end
disp("Result:")
disp(y)
stem(y_index,y);
xlabel("index");
ylabel("amplitude");
title("Linear convolution without using built-in function");
RESULT
```

Performed linear convolution with and without using built in function in Matlab.



Experiment No:4 Date:3-9-24

CIRCULAR CONVOLUTION

AIM

To find circular convolution using FFT, concentric circle method and matrix method using Matlab.

THEORY

Circular convolution is a mathematical operation used primarily in signal processing. It involves wrapping one signal around a circular buffer and performing the convolution operation on it, often used when signals are periodic or when working with discrete Fourier transforms (DFT). This technique ensures that the result maintains periodicity by aligning the endpoints of signals. It is computationally efficient and widely applied in fast algorithms like the Fast Fourier Transform (FFT). It can be performed by 3 methods:

Using FFT (Fast Fourier Transform):

• Circular convolution is performed by transforming the sequences to the frequency domain using FFT, multiplying them element-wise, and transforming them back using the inverse FFT.

$$y[n] = IFFT(FFT(x[n]) \cdot FFT(h[n]))$$

Concentric Circle Method:

• This is a graphical method where one sequence is placed in a circular pattern, and the other sequence is rotated around it. The inner product of corresponding values after each rotation gives the result.


Matrix Method:

• Circular convolution can be represented as matrix multiplication, where one sequence is arranged in a circulant matrix, and the other is a column vector.

$$y=C\cdot h$$

where C is the circulant matrix formed from x, and h is the vecto

CIRCULAR CONVOLUTION USING FFT

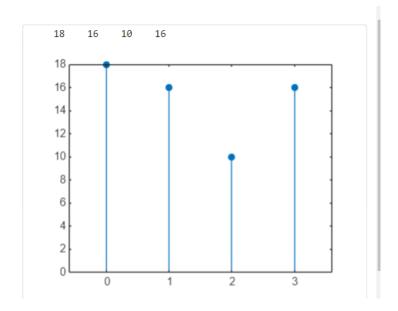

PROGRAM

a)Circular convolution using FFT


```
clc;
clear;
close all;
x=input("Enter the seq1:");
h=input("Enter the seq2:");
x_len=length(x);
h_len=length(h);
n=max(x_len,h_len);
xnew=[x zeros(1,n-x_len)];
hnew=[h zeros(1,n-h_len)];
x1=fft(xnew);
h1=fft(hnew);
y1=x1.*h1;
y=ifft(y1);
y_ind=0:n-1;
disp(y);
stem(y_ind,y, "filled");
```

b)CIRCULAR CONVOLUTION USING CONCENTRIC CIRCLE METHOD

Reversed x $1 \quad 2 \quad 1 \quad 2$

Convolution product

14 16 14 16

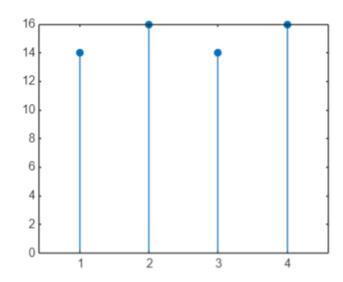

b)Circular convolution using Concentric Circle Method


```
clc;
clear;
close;
x=[2 1 2 1];
X=x(:, end-1:1);
h=[1 2 3 4];
for i=1:length(x)
x=[x(end) x(1:end-1)];
h1=h;
y(i)=sum(x.*h1);
end
disp(y);
```

OBSERVATION

c) CIRCULAR CONVOLUTION USING MATRIX METHOD





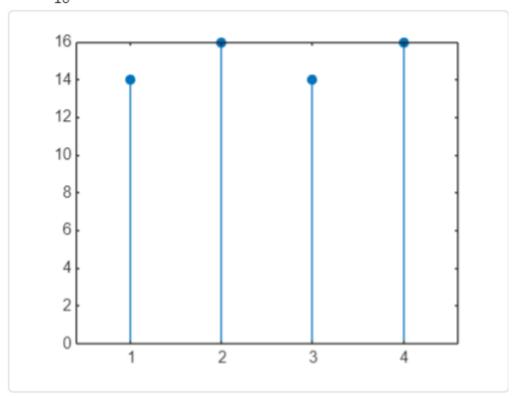

c)Circular convolution using Matrix Method

RESULT

Obtained circular convolution using FFT, concentric circle method and matrix method in Matlab



Experiment No:5 Date:10-9-24

LINEAR CONVOLUTION USING CIRCULAR CONVOLUTION AND VICE VERSA

AIM

To perform linear convolution using circular convolution and vice versa using Matlab.

THEORY

Performing Linear Convolution Using Circular Convolution

- 1. Zero-Padding: Pad both sequences x[n] and h[n] with zeros to a length of at least 2N-1, where N is the maximum length of the two sequences. This ensures that the circular convolution will not wrap around and introduce artificial periodicity.
- 2. Circular Convolution: Perform circular convolution on the zero-padded sequences.
- 3. Truncation: Truncate the result of the circular convolution to the length N1 + N2 1, where N1 and N2 are the lengths of the original sequences x[n] and h[n], respectively.

Performing Circular Convolution Using Linear Convolution

- 1. Zero-Padding: Pad both sequences x[n] and h[n] to a length of at least 2N-1, where N is the maximum length of the two sequences.
- 2. Linear Convolution: Perform linear convolution on the zero-padded sequences.
- 3. Modulus Operation: Apply the modulus operation to the indices of the linear convolution result, using the period N. This effectively wraps around the ends of the sequence, making it circular. E

OBSERVATION

1 3 6 9 7 4

1 3 6 9 7

PROGRAM

a)Linear convolution using circular convolution

```
%linear convolution using circular convolution
clc;
clear;
close all;
x=[1,2,3,4];
y=[1,1,1];
xl=length(x);
yl=length(y);
zl=(xl+yl)-1;
xn=[x zeros(1,zl-xl)];
yn=[y zeros(1,zl-yl)];
xa=fft(xn);
ya=fft(yn);
ans=xa.*ya;
anss=ifft(ans);
disp(anss);
answ=conv(x,y);
disp(answ);
```

OBSERV	ATION		
ODSERV	SHON		
8	7	6	9

b)Circular convolution using linear convolution

RESULT

Performed linear convolution using circular convolution and vice versa using Matlab.



Experiment No:6 Date: 24/09/24

DFT and IDFT

<u>Aim</u>

To compute DFT and IDFT of a signal using inbuilt functions and manual methods.

Theory:

The Discrete Fourier Transform (DFT) is a fundamental mathematical tool used in signal processing, communication systems, and many areas of engineering and science. It converts a discrete sequence (signal) from the time domain into its representation in the frequency domain. The DFT transforms a finite sequence of equally spaced samples of a function into a sequence of coefficients of complex sinusoids, ordered by their frequencies.

The Inverse Discrete Fourier Transform (IDFT) is a mathematical process that converts a sequence of complex numbers in the frequency domain back into the time domain. It is the inverse operation of the Discrete Fourier Transform (DFT) and is used to recover the original time-domain sequence from its DFT.


Program:

```
%dft using inbuilt and manual methods
clc;
clear all;
close all;
x=input('Enter the sequence:');
N=input('enter the N point DFT: ');
l=length(x);
x=[x zeros(1,N-1)];
X=zeros(N,1);
for k=0:N-1
    for n=0:N-1
        X(k+1)=X(k+1)+x(n+1)*exp(-1j*2*pi*n*(k/N));
    end
end
disp('X');
disp(X);
```

Observation:

```
Enter the sequence:[1 0 1 1]
enter the N point DFT: 4

X
3.0000 + 0.0000i
-0.0000 + 1.0000i
1.0000 - 0.0000i
0.0000 - 1.0000i
DFT
```

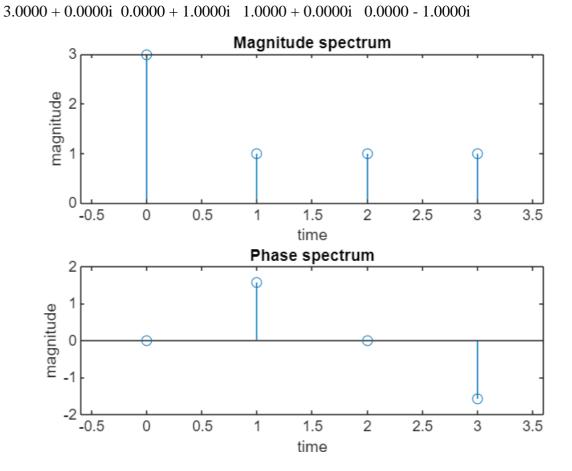

```
disp("DFT");
disp(fft(x,N));
%magnitude spectrum
k=0:N-1;
mag=abs(X);
subplot(2,1,1);
stem(k,mag);
xlabel('time');
ylabel('magnitude');
title('Magnitude spectrum');
%phase spectrum
phase=angle(X);
subplot(2,1,2);
stem(k,phase);
xlabel('time');
ylabel('magnitude');
title('Phase spectrum');
```

```
Enter the sequence:[1 0 1 1]
```

Enter the N point DFT: 8

X

3.0000 + 0.0000i

0.2929 - 1.7071i

-0.0000 + 1.0000i

1.7071 + 0.2929i

1.0000 - 0.0000i


1.7071 - 0.2929i

0.0000 - 1.0000i

0.2929 + 1.7071i

DFT

 $3.0000 + 0.0000i \ 0.2929 - 1.7071i \ 0.0000 + 1.0000i \ 1.7071 + 0.2929i \ 1.0000 + 0.0000i \ 1.7071 - 0.2929i \ 0.0000 - 1.0000i \ 0.2929 + 1.7071i$

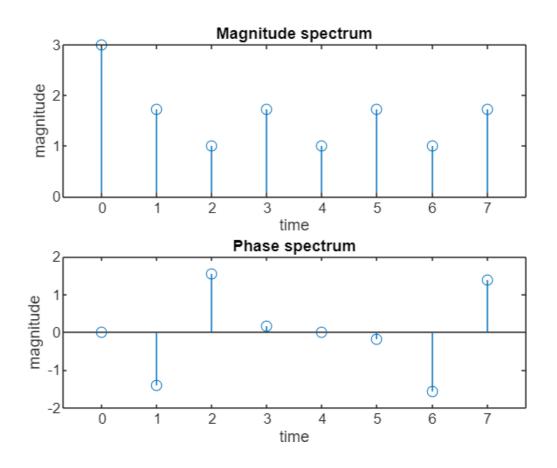



Enter the sequence:[1 0 1 1]

enter the N point DFT: 16

X 3.0000 + 0.0000i 2.0898 - 1.6310i 0.2929 - 1.7071i -0.6310 - 0.3244i -0.0000 + 1.0000i 1.2168 + 1.0898i 1.7071 + 0.2929i 1.3244 - 0.2168i 1.0000 - 0.0000i 1.3244 + 0.2168i 1.7071 - 0.2929i

1.2168 - 1.0898i

0.0000 - 1.0000i

-0.6310 + 0.3244i


-0.0310 + 0.32441

0.2929 + 1.7071i

2.0898 + 1.6310i

DFT


 $3.0000 + 0.0000i \ 2.0898 - 1.6310i \ 0.2929 - 1.7071i \ -0.6310 - 0.3244i \ 0.0000 + 1.0000i \ 1.2168 + 1.0898i \ 1.7071 + 0.2929i \ 1.3244 - 0.2168i \ 1.0000 + 0.0000i \ 1.3244 + 0.2168i \ 1.7071 - 0.2929i \ 1.2168 - 1.0898i \ 0.0000 - 1.0000i \ -0.6310 + 0.3244i \ 0.2929 + 1.7071i \ 2.0898 + 1.6310i$

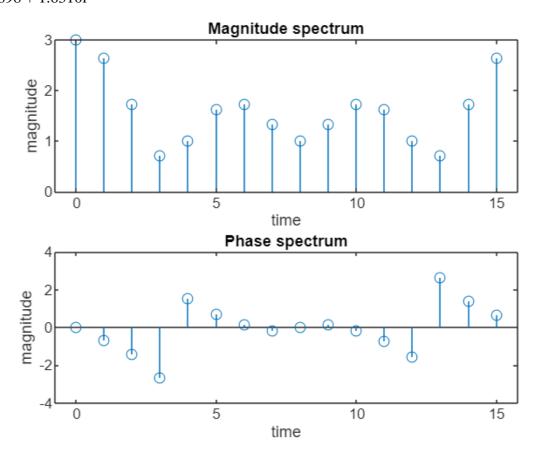




Observation: Enter the sequence:[1 1 1 0] Enter the N point of DFT:4 x 0.7500 + 0.0000i 0.0000 + 0.2500i 0.2500 - 0.0000i -0.0000 - 0.2500i IDFT 0.7500 + 0.0000i 0.0000 + 0.2500i 0.2500 + 0.0000i 0.0000 - 0.2500i

```
%idft using inbuilt and manual functions
clc;
clear all;
close all;
X=input('Enter the sequence:');
N=input('Enter the N point of DFT:');
l=length(X);
X=[X zeros(1,N-1)];
x=zeros(N,1);
for k=0:N-1
    for n=0:N-1
        x(n+1)=x(n+1)+X(k+1)*exp(1j*2*pi*n*k/N);
    end
end
x=(1/N).*x;
disp('x');
disp(x);
disp('IDFT');
disp(ifft(X,N));
```

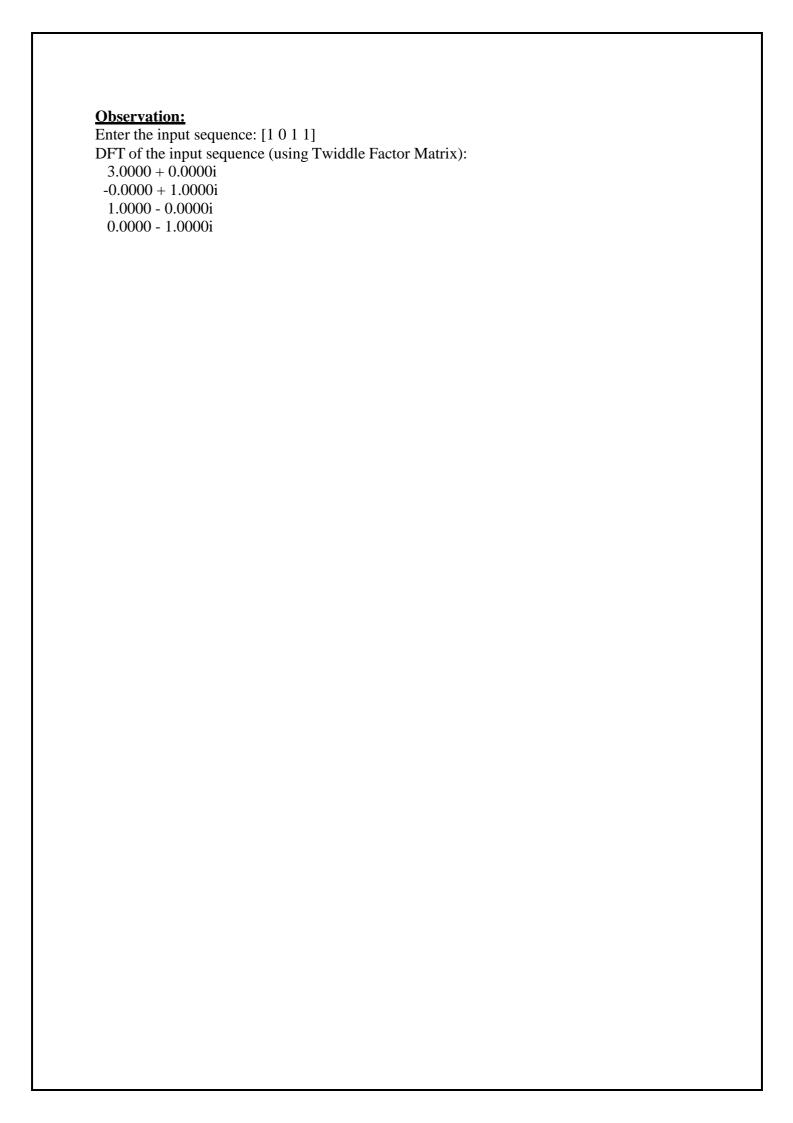

```
% DFT using twiddle factor matrix
x = input('Enter the input sequence: ');
N = length(x);
W = exp(-1i*2*pi*(0:N-1)'*(0:N-1)/N);
X = W * x(:);
disp('DFT of the input sequence (using Twiddle Factor Matrix):');
disp(X);
```

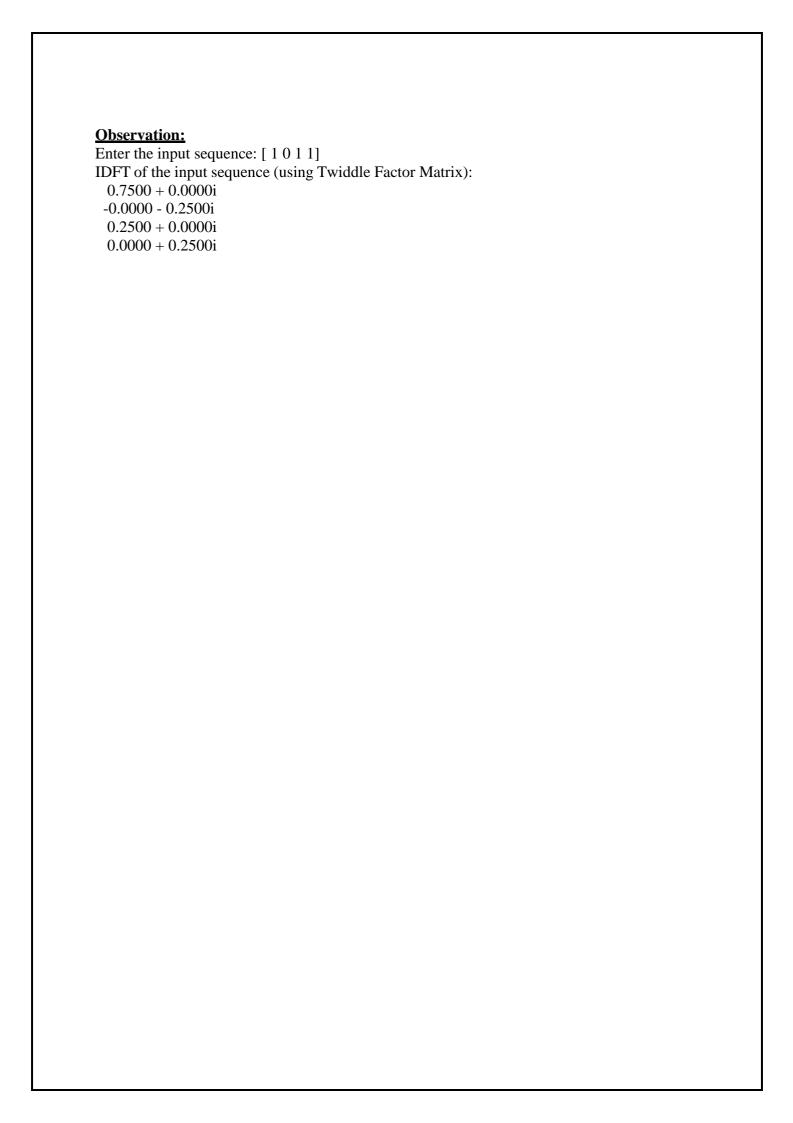

```
% IDFT using twiddle factor matrix
x = input('Enter the input sequence: ');
N = length(x);
W = \exp(1i^{*}2^{*}pi^{*}(0:N-1)^{'*}(0:N-1)/N);
X_{idft} = (1/N) * (W * x(:));
disp('IDFT of the input sequence (using Twiddle Factor Matrix):');
disp(X_idft);
```



emputed DFT and IDFT using inbuilt and manual methods and Twiddle factor matrix and rified the output.					



Experiment No:7 Date: 01/10/24

PROPERTIES OF DFT

<u>Aim</u>

To prove the following properties of DFT

- Linearity
- Convolution
- Multiplication
- Parseval's Theorem

Theory:

Linearity:

The DFT is a linear transformation, meaning that the DFT of the sum of two signals is equal to the sum of their individual DFTs, and multiplying a signal by a constant in the time domain results in the DFT being multiplied by the same constant. If x1(n) and x2(n) are two sequences and a and b are constants then:

```
DFT(ax1(n)+bx2(n))=a.DFT(x1(n))+b.DFT(x2(n))
```

Multiplication:

The DFT of a pointwise multiplication (element-wise product) of two signals in the time domain corresponds to the circular convolution of their DFTs in the frequency domain. If x1(n) and x2(n) are two signals then:

```
DFT\{x1(n).x2(n)\} = 1/N DFT\{x(n)\} \circledast DFT\{h(n)\}
```

Convolution:

The DFT of the convolution of two sequences in the time domain is the element-wise multiplication of their DFTs in the frequency domain. If x1(n) and x2(n) are two signals, then:

```
DFT\{x1(n)*x2(n)\}=DFT\{x1(n)\}\cdot DFT\{x2(n)\}
```

Parseval's Theorem:

Parseval's theorem states that the total energy of a discrete-time signal (the sum of the squared magnitudes of the signal in the time domain) is equal to the total energy of its DFT (the sum of the squared magnitudes of the DFT coefficients).

Program:

```
%linearity property
clc;
clear all;
close all;
x1=input('Enter the first sequence:');
```

Observation:

Enter the first sequence:[1 2 3 4]

Enter the second sequence:[1 1 1]

LHS:

 $29.0000 + 0.0000i \ -4.0000 + 1.0000i \ -1.0000 + 0.0000i \ -4.0000 - 1.0000i$

RHS:

29.0000 + 0.0000i - 4.0000 + 1.0000i - 1.0000 + 0.0000i - 4.0000 - 1.0000i

LHS=RHS

Linearity Property Verified

```
x2=input('Enter the second sequence:');
a=2;
b=3;
11=length(x1);
12=length(x2);
if 11>12
   x2=[x2 zeros(1,11-12)]
else
   x1=[x1 zeros(1,12-11)];
end
LHS=fft((a.*x1)+(b.*x2));
RHS=[a.*fft(x1)+b.*fft(x2)];
disp('LHS:');
disp(LHS);
disp('RHS:');
disp(RHS);
disp(['LHS=RHS')_
```

Observation: LHS 8 7 6 9 RHS 8 7 6 9 Convolution property verified

```
%Convolution property
clc;
clear all;
close all;
x=input('enter sequence 1');
h=input('enter sequence 2');
N=max(length(x),length(h));
X=[x zeros(1,N-length(x))];
H=[h zeros(1,N-length(h))];
X1=fft(X);
H1=fft(H);
LHS= cconv(X,H,N);
RHS=ifft(X1.*H1);
disp(LHS);
disp(RHS);
if LHS==RHS
    disp('Convolution property verified');
else
    disp('Convolution property verified');
end
```

Observation:

enter the first sequence:

[1 2 3 4]


enter the second sequence:

[1 1 1]

6.0000 + 0.0000i -2.0000 - 2.0000i 2.0000 + 0.0000i -2.0000 + 2.0000i

6.0000 + 0.0000i -2.0000 - 2.0000i 2.0000 + 0.0000i -2.0000 + 2.0000i

```
%multiplication property
clc;
clear all;
close all;
x1=input('enter the first sequence:');
x2=input('enter the second sequence:');
11=length(x1);
12=length(x2);
n=max(11,12);
x1=[x1 zeros(1,n-l1)];
x2=[x2 zeros(1,n-12)];
lhs=fft(x1.*x2);
X1=fft(x1);
X2=fft(x2);
rhs=cconv(X1,X2,n)/n;
disp(lhs);
disp(rhs);
```

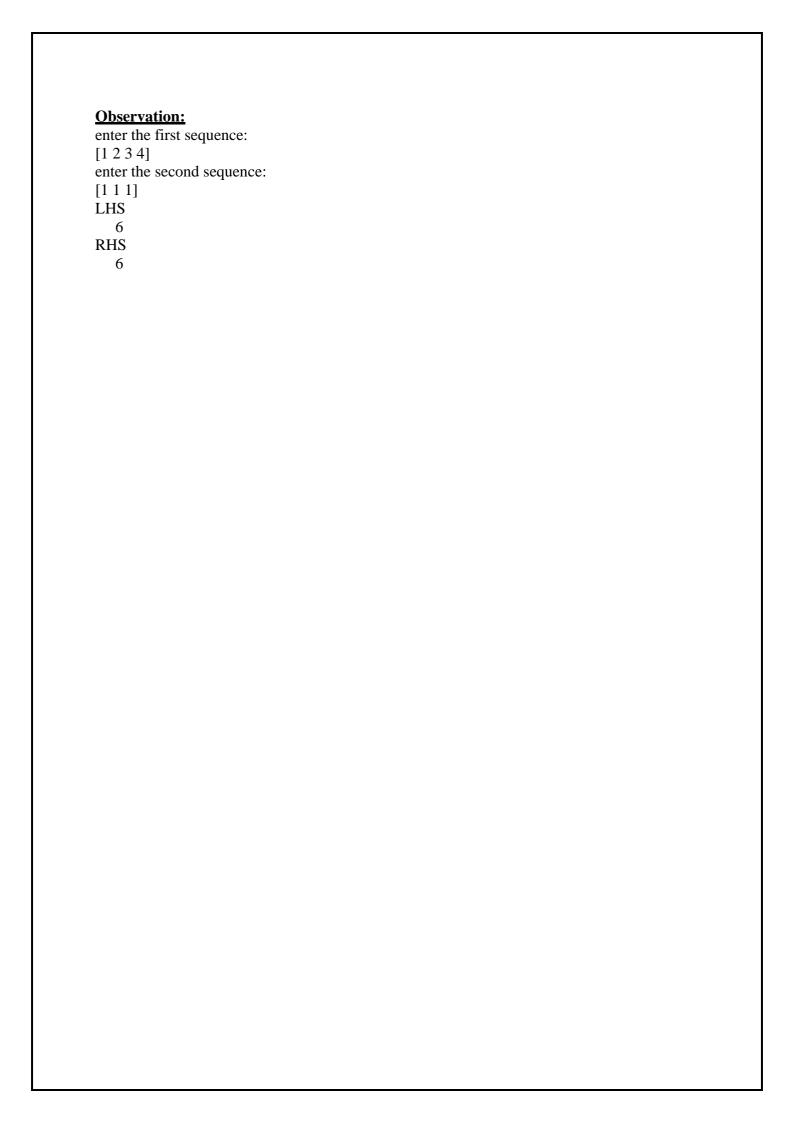

```
%parseval's theorem
clc;
clear all;
close all;
x1=input('enter the first sequence:');
x2=input('enter the second sequence:');
11=length(x1);
12=length(x2);
n=max(11,12);
x1=[x1 zeros(1,n-l1)];
x2=[x2 zeros(1,n-12)];
lhs=sum(x1.*conj(x2));
rhs=sum(fft(x1).*conj(fft(x2)))/n;
disp('LHS');
disp(lhs);
disp('RHS');
disp(rhs);
```



Result: Verified linearity, convolu	tion, multiplication	and parseval's p	roperties of DFT	
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	,r	, F F.		



Experiment No:8 Date: 08/10/24

OVERLAP SAVE AND ADD METHOD

Aim

To perform linear convolution of two sequences using overlap save and add method

Theory:

The Overlap-Add and Overlap-Save methods are efficient techniques used to perform linear convolution of long signals with finite impulse response (FIR) filters using the Fast Fourier Transform (FFT). Both methods help reduce computational complexity by breaking a long signal into smaller chunks, processing them independently in the frequency domain, and then combining the results.

The Overlap Add method splits the input signal into overlapping segments, performs convolution on each segment using the FFT, and then adds the overlapping parts to reconstruct the final output. This method is efficient for filtering long signals by using FFT-based convolution.

The Overlap Save method also divides the input signal into segments, but unlike OLA, it saves the non-overlapping parts and discards the overlapping parts of the convolution output.

Program:

```
%overlap save method
clc;
clear all;
close all:
x=input("Enter sequence 1");
h=input("Enter sequence 2");
N=input('Enter length to divide');
if N<length(h)
   disp('not possible');
else
    xl=length(x);
    hl=length(h);
    L=N-hl+1;
    hnew=[h zeros(1,N-hl)];
    xnew=[zeros(1,hl-1),x,zeros(1,N-1)];
    y=[];
for i=1:L:length(xnew)-N+1
    XB=xnew(i:i+N-1);
    YB=ifft(fft(XB).*fft(hnew));
    y=[y,YB(h1:end)];
end
    disp(y(1:xl+hl-1));
```

end **Observation:** Enter sequence 1[3 -1 0 1 3 2 0 1 2 1]
Enter sequence 2[1 1 1] Enter length to divide3 final convoluted sequence
3 2 2 0 4 6 5 3 3 4 3 1



Observation:

Enter the input sequence: [0 1 2 3 4 5 6 7 8 9]
Enter the filter sequence: [1 0 1]
Enter the segment length (choose N >= Lh): 3
final convoluted sequence:

0 1 2 4 6 8 10 12 14 16 8 9

```
%overlap add method
clc;
clear all;
close all;
x = input('Enter the input sequence: ');
h = input('Enter the filter sequence: ');
Lx = length(x);
Lh = length(h);
N = input('Enter the segment length (choose N >= Lh): ');
if N < Lh
    error('Segment length N must be greater than or equal to filter
length');
end
x = [x, zeros(1, N - mod(Lx, N))];
Lx_padded = length(x);
y = zeros(1, Lx_padded + Lh - 1);
for i = 1:N:Lx_padded
    x = x(i:i+N-1);
    y_segment = conv(x_segment, h);
    y(i:i+length(y_segment)-1) = y(i:i+length(y_segment)-1)
y_segment;
end
y = y(1:Lx + Lh - 1);
disp('final convoluted sequence:');
disp(y);
```



Resul	t <u>:</u>						
implemented overlap add and overlap save method using MATLAB and verified the output							
r			r				



Experiment No: 9 Date: 22/11/24

IMPLEMENTATION OF FIR FILTER

Aim:

Design FIR Filters Using Window Methods

Theory:

In FIR (Finite Impulse Response) filter design, the goal is to create a filter with specific frequency response characteristics, such as low-pass, high-pass, band-pass, or band-stop. Using window methods, we can shape the filter response by applying a window function to an ideal filter impulse response.

Steps for FIR Filter Design Using Windows

1. Define the Ideal Impulse Response

First, compute the ideal impulse response, hideal(n)h_ideal(n)hideal(n), of the desired filter in the time domain. For example, for a low-pass filter with a cutoff frequency fcf cfc, the ideal impulse response is:

h ideal(n) =
$$\sin(2 * pi * f c * (n - (N - 1) / 2)) / (pi * (n - (N - 1) / 2))$$

where:

- o f c is the cutoff frequency in normalized units,
- o N is the filter length,
- o n is the sample index.

This ideal response is typically non-causal, so it is shifted to make it causal by adding (N-1)/2 to the sample index.

2. Select an Appropriate Window Function

To achieve a practical FIR filter, select a window function, w(n)w(n)w(n), that will shape the frequency response. The choice of window affects the trade-off between the main lobe width (frequency resolution) and the sidelobe levels (leakage). Common windows include the **Hamming**, **Hann**, **Blackman**, **Kaiser**, and **rectangular** windows, each defined by specific equations:

- o **Rectangular Window**: w(n) = 1
- o **Triangular (Bartlett) Window**: w(n) = 1 2*abs(n) / (N 1)
- o **Hamming Window**: w(n) = 0.54 0.46 * cos(2 * pi * n / (N 1))
- Hanning Window: $w(n) = 0.5 * (1 \cos(2 * pi * n / (N 1)))$
- Blackman Window: w(n) = 0.42 0.5 * cos(2 * pi * n / (N 1)) + 0.08 * cos(4 * pi * n / (N 1))



 \sim Kaiser Window: w(n) = I0(beta * sqrt(1 - (2 * n / (N - 1) - 1)^2)) / I0(beta)

where I0 is the modified zero-th order Bessel function, and beta is a parameter controlling the trade-off between the main lobe width and sidelobe levels.

3. Apply the Window to the Ideal Impulse Response

Multiply each point in the ideal impulse response $h_ideal(n)$ by the corresponding point in the window function w(n) to get the windowed impulse response h(n):

$$h(n) = h ideal(n) * w(n)$$

The result is a practical, finite impulse response that approximates the ideal response with controlled sidelobes.

4. Construct the FIR Filter

The final impulse response h(n) defines the coefficients of the FIR filter. These coefficients can now be used in a filtering algorithm (e.g., convolution with input data) to perform the desired filtering operation.

Example: Designing a Low-Pass FIR Filter Using a Hamming Window

- 1. Specify the Filter Requirements:
 - o Cutoff frequency f c: 0.2 (normalized frequency)
 - o Filter length N: 51 (odd number for symmetry)
- 2. Compute the Ideal Impulse Response:

h ideal(n) =
$$\sin(2 * pi * 0.2 * (n - (51 - 1) / 2)) / (pi * (n - (51 - 1) / 2))$$

3. Apply the Hamming Window:

$$w(n) = 0.54 - 0.46 * cos(2 * pi * n / 50)$$

Then, compute
$$h(n) = h_{ideal}(n) * w(n)$$
.

4. Use h(n) as FIR Filter Coefficients: The resulting h(n) values form the coefficients of the FIR filter, which can be used in a filtering algorithm.

Advantages and Disadvantages of Window-Based FIR Design

Advantages:

- Simplicity: Windowing is straightforward and does not require iterative optimization.
- **Control over Leakage**: Different windows provide different control over sidelobes and main lobe width, allowing design flexibility.

Disadvantages:

- **Fixed Frequency Response**: Once the window is chosen, the frequency response characteristics are determined, limiting customization.
- **Trade-Off Limitations**: Some applications require specific frequency responses that cannot be perfectly achieved using standard windows.



Program:

1. LOW PASS FILTER

```
clc;
clear all;
close all;
wc = 0.5*pi;
N = input('Enter the value of N=');
alpha = (N-1)/2;
eps = 0.001;
n = 0:1:N-1;
hd = sin(wc*(n-alpha+eps))./(pi*(n-alpha+eps));
wr = boxcar(N);
wh=hamming(N);
wn=hanning(N);
wt=bartlett(N);
hn = hd.*wr';
hn1=hd.*wh';
hn2=hd.*wn';
hn3=hd.*wt';
w = 0:0.01:pi;
h = freqz(hn,1,w);
h1 = freqz(hn1,1,w);
h2 = freqz(hn2,1,w);
h3=freqz(hn3,1,w);
subplot(4,2,1);
plot(w/pi,10*log10(abs(h)));
title('low pass filter using rectangular window');
xlabel('Normalized frequency');
```



```
ylabel('Magnitude in dB');
subplot(4,2,2);
stem(wr);
title('Rectangular window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,3);
plot(w/pi,10*log10(abs(h1)));
title('low pass filter using hamming window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,4);
stem(wh);
title('Hamming window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,5);
plot(w/pi,10*log10(abs(h2)));
title('low pass filter using hanning window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,6);
stem(wn);
title('Hanning window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,7);
plot(w/pi,10*log10(abs(h2)));
title('low pass filter using bartlett window');
xlabel('Normalized frequency');
```



```
ylabel('Magnitude in dB');
subplot(4,2,8);
stem(wt);
title('bartlett window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
2. HIGH PASS FILTER
clc;
clear all;
close all;
wc = 0.9*pi;
eps=0.001;
N = input('Enter the value of N=');
alpha = (N-1)/2;
n = 0:1:N-1;
hd=(sin(pi*(n-alpha+eps))-sin(wc*(n-alpha+eps)))./(pi*(n-
alpha+eps));
wr = boxcar(N);
wh=hamming(N);
wn=hanning(N);
wt=bartlett(N);
hn = hd.*wr';
hn1=hd.*wh';
hn2=hd.*wn';
hn3=hd.*wt';
w = 0:0.01:pi;
h = freqz(hn,1,w);
```



```
h1 = freqz(hn1,1,w);
h2 = freqz(hn2,1,w);
h3=freqz(hn3,1,w);
subplot(4,2,1);
plot(w/pi,10*log10(abs(h)));
title('high pass filter using rectangular window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,2);
stem(wr);
title('Rectangular window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,3);
plot(w/pi,10*log10(abs(h1)));
title('high pass filter using hamming window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,4);
stem(wh);
title('Hamming window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,5);
plot(w/pi,10*log10(abs(h2)));
title('high pass filter using hanning window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,6);
stem(wn);
```



```
title('Hanning window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,7);
plot(w/pi,10*log10(abs(h2)));
title('high pass filter using bartlett window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,8);
stem(wt);
title('bartlett window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
3. Band pass filter
clc;
clear all;
close all;
wc1=0.5*pi;
wc2=0.9*pi;
eps=0.001;
N = input('Enter the value of N=');
alpha = (N-1)/2;
n = 0:1:N-1;
      = (sin(wc2*(n-alpha+eps))-sin(wc1*(n-alpha+eps)))./(pi*(n-
alpha+eps));
wr = boxcar(N);
wh=hamming(N);
wn=hanning(N);
```




```
wt=bartlett(N);
hn = hd.*wr';
hn1=hd.*wh';
hn2=hd.*wn';
hn3=hd.*wt';
w = 0:0.01:pi;
h = freqz(hn,1,w);
h1 = freqz(hn1,1,w);
h2 = freqz(hn2,1,w);
h3=freqz(hn3,1,w);
subplot(4,2,1);
plot(w/pi,10*log10(abs(h)));
title('band pass filter using rectangular window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,2);
stem(wr);
title('Rectangular window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,3);
plot(w/pi,10*log10(abs(h1)));
title('band pass filter using hamming window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,4);
stem(wh);
title('Hamming window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
```




```
subplot(4,2,5);
plot(w/pi,10*log10(abs(h2)));
title('band pass filter using hanning window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,6);
stem(wn);
title('Hanning window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,7);
plot(w/pi,10*log10(abs(h2)));
title('band pass filter using bartlett window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,8);
stem(wt);
title('bartlett window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
2. Band stop filter
clc;
clear all;
close all;
wc1=0.5*pi;
wc2=0.9*pi;
eps=0.001;
N = input('Enter the value of N=');
alpha = (N-1)/2;
```





```
n = 0:1:N-1;
hd = (sin(wc1*(n-alpha+eps))-sin(wc2*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-alpha+eps))+sin(pi*(n-al
alpha)))./(pi*(n-alpha+eps));
wr = boxcar(N);
wh=hamming(N);
wn=hanning(N);
wt=bartlett(N);
hn = hd.*wr';
hn1=hd.*wh';
hn2=hd.*wn';
hn3=hd.*wt';
w = 0:0.01:pi;
h = freqz(hn,1,w);
h1 = freqz(hn1,1,w);
h2 = freqz(hn2,1,w);
h3=freqz(hn3,1,w);
subplot(4,2,1);
plot(w/pi,10*log10(abs(h)));
title('band stop filter using rectangular window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,2);
stem(wr);
title('Rectangular window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,3);
plot(w/pi,10*log10(abs(h1)));
title('band stop filter using hamming window');
xlabel('Normalized frequency');
```

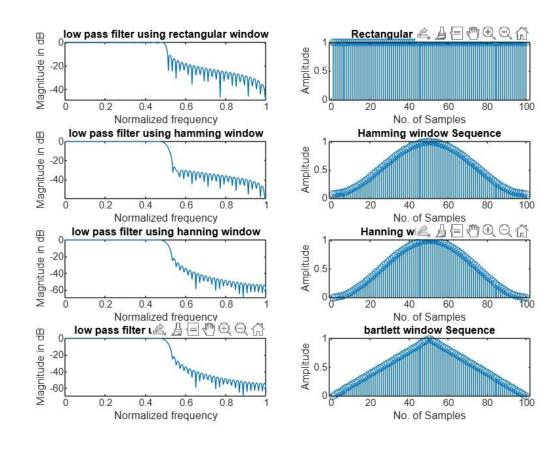

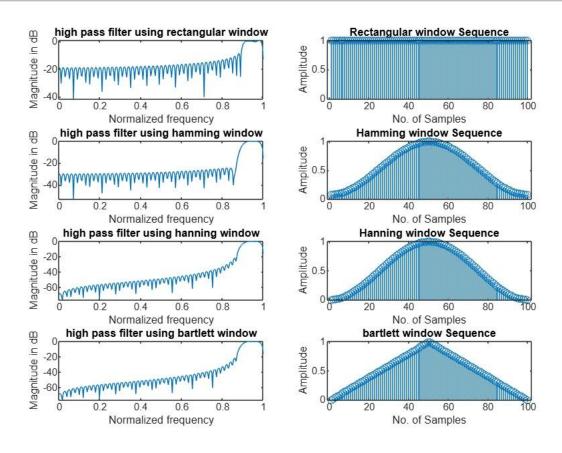

```
ylabel('Magnitude in dB');
subplot(4,2,4);
stem(wh);
title('Hamming window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,5);
plot(w/pi,10*log10(abs(h2)));
title('band stop filter using hanning window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,6);
stem(wn);
title('Hanning window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
subplot(4,2,7);
plot(w/pi,10*log10(abs(h2)));
title('bandstop filter using bartlett window');
xlabel('Normalized frequency');
ylabel('Magnitude in dB');
subplot(4,2,8);
stem(wt);
title('bartlett window Sequence');
xlabel('No. of Samples');
ylabel('Amplitude');
```

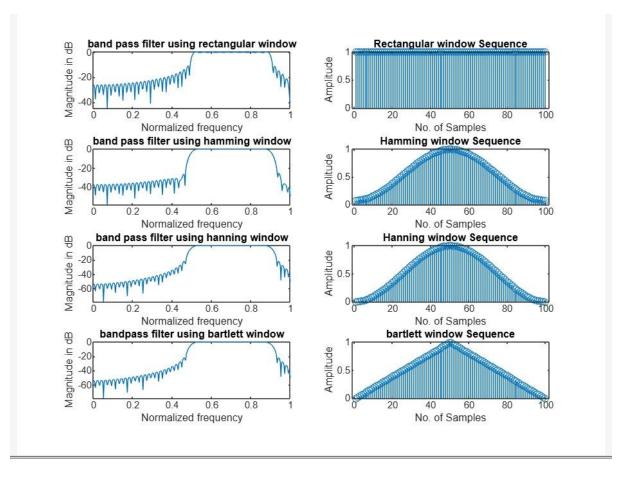

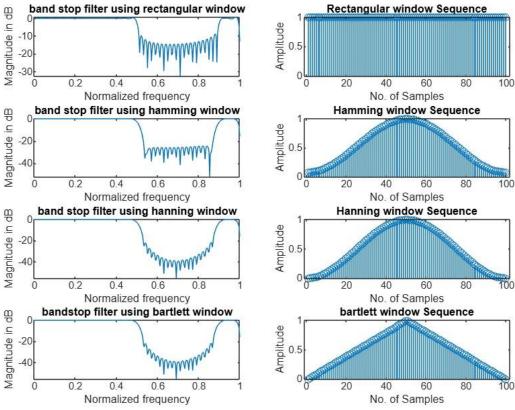

Result:						
Performed Lowp	pass, highpass, band	dpass, bandstop	filters using win	dows method.		

Experiment No: 10 Date: 22-10-2024

Familiarization of DSP Hardware

Aim:

To explore the architectural and functional capabilities of the TMS320C6748 DSP processor.

TMS 320C6748

Overview of the TMS320C6748 DSP Processor: The TMS320C6748 DSP processor is designed to handle intensive digital signal processing tasks efficiently. At its core is the powerful C674xTM DSP CPU, optimized for real-time embedded applications, multimedia processing, and other high computation requirements.

DSP Subsystem and Memory Components: The DSP subsystem includes several memory components for efficient storage and data handling. A 32 KB L1 Program Cache and 32 KB L1 RAM ensure quick access to frequently used data, while the 256 KB L2 RAM provides storage for larger datasets. Additionally, a BOOT ROM is available to facilitate the processor's startup sequence.


System Control Features: Essential to managing the processor's operation, the System Control section includes a PLL/Clock Generator with Oscillator (OSC) to supply clock signals, a General Purpose Timer, and an RTC/32-kHz Oscillator for precise timing functions. This section also provides Memory Protection for secure data handling, a Power/Sleep Controller to optimize power consumption, and Pin Multiplexing for I/O configuration flexibility.

Debugging and System Testing: For system testing and troubleshooting, the TMS320C6748 includes a JTAG Interface. This interface supports connection to external debugging tools, allowing developers to perform in-depth analysis and testing.

Switched Central Resource (SCR): At the heart of data management, the SCR is a high-speed interconnect linking the DSP subsystem, system control, and various peripherals. The SCR efficiently manages data flow, facilitating smooth communication across the processor even when multiple subsystems are active.

Peripherals and Interfaces: The TMS320C6748 offers a versatile range of peripherals.

Direct Memory Access (DMA) through EDMA3 with two channels enables rapid data transfers without CPU involvement. Audio Ports, including McASP and McBSP, support audio data I/O, making the processor suitable for audio applications. Multiple Serial Interfaces (I2C, SPI, and UART) enable communication with devices like sensors and storage units, while the LCD Controller supports direct display interfacing. Additionally, the 128 K Internal RAM provides further data storage.

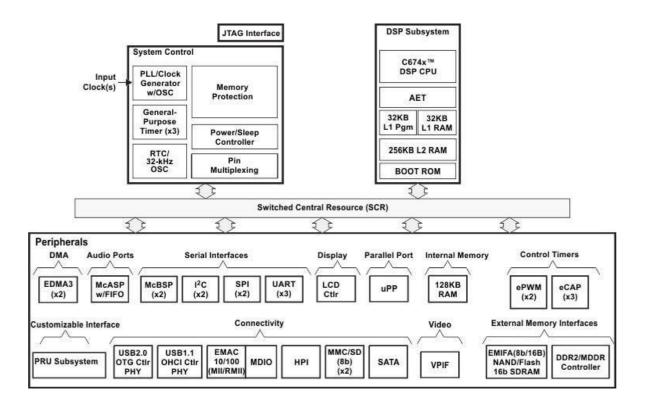

PRU Subsystem for Real-Time Control: The Programmable Real-time Unit (PRU) subsystem adds customization and flexibility, enabling the processor to handle specialized tasks in real-time.

Connectivity Options: For connectivity, the processor supports USB 2.0 OTG, USB 1.1, Ethernet (EMAC 10/100) for network connections, as well as MDIO and HPI interfaces. It also supports MMC/SD and SATA ports, enhancing its capability to interface with various storage devices.

Video Port Interface (VPIF): The VPIF feature makes the TMS320C6748 suitable for video applications by supporting video input and output functions.

Control Timers: The Control Timers section includes ePWM and eCAP timers, providing precise control over pulse-width modulation and capture events. These features are useful for motor control, sensor data acquisition, and other control-based applications.

External Memory Interfaces: To support additional memory, the processor includes interfaces for EMIFA (8b/16b), NAND/Flash 16b, and a DDR2/MDDR Controller, allowing the connection of external DRAM and flash memory for data-intensive applications.

Applications:

The TMS320C6748 DSP processor is versatile, supporting applications across industries due to its powerful DSP core, real-time control, and connectivity options. It is ideal for audio processing in digital audio workstations and industrial automation tasks like motor control and robotics. In the medical field, it handles real-time bio-signal processing for imaging and monitoring, while in video and image processing, it's used for surveillance and computer vision. The processor also serves well in communication systems (e.g., modems and wireless networks), automotive ADAS, energy management, test and measurement equipment, and IoT applications, enabling smart devices and automation in home environments.

Result:

Studied and obtained a comprehensive overview of the TMS320C6748 DSP processor, highlighting its robust DSP CPU core, high-speed data handling through the Switched Central Resource (SCR), and its extensive set of peripherals and connectivity option.

Experiment No: 11 Date: 29-10-2024

Generation of Sine Wave using DSP Kit

Aim:

To generate a sine wave using DSP Kit


Theory:

Sinusoidal are the smoothest signals with no abrupt variation in their amplitude, the amplitude witnesses gradual change with time. Sinusoidal signals can be defined as a periodic signal with waveform as that of a sine wave. The amplitude of sine wave increases from a value of 0 at 0° angle to a maximum value of 1 at 90° , it further reaches its minimum value of -1 at 270° and then return to 0 at 360° . After any angle greater than 360° , the sinusoidal signal repeats the values so we can say that period of sinusoidal signal is 2π i.e. 360° . If we observe the graph, we can see that the amplitude varying gradually with a maximum value of 1 and a minimum value of -1. We can also observe that the wave begins to repeat its value after a period or angle value of 2π hence periodicity of sinusoidal signal is 2π .

Procedure:

- 1. Open Code Composer Studio, Click on File New CCS Project Select the Target C674X Floating point DSP, TMS320C6748, and Connection Texas Instruments XDS 100v2 USB Debug Probe and Verify. Give the project name and select Finish.
- 2. Type the code program for generating the sine wave and choose File Save As and then save the program with a name including 'main.c'. Delete the already existing main.c program.
- 3. Select Debug and once finished, select the Run option.
- 4. From the Tools Bar, select Graphs Single Time. Select the DSP Data Type as 32-bit Floating point and time display unit as second(s). Change the Start address with the array name used in the program(here,s).
- 5. Click OK to apply the settings and Run the program or clock Resume in CCS.

Observation:

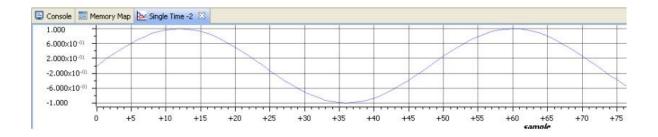

Program:

```
Sine wave
#include<stdio.h>
#include<math.h>
#define pi 3.14159
float s[100];
void main()
{
int i;
float f=100, Fs=10000;
for(i=0;i<100;i++)
s[i]=sin(2*pi*f*i/Fs);
}</pre>
```

Result:

Generated sine wave using DSP Kit.

Experiment No: 12 Date: 29-10-2024

Linear Convolution using DSP Kit

Aim:

To perform linear convolution of two sequences using DSP Kit.

Theory:

Linear convolution is one of the fundamental operations used extensively in signal and system in electrical engineering. It has applications in areas like audio processing, signal filtering, imaging, communication systems and more. In simple terms, linear convolution is the process of combining two signals or functions to produce a third signal or function. Formally, the linear convolution of two functions f(t) and g(t) is defined as: The formula for linear convolution of two discrete signals x[n] and h[n] is given by:

$$y[n] = \sum_{k=-\infty}^{\infty} x[k].h[n-k]$$

In the context of linear convolution in DSP, this operation is applied to digital signals. DSP systems utilize algorithms to perform convolution efficiently, often leveraging Fast Convolution methods to handle large datasets and real-time processing.

Procedure:

1. Set Up New CCS Project

Open Code Composer Studio.

Go to File \rightarrow New \rightarrow CCS Project.

Target Selection: Choose C674X Floating point DSP, TMS320C6748.

Connection: Select Texas Instruments XDS 100v2 USB Debug Probe.

Name the project and click Finish.

2. Write and Configure the Program

Write the C code for generating and storing a sine wave, configuring it to access data at specified memory locations.

Assign the input Xn and filter Hn values to specified addresses:

Xn: Start at 0x80010000, populate subsequent values at offsets like 0x80010004 for each



additional input.

Hn: Start at 0x80011000 with similar offsets for additional values.

Lengths of Xn and Hn should be defined at 0x80012000 and 0x80012004, respectively.

3. Configure Output Location in Code

In the code, configure the output to store convolution results at specific memory addresses starting from 0x80013000, with each result at an offset of 0x04.

4. Save the Program

Go to File \rightarrow Save As and save the code with a filename like main.c.

Remove any default main.c program that might exist in the project.

5. Build and Debug the Program

Select Debug to build and load the program on the DSP.

Once the build is complete, select Run to execute.

6. Execute and Verify Output

In the Debug perspective, click Resume to run the code.

Use the Memory Browser in Code Composer Studio to verify the output at the memory location 0x80013000:

Check 0x80013000 for the first convolution result, 0x80013004 for the second, and so on. Cross-check the values with the expected convolution results for accuracy.

Program:

```
//#include<fastmath67x.h>
#include<math.h>
void main()
{
  int *Xn,*Hn,*Output;
  int *XnLength,*HnLength;
  int i,k,n,l,m;
  Xn=(int *)0x80010000; //input x(n)
  Hn=(int *)0x80011000; //input h(n)
  XnLength=(int *)0x80012000; //x(n) length
  HnLength=(int *)0x80013000; // output address
l=*XnLength; // copy x(n) from memory address to variable m
```

Observation: Xn 0x80010000 - 1 0x80010004 - 2 0x80010008 - 3 Hn 0x80011000 - 1 0x80011004 - 2 XnLength 0x80012000 - 3 HnLength 0x80012004 - 2 Output 0x80013000 - 1 0x80013004 - 4 0x80013008 - 7 0x8001300C - 6

```
for(i=0;i<(l+m-1);i++) // memory clear
{
    Output[i]=0; // o/p array
    Xn[l+i]=0; // i/p array
Hn[m+i]=0; // i/p array
}
for(n=0;n<(l+m-1);n++)
{
    for(k=0;k<=n;k++)
{
     Output[n] =Output[n] + (Xn[k]*Hn[n-k]); // convolution operation.
}
}
}</pre>
```

Result:

Performed Linear Convolution using DSP Kit.