Component Data Sheet ANGRYVIPER Team

Summary - File Write Demux

Name	file_write_demux
Worker Type	Application
Version	v1.3
Release Date	February 2018
Component Library	ocpi.assets.util_comps
Workers	file_write_demux.rcc
Tested Platforms	linux-c7-x86_64, linux-x13_3-arm


Functionality

The File Writer Demux component acts as a demultiplexer/router by parsing any protocol and routing different opcodes to various output files.

The names of the files being written, along with various ways to determine the Worker's "done" status, are extremely configurable using Properties.

Block Diagrams

Top level

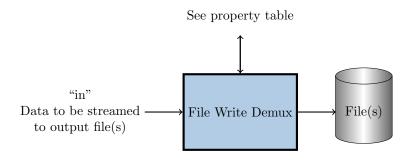

Source Dependencies

$file_write_demux.rcc$

 $\bullet \ ocpiassets/components/util_comps/file_write_demux.rcc/file_write_demux.cc \\$

Component Spec Properties

Name	Type	SequenceLength	ArrayDimensions	Accessibility	Valid Range	Default	Usage	
outFile	Struct	-	-	Writable, Readable	-	-	File name(s) to write to	
outFile.prefix	String	1024	-	"	-	None	File prefix ¹	
outFile.digits	UChar	-	-	"	1 - 3	1	Width for opcode number output padding	
outFile.suffix	String	1024	-	"	-	.bin	File suffix ¹	
outFile.messagesInFile	Bool	-	256	"	-	false	Write file in "message" mode with embedded opcode	
current	Struct	-	-	Volatile	-	-	Current statistics for each opcode	
current.Total	Struct	-	-	"	-	-	Statistics across all opcodes	
current.Total.bytes	ULongLong	-	-	"	Standard	-	Number of bytes received	
current.Total.messages	ULongLong	-	-	"	Standard	-	Number of messages received	
current.Opcode	Struct	-	256	"	-	-	Statistics for each opcode	
current.Opcode.*	Various	-	"	-	-	-	Various ²	
stop0n	Struct	-	-	Writable, Readable	-	-	Condition(s) required to have Worker report completion ³	
stopOn.Total	Struct	-	-	"	-	-	Stops if any non-zero value is exceeded when counting all	
							data received	
stopOn.Total.bytes	ULongLong	-	-	"	Standard	0	Stop on number of bytes received	
stopOn.Total.messages	ULongLong	-	-	,,	Standard	0	Stop in number of messages received	
stopOn.Opcode	Struct	-	256	,,	-	-	Stops if any non-zero value is exceeded when counting	
							data received using a specific opcode	
stopOn.Opcode.*	Various	-	-	,,	-	-	Various ⁴	
stopOn.Any	Struct	-	-	"	-	-	Stops if any non-zero value is exceeded when counting	
							data received using any single opcode	
stopOn.Any.*	Various	-	-	"	-	-	Various ⁴	
stopOn.ZLM	UShort	-	-	"	0 - 256	0	Stops if a Zero Length Message is received using a given	
							opcode. ⁵	

¹The output filename will use strftime substitutions to format the string if any % is found within it.

Worker Properties

file_write_demux.rcc

Control Operations: Stop

Component Ports

- 1	Name	Producer	Protocol	Optional	Advanced	Usage
	in	false	-	false	numberofopcodes=256	Data to be streamed to output file(s)

Worker Interfaces

There are no implementation-specific interfaces for this component.

²Internal structure equivalent to current.Total and not explicitly shown.

³Any matched condition will halt the processing.

⁴Internal structure equivalent to stopOn. Total and not explicitly shown.

⁵Default is opcode 0; set to invalid opcode 256 if this feature is *not* desired.

Component Data Sheet ANGRYVIPER Team

Performance and Resource Utilization

file_write_demux.rcc

Processor Type	Processor Frequency	Run Function Time
linux-c6-x86_64 Intel(R) Xeon(R) CPU E5-1607	3.00 GHz	TBD
linux-c7-x86_64 Intel(R) Core(TM) i7-3630QM	2.40 GHz	TBD
linux-x13_3-arm ARMv7 Processor rev 0 (v7l)	666 MHz	TBD

Test and Verification

Usage (local/x86)

After building the component, the user needs to type make tests RCC_CONTAINERS=1 in the file_write_demux.test directory. Various properties and data flows will be tested to try to cover as many use cases as possible.

If the user would like to execute only one test, TESTS=test_XX can be added to the end of the command.

Usage (remote/ARM)

Full test environment configuration (e.g. NFS mounting, OCPI_CDK_DIR, etc.) on the remote GPP is beyond the scope of this document. The test procedures assume that both shells' current working directory is the file_write_demux.test directory (NFS-mounted on remote) and ocpirun is in the remote's current PATH. NFS must be used for the scripts to properly verify the outputs.

In the host shell, the user types make tests IP=xx.xx.xx. A command that can be copied and then pasted into the remote shell will be displayed. Once the remote shell returns to the bash prompt, pressing "Enter" on the host will begin the verification process.

Single tests can be performed in the same manner as documented above.

Detailed Theory of Operation

Each test_XX subdirectory has the following files:

- description a one-line description of the test
- application.xml the OAS XML for the test setup
- golden.md5 (optional) MD5 checksums of golden/expected output
- generate. [sh|pl|py] (optional) script to generate test data
- verify.sh (optional) script to verify output(s)

Data is sourced with the pattern component or file_read within the OAS. If the former, the source data is encapsulated in the OAS. When the latter, a generate.py script generates the required data. Most OASs dump the "current" property to a file UUT.current.dump, which is also confirmed to match expected output.

If generate.sh does not exist, a default one is created that will run generate.pl and/or generate.py if they exist and are executable. This default script is removed with make clean.

If verify.sh does not exist, a default one is created that will run md5sum and verify all the checksums listed in golden.md5. This default script is also removed upon make clean.