Component Data Sheet ANGRYVIPER Team

Summary - Back Pressure

Name	backpressure						
Worker Type	Application						
Version	v1.3						
Release Date	September 2018						
Component Library	ocpi.core						
Workers	backpressure.hdl, backpressure.rcc						
Tested Platforms	isim, xsim, modelsim, xilinx13_3, centos6, centos7, alst4, ml605, ZedBoard(PL),						
rested rationins	Matchstiq-Z1(PL)						

Functionality

The Back Pressure component provides the ability to emulate 'back pressure' that is present in a system. It is primarily used during the development of an HDL worker, specifically during unit test simulations. The *backpressure* worker is built into a worker's unit test HDL assembly and is used to force 'back pressure' during the execution of application to exercise the worker's ability to correctly handle 'back pressure'.

This worker does not manipulate the data, but simply passes it through. Validation of this worker requires passing a known input data pattern through the worker under its various modes and comparing the input and output files to verify that the data is unchanged. Since validation of the output is performed simply by comparing to the input, any non-zero input data would be sufficient.

Worker Implementation Details

backpressure.hdl

The Back Pressure worker does not define input/output protocols explicitly. Since the input is simply bits, the input protocol is irrelevant and defined by the component feeding the Back Pressure, such as the File Reader. This worker only applies 'back pressure' to that worker which is upstream within the application.

backpressure.rcc

The RCC version of this component is just a placeholder to fulfill the requirements of unit test framework. It passes through data without change and shouldn't be included in normal applications, as it provides no real functionality.

Theory

Back pressure within a system is a common occurrence that can be a result of resource loading issues or passing data between containers. Workers must be designed to handle system back pressure without data loss.

Component Data Sheet ANGRYVIPER Team

Block Diagrams

Top level

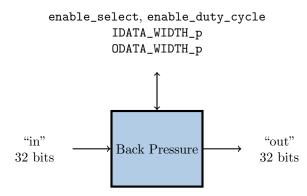


Figure 1: Top Level Block Diagram

State Machine

N/A

Source Dependencies

backpressure.hdl

 $\bullet \ projects/core/components/backpressure.hdl/backpressure.vhd \\$

backpressure.rcc

 $\bullet \ projects/core/components/backpressure.rcc/backpressure.cc \\$

Component Spec Properties

Name	Type	SequenceLength	ArrayDimensions	Accessibility	Valid Range	Default	Usage
enable_select	bool	-	-	Readable, Writable	Standard	False	Select back pressure scheme to control 'take' from up- stream worker. True=lfsr-15 or False=configurable duty cycle
enable_duty_cycle	ushort	-	-	Readable, Writable	Standard	1	Set 'take' duty cycle: 1=constant, 2=toggle, 3=1/on,2/off, 4=1/on,3/off

Worker Properties

backpressure.hdl

Name	Type	SequenceLength	ArrayDimensions	Accessibility	Valid Range	Default	Usage
IDATA_WIDTH_p	ulong	-	-	Readable, Parameter	8/16/32/64	32	Input port data width
ODATA_WIDTH_p	ulong	-	-	Readable, Parameter	8/16/32/64	32	Output port data width

Component Ports

Name	Producer	Protocol	Optional	Advanced	Usage
in	False	-	False	-	32 bits
out	True	-	False	-	32 bits

Worker Interfaces

backpressure.hdl

	Type	Name	DataWidth	Advanced	Usage
Ī	StreamInterface	in	n IDATA_WIDTH_p		Size defined by IDATA_WIDTH_p
	StreamInterface	out ODATA_WIDTH_p		-	Sample size defined by ODATA_WIDTH_p

Control Timing and Signals

back pressure.hdl

This worker implementation uses the clock from the Control Plane and standard Control Plane signals.

Worker Configuration Parameters

backpressure.hdl

Table 1: Table of Worker Configurations for worker: backpressure



Performance and Resource Utilization

backpressure.hdl

Table 2: Resource Utilization Table for worker: backpressure

	Configuration	OCPI Target	Tool	Version	Device	Registers (Typ)	LUTs (Typ)	Fmax (MHz) (Typ)	Memory/Special Functions
ſ	0	zynq	Vivado	2017.1	xc7z020clg400-3	206	181	N/A	N/A
ſ	0	stratix4	Quartus	17.1.0	N/A	206	203	N/A	N/A
П	0	virtex6	ISE	14.7	6vcx75tff484-2	202	236	361.324	N/A

Component Data Sheet ANGRYVIPER Team

Test and Verification

This component is tested via the unit test automation feature of the framework. The component's .test/ contains XML files that describe the combinations of tests.

Fundamentally, there are two test cases that are employed to verify the Back Pressure component:

- 1. enable_select = True: The most significant bit of the lfsr-15 drives the 'take' signal of the input port.
- 2. enable_select = False: The enable_duty_cycle setting controls the duty cycle of the 'take' signal of the input port.

In all test cases, the data is simply passed through the worker and the tests are determined to be successful by comparing the input and output files. Due to its simplicity, and usage in other unit tests, a binary data file is generated containing complex signed 16-bit samples with a tone at a configurable center frequency and sample frequency. Plotting of the I/O data is available, via View=1, if desired.