Enterprise Architect to Protocol Buffer Exporter Programmer's Guide

COPYRIGHT 2017 - 2019 DUKE ENERGY CORPORATION AND OPEN ENERGY SOLUTIONS, INC.

LICENSED UNDER THE APACHE LICENSE, VERSION 2.0 (THE "LICENSE");
YOU MAY NOT USE THIS FILE EXCEPT IN COMPLIANCE WITH THE LICENSE.
YOU MAY OBTAIN A COPY OF THE LICENSE AT

HTTP://WWW.APACHE.ORG/LICENSES/LICENSE-2.0

UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING, SOFTWARE DISTRIBUTED UNDER THE LICENSE IS DISTRIBUTED ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED. SEE THE LICENSE FOR THE SPECIFIC LANGUAGE GOVERNING PERMISSIONS AND LIMITATIONS UNDER THE LICENSE.

Page 2 Enterprise Architect to Protocol Buffer Exporter User's Guide

Change Log:

Date	Version	Who	Comment
01/12/2018	0.1	LSC	Initial Draft
08/08/2018	1.0	LSC	Initial Release
12/20/2018	1.0	LSC	Updated the following sections: • Global • Added new class variable informationalMessages • Added new class variable warningMessages • Added new class variable errorMessages • Added new class variable INVALID_PROTOBUF_DATATYPE • Main • Added new method outputProcessingMessages • DataTypeConversion • Added new class variable invalidDataTypeCheckDictionary • Added new class variable baseDataTypeDictionary • Added new method checkInvalidDataType • Added new method getBaseDataType
4/18/2019	1.0	CN	Added support for ProtobufTag_openfmb_profile on profile message • Main • processGlobalElements now returns list of "Proto3MessageEnumeration" • buildProto3MessageEnumeration checks for "ProtobufTag_openfmb_profile" • Proto3MessageEnumeration • If openfmb flag is set, then write "option (uml.option_openfmb_profile) = true;" • Proto3ModuleIInfo • Support multiple "Proto3MessageEnumeration"

Page 3 Enterprise Architect to Protocol Buffer Exporter User's Guide

1	Overview	4
2	2 Classes	5
	2.1 Global	5
	2.2 Main	7
	2.3 OpenFMBMessageProfileSelector	19
	2.4 AboutBox	22
	2.5 UserAction	23
	2.6 DataTypeConversion	24
	2.7 PrimitiveDataTypeWrappers	28
	2.8 Proto3ModuleInfo	29
	2.9 Proto3File	32
	2.10 Proto3MessageEnumeration	35
	2.11 Proto3Field	37
	2.12 TextBoxOutput	40
	2.13 WriteProto3File	42

1 Overview

The Enterprise Architect to Protocol Buffer (Protobuf) Exporter will utilize the Enterprise Architect Add-In facility to provide a new menu which will allow the user to convert an Open FMB UML model into Protobuf files.

2 Classes

2.1 Global

Class containing global variables.

Class Variables	
EA.Repository	repository
	Reference to the Enterprise Architect Repository object representing the currently open Enterprise Architect model.
UserAction	userAction
	Reference to the UserAction class. This is an intermediary between the Windows Forms user actions and the Main class.
TextBoxOutput	textBoxOutput
	Reference to the TextBoxOutput class. This is used to write information to the TextBox (right pane) of the OpenFMBMessageProfileSelector User Interface.
String	umlFileName
	Name of the Enterprise Architect file that is being processed.
String	protoFileGenerationDateTime
	Generation Date/Time (in UTC format) of the Protobuf files.
HashSet <string></string>	checkedElements
	Reference to the HashSet <t> class. This is used to collect the names of the TreeNode names (UML item names) that will have a check box enabled.</t>
HashSet <string></string>	hideCheckBoxList
	Reference to the HashSet <t> class. This is used to collect the names of the TreeNode names (UML item names) that will have their checked box disabled and hidden from view</t>
List <string></string>	informationalMessages

Page 6 Enterprise Architect to Protocol Buffer Exporter User's Guide

List <string></string>	Reference to the List <t> class. This is used to collect the informational messages generated during processing. If this list is not empty then this list of messages will be written to the Text Box Output when the generation of the protobuf proto3 files has concluded. warningMessages</t>
List <string></string>	warningiviessages
	Reference to the List <t> class. This is used to collect the warning messages generated during processing. If this list is not empty then this list of messages will be written to the Text Box Output when the generation of the protobuf proto3 files has concluded.</t>
List <string></string>	errorMessages
	Reference to the List <t> class. This is used to collect the error messages generated during processing. If this list is not empty then this list of messages will be written to the Text Box Output when the generation of the protobuf proto3 files has concluded and the Save Protobuf button will be disabled.</t>
Boolean	errorGeneratingProtobuf
	Determines if there were any errors during the generation of the protobuf files.
String	INVALID_PROTOBUF_DATATYPE
	Constant string "Invalid data type in Open FMB Model" defining the search string to determine an invalid Protobuf data type.

2.2 Main

Main control point of the application.

Class Variables	
String	menuHeader
	The top-level menu of the Enterprise Architect to
	Protocol Buffer (ProtoBuf) Exporter.
String	menuItem_Generate_proto3
	Sub-menu of the top-level menu, when selected it
Chris	will initiate the generate protobuf proto3 process.
String	menuItem_About
	Sub-menu of the top-level menu, when selected it
	will display a window showing the information
	about the Enterprise Architect to Protocol Buffer
	(ProtoBuf) Exporter.
String	logFileName
561118	Tog. Wertuine
	Name of the log file where processing information
	will be saved.
	The log file name is determined by the absolute
	path, file name of the Enterprise Architect Project
	(.eap) file, and the current date and time. For
	example, if the Enterprise Architect Project (.eap)
	file is located in "C:\OpenFMB\UML\ OpenFMB
	Model (61850-CIM) - 2018-04-16.eap" then the
	corresponding log file will be located in
	"C:\OpenFMB\UML\ OpenFMB Model (61850-
	CIM) - 2018-04-16_HH.mm.ss.log".
OpenFMBMessageProfileSelector	profileSelector
	Reference to the OpenFMBMessageProfileSelector
	class. This is used to setup and show the user
	interface.
TreeNodeCollection	treeNodes
	Reference to the TreeNodeCollection class. This is
	used to represent a collection of TreeNode objects
	based on the Open FMB UML model.
TreeNode	parentPackageNode
	Reference to the TreeNode class. This is used to
	hold the current top-level UML package containing
	1 0 0

Page 8 Enterprise Architect to Protocol Buffer Exporter User's Guide

	the Open FMB UML packages (Open FMB Parent
	Package) and will check or uncheck the check box
	accordingly.
HashSet <string></string>	unnestedElements
Thusing Country	unitestedElements
	Reference to the HashSet <t> class. This is used to</t>
	collect the names of the UML elements that
	contain the name/value pair of "nested" and
	"FALSE" or "ProtobufTag_extend" and "TRUE".
	This combined with the recursive Processing flag
	will determine when to recursively process the
	UML elements.
Boolean	checkModelNode
	Determines if the check box at the UML model
	level is checked or not.
Boolean	checkParentPacakageNode
	Determines if the check box at the top-level UML
	package containing the Open FMB UML packages
	(Open FMB Parent Package) is checked or not.
Boolean	checkPackageNode
	Bata and its allowed by a state of the state
	Determines if the check box at the UML package
D + 224	containing an Open FMB module is checked or not.
Proto3ModuleInfo	proto3GlobalModuleInfo
	Reference to the Proto3ModuleInfo class
	containing the module header information for all
	protobuf proto3 files.
HashSet <int></int>	importPackageIDs
	Reference to the HashSet <t> class. This is used to</t>
	collect the UML package IDs of the packages that
	need to be imported by the UML packages
	containing an Open FMB modules. This helps
	control the recursive processing so that we don't
	process the entire model.
List <string></string>	proto3FileNames
	Reference to the List <t> class. This is used to</t>
	collect the packageName of the Proto3File classes
	that have been processed. This will prevent a
	- I
	packageName from being processed more than
Lict <proto2file></proto2file>	once.
List <proto3file></proto3file>	proto3Files

Page 9 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Reference to the List <t> class. This is used to</t>
	collect the Proto3File classes.
String	childPackageName
	Package name of the UML package containing an Open FMB module that is currently being processed. This helps to determine if a package import encountered during processing needs to be imported. If the name of the package import is the same as the childPackageName then we are within the same package and the import is not needed (a package cannot import itself).
Boolean	recursiveProcessing
	Determines if the protobuf processing should be recursive or not.

Methods	
public String EA_Connect(Repository repository)	Enterprise Architect event that enables the Add- In to identify their type and to respond to Enterprise Architect start up. This event occurs when Enterprise Architect first loads your Add-In. Enterprise Architect itself is loading at this time so that while a Repository object is supplied, there is limited information that you can extract from it. The main use is to initialize the global Add-In data. Parameters: • repository – Enterprise Architect Repository object representing the currently open Enterprise Architect model.
	Return Value: • A string identifying a non-specialized Add-In.
public void EA_Disconnect()	Enterprise Architect event that enables the Add- In to respond to user requests to disconnect the model branch from an external project.
	called when the Enterprise Architect closes. If you have stored references to Enterprise Architect objects (not particularly recommended anyway), you must release them here.

	Note: .NET users must call memory management functions.
public pbject EA_GetMenuItems(Repository repository, String menuLocation, String menuName)	Enterprise Architect event that enables the Add-In to provide the Enterprise Architect user interface with additional Add-In menu options in various context and main menus. When a user selects an Add-In menu option, an event is raised and passed back to the Add-In that originally defined that menu option.
	This event is raised just before Enterprise Architect shows menu options to the user.
	 Parameters: repository – Enterprise Architect Repository object representing the currently open Enterprise Architect model. menuLocation – String representing the part of the user interface that brought up the menu. This can be TreeView, MainMenu, or Diagram. menuName - Name of the parent menu for which sub-items are to be defined. In the case of the top-level menu this is an empty string.
	Return Value:
	 One of the following types: string indicating the label for a single menu option. array of strings indicating a multiple menu option. null to indicate that no menu should be displayed.
	In the case of the top-level menu it should be a single string or an array containing only one item, or empty/null.
public Boolean IsProjectOpen(Repository repository)	Tests to determine if the Enterprise Architect Repository object representing the currently open Enterprise Architect model is accessible.
	Parameters: • repository – Enterprise Architect

Page 11 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Repository object representing the
	currently open Enterprise Architect model.
	Return Value: • Boolean to indicate whether the Enterprise Architect model is accessible. A value of true is returned if the model is accessible.
public void EA_GetMenuState(Repository repository, String menuLocation, String menuName, String menuItemName, ref Boolean isMenuEnabled, ref Boolean isMenuChecked)	Enterprise Architect event that enables the Add- In to set a menu option to either enabled or disabled. This is useful when dealing with locked packages and other situations where it is convenient to show a menu option, but not enable it for use.
	This event is raised just before Enterprise Architect shows menu options to the user.
publiqueid EA ManuCliel/Dangsitany rangeitany	 Parameters: repository – Enterprise Architect Repository object representing the currently open Enterprise Architect model. menuLocation – String representing the part of the user interface that brought up the menu. This can be TreeView, MainMenu, or Diagram. menuName - Name of the parent menu for which sub-items are to be defined. In the case of the top-level menu this is an empty string. menuItemName – String containing the menu option clicked. isMenuEnabled – Boolean when set to false indicates to disable the menu option. isMenuChecked – Boolean when set to true indicates to check the menu option.
public void EA_MenuClick(Repository repository, String menuLocation, String menuName, String menuItemName)	Enterprise Architect event that is received by the Add-In in response to user selection of a menu option.
	This event is raised just before Enterprise Architect shows menu options to the user.
	Parameters:

Page 12 Enterprise Architect to Protocol Buffer Exporter User's Guide

	 repository – Enterprise Architect Repository object representing the currently open Enterprise Architect model. menuLocation – String representing the part of the user interface that brought up the menu. This can be TreeView, MainMenu, or Diagram. menuName - Name of the parent menu for which sub-items are to be defined. In the case of the top-level menu this is an empty string. menuItemName – String containing the menu option clicked.
internal static void	Populates the OpenFMBMessageProfileSelector
populateTreeView(OpenFMBMessageProfileSelector	tree view with the relevant Open FMB packages
profileSelector)	and classes from the model.
	Parameters: • profileSelector – Reference to the OpenFMBMessageProfileSelector class. This class provides access to the tree view to be populated.
private static void populateTreeNodes(TreeNode parentNode, Package parentPackage, Boolean isParentPackage)	Populates the tree nodes in the OpenFMBMessageProfileSelector tree view with the relevant Open FMB packages from the model.
	 Parameters: parentNode – TreeNode containing the current parent tree node that the child tree nodes will be added to. currentPackage – Enterprise Architect Package containing the current UML package that is being processed. isParentPackage – Boolean to indicate that the currentPackage is the top-level UML package containing the Open FMB UML packages (Open FMB Parent Package). This is only set to true the first time PopulateTreeNodes is called.
private static void checkParentNode(TreeNode	Sets the check box of all parent nodes of the
currentNode)	current node in the. Parameters: • currentNode – TreeNode containing the current tree node.

Page 13 Enterprise Architect to Protocol Buffer Exporter User's Guide

private static void	Populates the tree nodes in the
populatePackageClassesAndEnumerations(TreeNode	OpenFMBMessageProfileSelector tree view with
parentNode, Package currentPackage)	the relevant Open FMB classes and
	enumerations from the model.
	Parameters:
	 parentNode – TreeNode containing the
	current parent tree node that the child
	tree nodes will be added to.
	currentPackage – Enterprise Architect
	Package containing the current UML
	package that is being processed.
private static Boolean isClass(element element)	Determines if the current UML element being
	processed in
	PopulatePackageClassesAndEnumerations is a
	class.
	Parameters:
	element – Enterprise Architect Element
	that is currently being processed.
	that is currently being processed.
	Return Value:
	Boolean to indicate whether the
	Enterprise Architect Element is a class. A
	value of true is returned if the Enterprise
	Architect Element is a class.
private static Boolean isEnumeration(Element	Determines if the current UML element being
element)	processed in
	PopulatePackageClassesAndEnumerations is an
	enumeration.
	Parameters:
	element – Enterprise Architect Element
	that is currently being processed.
	5
	Return Value:
	Boolean to indicate whether the Subscription Applies to Element is a re- Transporting Applies to Element is
	Enterprise Architect Element is an
	enumeration. A value of true is returned
	if the Enterprise Architect Element is an enumeration.
private static Boolean isUMLDiagram(Element	Determines if the current UML element being
element)	processed in
	PopulatePackageClassesAndEnumerations is a
	UML diagram.
	Parameters:

Page 14 Enterprise Architect to Protocol Buffer Exporter User's Guide

	element – Enterprise Architect Element that is currently being processed.
	Return Value: • Boolean to indicate whether the Enterprise Architect Element is a UML diagram. A value of true is returned if the Enterprise Architect Element is a UML diagram.
private static void removeFromHideCheckBoxList(String nodeName)	Determines if the current node name is in the HideCheckBoxList. If it is then it will be removed.
	Parameters: • nodeName – Node name which is to be removed from the HideCheckBoxList. This node name is typically a package name that contains an Open FMB mdule.
private static void initializeGenerateProto3Variables()	Initializes the class variables that are specific to the generation of the protobuf files. This is called every time the "Generate Protobuf" button is clicked to clear out the information from a previous generate process. This allows the user to fix any issues encountered during the generate process without closing and reopening the Add-In.
internal static void generateProto3()	Control point for the generation of the protobuf proto3 files.
private static void processPackage (Package package)	Processes the UML package passed in. Determines if the package is part of the Open FMB Model that will be converted to the Protobuf format. Loops through all elements and child packages belonging to the package passed in and calls the appropriate methods for further processing. This method is called recursively for each package.
	Parameters: • package – Enterprise Architect Package containing the current UML package that is being processed.
private static void processPackageTaggedValues(Package package)	Processes the Tagged Values of the UML package passed in. The Tagged Values at the UML package level are used to populate the Proto3ModuleInfo class.
	Parameters:

Page 15 Enterprise Architect to Protocol Buffer Exporter User's Guide

	package – Enterprise Architect Package containing the current UML package that
	is being processed.
private static Proto3MessageEnumeration processGlobalPackageElements(Package package)	Processes the UML Elements of the UML package passed in (Open FMB Parent Package). The Elements at the Open FMB Parent Package level are used to populate the Proto3MessageEnumeration class within the Proto3ModuleInfo class.
	Parameters: • package – Enterprise Architect Package containing the current UML package that is being processed.
private static void processPackageElement(Element element, Proto3File proto3File)	For the UML Element passed in, calls the BuildProto3MessageEnumeration method if the processing is recursive or if the element is a top level element.
	 Parameters: element – reference to the Enterprise Architect Element containing the current UML element that is being processed. proto3File – reference to the Proto3File class containing the current Proto3File class. This class is the top level container for all protobuf proto3 files except for the uml.proto file.
private static Proto3File buildProto3File(Package package)	Populates the Proto3File class with the package name and the parent package name.
	Parameters: • package – Enterprise Architect Package containing the current UML package that is being processed.
	Return Value: • Proto3File class containing the UML package information to be converted to the proto3 file header information.
private static Proto3MessageEnumeration buildProto3MessageEnumeration(Element element, Proto3File proto3File)	Processes the UML Element passed in and populates the Proto3MessageEnumeration class.
	Parameters: • element – reference to the Enterprise Architect Element containing the current UML element that is being processed.

Page 16 Enterprise Architect to Protocol Buffer Exporter User's Guide

private static List <proto3field> buildProto3Fields(Element element, Proto3File proto3File)</proto3field>	proto3File – reference to the Proto3File class containing the current Proto3File class. This class is the top level container for all protobuf proto3 files except for the uml.proto file. Processes the Attributes of the UML Element passed in and populates the Proto3Field class for each Attribute.
	Parameters: • element – reference to the Enterprise Architect Element containing the current UML element that is being processed. • proto3File – reference to the Proto3File class containing the current Proto3File class. This class is the top level container for all protobuf proto3 files except for the uml.proto file.
private static Proto3Field processElementAttributes(Element element, EA.Attribute attribute, Proto3File proto3File)	Processes the Attributes of the UML Attribute passed in and populates the Proto3Field class. These Attributes contain information for multiplicity and default values of the field as well as other Protobuf decorations. Parameters: • element – reference to the Enterprise Architect Element containing the current UML element that is being processed. • attribute – reference to the Enterprise Architect Attribute containing the
	 current UML element attribute that is being processed. proto3File – reference to the Proto3File class containing the current Proto3File class. This class is the top level container for all protobuf proto3 files except for the uml.proto file.
private static String getBaseDataType(Element element)	Determines the base data type class of the UML Element passed in. Parameters: • element – reference to the Enterprise Architect Element containing the current UML element that is being processed.
private static Proto3Field processConnector(Connector connector, Proto3File proto3File)	Processes the UML Connector passed in, determines whether it is an Association or Generalization, calls the appropriate method for

Page 17 Enterprise Architect to Protocol Buffer Exporter User's Guide


	further processing and calls the method BuildProtosMessageEnumeration.
	 Parameters: connector – reference to the Enterprise Architect Connector containing the current UML element that is being processed. proto3File – reference to the Proto3File class containing the current Proto3File class. This class is the top level container for all protobuf proto3 files except for the uml.proto file.
private static Proto3Field processAssociation(Package package, Element element, Connector connector)	Processes the UML Connector passed in and populates the Proto3Field class.
	 Parameters: package – reference to the Enterprise Architect Package of the target Enterprise Architect Element of the association that is being processed. element - reference to the target Enterprise Architect Element of the association that is being processed. connector – reference to the Enterprise Architect Connector containing the current UML element that is being processed.
private static Proto3Field processGeneralization(Package package, element	Processes the UML Connector passed in and populates the Proto3Field class.
element, Connector connector)	 Parameters: package – reference to the Enterprise Architect Package of the target Enterprise Architect Element of the association that is being processed. element - reference to the target Enterprise Architect Element of the association that is being processed. connector – reference to the Enterprise Architect Connector containing the current UML element that is being processed.
Private static void outputProcessingMessages(List <string> messages)</string>	Loops through the list of processing messages (informational, warning, and error) and writes each message to the Text Box Output.

Page 18 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Parameters: • messages – reference to the list of processing messages (informational, warning, and error).
internal static void saveProto3(String selectedPath)	This is the control point for writing all Protobuf files. Parameters: • selectedPath – the path name selected by the user when the "Save Protobuf" button is pressed.
private static Boolean isPackageSelected(String packageName)	Loops through the TreeNode to determine which nodes (package name) have their check boxes checked. Each node that has their check box checked is written. Parameters: • packageName – the package name from each Proto3File class used to identify the nodes in the TreNode.

2.3 OpenFMBMessageProfileSelector

This is the high-level Windows Form for the User Interface with a TreeView in the left pane and a TextBox in the right pane.

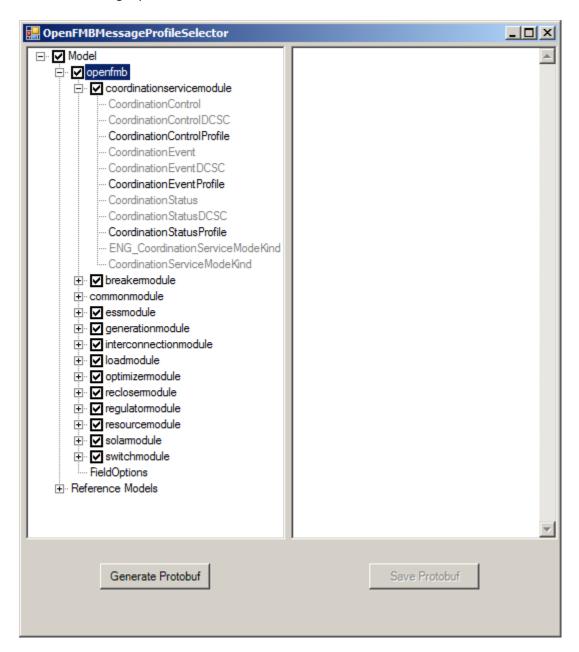

Class Variables	
int	TVIF_STATE
	Mask to indicate the state and stateMask
	members are valid. Default value is 0x80.
Int	TVIS_STATEIMAGEMASK

Page 20 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Mask to set the state image by isolating bits 12 through 15 of the state member. Default value is 0xF000.
Int	TV_FIRST
	Mask to indicate the start of the TreeView messages. Default value is 0x1100.
Int	TVM_SETITEM
	Mask to indicate the attributes to set. Default value is TV_FIRST + 63.

Structure	
int	mask
IntPtr	hltem
int	State
int	stateMask


Methods	
public void hideCheckBox(TreeNode treeNode)	Hides the TreeNode check box of the node passed in. Parameters: • treeNode – reference to the TreeNode who's check box will be hidden.
Public void setCheckBoxOfAllChildNodes(TreeNode treeNode, bool nodeChecked)	Checks or unchecks all child nodes of the tree node passed in. Parameters: • treeNode – reference to the TreeNode whose check box will be hidden. • nodeChecked – Boolean to indicate whether to check (true) or uncheck
Public void setCheckBoxOfAllParentNodes(TreeNode treeNode, bool nodeChecked)	(false) the tree node's check box. Checks or unchecks all parent nodes of the tree node passed in. Parameters: • treeNode – reference to the TreeNode whose check box will be hidden. • nodeChecked – Boolean to indicate whether to check (true) or uncheck (false) the tree node's check box.
Private void node_AfterCheck(object sender,	Called when a node is checked in the user

Page 21 Enterprise Architect to Protocol Buffer Exporter User's Guide

TreeViewEventArgs eventArgs)	interface. Sets the check boxes of parent and child nodes accordingly.
	Parameters:
	sender – reference to the control or
	object that raised the event.
	 eventArgs – reference to the
	TreeViewEventArgs class.
Public void whatNodesAreChecked()	Loops through the tree nodes to determine
	which ones are checked.
Private void processTreeNodes(TreeNodeCollection	Loops through the lower level tree nodes to
treeNodes, int depth)	determine which ones are checked and writes
	the names of the checked nodes to the TreeView
	in the user interface.
Public void disableGenerateButton()	Disables the Generate Proto button.

2.4 AboutBox

This is a Windows Form containing information about the application.

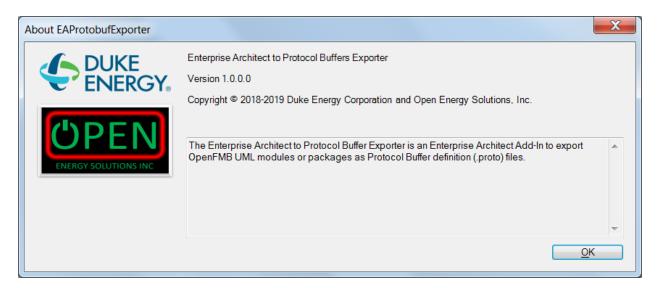

2.5 UserAction

This is the Windows Form inherited class to process user actions.

Methods	
public void OnGenerateAction()	Processes the "Generate Protobuf" button click.
Public void OnSaveAction()	Processes the "Save Protobuf" button click.

2.6 DataTypeConversion

Converts from UML datatypes (Key) to Protobuf datatypes (Value). The class contains a Dictionary of key/value pairs and a supporting method to convert from the UML datatypes to the Protobuf datatypes.

Class Variables	
Dictionary <string, string=""></string,>	invalidDataTypeCheckDictionary
	Dictionary of Key/Value pairs to correspond the
	UML datatypes (Key) to invalid Protobuf
	datatypes (Value).
Dictionary <string, string=""></string,>	dataTypeDictionary
	Dictionary of Key/Value pairs to correspond the
	UML datatypes (Key) to Protobuf datatypes
	(Value).
Dictionary <string, string=""></string,>	baseDataTypeDictionary
	Dictionary of Key/Value pairs to correspond the
	UML base datatypes (Key) to Protobuf datatypes
	(Value). The UML base datatypes are determined
	from base data type classes.

invalid Data Type Dictionary

Кеу	Value
bool	bool – Invalid data type in Open FMB Model
byte	int32 – Invalid data type in Open FMB Model
float	float – Invalid data type in Open FMB Model
int	int32 – Invalid data type in Open FMB Model
integer	int32 – Invalid data type in Open FMB Model
INT8	int32 – Invalid data type in Open FMB Model
INT16	int32 – Invalid data type in Open FMB Model
INT8U	uint32 – Invalid data type in Open FMB Model
INT16U	uint32 – Invalid data type in Open FMB Model
negativeInteger	sint32 – Invalid data type in Open FMB Model
nonPositveInteger	sint64 – Invalid data type in Open FMB Model
short	int32 – Invalid data type in Open FMB Model
long	int64 – Invalid data type in Open FMB Model
double	double – Invalid data type in Open FMB Model

Page 25 Enterprise Architect to Protocol Buffer Exporter User's Guide

decimal	double – Invalid data type in Open FMB Model
hexBinary	bytes – Invalid data type in Open FMB Model
nonNegativeInteger	int32 – Invalid data type in Open FMB Model
normalizedString	string – Invalid data type in Open FMB Model
positiveInteger	int32 – Invalid data type in Open FMB Model
unsignedByte	uint32 – Invalid data type in Open FMB Model
unsignedInt	uint32 – Invalid data type in Open FMB Model
unsignedShort	uint32 – Invalid data type in Open FMB Model
unsignedLong	uint64 – Invalid data type in Open FMB Model
ObjRef	Invalid data type in Open FMB Model

${\tt dataTypeDictionary}$

Key	Value
boolean	bool
string string	string string
float	float
FLOAT32	float
INT32	int32
INT64	int64
INT32U	uint32
INT64U	uint64
dateTime	int64
uuidType	uuidType

base Data Type Dictionary

Key	Value
boolean	bool
bool	bool
string	string
byte	int32
float	float
int	int32

Page 26 Enterprise Architect to Protocol Buffer Exporter User's Guide

l	
integer	int32
negativeInteger	sint32
nonPositveInteger	sint64
short	int32
long	int64
double	double
decimal	double
hexBinary	bytes
nonNegativeInteger	int32
normalizedString	string
positiveInteger	int32
unsignedByte	uint32
unsignedInt	uint32
unsignedShort	uint32
unsignedLong	uint64
dateTime	int64

Methods	
public static String checkInvalidDataType(String umlDataType)	Determines if the Key (string) passed in has a corresponding Value. If not, then a null is returned. Parameters: • umlDataType – UML datatype (Key) of the UML element to be converted. Return Value: • String containing the corresponding invalid Protobuf datatype (Value) of the UML element.
Public static String getProto3DataType(String umlDataType)	Determines if the Key (string) passed in has a corresponding Value. If not, then a null is returned. Parameters: • umlDataType – UML datatype (Key) of the UML element to be converted. Return Value:

Page 27 Enterprise Architect to Protocol Buffer Exporter User's Guide

	String containing the corresponding Protobuf datatype (Value) of the UML element.
Public static String getBaseDataType(String umlDataType)	Determines if the Key (string) passed in has a corresponding Value. If not, then a null is returned.
	Parameters: • umlDataType – UML base datatype (Key) of the UML element to be converted.
	Return Value:
	String containing the corresponding Protobuf
	datatype (Value) of the UML element.

2.7 PrimitiveDataTypeWrappers

Converts from Protobuf datatypes (Key) to Protobuf primitive datatype wrappers (Value). The class contains a Dictionary of Key/Value pairs and a supporting method to convert from the Protobuf datatypes to the Protobuf primitive datatype wrappers.

Note: The Protobuf Primitive Datatype Wrappers allow the Protobuf users to determine if a field with a type of one of the primitive datatypes is optional.

Class Variables	
Dictionary <string, string=""></string,>	primitiveDataTypeWrapperDictionary
	Dictionary of Key/Value pairs to correspond the
	Protobuf datatypes (Key) to Protobuf primitive
	datatype wrappers (Value).

dataTypeDictionary

Key	Value
double	DoubleValue
float	FloatValue
int64	Int64Value
<mark>uint64</mark>	UInt64Value
int32	Int32Value
uint32	Uint32Value
bool	BoolValue
string string	String Value String Value
bytes	BytesValue

Methods	
<pre>public static String getWrapperDataType(String umlDataType)</pre>	Determines if the Key (string) passed in has a corresponding Value. If not, then a null is returned.
	Parameters: • primitiveDataType – Protobuf datatype (Key) of the UML element to be converted.
	Return Value: • String containing the corresponding Protobuf primitive datatype wrapper (Value) of the UML element.

2.8 Proto3ModuleInfo

Contains the module header information for all protobuf proto3 files.

Class Variables	
String	packageName
	Top-level UML package containing the Open FMB
	UML packages (Open FMB Parent Package).
String	comment
	UML user comments on the Open FMB Parent
	Package.
String	stereotype
	Stereotype assigned to the FieldOptions class
	under the Open FMB Parent Package.
List <proto3messageenumeration></proto3messageenumeration>	proto3MessageEnumerations
	Reference to the Proto3MessageEnumeration
	class. This is used to store the FieldOptions and
Chain	MessageOptions class information. selectedPath
String	SelectedPath
	User selected absolute path where the protobuf
	files will be written.
WriteProto3File	writeProto3File
	Reference to the WriteProto3File class. This is used
	to write out the global protobuf file (uml.proto).
String	IMPORT_PACKAGE_NAME
	Constant string "descriptor.proto" defining the file
	name for the import package in the global
	protobuf file.
String	GO PACKAGE OPTION NAME
0	
	Constant string "ProtobufTag_go_package"
	defining the name portion of the name/value pair
	for the protobuf go_package option. One of the
	custom Tagged Values of the top-level Open FMB
	package.
String	goPackageOptionValue
	The value portion of the name (value nair for the
	The value portion of the name/value pair for the protobuf go_package option. One of the custom
	Tagged Values of the top-level Open FMB package.
String	JAVA PACKAGE OPTION NAME
Julia	TANA_LACKAGE_OF HOIN_INAINIE

Page 30 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Constant string "ProtobufTag_java_package" defining the name portion of the name/value pair
	for the protobuf java_package option. One of the
	custom Tagged Values of the top-level Open FMB
	package.
String	javaPackageOptionValue
	The value portion of the name/value pair for the
	protobuf java_package option. One of the custom Tagged Values of the top-level Open FMB package.
String	JAVA MULTIPLE FILES OPTION NAME
String	JAVA_INIOLTIFLE_FILES_OFTION_INAIVIE
	Constant string "ProtobufTag_java_multiple_files"
	defining the name portion of the name/value pair
	for the protobuf java multiple files option. One of
	the custom Tagged Values of the top-level Open
	FMB package.
String	javaMultipleFilesOptionValue
	The value portion of the name/value pair for the
	protobuf java_multiple_files option. One of the
	custom Tagged Values of the top-level Open FMB
0.1	package.
String	CSHARP_NAMESPANCE_OPTION_NAME
	Constant string "ProtobufTag_csharp_namespace"
	defining the name portion of the name/value pair
	for the protobuf csharp_namespace option. One of
	the custom Tagged Values of the top-level Open
	FMB package.
String	cSharpNamespaceOtionValue
	The value portion of the name/value pair for the
	protobuf csharp_namespace option. One of the
	custom Tagged Values of the top-level Open FMB
	package.
String	IMPORT_NAME
	Constant string "DustabufTag package" defining
	Constant string "ProtobufTag_package" defining the name portion of the name/value pair for the
	top-level package name. This is used to build an
	import statement in all protobuf files. One of the
	custom Tagged Values of the top-level Open FMB
	package.
String	importValue
	p

Page 31 Enterprise Architect to Protocol Buffer Exporter User's Guide

The value portion of the name/value pair for the
top-level package name. This is used to build an
import statement in all protobuf files. One of the
custom Tagged Values of the top-level Open FMB
package.

Constructor	
public Proto3GlobalInfo(String packageName)	Parameters:
	 packageName – package name of the
	global proto3 file.

Methods	
public Boolean isValid()	Checks all required class variables, to determine if any are null or blank. If a null or blank required class variable is found, then an error is returned.
	 Return Value: A Boolean to indicate if the global information is valid or not. Returns true if no errors are detected. Returns false if any error is detected.
Public void write()	Writes the uml.proto file to the path constructed from the class variables selectedPath and packageName.
Public void print(int indent)	Writes the values of the class variables to the text box and calls the Print method of the associated Proto3MessageEnumeration class.
	Parameters: • indent – number of indents to prepend to the line to write.

2.9 Proto3File

Contains the UML package information to be converted to the proto3 file header information.

Class Variables	
String	parentPackageName
	Top-level UML package containing the Open FMB
	UML packages (Open FMB Parent Package).
String	packageName
	Name of the LINAL regulars containing an Onen
	Name of the UML package containing an Open FMB module. This package represents one
	protobuf file.
String	comment
301118	Comment
	UML user comments on the Open FMB module.
List <string></string>	importPackageNames
-	
	A list of package names referenced within the
	current UML package (Open FMB module). These
	packages are external to the current package and
	are imported during compilation of the protobuf
	files.
List <proto3messageenumeration></proto3messageenumeration>	proto3MessageEnumerations
	List of Drote 2 Massage Four exertions contained
	List of Proto3MessageEnumerations contained within the current package. The
	Proto3MessageEnumerations is UML element
	information to be converted to the proto3
	message/enumeration information.
Boolean	selectedPackage
	, and the second
	Determines if the current package has been
	selected to be saved.
String	selectedPath
	User selected absolute path where the protobuf
WriteDrete2File	files will be written.
WriteProto3File	writeProto3File
	Reference to the WriteProto3File class. This is used
	to write out the protobuf files.
Boolean	primitiveDataTypeWrapperSet
	Specifies whether one of the
	Proto3MessageEnumeration classes has a

Page 33 Enterprise Architect to Protocol Buffer Exporter User's Guide

Proto3Field class with a datatype of the one of the
Protobuf PrimitiveDataTypeWrappers. If set to
true, an import statement will be written to the
file specifying the wrapper file
(google/protobuf/wrappers.proto).

Constructor	
public Proto3File(String parentPackageName, String packageName)	Parameters: • parentPackageName – package name of the top-level pacakage (Open FMB Parent Package). • packageName – package name of the global proto3 file.

Methods	
public Proto3MessageEnumeration	Searches the current list of
findProto3MessageEnuemeration(String	Proto3MessageEnumeration classes in the
elementName)	Proto3File class to see if the
	Proto3MessageEnumeration class exists.
	Parameters:
	 elementName – name of the UML element that is currently being processed. This name is used to search for a corresponding Proto3MessageEnumeration class.
	Return Value:
	A reference to the
	Proto3MessageEnumeration class found. A
	null value will be returned if a
	corresponding class is not found.
Public void write(Proto3GlobalInfo	Writes the protobuf file associated with the
proto3GlobalInfo)	packageName to the path constructed from the
	class variables selectedPath, parentPackageName,
	and packageName calls the Write method of each
	the associated Proto3MessageEnumeration class
	in the list of Proto3MessageEnumeration classes.
	Parameters:
	 proto3GlobalInfo – reference to the
	protobuf proto3 global information.
Public void print(int indent)	Writes the values of the class variables to the text
	box and calls the Print method of each the
	associated Proto3MessageEnumeration class in
	the list of Proto3MessageEnumeration classes.

Page 34 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Parameters: • indent – number of indents to prepend to the line to write.
--	--

2.10 Proto3MessageEnumerationContains the UML element information to be converted to the proto3 message/enumeration information.

Class Variables	
String	type
	Specifies the type of information contained in the Proto3MessageEnumeration class. The valid types: message; enum; extend.
String	name
	Name of the UML element represented by the Proto3MessageEnumeration class.
String	comment
	UML user comments on the UML element.
Boolean	writeEnumeration
	Specifies whether to write the list of Proto3Field classes as enumerations. This parameter is set to true when the type class variable is set to "enum".
String	fieldVariableNamePrefix
List <string></string>	Prefix to be added to the variable names in the list of Proto3Field classes when the type class variable is set to "enum". proto3Fields
	List of Proto3Fields representing the UML element attributes associated with the Proto3MessageEnumeration class information (UML element).
Boolean	primitiveDataTypeWrapperSet
	Specifies whether one of the Proto3Fields has a datatype of the one of the Protobuf PrimitiveDataTypeWrappers.

Constructor	
public Proto3MessageEnumeration(String type,	Parameters:
String name)	 type – type of information contained in
	the Proto3MessageEnumeration class. The
	valid types: message; enum; extend.
	 name – name of the UML element

Page 36 Enterprise Architect to Protocol Buffer Exporter User's Guide

represented by the
Proto3MessageEnumeration class.

Methods	
public void write(WriteProto3File writeProto3File, Boolean writeComment)	Writes the Proto3MessageEnumeration information to the protobuf file specified by the writeProto3File parameter and calls the Write method of each the associated Proto3Field class in the list of Proto3Field classes.
	Parameters: • writeProto3File – reference to the protobuf file to be written to. • writeComment – controls whether or not to write the contents of the comments class variable to the protobuf file. This parameter is false when called from the Proto3GlobalInfo class and true when called from the Proto3File class.
Public Boolean sortProto3Fields()	Sorts the list of Proto3Fields based on the default value in each Proto3Field from the list. If the type class variable is "message" then the private method sortProtobufTags is called. If the type class variable is "enum" then the list is sorted irrespective of the default values being consecutive numbers.
Private Boolean sortProtobufTags()	Sorts the list of Proto3Fields based on the default value in each Proto3Field from the list. The default values represent the ProtobufTag name/value pair of the Tagged Values of the UML element attribute. The default values of the UML element attributes for a parent UML element must be consecutive numbers starting at 1.
Public void print(int indent)	Writes the values of the class variables to the text box and calls the Print method of each the associated Proto3Field class in the list of Proto3Field classes. Parameters: • indent – number of indents to prepend to the line to write.

2.11 Proto3Field

Contains the UML attribute information to be converted to the proto3 field information.

Class Variables	
String	variableType
	UML class associated with the variable or field
	represented by the Proto3Field class.
String	variableName
	UML attribute name associated with the variable
	or field represented by the Proto3Field class.
String	comment
	UML user comments on the UML element
	attribute.
String	proto3FieldName
String	protostreiuwanie
	Protobuf proto3 datatype corresponding to the
	UML attribute datatype.
String	externalPackageName
	UML package name containing the UML attribute
	represented by the Proto3Field class. The
	externalPackageName corresponds to the
	imported packages specified in the protobuf file.
Int	defaultValue
	Default value of the variable or field represented
	by the Proto3Field class. If the type of associated
	Proto3MessageEnumeration is "message" then the
	ProtobufTag on the attribute is used as the default
	value. If the type of associated
	Proto3MessageEnumeration is "enum" or
	"extend" then the Initial Values on the attribute is
	used as the default value.
Boolean	parentMessage
	Specifies that the UML element attribute is a
	Generalization or inherited class
int	minMultiplicity
	Specifies the minimum multiplicity of the UML
lu4	element attribute to the parent UML element.
Int	maxMultiplicity
	<u> </u>

Page 38 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Specifies the maximum multiplicity of the UML
	element attribute to the parent UML element.
Boolean	infiniteMaxMultiplicity
	Specifies that the maximum multiplicity of the
	UML element attribute to the parent UML element
	is infinite.
Boolean	uuid
	Specifies whether the UML element attribute has a
	special meaning for the string datatype. If the UML
	element attribute contains a Tagged Value with
	the name of ProtobufTag_UUID and value of TRUE,
	then the uuid is set to true.
Boolean	key
	Specifies whether the UML element attribute has a
	special meaning for publish/subscribe protocols. If
	the UML element attribute contains a Tagged
	Value with the name of ProtobufTag_Key and
Dealess	value of TRUE, then the key is set to true.
Boolean	primitiveDataTypeWrapperSet
	Specifies whether the datatype of the field is one
	of the Protobuf PrimitiveDataTypeWrappers. If set
	to true, the field type will be replaced with the
	corresponding wrapper value from the
	PrimitiveDataTypeWrappers class.
Boolean	optionalEnumerationWrapperSet
	Specifies whether the field is an optional
	enumeration. If set to true, the field type will be
	prepended with "Optional_".

Constructor		
public Proto3Field(String variableType, String variableName)	Parameters: variableType – UML class associated with the variable or field represented by the Proto3Field class. variableName – UML attribute name associated with the variable or field represented by the Proto3Field class.	


Methods	
public void write(WriteProto3File writeProto3File,	Writes the Proto3Field information to the protobuf

Page 39 Enterprise Architect to Protocol Buffer Exporter User's Guide

Boolean writeComment, Boolean writeEnumeration, String fieldVariableNamePrefix)	file specified by the writeProto3File parameter. Parameters: • writeProto3File – reference to the
	 writeComment – controls whether to write the contents of the comments class variable to the protobuf file. This parameter is false when called from the Proto3GlobalInfo class and true when called from the Proto3File class. writeEnumeration – specifies whether the Proto3Field information is for an enumeration. This parameter is false if the Proto3Field information is for a message and true if the Proto3Field information is for an enumeration. fieldVariableNamePrefix – prefix added to the variable name if the Proto3Field information. This parameter will be null if the writeEnumeration parameter is false.
Public void print(int indent)	Writes the values of the class variables to the text box.
	Parameters: • indent – number of indents to prepend to the line to write.

2.12 TextBoxOutput

Writes formatted messages to the TextBox (right pane) of the OpenFMBMessageProfileSelector User Interface and writes out the formatted messages to a log file.

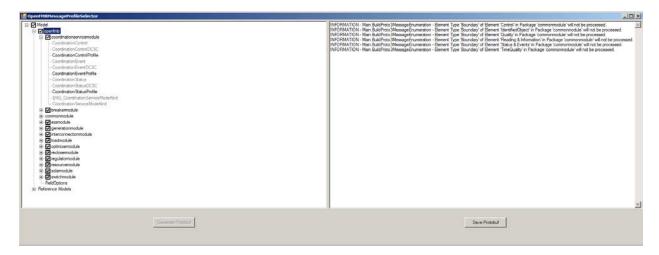

Class Variables	
TextBox	40extbox
	Reference to the Windows Forms TextBox class.
	This is used to write information to the TextBox
	(right pane) of the
	OpenFMBMessageProfileSelector User Interface.
WriteProto3File	writeProto3File
	Reference to the WriteProto3File class. This is used
	to write out the log file.

Constructor	
public TextBoxOuput (TextBox 40extbox)	Parameters:
	 textbox – text box area in the
	OpenFMBMessageProfileSelector User
	Interface to be written too.

Methods	
public void clear()	Clears the contents of the TextBox.
Public String indent(int depth)	Prepends the line to write by 4 spaces (indent) times the depth passed in.
	 Parameters: depth – number of indents to prepend to the line to write.

Page 41 Enterprise Architect to Protocol Buffer Exporter User's Guide

	Return Value:
	A blank string containing the depth of the indent to prepend to the line to write.
Public void outputText(String text)	Appends the text string passed in, without a new
Tubile void output exclosing text	line character, to the list of lines to write.
	inte dilatactery to the list of lines to writer
	Parameters:
	text – line to write.
Public void outputText(int depth, String text)	Appends the text string passed in, without a new
	line character, and indent with the depth passed in
	to the list of lines to write.
	Parameters:
	depth – number of indents to prepend to
	the line to write.
	text – line to write.
Public void outputTextLine()	Appends a blank line to the list of lines to write.
Public void outputTextLine(String text)	Appends the text string passed in, with a new line
	character, to the list of lines to write.
	·
	Parameters:
	 text – line to write.
Public void outputTextLine(int depth, String text)	Appends the text string passed in, with a new line
	character, and indent with the depth passed in to
	the list of lines to write.
	Parameters:
	 depth – number of indents to prepend to
	the line to write.
	text – line to write.
Public void writeLogFile(String logFileName)	Writes the list of lines to write to the log file.
	Parameters:
	 logFileName – name of the log file to be
	written. This name includes the full path
	for the file.

2.13 WriteProto3File

Writes out the proto3 files.

Class Variables	
String	outputFilename
	Name of the output file name to be written. This
	name includes the full path for the file.
List <string></string>	linesToWrite
	List of lines to write to the file specified by the
	outputFileName.

Methods	
public void clear()	Clears the contents of the list of lines to write.
public void append(int depth, String text)	Appends the text string passed in and indent with
	the depth passed in to the list of lines to write.
	Parameters:
	 depth – number of indents to prepend to
	the line to write.
	 text – line to write.
public String indent(int depth)	Prepends the line to write by 4 spaces (indent)
	times the depth passed in.
	Parameters:
	 depth – number of indents to prepend to
	the line to write.
	Return Value:
	 A blank string containing the depth of the
	indent to prepend to the line to write.
public void writeComment(int depth, String	Appends the comment string passed in and indent
comment)	with the depth passed in to the list of lines to
	write.
	Parameters:
	 depth – number of indents to prepend to
	the line to write.
	 comment – comment to write.
public void writeFile()	Writes the list of lines to write to the output file
	name contained in the class variable
	outputFileName.