

Transmission Protocol for SanoSat-1 Satellite

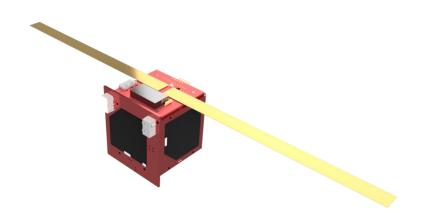




TABLE OF CONTENTS

TABLE OF CONTENTS	2
LIST OF TABLES	
CW BEACON TRANSMISSION	
RTTY-FSK TRANSMISSION	8
GFSK Transmission	10
1. Message Breakdown for Telemetry (Packet Type=0001)	11
2. Message Breakdown for Digipeater Packets	13
Timing Diagram	14



Transmission Protocol for SanoSat-1

Communication Subsystem

LIST OF TABLES

Table 1 : CW Beacon Transmission Protocol	6
Table 2: RTTY FSK transmission protocol	8
Table 3: GFSK packet structure	10
Table 4: Message structure for Telemetry Packet	11
Table 5: Message structure for digipeater packets	13



SanoSat-1 transmits in CW Morse, RTTY-FSK and GFSK schemes. Downlink can be done in all three schemes whereas the uplink can only be done in GFSK Modulation within the protocol defined below.

CW BEACON TRANSMISSION

SanoSat-1 transmits CW Beacon with Call sign and the general health parameters of the satellite. It can also be used to detect the presence of the satellite, measure basic properties of the satellite such as strength, fading, Doppler speed, etc.

The satellite transmits temperature of the communication module in degree Celsius, temperature of the battery in degree Celsius, charging current in mA, battery voltage per 10mV and antenna deployment status.

Speed: 20WPM

The Transmission Protocol is as follows:

AM9NPQXXXYYYZZZ1122?33

XXX: Temperature of the communication board. The length and the sign can be calculated from the residue.

YYY: Temperature of the Battery board. The length and the sign can be calculated from the residue.

ZZZ: Charging current in mA. The length can be calculated from the residue.

11: Battery voltage per 10 mV. i.e. 3.7V is represented by 37.

22: Residue containing the length for battery temperature, current, signs for the temperatures, and the deployment status. The figure below describes the arrangement in residue.



Deployment Status: 0-> Not Deployed, 1->Deployed

Sign of Temperature: 0 -> Positive and 1->Negative



Transmission Protocol for SanoSat-1

Communication Subsystem

?: Delimiter to separate data from NMEA checksum.

33: NMEA checksum calculated over XXXYYYZZZ1122



Table 1 : CW Beacon Transmission Protocol

S.N.	Туре	Length	Data Type	Value	Remarks
1.	Call Sign	6	ASCII	AM9NPQ	
2.	Temperature COM	2-3	INT		Calculate the Integer
3.	Temperature Battery	2-3	INT		Calculate the Integer
3.	Current mA	2-3	INT		Calculate the Integer
4.	VBat /10 V	2	INT		Calculate the Integer
5.	Residuals	2	HEX		
6.	Delimiter	1	ASCII	5	
7.	NMEA Checksum	2	HEX		Calculated over the data i.e. except the call sign





Example for CW Beacon Transmission: AM9NPQ373003506?37

S.N.	Type	Length	Example
1.	Call Sign	6	AM9NPQ
2.	Temperature COM	2	37
3.	Temperature Battery	2	30
3.	Current mA	1	0
4.	VBat /10 V	2	35
5.	Residuals	2	06
6.	Delimiter	1	5
7.	NMEA Checksum	2	37

Residue:	06	HEX 00000110	Status					Length of Bat Temp			
				B7	B6	B5		B(4-2)			B(1-0)
				0	0	0	0	0	1	1	0
Battery Voltage	35	DEC									
Charging Current	0	DEC									
Battery Temperature	30	DEC									
OBC Temperature	37	DEC									
	Antenna Deployment Status:		Not Deployed								
	OBC Temperature		37	Celsius							
	Battery Temperature		30	Celsius							
	Charging Current		0	mA							
	Battery Voltage		350	mV							



RTTY-FSK TRANSMISSION

SanoSat-1 transmits Radio-Teletype FSK in ASCII-8 Mode. It transmits Call sign, battery temperature, charging current, battery voltage, no of resets, deployment status and the radiation intensity.

The settings for RTTY FSK reception are as follows:

Mode: ASCII-8 Speed: 45 Baud Shift: 425 Hz

Separated by Commas

The transmission protocol is as follow:

CALL_SIGN, \$TBAT, ICHG, VBAT, NOR, DEP, RAD?CSM

CALL SIGN: AM9NPQ

TBAT: Battery temperature in Celsius.

ICHG: Charging current in mA. **VBAT:** Battery voltage in mV.

NOR: Number of resets.

DEP: Antenna deployment status. **RAD:** Radiation intensity in uSv/hr. **CSM**: NMEA Checksum from \$ to?

Table 2: RTTY FSK transmission protocol

S.N.	Туре	Data	Remarks
		Type	
1.	Call Sign	ASCII	
2.	Temperature BAT	INT	Degree Celcuis
3.	Current mA	INT	mA
4.	VBat mV	INT	mV
5.	No of Resets	INT	Calculate the
			Integer
6.	Deployment	INT	Deployed/Not
	Status		Deployed
7.	Radiation	INT	uSv/hr
	Intensity		
8.	Checksum over	ASCII	
	the data from \$ to		
	;		



Example: AM9NPQ,\$12,230,392,123,1,10?26

S.N.	Туре	Value	Remarks
1.	Call Sign	AM9NPQ	
2.	Temperature BAT	12	Degree Celcuis
3.	Current mA	230	mA
4.	VBat mV	392	mV
5.	No of Resets	123	Calculate the
			Integer
6.	Deployment Status	1	Deployed/Not
			Deployed
7.	Radiation Intensity	10	uSv/hr
8.	NMEA Checksum of	26	In ASCII
	12,230,392,123,1,10		



GFSK Transmission

SanoSat-1 uses GFSK modulation scheme to transmit the telemetry and in digipeater mode.

The settings for the GFSK modulation scheme are as follows:

Deviation: 1 kHz Speed: 500 bps

Si4463 Packet Protocol

CRC: CRC CCIT

The GFSK transmission uses Si446x's default packet structure. Preamble and sync are always sent LSB first according to the Si446x's packet format.

Table 3 represents the packet structure for both telemetry and digipeater packets.

Table 3 : GFSK packet structure

S.N.	Туре	Size	Value	
1.	Preamble	4 bytes	4 bytes of alternating 0s and 1s (55 55 55 55)	
			sent LSB first. (AA AA AA AA, if received as	
			MSB first)	
2.	Sync Word	2 Bytes	2D D4 send LSB first. (B4 2B, if received as	
			MSB first)	
3.	Message Length	1 Bytes	Length Message including	
	(Field 1)		CRC1+Message+CRC2 (MSB first)	
4.	CRC1	2 Bytes	CRC of Message Length (MSB first)	
5.	Header/Flag	4 Bytes	0xFFFF and 0x0000 (MSB first)	
6.	Message	1 to 126	Data (MSB first)	
		Bytes		
7.	CRC2	2 Bytes	Computed on Message length, 0xFFFF, 0x0000	
			and Data (MSB first)	

CRC scheme = CRC CCIT with initial value 0xFFFF



1. Message Breakdown for Telemetry (Packet Type=0001)

Message from Table 3 is further divided according to Table 4 for telemetry packets.

Table 4: Message structure for Telemetry Packet

S.N.	Type	Size	Value
1.	Call Sign	7 Bytes	AM9NPQ'NULL'
2.	Packet Type	2 Bytes	0x0001
3.	COM Temperature	2 Bytes	
4.	Charging Voltage mV	2 Bytes	
5.	Charging Current mA	2 Bytes	
6.	Battery Temperature	2 Bytes	
7.	Radiation uSv/hr	2 Bytes	
8.	No of Resets	2 Bytes	
9.	Antenna Deployment Status	1 Byte	0x00 or 0x01
10.	Total	22	

Total No of Bytes including preamble, sync, message, header, and CRC: 37 Total No of Bytes for Message in Telemetry Packet: 22



Example

S.N.	Туре	Value (HEX)	Value (Decimal /ASCII)	Explanation
1.	Preamble	AA AA AA AA		(5555555 sent LSB first)
2.	Sync	B4 2B		(2DD4 sent LSB first)
3.	Length	19	25 (INT)	Length of CRC1+Data+CRC2
4.	CRC 1	E8 62		CRC CCIT of 19 is 62E8
5.	Delimiter	FF FF 00 00		
6.	Call Sign	41 4D 39 4E 50 51 00	AM9NPQ (ASCII)	AM9NPQ'NULL'
7.	Packet Type	01 00	1 (INT)	Telemetry Packet (Decimal of 00 01)
8.	COM Temperature	20 00	32 (INT)	Decimal of (00 20)
9.	Battery Voltage mV	54 01	340 (INT)	Decimal of (01 54)
10.	Charging Current mA	40 01	320 (INT)	Decimal of (01 40)
11.	Battery Temperature	1E 00	30 (INT)	Decimal of (00 1E)
12.	Radiation Level uSv/hr	0C 00	12 (INT)	Decimal of (00 0C)
13.	No of Resets	33 00	51 (INT)	Decimal of (00 33)
14.	Deployment Status	01	1 (BOL)	Decimal
15.	CRC 2	8F 27		CRC CCIT of 19FFFF0000414D394E505100010 02000540140011E000C00330001 is 27 8F



2. Message Breakdown for Digipeater Packets

Message from Table 3 is further divided according to Table 5 for digipeater packets. For digipeater packets,

Table 5: Message structure for digipeater packets

S.N.	Туре	Size	Value
1.	Header	3 Bytes	4E 50 51 (NPQ in ASCII)
2.	Data	0-60 Bytes	
3.	Total	1-63 Bytes	

Total No of Bytes including preamble, sync, message, header and CRC: 16-78

Bytes

Total No of Bytes for Message in Telemetry Packet: 1-63 Bytes

Example

S.N.	Туре	Value (HEX)	Value (Decimal /ASCII)	Explanation
1.	Preamble	AA AA AA AA		(55555555 sent LSB first)
2.	Sync	B4 2B		(2DD4 sent LSB first)
3.	Length	1E	30 (INT)	Length of CRC1+Data+CRC2
4.	CRC 1	AA 42		CRC CCIT of 1B is 42AA
5.	Delimiter	FF FF 00		
		00		
6.	Data	4E 50 51	NPQDIGIPEATER	
		44 49 47	TEST SANOSAT	
		49 50 45		
		41 54 45		
		52 20 54		
		45 53 54		
		20 53 41		
		4E 4F 53		
		41 54		
7.	CRC 2	44 63		CRC CCIT of
				1BFFFF00004E5051444947
				49504541544552205445535420
				53414E4F534154 is 63 44



Timing Diagram

Normal Operations	No Tx	GFSK Tx	Receive	RTTY / CW Morse
	90 s	3-4 Packets	20 s	1
Mid Power Mode	Normal Operations		Sleep (aprox. 3 min)	
Low Power Mode	GFSK Tx (1 Packet)		Sleep (aprox. 3 min)	