

1부



SBC Setup



SBC Setup/Image Setup

ROS1

Raspberry Pi 3B+

https://www.robotis.com/service/download.php?no=1738

https://www.raspberrypi.com/software/ Raspberry Pi Imager

sudo apt install rpi-imager

ROS2

Raspberry Pi 4 4G

CHOOSE OS > Other general-purpose OS > Ubuntu > Ubuntu Server 22.04.2 LTS(64-bit)





\$ ifconfig

ROS1 / Raspberry Pi Setup

Find IP Address on Raspberry

```
- PC
$ ssh pi@192.168.X.X
// default password : turtlebot
sudo apt-get install ntpdate
$ sudo ntpdate ntp.ubuntu.com
$ sudo raspi-config
// Advanced Options > Expand Filesystem
nano ~/.bashrc
export ROS_MASTER_URI=http://{IP_ADDRESS_OF_REMOTE_PC}:11311
export ROS_HOSTNAME={IP_ADDRESS_OF_RASPBERRY_PI_3}
 save
$ source ~/.bashrc
```



ROS1 & ROS2 / LDS Setup

LDS-02 Setup(no need for ROS2)





```
$ echo 'export LDS_MODEL=LDS-02' >> ~/.bashrc

$ source ~/.bashrc
```



- Login(ubuntu / ubuntu)
- Wifi Setup

\$ sudo nano /writable/etc/netplan/50-cloud-init.yaml

```
network:
  version: 2
  renderer: networkd
  ethernets:
    eth0:
       dhcp4: yes
       dhcp6: yes
       optional: true
  wifis:
    wlan0:
       dhcp4: yes
       dhcp6: yes
       dhcp6: yes
       dhcp6: yes
       access-points:
       WIFI_SSID:
       password: WIFI_PASSWORD
```



Automatic Update setting

```
$ sudo nano /etc/apt/apt.conf.d/20auto-upgrades

APT::Periodic::Update-Package-Lists "0";
APT::Periodic::Unattended-Upgrade "0";

// save

$ systemctl mask systemd-networkd-wait-online.service
$ sudo systemctl mask sleep.target suspend.target hibernate.target hybrid-sleep.target
$ reboot
```



ROS2 Install

```
$ sudo apt-get update
```

\$ sudo apt-get upgrade

\$ wget https://raw.githubusercontent.com/orocapangyo/turtlebot/blob/main/Tutorial/02-Week/robert/install_ros2_humble_rpi.sh

\$ chmod 755 ./install_ros2_humble_rpi.sh

\$ bash ./install_ros2_humble_rpi.sh



Install ROS2 Package

```
$ sudo apt install python3-argcomplete python3-colcon-common-extensions libboost-system-dev build-essential
$ sudo apt install ros-humble-hls-lfcd-lds-driver
$ sudo apt install ros-humble-turtlebot3-msqs
$ sudo apt install ros-humble-dynamixel-sdk
$ sudo apt install libudev-dev
$ mkdir -p ~/turtlebot3_ws/src && cd ~/turtlebot3_ws/src
$ git clone -b humble-devel https://github.com/ROBOTIS-GIT/turtlebot3.git
$ git clone -b ros2-devel https://github.com/ROBOTIS-GIT/ld08_driver.git
$ cd ~/turtlebot3 ws/src/turtlebot3
$ rm -r turtlebot3_cartographer turtlebot3_navigation2
$ cd ~/turtlebot3 ws/
$ echo 'source /opt/ros/humble/setup.bash' >> ~/.bashrc
$ source ~/.bashrc
$ colcon build --symlink-install --parallel-workers 1
$ echo 'source ~/turtlebot3_ws/install/setup.bash' >> ~/.bashrc
 source ~/.bashrc
```



USB Port Setting for OpenCR

```
$ sudo cp `ros2 pkg prefix turtlebot3_bringup`/share/turtlebot3_bringup/script/99-turtlebot3-cdc.rules /etc/udev/rules.d/
$ sudo udevadm control --reload-rules
$ sudo udevadm trigger
```

ROS2 Domain ID Setting

\$ echo 'export ROS_DOMAIN_ID=30 #TURTLEBOT3' >> ~/.bashrc
\$ source ~/.bashrc



PC Setup/Turtlebot Package

ROS1

\$ sudo apt-get ros-kinetic-dynamixel-sdk \$ sudo apt-get ros-kinetic-turtlebot3-msgs \$ sudo apt-get ros-kinetic-turtlebot3

ROS2

source ~/.bashrc

\$ sudo apt ros-humble-dynamixel-sdk

sudo apt ros-humble-turtlebot3-msgs

sudo apt ros-humble-turtlebot3



PC Setup/ROS Dependent Package

ROS1

```
$ sudo apt-get install ros-kinetic-joy ros-kinetic-teleop-twist-joy \
ros-kinetic-teleop-twist-keyboard ros-kinetic-laser-proc \
ros-kinetic-rgbd-launch ros-kinetic-depthimage-to-laserscan \
ros-kinetic-rosserial-arduino ros-kinetic-rosserial-python \
ros-kinetic-rosserial-server ros-kinetic-rosserial-client \
ros-kinetic-rosserial-msgs ros-kinetic-amcl ros-kinetic-map-server \
ros-kinetic-move-base ros-kinetic-urdf ros-kinetic-xacro \
ros-kinetic-compressed-image-transport ros-kinetic-rqt* \
ros-kinetic-gmapping ros-kinetic-navigation ros-kinetic-interactive-markers
```

ROS2

```
$ sudo apt ros-humble-gazebo-*
$ sudo apt ros-humble-cartographer
$ sudo apt ros-humble-cartographer-ros
```


```
$ sudo apt ros-humble-navigation2
$ sudo apt ros-humble-nav2-bringup
```



PC Setup/Environment Configuration

ROS1



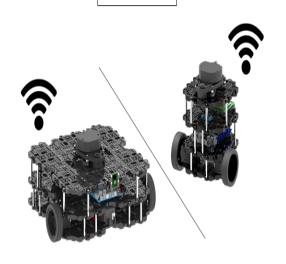



Remote PC



ROS_MASTER_URI = http://IP_OF_REMOTE_PC:11311 ROS HOSTNAME = IP OF REMOTE PC

enable programmable completion features (you don't need to enable this, if it's already enabled in /etc/bash.bashrc and /etc/profile sources /etc/bash.bashrc). if ! shopt -oq posix; then if [-f /usr/share/bash-completion/bash_completion]; then . /usr/share/bash-completion/bash completion elif [-f /etc/bash completion]; then /etc/bash completion f [-x /usr/bin/mint-fortune]; then /usr/bin/mint-fortune alias eb='nano ~/.bashrc' alias sb='source ~/.bashrc' alias gs='git status' alias gp='git pull' alias cw='cd ~/catkin ws' alias cs='cd ~/catkin_ws/src' alias cm='cd ~/catkin ws && catkin make' source /opt/ros/kinetic/setup.bash source ~/catkin ws/devel/setup.bash export ROS_MASTER_URI=http://192.168.0.100:11311 export ROS HOSTNAME=192.168.0.100 ^G Get Help ^W Where Is



PC Setup/Environment Configuration

ROS2

\$ echo 'export ROS_DOMAIN_ID=30 #TURTLEBOT3' >> ~/.bashrc \$ source ~/.bashrc