PARMEC MANUAL

November 29, 2016

Contents

1	Running	2
2	Input commands	3
	2.1 RESET	3
	2.2 MATERIAL	3
	2.3 SPHERE	3
	2.4 MESH	4
	2.5 ANALYTICAL	4
	2.6 OBSTACLE	5
	2.7 SPRING	5
	2.8 GRANULAR	6
	2.9 CONSTRAIN	7
	2.10 PRESCRIBE	7
	2.11 VELOCITY	7
	2.12 GRAVITY	7
	2.13 DAMPING	8
	2.14 CRITICAL	
	2.15 HISTORY	8
	2.16 OUTPUT	8
	2.17 DEM	10
3	Output files	11
4	Output viewers	12
5	Tutorial	13

Running

PARMEC is a command line program. Typical usage:

- 1. Place PARMEC in a globally accessible path (e.g. suitably extend the PATH variable on a unix system).
- 2. Create a directory where your input file and output files will be stored (e.g. mkdir test).
- 3. Edit your Python input file in this directory (e.g. test.py); Chapter 2 documents all input commands.
- 4. Run PARMEC (e.g. PARMEC path/to/test/test.py).
- 5. Time histories can be generated during analysis using the HISTORY command; see Section 2.15.
- 6. Upon termination a *.dump file and/or a *.vtk.* file(s) is/are created in the same directory (e.g. path/to/test/test.dump) their format is documented in Chapter 3.
- 7. The output files can be viewed with OVITO and/or ParaView, as documented in Chapter 4.

A tutorial is provided in Chapter 5.

Input commands

PARMEC input language extends Python. Subroutines related to input processing are listed below.

2.1 RESET

Erase all data.

RESET ()

2.2 MATERIAL

Create material.

matnum = MATERIAL (density, young, poisson)

- matnum material number
- $\bullet \ \mathbf{density}$ mass density
- young Young modulus
- $\bullet\,$ poisson Poisson ratio

2.3 SPHERE

Create a spherical particle.

parnum = SPHERE (center, radius, material, color)

- $\bullet\,$ $\,$ particle number
- \bullet ${\bf center}$ tuple (x,y,z) defining the center
- radius radius
- material material number
- $\bullet\,$ ${\bf color}$ positive integer surface color

2.4 MESH

Create a meshed particle.

parnum = MESH (nodes, elements, material, colors)

- parnum particle number
- **nodes** list of nodes: [x0, y0, z0, x1, y1, z1, ...]
- elements list of elements: [e1, n1, n2, ..., ne1, me1, e2, n1, n2, ..., ne2, me2, ...], where e1 is the number of nodes of the first element, n1, n2, ..., ne1 enumerate the element nodes, and me1 is the material number. Similarly for the second and all remaining elements. Supported numbers of nodes per element are 4, 5, 6, and 8 for respectively tetrahedron, pyramid, wedge, and hexahedron, cf. Figure 2.1.
- material material number
- colors list of positive integer face colors: [gcolor, f1, n1, n2, ..., nf1, c1, f2, n1, n2, ..., nf2, c2, ...], where gcolor is the global color for all not specified faces, f1 is the number of nodes in the first specified face, n1, n2, ..., nf1 enumerate the face nodes, and c1 is the surface color of that face. Similarly for the second and all remaining faces. If only the global color is required, it can be passed as [gcolor] or as gcolor alone.

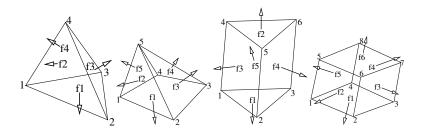


Figure 2.1: Element types.

2.5 ANALYTICAL

Create an analytical particle. Analytical particles have no shapes and are not involved in contact.

parnum = ANALYTICAL (| inertia, mass, rotation, position, material, particle)

Note, that all parameters are optional.

- parnum particle number
- inertia inertia tensor passed as a list [Ixx, Iyy, Izz, Ixy, Ixz, Iyz]; optional, if particle parameter is used; default [1, 1, 1, 0, 0, 0]
- mass scalar mass; optional, if particle parameter is used; default 1
- **rotation** optional orientation matrix passed as a list [e1x, e1y, e1z, e2x, e2y, e2z, e3x, e3y, e3z], where vectors e1, e2, e3 are orthonormal; default [1, 0, 0, 0, 1, 0, 0, 0, 1]
- position optional position vector passed as a tuple (x, y, z); default (θ, θ, θ)

- material material number; default θ
- particle optional; if specified, an existing particle is converted into an analytical particle; its properties are inherited or overwritten, depending on whether any of the inertia, mass, rotation, position parameters are used; if initially specified, particle shape is inherited and its animated motion is included into the results

2.6 OBSTACLE

Create an obstacle.

OBSTACLE (triangles, color | point, linear, angular)

- triangles list of triangle tuples [(t1x1, t1y1, t1z1, t1x2, t1y2, t1z2, t1x3, t1y3, t1z3), (t2x1, t2y1, t2z1, t2x2, t2y2, t2z2, t2x3, t2y3, t2z3), ...] defining the obstacle
- color positive integer surface color or a list [color1, color2, ...] of colors for each individual triangle
- point spatial reference point
- linear linear velocity history callback: $(v_x, v_y, v_z) =$ linear (t)
- angular spatial angular velocity history callback: $(\omega_x, \omega_y, \omega_z) =$ angular (t)

2.7 SPRING

Create a translational spring constraint. The applied force formula reads

force
$$(t) = \operatorname{direction}(t) \cdot [\operatorname{spring}(\operatorname{stroke}(t)) + \operatorname{dashpot}(\operatorname{velocity}(t)) \cdot |\operatorname{sign}(\operatorname{spring}(\operatorname{stroke}(t)))|]$$

where

direction
$$(t) = (\text{point2}(t) - \text{point1}(t)) / |\text{point2}(t) - \text{point1}(t)|$$
 or constant (d_x, d_y, d_z) or tangent

$$\mathrm{stroke}\left(t\right) = \mathrm{direction}(t) \cdot \left[\mathrm{point2}\left(t\right) - \mathrm{point1}\left(t\right)\right] - \mathrm{direction}\left(0\right) \cdot \left[\mathrm{point2}\left(0\right) - \mathrm{point1}\left(0\right)\right]$$

$$\mathrm{velocity}\left(t\right) = \mathrm{direction}\left(t\right) \cdot \frac{d}{dt}\left[\mathrm{point2}\left(t\right) - \mathrm{point1}\left(t\right)\right]$$

$$sign(x) = \begin{cases} -1 & \text{if } x < 0 \\ 0 & \text{if } x = 0 \\ 1 & \text{if } x > 0 \end{cases}$$

The spring (stroke) and dashpot (velocity) relationships are defined by means of lookup tables; force (t) is applied at point (t), and -force (t) is applied at point (t); dashpot force is not applied when spring force is zero.

sprnum = SPRING (part1, point1, part2, point2, spring | dashpot, direction, planar, unload, yield, hardening)

- \bullet **sprnum** spring number
- part1 first particle number
- **point1** tuple (x, y, z) defining a point moving with the first particle
- part2 second particle number; -1 can be used to indicate a single-particle constraint
- point2 tuple (x, y, z) defining a second point, either moving with the second particle, or a spatial point
- **spring** spring force lookup table [stroke₁, force₁, stroke₂, force₂, ..., stroke_n, force_n]; used for both loading and unloading when the **unload** table and the **yield** limits are not given
- dashpot optional dashpot force lookup table [velocity₁, force₁, velocity₂, force₂, ..., velocity_m, force_m]; default: $[-\infty, 0, +\infty, 0]$
- direction optional constant direction (d_x, d_y, d_z)
- planar optional planar spring flag; when 'ON' spring direction

$$\left(\operatorname{point2}(t) - \operatorname{point1}(t)\right) / \left|\operatorname{point2}(t) - \operatorname{point1}(t)\right|$$

is projected onto a plane orthogonal to (d_x, d_y, d_z) ; default: 'OFF'

- unload spring unloading lookup table [stroke₁, force₁, stroke₂, force₂, ..., stroke_n, force_n]; must be monotonically increasing
- yield tuple (f_{yc}, f_{yt}) defining the compression, $f_{yc} < 0$, and tension, $f_{yt} > 0$, yield limits; default: (-1E3, 1E3)
- hardening hardening behavior: 'KINEMATIC' (default) or 'ISOTROPIC' ($f_{yt} = -f_{yc}$; only positive stroke parts of **spring** and **unload** tables are used)

2.8 GRANULAR

Define surface pairing for the granular contact interaction model.

GRANULAR (color1, color2, spring | damper, friction, rolling, drilling, kskn)

- color1 first color (positive, or color1 = 0 and color2 = 0 to redefine default parameters)
- color2 second color (positive, or color1 = 0 and color2 = 0 to redefine default parameters)
- spring normal spring constant
- damper optional normal damping ratio; default: 1.0
- friction optional Coulomb's friction coefficient; default: 0.0; tuple (μ_s, μ_d) can be used to specify respectively static and dynamic friction coefficients
- rolling optional rolling friction coefficient; default: 0.0
- drilling optional drilling friction coefficient; default: 0.0
- kskn optional ratio of normal to tangential spring and dashpot parameters; default: 0.5

2.9 CONSTRAIN

Constrain particle motion.

CONSTRAIN (parnum | linear, angular)

- parnum particle number
- linear list $[x_1, y_1, z_1]$, $[x_1, y_1, z_1, x_2, y_2, z_2]$, or $[x_1, y_1, z_1, x_2, y_2, z_2, x_3, y_3, z_3]$ defining directions of constrained linear motion; default: [0, 0, 0]
- angular list $[x_1, y_1, z_1]$, $[x_1, y_1, z_1, x_2, y_2, z_2]$, or $[x_1, y_1, z_1, x_2, y_2, z_2, x_3, y_3, z_3]$ defining directions of constrained spatial rotation; default: [0, 0, 0]

2.10 PRESCRIBE

Prescribe particle motion. Prescribed motion overwrites this resulting from dynamics and constraints.

PRESCRIBE (parnum | linear, angular, kind)

- parnum particle number
- linear linear velocity or acceleration history callback: $(v_x, v_y, v_z) =$ linear (t); default: not prescribed
- angular spatial angular velocity or acceleration history callback: $(\omega_x, \omega_y, \omega_z) =$ angular (t); default: not prescribed
- kind string 'vv', 'va', 'av', or 'aa' indicating interpretation of respectively linear and angular time histories as either velocity or acceleration; default: 'vv'

2.11 VELOCITY

Set particle velocity.

VELOCITY (parnum | linear, angular)

- parnum particle number
- linear linear velocity tuple (v_x, v_y, v_z) ; default: (0,0,0) at t=0
- angular angular velocity tuple $(\omega_x, \omega_y, \omega_z)$; default: (0,0,0) at t=0

2.12 GRAVITY

Set gravity.

GRAVITY (gx, gy, gz)

- gx constant x component or callback gx(t)
- gy constant y component or callback gy(t)
- gz constant z component or callback gz(t)

2.13 DAMPING

Set global damping, applied as

force =
$$-m\begin{bmatrix} -d_{vx}v_x \\ -d_{vy}v_y \\ -d_{vz}v_z \end{bmatrix}$$
, torque = $-\mathbf{\Lambda}\mathbf{J}\mathbf{\Lambda}^T\begin{bmatrix} -d_{\omega x}\omega_x \\ -d_{\omega y}\omega_y \\ -d_{\omega z}\omega_z \end{bmatrix}$

where m is scalar mass, v is linear velocity, Λ is the rotation matrix, **J** is the referential inertia matrix, and ω is spatial angular velocity.

DAMPING (linear, angular)

- linear linear damping curve callback: $(d_{vx}, d_{vy}, d_{vz}) =$ linear (t)
- angular angular damping curve callback: $(d_{\omega x}, d_{\omega y}, d_{\omega z}) =$ angular (t)

2.14 CRITICAL

Estimate critical time step.

h = CRITICAL ()

• h - critical time step

2.15 **HISTORY**

Before running a simulation, request time history output.

list = HISTORY (entity | source, point)

- list output time history list (empty upon initial request, populated during simulation)
- entity entity name; one of: (output time) 'TIME', (position) 'PX', 'PY', 'PZ', '|P|', (displacement) 'DX', 'DY', 'DZ', '|D|', (linear velocity) 'VX', 'VY', 'VZ', '|V|', (angular velocity) 'OX', 'OY', 'OZ', '|O|', (body force) 'FX', 'FY', 'FZ', '|F|', (body torque) 'TX', 'TY', 'TZ', '|T|'
- source particle number i, or a list of particle numbers [i, j, ...], or a spatial sphere defined as tuple (x, y, z, r), or a spatial box defined as tuple $(x_{\min}, y_{\min}, z_{\min}, x_{\max}, y_{\max}, z_{\max})$; in case of a list of particle numbers the output entity is averaged over the set of particles; in case of a spatial sphere or box the output entity is averaged over the set of particles passing through it; default: 0 (useful when entity is 'TIME')
- point optional referential point used in case of a single particle source; default: particle mass centre

2.16 OUTPUT

Before running a simulation, define scalar and/or vector entities included into the output file(s). PARMEC outputs:

- *.dump files for spherical particles
- *0.vtk.* files for obstacles and mesh based particles **not** specified as **a subset** in the OUTPUT command

- *1.vtk.*, *2.vtk.*, ... files for mesh based particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls
- *0rb.vtk.* for rigid body data of particles **not** specified as **a subset** in the OUTPUT command
- *1rb.vtk.*, *2rb.vtk.*, ... files for rigid body data of particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls
- *0cd.vtk.* for contact data including particles **not** specified as **a subset** in the OUTPUT command
- *1cd.vtk.*, *2cd.vtk.*, ... files for contact data including particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls
- *0sd.vtk.* for spring data including particles **not** specified as **a subset** in the OUTPUT command
- *1sd.vtk.*, *2sd.vtk.*, ... files for spring data including particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls

OUTPUT (entities | subset, mode)

- entities list of output entities; default: ['NUMBER', 'COLOR', 'DISPL', 'ORIENT', 'LINVEL', 'ANGVEL', 'FORCE', 'TORQUE', 'F', 'FN', 'FT', 'SF', 'AREA', 'PAIR'] where:
 - 'NUMBER' scalar field of particle numbers (modes: 'SPH', 'MESH', 'RB'), or scalar field of spring numbers (modes: 'SD')
 - 'COLOR' scalar field of surface colors (modes: 'SPH', 'MESH'), or 2-component vector field of contact surface colors (modes: 'CD')
 - 'DISPL' 3-component vector field of displacements (modes: 'SPH', 'MESH', 'RB'), or scalar field of contact depths (modes: 'CD'), or scalar field of spring strokes (modes: 'SD')
 - 'ORIENT' three 3-component vector fields representing columns of rigid rotation matrix (orientation vectors) (modes: 'RB'), or 3-component vector field of spring orientations (modes: 'SD')
 - 'LINVEL' 3-component vector field of linear velocity (modes: 'SPH', 'MESH', 'RB')
 - 'ANGVEL' 3-component vector field of (spatially constant) angular velocity (modes: 'SPH', 'MESH', 'RB')
 - 'FORCE' 3-component vector field of (spatially constant) total body force (modes: 'SPH', 'MESH', 'RB')
 - 'TORQUE' 3-component vector field of (spatially constant) total body torque (modes: 'SPH', 'MESH', 'RB')
 - 'F' 3-component vector field of total contact forces (modes: 'CD'), or scalar field of total spring forces (modes: 'SD')
 - 'FN' 3-component vector field of normal contact forces (modes: 'CD')
 - 'FT' 3-component vector field of tangential contact forces (modes: 'CD')
 - 'SF' scalar field of spring force magnitude, without dashpot contribution (modes: 'CD', 'SD')
 - 'AREA' scalar field of contact area (modes: 'CD')
 - 'PAIR' 2-component vector field of particle pair numbers (modes: 'CD', 'SD')
- subset optional particle number i, or a list of particle numbers [i, j, ...], to which this specification is narrowed down
- mode optional output mode or list of output modes: 'SPH' for sphere output, 'MESH' for mesh output, 'RB' for rigid body output, 'CD' for contact data output, 'SD' for spring data output; default: ['SPH', 'MESH', 'RB', 'CD', 'SD']

2.17 DEM

Run DEM simulation.

t = DEM (duration, step | interval, prefix)

- $\bullet~\mathbf{t}$ simulation runtime in seconds
- \bullet $\,$ duration simulation duration
- $\bullet \ \mathbf{step}$ time step
- interval output interval (default: time step); tuple $(dt_{\text{files}}, dt_{\text{history}})$ can be used to indicate different output frequencies of output files and time histories, respectively
- prefix output file name prefix (default: input file name without the ".py" extension)

Output files

Output viewers

Tutorial