PARMEC USER MANUAL

April 17, 2018

Contents

1	Installation	2	
2	Running	3	
3 Implementation status			
4	Input commands	5	
	4.1 ARGV		
	4.2 RESET	_	
	4.3 TSERIES		
	4.4 MATERIAL		
	4.5 SPHERE	_	
	4.6 MESH		
	4.7 ANALYTICAL		
	4.8 OBSTACLE		
	4.9 SPRING	_	
	4.10 UNSPRING (experimental)		
	4.11 EQM (experimental)		
	4.12 GRANULAR(under development)		
	4.13 RESTRAIN		
	4.14 PRESCRIBE		
	4.15 VELOCITY		
	4.16 GRAVITY		
	4.17 DAMPING		
	4.18 CRITICAL	_	
	4.19 HISTORY		
	4.20 OUTPUT		
	4.21 DEM	15	
5	Output files	16	
6	Output viewers	17	

Installation

```
Clone parmec sources from GitHub:
     git clone https://github.com/tkoziara/parmec
Enter parmec directory:
     cd parmec
Edit Config.mak file variables:
     # C++ compiler (ISPC is assumed to be in the PATH; http://ispc.github.io)
     CXX=g++
     # Python paths
     PYTHONINC=-I/usr/include/python2.7
     PYTHONLIB=-L/usr/lib -lpython2.7
     # HDF5 paths
    HDF5INC=-I/usr/include
    HDF5LIB=-L/usr/lib -lhdf5 -lhdf5_hl
     # Debug version
     DEBUG=no
Compile sources:
     make
Parmec executable files are:
     parmec4 (single precision)
     parmec8 (double precision)
Parmec library files are:
     libparmec4.a, parmec4.h (single precision library, header)
     libparmec8.a, paremc8.h (double precision library, header)
To update parmec type:
     make clean
     git pull
    make
```

Running

PARMEC is a command line program. Typical usage:

- 1. Include parmec directory into your PATH variable.
- 2. Create a directory where your input file and output files will be stored (e.g. mkdir test).
- 3. Edit your Python input file in this directory (e.g. test.py); Chapter 4 documents all input commands.
- 4. Run PARMEC (e.g. parmec4 path/to/test/test.py, or parmec8 path/to/test/test.py).
- 5. Time histories can be generated during analysis using the HISTORY command; see Section 4.19.
- 6. Upon termination output file(s) is (are) created in the same directory (e.g. path/to/test/test.dump); see Section 4.20 and Chapter 5.
- 7. The output files can be viewed with OVITO, ParaView, or VisIt, as documented in Section 4.20 and Chapter 6.

Implementation status

Individual features of parmec which are not implemented yet are marked as (under development). Relatively complex features that have seen little testing are marked as (experimental). Table 3.1 summarizes current status of automatic contact detection.

	SPHERE	MESH	OBSTACLE
SPHERE	OK	N/A	OK
MESH		N/A	N/A
OBSTACLE			N/A

Table 3.1: Current status of automatic contact detection.

Input commands

PARMEC input language extends Python. Subroutines related to input processing are listed below. In all cases below, when an object number is returned, indexing starts at 0 and increments on each call.

4.1 ARGV

List command line arguments.

```
list = ARGV (| nonparmec)
```

- list Python list (possibly empty) of command line arguments
- nonparmec optional boolean flag enabling filtering out parmec arguments; default: True

4.2 RESET

Erase all data.

RESET ()

4.3 TSERIES

Create time series: a linear spline based on series of 2-points.

tmsnum = TSERIES (points)

- tmsnum time series number
- points a constant v0, or a list [t0, v0, t1, v1, ...] or [[t0,v0], [t1,v1], ...] or [(t0,v0), (t1,v1), ...] of points (where ti < tj, when i < j), or a path to a file storing pairs of times and values in format:

```
# comment 1 ...
# comment 2 ...
t0 v0
t1 v1
# comment 3 ...
```

t2 v2

4.4 MATERIAL

Create material.

matnum = MATERIAL (density, young, poisson)

- matnum material number
- density mass density
- young Young modulus
- poisson Poisson ratio

4.5 SPHERE

Create a spherical particle.

parnum = SPHERE (center, radius, material, color)

- parnum particle number
- **center** tuple (x, y, z) defining the center
- radius radius
- material material number
- color positive integer surface color

4.6 MESH

Create a meshed particle.

parnum = MESH (nodes, elements, material, colors)

- parnum particle number
- **nodes** list of nodes: [x0, y0, z0, x1, y1, z1, ...]
- elements list of elements: [e1, n1, n2, ..., ne1, me1, e2, n1, n2, ..., ne2, me2, ...], where e1 is the number of nodes of the first element, n1, n2, ..., ne1 enumerate the element nodes, and me1 is the material number. Similarly for the second and all remaining elements. Supported numbers of nodes per element are 4, 5, 6, and 8 for respectively tetrahedron, pyramid, wedge, and hexahedron, cf. Figure 4.1.
- material material number
- colors list of positive integer face colors: [gcolor, f1, n1, n2, ..., nf1, c1, f2, n1, n2, ..., nf2, c2, ...], where gcolor is the global color for all not specified faces, f1 is the number of nodes in the first specified face, n1, n2, ..., nf1 enumerate the face nodes, and c1 is the surface color of that face. Similarly for the second and all remaining faces. If only the global color is required, it can be passed as [gcolor] or as gcolor alone.



Figure 4.1: Mesh element types in Parmec.

4.7 ANALYTICAL

Create an analytical particle. Analytical particles have no shapes and are not involved in contact.

parnum = ANALYTICAL (| inertia, mass, rotation, position, material, particle)
Note, that all parameters are optional.

- parnum particle number
- inertia inertia tensor passed as a list [Ixx, Iyy, Izz, Ixy, Ixz, Iyz]; optional, if particle parameter is used; default [1, 1, 1, 0, 0, 0]
- mass scalar mass; optional, if particle parameter is used; default 1
- rotation optional orientation matrix passed as a list [e1x, e1y, e1z, e2x, e2y, e2z, e3x, e3y, e3z], where vectors e1, e2, e3 are orthonormal; default [1, 0, 0, 0, 1, 0, 0, 0, 1]
- **position** optional position vector passed as a tuple (x, y, z); default (θ, θ, θ)
- material material number; default θ
- particle optional; if specified, an existing particle is converted into an analytical particle; its properties are inherited or overwritten, depending on whether any of the **inertia**, **mass**, **rotation**, **position** parameters are used; if initially specified, particle shape is inherited and its animated motion is included into the results

4.8 OBSTACLE

Create an obstacle.

OBSTACLE (triangles, color | point, linear, angular)

- triangles list of triangle tuples [(t1x1, t1y1, t1z1, t1x2, t1y2, t1z2, t1x3, t1y3, t1z3), (t2x1, t2y1, t2z1, t2x2, t2y2, t2z2, t2x3, t2y3, t2z3), ...] defining the obstacle
- color positive integer surface color or a list [color1, color2, ...] of colors for each individual triangle
- point spatial reference point
- linear linear velocity history callback: $(v_x, v_y, v_z) =$ linear (t)
- angular spatial angular velocity history callback: $(\omega_x, \omega_y, \omega_z) =$ angular (t)

4.9 SPRING

Create a translational spring constraint. The applied force formula reads

$$force(t) = direction(t) \cdot [spring(stroke(t)) + dashpot(velocity(t)) \cdot |sign(spring(stroke(t)))|]$$

where

$$\operatorname{direction}\left(t\right) = \left\{ \begin{array}{l} \operatorname{d1}\left(t\right) = \left(\operatorname{geom2}\left(t\right) - \operatorname{point1}\left(t\right)\right) / \left|\operatorname{geom2}\left(t\right) - \operatorname{point1}\left(t\right)\right| \ \mathbf{if} \ \operatorname{geom2} = \left(x, y, z\right) \\ \operatorname{normal0}\left(t\right) \ \mathbf{if} \ \operatorname{geom2} = \left[\operatorname{point0}, \operatorname{normal0}\right] \\ \operatorname{constant} \ \mathbf{direction} = \left(d_x, d_y, d_z\right) \\ \operatorname{d1}\left(t\right) - \operatorname{d1}\left(t\right) \cdot \left(d_x, d_y, d_z\right) \ \text{if} \ \mathbf{planar} \ \text{is enabled} \end{array} \right.$$

$$\operatorname{point2}\left(t\right) = \left\{ \begin{array}{c} \operatorname{geom2}\left(t\right) \text{ } \mathbf{if} \operatorname{geom2} = \left(x,y,z\right) \\ \operatorname{proj}_{\operatorname{geom2}}\left(\operatorname{point1}\right) \text{ } \mathbf{if} \operatorname{geom2} = \left[\operatorname{point0}, \operatorname{normal0}\right] \end{array} \right.$$

$$stroke0 = direction(0) \cdot [point2(0) - point1(0)]$$

$$\begin{aligned} \text{stroke}\left(t\right) &= \left\{ \begin{array}{l} \text{direction}\left(t\right) \cdot \left[\text{point2}\left(t\right) - \text{point1}\left(t\right) \right] - \text{stroke0} \ \ \textbf{if} \ \text{geom2} = \left(x,y,z\right) \\ \text{normal0}\left(t\right) \cdot \left[\text{point1}\left(t\right) - \text{point2}\left(t\right) \right] \ \ \textbf{if} \ \ \text{geom2} = \left[\text{point0}, \ \text{normal0} \right] \\ \text{velocity}\left(t\right) &= \text{direction}\left(t\right) \cdot \frac{d}{dt} \left[\text{point2}\left(t\right) - \text{point1}\left(t\right) \right] \end{aligned} \right. \end{aligned}$$

$$sign(x) = \begin{cases} -1 & \text{if } x < 0 \\ 0 & \text{if } x = 0 \\ 1 & \text{if } x > 0 \end{cases}$$

The spring (stroke) and dashpot (velocity) relationships are defined by means of lookup tables; force (t) is applied at point (t), and -force (t) is applied at point (t); dashpot force is not applied when spring force is zero.

sprnum = SPRING (part1, point1, part2, geom2, spring | dashpot, direction, planar, unload, ylim, inactive, offset) (experimental)

- **sprnum** spring number
- part1 first particle number
- **point1** tuple (x, y, z) defining a point moving with the first particle
- part2 second particle number; -1 can be used to indicate a single-particle constraint
- **geom2** tuple (x, y, z) defining a second point, either moving with the second particle, or a spatial point; alternatively a list storing a point and a normal $[(p_x, p_y, p_z), (n_x, n_y, n_z)]$ defining a referential plane, moving with the second particle or spatially fixed; when a plane is defined the spring direction and stroke are calculated from a projection of **point1** onto this plane: in this case the input arguments **direction** and **planar** are ignored
- **spring** spring force lookup table [stroke₁, force₁, stroke₂, force₂, ..., stroke_n, force_n]; used for both loading and unloading when the **unload** table and the **yield** limits are not given
- dashpot optional dashpot force lookup table [velocity₁, force₁, velocity₂, force₂, ..., velocity_m, force_m]; default: $[-\infty, 0, +\infty, 0]$

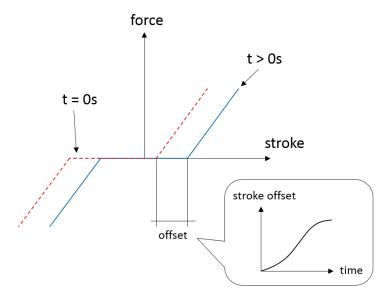


Figure 4.2: The concept of time dependent spring stroke offset.

- direction optional constant direction (d_x, d_y, d_z)
- planar optional planar spring flag; when 'ON' spring direction

$$\left(\operatorname{point2}(t) - \operatorname{point1}(t)\right) / \left|\operatorname{point2}(t) - \operatorname{point1}(t)\right|$$

is projected onto a plane orthogonal to (d_x, d_y, d_z) ; default: 'OFF'

- unload optional spring unloading lookup table [stroke₁, force₁, stroke₂, force₂, ..., stroke_n, force_n]; must be monotonically increasing; default: unspecified
- ylim optional tuple (f_{yc}, f_{yt}) defining the compression, $f_{yc} < 0$, and tension, $f_{yt} > 0$, yield limits; the unloading curve begins to be used once either of these limits is crossed; default: (0, 0)
- inactive optional boolean flag: if *True* create an inactive spring, that can be activated by the UNSPRING command; default: *False*
- offset (under development) optional TSERIES number representing a time dependent adjustment applied to all stroke values of the spring curve (dashpot unchanged) as in Figure 4.2; offset is applied only prior to yielding for springs with ylim and unload specified; default: unspecified

4.10 UNSPRING (experimental)

UNSPRING (tsprings, msprings, limits | entity, operator, abs, nsteps, nfreq, unload, activate)

Undoes user defined selection of springs (**msprings**) based on the value of spring entities experienced by a different user defined selection of springs (**tsprings**). Modifications to the spring curves occur during a simulation. Undone springs remain in the simulation but generate zero forces.

• **tsprings** - list of unique spring numbers whose spring entities are assessed against a criteria defined by limits; must be nonempty

- msprings list of unique spring numbers which are to be modified if tsprings meet the limits criteria (springs defined in tsprings are not modified unless also specified in msprings); must be nonempty
- limits tuple of (min, max) tsprings operator entity limit values which need to be exceeded for msprings to be modified; if either value is *None* then no failure limit is assumed e.g. (*None*, max) only has an upper failure limit; also min < max
- entity scalar spring entity string: (spring stroke) 'STROKE', (spring total force) 'STF', (spring force without damping) 'SF', cf. 4.19 and 4.20; default: 'SF'
- operator collective tsprings operator string: 'SUM', 'MIN', 'MAX'; default: 'SUM'
- **abs** boolean, if *True* then spring forces are converted to absolute values before summation of the spring forces; default: *False*
- nsteps int, number of time steps between calls of UNSPRING; default: 1
- **nfreq** int, number of **nsteps** for which **tsprings** exceed **limits** before **msprings** are modified; default:
- unload Python dictionary (i.e. unload[key] = value), where key (int) unique spring number (must be present in msprings) and value (int) time series number (TSERIES) defining the unload spring curve; an unloading curve must originate at zero and increase monotonically; once modification is activated, for each spring in msprings, the unloading curve is individually applied with a shift specific to the current displacement; both negative and positive displacement increments decrease total spring forces until zero; the spring force remains zero ever after; dashpot force is zero during unloading; default: instantaneous unloading to zero total force
- activate a list of inactive SPRING numbers that will be activated upon complete unloading of all msprings; default: empty

By default, modification of **msprings** is based on the sum of the elastic spring force values across all spring numbers defined in **tsprings**. This is a sum of absolute values if abs = True. Forces in all **tsprings** must exceed the specific min/max values defined in **limits** for the spring curves to be modified (i.e. spring curve modification is an *and* operation, not *or*). For example:

```
tsprings = (1,2)
msprings = (3,4)
limits = (-1.0, 1.0)
UNSPRING(tsprings, msprings, limits)
```

results in the resultant elastic spring force (SF) being assessed against the (-1.0, 1.0) limits. For the spring curves of springs 3 and 4 to be modified, the sum of the forces of springs 1 and 2 must be outside of the (-1.0,1.0) limits for **nfreq** (=1) number of **nsteps** (=1).

4.11 EQM (experimental)

Calculate equivalent point mass from particle inertia and mass properties. Two particles can be passed for relative motion mass. This subroutine can be used to calculate linear stiffness and damping properties for spring based constraints, e.g. stiffness = acceleration \cdot EQM/leeway and damper = damping ratio \cdot 2 \cdot $\sqrt{\text{mass}} \cdot \text{stiffness}$ can be used to define spring and dashpot curves as [-1, -spring, 1, spring] and [-1, -damper, 1, damper] respectively, with the critical time step equal to $\left(2/\sqrt{\text{stiffness}} \cdot \text{mass}\right) \cdot \left(\sqrt{1 + \text{damper}^2} - \text{damper}\right)$.

mass = EQM (part1, point1 | part2, point2, direction) (experimental)

- \bullet ${\bf mass}$ equivalent point mass
- part1 particle number
- point1 point coordinates
- part2 optional second particle number; default: not specified
- point2 optional second particle point coordinates; default: not specified
- direction optional direction of motion; default: not specified

4.12 GRANULAR (under development)

Define surface pairing for the granular contact interaction model. Default parameters, for unspecified pairings, are: spring = 0.0, damper = 1.0, friction = (0.0, 0.0), rolling = 0.0, drilling = 0.0, and kskn = 0.5.

GRANULAR (color1, color2, spring | damper, friction, rolling, drilling, kskn)

- **color1** first color (positive, or color1 = 0 and color2 = 0 to redefine default parameters for unspecified pairings)
- color2 second color (positive, or <math>color1 = 0 and color2 = 0 to redefine default parameters for unspecified pairings)
- spring normal spring constant
- damper optional normal damping ratio; default: 1.0
- friction optional Coulomb's friction coefficient; default: 0.0; tuple (μ_s, μ_d) can be used to specify respectively static and dynamic friction coefficients; (experimental)
- rolling optional rolling friction coefficient; default: 0.0; (under development)
- drilling optional drilling friction coefficient; default: 0.0; (under development)
- kskn optional ratio of normal to tangential spring and dashpot parameters; default: 0.5

4.13 RESTRAIN

Restrain particle motion.

RESTRAIN (parnum | linear, angular)

- parnum particle number
- linear list $[x_1, y_1, z_1]$, $[x_1, y_1, z_1, x_2, y_2, z_2]$, or $[x_1, y_1, z_1, x_2, y_2, z_2, x_3, y_3, z_3]$ defining directions of restrained linear motion; default: [0, 0, 0]
- angular list $[x_1, y_1, z_1]$, $[x_1, y_1, z_1, x_2, y_2, z_2]$, or $[x_1, y_1, z_1, x_2, y_2, z_2, x_3, y_3, z_3]$ defining directions of restrained spatial rotation; default: [0, 0, 0]

4.14 PRESCRIBE

Prescribe particle motion. Prescribed motion overwrites this resulting from dynamics and restraints.

PRESCRIBE (parnum | linear, angular, kind)

- parnum particle number
- linear a tuple (i, j, k) of TSERIES numbers, or a callback: $(v_x, v_y, v_z) = \text{linear } (t)$, defining linear velocity or acceleration history; default: not prescribed
- angular a tuple (i, j, k) of TSERIES numbers, or a callback: $(\omega_x, \omega_y, \omega_z) = \text{angular } (t)$, defining spatial angular velocity or acceleration history; default: not prescribed
- kind string 'vv', 'va', 'av', or 'aa' indicating interpretation of respectively linear and angular time histories as either velocity or acceleration; default: 'vv'

4.15 VELOCITY

Set particle velocity.

VELOCITY (parnum | linear, angular)

- parnum particle number
- linear linear velocity tuple (v_x, v_y, v_z) ; default: (0, 0, 0) at t = 0
- angular angular velocity tuple $(\omega_x, \omega_y, \omega_z)$; default: (0,0,0) at t=0

4.16 GRAVITY

Set gravity.

GRAVITY (gx, gy, gz)

- $\mathbf{g}\mathbf{x}$ constant x float number, or callback $\mathbf{g}\mathbf{x}(t)$, or TSERIES number
- gy constant y float number, or callback gy(t), or TSERIES number
- \mathbf{gz} constant z float number, or callback $\mathbf{gz}(t)$, or TSERIES number

4.17 DAMPING

Set global damping, applied as

$$\text{force} = -m \begin{bmatrix} -d_{vx}v_x \\ -d_{vy}v_y \\ -d_{vz}v_z \end{bmatrix}, \text{ torque} = -\mathbf{\Lambda}\mathbf{J}\mathbf{\Lambda}^T \begin{bmatrix} -d_{\omega x}\omega_x \\ -d_{\omega y}\omega_y \\ -d_{\omega z}\omega_z \end{bmatrix}$$

where m is scalar mass, v is linear velocity, Λ is the rotation matrix, \mathbf{J} is the referential inertia matrix, and ω is spatial angular velocity.

DAMPING (linear, angular)

- linear linear damping curve callback $(d_{vx}, d_{vy}, d_{vz}) =$ linear (t), or a tuple (i, j, k) of TSERIES numbers
- angular angular damping curve callback $(d_{\omega x}, d_{\omega y}, d_{\omega z}) =$ angular (t), or a tuple (i, j, k) of TSERIES numbers

4.18 CRITICAL

Estimate critical time step.

h = CRITICAL ()

• h - critical time step

4.19 HISTORY

Before running a simulation, request time history output; or read history from an existing output file.

list = HISTORY (entity | source, point, h5file, h5last)

- list output time history list (empty upon initial request, populated during simulation)
- entity entity name; global entities: (output time) 'TIME'; particle entities: (position) 'PX', 'PY', 'PZ', '|P|', (displacement) 'DX', 'DY', 'DZ', '|D|', (linear velocity) 'VX', 'VY', 'VZ', '|V|', (angular velocity) 'OX', 'OY', 'OZ', '|O|', (body force) 'FX', 'FY', 'FZ', '|F|', (body torque) 'TX', 'TY', 'TZ', '|T|'; spring entities: (spring length) 'LENGTH', (spring stroke) 'STROKE', (spring total force) 'STF', (spring force without damping) 'SF', (spring state) 'SS', cf. Sec 4.20 for description;
- source particle number i, or a list of particle numbers [i, j, ...], or a spatial sphere defined as tuple (x, y, z, r) (under development), or a spatial box defined as tuple $(x_{\min}, y_{\min}, z_{\min}, x_{\max}, y_{\max}, z_{\max})$ (under development); in case of a list of particle numbers the output entity is averaged over the set of particles; in case of a spatial sphere or box the output entity is averaged over the set of particles passing through it (under development); default: 0 (useful when entity is 'TIME'); spring number or a list of numbers can be used as a source in case of spring entities
- point optional referential point used in case of a single particle source; default: particle mass centre
- h5file (experimental) optional *.h5 file storing existing results; in this case the history is retrieved from this file (if found) or an error message is issued; an appropriate output file needs to be picked depending on the entity, cf. Sec 4.20; the output list is not populated until h5last = True; default: not specified
- h5last (experimental) optional boolean flag marking a last call to HISTORY for which the h5file argument is used; for faster reading all such histories are populated once HISTORY(..., h5file = ..., h5last = True) is called; default: False

4.20 OUTPUT

Before running a simulation, define scalar and/or vector entities included into the output file(s). PARMEC outputs:

• *.dump files for spherical particles

- *0.vtk.* and/or (*0.h5, *0.xmf) and/or (*0.med) (experimental) files for obstacles and mesh based particles not specified as a subset in the OUTPUT command
- *1.vtk.*, *2.vtk.*, ... and/or (*1.h5, *1.xmf, *2.h5, *2.xmf, ...) and/or (*1.med, *2.med...) (experimental) files for mesh based particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls
- *0rb.vtk.* and/or (*0rb.h5, *0rb.xmf) and/or (*0rb.med) (under development) files for rigid body data of particles not specified as a subset in the OUTPUT command
- *1rb.vtk.*, *2rb.vtk.*, ... and/or (*1rb.h5, *1rb.xmf, *2rb.h5, *2rb.xmf, ...) and/or (*1rb.med, *2rb.med, ...) (under development) files for rigid body data of particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls
- *0cd.vtk.* and/or (*0cd.h5, *0cd.xmf) and/or (*0cd.med) (under development) files for contact data including particles not specified as a subset in the OUTPUT command
- *1cd.vtk.*, *2cd.vtk.*, ... and/or (*1cd.h5, *1cd.xmf, *2cd.h5, *2cd.xmf, ...) and/or (*1cd.med, *2cd.med, ...) (under development) files for contact data including particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls
- *0sd.vtk.* and/or (*0sd.h5, *0sd.xmf) and/or (*0sd.med) (under development) files for spring data including particles not specified as a subset in the OUTPUT command
- *1sd.vtk.*, *2sd.vtk.*, ... and/or (*1sd.h5, *1sd.xmf, *2sd.h5, *2sd.xmf, ...) and/or (*1sd.med, *2sd.med, ...) (under development) files for spring data including particles specified as subsets, where numbers 1, 2, ... match consecutive OUTPUT calls

OUTPUT (| entities, subset, mode, format)

- entities list of output entities; default: ['NUMBER', 'COLOR', 'DISPL', 'LENGTH', 'ORIENT', 'ORIENT', 'ORIENT1', 'ORIENT2', 'ORIENT3', 'LINVEL', 'ANGVEL', 'FORCE', 'TORQUE', 'F', 'FN', 'FT', 'SF', 'AREA', 'PAIR'] where:
 - 'NUMBER' scalar field of particle numbers (modes: 'SPH', 'MESH', 'RB'), or scalar field of spring numbers (modes: 'SD')
 - 'COLOR' scalar field of surface colors (modes: 'SPH', 'MESH'), or 2-component vector field of contact surface colors (modes: 'CD')
 - 'DISPL' 3-component vector field of displacements (modes: 'SPH', 'MESH', 'RB'), or scalar field of contact depths (modes: 'CD'), or scalar field of spring strokes (modes: 'SD')
 - 'LENGTH' scalar field of spring lengths (modes: 'SD')
 - 'ORIENT' 9-component tensor field representing rigid rotation matrix (modes: 'RB'), or 3-component vector field of spring orientations (modes: 'SD')
 - 'ORIENT1', 'ORIENT2', 'ORIENT3' three 3-component vector fields representing columns of rigid rotation matrix (orientation vectors) (modes: 'RB')
 - 'LINVEL' 3-component vector field of linear velocity (modes: 'SPH', 'MESH', 'RB')
 - 'ANGVEL' 3-component vector field of (spatially constant) angular velocity (modes: 'SPH', 'MESH', 'RB')
 - 'FORCE' 3-component vector field of (spatially constant) total body force (modes: 'SPH', 'MESH', 'RB')
 - 'TORQUE' 3-component vector field of (spatially constant) total body torque (modes: 'SPH', 'MESH', 'RB')

- 'F' 3-component vector field of total contact forces (modes: 'CD'), or scalar field of total spring forces (modes: 'SD')
- 'FN' 3-component vector field of normal contact forces (modes: 'CD')
- 'FT' 3-component vector field of tangential contact forces (modes: 'CD')
- 'SF' scalar field of spring force magnitude, without dashpot contribution (modes: 'CD', 'SD')
- 'SS' scalar field of spring states, where -3.0 denotes a regular spring (always active), -2.0 denotes an active spring, -1.0 denotes a deactivated spring (zero force), and values ≥ 0 denote a spring currently being unloaded (the number itself denotes TSERIES, Sec 4.3, used as an unloading curve) (modes: 'SD')
- 'AREA' scalar field of contact area (modes: 'CD')
- 'PAIR' 2-component vector field of particle pair numbers (modes: 'CD', 'SD')
- subset optional particle number i, or a list of particle numbers [i, j, ...], to which this specification is narrowed down
- mode optional output mode or list of output modes: 'SPH' for sphere output, 'MESH' for mesh output, 'RB' for rigid body output, 'CD' for contact data output, 'SD' for spring data output; default: ['SPH', 'MESH', 'RB', 'CD', 'SD']
- format optional output format, e.g. 'VTK' or 'XDMF' or 'MED' (experimental/under development), or a list, e.g. ['VTK', 'XDMF', 'MED'], where 'VTK' is the text based legacy VTK format, 'XDMF' is the HDF5/XML based XDMF format, and 'MED' is the binary MED format (experimental/under development); default: 'XDMF'

4.21 DEM

Run DEM simulation.

t = DEM (duration, step | interval, prefix, adaptive)

- t simulation runtime in seconds
- duration simulation duration
- step time step; initial if adaptive is used or constant otherwise
- interval output interval (default: time step); tuple ($dt_{\rm files}, dt_{\rm history}$) can be used to indicate different output frequencies of output files and time histories, respectively; callback functions or TSERIES numbers can also be used, e.g. $dt_{\rm files} = {\rm dt_fiels}\,(t)$ and $dt_{\rm history} = {\rm tmsnum}$, prescribing variable interval frequencies, depending on current time;
- **prefix** output file name prefix (default: input file name without the ".py" extension); Note: **prefix** can only change at time 0.0 or after RESET()
- adaptive adaptive time step reduction factor; zero turns off adaptive time stepping, values > 0.0 and ≤ 1.0 turn it on; default: 0.0 (experimental)

Output files

(Under development)

Output viewers

(Under development)