# **OS & Network Summary**

## **Table of Content**

- · Table of Content.
- Chapter 1.
  - · Parts of a Network.
  - · Key interfaces.
  - · Protocols and layers.
    - OSI "7 layer" Reference Model.
    - · Four layer model.
    - Internet Reference Model.
    - · Layer-based names.
- Chapter 2: Physical Layer.
  - Socket API.
  - Simple link model.
    - · Rate.
    - Delay / latency.
    - Bandwidth-delay product.
  - Types of Media.
    - Wireless.
  - Modulation.
    - · Clock recovery.
      - 4b/5b.
    - · Baseband vs Passband modulation.
      - · Passband.
    - · Fundamental limits.
      - Key channel properties.
      - · Nyquist limit/frequency.
      - · Shannon capacity.
- · Chapter 3: Link Layer.
  - Framing.
    - Byte count.
    - · Byte stuffing.
    - · Bit stuffing.
  - Error coding.
    - · Using error codes.
      - · Hamming distance.
    - Error Detection.
      - · Internet Checksum.
      - · Cyclic redundancy check.
    - Error correction.

- · Hamming code.
- Detection vs Correction.
- Retransmissions (ARQ).
  - Stop and wait.
  - Sliding Window.
- Multiplexing.
  - Multiple Access Control or Medium Access Control (MAC).
  - Random Multiple Access.
    - · ALOHA protocol.
    - Carrier Sense Multiple Access(CSMA).
    - Carrier Sense Multiple Access with Collision Detection(CSMA/CD).
    - CSMA persistence.
    - Binary Exponential Backoff (BEB).
    - Ethernet.
  - Wireless Multiple Access.
    - Multiple Access with Collision Avoidance (MACA).
    - 802.11.
  - Contention-Free Multiple Access.
    - Turn-taking Multiple Access Protocols.
  - LAN Switches.
    - Switch forwarding.
- Chapter 4 : Network layer.
- Acronyms.

## **Chapter 1**

## Parts of a Network

Component	Function	Example
Application, or app, user	Uses the network	Skype, iTunes, Amazon
<b>Host</b> , or end-system, edge device, node, source, sink	Supports apps	Laptop, mobile, desktop
<b>Router</b> , or switch, node, hub, intermediate system	Relays messages between links	Access point, cable / DSL moden
Link, or channel	Connects nodes	Wires, wireless

## **Key interfaces**

- Network-application interfaces define how apps use the network (Sockets widely used)
- Network-network interfaces define how nodes work together (ex: Traceroute)


Network service API hides details (Apps don't know what is inside the network)

## **Protocols and layers**

To divide up network functionality

- Each instance of a protocol talks virtually to its peer using the protocol
- Each instance of a protocol uses only the services of the lower layer

#### Protocol stack example:

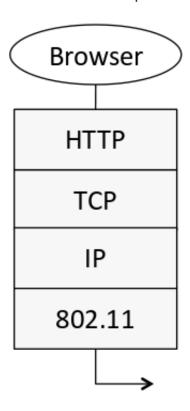

**Encapsulation**: Lower layer wraps higher layer content and add its own information

**Advantage of layering :** Information hiding and reusability **Disadvantages of layering :** Overhead and hides information

## **OSI "7 layer" Reference Model**

	Layer	Description
7	Application	Provides functions needed by users


6	Presentation	Converts different data representations
5	Session	Manages task dialogs
4	Transport	Provides end-to-end delivery
3	Network	Sends packets over multiple links
2	Data link	Sends frames of information
1	Physical	Sends bits as signals

## Four layer model

### Based on experience

	Layer	Description
7	Application	Programs that use network service
4	Transport	Provides end-to-end data delivery
3	Internet	Send packets over multiple networks
2 (/1)	Link (/Physical)	Send frames over a link (/Sends bits using signals)

### **Internet Reference Model**

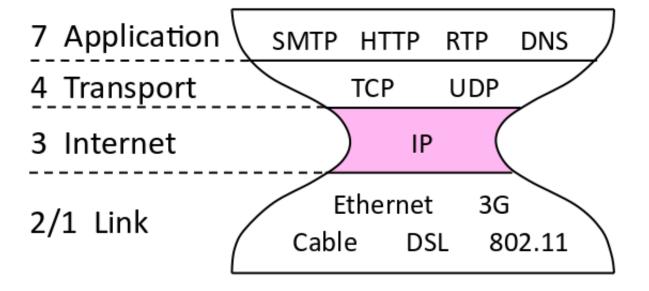

## **Layer-based names**

Layer	Unit of Data
Application	Message

Transport	Segment
Network	Packet
Link	Frame
physical	Bit

#### Devices in the network:

• Repeater (Hub) : Physical/Physical

• Switch (bridge): Link/Link

• Router: Network+Link / Network+Link

• Proxy (middlebox, gateway) : App+Transport+Network+Link

# **Chapter 2 : Physical Layer**

## **Socket API**

Primitive	Meaning
SOCKET	Create a new communication endpoint
BIND	Associate a local address with a socket
LISTEN	Announce willingness to accept connections; give queue size
ACCEPT	Passively wait for an incoming connection
CONNECT	Actively attempt to establish a connection
SEND	Send some data over the connection
RECEIVE	Receive some data from the connection
CLOSE	Release the connection

## Simple link model

Properties: Rate, Delay/Latency, wether the channel is broadcast, its error rate

#### Rate

Or bandwith, capacity, speed in bits/second

### **Delay / latency**

ullet Transmission delay T: Time to put M-bit message on the wire

$$T = \frac{M[bits]}{Rate\left[\frac{bits}{s}\right]} = \frac{M}{R}[s]$$

ullet Propagation delay D: time for bits to propagate across the wire

$$D = \frac{Length}{Speed of signals} = \frac{L}{\frac{2}{3}C}$$

• Latency L: delay to send a message over a link

$$L = T + D = \frac{M}{R} + \frac{L}{\frac{2}{3}C}$$

### **Bandwidth-delay product**

The amount of data "in flight"

$$BD = R \cdot D$$

## **Types of Media**

Media propagate signals that carry bits information.

Common types:

- Wires
- Fiber
- Wireless

#### **Wireless**

- · Travel at speed of light
- Spread out and attenuate faster than  $\frac{1}{d^2}$
- Interference between signals on the same frequency (=> spatial reuse of same freq)
- Multipath: signal interferes with itself after reflexion

## **Modulation**

How the signals represent bits

NRZ: A high voltage +V represents a 1 and a low voltage -V represents a 0

### **Clock recovery**

Receiver needs frequent signal transitions to decode bits (synchronisation)

#### 4b/5b


Map every data bits into 5 code bits without long runs of zeros

4b	5b
0000	11110
0001	01001
1110	11100
1111	11101

• Invert signal level on every 1 (NRZI)

#### Example:

message: 1111 0000 0001

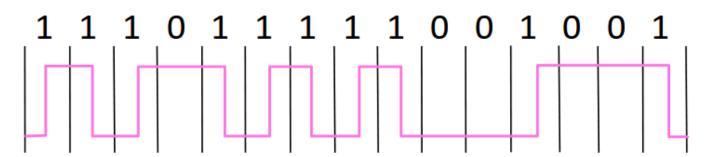

#### **Baseband vs Passband modulation**


**Baseband**: Signal is sent directly on a wire (wires)

**Passband**: Modulation carries a signal by modulating a carrier (fiber / wireless)

#### **Passband**

Carrier is a signal oscillating at desired frequency. We modulate it by changing amplitude, frequency or phase

NRZ signal of bits

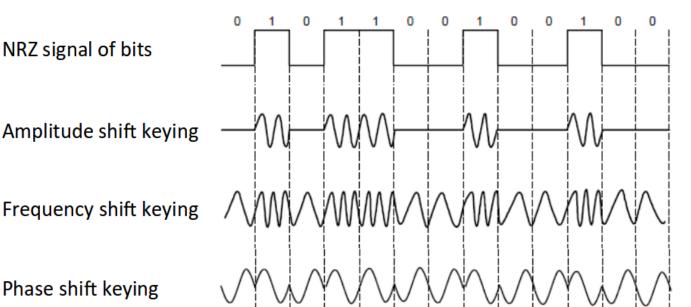

Frequency shift keying

Phase shift keying

## **Fundamental limits**

## **Key channel properties**

- Bandwidth B
- Signal strength S
- Noise strength N

## **Nyquist limit/frequency**

If we have a channel with a bandwidth  ${\it B}$  , the maximum symbol rate is  $2{\it B}$  . If we have V signal levels ( $log_2V$  different bits), the maximum bit rate is

$$R = 2B \cdot log_2 V \left[ \frac{bits}{s} \right]$$

### **Shannon capacity**

The number of levels we can distinguish on a channel depends on the SNR (~ S/N)

The Shannon capacity C is the maximum information carrying rate of the channel

$$C = B \cdot \log_2\left(1 + \frac{S}{N}\right) \left[\frac{bits}{s}\right]$$

#### Wires / Fiber:

Engineer SNR for data rate

#### Wireless:

Adapt data rate to SNR (can't design for worst case)

## **Chapter 3: Link Layer**

Concerns how to transfer messages (frames, of limited size) over one or more connected links

## **Framing**

Transform stream of bits from physical layer to sequence of frames

### Byte count

- · Start each frame with a length field
- · Difficult tu resynchronize after framing error

### **Byte stuffing**

- Use a flag byte value for start/end of frame
- Escape the flag (and the escape code) inside the message replacing (stuffing) it with an escape code

### **Bit stuffing**

- Flag with six consecutive 1
- In the message, insert a 0 after five 1 when sending and remove every 0 after five 1 when receiving
- Slightly less overhead than byte stuffing but more complicated -> byte stuffing used in practice

## **Error coding**

## **Using error codes**

Codeword consists of data bits D plus check bits R

## Hamming distance

- The distance is the number of bit flips needed to change  $D+R_1\,$  to  $D+R_2\,$
- The Hamming distance of a code is the minimum distance between a pair of codewords
- For a code of Hamming distance d+1, up to d errors will always be detected

 For a code of Hamming distance 2d + 1, up to d errors can always be corrected by mapping to the closest codeword

### **Error Detection**

- Parity bit: The parity bit is the sum of the bits of D (distance: 2 -> detect 1 error); Little used
- Checksum: Sum up data in N-bit word (Stronger than parity)
- Internet Checksum
- CRC

#### In practice:

- CRCs used on links (Ethernet, 802.11, ADSL, Cable)
- Checksum used in Internet (IP, TCP, UDP)

#### **Internet Checksum**


### Sending:

- 1. Arrange data in 16-bit words
- 2. Add
- 3. Add any carryover back to get 16 bits
- 4. Negate (complement) to get the checksum

#### Receiving:

- 1. Arrange data in 16-bit words (including checksum)
- 2. Add
- 3. Add any carryover back to get 16 bits
- 4. Negate the result and check if 0

#### Example:

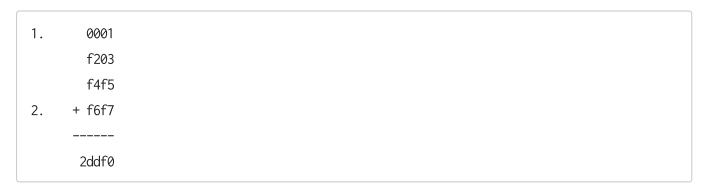

```
ddf0
3. + 2
-----
ddf2
```

```
4. -> 220d
```

Transmit to physical layer: 0001 f203 f4f5 f6f7 220d

```
1. 0001
f203
f4f5
f6f7
2. + 220d
-----
2rffd
```

```
fff0
3. + 2
-----
ffff

4. -> 0000
```

- Distance of the code: 2
- Will always detect up to 1 error
- Will detect all burst errors up to 16
- For random errors, probability of miss is  $\frac{1}{2^{16}}$  (2<sup>16</sup> different checksums)

## **Cyclic redundancy check**

For data D of length n, generate check bits R of length k such that the n+k bits are evenly divisible by a generator C.

- Protection depend on generator (standard has 32bits C)
- Humming distance of 4
- · Detects odd numbers of errors
- Detects bursts of up to k bits in error
- Not vulnerable to systematic errors

#### **Example:**

D = 302, C = 3, k (length of R) = 1  
=> R = 1 because 
$$\frac{3021}{3} = 0$$

#### Send procedure:

- 1. Extend D with k zeros
- 2. Divide by the generator C

- 3. Ignore quotient
- 4. Set check bits R as the remainder

#### Receive procedure:

1. Divide by C and check for zero remainder

#### **Example:**

```
D = 10111
```

C = 100

k = length(C) - 1 = 2

```
101 | 1011100

101
---
001
000
---
011
000
---
110
101
---
10 = R
```

Transmitted frame: 1011110

### **Error correction**

It is difficult because errors can be in the check bits

## **Hamming code**

Gives a method for constructing a code with a distance of 3.

#### To encode:

- With k check bits, we can check data of length  $n=2^k-k-1$ ; ex: k=3 , n=4
- The check bits are in positions  $P_i$  that are powers of 2, starting with position 1 (1, 2, 4, 8...)
- Fill the free positions with the data bits (positions 3, 5, 6, 7...)
- Check bit in position  $P_i$  is the parity of the bits at positions  $P_j$  for which the  $i^{th}$  bit in j is 1 (ex:  $P_2$  is the sum of all the bits at positions  $P_j$  where the second bit in j is 1 => 10 (2), 11 (3), 110 (6), 111

(7), 1010 (10), ...)

#### To decode:

- Recompute check bits  $p_i$  (with parity sum including the check bit)
- Arrange as a binary number  $(\dots p_8 p_4 p_2 p_1)$
- If the value (syndrome) is zero, it means there is no error
- Otherwise the syndrome is the position of the error, flip the bit at this position

#### **Detection vs Correction**

#### Correction

- When error are expected and in small number
- When no time for retransmission
- Used in physical layer (LDPC)
- · Sometimes used in the application layer

#### **Detection**

- When errors are not expected
- When errors are generally large
- · Used in the link layer and above

## **Retransmissions (ARQ)**

- Receiver automatically acknowledges correct frames with an ACK
- Sender automatically resends after a timeout if no ACK is received
- Frames and ACKs must carry sequence numbers to avoid duplicates

### Stop and wait

Use one bit to distinguish the current frame from the next one. Send one frame at a time

### **Sliding Window**

Generalization of stop-and-wait
Allows W frames to be outstanding

## Multiplexing

Network word for the sharing of a resource

- Time Division Multiplexing: Users take turns on a fixed schedule (ex: Round-Robin)
- Frequency Division Multiplexing: Put different users on different frequency bands

## Multiple Access Control or Medium Access Control (MAC)

## **Random Multiple Access**

Basis for classic Ethernet

### **ALOHA protocol**

- · Node sends when it has traffic
- If there was a collision (no ACK received), wait a random amount of time and resend
- Works well only under low load

### **Carrier Sense Multiple Access(CSMA)**

- Improve ALOHA by listening for activity before sending
- Collision can still occur because of delays

### Carrier Sense Multiple Access with Collision Detection(CSMA/CD)

· Reduce the cost of collision by detecting them and aborting (jam) the rest of the frame

For a wire of max length (time) D, we impose a minimum frame size that lasts for 2D seconds. This way everyone who collides knows that it happened. A node can't finish before a collision

### **CSMA** persistence

To avoid collision between nodes who queued up waiting for the current sender to finish For N queued senders, each one sends with next with probability  $\frac{1}{N}$ 

## **Binary Exponential Backoff (BEB)**

Estimates the probability for CSMA persistence

- Double interval for each successive collision
- Quickly gets large enough to work and very efficient in practice

1st collision : wait 0-1 time frames 2nd collision : wait 0-3 time frames 3rd collision : wait 0-7 time frames

...

#### **Ethernet**

- Multiple access with 1-persistent CSMA/CD with BEB (Modern ethernet based on switches)
- Has two addresses for destination and source, CRC-32 for error detection (no ARQ)
- Physical layer preamble to identify start of frame

#### Packet from Network layer (IP) Destination Source Check-Preamble Pad Type Data address address sum Bytes 8 6 6 2 0-1500 0-46 4


## **Wireless Multiple Access**

- · Nodes share a single link
- Nodes can't carrier sense (different areas of coverage)
- Nodes can't hear while sending (can't collision detect)

=> WiFi can't use CSMA/CD


### **Different Coverage Areas**

Signal is bradcast and received nearby where SNR is sufficient

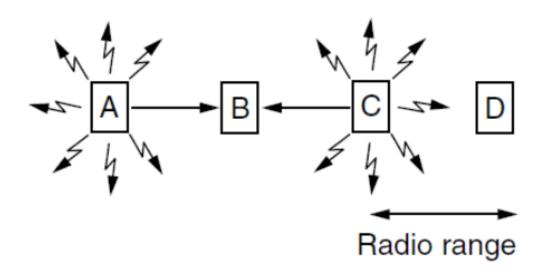


#### **Hidden terminals**

A and C are hidden terminals: Can't hear each other but can collide at B

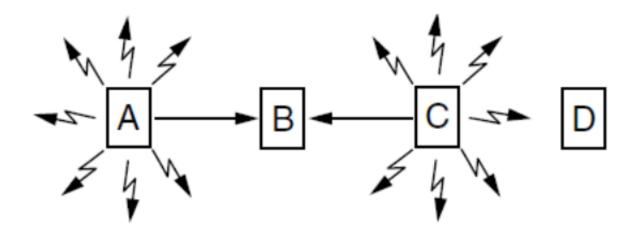

#### **Exposed terminals**

B and C can hear each other but don't collide at A and D

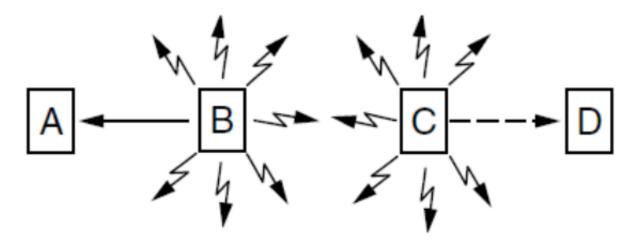

## Multiple Access with Collision Avoidance (MACA)

Use short handshake instead of CSMA:

- 1. Senter node transmits a RTS with frame length
- 2. Receiver node replies with a CTS with frame length
- 3. Sender transmits the frame while other nodes hearing the CTS remain silent

Collision are possible but less likely


#### 802.11

- Clients get connectivity from an Access Point (AP)
- OFDM modulation
- · Different amplitudes/phases for varying SNRs
- Multiple access uses CSMA/CA; RTS/CTS optional
- ARQ
- Three addresses (due to AP)
- Errors detected with a CRC-32
- Many other features (encryption, power save)

#### Packet from Network layer (IP) Frame Address 1 Address 2 Check Duration Address 3 Sequence Data (recipient) (transmitter) sequence 2 6 6 6 2 0-2312 **Bytes**

#### 802.11 CSMA/CA:

Sender avoids collision by inserting a small random gap (backoff) before sending

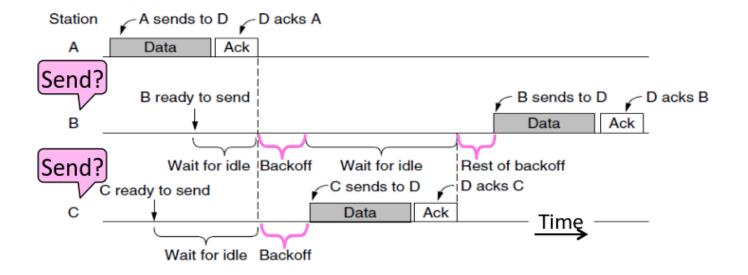

## **Contention-Free Multiple Access**

CSMA is not good enough under high load

### **Turn-taking Multiple Access Protocols**

Define an order in which nodes get a chance to send (or bypass if no traffic) Can be ordered with a token ring (queue)


- Fixed overhead
- Predictable service
- More complex
- · Higher overhead at low load

### **LAN Switches**

Link <=> Link

To replace Multiple Access

Uses addresses to connect input port to the right output port

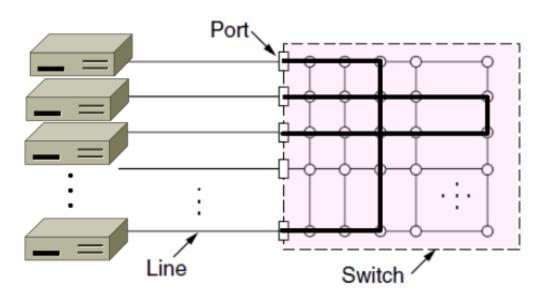

It uses buffers to connect multiple inputs to one outputs (queue)

### **Switch forwarding**

To find the right output port, the switch must know the addresses.

It creates a port address table as follows:

- 1. To fill the table, it looks at the source address of input frames
- 2. To forward, it sends to the port, or if not known, it broadcasts to all ports

#### Forwarding loops:

Switches collectively find a spanning tree to avoid loops. They then forward as normal but only on the spanning tree.

#### Rules:

- All switches run the same algorithm
- They start with no information
- · Operate in parallel and send messages
- Always search for the best solution

#### Outline:

- 1. Elect root node of the tree (switch with lowest address)
- 2. Grow tree as shortest distance from the root (use lowest address to break distance ties)
- 3. Turn off ports if they are not on the spanning tree

#### In practice:

- 1. Each switch initially believes it is the root
- 2. Each switch sends periodic updates to neighbours with its address, address of root and distance to root

## **Chapter 4: Network layer**

## **Acronyms**

Acronym	Meaning	Description
Pan	Personal Area Network	ex : Bluetooth
Lan	Local Area Network	ex : WiFi, Ethernet

Man	Metropolitan Area Network	ex : Cable, DSL
Wan	Wide Area Network	Large ISP
NRZ	Non Return to Zero	
SNR	Signal to Noise Ratio	S/N
CRC	Cyclic redundancy check	
LDPC	Low Density Parity Check	State of the art today to correct errors in messages
ARQ	Automatic Repeat reQuest	
TDM	Time Division Multiplexing	
FDM	Frequency Division Multiplexing	
MAC	Multiple Access Control or Medium Access Control	
CSMA	Carrier Sense Multiple Access	
CSMA/CD	Carrier Sense Multiple Access with Collision Detection	
BEB	Binary Exponential Backoff	
MACA	Multiple Access with Collision Avoidance	
RTS	Request To Send	
CTS	Clear To Send	
AP	Access Point	See 802.11