# Noritake itron

# VACUUM FLUORESCENT DISPLAY MODULE SPECIFICATION

MODEL

: CU20045SCPB-U1J

SPECIFICATION NO. : DS-591-0000-01

DATE OF ISSUE: Sep. 20, 1996

R E V I S I O N : Nov. 25, 1996

Feb. 14, 1997

# 1. General Description

#### 1.1 Application:

Readout of computer, micro-computer, communication terminal and automated instruments.

#### 1.2 Construction:

Single board display module consists of 80 characters(4 x 20) VFD, gate array which has character generator ROM and RAM, DC/DC converter.

# 1.3 Scope

Interface level is TTL-8/4 bit parallel and the module can be connected to the CPU bus directly. +5V single power supply is required.

# 2. Absolute Maximum Ratings

Parameter	Symbol	Min.	Тур.	Мах.	Unit	Condition
Power Supply Voltage	Vcc	0		5.5	VDC	
Logic Input Voltage	Vi	0		Vcc	VDC	<u>—</u>

#### 3. Electrical Ratings

Conditions:Ta=25°C

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition	
Logic Input Voltage	"H"	VIH	2.2		Vcc	VDC	VCC = 5.0V
Logic input voitage	"L"	VIL	0		0.6	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	0.00
Power supply Voltag	Vcc	4.75	5.00	5.25	VDC		

#### 4. Electrical Characteristics

Conditions: Ta =25°C, VCC=5.0V

Parameter	<del></del>	Symbol	Min.	Тур.	Max.	Unit	Condition
Lania Outro to Valtagra	"H"	Vон	VCC-0.5		_	VDC	ЮН = -1.60mA
Logic Output Voltage	"L"	Vol	_	_	0.4	VDC	IOL = 1.60  mA
Power Supply Currer	ICC 1	_	275	350	mΑ	Display ON	
Power Supply Currer	ICC 2	-	5	10	mΑ	Display OFF	

Note: ICC shows the current, when all dots are turned on.

Slow rise up power supply may cause a failure of Power-on reset which is explained in "8.2 Power-on reset". Less than 50ms power rising time is recommended.

ICC might be anticipated twice as usual at power on rush.

#### CU20045SCPB-U1J

#### 5. Optical Characteristics

Number of characters : 80 (4 lines x 20 chars)

Matrix format : 5 x 7 dot

Display area : 70.8 x 20.9mm (X x Y) Character size : 2.4 x 4.7 mm (X x Y)

Character pitch : 3.6 mm Line pitch : 5.4 mm

Dot size :  $0.4 \times 0.5 \text{mm} (X \times Y)$ Dot pitch :  $0.5 \times 0.7 \text{mm} (X \times Y)$ Luminance :  $350 \text{ cd/m}^2 (100 \text{fL}) \text{ Min.}$ 

Color of illumination : Blue Green

# 6. Environmental Conditions

Operating temperature :  $-20 \text{ to } +70 ^{\circ}\text{C}$ Storage temperature :  $-40 \text{ to } +85 ^{\circ}\text{C}$ 

Operating humidity : 20 to 80 % RH (Non condensation)

Vibration(Non operation): 10 to 55 to 10 Hz(Frequency),

1.0 mm(Total Amplitude)

30 Min.(Duration) X,Y,Z each direction

Shock (Non operation): 539 m/S<sup>2</sup>, 10mS

# 7. Functional Descriptions

# 7.1 Instruction table

Instruction	CODE								Cycle Description							
Instruction	RS	R/W	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0	Time	Description				
Display clear	0	0	0	0	0	0	0	0	0	1	1.8 ms Max.	Clears all display and sets DD RAM address 0 in the address counter.				
Cursor home	0	0	0	0	0	0	0	0	1	*	1 <sub>*</sub> tCYC	Sets DD RAM address 0 in the address counter. Also returns the display being shifted to the original position. DD RAM contents remain unchanged.				
Entry mode set	0	0	0	0	0	0	0	1	I/D	S	1*tCYC	Sets the cursor direction and specifies display shift. These operations are performed during writing/reading data.				
Display ON/OFF control	0	0	0	0	0	0	1	D	*	В	1*tCYC	Sets all display ON/OFF(D), cursor blink of character position (B).				
Cursor or display shift	0	0	0	0	0	1	S/C	R/L	*	*	1*tCYC	Shifts display or cursor, keeping DD RAM contents.				
Function set	0	0	0	0	1	IF	*	*	*	*	1*tCYC	Sets data length (IF).				
Bright- ness control	1	0	*	*	*	*	*	*	BR1	BRO	1*tCYC	Accepts 1 byte data of just after "Function set" as brightness control data.				

# CU20045SCPB-U1J

Instruction					CODE		Time	Description	
Instruction	RS	R/W	DB7	DB6	DB5 DB4 D	B3 DB2 DB1 DB0	Time	Description	
CG RAM address setting	0	0	0	1		ACG	1*tCYC	Sets the CG RAM address.	
DD RAM address setting	0	0	1		Al	OD	1*tCYC	Sets the DD RAM address.	
Busy flag & address reading	0	1	BF		. А	oc ,	1*tCYC	Reads busy flag (BF) and address counter.	
Data writing to CG or DD RAM	1	0			Data wri	ting	1*tCYC	Writes data into CG RAM or DD RAM.	
Data read- ing from CG or DD RAM	1	1			Data rea	ding	1*tCYC	Reads data from CG RAM or DD RAM.	
	I/D = 1: Increment I/D = 0: Decrement S = 1: Display shift enabled S = 0: Cursor shift enabled S/C = 1: Display shift S/C = 0: Cursor move R/L = 1: Shift to the right R/L = 0: Shift to the left BR1,BR0 =  00: 100% 01: 75% 10: 50% 11: 25%							DD RAM: Display Data RAM CG RAM: Character Generator RAM ACG: CG RAM address ADD: DD RAM address ACC: Address Counter	

# Note:

\* : don't care

tCYC : tCYC is read/write cycle (Min666ns) of HOST SYSTEM.

# 7.2 Display Clear

DB7 DB6 DB5 DB4 DB3 DB2 DB1 DB0

0 0 0 0 0 0 0 1 01H

RS=0

This instruction

- 1. Fills all locations in the display data (DD) RAM with 20H(Blank character).
- 2. Clears the contents of the address counter to 0H.
- 3. Sets the display for zero character shift.
- 4. Sets the address counter to point to the DD RAM.
- 5. If the cursor is displayed, moves the cursor to the left most character in the top line (line 1).
- 6. Sets the address counter to increment on each access of DD RAM or CG RAM.

# 7.3 Cursor Home

DB7 DB6 DB5 DB4 DB3 DB2 DB1 DB0


0 0 0 0 0 1 \* 02H to 03H

RS=0 \*: don't care

This instruction

- 1. Clears the contents of the address counter to 0H.
- 2. Sets the address counter to point to the DDRAM.
- 3. Sets the display for zero character shift.
- 4. If the cursor is displayed, moves the left most character in the top line (line 1).

# 7.4 Entry Mode Set



The I/D bit selects the way in which the contents of the address counter are modified after every access to DDRAM or CGRAM.

I/D=1: The address counter is incremented.

I/D=0: The address counter is decremented.

The S bit enables display shift, instead of cursor shift, after each write or read to the DDRAM.

S=1: Display shift enabled.

S=0: Cursor shift enabled.


The direction in which the display is shifted is opposite in sense to that of the cursor. For example if S=0 and I/D=1, the cursor would shift one character to the right after a CPU writes to DD RAM. However if S=1 and I/D=1, the display would shift one character to the left and the cursor would maintain its position on the panel.

The cursor will already be shifted in the direction selected by I/D during reads of the DD RAM, irrespective of the value of S. Similarly reading and writing the CG RAM always shifts the cursor. Also both lines are shifted simultaneously.

Cursor move and Display shift by the "Entry Mode Set"

I/D	S	After writing DD RAM data	After reading DD RAM data
0	0	The cursor moves one character to the left.	The cursor moves one character to the left.
1	0	The cursor moves one character to the right.	The cursor moves one character to the right.
0	1	The display shifts one character to the right without cursor's move.	The cursor moves one character to the left.
1	1	The display shifts one character to the left without cursor's move.	The cursor moves one character to the right.

# 7.5 Display ON/OFF



This instruction controls various features of the display.

The D bit turns the entire display on or off.

D=1: Display on D=0: Display off


Note: When display is turned off, power converter also inhibited and reduce a power consumption.

The B bit enables blinking of the character the cursor coincides with.

B=1: Blinking on B=0: Blinking off

Blinking is achieved by alternating between a normal and all on display of a character. The cursor blinks with a frequency of about 1.1 Hz and DUTY 50%.

# 7.6 Cursor/Display Shift



0	0	0	1	S/C	R/L	*	*	10H to 1FH
	RS=	0						*: don't care

This instruction shifts the display and/or moves the cursor, on character to the left or right, without reading nor writing DD RAM.

The S/C bit selects movement of the cursor or movement of both the cursor and the display.

S/C=1: Shift both cursor and display.

S/C=0: Shift cursor only.

The R/L bit selects leftward or rightward movement of the display and/or cursor.

R/L=1: Shift one character right.

R/L=0: Shift one character left.

Cursor move and Display shift by the "Cursor/Display Shift"


S/C	R/L	Cursor shift	Display shift
0	0	Move one character to the left	No shift
0	1	Move one character to the right	No shift
1	0	Shift one character to left with display	Shift one character to the left
1	1	Shift one character to right with display	Shift one character to the right

#### 7.7 Function Set

This command sets width of data bus line by itself, and sets screen brightness by following one byte data.

#### 7.7.1 Function Set Command


DB7 DB6 DB5 DB4 DB3 DB2 DB1 DB0



This instruction initializes the system, and must be the first instruction executed after power-on. The IF bit selects between an 8-bit or a 4-bit bus width interface.

IF=1: 8-bit CPU interface using DB7 to DB0 IF=0: 4-bit CPU interface using DB7 to DB4


# 7.7.2 Brightness Control



One byte data (RS=1) which follows the "Function Set Command" is considered as brightness data. When a command (RS=0) is written after the "Function Set Command", the brightness control function is not initiated. Screen brightness is as follows;

BR1	BR0	Brightness					
0	0	100	% ( Default )				
0	1	75	%				
1	0	50	%				
1	1	25	%				

# 7.8 Set CG RAM Address



0, 1	ACG	40H to 7FH
RS=0		


#### This instruction

- I. Loads a new 6-bit address into the address counter.
- 2. Sets the address counter to address CG RAM.

Once "Set CG RAM Address" has been executed, the contents of the address counter will be automatically modified after every access of CG RAM, as determined by the "7.4 Entry Mode Set" instruction. The active width of the address counter, when it is addressing CG RAM, is 6-bits so the counter will wrap around to 00H from 3FH if more than 64 bytes of data are written to CG RAM.

#### 7.9 Set DD RAM Address

DB7 DB6 DB5 DB4 DB3 DB2 DB1 DB0



80H to 93H (1 line), A0H to B3H (2 line), C0H to D3H (3 line), E0H to F3H (4 line)

# This instruction

- 1. Loads a new 7-bit address into the address counter.
- 2. Sets the address counter to point to the DD RAM.

Once the "Set DD RAM Address" instruction has been executed, the contents of the address counter will be automatically modified after each access of DD RAM, as selected by the "7.4 Entry Mode Set" instruction.

# Valid DD RAM Address Ranges

	Number of Characters	ADR
1st line	20	00H to 13H
2nd line	20	20H to 33H
3rd line	20	40H to 53H
4th line	20	60H to 73H

#### 7.10 Write Data

DB7 DB6 DB5 DB4 DB3 DB2 DB1 DB0


DATA WRITE

OOH to FFH

RS=1

This instruction writes the data in DB7 to DB0 into either the CG RAM or the DD RAM. The RAM space (CG or DD), and the address in that space, that is accessed depends on whether a "Set CG RAM Address" or a "Set DD RAM Address" instruction was last executed, and on the parameters of that instruction. The contents of the address counter will be automatically modified after each "Write Data", as determined by the"7.4 Entry Mode Set". When data is written to the CG RAM, the DB7, DB6 and DB5 bits are not displayed as characters.

# 7.11 Read Data



This instruction reads data from either CG RAM or DD RAM, depending on the type of "Set RAM Address" instructions last sent. The address in that space depends on the "Set RAM Address" instructions parameters. Immediately before executing "Read Data", "Set CG RAM Address" or "Set DD RAM Address" must be executed. The contents of the address counter are modified after each "Read Data". as determined by the "7.4 Entry Mode Set".

# 7.12 Read Busy Flag/Address Counter

DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0
BF				ACC			
	RS=	<u> </u>					

Reading the instruction register yields the current value of the address counter and the busy flag. This instruction must be executed prior to any other instructions. ACC, the address counter value, will point to a location in either CG RAM or DD RAM, depending on the type of "Set RAM Address" instruction last sent.

In "Busy Flag Check" immediately after executing "Write Data" instruction, a valid address counter value can be ready as soon as BF goes low. The BF bit shows the status of the busy flag.

BF = 1: busy.

BF = 0: ready for next instruction, command receivable.

#### 8 Other features

#### 8.1 CG RAM

The display module equips CG RAM as user's are 320 bit =  $(5x8 \text{ bit /char}) \times 8$  chars of store user definable character fonts. The character fonts consists of  $5 \times 7$  dots. The number  $1 \sim 35$  corresponds to character fonts.

		CG	RAM	addr	ess		CG RAM data (character pattern)							
Character code	DB5	DB4	DB3	DB2	DB1	DB0	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0
	0	0	0	0	0	0	*	*	*	1	2	3	4	5
	0	0	0	0	0	1	*	*	*	6	7	8	9	10
	0	0	0	0	1	0	*	*	*	11	12	13	14	15
00H	0	0	0	0	1	1	*	*	*	16	17	18	19	20
or (08H)	0	0	0	1	0	0	*	*	*	21	22	23	24	25
	0	0	0	1	0	1	*	*	*	26	27	28	29	30
	0	0	0	1	1	0	*	*	*	31	32	33	34	35
	0	0	0	1	1	1	*	*	*	*	0	0	0	0
	0	0	1	0	0	0	*	*	*	1	2	3	4	5
	0	0	1	0	0	1	*	*	*	6	7	8	9	10
	0	0	1	0	1	0	*	*	*	11	12	13	14	15
01H	0	0	1	0	1	1	*	*	*	16	17	18	19	20
or (09H)	0	0	1	1	0	0	*	*	*	21	22	23	24	25
(03/1)	0	0	1	1	0	1	*	*	*	26	27	28	29	30
	0	0	1	1	1	0	*	*	*	31	32	33	34	35
	0	0	1	1	1	1	*	*	*	*	0	0	0	0

REMARKS; "\*": Don't care

"0": Turned off

"1": Turned on.

# Dot assignment

1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18	19	20
21	22	23	24	25
26	27	28	29	30
31	32	33	34	35

#### 8.2 Power-on reset

Internal status of the module is initialized, when controller detect rising power supply up. The status are as follows;

1. Display clear

Fills the DD RAM with 20Hex (Space code).

During executing of "Display Clear" (Max 1.8mS), the busy flag(BF) is "1".

- 2. Sets the address counter to 0H.
  Sets the address counter to point the DD RAM.
- 3. Display ON/OFF

D=0:

Display OFF

B=0:

Blink OFF

4. Entry Mode Set

I/D = 1:

Increment(+1)

S=0:

No display shift

5. Function Set

IF=1:

8-bit interface

6. Brightness Control

BR0=BR1=0:100%

Remarks

There is a possibility that reset doesn't work by slow start power supply causes. Therefore the initializing by commands needs.

#### 8.3 CPU interface

The display module is capable to communicate some different type of bus systems such as i80 or M68 ,8-bit or 4-bit data.

#### 8.3.1 Select CPU

The module is able to connected to bus of i80 type or M68 type CPU, by setting JP4 jumper. Refer to "8.5 Jumper" for detail.

#### 8.3.2 4-Bit CPU interface

If 4-bit interface is used, the 8-bit instruction are written nibble by nibble: the high-order nibble being written first, followed by low-order nibble. It is not necessary to check the busy flag between writing separate nibbles of individual instructions.

See "7.7.1 Function Set Command" for more information.

#### 8.4 Test Mode

Self test functions built into the display module. The test mode is initiated by connecting 2 and 3 pin of 3pin connector(CN2) and power up.

In the test mode, checker patterns are displayed on all character position.

In the future there is a possibility to remove a 3 pin connector (CN2).

#### 8.5 Jumper


Some jumper are prepared on the PCB board, to set operating mode of the display module. A soldering iron is required to short jumper.

No 2 and No 3 of the jumper 'JP3' is used to reset of module.

You can reset the module by shorting No 2 and No 3 of the jumper 'JP3' for some interval which is longer than 10 us.

The following figure shows the location of each jumper.

#### Location

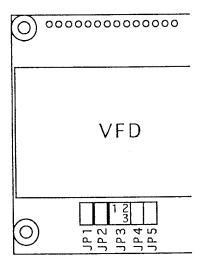

The following table shows the function of No 1 and No 2 of JP3, JP4. CU20045SCPB-U1J is no reset inputs from third hole of 14 through holes and M68 CPU bus interface. Reset input signal is active when it is low.

Table of No 1 and No 2 of JP3 setting

No1 and No 2 of JP3	No3 of CN1
open	NC
short	RESET

NC:no connection

# Table of JP4 setting

JP4	CPU bus mode	Control Signals
open	M68 type	E,R/W
short	i80 type	WR,RD

JP1, JP2 and JP5 is factory use only.

# 9 Character Font


₩Q1-0		0 0 0 0	0 0 0 1	0 0 1 0 2	0 0 1 1	0 1 0 0	0 1 0 1 5	0 1 1 0	O 1 1 1 7	1 0 0 0	1 0 0 1 9	1 0 1 0 A	1 0 1 1	1 1 0 0	1 O 1	1 1 0	1 1 1 1
							لست	·. ]			1	\					
0000	0					:::::::::::::::::::::::::::::::::::::::	:::		<u>;</u> :::-	<u>;::</u> ;				-:::	····		
0001	1				# #	::::	:::::	:::	-:::		::::	:::	;; <sup>;</sup>	::::	: <sub>1</sub>	·:::i	
0010	2			11	·"; .:		:::::: :::::::::::::::::::::::::::::::	l::::	j.···.	:::;		;;	.:	:: <u>;</u> :	.:: <b>'</b>	::::	
0011	3				:	i	:::::	:	::::.	.::: <u>:</u>	::::	!	: <u>.</u> !	.:: .:	::::	:::	::::
0100	4			:::::	::	:		:::	†	::::		•		<u>:</u> .	::::	<u></u> :	::::
0101	5			:: .:		<u></u>	!	::::	1		::	::	;; <u> </u>	.:¦ .:		::::	1
0110	6			:::::	:::::	ļ	1	11	١.٫٠			::::	÷:::::::::::::::::::::::::::::::::::::		::::	ļ::::	::"" ::
0111	7			<u>;</u> ;	1			::::	1,:,1	::::		.;;	::::::	];;; <b>'</b>	-::;  -::;	::::	:::
1000	8			1	::::		::: <u>;</u>	ļ.··;	;::: <u>:</u>	:::	:	.:	·: ;		۱ <u>.</u> ۱	.;"	:::
1001	9			:	::		1.,.		·:.::	qi:	1	:::::	<u> </u>		111.	"	1:::
1010	Α		::  ::::	:4:	::		::		.:	\ i		::::		1:			
1011	В		:::		1 .		I.		:	:::		;# <u></u>		i		:: 	]:::
1100	С		.::.	;:	1	ļi				٠.		1::	:::	<u>                                     </u>	" <u>"</u>	:::	
1101	D		-		1			1::	] :	:::		.::.	  :::	\···	:	i	;
1110	Е		1:1	::						:::		:::	1::	::::			
1111	F		.::		:	:   ; '''				. ::::		:::	٠ <u>.</u> .	:			

Font: G57131.cg


Note: Font number 00 $\sim$ 07Hex (08 $\sim$ 0FHex) is UDF.

#### 10. Timing


# 10.1 CPU bus write timing (i80 type)

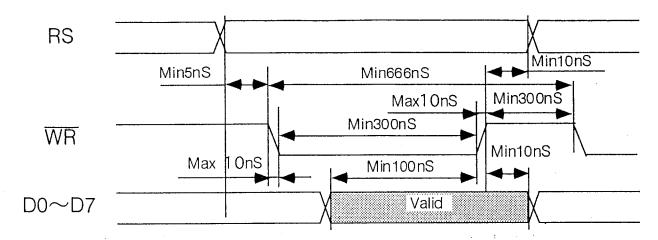


#### 10.2 CPU bus read timing (i80 type)

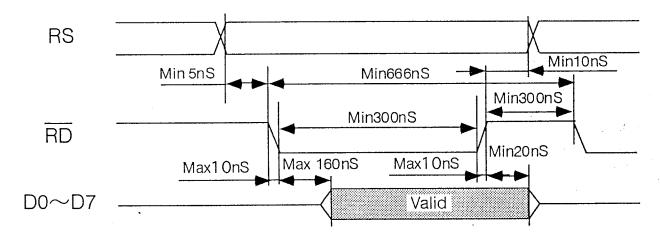

# 10.3 CPU bus write timing (M68 type)

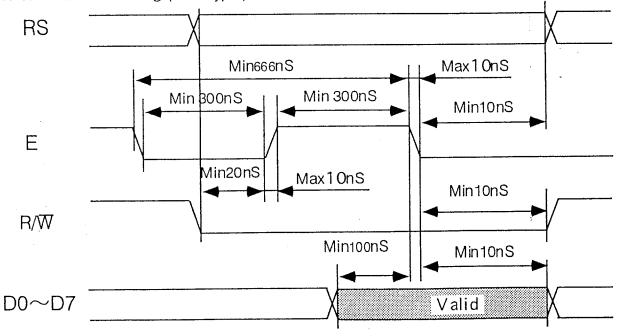

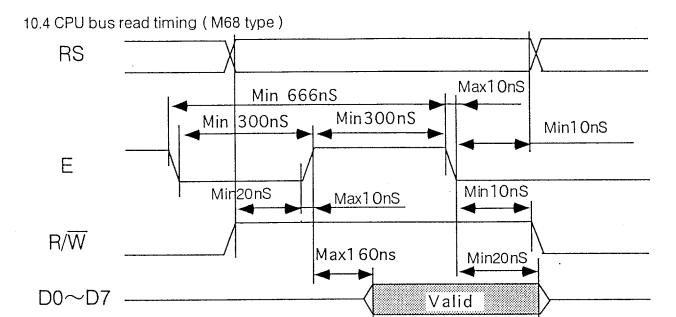

#### 11. Connector Pin assignment

# 11.1 14pin Connector

Fourteen (14) of through holes(CN1) are prepared for power supply and data communications.

A connector or pins may be able to soldered to the holes.

No.	Terminal	No.	Terminal		
1	GND	8	DB1		
2	Vcc	9	DB2		
3	≫NC	10	DB3 <sub>.</sub>		
4	RS	11	DB4		
5	R/W (WR)	12	DB5		
6	E (RD)	13	DB6		
7	DB0	14	DB7		


NC: no connection

Location and dimensions ( Diameter of holes is 1.0mm. )

% The third through hole is for reset input when No 1 and No 2 of JP3 are short.

# 11.2 3pin Connector

A tree (3) pin connector on the board is factory use only, and may be removed in future.

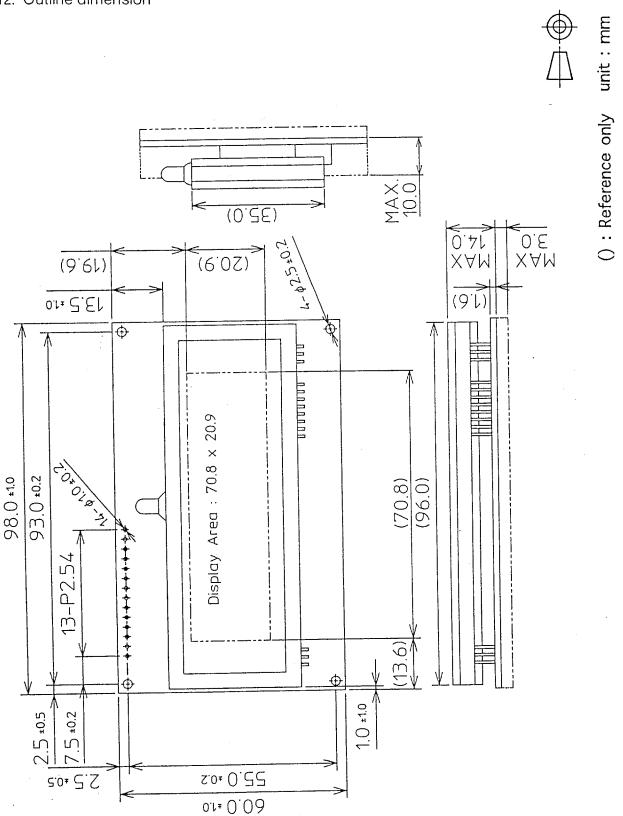

#### IMPORTANT PRECAUTIONS

- \* All VFD Modules contain MOS LSI. Anti-Static handling procedures are always required. Tools required for assembly, such as soldering irons, must be properly grounded.
- \* VF Display consists of Soda-lime glass. Heavy shock more than 100G, thermal shock greater than 10°C/minute, direct hit with hard material to the glass surface --especially to the EXHAUST PIPE -- may CRACK the glass.
- \* Do not PUSH the display strongly. At mounting to the system frame, slight gap between display glass face and front panel is necessary to avoid a contact failure of lead pins of display. Twist or warp mounting will make a glass CRACK around the lead pin of display.
- \* Neither DATA CONNECTOR or POWER CONNECTOR should be connected or disconnected while power is applied. As is often the case with most subsystems, caution should be exercised in selectively disconnecting power within a computer based system. The modules receive high logic on strobe lines as random signals on all data ports. Removal of primary power with logic signals applied may damage input circuitry.
- \* Stress more than specification listed under the Absolute Maximum Ratings may cause PERMANENT DAMAGE of the modules.
- \* +5 volts power line must be regulated completely since all control logics depend on this line. Do not apply slow-start power. Provide sufficient output current power source to avoid trouble of RUSH CURRENT at power on. (At least output current of double figure of Icc, listed on the specification of each module, is required.)
- \* Data cable length between module and host system is recommended within 300 mm to be free from a miss-operation caused by noise.
- \* Do not place the module on the conductive plate just after the power off Due to big capacitors on the module, more than 1 min. of discharging time is required to avoid the failure caused by shorting of power line.
- \* 2 hours pre-running with the test mode operation may help the stability of the brightness of the VFD when power was not applied more than 2 months.
- \* Steady repeating of a fixed (static) message displaying, longer than 5 hours in a day may cause the phosphor burn-out problem.