# SMALL SAMPLE ISOTOPE MODULE USER'S MANUAL



#### **TABLE OF CONTENTS**


INTRODUCTION	3
PRINCIPLES OF OPERATION	
PRE-INSTALLATION REQUIREMENTS	
SSIM HARDWARE SETUP & INSTALLATION	9
SECTION 1: SSIM - CRDS ANALYZER SETUP	10
SECTION 2: SSIM-16 PORT DISTRIBUTION MANIFOLD- CRDS	<b>ANALYZER</b>
SETUP	14
OPERATION AND SOFTWARE - TAKING A MEASUREMENT	18
SECTION 1: SSIM - CRDS ANALYZER SETUP	25
SECTION 2: SSIM-16 PORT DISTRIBUTION MANIFOLD-CRDS	ANALYZER
SETUP	30
USE-CASE RECOMMENDATIONS AND TROUBLESHOOTING	36

#### INTRODUCTION

The Small Sample Isotope Module (SSIM) is an accessory designed to work with the Picarro G2101-i Isotopic CO<sub>2</sub> analyzers, G2132-i isotopic CH<sub>4</sub> analyzers, and the G2201-i CO<sub>2</sub> & CH<sub>4</sub> analyzers. When sample volumes are too small to be measured in a traditional "continuous flow" mode by the Picarro analyzer (generally requiring >100ml), the SSIM is an essential analyzer add-on, enabling such small-sample analysis. Combined, the analyzer and SSIM are capable of measuring very small (<20ml) gas samples and performing  $\delta$ 13C-CO2 /  $\delta$ 13C-CH4 and concentration measurements (CO<sub>2</sub>, CH<sub>4</sub>, H<sub>2</sub>O concentrations of the gas are reported). The SSIM automatically prepares and introduces the gas sample(s) to the Picarro analyzer and reports the results, performing the requested number of replicate analyses of each sample. The SSIM can optionally be paired with the Picarro 16-Port Distribution Manifold to enable it to automatically measure multiple samples (up to eight, not including the gas standard).

#### PRINCIPLES OF OPERATION


Internally, the SSIM contains various valves and a sample chamber. Prior to a measurement, the gas system is flushed with purge gas (CO<sub>2</sub> and CH<sub>4</sub> free "zero air") to remove traces of prior samples or atmospheric gas that would contaminate the measurement. Next, the purge gas is pumped out by an external vacuum pump bringing the tubing within the SSIM to a vacuum. At this point, user is prompted to manually open the sample container attached to the SSIM. Because the tubing in the SSIM is under vacuum, the sample expands (using ~20ml of sample) into sample chamber where it is then introduced to Picarro's analyzer. For small or high concentration samples, there is an option to dilute with zero air. The analyzer's measurement cavity is open and continuously drawing in sample from the sample chamber. With a chamber pressure sensor, it is possible to monitor the sample chamber pressure equilibrate with the cavity pressure as the analyzer takes in the sample. If the 16-Port Distribution Manifold is utilized, then the system performs the requested replicate measurements on each sample and then advances to the next sample inlet port on the 16-Port Distribution Manifold, continuing in this manner until all analyses are completed for each sample present. The SSIM can skip or repeat standard measurements in addition to sample measurements.

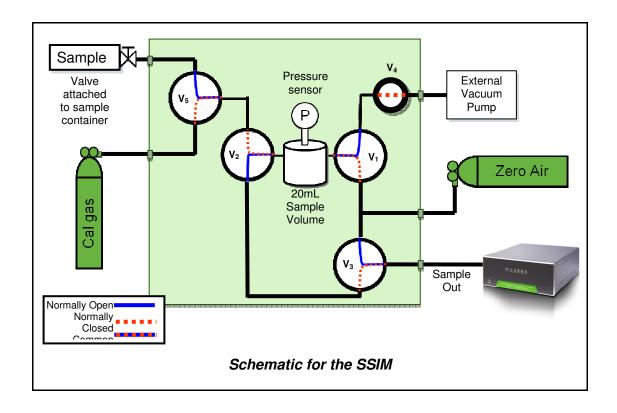

#### PRE-INSTALLATION REQUIREMENTS

Prior to setting up the SSIM, the user will need to complete the following steps:

- 1. A pressurized cylinder of dry, CO<sub>2</sub> and CH<sub>4</sub> free "zero air" complete with a pressure regulator so that gas can be supplied at ≥1 psi (0.07 bar) and <8 psi (~0.5 bar). It should have <1 ppm CO<sub>2</sub> and <5 ppb CH<sub>4</sub> and <10 ppm H<sub>2</sub>O. This is generally what "zero air" is specified to contain, for example,
- 2. Various lengths of 1/8" tubing (stainless steel recommended) with 1/8" Swagelok connections on each end.
- 3. A pressurized cylinder of calibrated CO<sub>2</sub>/CH<sub>4</sub> gas having a known concentration and known δ<sup>13</sup>C value, complete with a pressure regulator so that gas can be supplied at ≥1 psi (0.07 bar) and <8 psi (~0.5 bar). Picarro typically uses a pressure of 3 psi.
- 4. Sample container(s) (Mylar bags or fixed containers for example) which can be attached to the system via 1/8" Swagelok and which have manual valves so that they can be isolated from the system during purging. It is also possible to use an injection port if using a syringe.

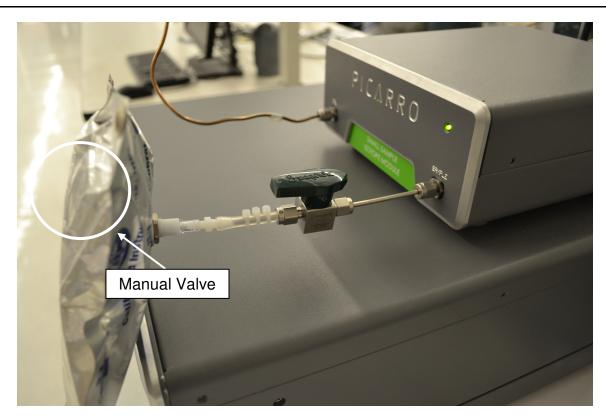

Example of a sample bag connected to the SSIM input via a manual valve


Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F. 1/11/2013

5



Note: these manual valves on the sample bags/containers are a requirement.

- 5. Appropriate wrenches (7/16, 1/2, 9/16, and 11/16 inches) for attachment of gas connections.
- 6. The basic gas analyzer setup (CRDS Analyzer & External Vacuum Pump) should be completed. The information can be found in the manual of the CRDS analyzer.

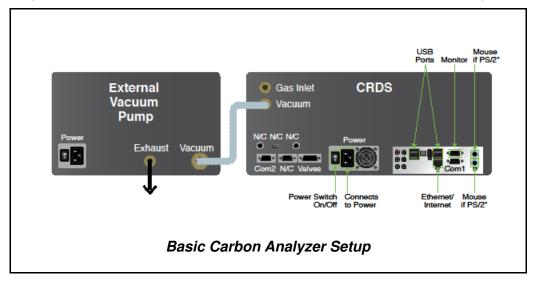


- 7. If using the 16-Port Distribution Manifold, find its manual to refer to while following the rest of the manual. The 16-Port Distribution Manifold is a great tool when the analysis of multiple samples is desired. It will be convenient to place the 16-Port Distribution Manifold directly on top of the CRDS when preparing to set up the CRDS with the 16-Port Distribution Manifold.
- 8. Prior to operation and especially if the SSIM is to be used on an analyzer that is also used with other valves for different applications (such as the 16-Port Distribution Manifold), the Valve Sequencer in the Picarro GUI needs to disabled (and then reenabled after use of the SSIM is finished if necessary). The user can do this through the "Setup Tool" in the "Utilities" folder in the desktop. Set the "Valve Sequencer MPV" to "OFF." Disabling and re-enabling the Valve Sequencer must occur while the software is stopped. Changes will be accepted upon restarting the software.





**Note:** If the Valve Sequencer is not properly disabled the following error will appear in the coordinator window. This is the same message the occurs if the 16-Port Distribution Manifold is not turned on or improperly connected.

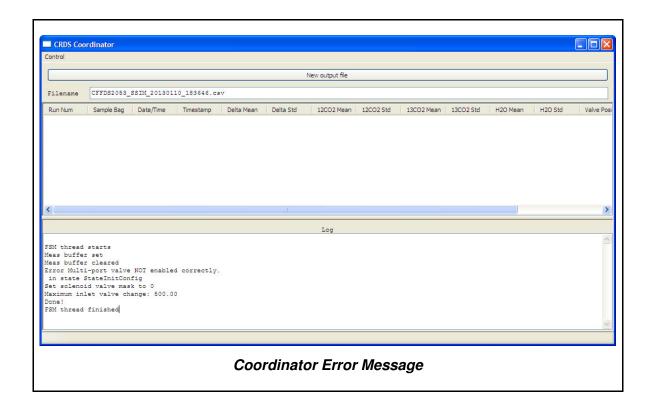

#### SSIM HARDWARE SETUP & INSTALLATION


Follow the steps described in this section to make the proper gas and electrical connections. All gas connections should be made with 1/8" Swagelok. There are two possible configurations – one with and one without the 16-Port Distribution Manifold. This section includes installation information for both of the configurations.

Based on one's configuration, either follow Section 1 (SSIM - Picarro Analyzer Setup) or Section 2 (SSIM - Picarro Analyzer - 16 Port Distribution Manifold Setup)



Note: It is imperative that all gas connections be free of leaks in order to achieve proper measurement of sample and ensure performance of the system. For more details on ensuring leak-free connections, see Troubleshooting section at the end of this document. All gas connections should be made with 1/8" Swagelok (stainless steel tubing recommended).

#### SECTION 1: SSIM – CRDS ANALYZER SETUP

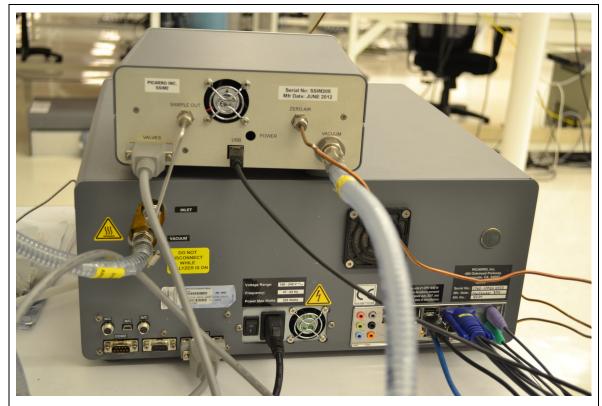

Properly Set Up SSIM with a G2101-i CRDS Instrument



Note: This module enables very precise measurements of isotopic ratios of small samples. For the best precision measurements, the analyzer should be allowed to run for at least 2 hrs prior to making the final connection to the analyzer (the analyzer must be stabilized).

If the SSIM is used alone with the analyzer, the required hardware setup steps are:

- 1. Before starting, make sure all the "Pre-installation Requirements" have been met.
- 2. Position SSIM near the analyzer's inlet connection to minimize the dead space of gas line connecting the SSIM "Sample outlet" (located on SSIM's rear side) and the analyzer gas "Inlet." Prepare tubing to connect (but DO NOT yet connect SSIM to analyzer) these connections. A short length of 1/8" stainless tubing having 1/8" Swagelok connections on both ends should be used. Picarro

#### PICΛRRO

supplies the tubing that attaches from the Sample outlet of SSIM to the analyzer's gas inlet.



Note: it is not necessary to shut down the analyzer during the installation of the SSIM, but it is imperative that gas pressures from the highpressure cylinders be regulated to ≥1 psi (0.07 bar) and <8 psi (~0.5 bar) prior to connecting the SSIM and the analyzer (typically 3 psi).

- 3. Connect the external vacuum pump to the "Vacuum" port on the SSIM with the supplied vacuum line. Connect the pump to line power.
- 4. Attach the purge gas supply (zero air as mentioned on Step 1 of Pre-Installation Requirements) to the back "Zero Air" connection of the SSIM and supply gas at optimally ≥1 psi (0.07 bar) and <8 psi (~0.5 bar) (typically 3 psi).
- 5. Attach the sample bag or container to the "Sample" port on the front of the SSIM using a very small length of 1/8" tubing.




Note: it is required that the sample containers have manual valves to isolate it during the purging of the SSIM.


- 6. Connect the SSIM to the analyzer as described in step 2.
- 7. Make the cable connections between the SSIM and the analyzer: "Valves" (back of the SSIM) - "Valves" (back of the CRDS). USB (back of the SSIM) - USB (back of the CRDS).
- 8. Turn on the external vacuum pump.
- 9. Locate the "Read Ext Sensor" program on the Desktop and double click it. A window will appear which will find the SSIM chamber pressure sensor at a port. Once the Read Ext Sensor program is on, SSIM Pressure can be monitored on the main GUI by selecting SSIM Pressure on the pull-down menu, allowing it to be logged in the UserData.dat files. It is acceptable to minimize the Select Read Ext Sensor window, but not closed. If at any time the software is restarted, the "Read Ext Sensor" program needs to be closed and restarted.
- 10. It may be necessary to point the Read Ext Sensor to the Arduino driver. This can be accomplished via the path: C:\Instrument Install Software\arduino-0022\drivers

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F. 1/11/2013 Part Number: 40037

11

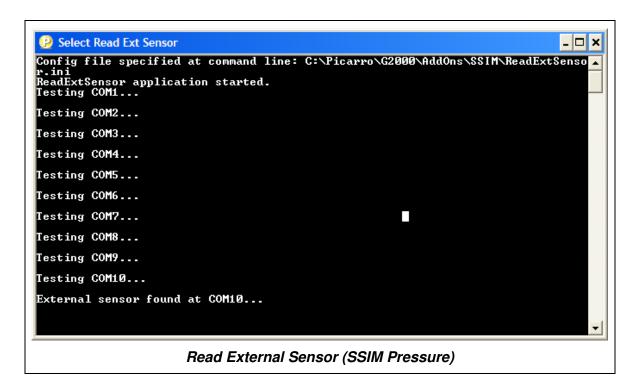

11. Upon installation of the Read Ext Sensor program, it may be necessary to point to the arduino drivers via the path C;\Instrument Install Software\arduino-0022\drivers\FTDI USB Drivers

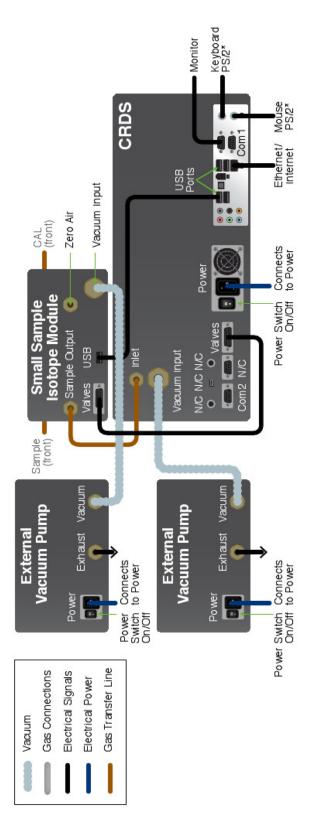

SSIM - CRDS ANALYZER SETUP

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013 Part Number: 40037

#### SECTION 2: SSIM-16 PORT DISTRIBUTION MANIFOLD- CRDS **ANALYZER SETUP**



Note: This module enables very precise measurements of isotopic ratios of small samples. For the best precision measurements, the analyzer should be allowed to run for at least 2 hrs prior to making the final connection to the analyzer (the analyzer must be stabilized).

If the SSIM is used with the 16-Port Distribution Manifold and the analyzer, the required hardware setup steps are the following.

1. Position the SSIM near the analyzer's inlet connection to minimize the volume of the gas line connecting the SSIM "Sample" outlet (located on SSIM's rear side) and the "Inlet" port back of the CRDS analyzer. Prepare tubing to connect (but DO NOT yet connect SSIM to analyzer) these connections. It should be a short length of 1/8" stainless tubing having 1/8" Swagelok connections on both ends.



Note: it is not necessary to shut down the analyzer during installation of the SSIM, but it is imperative that gas pressures from the high-pressure cylinders be regulated to ≥1 psi (0.07 bar) and <8 psi (~0.5 bar) prior to connecting the SSIM and analyzer (typically 3 psi).

The easiest way to make all connections requires that the 16-port distribution module be placed on top of CRDS analyzer first. Position the SSIM to the right side of the 16 port manifold, and make sure it faces the front of the CRDS analyzer. This will allow use of the supplied sample delivery tubing provided by Picarro.

- 2. Connect the external vacuum pump to the "Vacuum" port on the SSIM with the supplied vacuum line. Connect the pump to line power but do not switch on until just before sample analysis begins.
- 3. Connect line power, the hand pad, and the "COM MPV" connection on the Distribution Manifold to the CRDS Analyzer's "COM 2" port with the supplied cables.

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F. 1/11/2013 Part Number: 40037

14



Note: for full details about the 16-Port Distribution Manifold, see the User's Guide for this accessory.

- 4. Connect the "Sample" output from the rear of the Distribution Manifold to the "Sample" input located the front of the SSIM (Tubing provided).
- 5. Attach the zero air supply to the back "Zero Air" connection of the SSIM and supply gas at optimally ≥1 psi (0.07 bar) and <8 psi (~0.5 bar) (typically 3 psi).
- 6. Attach the calibration gas standard supply to the "Cal" input of the SSIM (front side of the SSIM). Supply gas at optimally ≥1 psi (0.07 bar) and <8 psi (~0.5 bar) (typically 3 psi).
- 7. Attach sample containers to only **EVEN-NUMBERED** "Sample" ports on the front of the Distribution Manifold using as minimal as possible length of 1/8" tubing



Note: all ODD-NUMBERED ports on the Distribution Manifold must be capped with 1/8" Swagelok caps. (These odd-numbered ports are used in the purge operation). IF SAMPLES ARE CONNECTED TO ODD-NUMBERED PORTS, THEY WILL BE EXHAUSTED THROUGH THE VACUUM PUMP AND WILL BE LOST!!! It is required that the sample containers have manual valves to isolate them during the SSIM's purge operation.



Note: Remember to tighten the caps already present on the oddnumbered ports.

- 8. Connect the SSIM to the analyzer as described in step 1. (Tubing supplied)
- Make the cable connections between the SSIM and the analyzer: Valves (back of the SSIM) - Valves (back of the CRDS). USB (back of the SSIM) - USB (back of the CRDS).
- 10. Turn on the external vacuum pump.
- 11. Turn on the 16-Port Distribution Manifold.




Note: if the valve in the Distribution Manifold is not recognized by the software, it may be necessary to re-start both the analyzer "GUI" software as well as the SSIM Coordinator program.

12. Locate the "Read Ext Sensor" program on the Desktop and double click it. A window will appear which will find the SSIM chamber pressure sensor at a port. Once the Read Ext Sensor program is on, SSIM Pressure can be monitored on the main GUI by selecting SSIM Pressure on the pull-down menu, allowing it to be logged in the UserData.dat files. It is acceptable to minimize the Select Read


Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013

Part Number: 40037

Ext Sensor window, but not closed. If at any time the software is restarted, the "Read Ext Sensor" program needs to be closed and restarted.

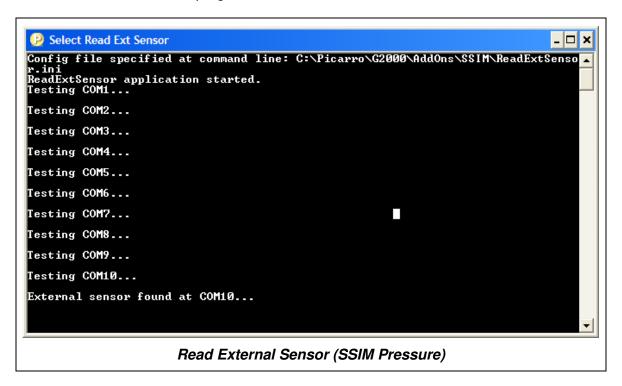

13. Upon installation of the Read Ext Sensor program, it may be necessary to point to the arduino drivers via the path C;\Instrument Install Software\arduino-0022\drivers\FTDI USB Drivers

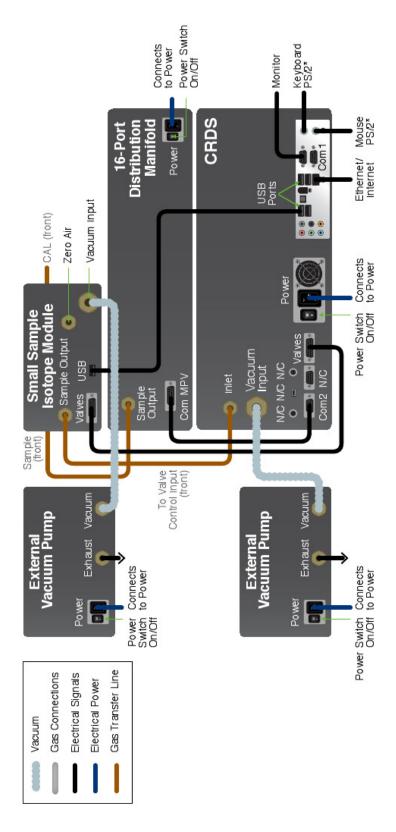

SSIM - CRDS ANALYZER - 16 PORT DISTRIBUTION MANIFOLD SETUP

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013 Part Number: 40037

## OPERATION AND SOFTWARE – TAKING A MEASUREMENT

Once all connections have been made, and samples have been attached to the system, it is appropriate to begin (if this has not been completed already) by installing the Coordinator program according to the steps below. The Installer is available on the provided USB Flash drive or it can be requested from the Picarro Support staff.

1. Double click on the file "setup\_SSIM.exe" in order to begin the installation process. The Picarro SSIM AddOn Installer window will appear. Click "Next."



2. Upon clicking "**Next**," you will be prompted to select a destination for the installed files. It is recommended that the user maintains the default entries. Click "**Next**."



- 3. Upon clicking "**Next**," you will be prompted to select the type of CRDS analyzer. The drop down menu includes several options:
  - G2101-i: Measures isotopic CO2
  - G2132-i: Measures isotopic CH4
  - G2201-i: Measures isotopic CO2 and CH4




4. After selecting the correct instrument model and clicking "Next," a window will appear asking for a folder in which to place the program's shortcuts. It is recommended that the user maintains the default entries.



Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013
Part Number: 40037

5. Upon clicking "Next," a window will appear that outlines the details of all previous selections that had been made during the installation process. Click "Install" after reviewing your choices, or click "Back" to make any changes.

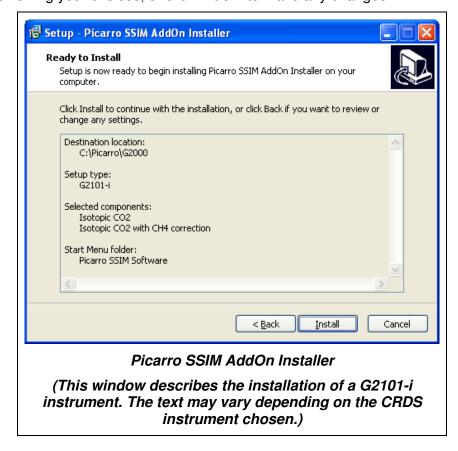

6. When the installation is complete, the following window will appear. Click "Finish" to end. Several icons will appear on the desktop following the completion of the installation.



It is recommended that the first step upon launching the Coordinator program be to perform the Ready Test by following the steps below. The Ready Test program will use a reference gas (CAL) to ensure the instrument is ready to make measurements.


1. Locate the "Coordinator Launcher" program on the desktop and double click it. A screen will appear, allowing the user to choose from various programs, including "Ready Test." Choose the Ready Test mode, then click "Launch" to continue.



Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013
Part Number: 40037

#### instrument being used, the drop down menu may vary)


2. Upon clicking "Launch," the "User Editable Parameters" screen will appear. The time indicated is the time after which the program will shut down if the appropriate instrumental conditions have not been met. It is not recommended to change the default time. Click "OK."

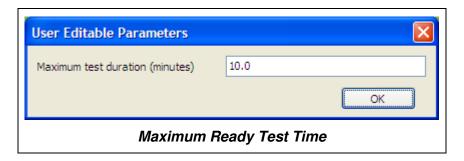

3. Upon clicking "OK," the coordinator window will appear. At any time during analysis, a new comma-delimited (CSV) file can be created and is saved to C:\Isotopedata. A file is automatically started each time the Coordinator is started. Various messages about the state of the system are displayed in the bottom window and prompts to the user are also noted there in capital letters. The upper portion of the coordinator window shows the various parameters measured during analysis, and is identical to the data that is saved in the CSV file.



Note: If the user ever desires to close the Coordinator, the red "X" can be used to simply close the window which will terminate the program. Allow the program to terminate itself (it could take nearly one minute depending on the state of the SSIM and analyzer). The Coordinator, if allowed to close itself properly, will return the SSIM and analyzer to a safe state.)

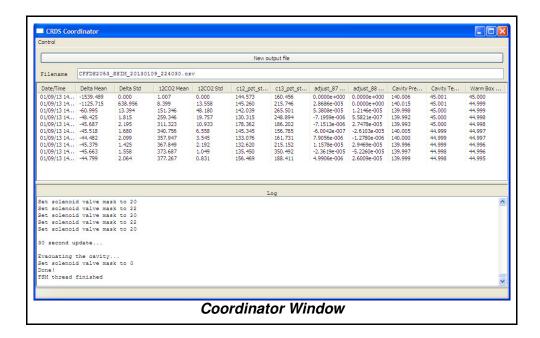

4. The Ready Test program will run until the analyzer has met the necessary conditions that determine stability or it will shut down after ten minutes. Every thirty seconds that it is running, an update will be printed.

Following the installation of the Coordinator program and running the Ready Test, it is time to begin analysis by launching the Coordinator program. Based on one's configuration, either see section 1 (SSIM - CRDS Analyzer Setup) or section 2 (SSIM - 16 port distribution manifold Setup - CRDS Analyzer).

#### SECTION 1: SSIM - CRDS ANALYZER SETUP

If using the SSIM alone with the analyzer, follow the steps below:


- 1. Locate the "Coordinator Launcher" program on the desktop and double click it. A screen will appear, allowing the user to choose "SSIM G2101-i," "SSIM G2101-i w/HP CH4," or "Ready Test." The available drop-down options depend on which instrument is being used. Choose the appropriate coordinator mode, and then click "Launch" to continue. In the "User Editable Parameters" window (next step) there will be an option to proclaim if the user is using the 16-Port Distribution Manifold (MPV) or not.
  - SSIM G2101-i: To make discrete iCO2 measurements.
  - **SSIM G2101-i** w/ **HP CH4:** To make discrete iCO2 measurements and (if the G2101-i is in the proper mode) high precision measurements of CH4.
  - Ready Test: To make a direct measurement of the reference gas while checking the stability of the analyzer.




2. Upon clicking "Launch," the "Select Reference Gas" screen will appear. Select the appropriate reference gas being used. Reference gasses can be added, removed, or changed by editing the ReferenceGases.ini file in C:\Picarro\G2000\AddOns\SSIM.

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013
Part Number: 40037

25

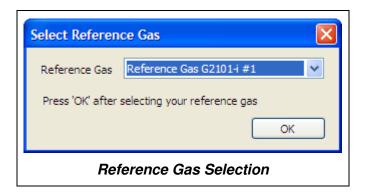

3. After clicking "OK," the "User Editable Parameters" screen will appear. Enter the appropriate values based on the description below. Once finished click "OK" to continue.

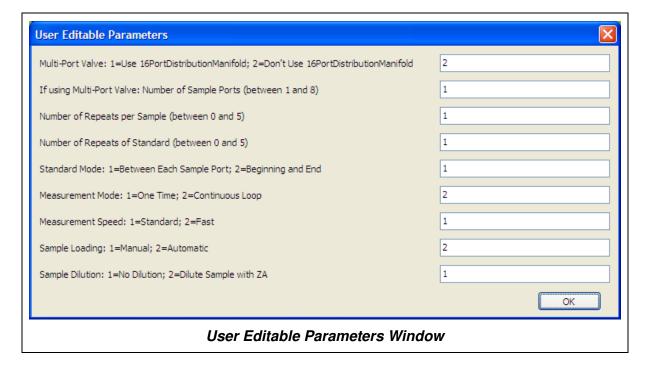

- Multi-Port Value: Specify whether using the 16 Port Distribution Manifold. Enter
   2 if "Don't Use 16-Port Distribution Manifold", or 1 if "Use 16-Port Distribution Manifold". Enter 2.
- If using Multi-Port Value: Number of Sample Ports: Specify the number of sample ports of the 16 Distribution Manifolds the user will be measuring from. The number of samples can range from 1 to 8. When not using the 16 Port Distribution Manifold, enter "1".
- **Number of Repeats per Sample:** Specify the number of times the user wants to measure each sample. The number can be as little as 0 and as great as 5.

- **Number of Repeats of Standard:** Specify the number of times the user wants to measure each standard. The number can be as little as 0 and as great as 5.
- Standard Mode: Enter 1 if wanting to measure standard between the measurement of each sample port, or 2 if wanting to measure the standard just in the beginning and at the end.
- Measurement Mode: Enter 1 if samples will be measured one time, or 2 if they
  will be measured in a loop (CRDS will continue to measure until the user ends
  the program).
- **Measurement Duration:** Enter 1 if wanting standard measurement (12 minutes per measurement), or 2 if wanting fast measurement (8 minutes per measurement). The times do not include the 3 minute purge and pump cycle to clean the SSIM and analyzer between measurements.
- Sample Loading: Enter 1 if loading each sample manually, or 2 if loading sample automatically. Manual mode should be used if the user plans to manually change sample bags while running the instrument. Automatic mode should be used if the user plans to walk away from the instrument while in use.
- **Sample Dilution:** Enter 1 if no dilution is to be used, or 2 if the injected sample is to be diluted with zero air.
- 4. The Coordinator window will appear. At any time during analysis, a new commadelimited (CSV) file can be created and is saved to **C:\Isotopedata.** A file is automatically started each time the Coordinator is started. Various messages about the state of the system are displayed in the bottom window and prompts to the user are also noted there in capital letters. The upper portion of the coordinator window shows the various parameters measured during analysis, and is identical to the data that is saved in the CSV file.




Note: If the user ever desires to close the Coordinator, the red "X" can be used to simply close the window which will terminate the program. Allow the program to terminate itself (it could take nearly one minute depending on the state of the SSIM and analyzer). The Coordinator, if allowed to close itself properly, will return the SSIM and analyzer to a safe state.)

5. After the SSIM has completed the purge and pump steps, it will prompt the user to attach a sample container with manual valve closed.




Important: make sure the manual valve (connected to the sample bag) is closed or the sample will be lost! The system pumps out the gas lines all the way up to the manual valve.

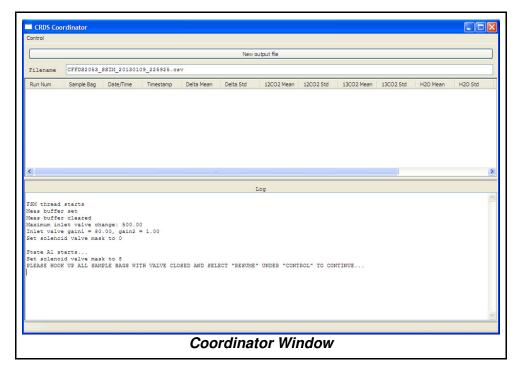

- 6. The SSIM will then initiate another pump and purge cycle. Once complete, coordinator will prompt user to open the sample bag manual valve and then "Resume" under the "Control" menu.
- 7. If the user is in the manual injection mode and not using the 16 Port Distribution Manifold, the coordinator will prompt the user to attach the sample bag with valves closed and then opened before each sample measurement.
- 8. The analysis of the sample will begin (duration of measurement is 12/8 minutes depending on the measurement option chosen standard or fast). The gas concentration and isotope ratio data will look similar to the figure below where a standard was measured, followed by a waiting period (where the analyzer simply measures zero air before the user prompts the software to begin the next measurement), then followed by a sample, and finally another measurement of the standard.



Note: it is normal to have alternating "Pressure High/Pressure Low" warnings in the GUI Status Log since the analyzer is constantly adjusting the pressure during the discontinuous gas flow that occurs as a result of the SSIM's purging and gas delivery steps. If these warnings persist and are accompanied by a persistent "System Alarm" indicator, this could indicate a problem and it is advisable to contact Picarro.

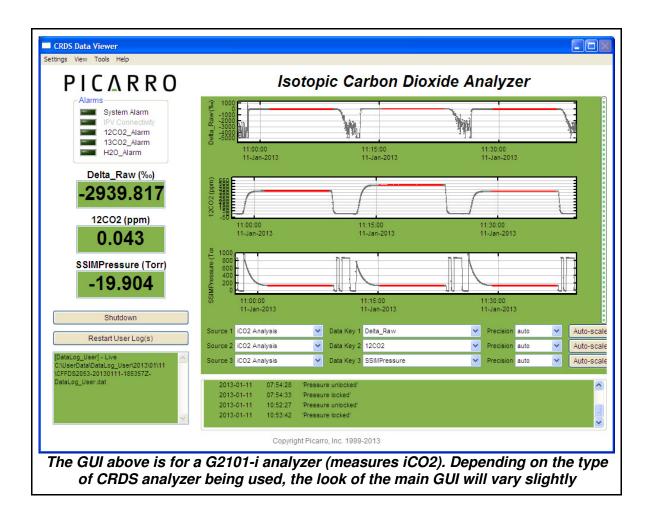

9. The Coordinator will continue to prompt the user for samples until the Coordinator program is terminated.

## SECTION 2: SSIM-16 PORT DISTRIBUTION MANIFOLD-CRDS ANALYZER SETUP


If the SSIM is used with the 16-Port Distribution Manifold and the analyzer, follow these steps:

- 1. Locate the "Coordinator Launcher" program on the desktop and double click it. A screen will appear allowing the user to choose "SSIM G2101-i," "SSIM G2101-i w/HP CH4," or "Ready Test." The available drop-down options depend on which instrument the user is using. Choose the appropriate coordinator mode, and then click "Launch" to continue. In the "User Editable Parameters" window (next step), there will be an option to proclaim if the user is using the 16-Port Distribution Module (MPV) or not.
  - SSIM G2101-i: To make discrete iCO2 measurements.
  - **SSIM G2101-i** w/ **HP CH4:** To make discrete iCO2 measurements and (if the G2101-i is in the proper mode) high precision measurements of CH4.
  - **Ready Test:** To make a direct measurement of the reference gas while checking the stability of the analyzer.




2. Upon clicking "**Launch**," the "Select Reference Gas" screen will appear. Select the appropriate reference gas being used. Reference gasses can be added, removed, or changed by editing the ReferenceGases.ini file upon installation.

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013
Part Number: 40037

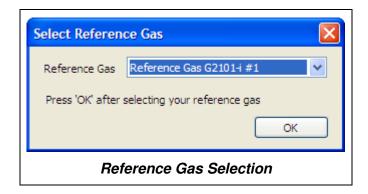

- 3. Once the user clicks "**OK**," the "User Editable Parameters" screen will appear. Enter the appropriate values to continue.
  - **Multi-Port Value:** Specify whether using the 16 Port Distribution Manifold. Enter 2 if "Don't Use 16-Port Distribution Manifold," 1 if "Use 16-Port Distribution Manifold". Enter 1.
  - If using Multi-Port Value: Number of Sample Ports: Specify the number of sample ports of the 16 Distribution Manifolds the user will be measuring from. The number of samples can range from 1 to 8.
  - Number of Repeats per Sample: Specify the number of times the user wants to measure each sample. The number can be as little as 0 and as great as 5.
  - **Number of Repeats of Standard:** Specify the number of times the user wants to measure each standard. The number can be as little as 0 and as great as 5.
  - **Standard Mode:** Enter 1 if wanting to measure standard between the measurement of each sample port, or 2 if wanting to measure the standard just in the beginning and at the end.
  - Measurement Mode: Enter 1 if samples will be measured one time, or 2 if they will be measured in a loop (CRDS will continue to measure until the user ends the program).
  - **Measurement Duration:** Enter 1 if wanting standard measurement (12 minutes per measurement), or 2 if wanting fast measurement (8 minutes per measurement). The times do not include the 3 minute purge and pump cycle to clean the SSIM and analyzer between measurements.
  - Sample Loading: Enter 1 if loading each sample manually, or 2 if loading sample automatically. Manual mode should be used if the user plans to manually change sample bags while running the instrument. Automatic mode should be used if the user plans to walk away from the instrument while in use.
  - **Sample Dilution:** Enter 1 if no dilution is to be used, or 2 if the injected sample is to be diluted with zero air.

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013
Part Number: 40037

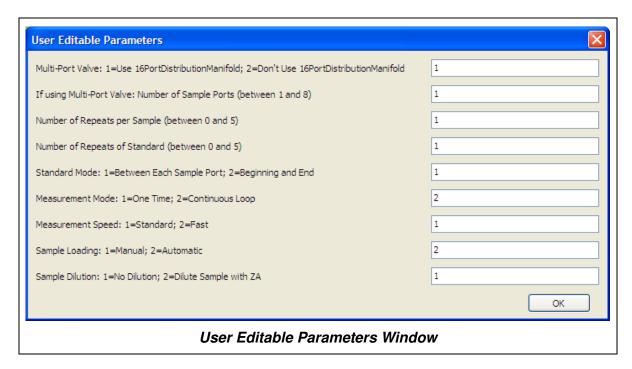

4. The Coordinator window will appear. At any time during analysis, a new commadelimited (CSV) file can be created and saved to C:\lsotopedata. A file is automatically started each time the Coordinator is started. Various messages about the state of the system are displayed in the bottom window and prompts to the user are also noted there in capital letters. The upper portion of the coordinator shows the various parameters measured during analysis, and is identical to the data that is saved in the CSV file.



Note: If the user ever desires to close the Coordinator, the red "X" can be used to simply close the window which will terminate the program. Allow the program to terminate itself (it could take nearly one minute depending on the state of the SSIM and analyzer). The Coordinator, if allowed to close itself properly, will return the SSIM and analyzer to a safe state.

5. After the SSIM has completed the purge and pump steps, it will prompt the user to attach all sample container(s) with the manual valve(s) closed.




Example of a sample bag connected to the 16-port manifold via a manual valve



Important: make sure the manual valves are closed or the samples will be lost! The system pumps out the gas lines all the way up to the manual valve.

6. The SSIM will then initiate another pump and purge cycle for all selected input ports and will prompt the user to open the manual valve(s). Then select "Resume" under the "Control" menu.

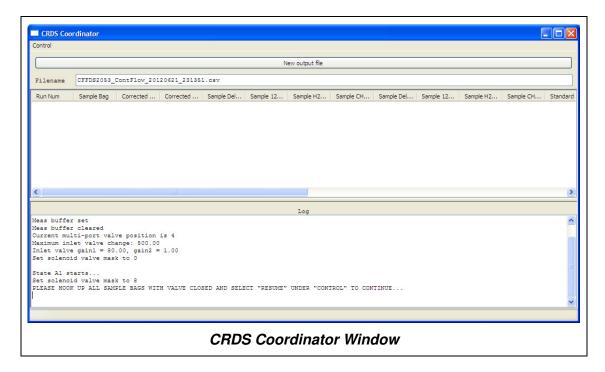


- 7. The sample from the first sample port will expand into the sample chamber of the SSIM. There the sample will make its way to the analyzer, where measurements will be taken automatically. At this point, no further user input is necessary to analyze sample(s) from sample container(s).
- 8. The analysis of the samples will begin (duration of measurement is 12/8 minutes depending on the measurement option chosen standard or fast).



Note: it is normal to have alternating "Pressure High/Pressure Low" warnings in the GUI Status Log since the analyzer is constantly adjusting the pressure during the discontinuous gas flow that occurs as a result of the SSIM's purging and gas delivery steps. If these warnings persist and are accompanied by a persistent "System Alarm" indicator, this could indicate a problem and it is advisable to contact Picarro.

9. The Coordinator will measure samples until it finishes the job (if the user has selected the Measurement Mode to be "One Time") or it will continue to run until the Coordinator program is terminated (if "Continuous Loop" was selected).

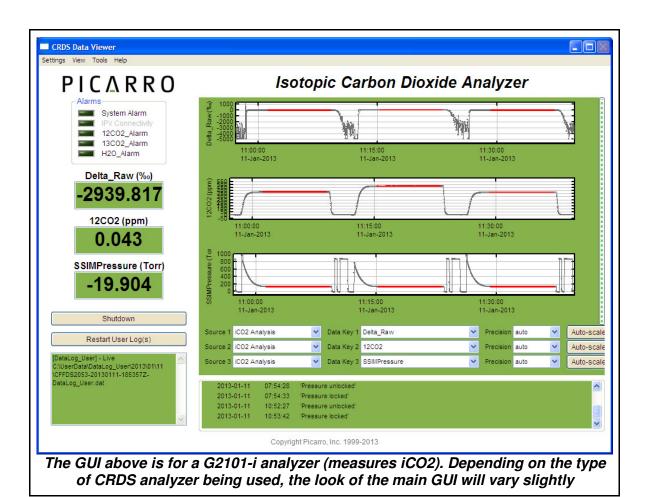

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F, 1/11/2013 Part Number: 40037

#### **USE-CASE RECOMMENDATIONS AND** TROUBLESHOOTING

#### **LEAK TIGHTNESS:**

It is critical that there be no leaks in the plumbing connections associated with the SSIM and analyzer. It is possible to use the analyzer itself as a diagnostic to find leaks. The purge (zero air) should be nearly dry, as should the calibration standards. By looking at the analyzer's water vapor concentration measurement during the time that it is not measuring samples (it will be drawing gas from the Zero Air" port of the SSIM) a leak in the plumbing associated with the zero air supply or SSIM-to-analyzer connecting will be evidenced by a high water level (significantly higher than ~50ppm for example). A similar check can be used for the calibration gas - during a calibration measurement, the water should be indicating near zero if there is no leak. For leaks in the sample container connections, this can be more elusive depending on the water content of the sample, but can be diagnosed by filling the sample containers with dry gas.

One way to run dry gas through the SSIM as if the dry gas were a sample is to run "Sample Inject" in "2: Run sample diluted in ZA (Zero Air)." Do not add any sample. The SSIM will be evacuated, and then it will ask for the sample to be connected and the manual valve opened. Connect a sample, but do not open the manual valve. Just select resume when asked to open the manual valve. Then the SSIM will fill the empty sample volume with zero air, and introduce this to the analyzer. High H<sub>2</sub>O/CO<sub>2</sub>/CH<sub>4</sub> levels in these samples indicate that there is a leak in the connections.

#### **ELECTRICAL CONNECTIONS:**

If the valve control cables are not appropriately attached, this may cause unexplained errors in the Coordinator program and the cabling should be checked and the analyzer and/or Coordinator software should be restarted if necessary. If the message appears that the multi-position (rotary) valve is not correctly recognized, consult the user's guide for the Distribution Manifold or contact Picarro. The locking screws on the valve control cables should be used in order to insure a reliable connection between the instrument and the SSIM.

#### PUMP LIFETIME:

The vacuum pump has a rated lifetime of 10,000 hours and has an hour meter attached to it so this can be checked if necessary. An ageing pump will have the same symptom as a plumbing leak - the Coordinator program may time out. One way to monitor if the pump is functioning well is to track the SSIM Pressure on the GUI to determine if it is able to evacuate the sample chamber. A functional pump, when switched on, should vibrate noticeably.

Picarro Small Sample Isotope Module (Model # A0312) User's Manual Rev F. 1/11/2013

Part Number: 40037