USER GUIDE

Display Evaluation Kit
PLDEK MSP430

Part-No. 303001



Content

1	Abo	About Plastic Logic's Display Evaluation Kit				
2	Abo	About this document				
3	Qui	ck Start Guide	. 4			
	3.1	Safety Points	. 4			
	3.2	Unpacking the Kit	. 5			
	3.3	Connecting up the Kit	. 5			
	3.3.	.1 Setting the Display Type	. 7			
	3.4	System Boot and Image Display	. 7			
4	Tro	ubleshooting	. 7			
5	Gen	nerate own images for the slideshow	. 8			
	5.1	Image format PGM	. 8			
	5.2	Generated or convert	. 8			
	5.3	Copy new images to the SD card	. 8			
6	Set	ting Display Specific Waveform and VCOM	. 8			
7	Fur	ther Information	8			



1 About Plastic Logic's Display Evaluation Kit

Plastic Logic's Display Evaluation Kit (PLDEK) has been designed to be used for a range of activities including:

- 1. Evaluating Plastic Logic's display technology.
- 2. Evaluating the appearance of customer and 3rd party content on Plastic Logic displays.
- 3. Building expertise with Plastic Logic Display systems prior to designing products or systems that incorporate our displays.
- 4. Application development.

2 About this document

This document is a user guide for **TI-MSP430 microcontroller tiny display evaluation kit.** It is only to be used for kits containing a Parrot microcontroller board and a Hummingbird Z9 interface board. It is intended to give sufficient information to:

- 1. Safely unpack and power up the PLDEK.
- 2. Start displaying images in .pgm format.
- 3. Understand how to start using the Plastic Logic software development Kit (SDK).



3 Quick Start Guide

This Quick Start Guide is a subset of the User Guide, which can be found on the SD-Card

Prior to unpacking the kit, the user is strongly urged to take appropriate ESD and safety precautions.

3.1 Safety Points

Warning:



- To avoid risk of electric shock or damage to the display, disconnect the display module from its power source before handling it.
- Do not touch the connections or circuits whilst the display is in operation.

Caution:

- Follow ESD handling procedures to avoid circuit damage. Use a grounded wrist strap.
- Do not press on the display panel or its edges as damage can result.

Important Notice


The Plastic Logic Display Evaluation Kit ("the Kit") is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by Plastic Logic to be a finished end-product fit for general consumer use. Persons handling the Kit must have electronics training and observe good engineering practice standards. As such, the kit being provided is not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. The kit does not fall within the scope of the European directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.



3.2 Unpacking the Kit

The kit is shipped with the items listed in the table below. Please ensure that the items listed on the next page have been included in your kit.

No.	Item	Description
1	Board 1	Plastic Logic Parrot 1.1 microcontroller board
2	Board 2	Plastic Logic Hummingbird Z9 interface
3	Flat Ribbon Cable	Cable to connect board 1 and 2. This cable is already connected to the Z9board at one side.
5	Micro - SD Card	Contains slide-show images, display specific waveforms and voltages, documentation, source code. The Micro-SD card is mounted in the socket of board 1.
6	SD Card Adaptor	Adaptor from Micro-SD to standard SD form-factor
7	USB cable	Currently only used for power supply

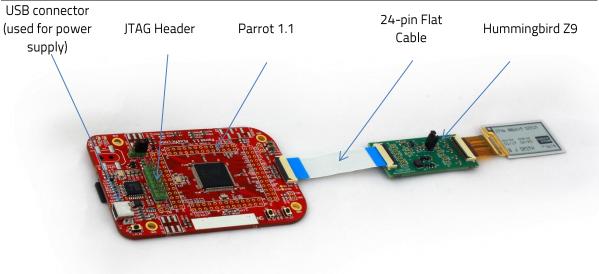

Note: Image shows M_T430U with C_HBZ9.5 and S014_T1.

3.3 Connecting up the Kit

Connect the Parrot board with the Z9 board using the Flat Ribbon Cable. Plug in the display into the display connector of the Hummingbird Z9 board. It is important to connect the display before powering up the kit to avoid damages of any parts.

Attention: Do not change or remove the display during the kit is powered up!

PLASTIC LOGIC

Display	
S011_T1.1	
S014_T1.1	
S021_T2.1	
	THE STATE OF THE PARTY OF THE P
S031_T1.1	
	TEIL BERTHER BONN OF THE STATE



3.3.1Setting the Display Type

The Display Type should be set on the SD Card so the MCU can select the display settings accordingly. On the root folder of the SD Card is a file named display-type.txt.

There the first line specifies the display type.

Valid Types are:

- S011_T1.1
- S014_T1.1
- S021_T1.1
- S031_T3.1

3.4 System Boot and Image Display

After the display is plugged in please connect the USB connector to power the Parrot 1.1 board. The image slide-show will start almost immediately.

4 Troubleshooting

In case of any problems please email techsupport@plasticlogic.com



5 Generate own images for the slideshow

5.1 Image format PGM

For simplicity the MSP430 code only supports image files in the PGM graphics file format. This is a simple, uncompressed, grey-scale file format. For further details please check http://en.wikipedia.org/wiki/Netpbm_format.

5.2 Generate or Convert

PGM files can be generated or converted by several image software tools. A good free option is for example GIMP (http://www.gimp.org/downloads/).

GIMP export:

- File → Export As ...
- Choose "PGM image (*.pgm)"
- Change file-name extention to .pgm
- Click "Export" button
- Choose "Data formatting" = "Raw" and click "Export" button

5.3 Copy new images to the SD card

- 1. Disconnect the Parrot-board from power
- 2. Remove µSD-card from Parrot-board
- 3. Use your own laptop or card-reader to copy images into the µSD-card. You can use the standard SD-card adapter which is part of the Eval-Kit.
- 4. Copy your image to the corresponding image folder ("S011 T1.1", "S021 T1.1", ...)
- 5. Put the µSD-card back to the Parrot-board
- 6. If you power the Parrot-board now again, you should see your new images played in the slide-show

6 Setting Display Specific Waveform and VCOM

Waveform and Vcom voltage is programmed into the display controller internal non-volatile memory (MTP). Different to other Plastic Logic displays there is no need to set waveform and/or Vcom from user perspective.

7 Further Information

Additional Guides be found on SD Card. Please see the Software Guide and the Build Guide in the SD-Card-Folder documentation.