


Lab 8.2 - Configuring VLANs and Trunking

Topology

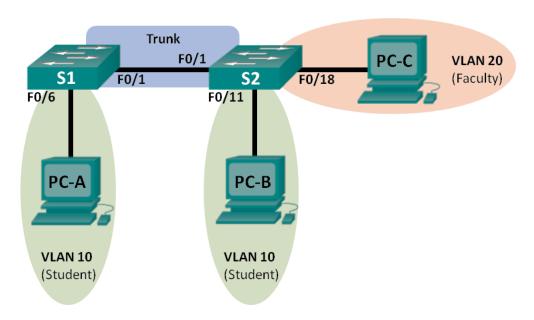

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gateway
S1	VLAN 1	192.168.1.11	255.255.255.0	N/A
S2	VLAN 1	192.168.1.12	255.255.255.0	N/A
PC-A	NIC	192.168.10.3	255.255.255.0	192.168.10.1
РС-В	NIC	192.168.10.4	255.255.255.0	192.168.10.1
PC-C	NIC	192.168.20.3	255.255.255.0	192.168.20.1

Objectives

- Part 1: Build the Network and Configure Basic Device Settings
- Part 2: Create VLANs and Assign Switch Ports
- Part 3: Maintain VLAN Port Assignments and the VLAN Database
- Part 4: Configure an 802.1Q Trunk between the Switches

Background / Scenario

Modern switches use virtual local-area networks (VLANs) to improve network performance by separating large Layer 2 broadcast domains into smaller ones. VLANs can also be used as a security measure by controlling which hosts can communicate. In general, VLANs make it easier to design a network to support the goals of an organization.

VLAN trunks are used to span VLANs across multiple devices. Trunks allow the traffic from multiple VLANS to travel over a single link, while keeping the VLAN identification and segmentation intact.

In this lab, you will create VLANs on both switches in the topology, assign VLANs to switch access ports, verify that VLANs are working as expected, and then create a VLAN trunk between the two switches to allow hosts in the same VLAN to communicate through the trunk, regardless of which switch the host is actually attached to.

Note: The switches used are Cisco Catalyst 2960s with Cisco IOS Release 15.0(2) (lanbasek9 image). Other switches and Cisco IOS versions can be used. Depending on the model and Cisco IOS version, the commands available and output produced might vary from what is shown in the labs.

Note: Ensure that the switches have been erased and have no startup configurations. If you are unsure contact your instructor.

Required Resources

- 2 Switches (Cisco 2960 with Cisco IOS Release 15.0(2) lanbasek9 image or comparable)
- 3 PCs (Windows 7, Vista, or XP with terminal emulation program, such as Tera Term)
- Console cables to configure the Cisco IOS devices via the console ports
- Ethernet cables as shown in the topology

Part 1: Build the Network and Configure Basic Device Settings

In Part 1, you will set up the network topology and configure basic settings on the PC hosts and switches.

Step 0: Packet Tracer File Configuration.

For labs that use a Packet Tracer file, you must set the user profile and verify the completion percentage and assessment items according to the lab slide.

Note: The user profile cannot be changed later, otherwise the activity progress will be reset.

Step 1: Cable the network as shown in the topology.

Attach the devices as shown in the topology diagram, and cable as necessary.

Step 2: Initialize and reload the switches as necessary.

Step 3: Configure basic settings for each switch. (Revise the previous lab)

- a. Console into the switch and enter global configuration mode.
- b. Copy the following basic configuration and paste it to the running-configuration on the switch.

```
no ip domain-lookup
service password-encryption
enable secret class
banner motd #Unauthorized access is strictly prohibited.#
line con 0
password cisco
login
logging synchronous
line vty 0 15
```

```
password cisco
logging synchronous
login
exit
```

- c. Configure the host name as shown in the topology.
- d. Configure the IP address listed in the Addressing Table for interface VLAN 1 and activate the interface on the switch.
- e. Administratively deactivate all unused ports on the switch.
- f. Copy the running configuration to the startup configuration.

Step 4: Configure PC hosts.

Refer to the Addressing Table for PC host address information.

Step 5: Test connectivity.

Verify that the PC hosts can ping one another.

Note: It may	be necessar	to disable t	the PCs firewa	all to pin	g between PCs.
--------------	-------------	--------------	----------------	------------	----------------

Can PC-A ping PC-C? _	
Can PC-A ping S1?	
Can PC-B ping PC-C? _	
Can PC-B ping S2?	
Can PC-C ping S2?	
Can S1 ping S2?	

If you answered no to any of the above questions, why were the pings unsuccessful?

Part 2: Create VLANs and Assign Switch Ports

In Part 2, you will create student, faculty, and management VLANs on both switches. You will then assign the VLANs to the appropriate interface. The **show vlan** command is used to verify your configuration settings.

Step 1: Create VLANs on the switches.

a. Create the VLANs on S1.

```
S1(config) # vlan 10
S1(config-vlan) # name Student
S1(config-vlan) # vlan 20
S1(config-vlan) # name Faculty
S1(config-vlan) # vlan 99
S1(config-vlan) # name Management
S1(config-vlan) # end
```

b. Create the same VLANs on S2.

c. Issue the **show vlan** command to view the list of VLANs on S1.

S1# show vlan

VLAN	Name				Sta† 	tus Po 	rts 			
-	defau	lt			act	ive Fa	0/1, 1	Fa0/2, Fa0	0/3 , Fa	0/4
						Fa	10/5, 1	Fa0/6, Fa0	0/7, Fa	0/8
						Fa	10/9, 1	Fa0/10, Fa	a0/11, 1	Fa0/12
								Fa0/14, 1		
								Fa0/18, 1		
								Fa0/22, 1	Fa0/23,	Fa0/2
0	C+d.	- L					.0/1,	<i>3</i> 10/2		
0	Stude: Facult				act: act:					
9		_			act:					
	_	default				/unsup				
		-ring-defa	111 t			/unsup				
		et-default				/unsup				
		-default				/unsup				
						-				
/LAN	Type	SAID	MTU	Parent	RingNo	BridgeNo	Stp	BrdgMode	Trans1	Trans
	enet	100001	1500	-	-	-	-	-	0	0
.0	enet	100010	1500	-	-	-	-	-	0	0
20		100020	1500	-	-	-	-	-	0	0
9	enet	100099	1500	-	-	-	-	_	0	0
/LAN	Туре	SAID	MTU	Parent	RingNo	BridgeNo	Stp	BrdgMode	Trans1	Trans
.002	fddi	101002	1500	-	-	-	-	-	0	0
003	tr	101003	1500	_	-	-	-	-	0	0
004	fdnet	101004	1500	-	-	-	ieee	-	0	0
.005	trnet	101005	1500	-	-	-	ibm	_	0	0
Remot	te SPA1	N VLANs								
Remot	te SPAI	N VLANS								
Prima	ary Sed	condary Ty	pe		Ports					
		condary Ty default VLAN								

Step 2: Assign VLANs to the correct switch interfaces.

- a. Assign VLANs to the interfaces on S1.
 - 1) Assign PC-A to the Student VLAN.

```
S1(config) # interface f0/6
S1(config-if) # switchport mode access
S1(config-if) # switchport access vlan 10
```

2) Move the switch IP address VLAN 99.

```
S1(config) # interface vlan 1
S1(config-if) # no ip address
S1(config-if) # interface vlan 99
S1(config-if) # ip address 192.168.1.11 255.255.255.0
S1(config-if) # end
```

b. Issue the **show vian brief** command and verify that the VLANs are assigned to the correct interfaces.

S1# show vlan brief

VLAN	Name	Status	Ports
1	default	active	Fa0/1, Fa0/2, Fa0/3, Fa0/4 Fa0/5, Fa0/7, Fa0/8, Fa0/9 Fa0/10, Fa0/11, Fa0/12, Fa0/13 Fa0/14, Fa0/15, Fa0/16, Fa0/17 Fa0/18, Fa0/19, Fa0/20, Fa0/21 Fa0/22, Fa0/23, Fa0/24, Gi0/1 Gi0/2
10	Student	active	Fa0/6
20	Faculty	active	

10	Student	active	Fa0/6
20	Faculty	active	
99	Management	active	
1002	fddi-default	act/unsup	
1003	token-ring-default	act/unsup	
1004	fddinet-default	act/unsup	
1005	trnet-default	act/unsup	

c. Issue the **show ip interface brief** command.

What is the status of VLAN 99? Why?

- ______
- d. Use the Topology to assign VLANs to the appropriate ports on S2.
- e. Remove the IP address for VLAN 1 on S2.
- f. Configure an IP address for VLAN 99 on S2 according to the Addressing Table.
- g. Use the **show vlan brief** command to verify that the VLANs are assigned to the correct interfaces.

S2# show vlan brief

VL	AN Name	Status	Ports
1	default	active	Fa0/1, Fa0/2, Fa0/3, Fa0/4 Fa0/5, Fa0/6, Fa0/7, Fa0/8 Fa0/9, Fa0/10, Fa0/12, Fa0/13 Fa0/14, Fa0/15, Fa0/16, Fa0/17 Fa0/19, Fa0/20, Fa0/21, Fa0/22

			Fa0/23,	Fa0/24,	Gi0/1,	Gi0/2
10	Student	active	Fa0/11			
20	Faculty	active	Fa0/18			
99	Management	active				
1002	fddi-default	act/unsup				
1003	token-ring-default	act/unsup				
1004	fddinet-default	act/unsup				
1005	trnet-default	act/unsup				

Is PC-A able to ping PC-B? Why?

Is S1 able to ping S2? Why?

Part 3: Maintain VLAN Port Assignments and the VLAN Database

In Part 3, you will change VLAN assignments to ports and remove VLANs from the VLAN database.

Step 1: Assign a VLAN to multiple interfaces.

a. On S1, assign interfaces F0/11 – 24 to VLAN 10.

```
S1(config)# interface range f0/11-24
S1(config-if-range)# switchport mode access
S1(config-if-range)# switchport access vlan 10
S1(config-if-range)# end
```

- b. Issue the **show vlan brief** command to verify VLAN assignments.
- c. Reassign F0/11 and F0/21 to VLAN 20.
- d. Verify that VLAN assignments are correct.

Step 2: Remove a VLAN assignment from an interface.

a. Use the **no switchport access vlan** command to remove the VLAN 10 assignment to F0/24.

```
S1(config)# interface f0/24
S1(config-if)# no switchport access vlan
S1(config-if)# end
```

b. Verify that the VLAN change was made.

Which VLAN is F0/24 now associated with?

Step 3: Remove a VLAN ID from the VLAN database.

a. Add VLAN 30 to interface F0/24 without issuing the VLAN command.

```
S1(config)# interface f0/24
S1(config-if)# switchport access vlan 30
% Access VLAN does not exist. Creating vlan 30
```

Note: Current switch technology no longer requires that the **vlan** command be issued to add a VLAN to the database. By assigning an unknown VLAN to a port, the VLAN adds to the VLAN database.

b. Verify that the new VLAN is displayed in the VLAN table.

S1# show vlan brief

VLAN Name	Status	Ports
1 default	active	Fa0/1, Fa0/2, Fa0/3, Fa0/4
		Fa0/5, Fa0/6, Fa0/7, Fa0/8
		Fa0/9, Fa0/10, Gi0/1, Gi0/2
10 Student	active	Fa0/12, Fa0/13, Fa0/14, Fa0/15
		Fa0/16, Fa0/17, Fa0/18, Fa0/19
		Fa0/20, Fa0/22, Fa0/23
20 Faculty	active	Fa0/11, Fa0/21
30 VLAN0030	active	Fa0/24
99 Management	active	
1002 fddi-default	act/unsug	p
1003 token-ring-default	act/unsug	p
1004 fddinet-default	act/unsug	o o
1005 trnet-default	act/unsug	o o
What is the default name of VLAN 30?		

c. Use the **no vlan 30** command to remove VLAN 30 from the VLAN database.

S1(config) # no vlan 30
S1(config) # end

d. Issue the **show vlan brief** command. F0/24 was assigned to VLAN 30.

After deleting VLAN 30, what VLAN is port F0/24 assigned to? What happens to the traffic destined to the host attached to F0/24?

S1#	show	wlan	brief
O T #	SIIOW	viaii	DTTEL

VLAN	Name	Status	Ports
1	default	active	Fa0/1, Fa0/2, Fa0/3, Fa0/4 Fa0/5, Fa0/6, Fa0/7, Fa0/8 Fa0/9, Fa0/10, Gi0/1, Gi0/2
10	Student	active	Fa0/12, Fa0/13, Fa0/14, Fa0/15 Fa0/16, Fa0/17, Fa0/18, Fa0/19 Fa0/20, Fa0/22, Fa0/23
20	Faculty	active	Fa0/11, Fa0/21
99	Management	active	
1002	fddi-default	act/unsup	
1003	token-ring-default	act/unsup	
1004	fddinet-default	act/unsup	
1005	trnet-default	act/unsup	

e. Issue the **no switchport access vlan** command on interface F0/24.

f. Issue the **show vian brief** command to determine the VLAN assignment for F0/24. To which VLAN is F0/24 assigned?

Note: Before removing a VLAN from the database, it is recommended that you reassign all the ports

assigned to that VLAN.

Why should you reassign a port to another VLAN before removing the VLAN from the VLAN database?

Part 4: Configure an 802.1Q Trunk Between the Switches

In Part 4, you will configure interface F0/1 to use the Dynamic Trunking Protocol (DTP) to allow it to negotiate the trunk mode. After this has been accomplished and verified, you will disable DTP on interface F0/1 and manually configure it as a trunk.

Step 1: Use DTP to initiate trunking on F0/1.

The default DTP mode of a 2960 switch port is dynamic auto. This allows the interface to convert the link to a trunk if the neighboring interface is set to trunk or dynamic desirable mode.

a. Set F0/1 on S1 to negotiate trunk mode.

```
S1(config)# interface f0/1
S1(config-if)# switchport mode dynamic desirable

*Mar 1 05:07:28.746: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan1, changed state to down

*Mar 1 05:07:29.744: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to down
S1(config-if)#

*Mar 1 05:07:32.772: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to up
S1(config-if)#

*Mar 1 05:08:01.789: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan99, changed state to up

*Mar 1 05:08:01.797: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan1, changed state to up
```

You should also receive link status messages on S2.

```
S2#
*Mar 1 05:07:29.794: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to down
S2#
*Mar 1 05:07:32.823: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to up
S2#
*Mar 1 05:08:01.839: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan99, changed state to up
*Mar 1 05:08:01.850: %LINEPROTO-5-UPDOWN: Line protocol on Interface Vlan1, changed state to up
```

b. Issue the **show vlan brief** command on S1 and S2. Interface F0/1 is no longer assigned to VLAN 1. Trunked interfaces are not listed in the VLAN table.

S1# show vlan brief

VLAN Name	Status Ports
1 default	active Fa0/2, Fa0/3, Fa0/4, Fa0/5 Fa0/7, Fa0/8, Fa0/9, Fa0/10
10 Student	Fa0/24, Gi0/1, Gi0/2 active Fa0/6, Fa0/12, Fa0/13, Fa0/14 Fa0/15, Fa0/16, Fa0/17, Fa0/18
20 Faculty	Fa0/19, Fa0/20, Fa0/22, Fa0/23 active Fa0/11, Fa0/21
99 Management	active
1002 fddi-default	act/unsup
1003 token-ring-default	act/unsup
1004 fddinet-default	act/unsup
1005 trnet-default	act/unsup

c. Issue the **show interfaces trunk** command to view trunked interfaces. Notice that the mode on S1 is set to desirable, and the mode on S2 is set to auto.

S1# show interfaces trunk

Port	Mode	Encapsulation	Status	Native vlan
Fa0/1	desirable	802.1q	trunking	1
Port Fa0/1	Vlans allowed on 1-4094	trunk		
Port Fa0/1	Vlans allowed an 1,10,20,99	d active in man	agement domain	ı
Port Fa0/1	Vlans in spannin 1,10,20,99	g tree forwardi	ng state and n	ot pruned

S2# show interfaces trunk

Port	Mode	Encapsulation	Status	Native vlan
Fa0/1	<mark>auto</mark>	802.1q	trunking	1
Port	Vlans allowed on	trunk		
Fa0/1	1-4094			
Port	Vlans allowed an	d active in man	agement domain	l
Fa0/1	1,10,20,99			
Port	Vlans in spannin	g tree forwardi	ng state and n	ot pruned
Fa0/1	1,10,20,99			

Note: By default, all VLANs are allowed on a trunk. The **switchport trunk** command allows you to control what VLANs have access to the trunk. For this lab, keep the default settings which allows all VLANs to traverse F0/1.

Lab 8.2 - Configuring VLANs and Trunking

Verify that VLAN traffic is traveling over trunk interface F0/1.						
Ca	an S1 ping S2?		_			
Ca	an PC-A ping PC-B?		_			
Ca	an PC-A ping PC-C?		_			
Ca	an PC-B ping PC-C?		_			
Ca	an PC-A ping S1?		_			
Ca	an PC-B ping S2?		_			
Ca	an PC-C ping S2?		_			
lf :	you answered no to a	ny of the abov	ve question	s, explain be	elow.	
_			5			
2:	Manually configur	re trunk inte	ertace F0/1	l .		

Ste

The switchport mode trunk command is used to manually configure a port as a trunk. This command should be issued on both ends of the link.

a. Change the switchport mode on interface F0/1 to force trunking. Make sure to do this on both switches.

```
S1(config)# interface f0/1
S1(config-if)# switchport mode trunk
```

b. Issue the **show interfaces trunk** command to view the trunk mode. Notice that the mode changed from desirable to on.

S1# show interfaces trunk

Port Fa0/1	Mode <mark>on</mark>	Encapsulation 802.1g	Status trunking	Native vlan 99		
Port	Vlans allowed on	-	craming			
Fa0/1	1-4094					
Port	Vlans allowed and active in management domain					
Fa0/1	1,10,20,99					
Port	Vlans in spanning tree forwarding state and not pruned					
Fa0/1	1,10,20,99					
Why might you want to manually configure an interface to trunk mode instead of using DTP?						

Lab 8.2 - Configuring VLANs and Trunking

Reflection				
1.	What is needed to allow hosts on VLAN 10 to communicate to hosts on VLAN 20?			
2.	What are some primary benefits that an organization can receive through effective use of VLANs?			