Chapter 5
Link Layer

Instructor: Rui (April) Dai

Office: ERC 540

E-mail: rui.dai@uc.edu

Phone: 513-556-0134

Office Hours: Mondays and Wednesdays 10:00am - 11:00am or by appointment

Chapter 5: Link layer

our goals:

- understand principles behind link layer services:
  - error detection, correction
  - sharing a broadcast channel: multiple access
  - link layer addressing
  - local area networks: Ethernet
- instantiation, implementation of various link layer technologies

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

Link layer: introduction

terminology:

- hosts and routers: nodes
- communication channels that connect adjacent nodes along communication path: links
  - wired links
  - wireless links
- layer-2 packet: frame, encapsulates datagram

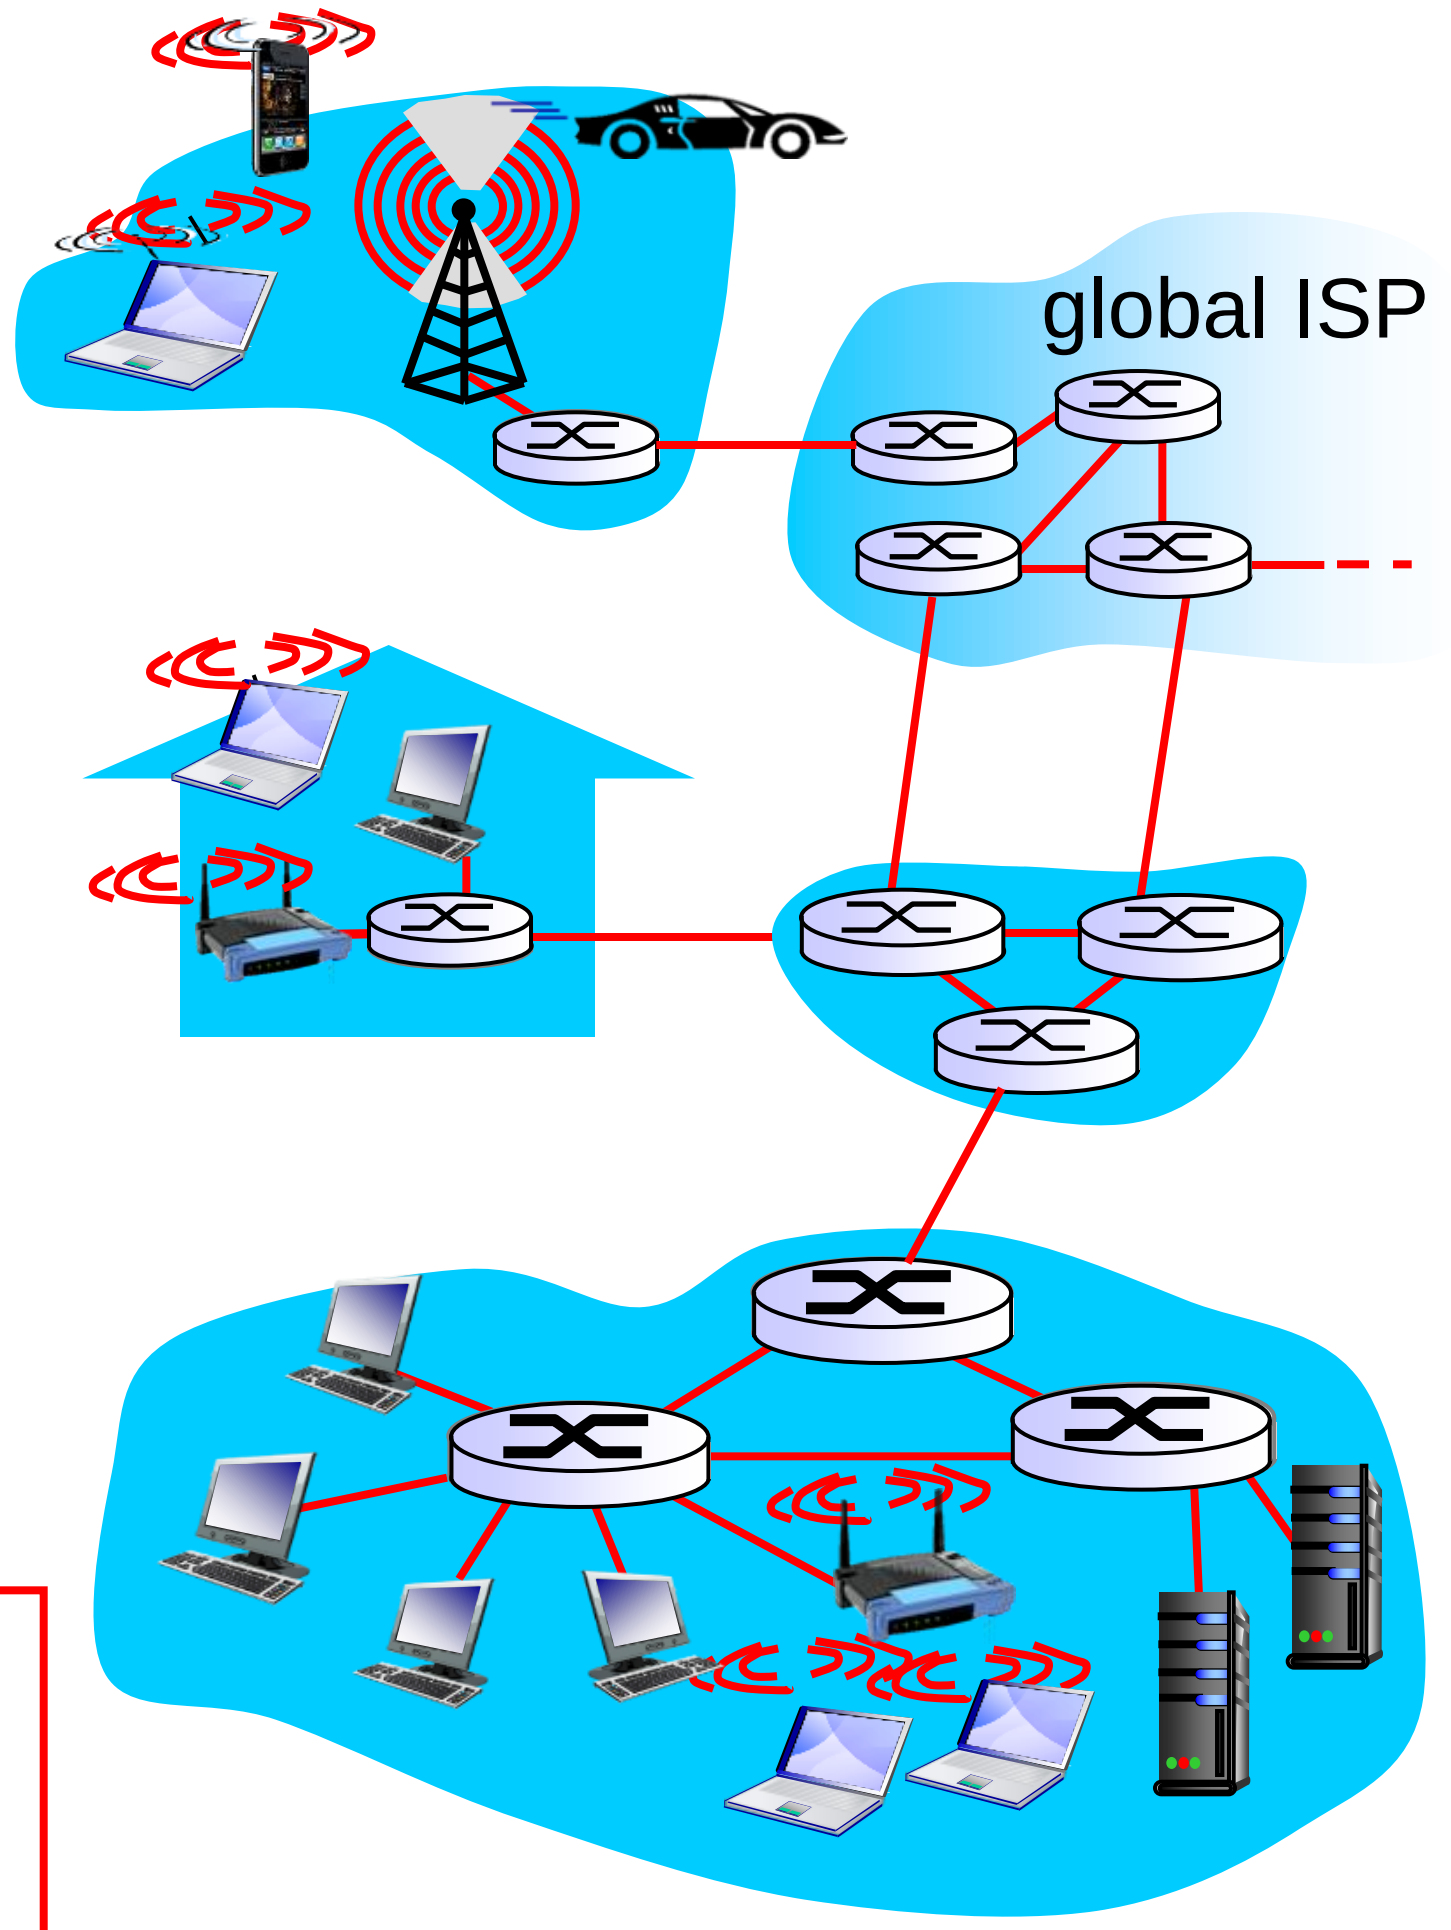

data-link layer has responsibility of transferring datagram from one node to *physically adjacent* node over a link

Link layer services

- *framing, link access:*
  - encapsulate datagram into frame, adding header, trailer
  - channel access if shared medium
  - "MAC" addresses used in frame headers to identify source, dest
    - different from IP address!
- *reliable delivery between adjacent nodes*
  - we learned how to do this already (chapter 3)!
  - seldom used on low bit-error link (fiber, some twisted pair)
  - wireless links: high error rates

Link layer services (more)

- *flow control:*
  - pacing between adjacent sending and receiving nodes
- *error detection:*
  - errors caused by signal attenuation, noise.
  - receiver detects presence of errors:
    - signals sender for retransmission or drops frame
- *error correction:*
  - receiver identifies *and corrects* bit error(s) without resorting to retransmission

Where is the link layer implemented?

- in each and every host
- link layer implemented in "adaptor" (aka *network interface card* NIC) or on a chip
  - Ethernet card, 802.11 card; Ethernet chipset
  - implements link, physical layer
- attaches into host's system buses
- combination of hardware, software, firmware

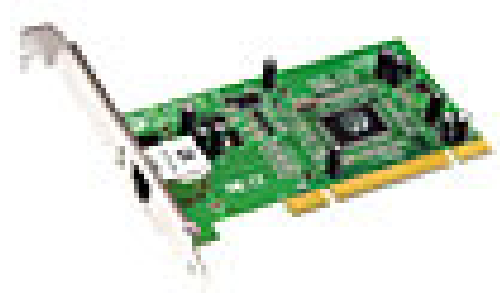

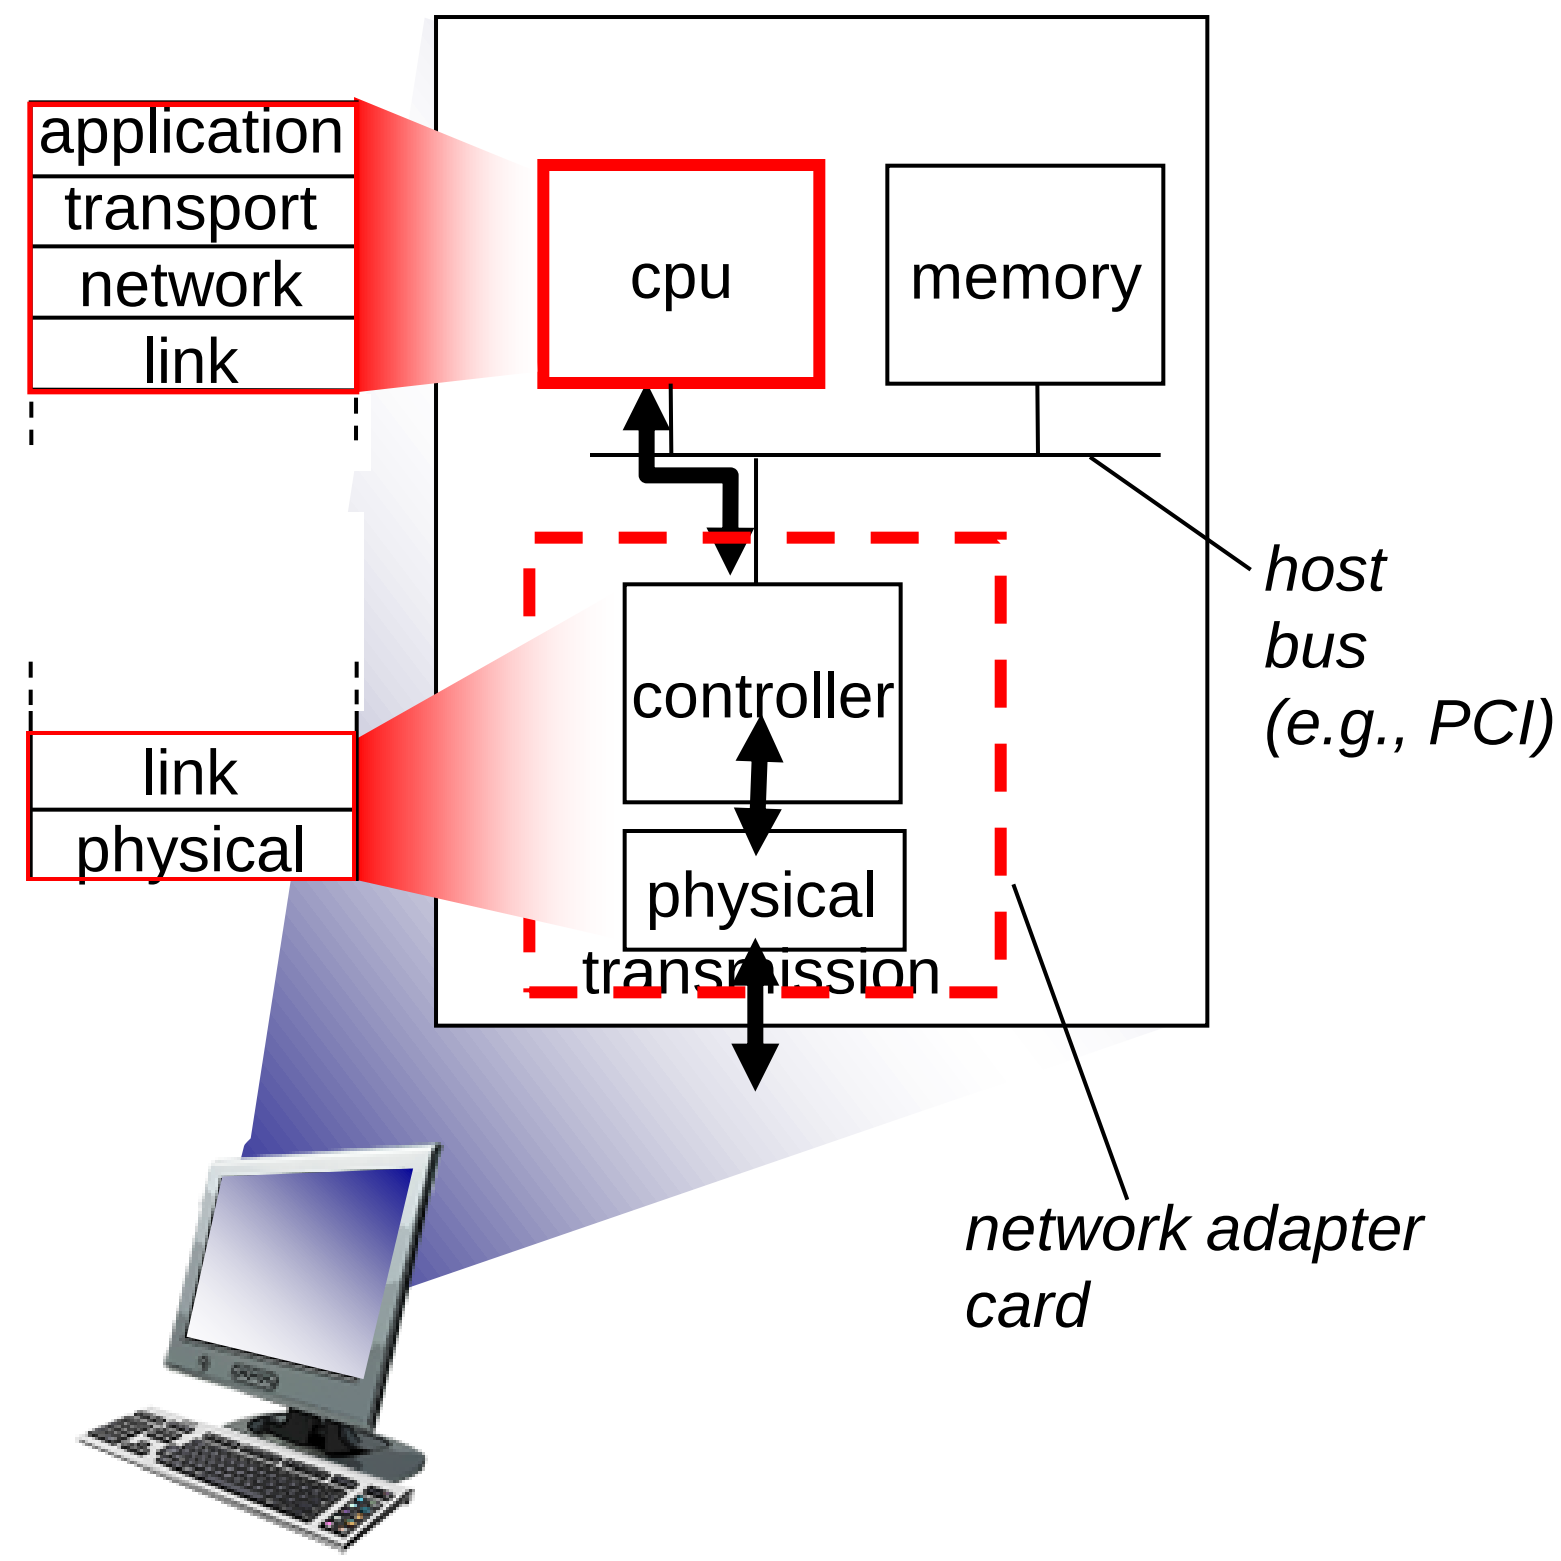

Adaptors communicating

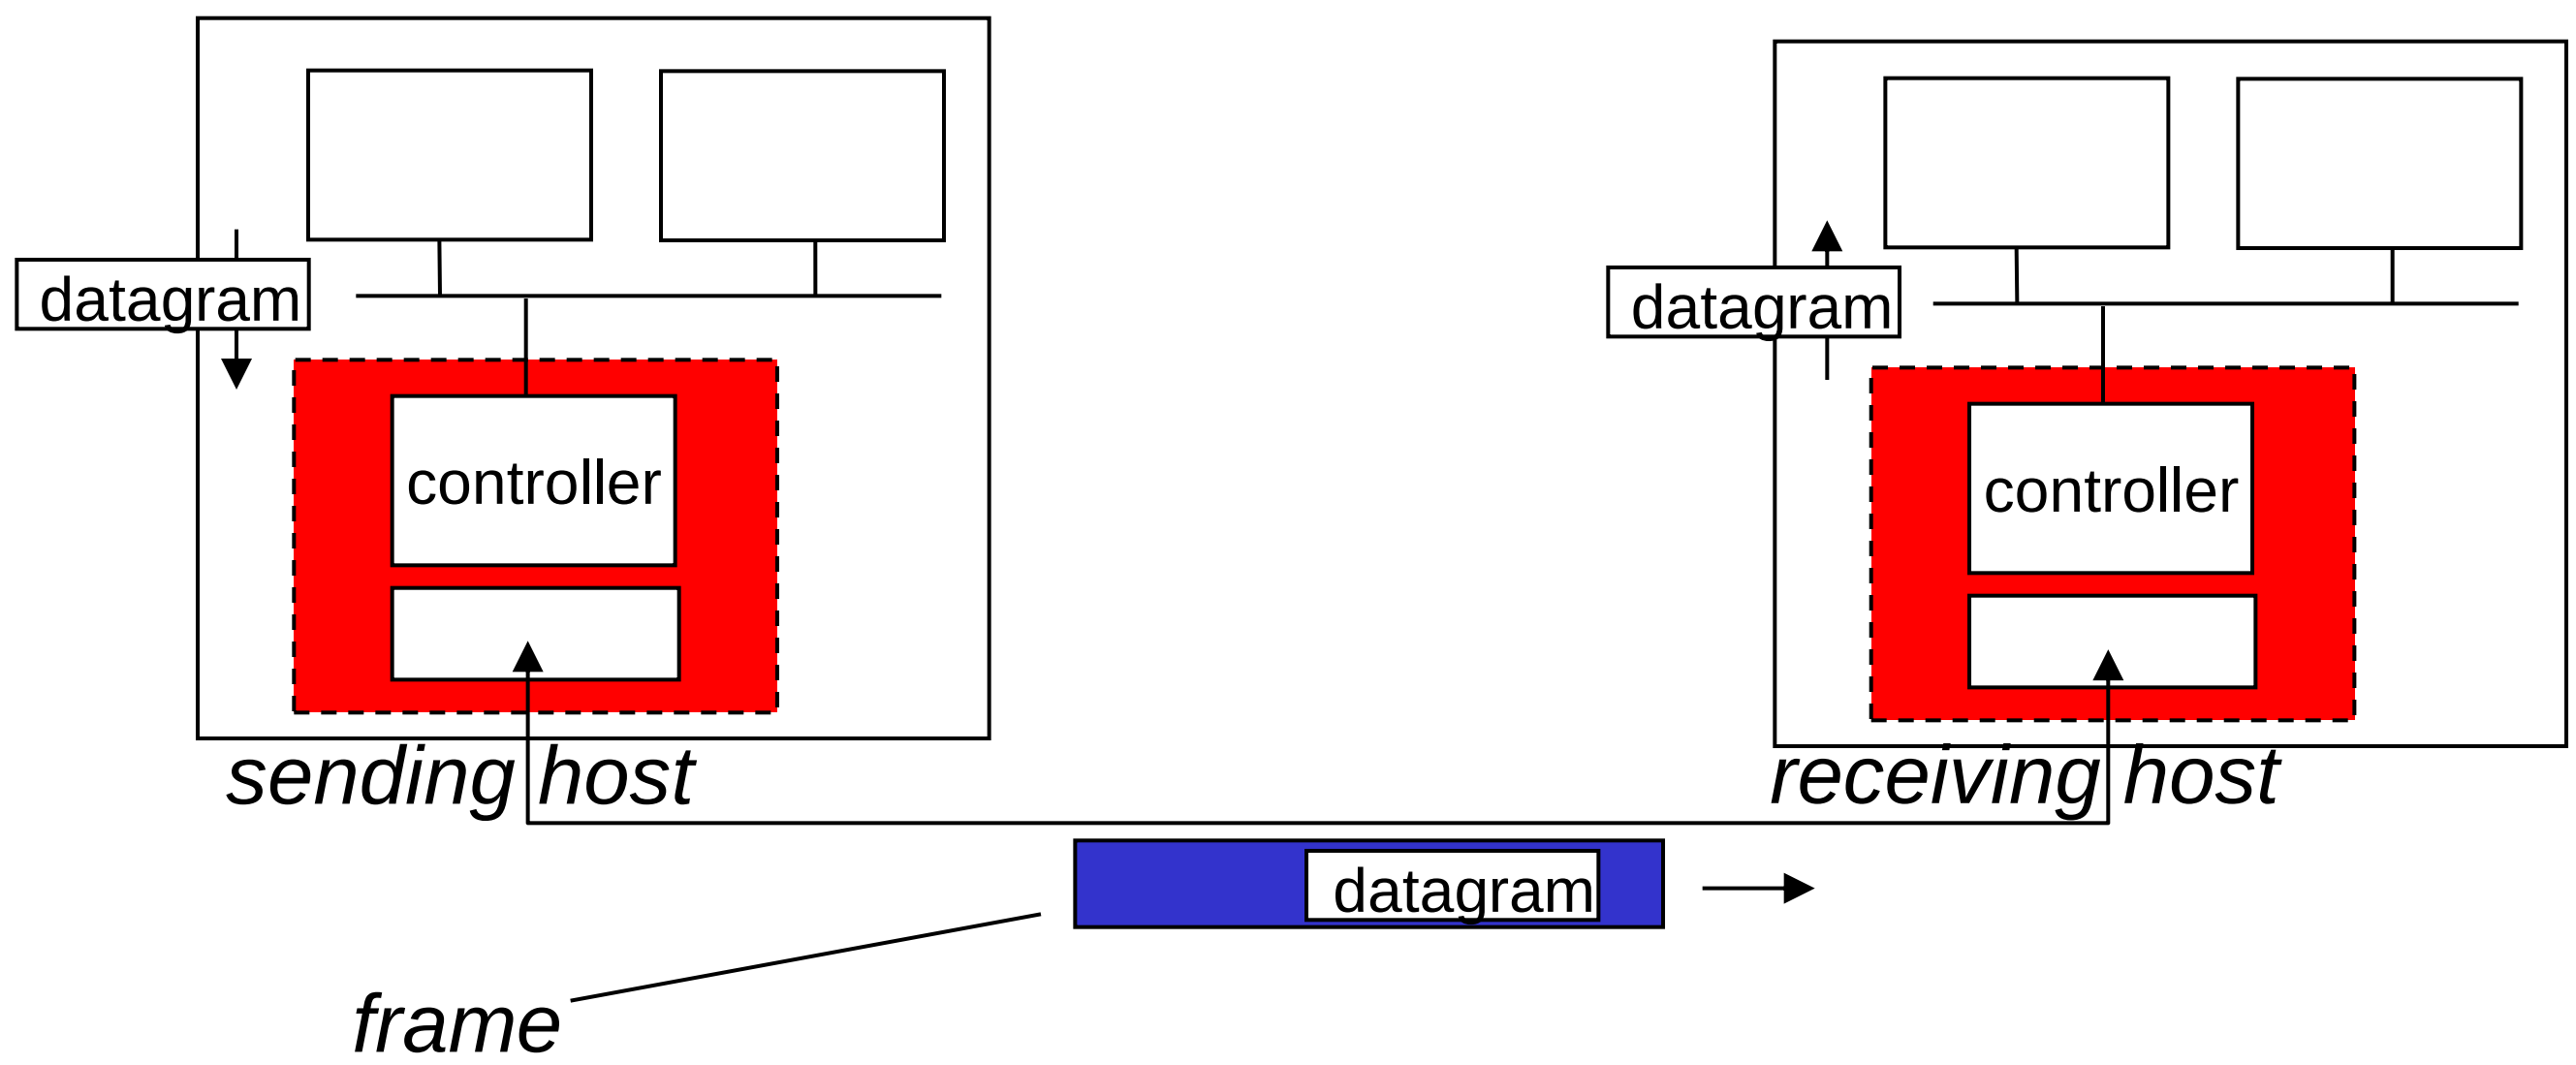

- sending side:
  - encapsulates datagram in frame
  - adds error checking bits, flow control, etc.
- receiving side
  - looks for errors, flow control, etc
  - extracts datagram, passes to upper layer at receiving side

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

Error detection

EDC= Error Detection and Correction bits (redundancy)
D = Data protected by error checking, may include header fields

- Error detection not 100% reliable!
  - protocol may miss some errors, but rarely
  - larger EDC field yields better detection and correction

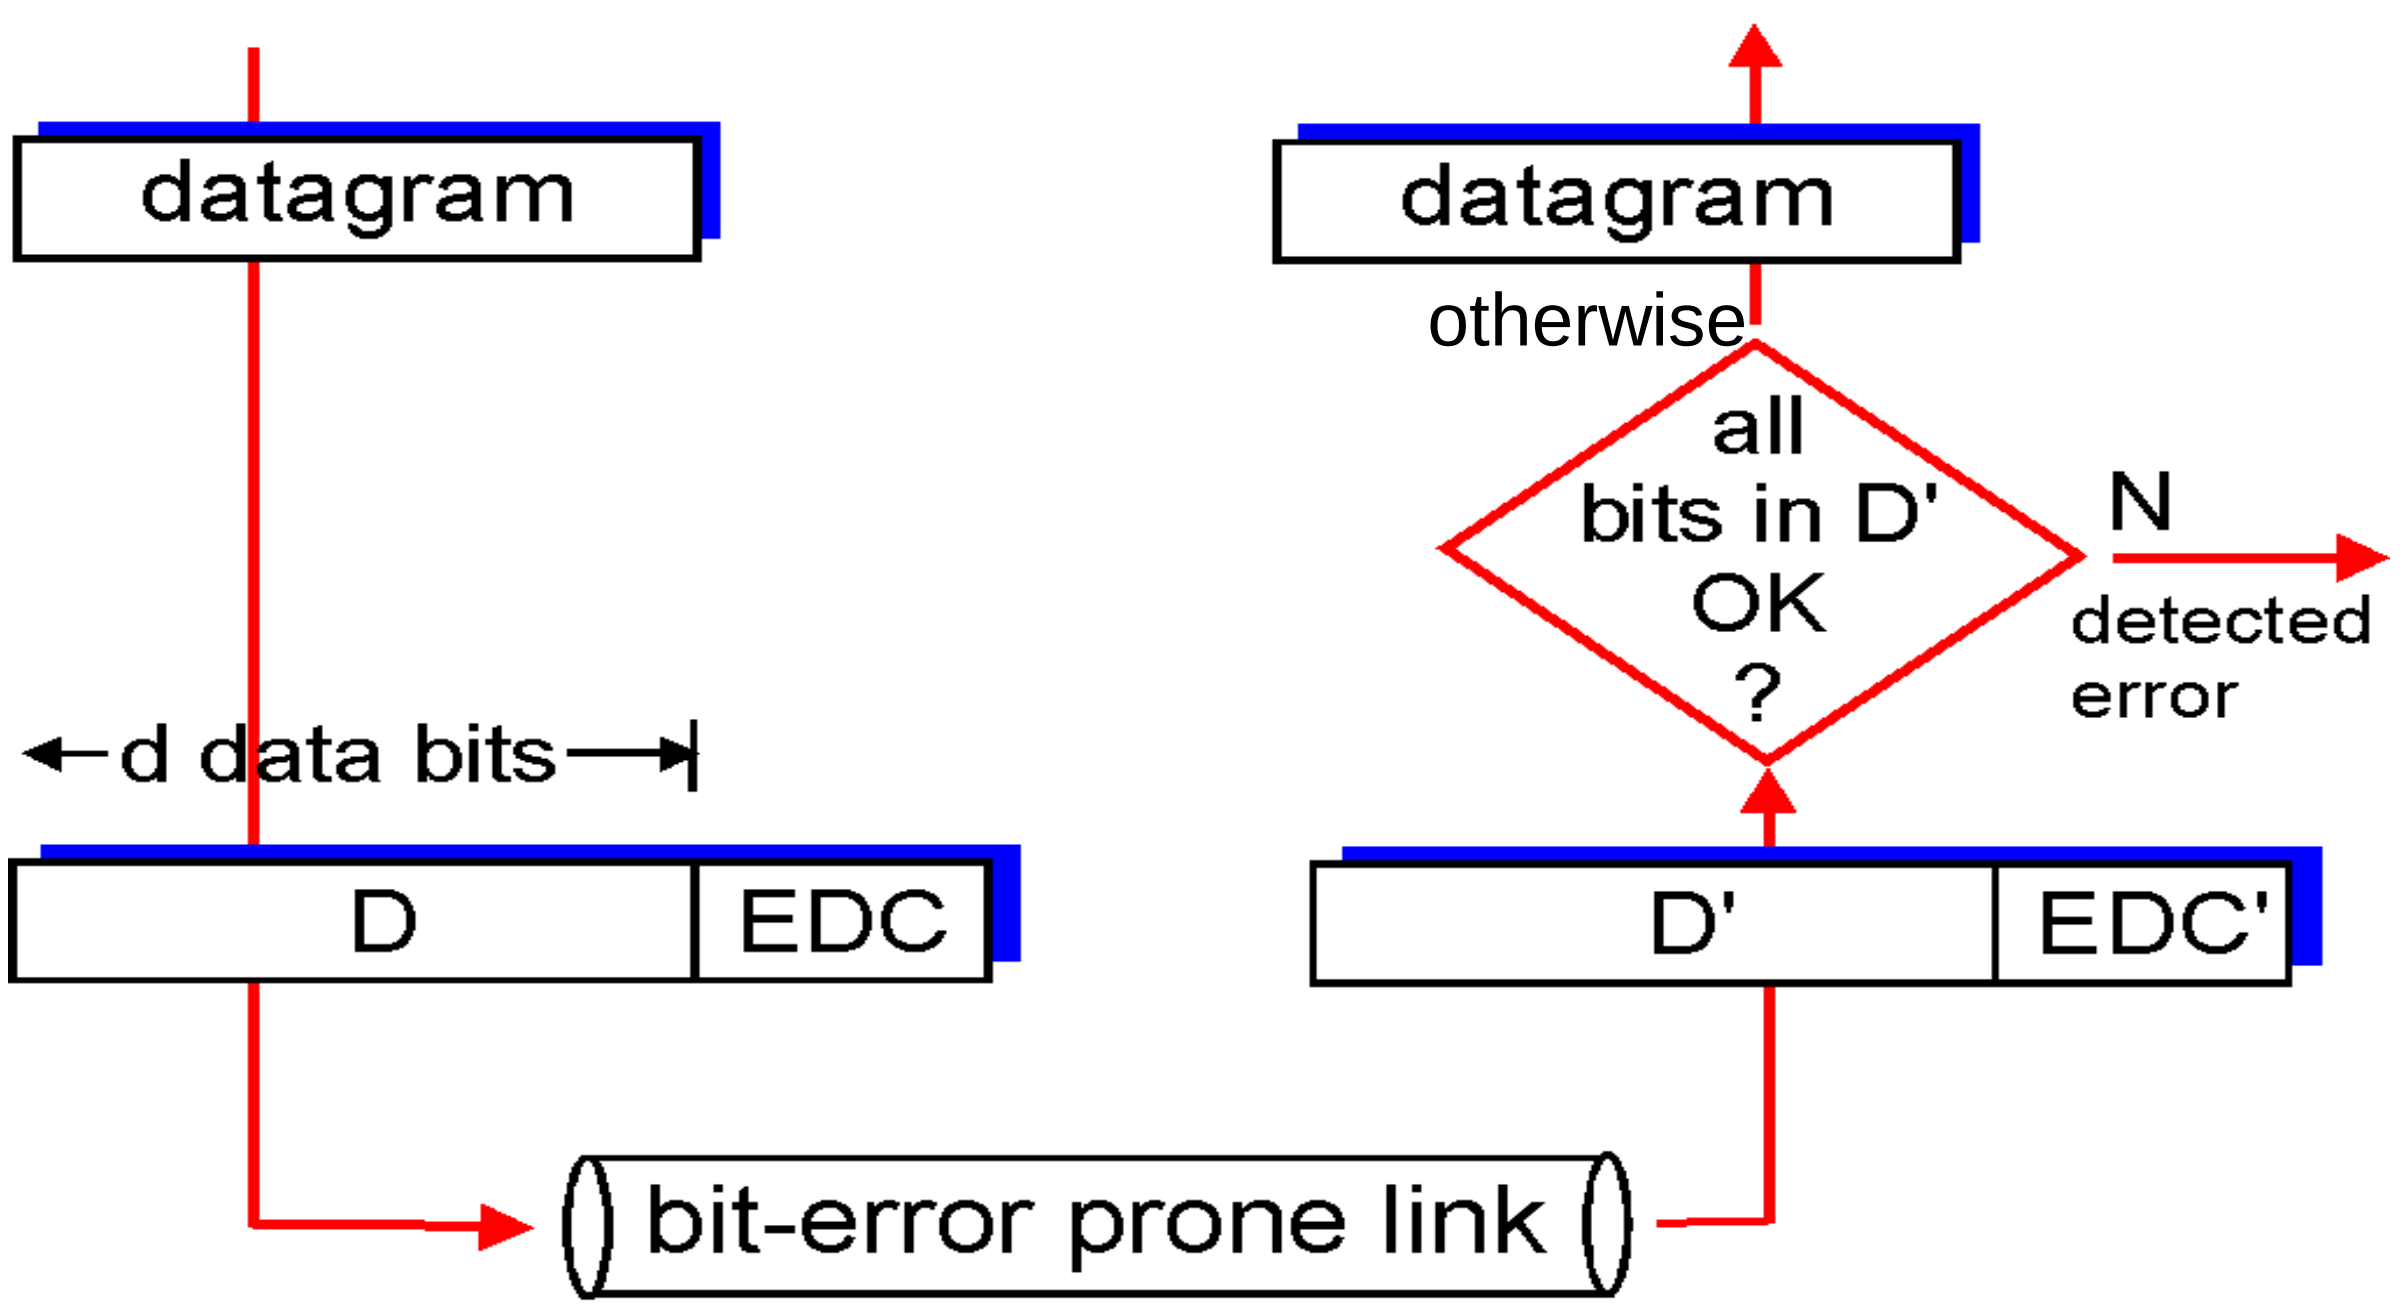

Parity checking

single bit parity:
- detect single bit errors

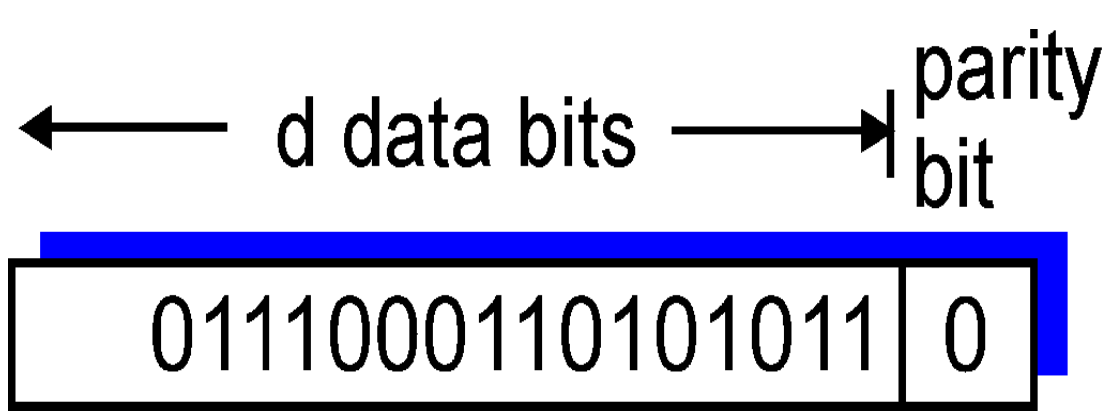

one-bit odd parity

two-dimensional bit parity:
- detect and correct single bit errors

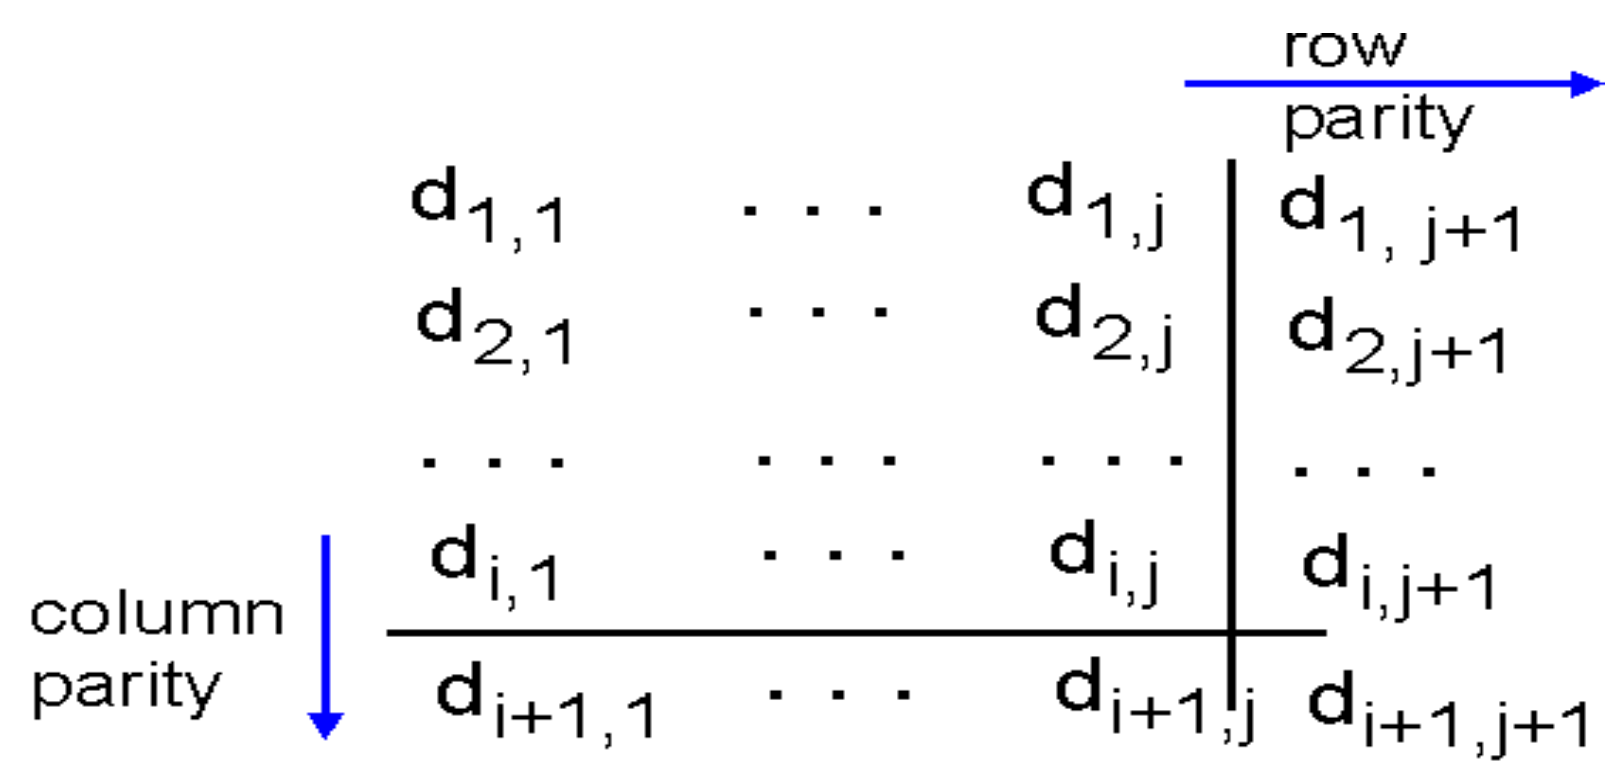

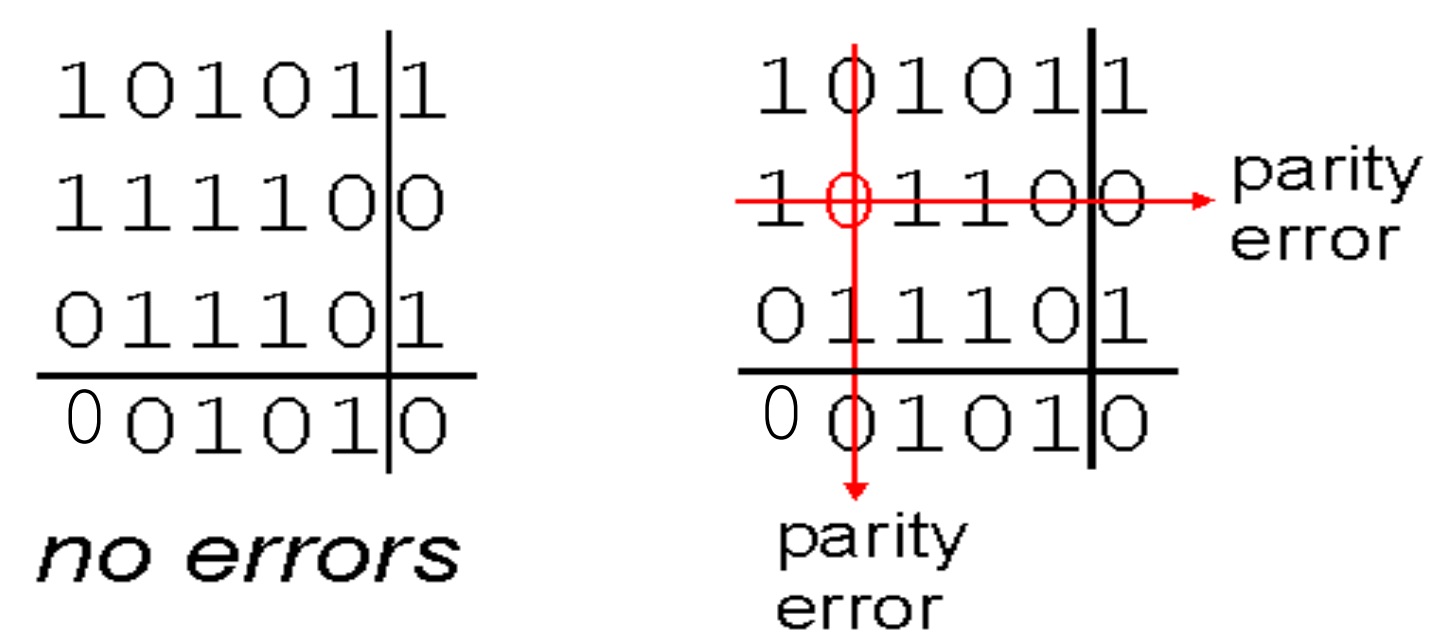

no errors

correctable single bit error

Cyclic redundancy check

- more powerful error-detection coding
- view data bits, D, as a binary number
- choose r+1 bit pattern (generator), G
- goal: choose r CRC bits, R, such that
  - <D,R> exactly divisible by G (modulo 2)
  - receiver knows G, divides <D,R> by G. If non-zero remainder: error detected!
  - can detect all burst errors less than r+1 bits
- widely used in practice (Ethernet, 802.11 WiFi, ATM)

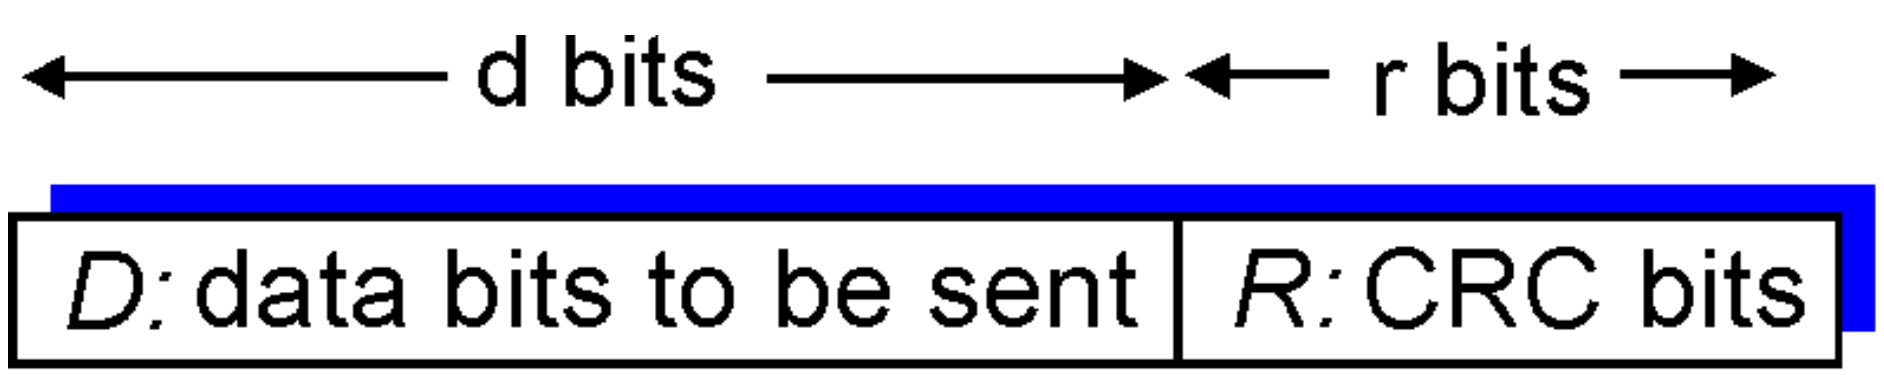

bit pattern

$D * 2^r$ XOR R

mathematical formula

CRC example

want:

$D \cdot 2^r$ XOR R = nG

equivalently:

$D \cdot 2^r$ = nG XOR R

equivalently:

if we divide $D \cdot 2^r$ by G, want remainder R to satisfy:

$$\boxed{R = remainder[\frac{D \cdot 2^r}{G}]}$$

All CRC calculations are done in modulo-2 arithmetic
Without carries in addition or borrows in subtraction

G   D $r = 3$

```
            101011
     ____________
1001 ) 101110000
       1001
       ----
         101
         000
         ----
         1010
         1001
         ----
           110
           000
          ----
           1100
           1001
           ----
            1010
            1001
            ----
             011
```

R

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

Multiple access links, protocols

two types of "links":

- point-to-point
  - PPP (point-to-point protocol) for dial-up access
  - point-to-point link between Ethernet switch, host
- *broadcast (shared wire or medium)*
  - old-fashioned Ethernet
  - 802.11 wireless LAN

shared wire (e.g., cabled Ethernet)

shared RF (e.g., 802.11 WiFi)

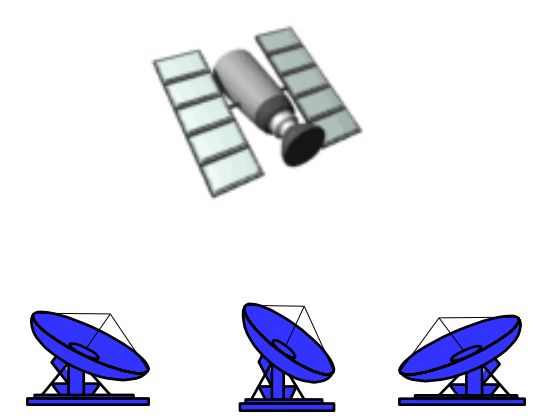

shared RF (satellite)

humans at a cocktail party (shared air, acoustical)

Multiple access protocols

- single shared broadcast channel
- two or more simultaneous transmissions by nodes: interference
  - *collision* if node receives two or more signals at the same time

multiple access protocol

- distributed algorithm that determines how nodes share channel, i.e., determine when node can transmit
- communication about channel sharing must use channel itself!
  - no out-of-band channel for coordination

MAC protocols: taxonomy

three broad classes:

- *channel partitioning*
  - divide channel into smaller "pieces" (time slots, frequency, code)
  - allocate piece to node for exclusive use
- *random access*
  - channel not divided, allow collisions
  - "recover" from collisions
- *"taking turns"*
  - nodes take turns, but nodes with more to send can take longer turns

Channel partitioning MAC protocols: TDMA

TDMA: time division multiple access

- access to channel in "rounds"
- each station gets fixed length slot (length = pkt trans time) in each round
- unused slots go idle
- example: 6-station LAN, 1,3,4 have pkt, slots 2,5,6 idle

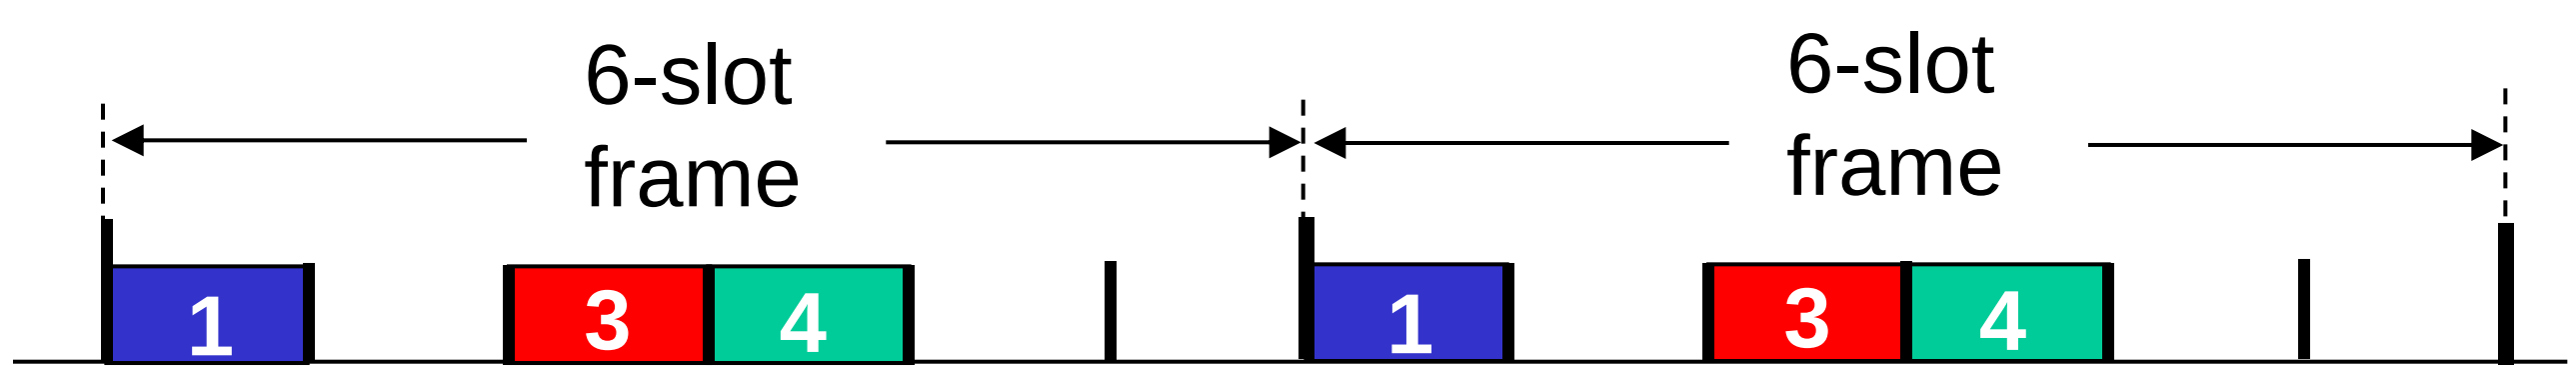

Channel partitioning MAC protocols: FDMA

FDMA: frequency division multiple access

- channel spectrum divided into frequency bands
- each station assigned fixed frequency band
- unused transmission time in frequency bands go idle
- example: 6-station LAN, 1,3,4 have pkt, frequency bands 2,5,6 idle

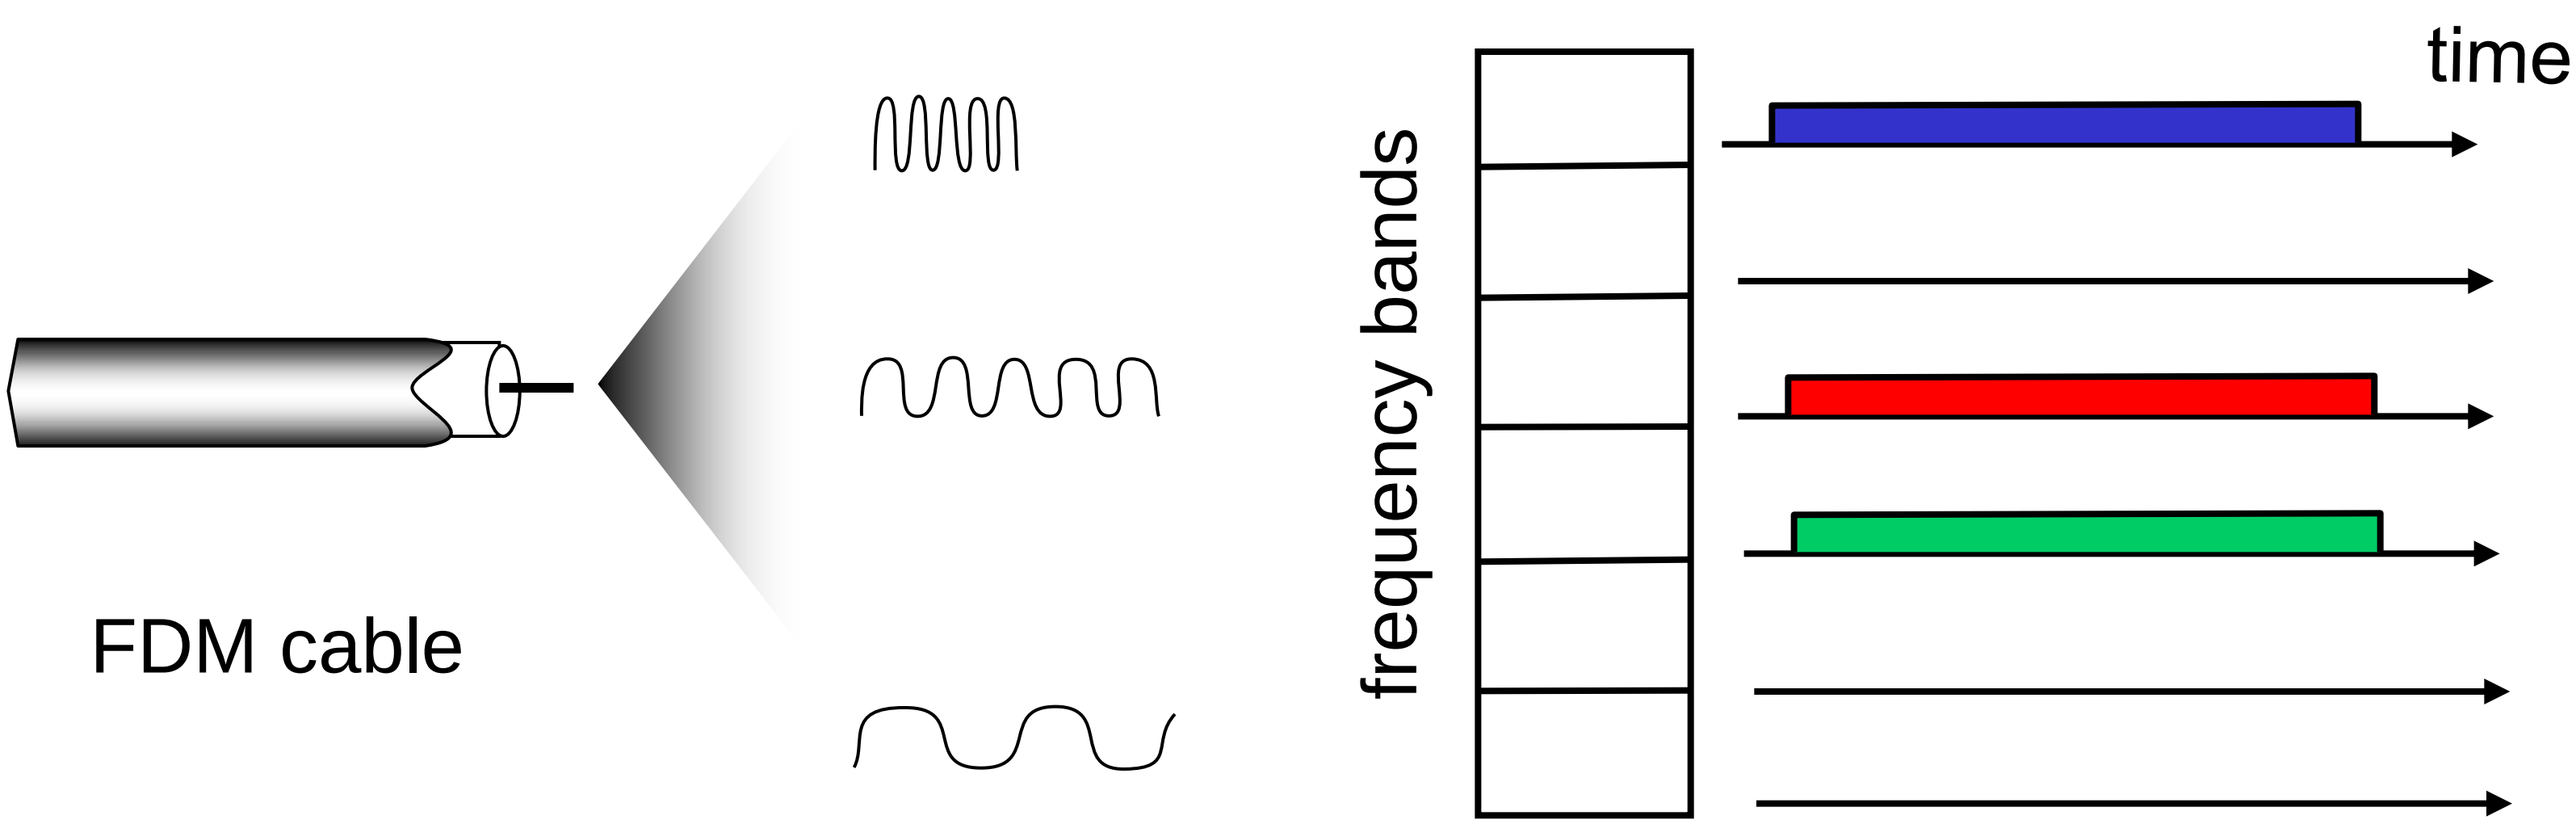

Random access protocols

- when node has packet to send
  - transmit at full channel data rate R.
  - no *a priori* coordination among nodes
- two or more transmitting nodes ➜ "collision",
- random access MAC protocol specifies:
  - how to detect collisions
  - how to recover from collisions (e.g., via delayed retransmissions)
- examples of random access MAC protocols:
  - **CSMA**, **CSMA/CD**, CSMA/CA

CSMA (carrier sense multiple access)

CSMA: listen before transmit:

if channel sensed idle: transmit entire frame

- if channel sensed busy, defer transmission

- human analogy: don't interrupt others!

CSMA collisions

- collisions *can* still occur: propagation delay means two nodes may not hear each other's transmission
- collision: entire packet transmission time wasted
  - distance & propagation delay play role in determining collision probability

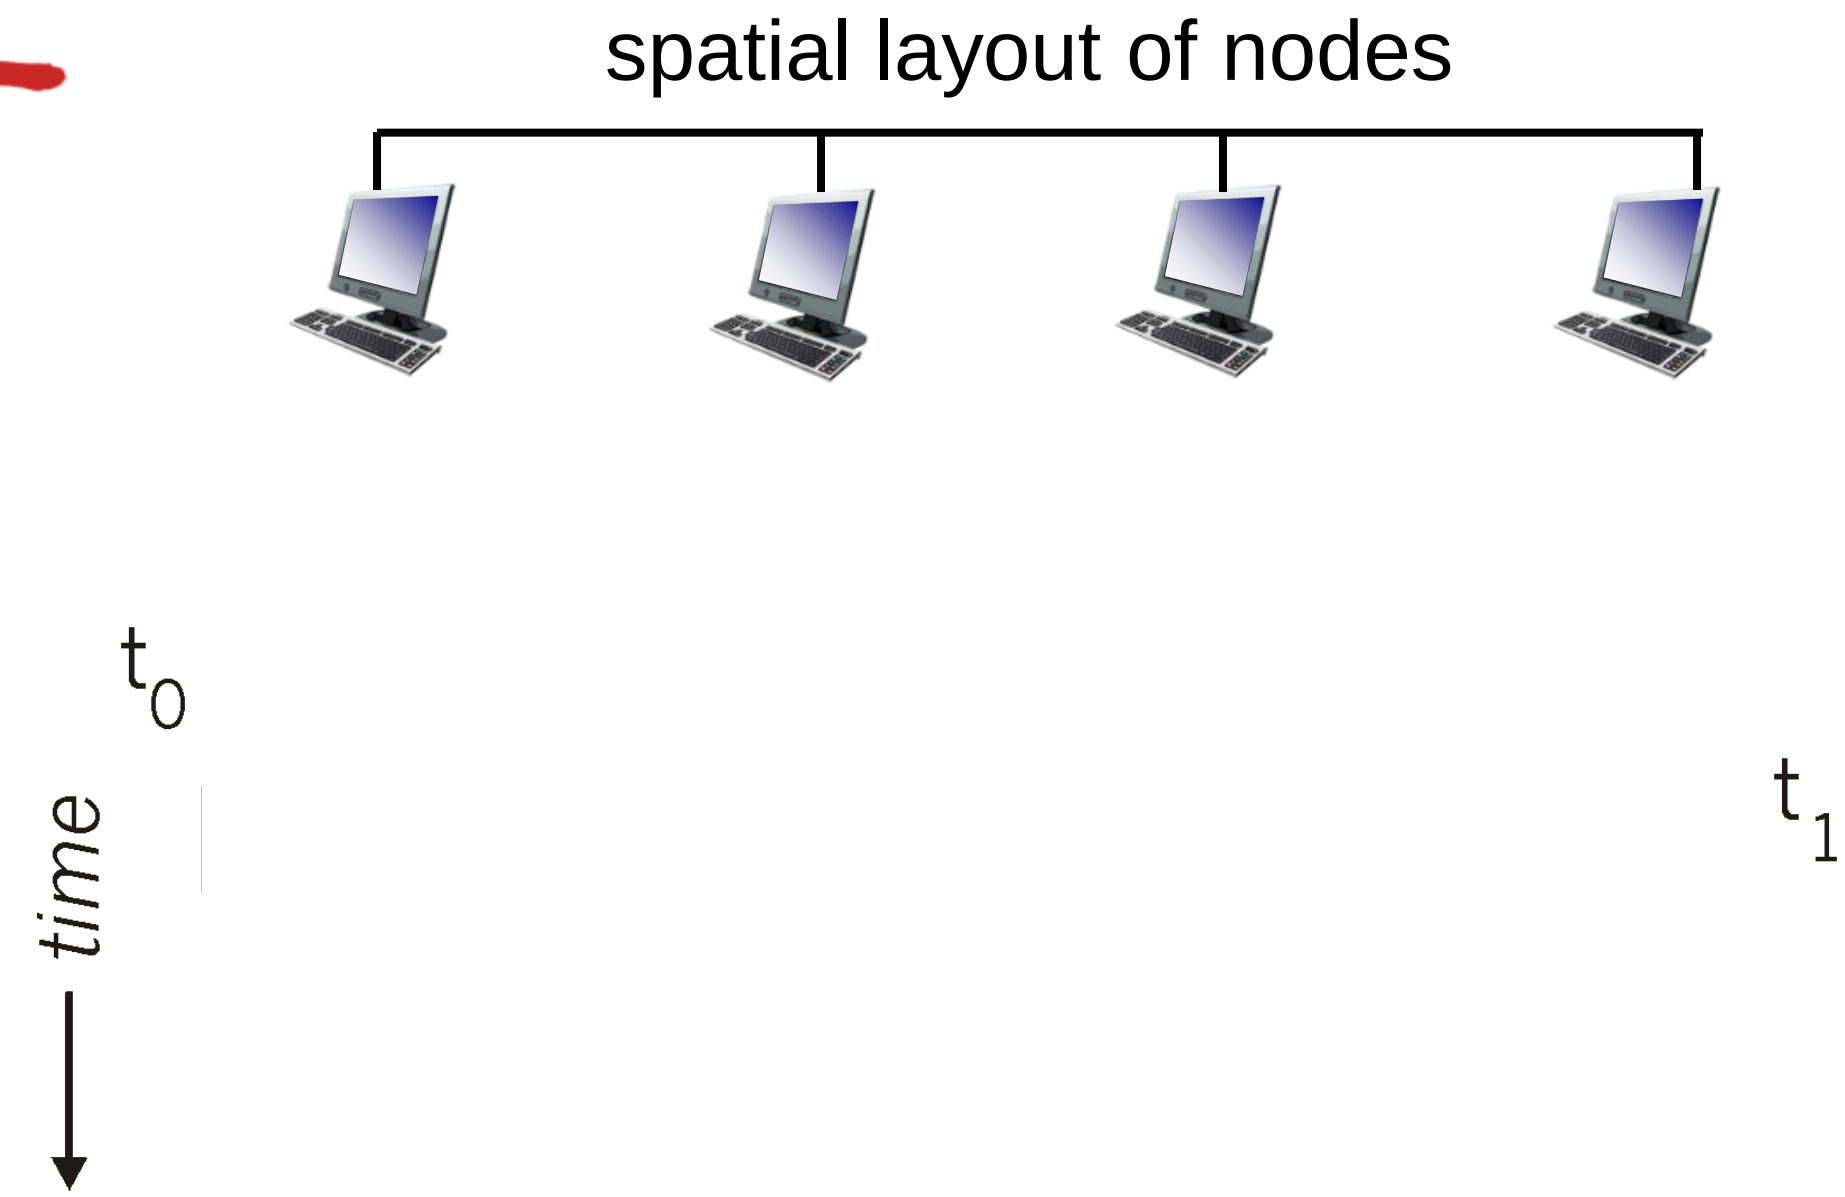

CSMA/CD (collision detection)

CSMA/CD: carrier sensing, deferral as in CSMA

- collisions *detected* within short time
- colliding transmissions aborted, reducing channel wastage

- collision detection:
  - easy in wired LANs: measure signal strengths, compare transmitted, received signals
  - difficult in wireless LANs: received signal strength overwhelmed by local transmission strength
- human analogy: the polite conversationalist

CSMA/CD (collision detection)

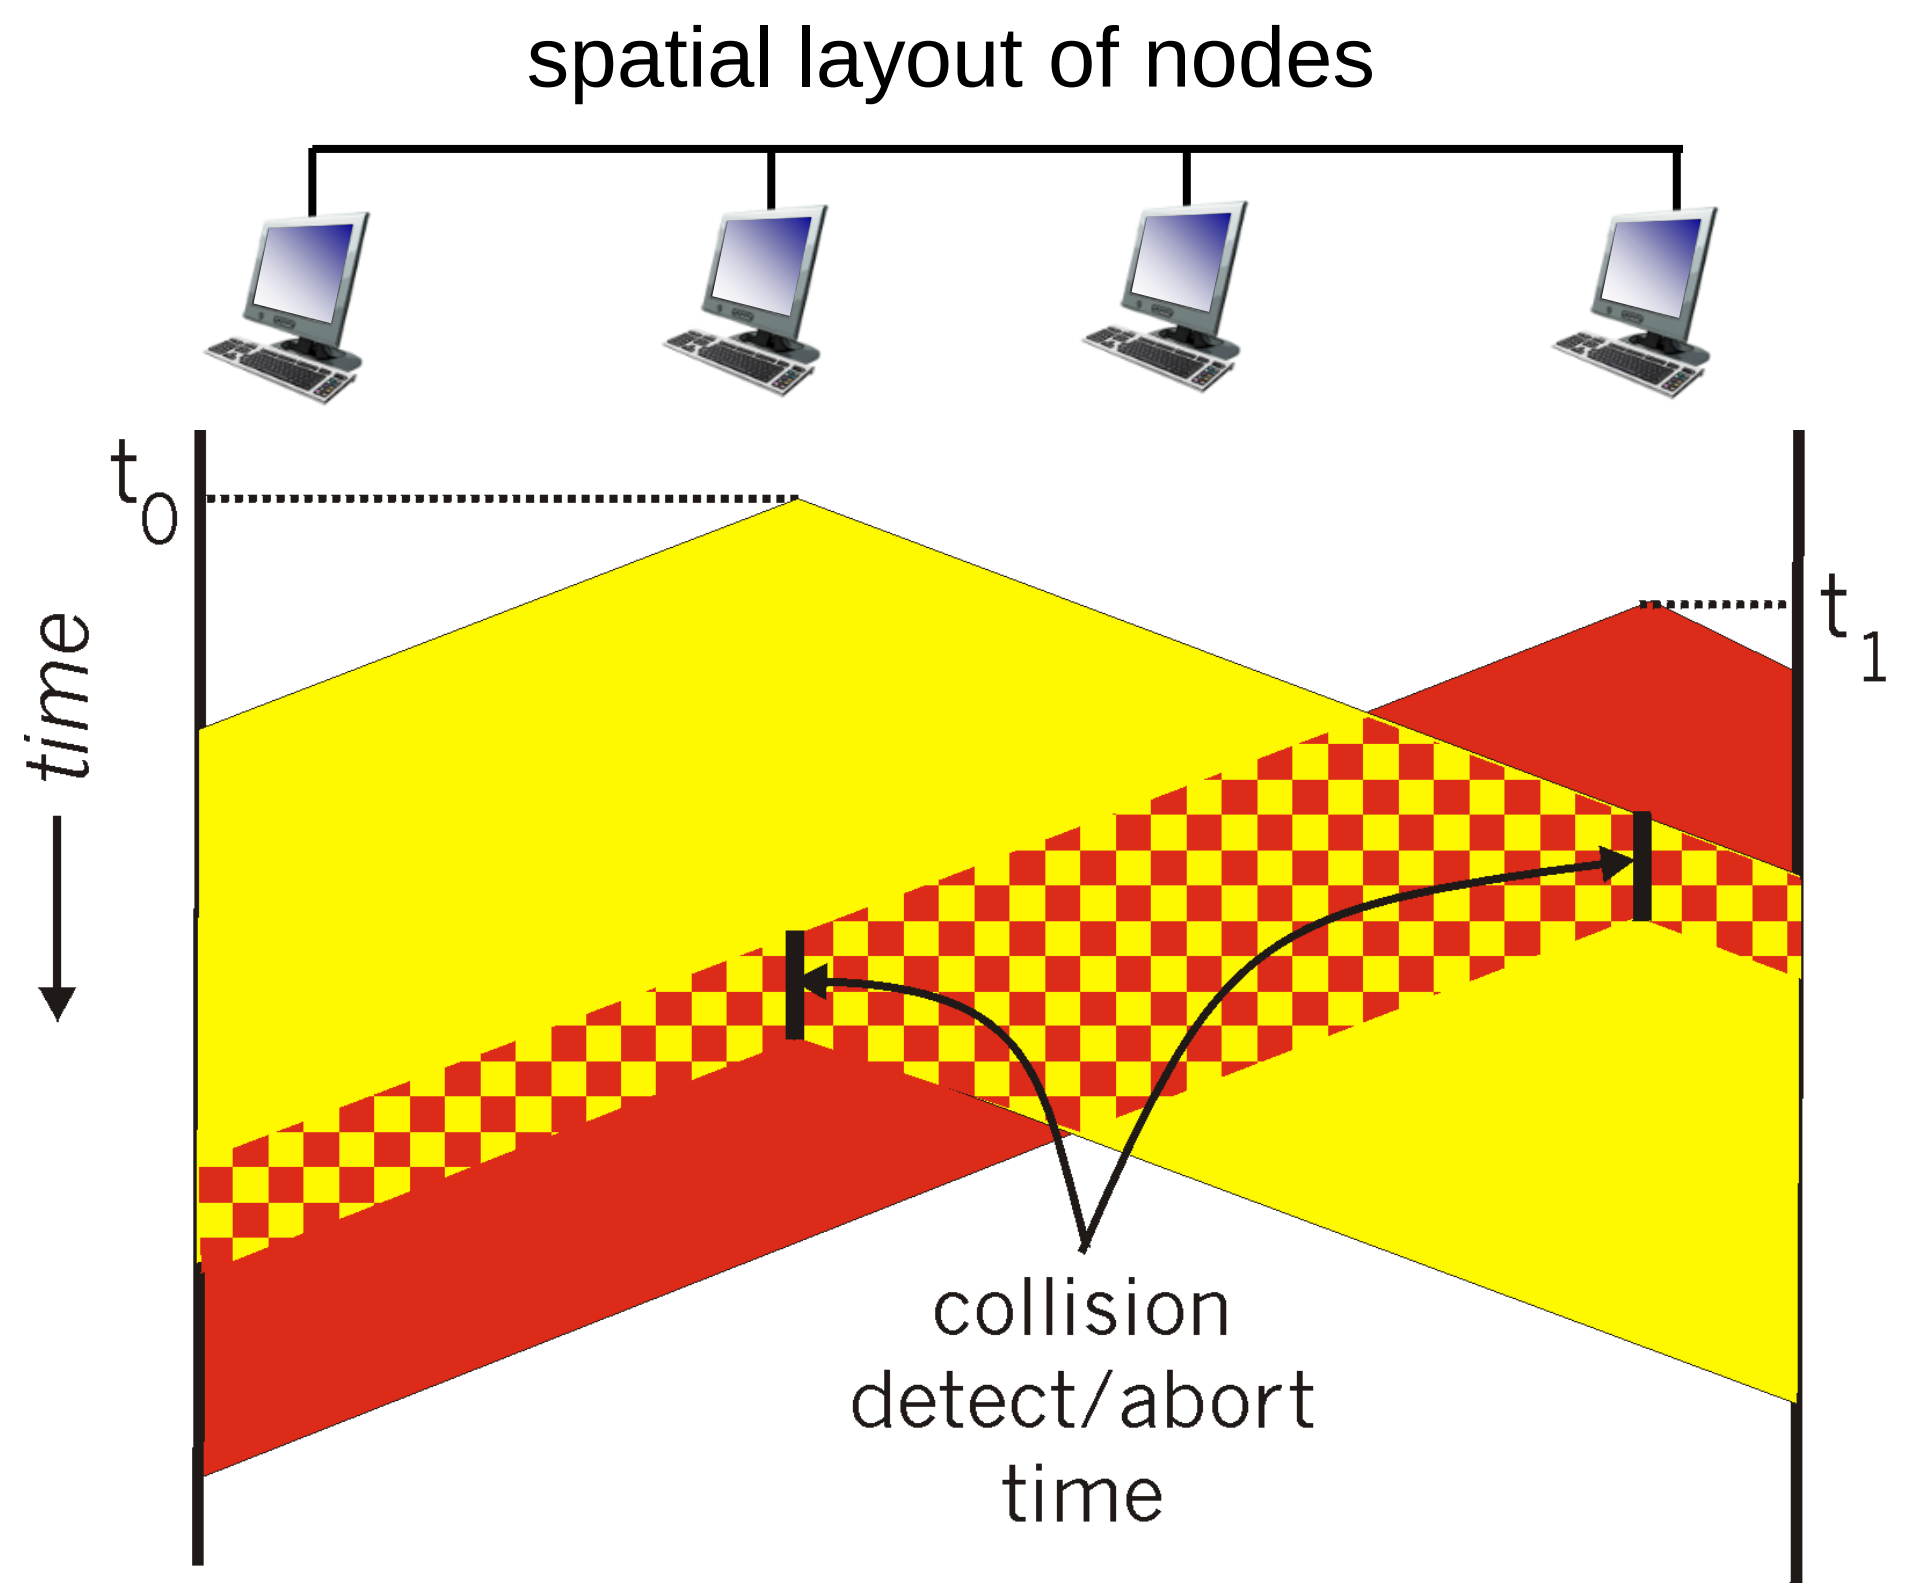

Ethernet CSMA/CD algorithm

1. NIC receives datagram from network layer, creates frame
2. If NIC senses channel idle, starts frame transmission. If NIC senses channel busy, waits until channel idle, then transmits.
3. If NIC transmits entire frame without detecting another transmission, NIC is done with frame !
4. If NIC detects another transmission while transmitting, aborts and sends jam signal
5. After aborting, NIC enters *binary (exponential) backoff:*
   - after *m*th collision, NIC chooses *K* at random from $\{0,1,2, \ldots, 2^m-1\}$. NIC waits K·512 bit times, returns to Step 2
   - longer backoff interval with more collisions

"Taking turns" MAC protocols

channel partitioning MAC protocols:

- share channel *efficiently* and *fairly* at high load
- inefficient at low load: delay in channel access, 1/N bandwidth allocated even if only 1 active node!

random access MAC protocols

- efficient at low load: single node can fully utilize channel
- high load: collision overhead

"taking turns" protocols

look for best of both worlds!

"Taking turns" MAC protocols

polling:

- master node "invites" slave nodes to transmit in turn
- typically used with "dumb" slave devices
- concerns:
  - polling overhead
  - latency
  - single point of failure (master)

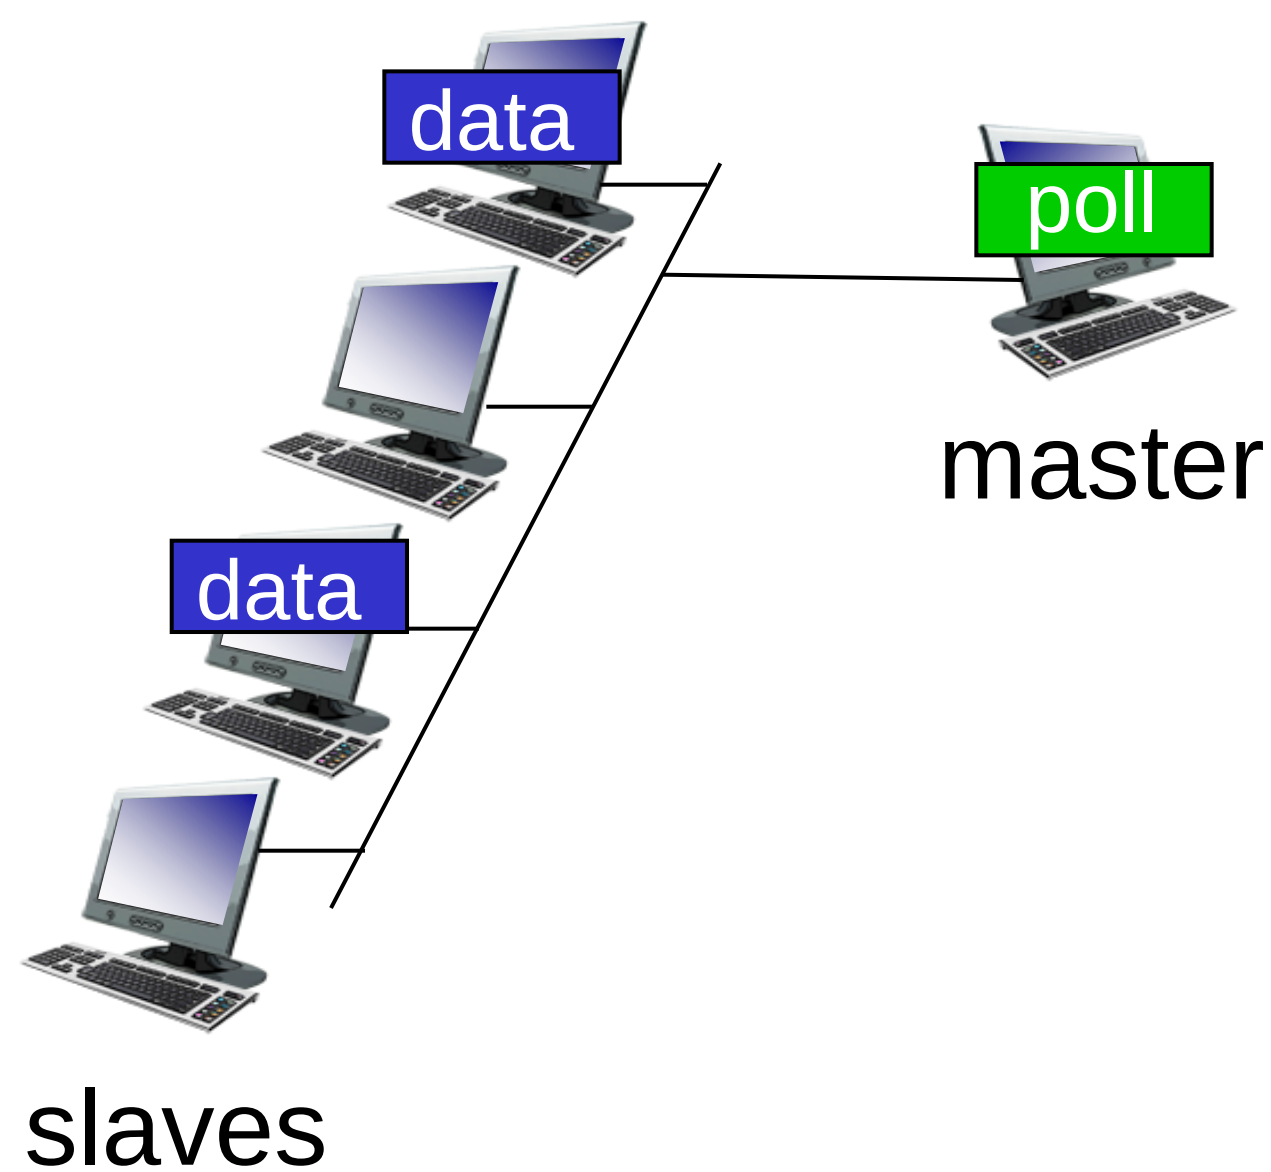

"Taking turns" MAC protocols

token passing:

- control *token* passed from one node to next sequentially.
- token message
- concerns:
  - token overhead
  - latency
  - single point of failure (token)

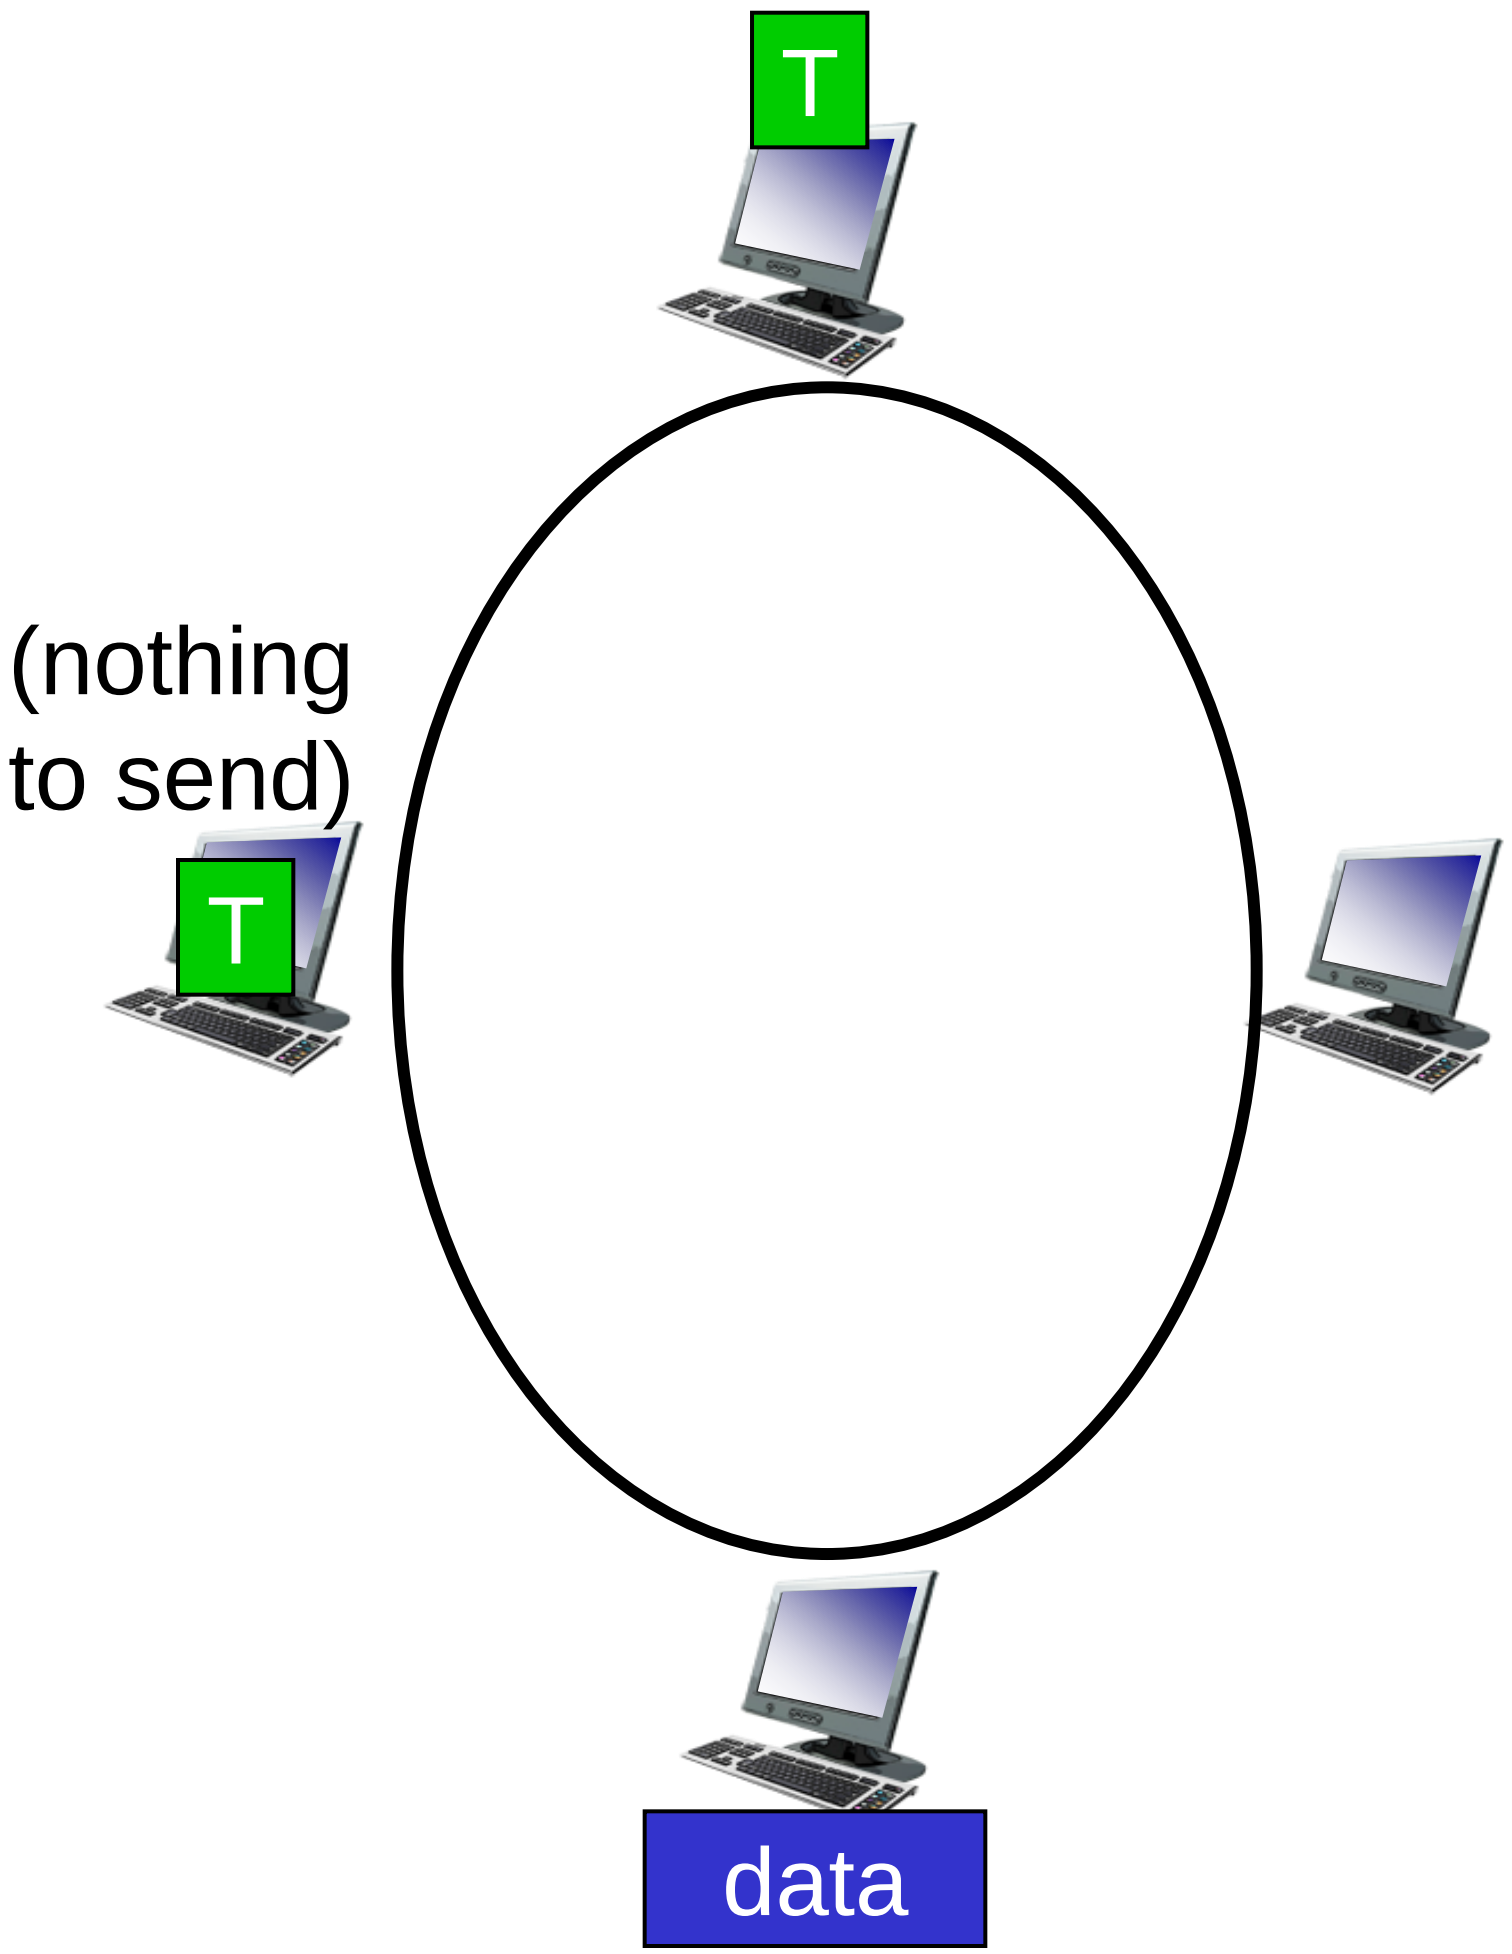

Summary of MAC protocols

- *channel partitioning,* by time, frequency or code
  - Time Division, Frequency Division
- *random access* (dynamic),
  - CSMA, CSMA/CD (used in Ethernet), CSMA/CA (used in 802.11)
- *taking turns*
  - polling from central site, token passing
  - Bluetooth, token ring

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

MAC addresses and ARP

- 32-bit IP address:
  - *network-layer* address for interface
  - used for layer 3 (network layer) forwarding
- MAC (or LAN or physical or Ethernet) address:
  - function: *used 'locally" to get frame from one interface to another physically-connected interface (same network, in IP-addressing sense)*
  - 48 bit MAC address (for most LANs) burned in NIC ROM, also sometimes software settable
  - e.g.: 1A-2F-BB-76-09-AD

hexadecimal (base 16) notation
(each "number" represents 4 bits)

LAN addresses and ARP

each adapter on LAN has unique *LAN* address

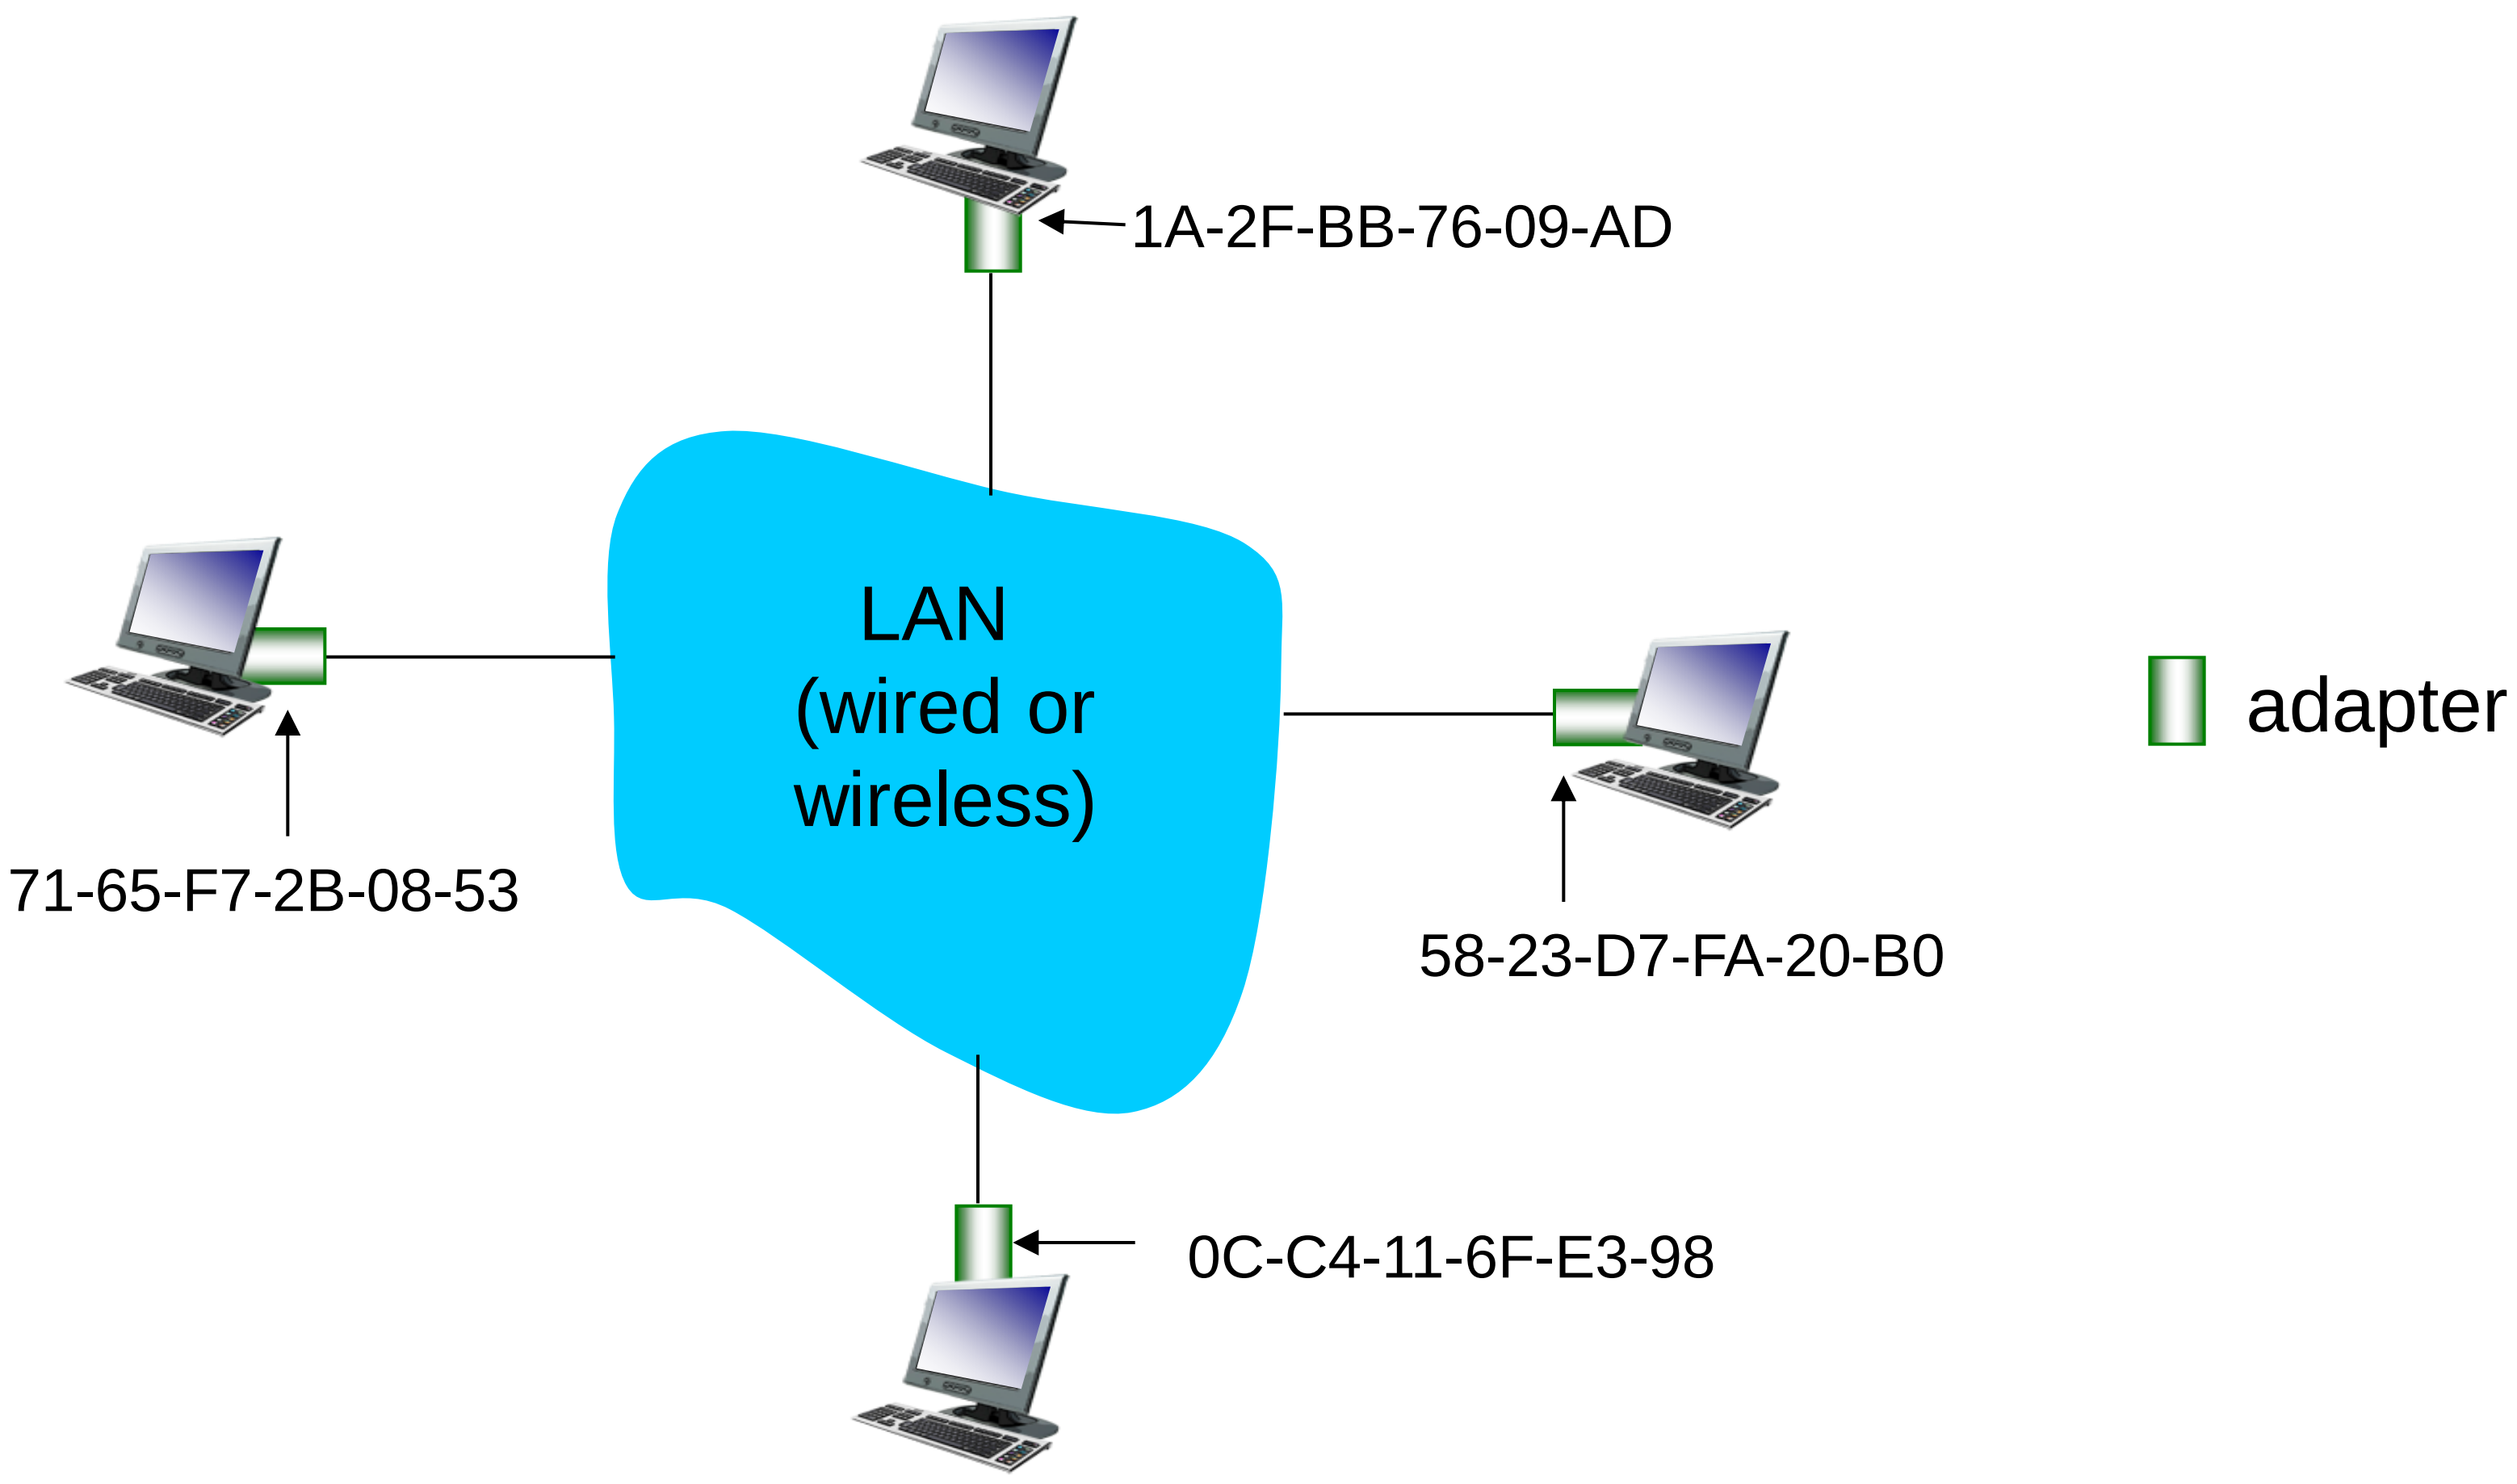

LAN addresses (more)

- MAC address allocation administered by IEEE
- manufacturer buys portion of MAC address space (to assure uniqueness)
- analogy:
  - MAC address: like Social Security Number
  - IP address: like postal address
- MAC flat address ➜ portability
  - can move LAN card from one LAN to another
- IP hierarchical address *not* portable
  - address depends on IP subnet to which node is attached

ARP: address resolution protocol

Question: how to determine interface's MAC address, knowing its IP address?

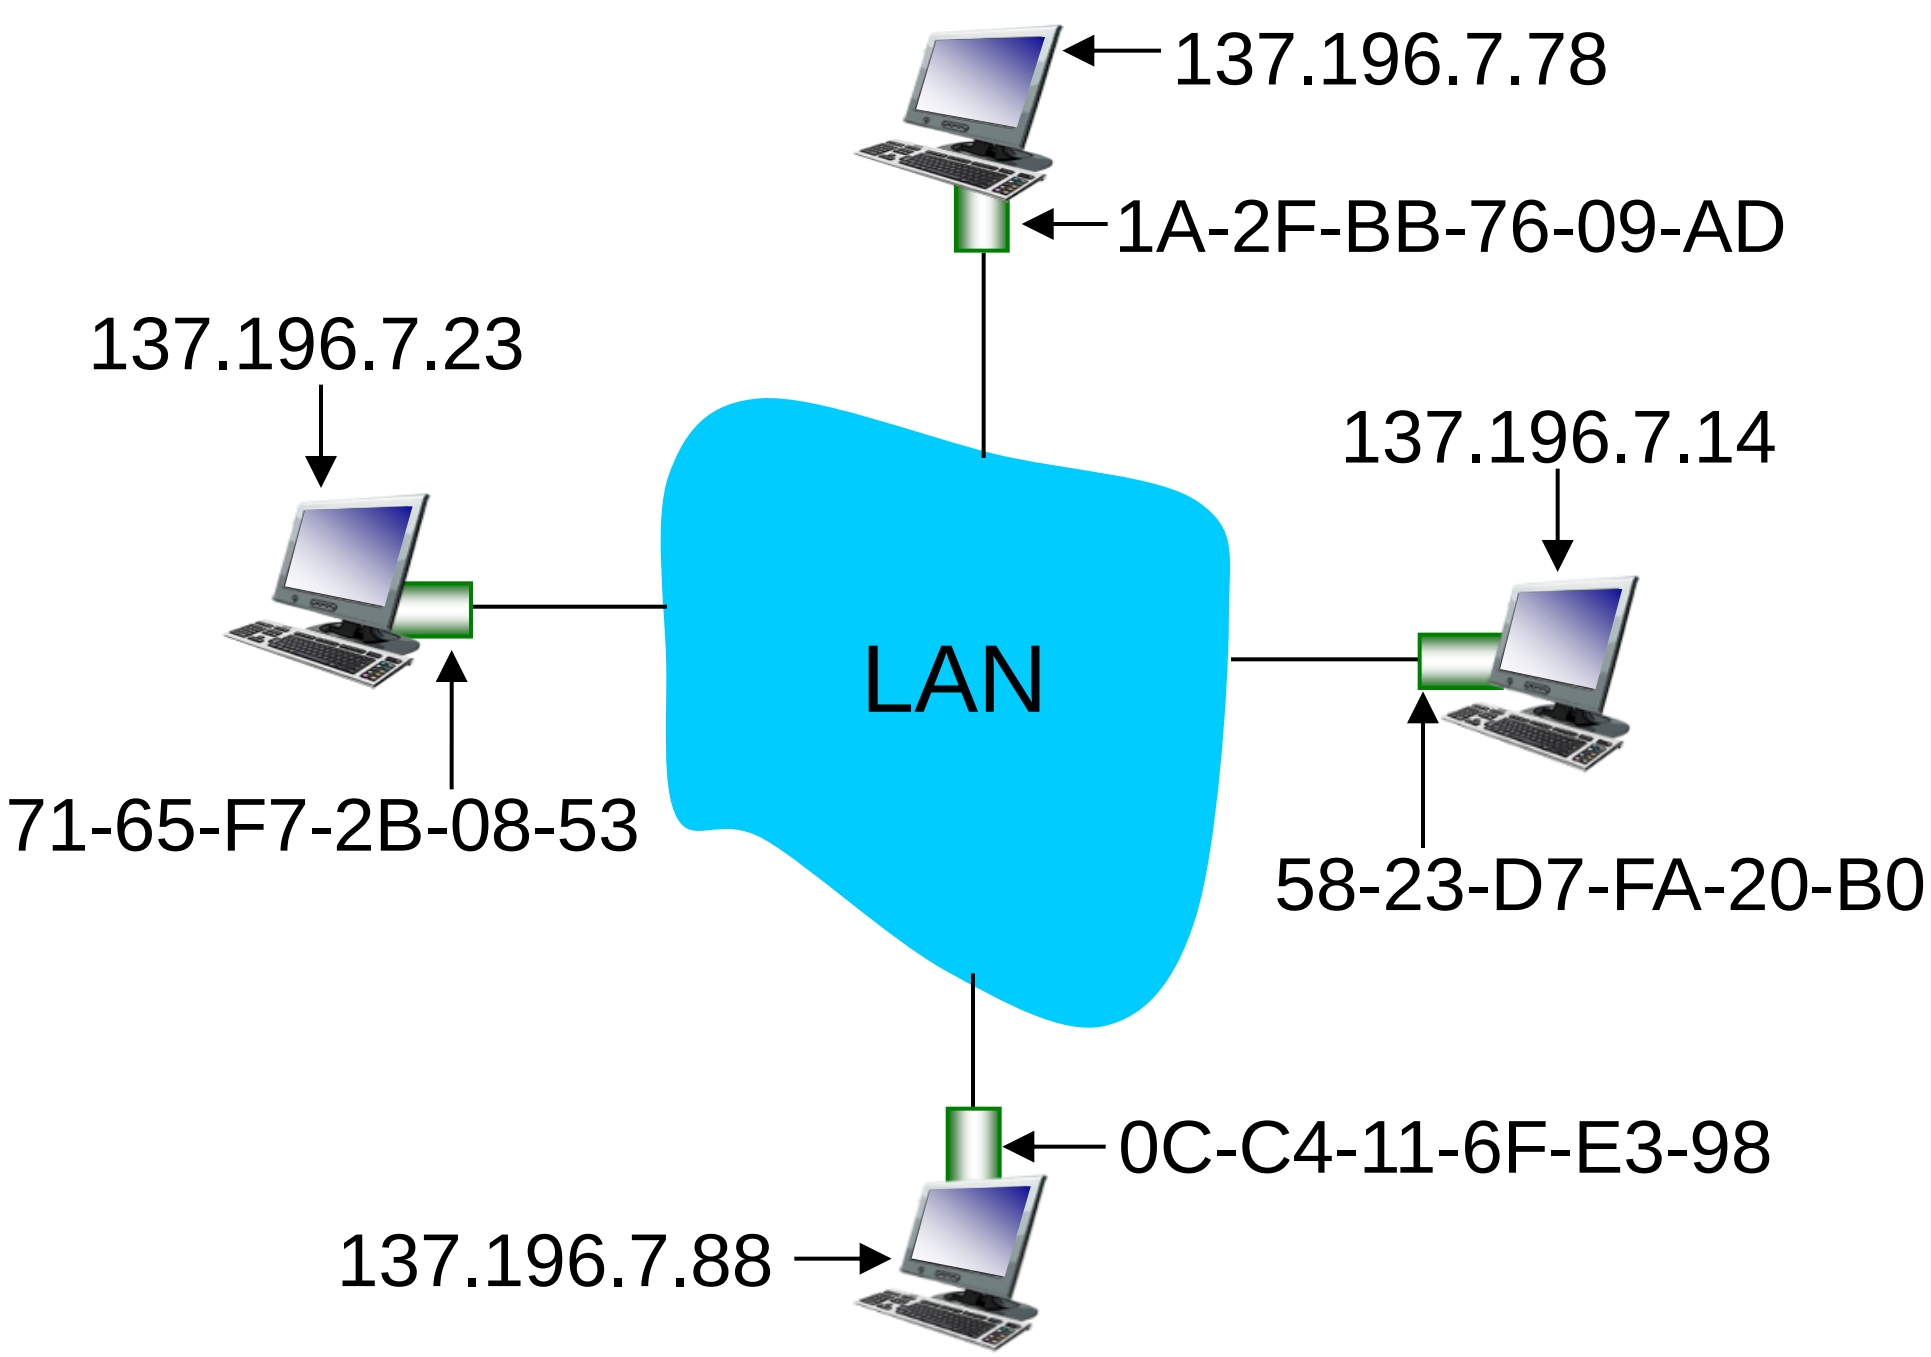

ARP table: each IP node (host, router) on LAN has table

- IP/MAC address mappings for some LAN nodes:

  < IP address; MAC address; TTL>

- TTL (Time To Live): time after which address mapping will be forgotten (typically 20 min)

ARP protocol: same LAN

- A wants to send datagram to B
  - B's MAC address not in A's ARP table.
- A broadcasts ARP query packet, containing B's IP address
  - dest MAC address = FF-FF-FF-FF-FF-FF
  - all nodes on LAN receive ARP query
- B receives ARP packet, replies to A with its (B's) MAC address
  - frame sent to A's MAC address (unicast)
- A caches (saves) IP-to-MAC address pair in its ARP table until information becomes old (times out)
  - soft state: information that times out (goes away) unless refreshed
- ARP is "plug-and-play":
  - nodes create their ARP tables *without intervention from net administrator*

Addressing: routing to another LAN

walkthrough: send datagram from A to B via R

- focus on addressing – at IP (datagram) and MAC layer (frame)
- assume A knows B's IP address
- assume A knows IP address of first hop router, R (how?)
- assume A knows R's MAC address (how?)

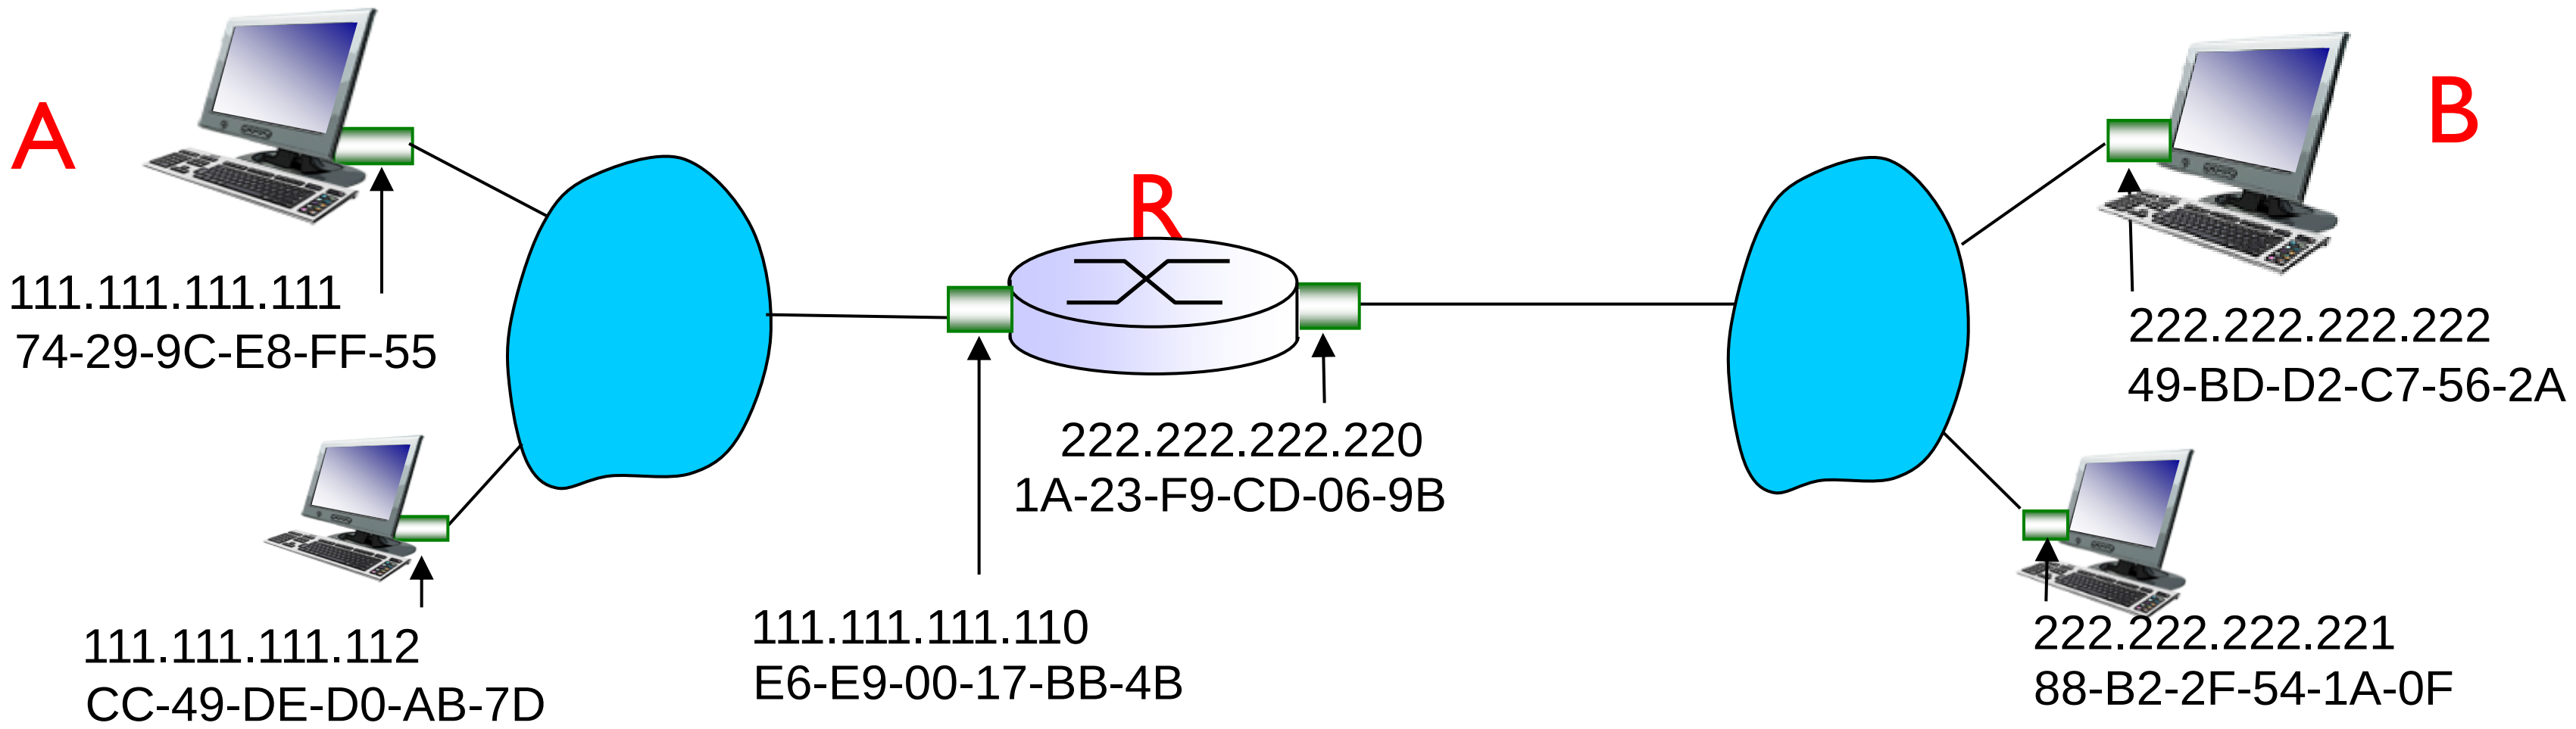

Addressing: routing to another LAN

- A creates IP datagram with IP source A, destination B
- A creates link-layer frame with R's MAC address as dest, frame contains A-to-B IP datagram

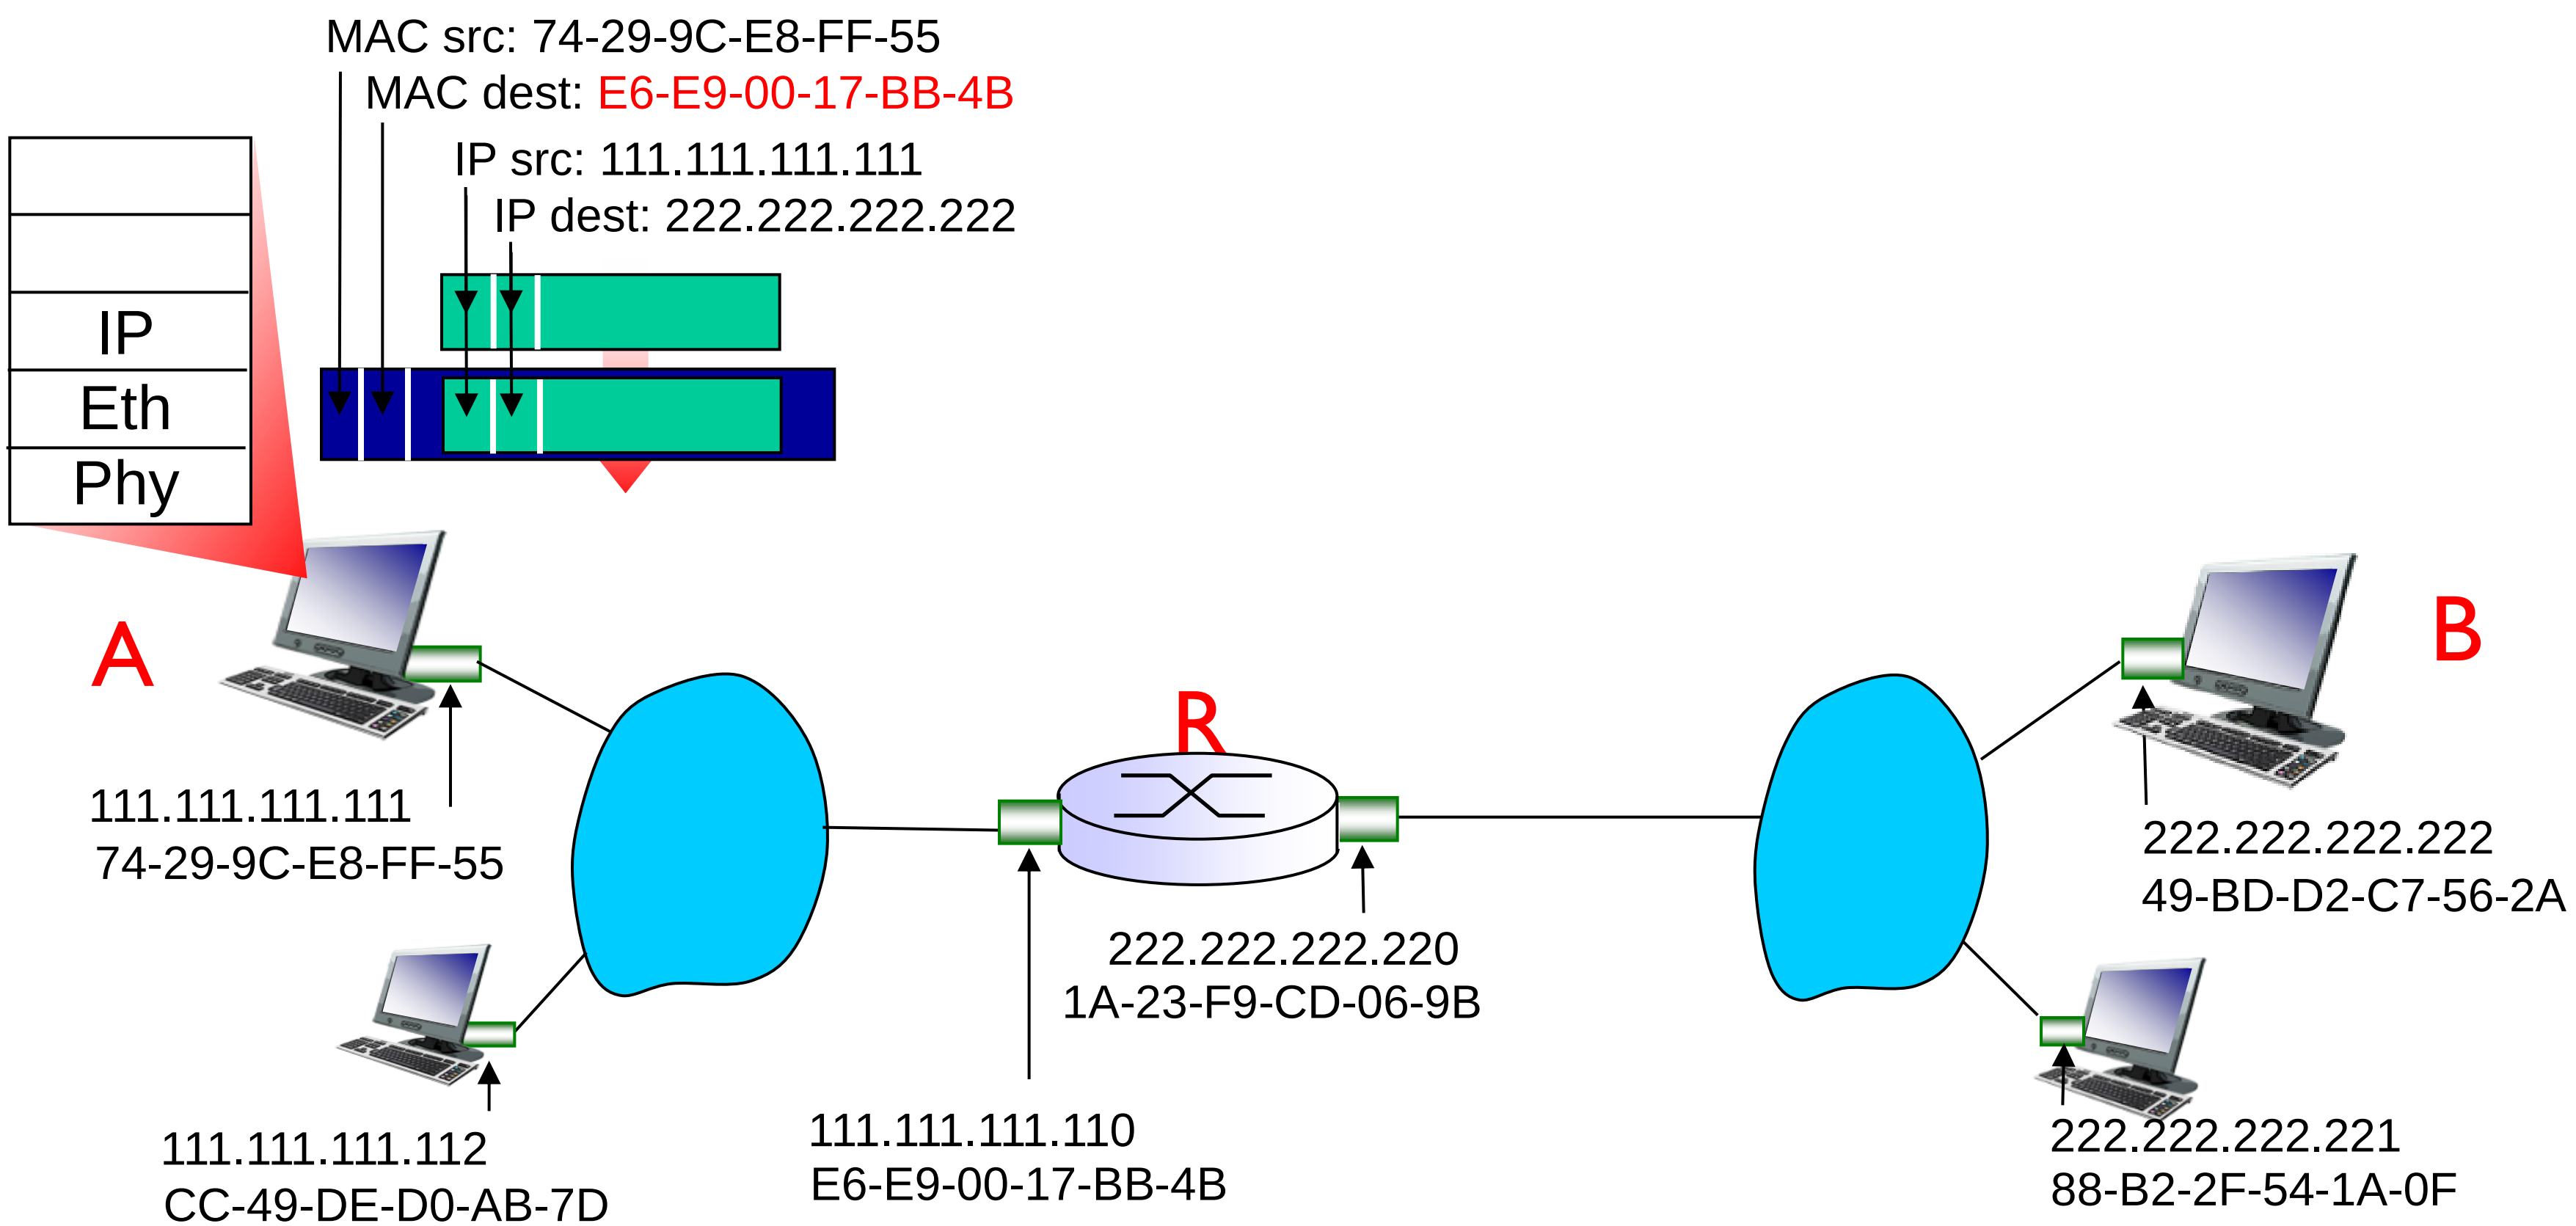

Addressing: routing to another LAN

- frame sent from A to R
- frame received at R, datagram removed, passed up to IP

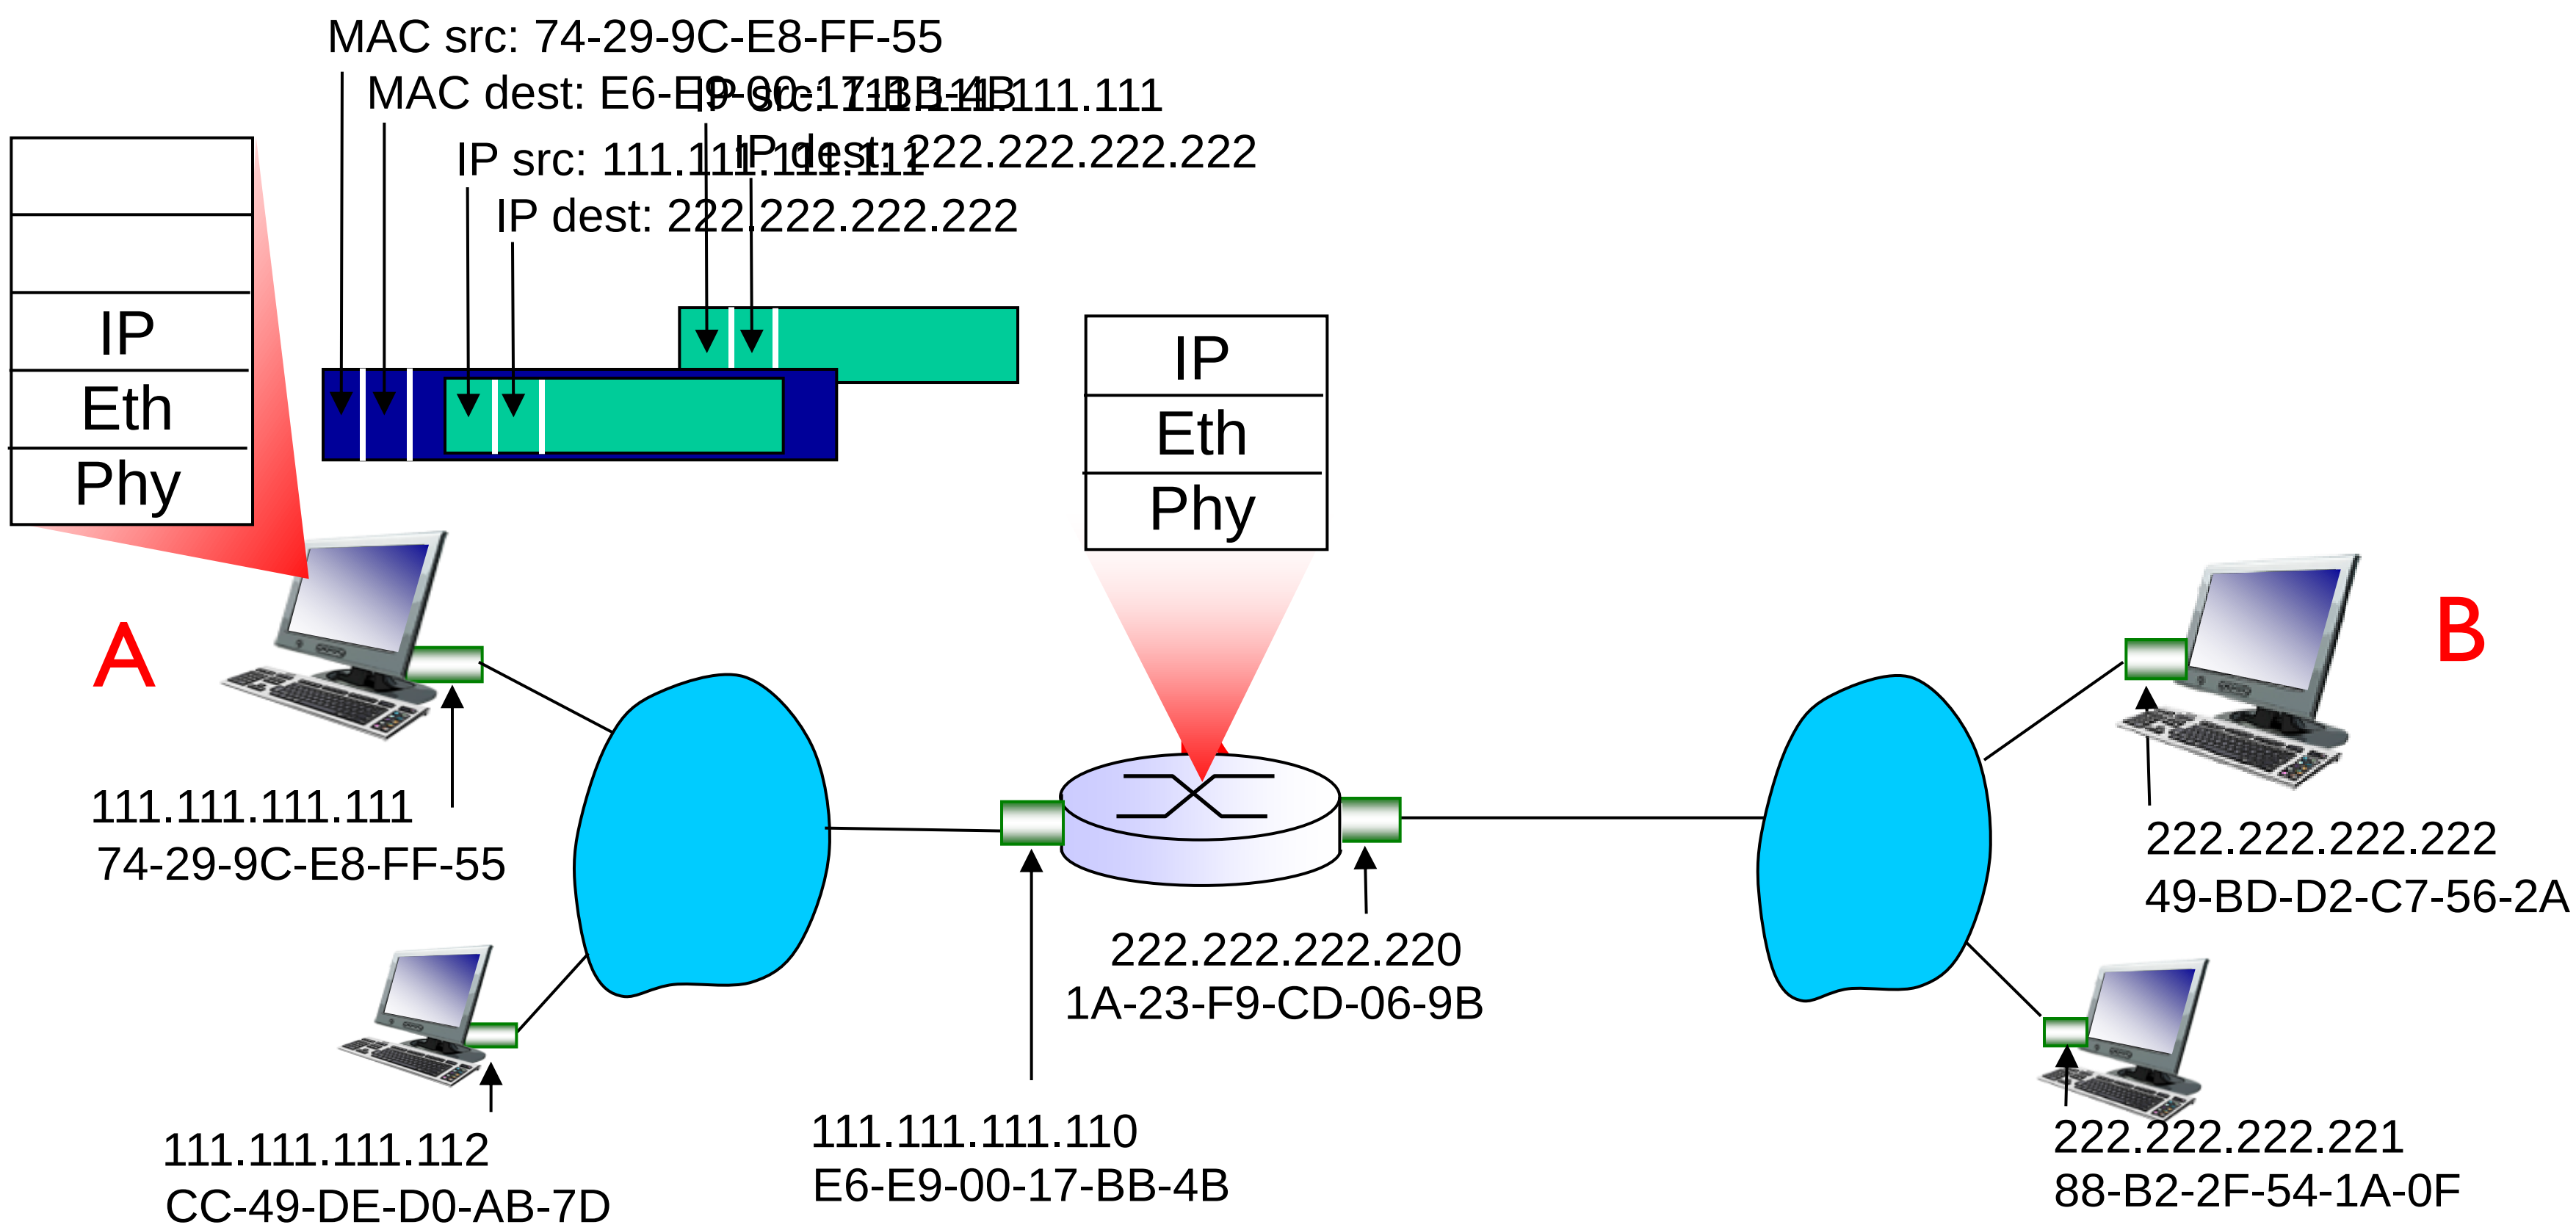

Addressing: routing to another LAN

- R forwards datagram with IP source A, destination B
- R creates link-layer frame with B's MAC address as dest, frame contains A-to-B IP datagram

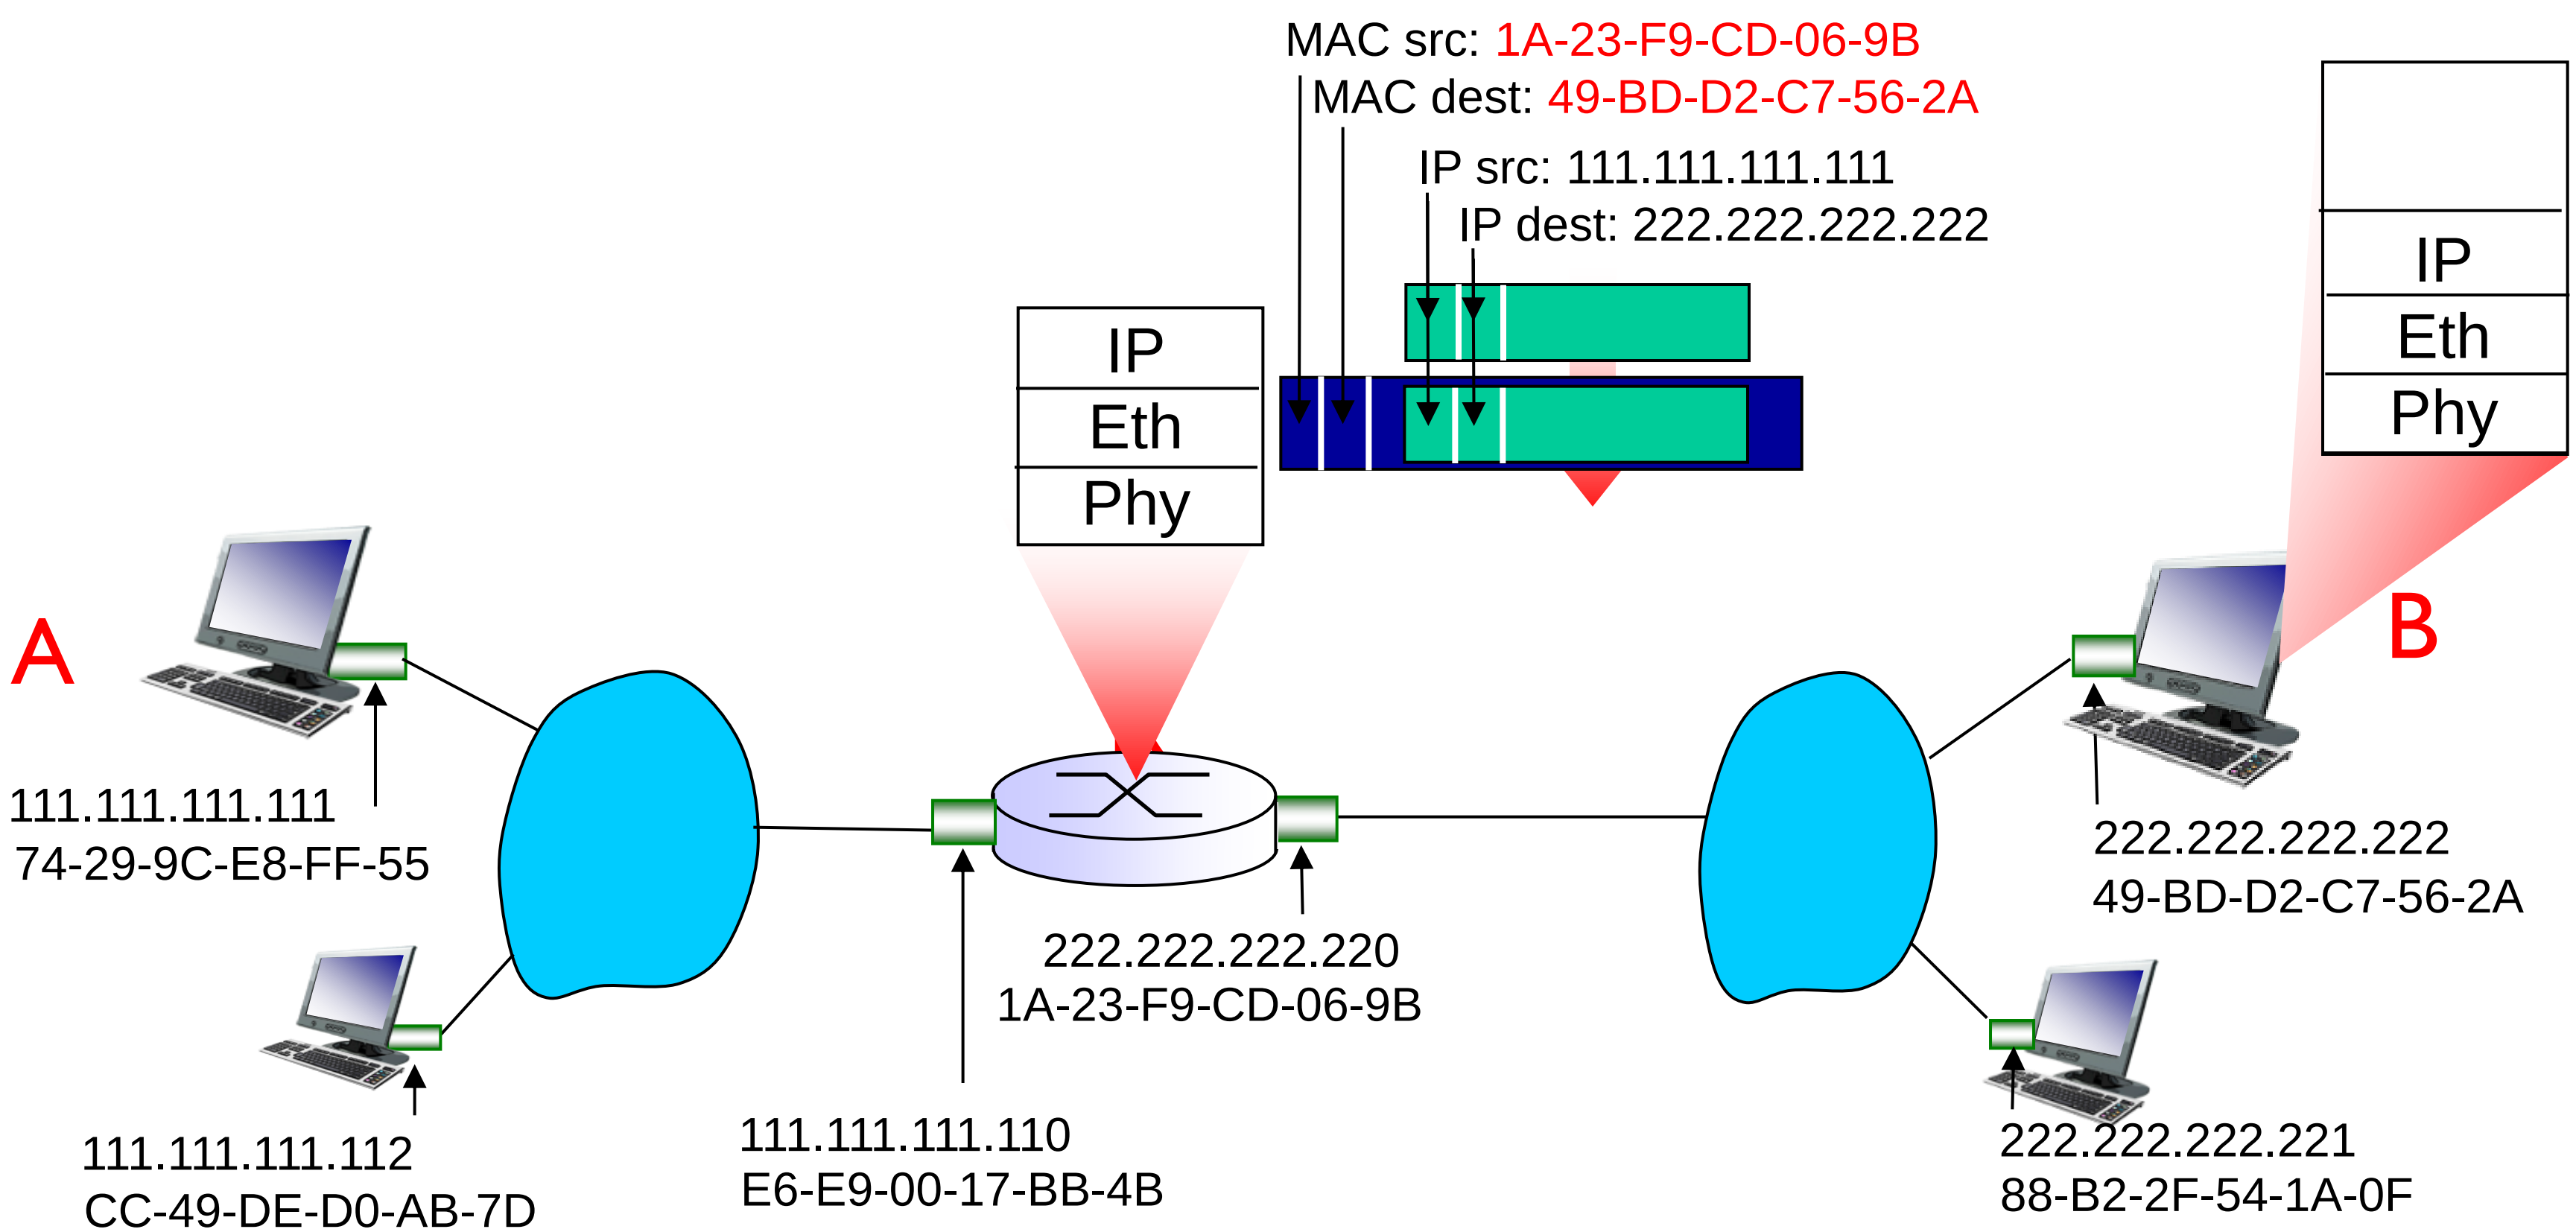

Addressing: routing to another LAN

- R forwards datagram with IP source A, destination B
- R creates link-layer frame with B's MAC address as dest, frame contains A-to-B IP datagram

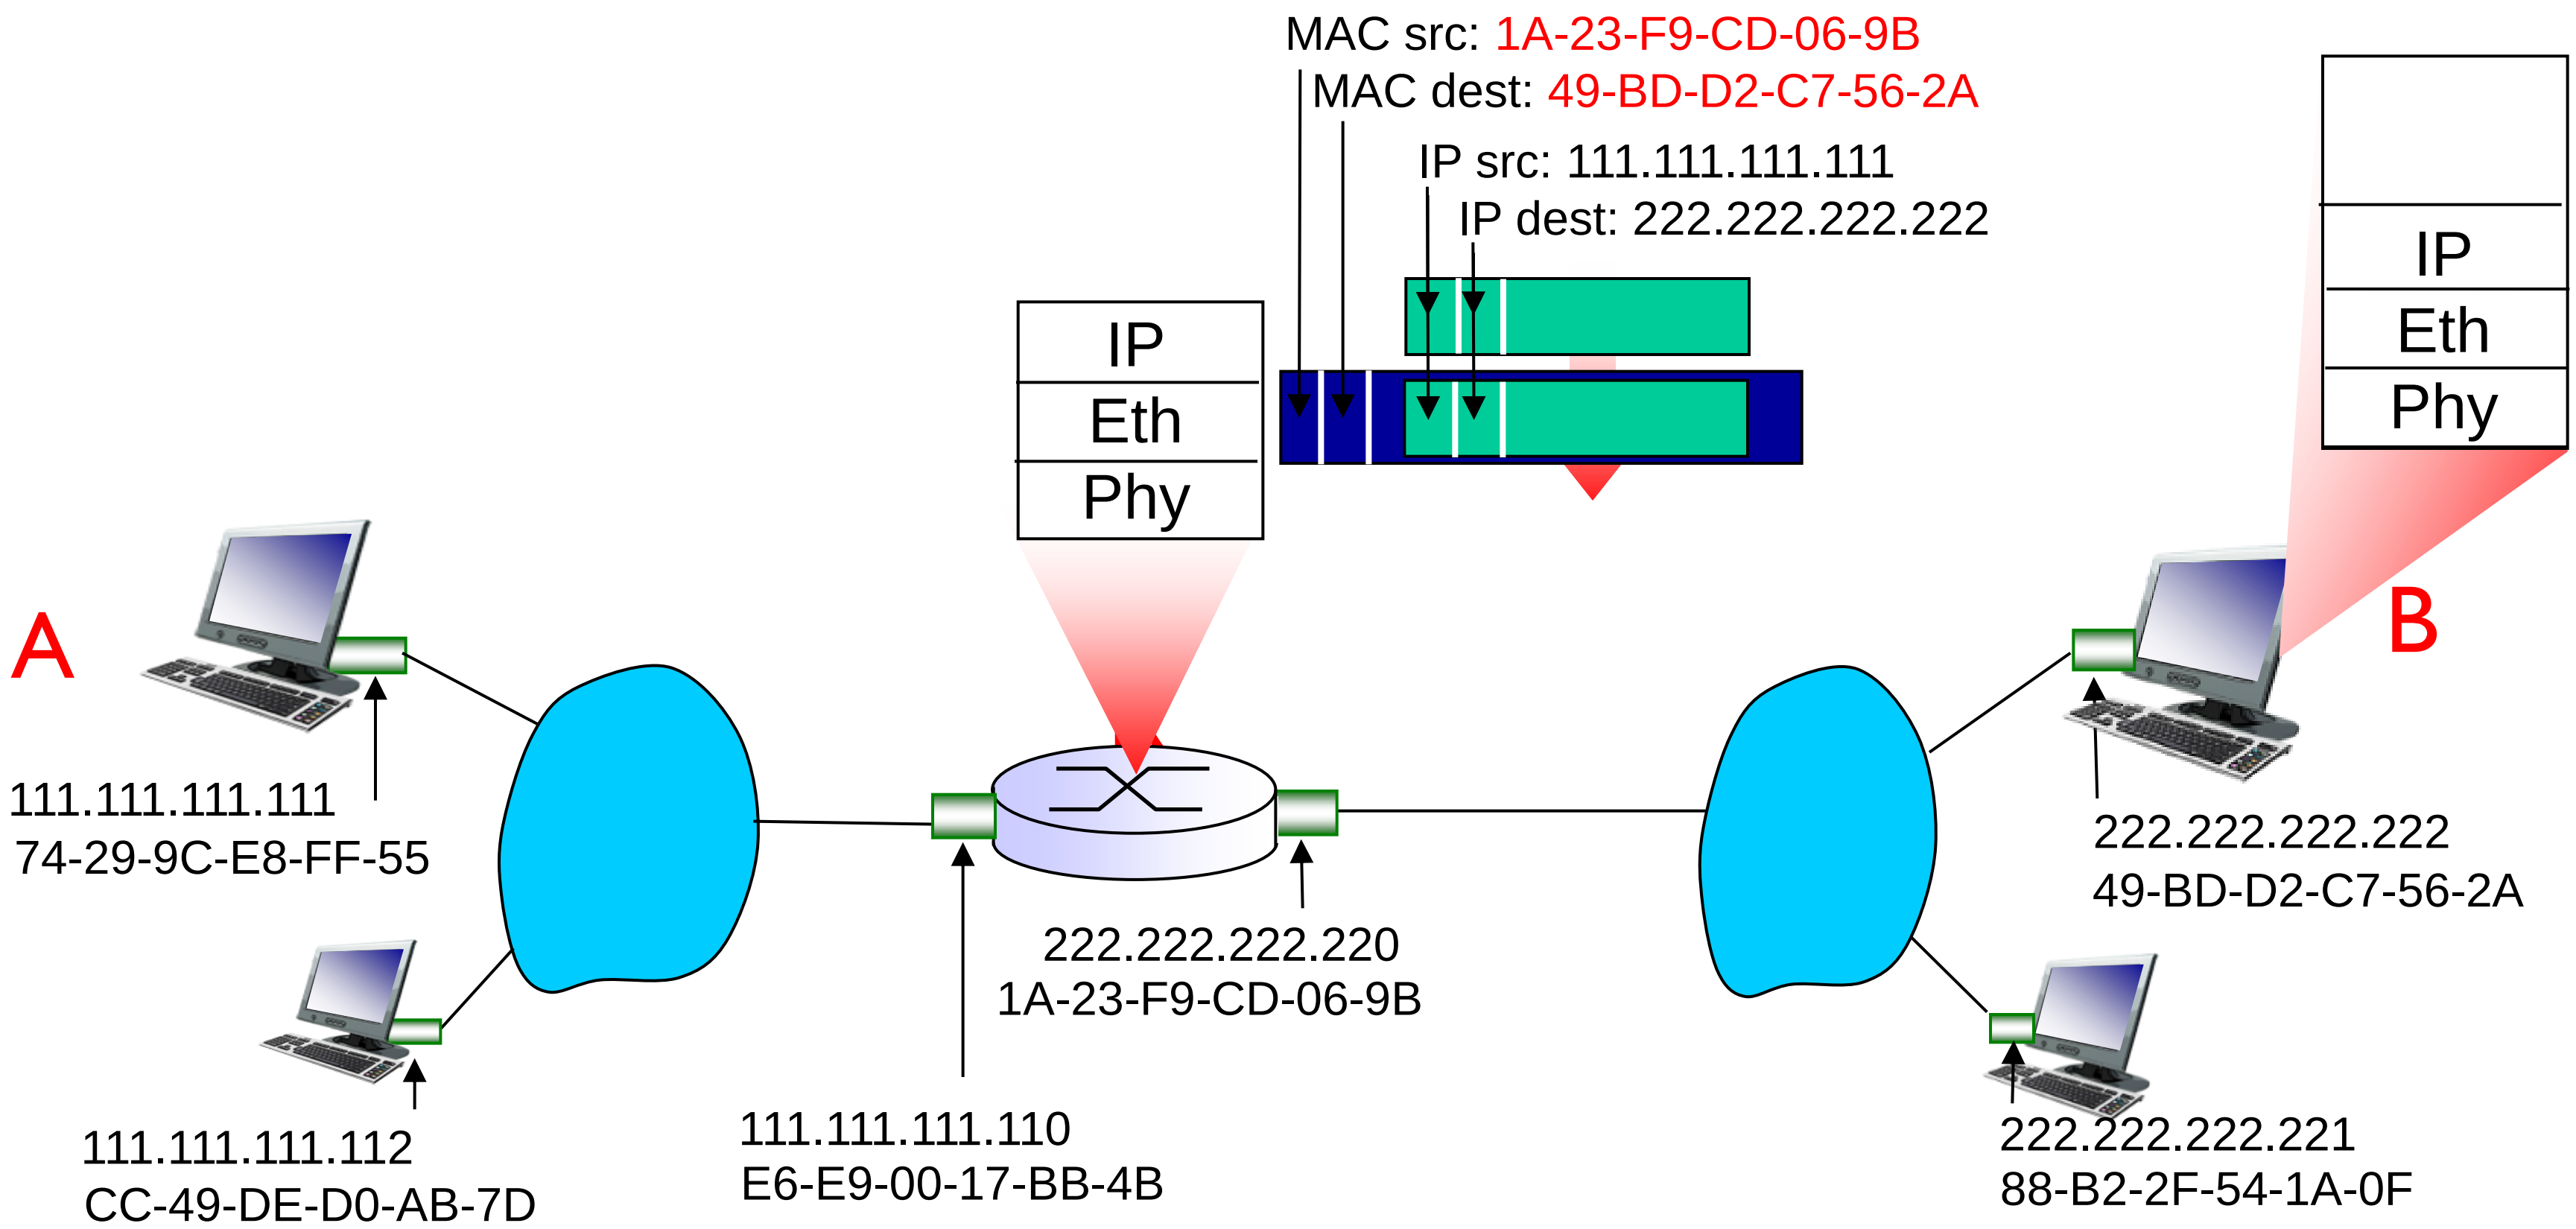

Addressing: routing to another LAN

- R forwards datagram with IP source A, destination B
- R creates link-layer frame with B's MAC address as dest, frame contains A-to-B IP datagram

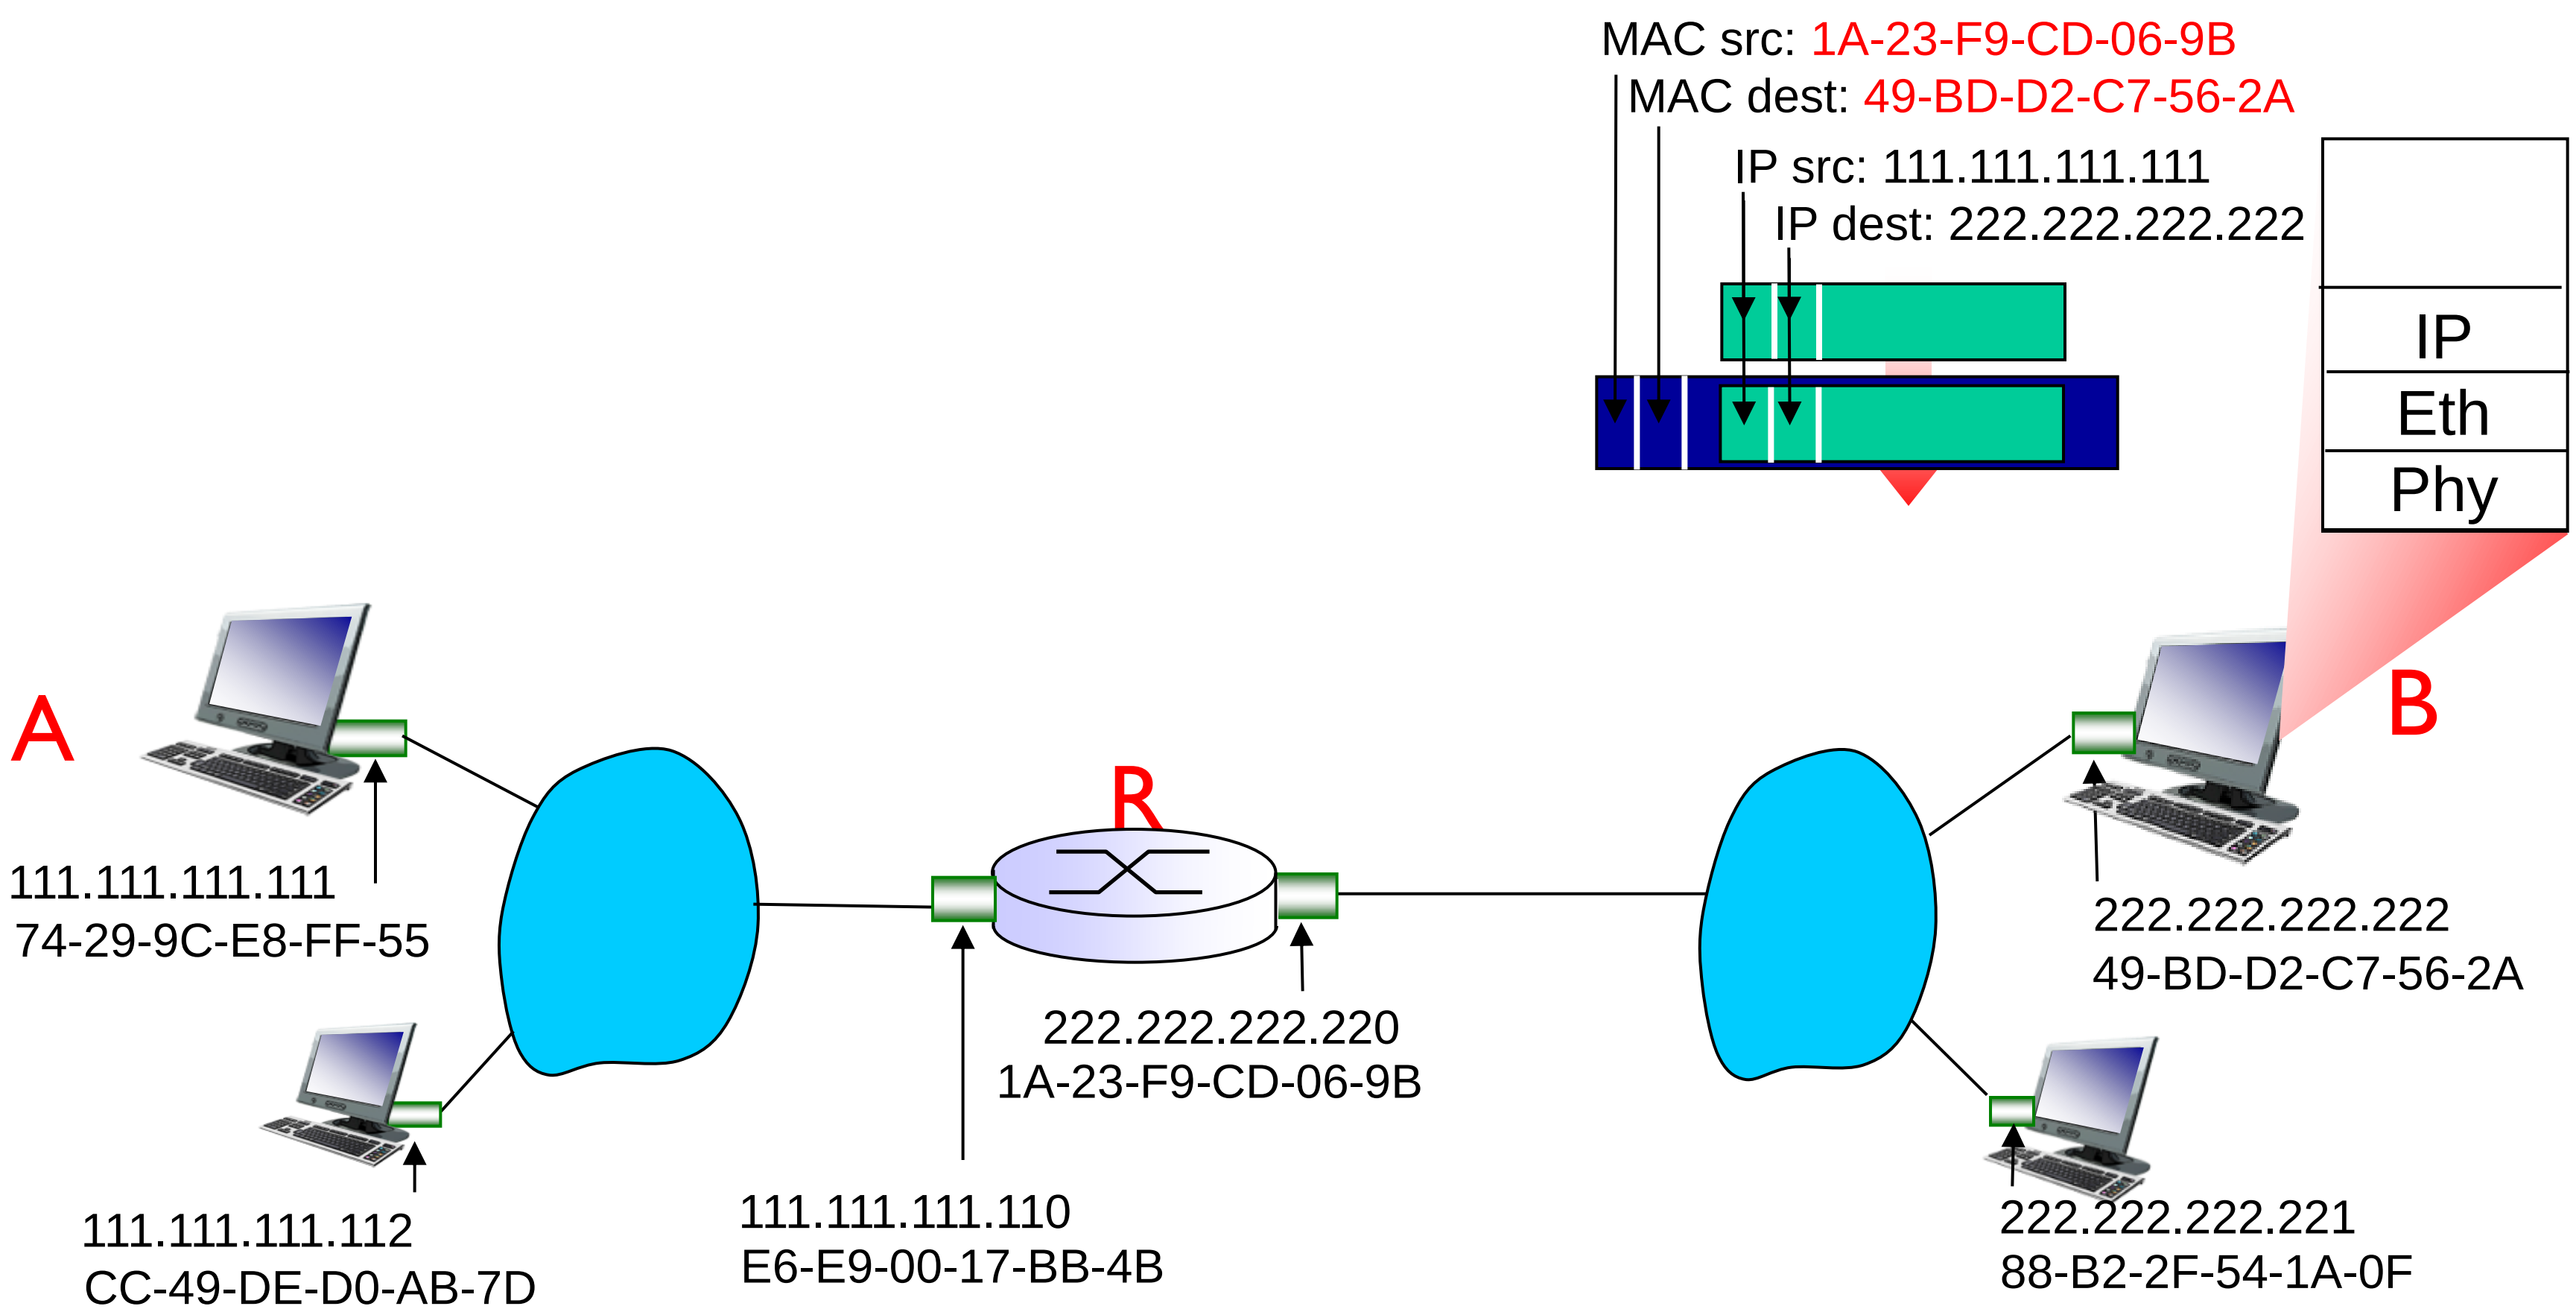

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

Ethernet

"dominant" wired LAN technology:

- cheap $20 for NIC
- first widely used LAN technology
- simpler, cheaper than token LANs and ATM
- kept up with speed race: 10 Mbps – 10 Gbps

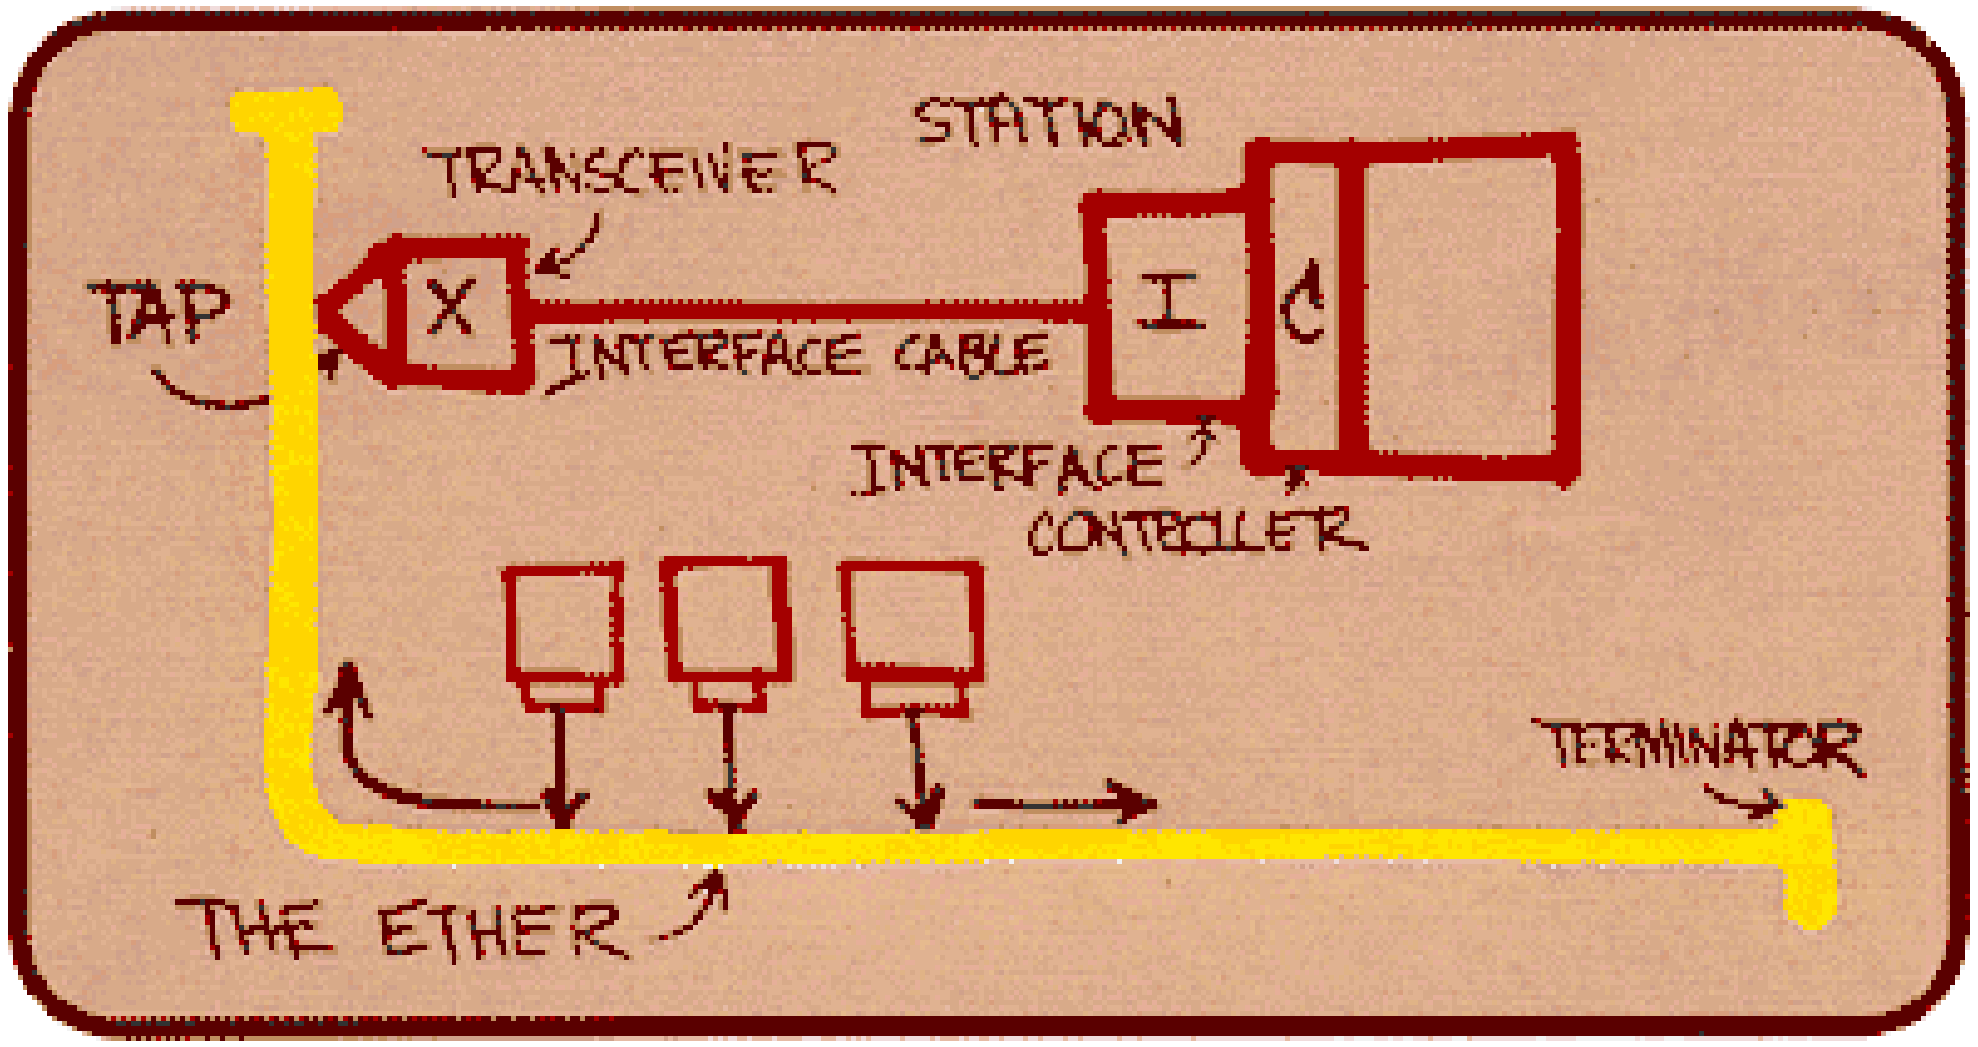

Metcalfe's Ethernet sketch

Ethernet: physical topology

- *bus:* popular through mid 90s
  - all nodes in same collision domain (can collide with each other)
- *star:* prevails today
  - active *switch* in center
  - each "spoke" runs a (separate) Ethernet protocol (nodes do not collide with each other)

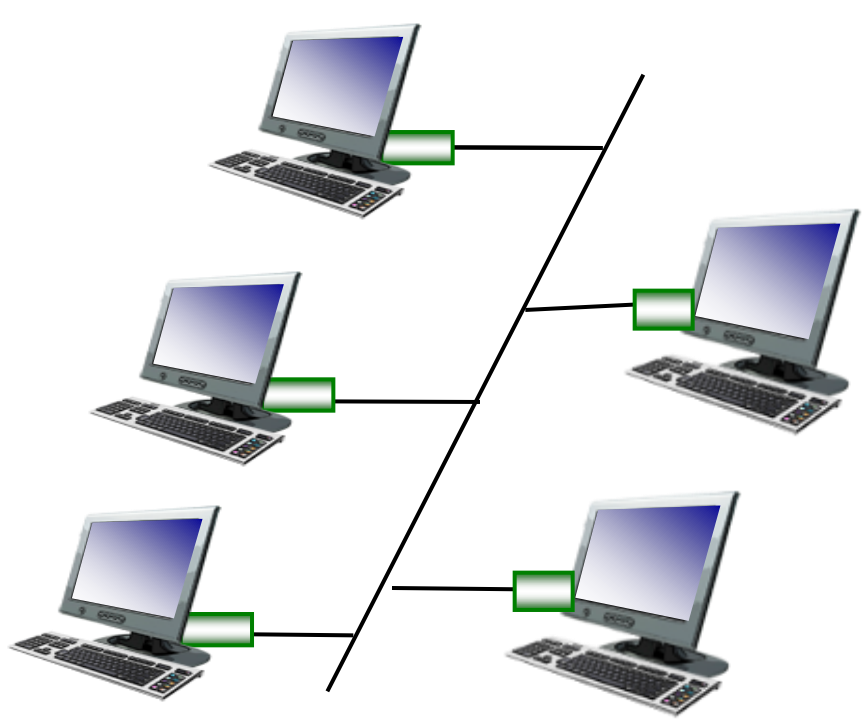

bus: coaxial cable

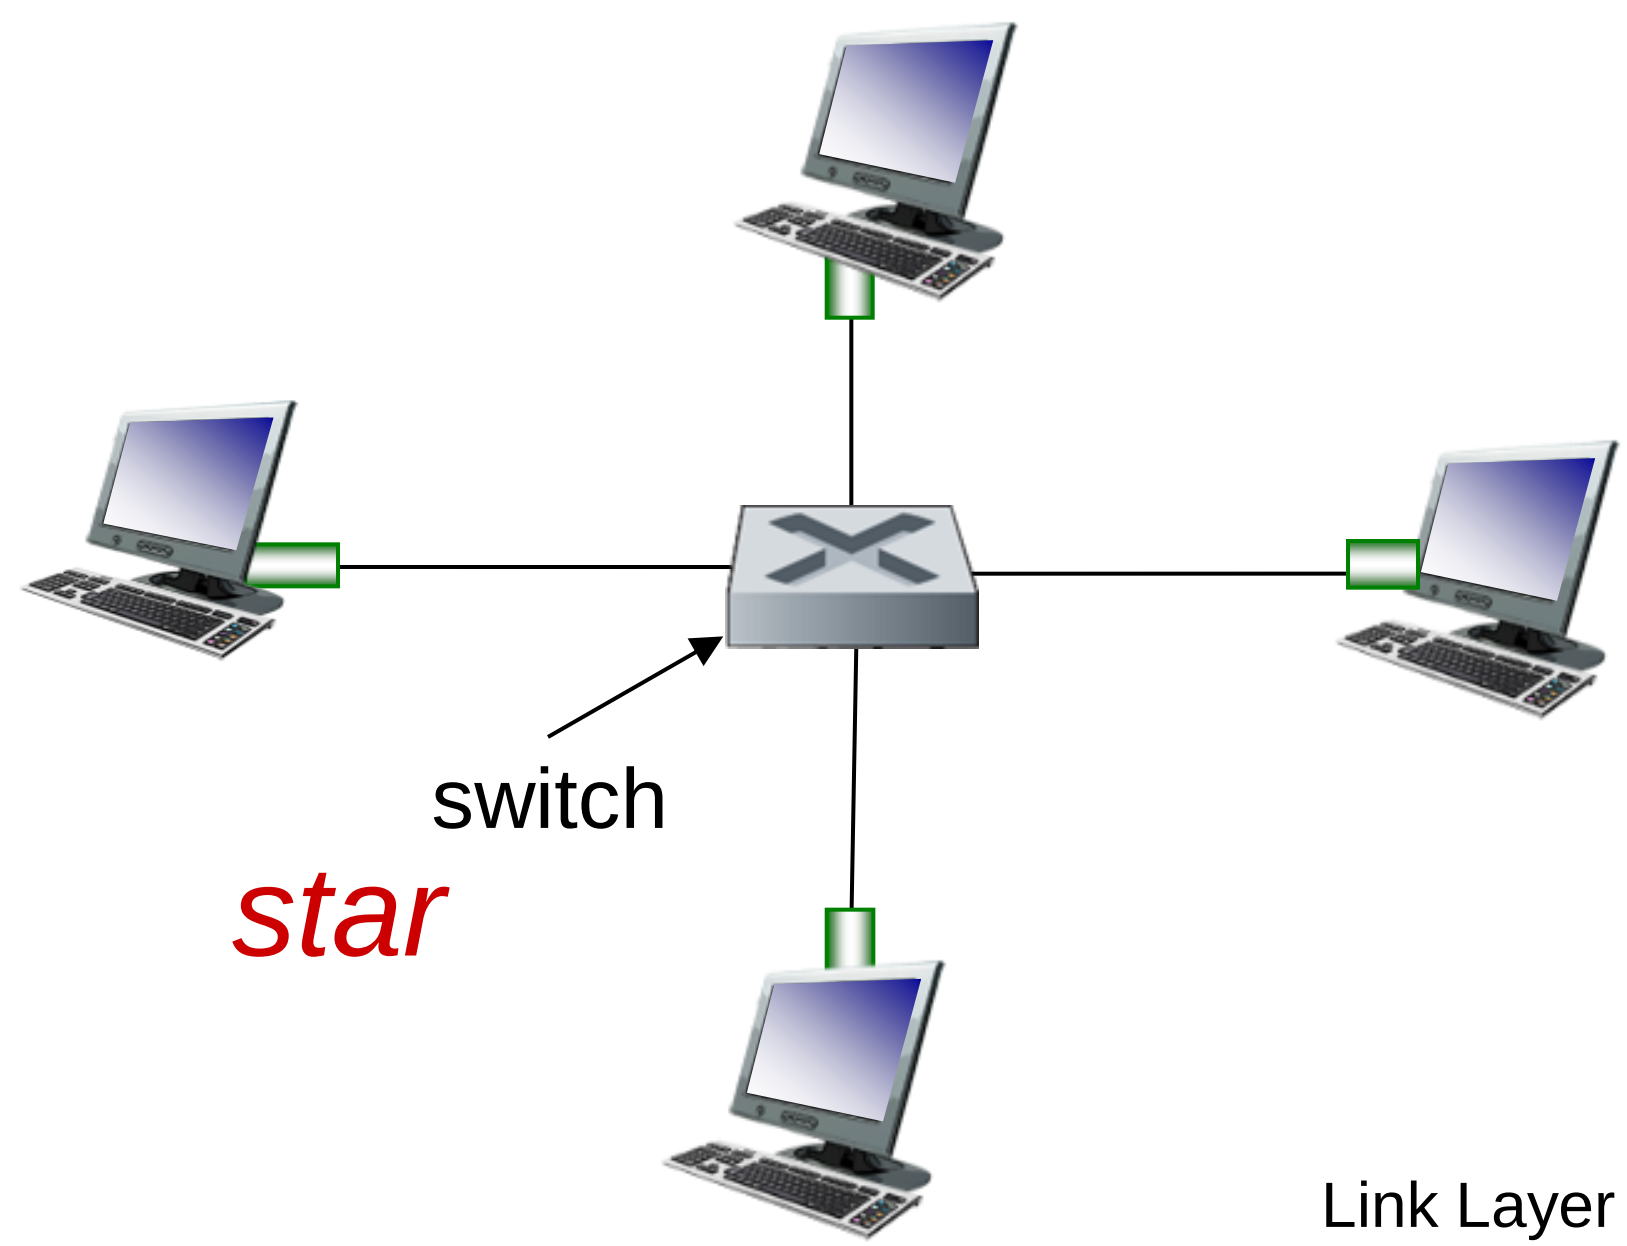

Ethernet frame structure

sending adapter encapsulates IP datagram (or other network layer protocol packet) in Ethernet frame

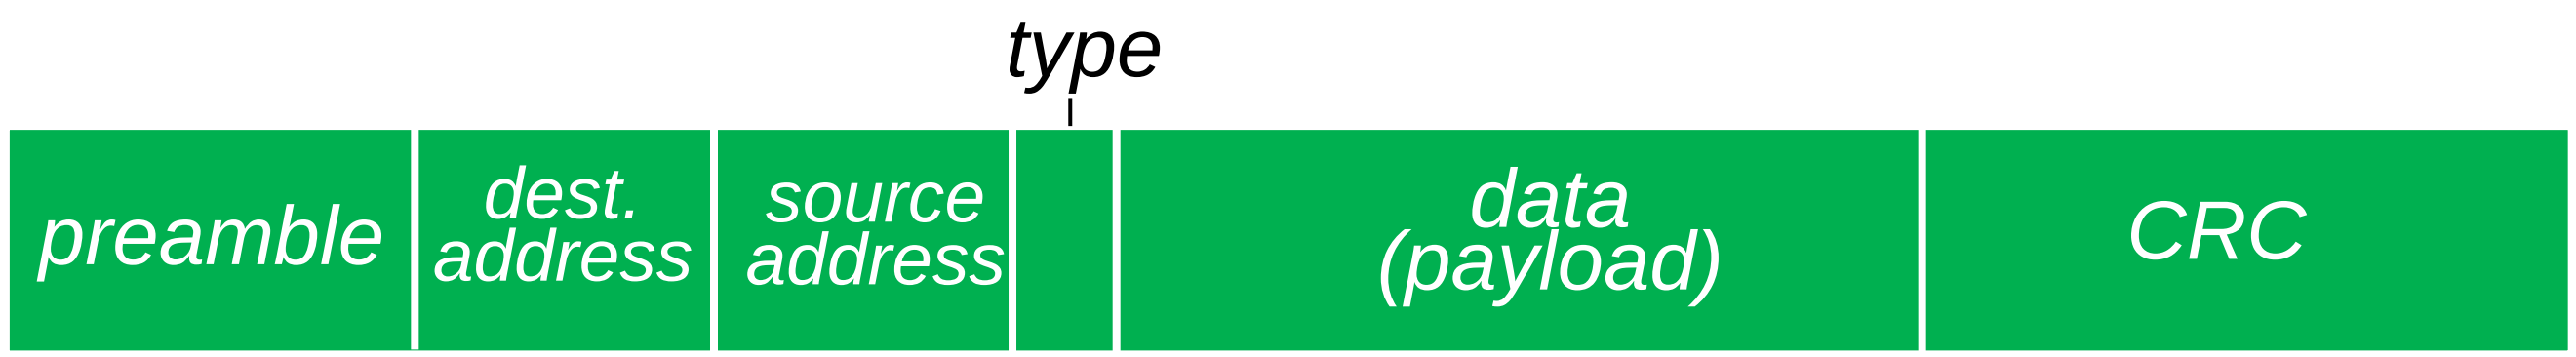

preamble:

- 7 bytes with pattern 10101010 followed by one byte with pattern 10101011
- used to synchronize receiver, sender clock rates

Ethernet frame structure (more)

- *addresses:* 6 byte source, destination MAC addresses
  - if adapter receives frame with matching destination address, or with broadcast address (e.g. ARP packet), it passes data in frame to network layer protocol
  - otherwise, adapter discards frame
- *type:* indicates higher layer protocol (mostly IP but others possible, e.g., Novell IPX, AppleTalk)
- *CRC:* cyclic redundancy check at receiver
  - error detected: frame is dropped

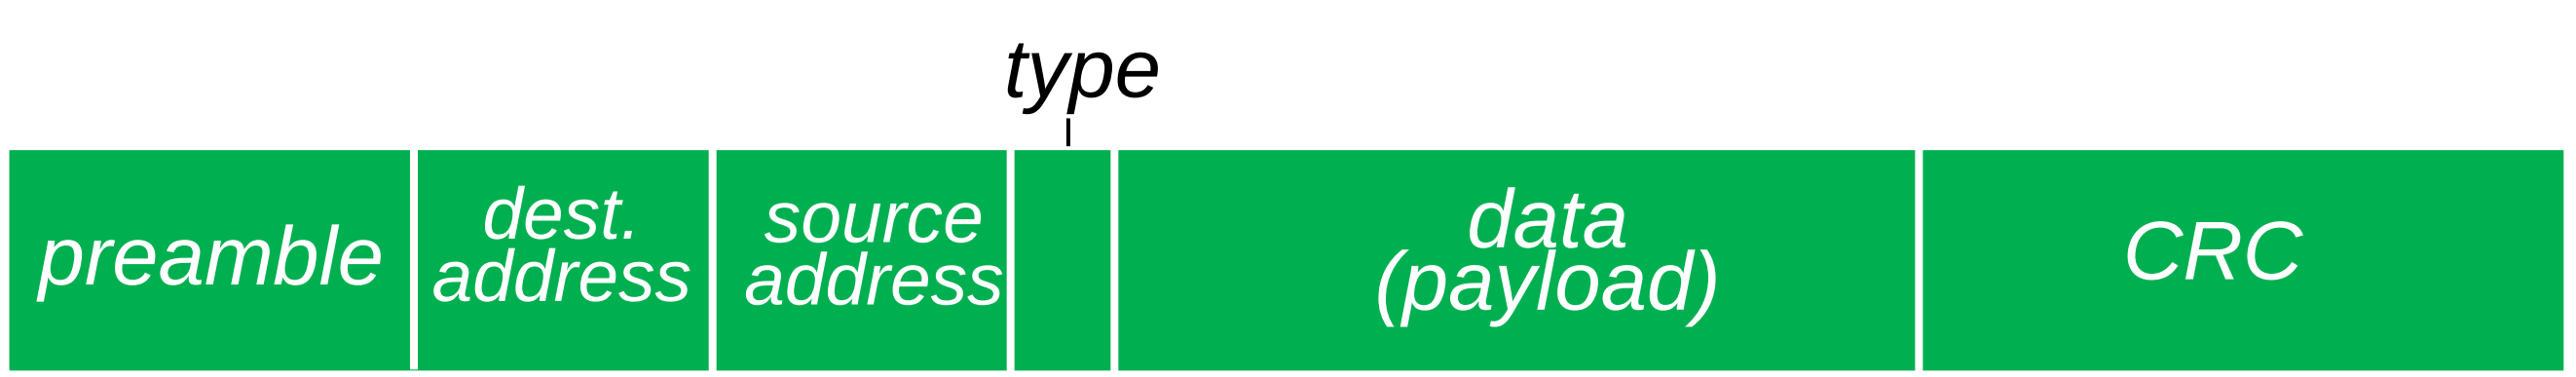

Ethernet: unreliable, connectionless

- *connectionless:* no handshaking between sending and receiving NICs
- *unreliable:* receiving NIC doesnt send acks or nacks to sending NIC
  - data in dropped frames recovered only if initial sender uses higher layer rdt (e.g., TCP), otherwise dropped data lost
- Ethernet's MAC protocol: unslotted *CSMA/CD wth binary backoff*

802.3 Ethernet standards: link & physical layers

- *many* different Ethernet standards
  - common MAC protocol and frame format
  - different speeds: 2 Mbps, 10 Mbps, 100 Mbps, 1Gbps, 10G bps
  - different physical layer media: fiber, cable

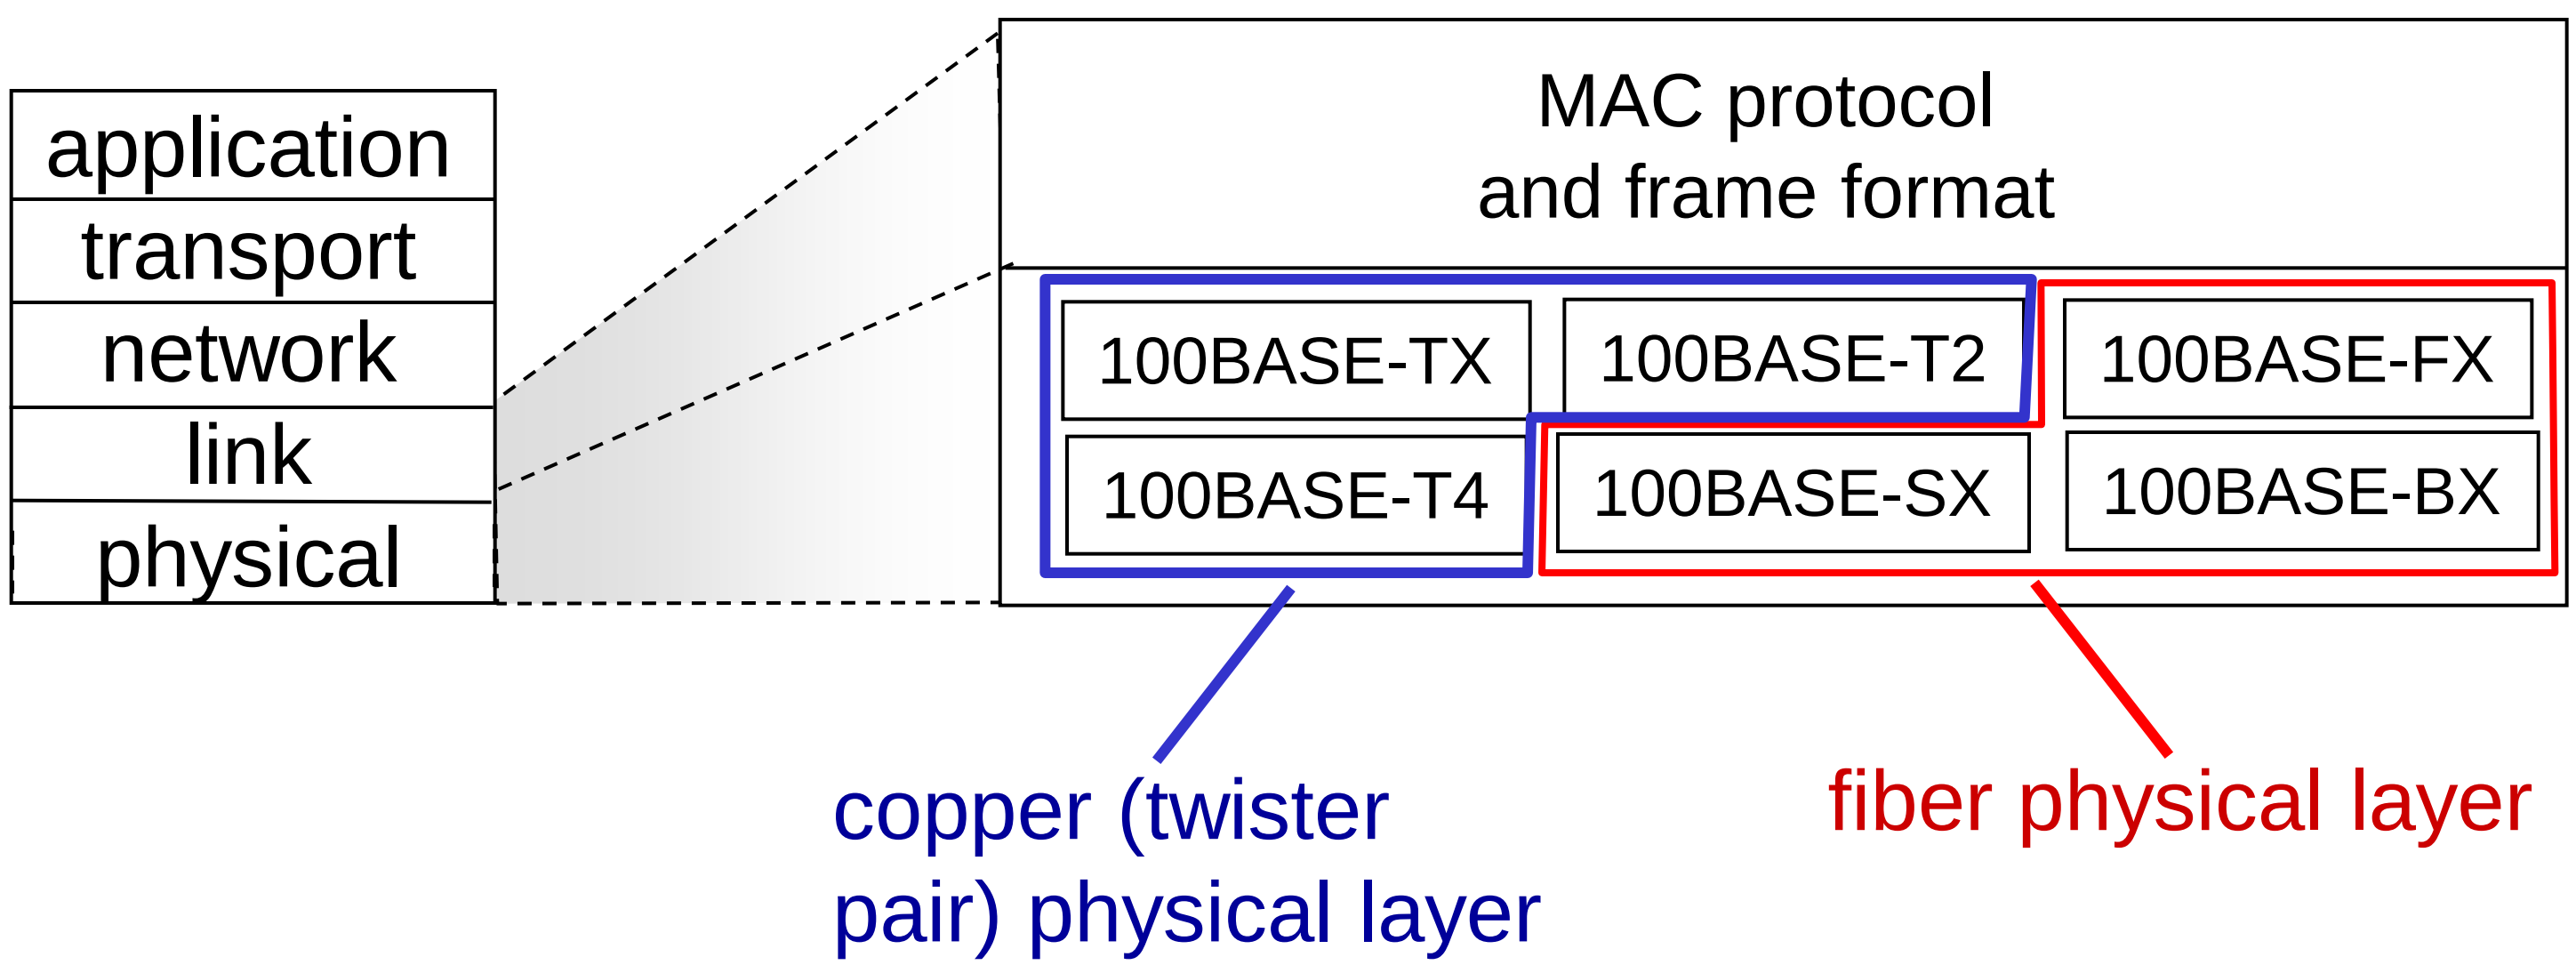

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

Ethernet switch

- link-layer device: takes an *active* role
  - store, forward Ethernet frames
  - examine incoming frame's MAC address, selectively forward frame to one-or-more outgoing links when frame is to be forwarded on segment, uses CSMA/CD to access segment
- *transparent*
  - hosts are unaware of presence of switches
- *plug-and-play, self-learning*
  - switches do not need to be configured

Switch: *multiple* simultaneous transmissions

- hosts have dedicated, direct connection to switch
- switches buffer packets
- Ethernet protocol used on *each* incoming link, but no collisions; full duplex
  - each link is its own collision domain
- *switching:* A-to-A' and B-to-B' can transmit simultaneously, without collisions
- each switch has a switch table, each entry:
  - (MAC address of host, interface to reach host, time stamp)
  - looks like a routing table!

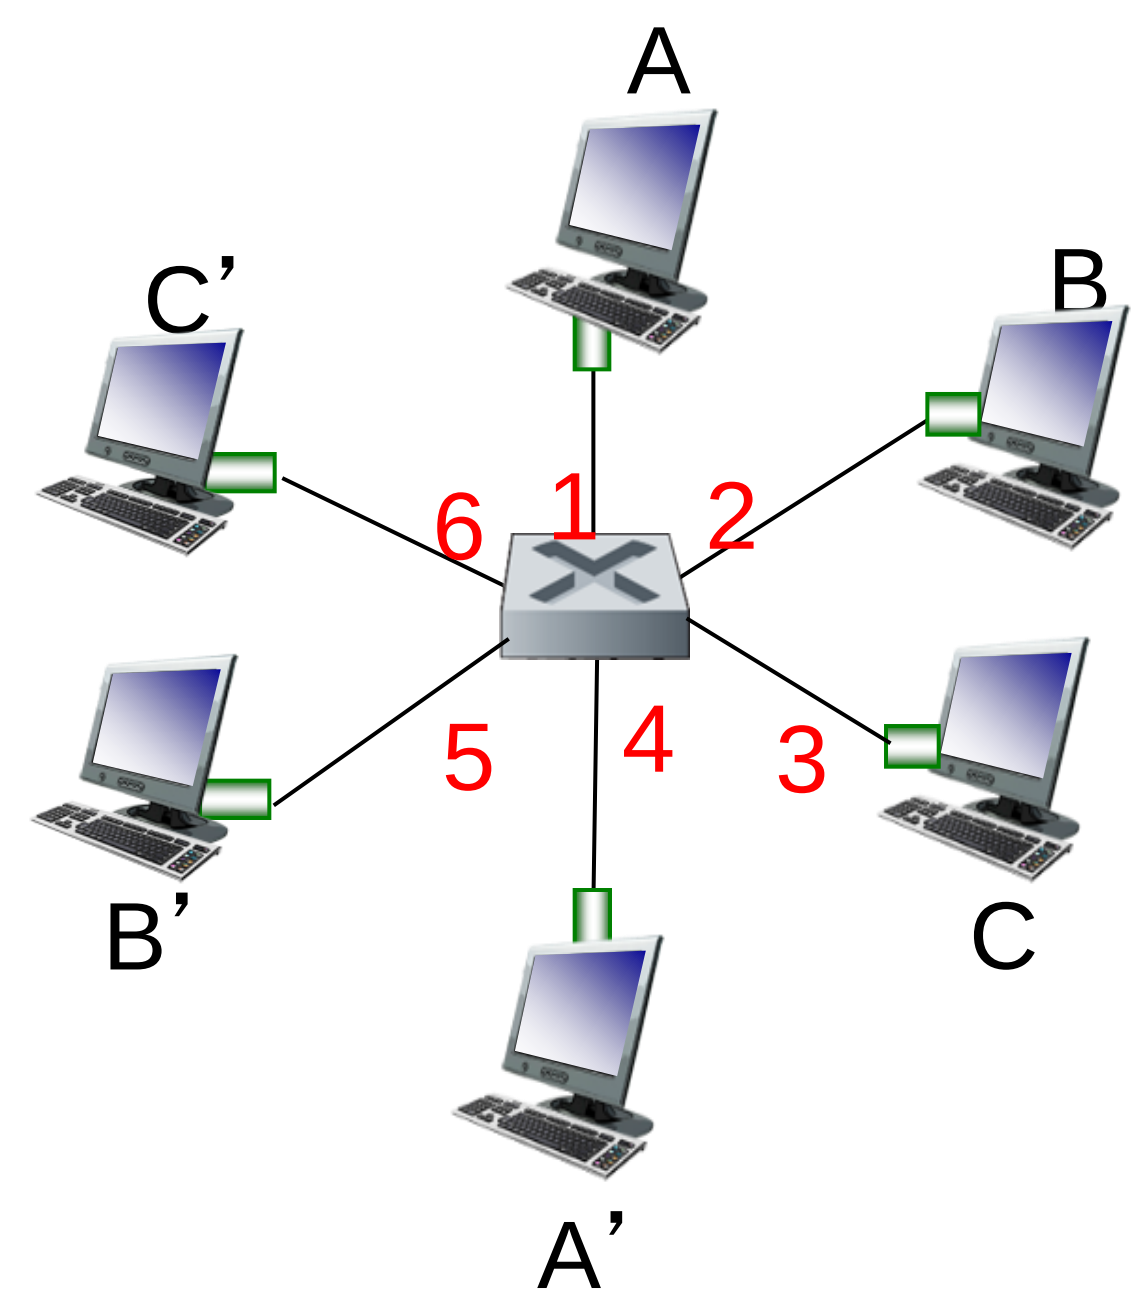

switch with six interfaces (1,2,3,4,5,6)

Institutional network

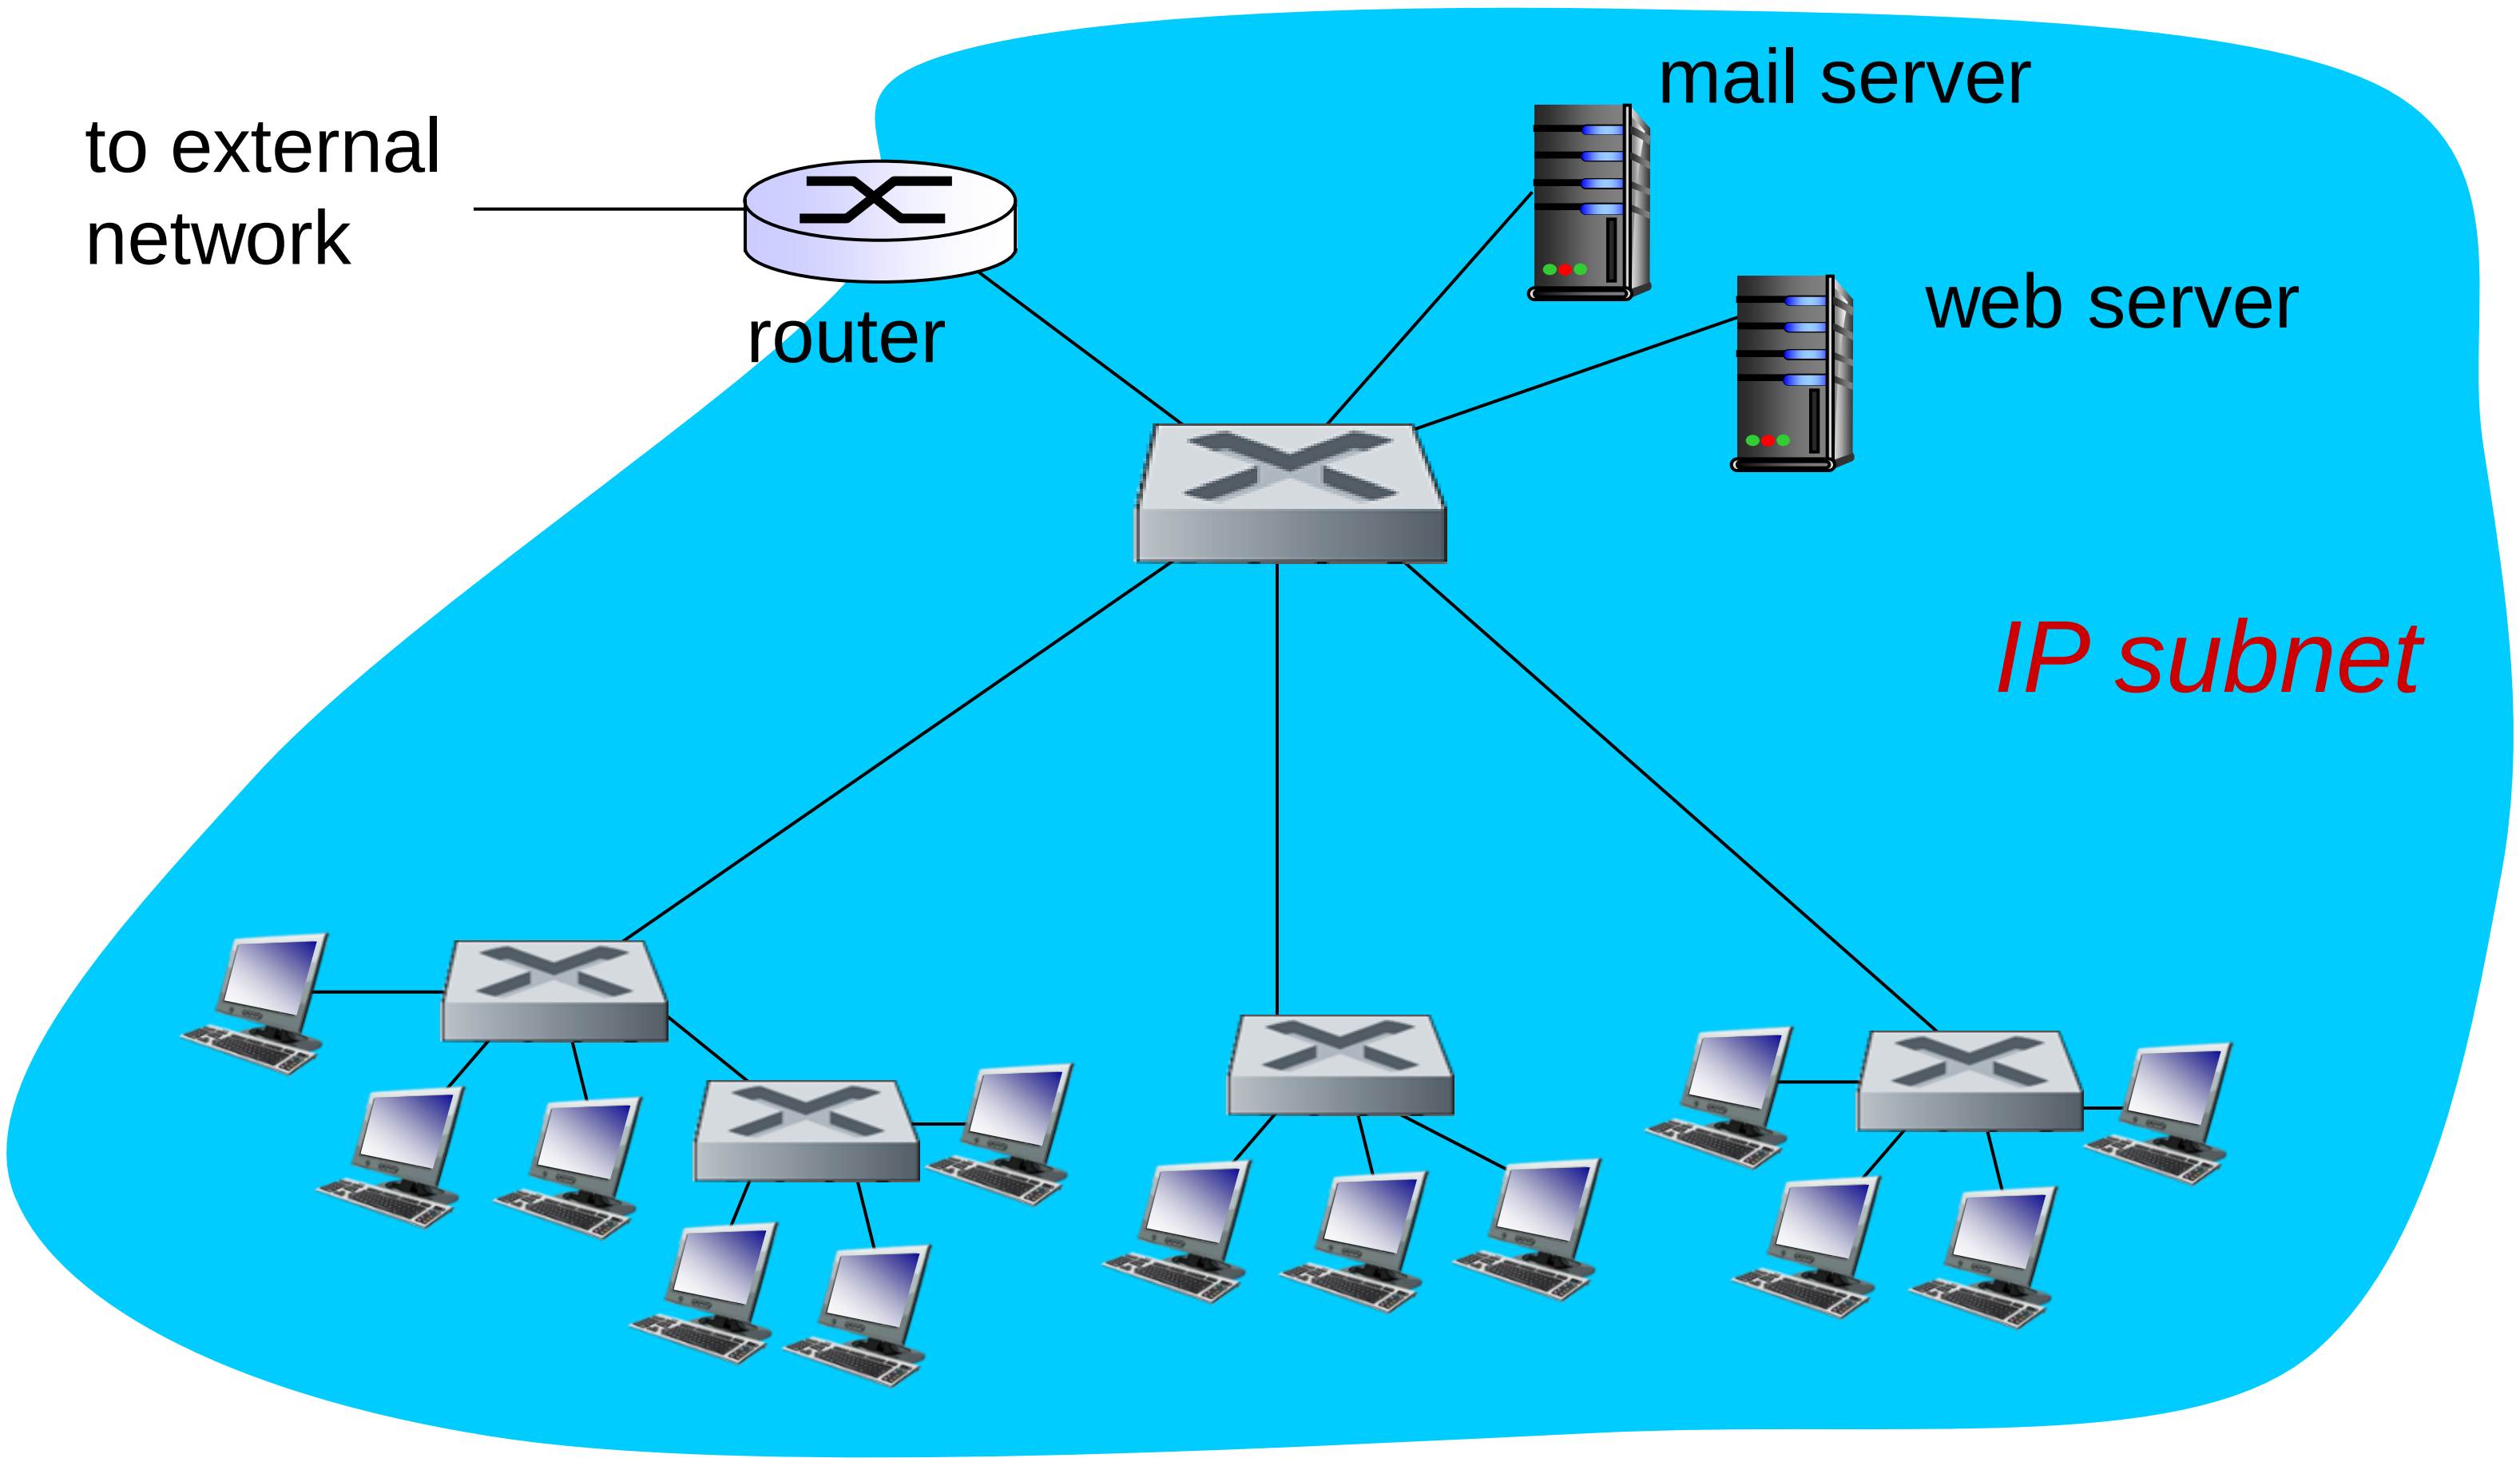

Switches vs. routers

both are store-and-forward:

- *routers:* network-layer devices (examine network-layer headers)
- *switches*: link-layer devices (examine link-layer headers)

both have forwarding tables:

- *routers:* compute tables using routing algorithms, IP addresses
- *switches:* learn forwarding table using flooding, learning, MAC addresses

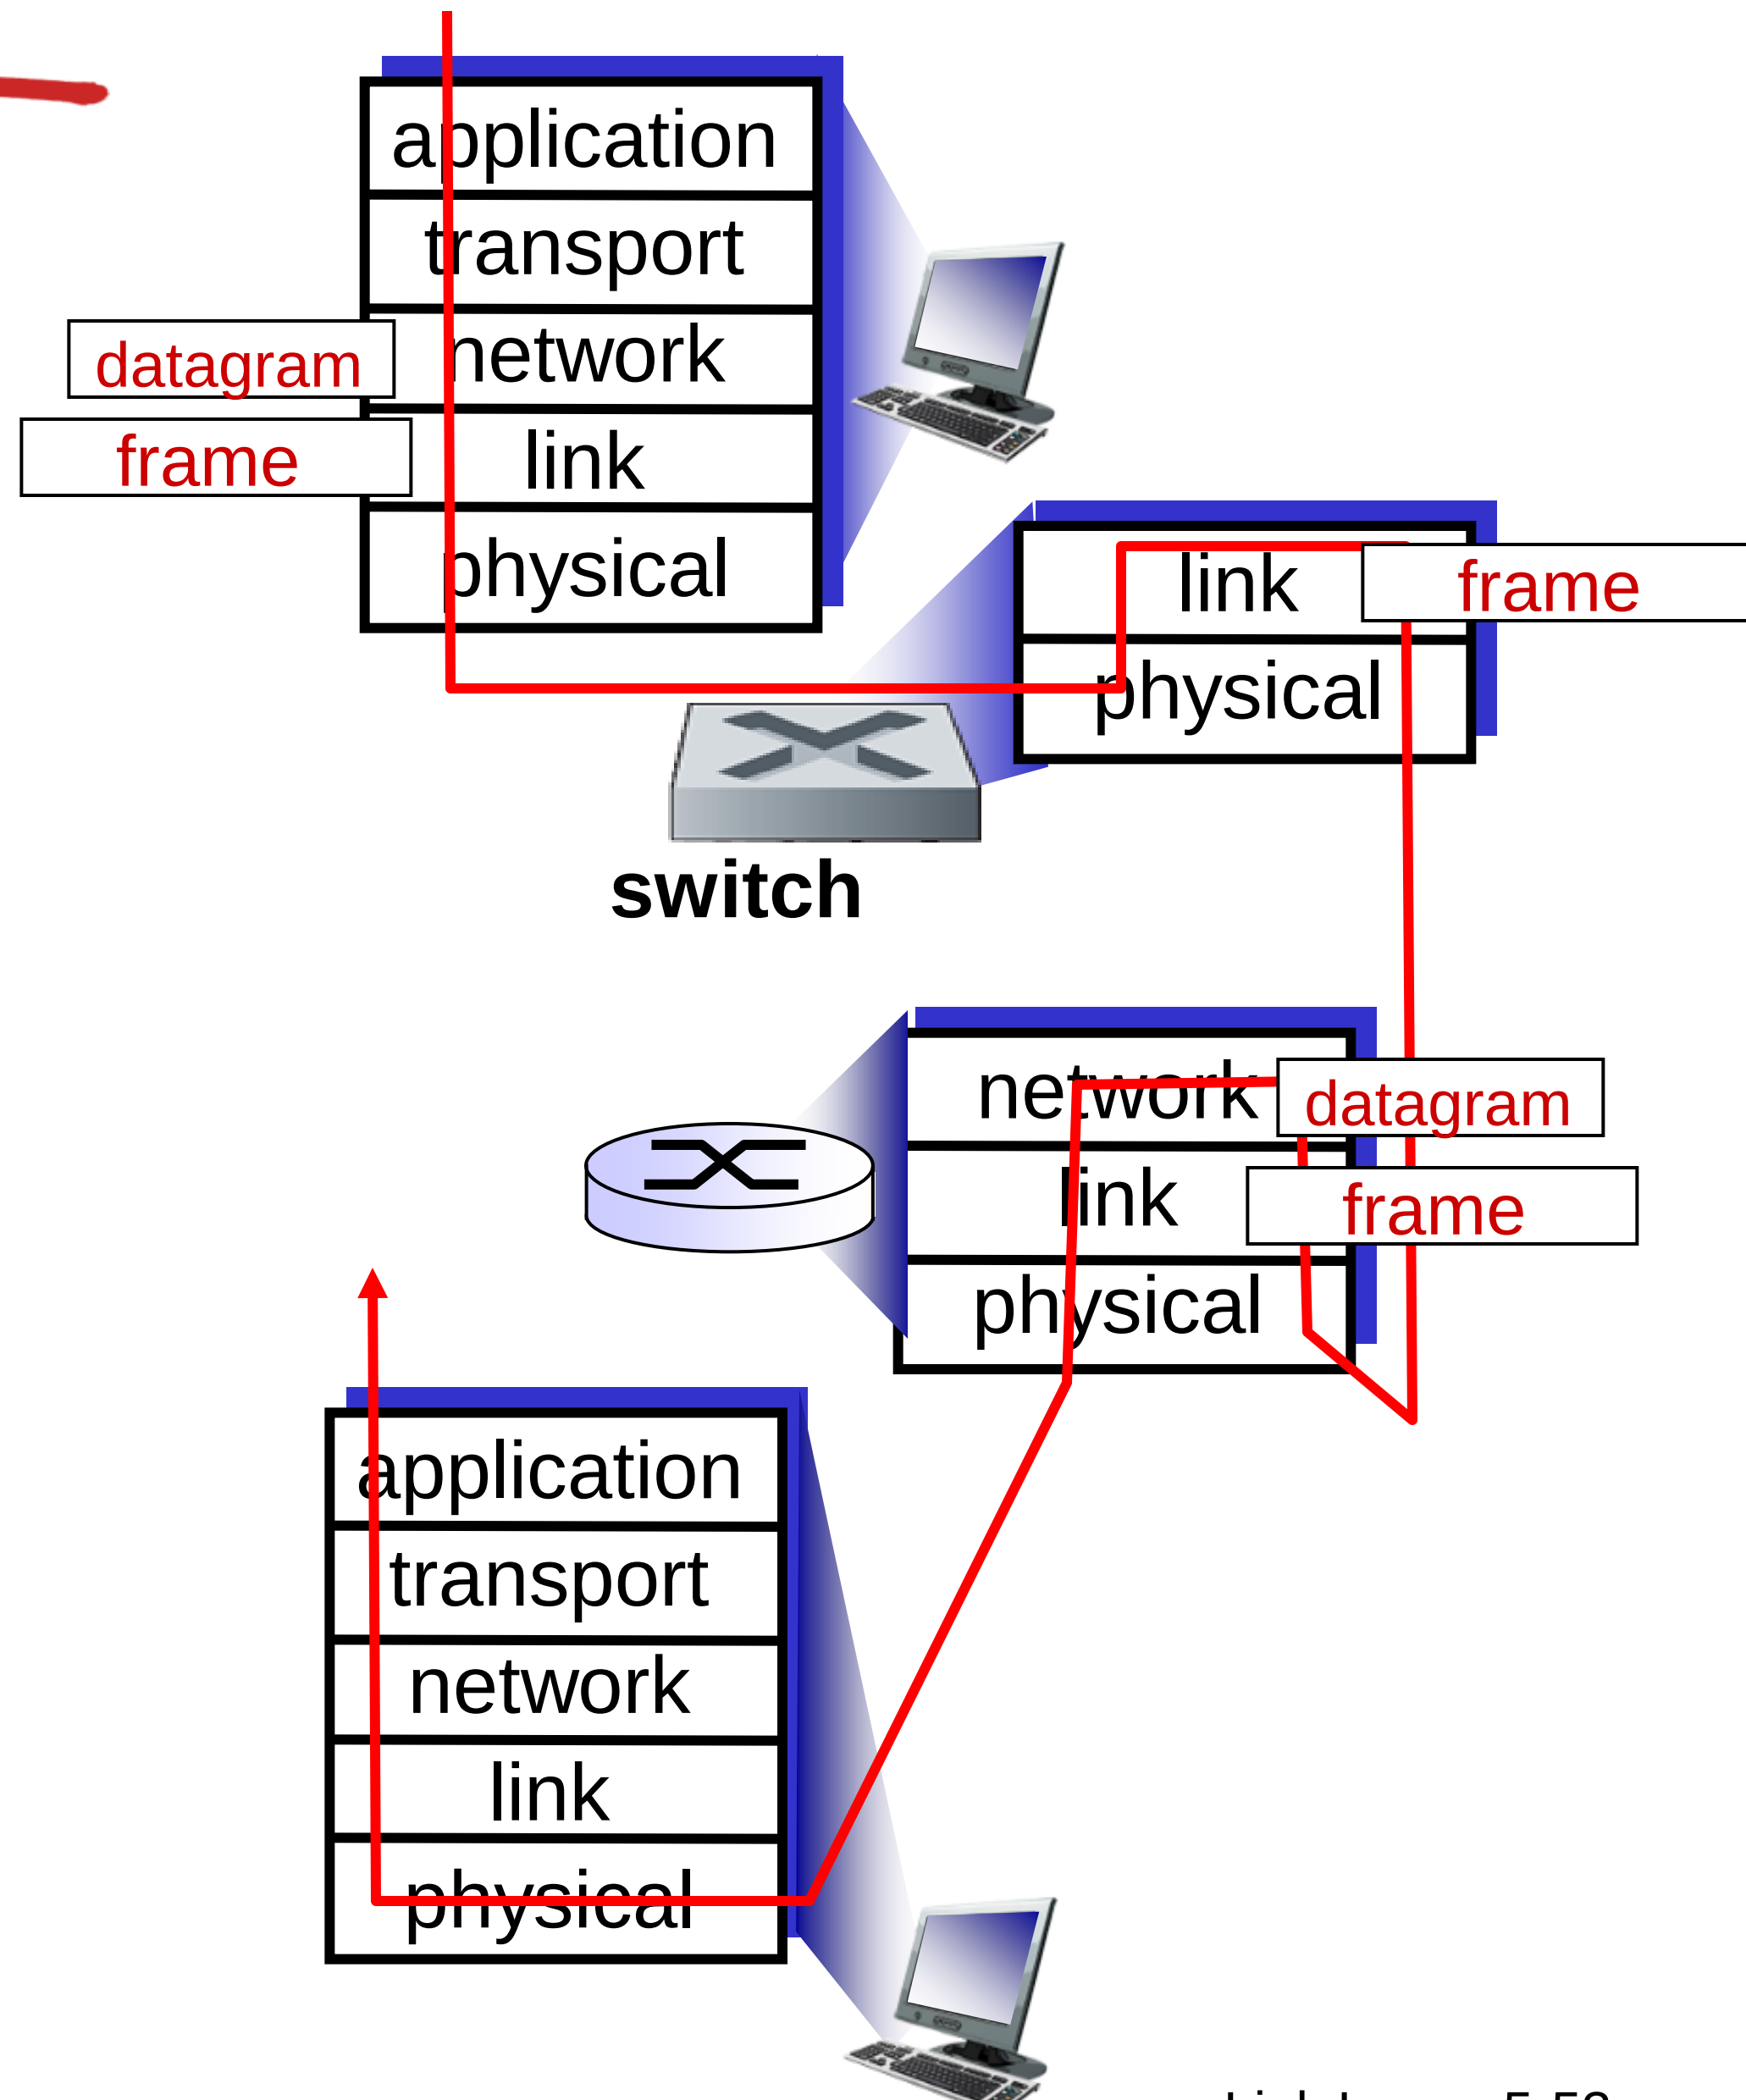

Link layer, LANs: outline

5.1 introduction, services

5.2 error detection, correction

5.3 multiple access protocols

5.4 LANs
- addressing, ARP
- Ethernet
- switches

5.5 a day in the life of a web request

Synthesis: a day in the life of a web request

- journey down protocol stack complete!
  - application, transport, network, link
- putting-it-all-together: synthesis!
  - *goal:* identify, review, understand protocols (at all layers) involved in seemingly simple scenario: requesting www page
  - *scenario:* student attaches laptop to campus network, requests/receives www.google.com

A day in the life: scenario

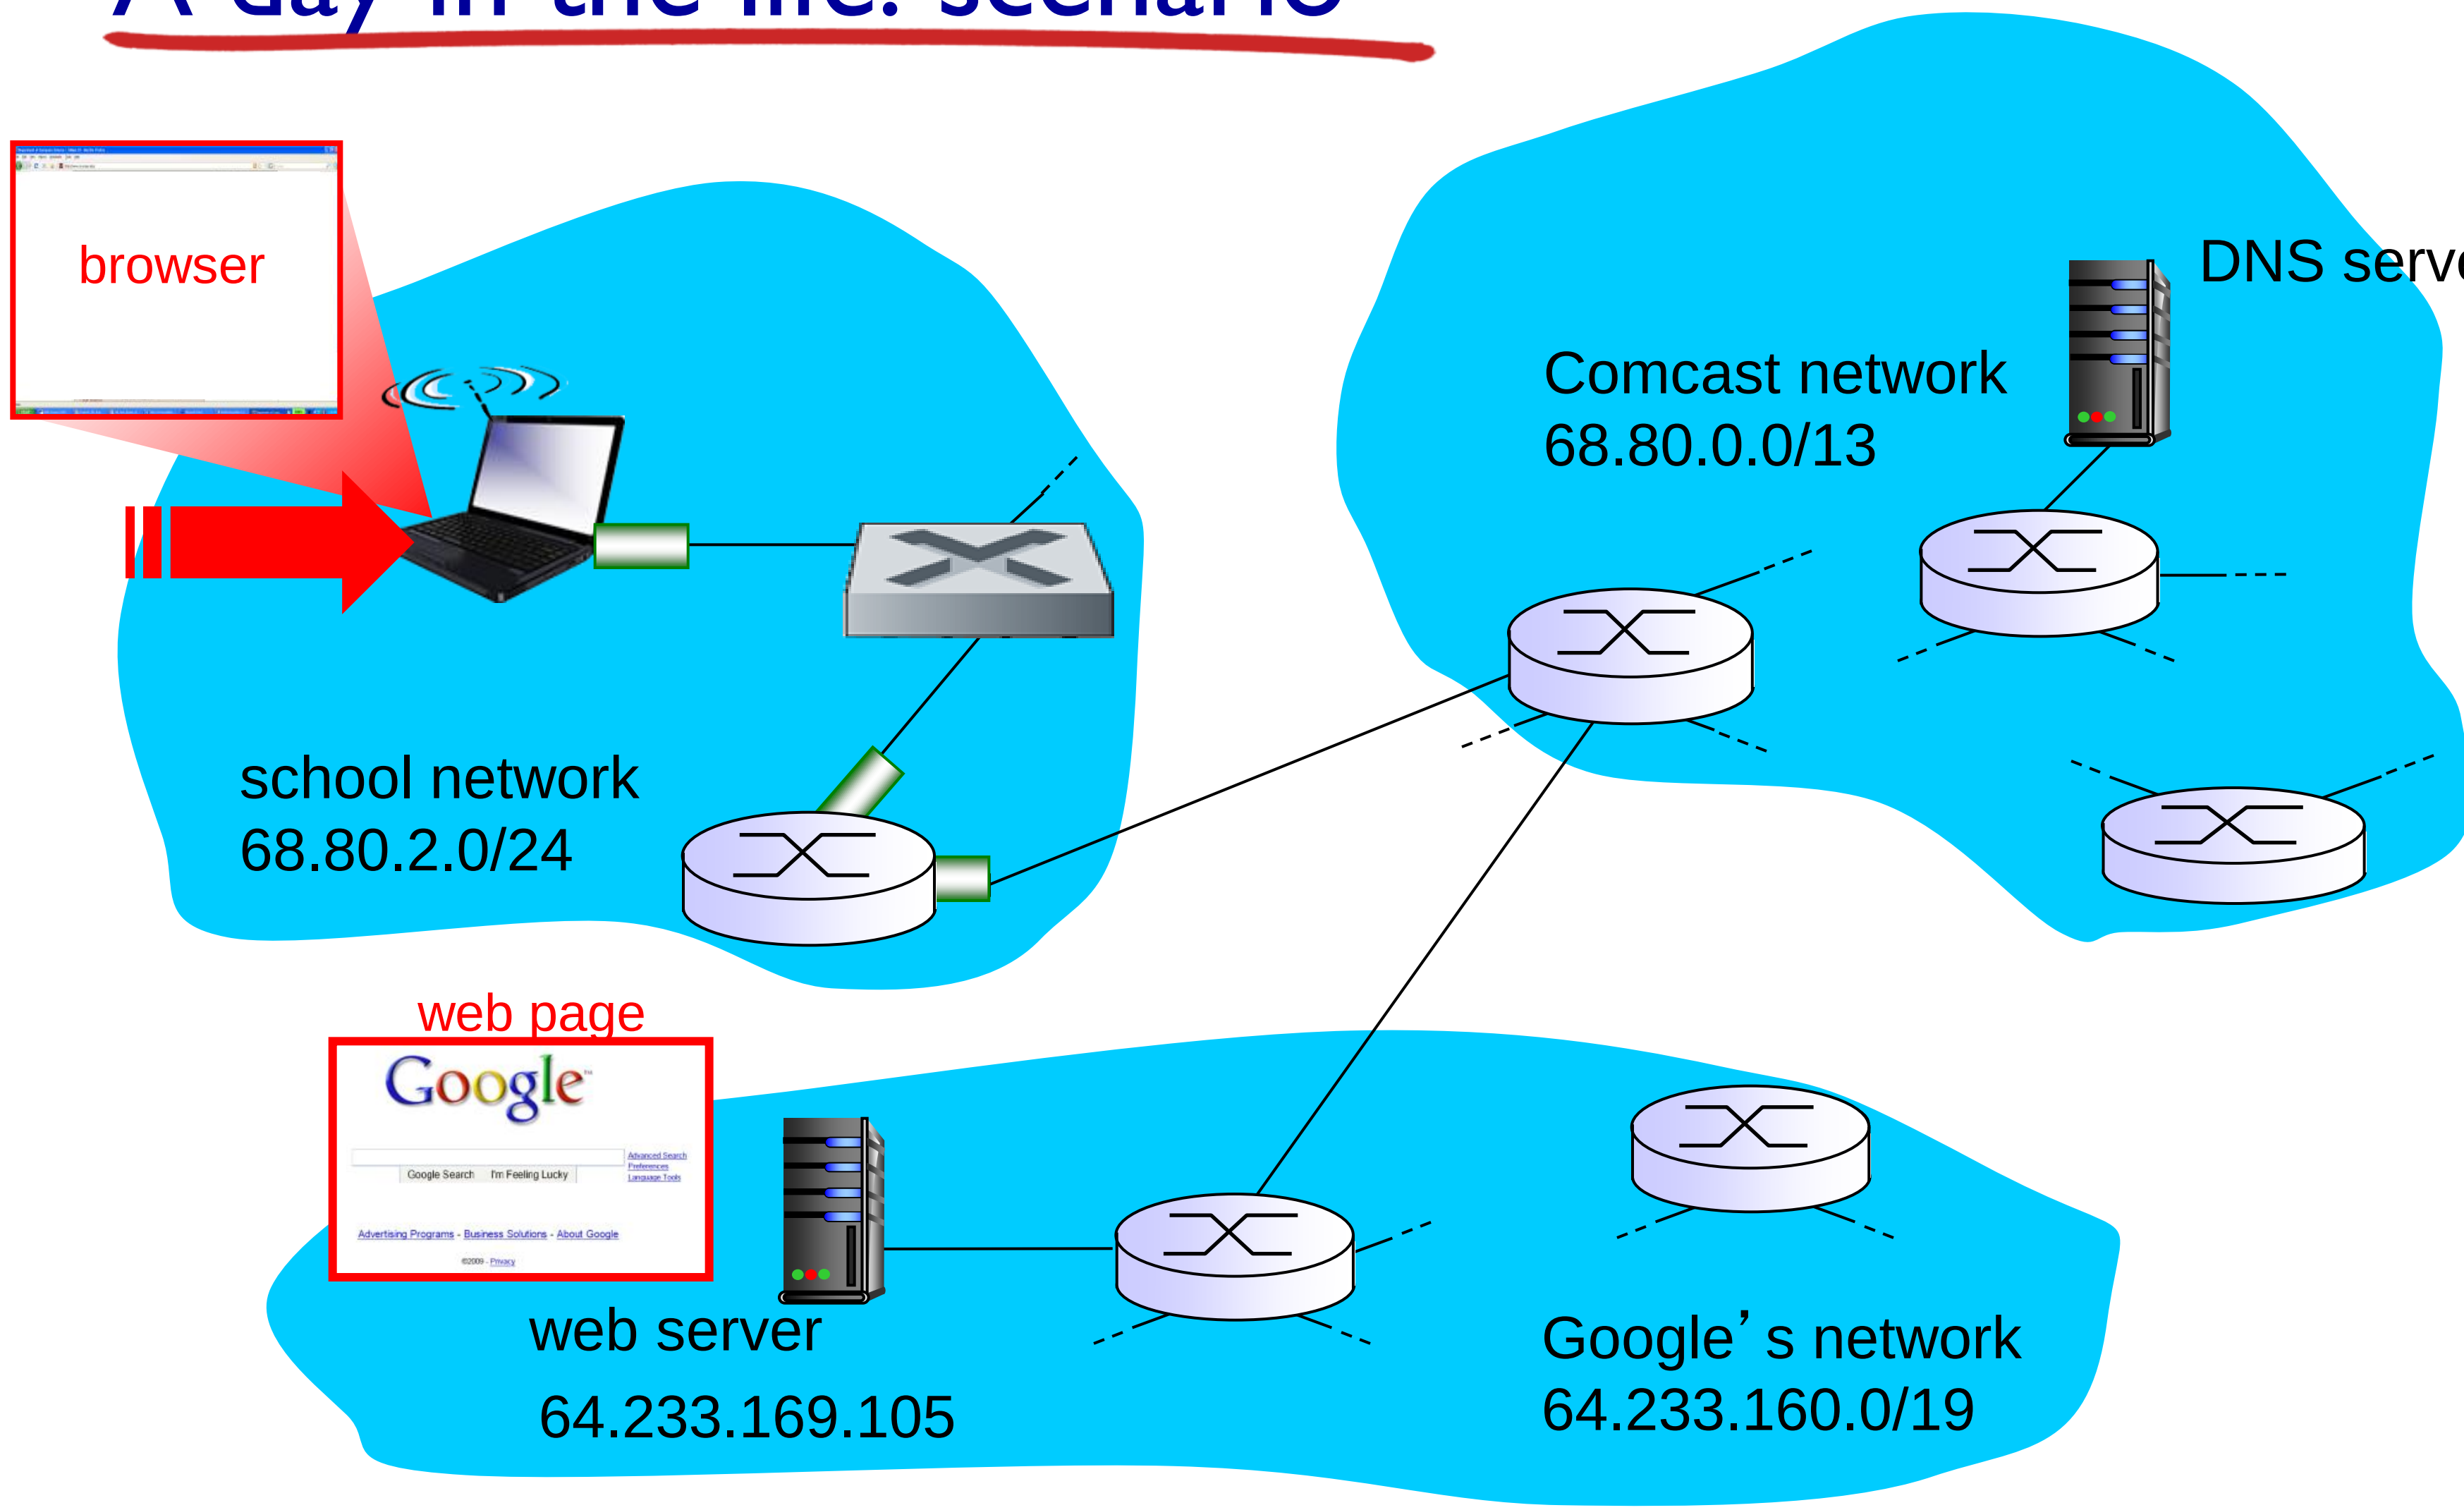

A day in the life… connecting to the Internet

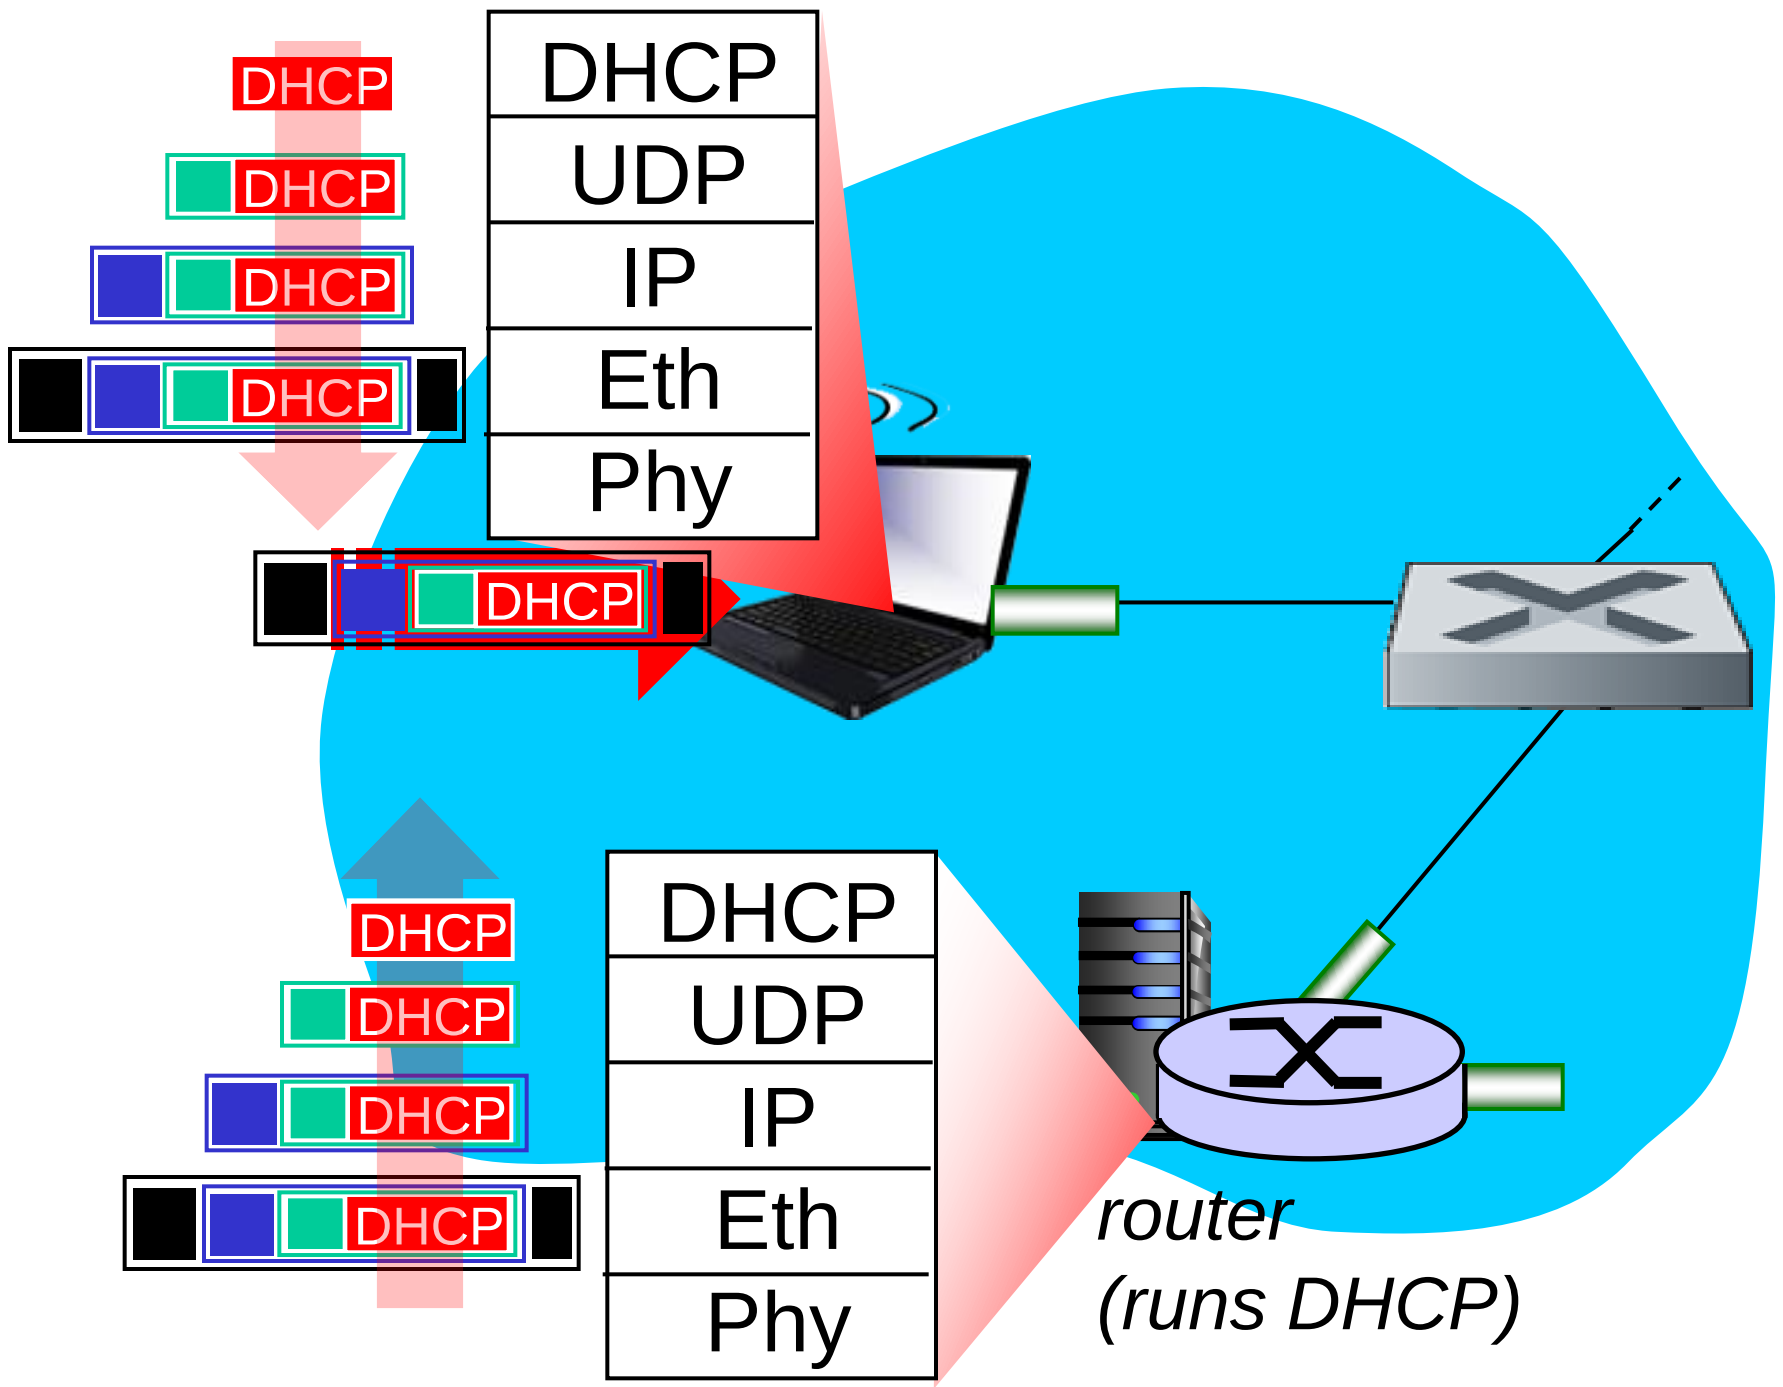

- connecting laptop needs to get its own IP address, addr of first-hop router, addr of DNS server: use *DHCP*
- DHCP request *encapsulated* in *UDP*, encapsulated in *IP*, encapsulated in *802.3* Ethernet
- Ethernet frame *broadcast* (dest: FFFFFFFFFFFF) on LAN, received at router running *DHCP* server
- Ethernet *demuxed* to IP demuxed, UDP demuxed to DHCP

A day in the life… connecting to the Internet

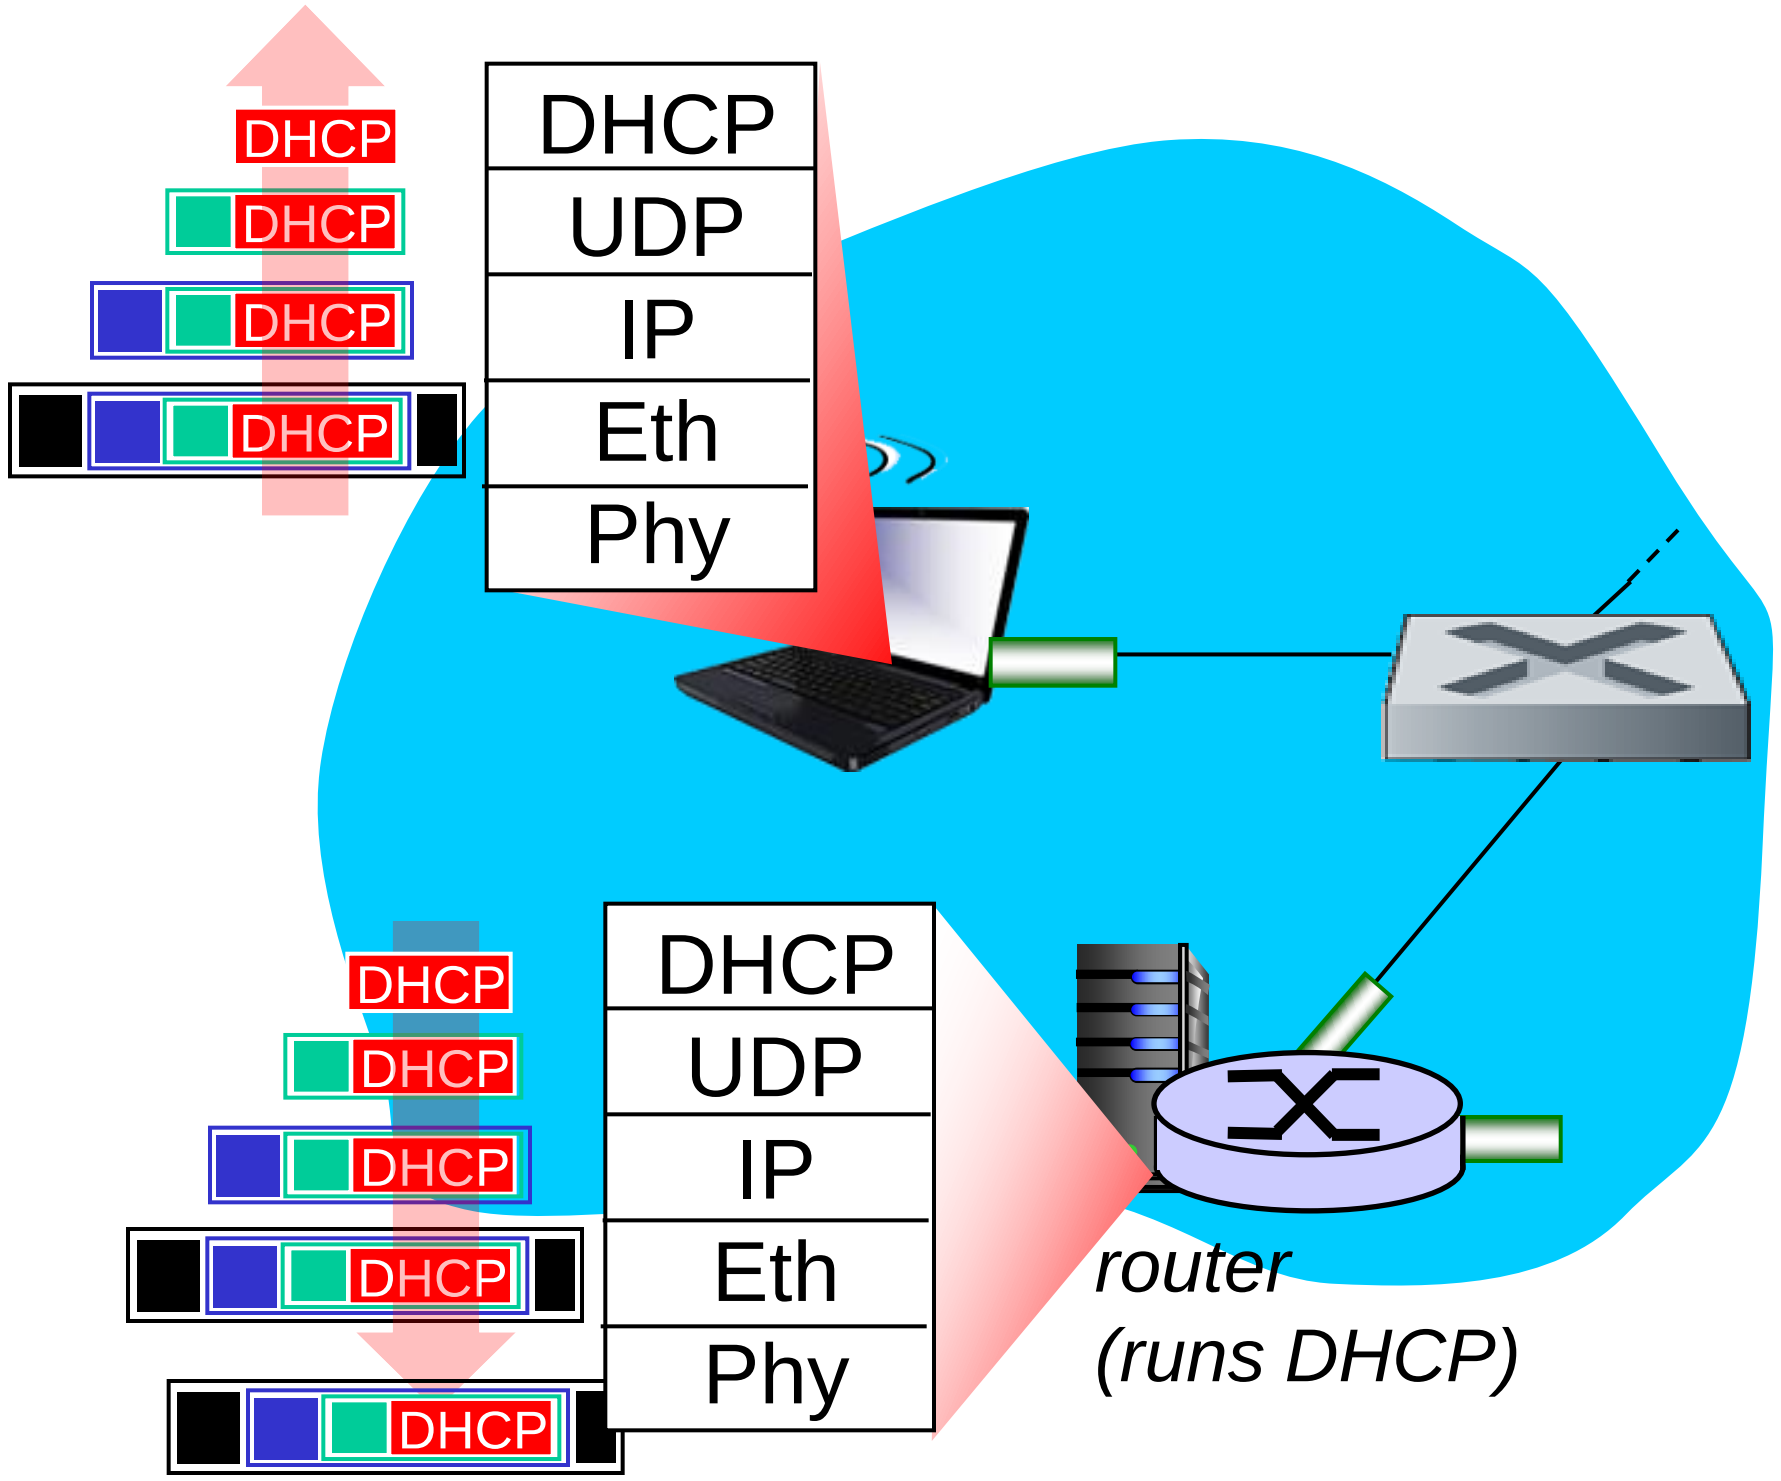

- DHCP server formulates *DHCP ACK* containing client's IP address, IP address of first-hop router for client, name & IP address of DNS server
- encapsulation at DHCP server, frame forwarded (*switch learning*) through LAN, demultiplexing at client
- DHCP client receives DHCP ACK reply

Client now has IP address, knows name & addr of DNS server, IP address of its first-hop router

A day in the life… ARP (before DNS, before HTTP)

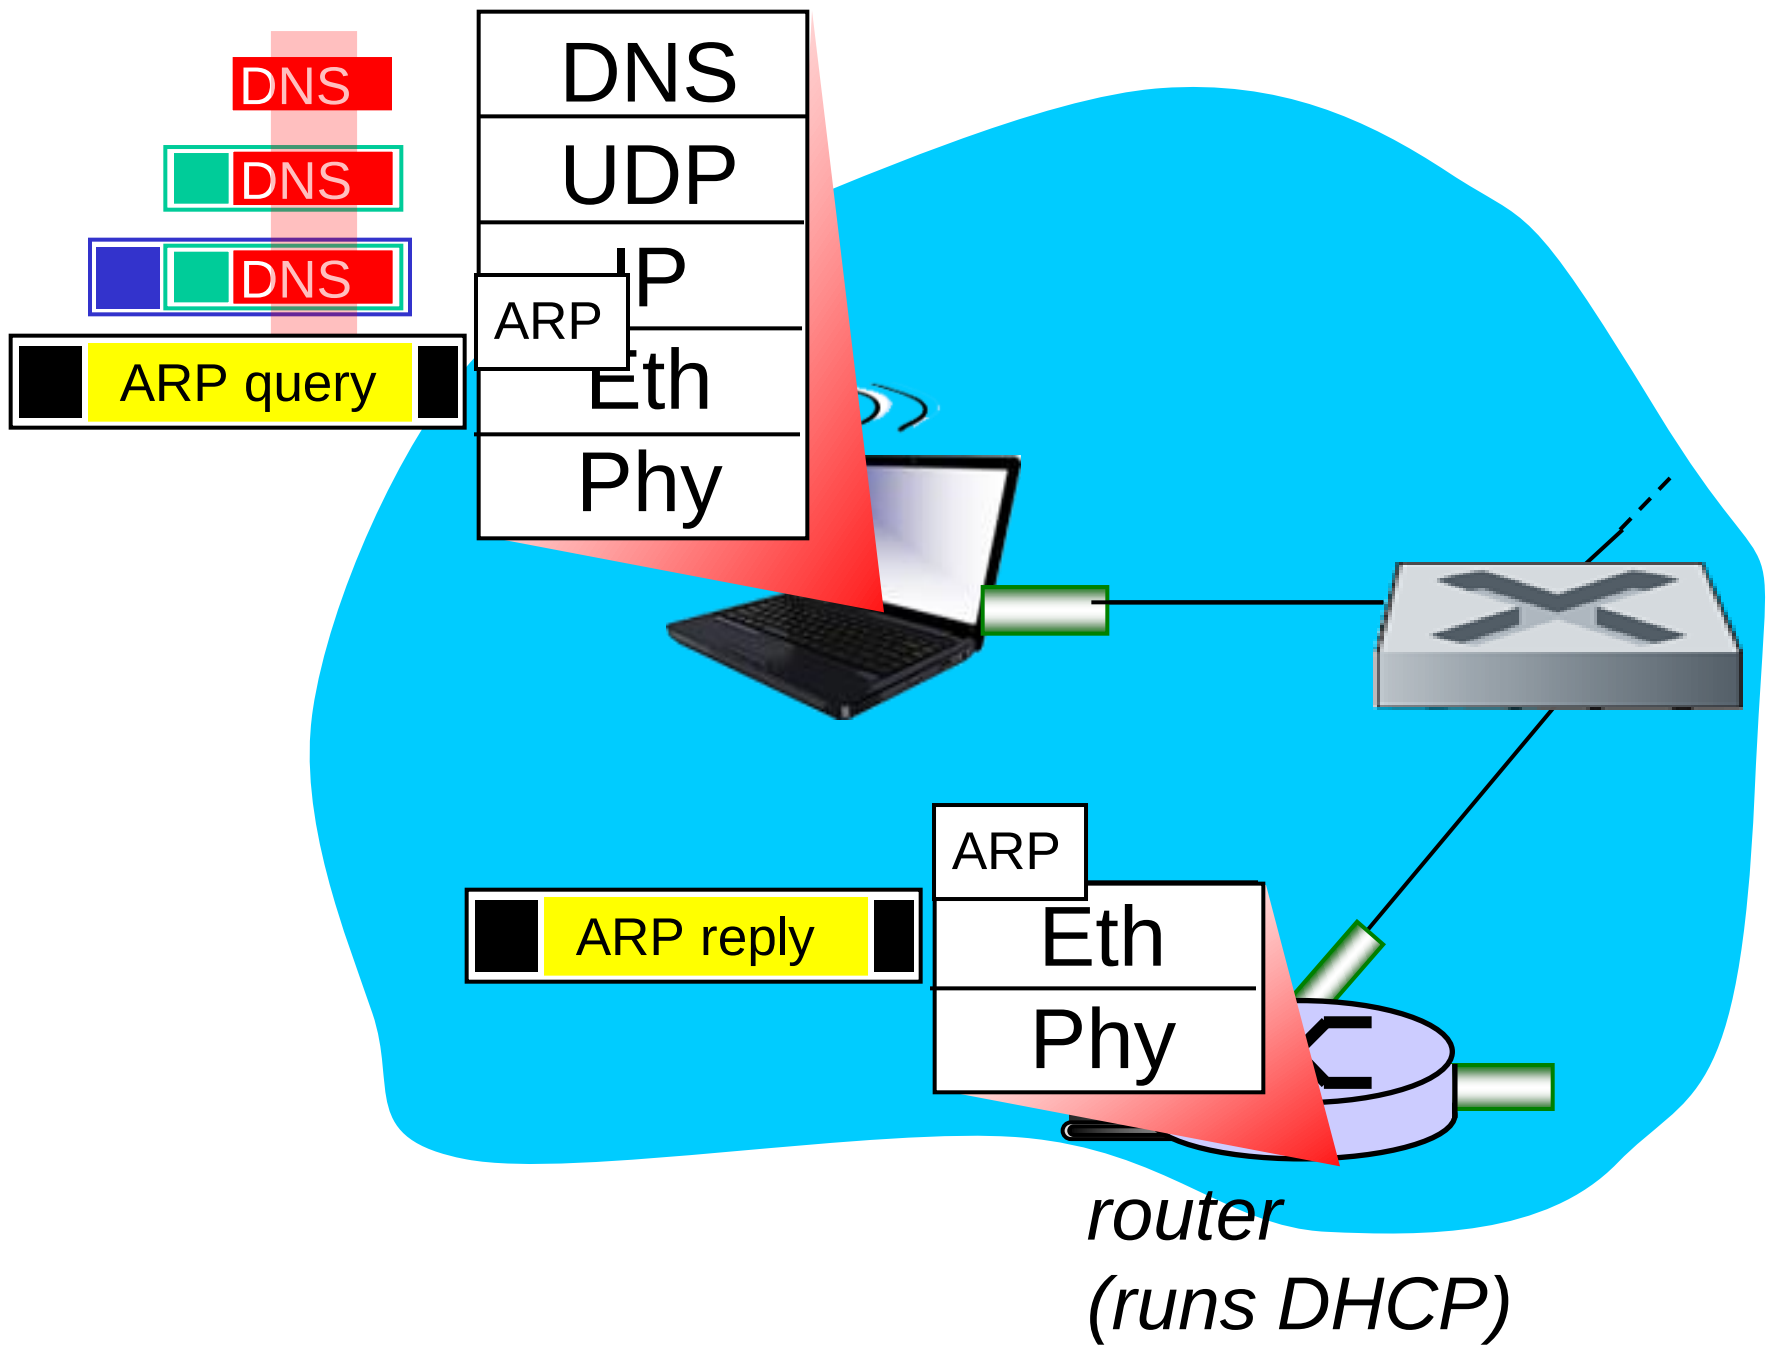

- before sending *HTTP* request, need IP address of www.google.com: *DNS*
- DNS query created, encapsulated in UDP, encapsulated in IP, encapsulated in Eth. To send frame to router, need MAC address of router interface: *ARP*
- *ARP query* broadcast, received by router, which replies with *ARP reply* giving MAC address of router interface
- client now knows MAC address of first hop router, so can now send frame containing DNS query

A day in the life… using DNS

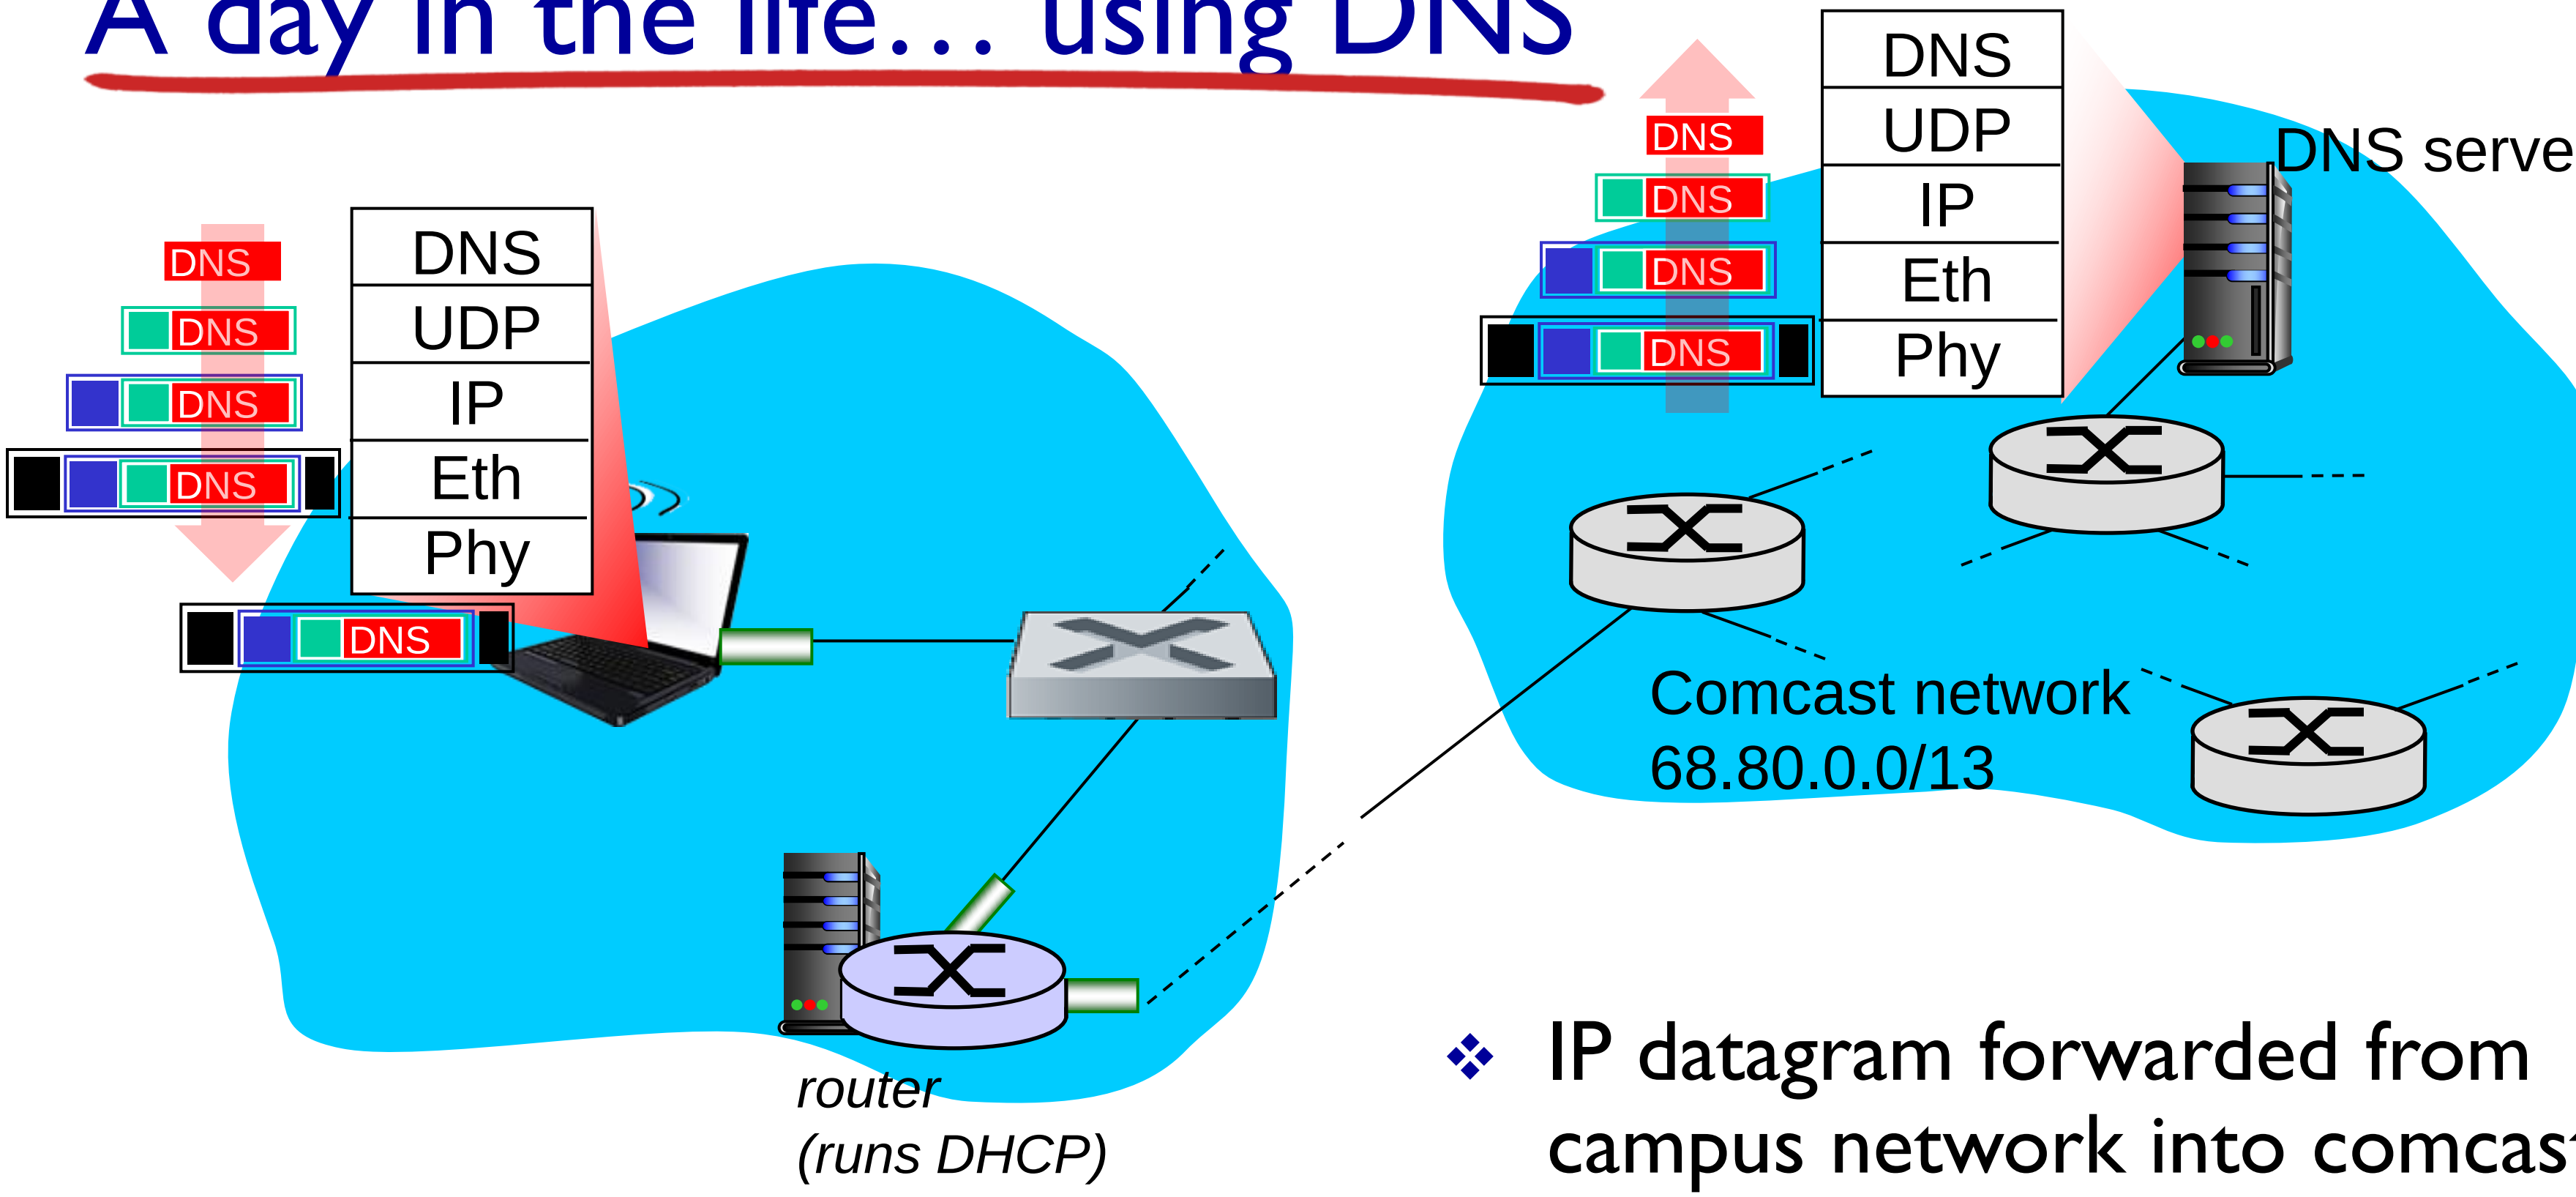

- IP datagram containing DNS query forwarded via LAN switch from client to 1st hop router

- IP datagram forwarded from campus network into comcast network, routed (tables created by *RIP, OSPF, IS-IS* and/or *BGP* routing protocols) to DNS server
- demux'ed to DNS server
- DNS server replies to client with IP address of www.google.com

A day in the life…TCP connection carrying HTTP

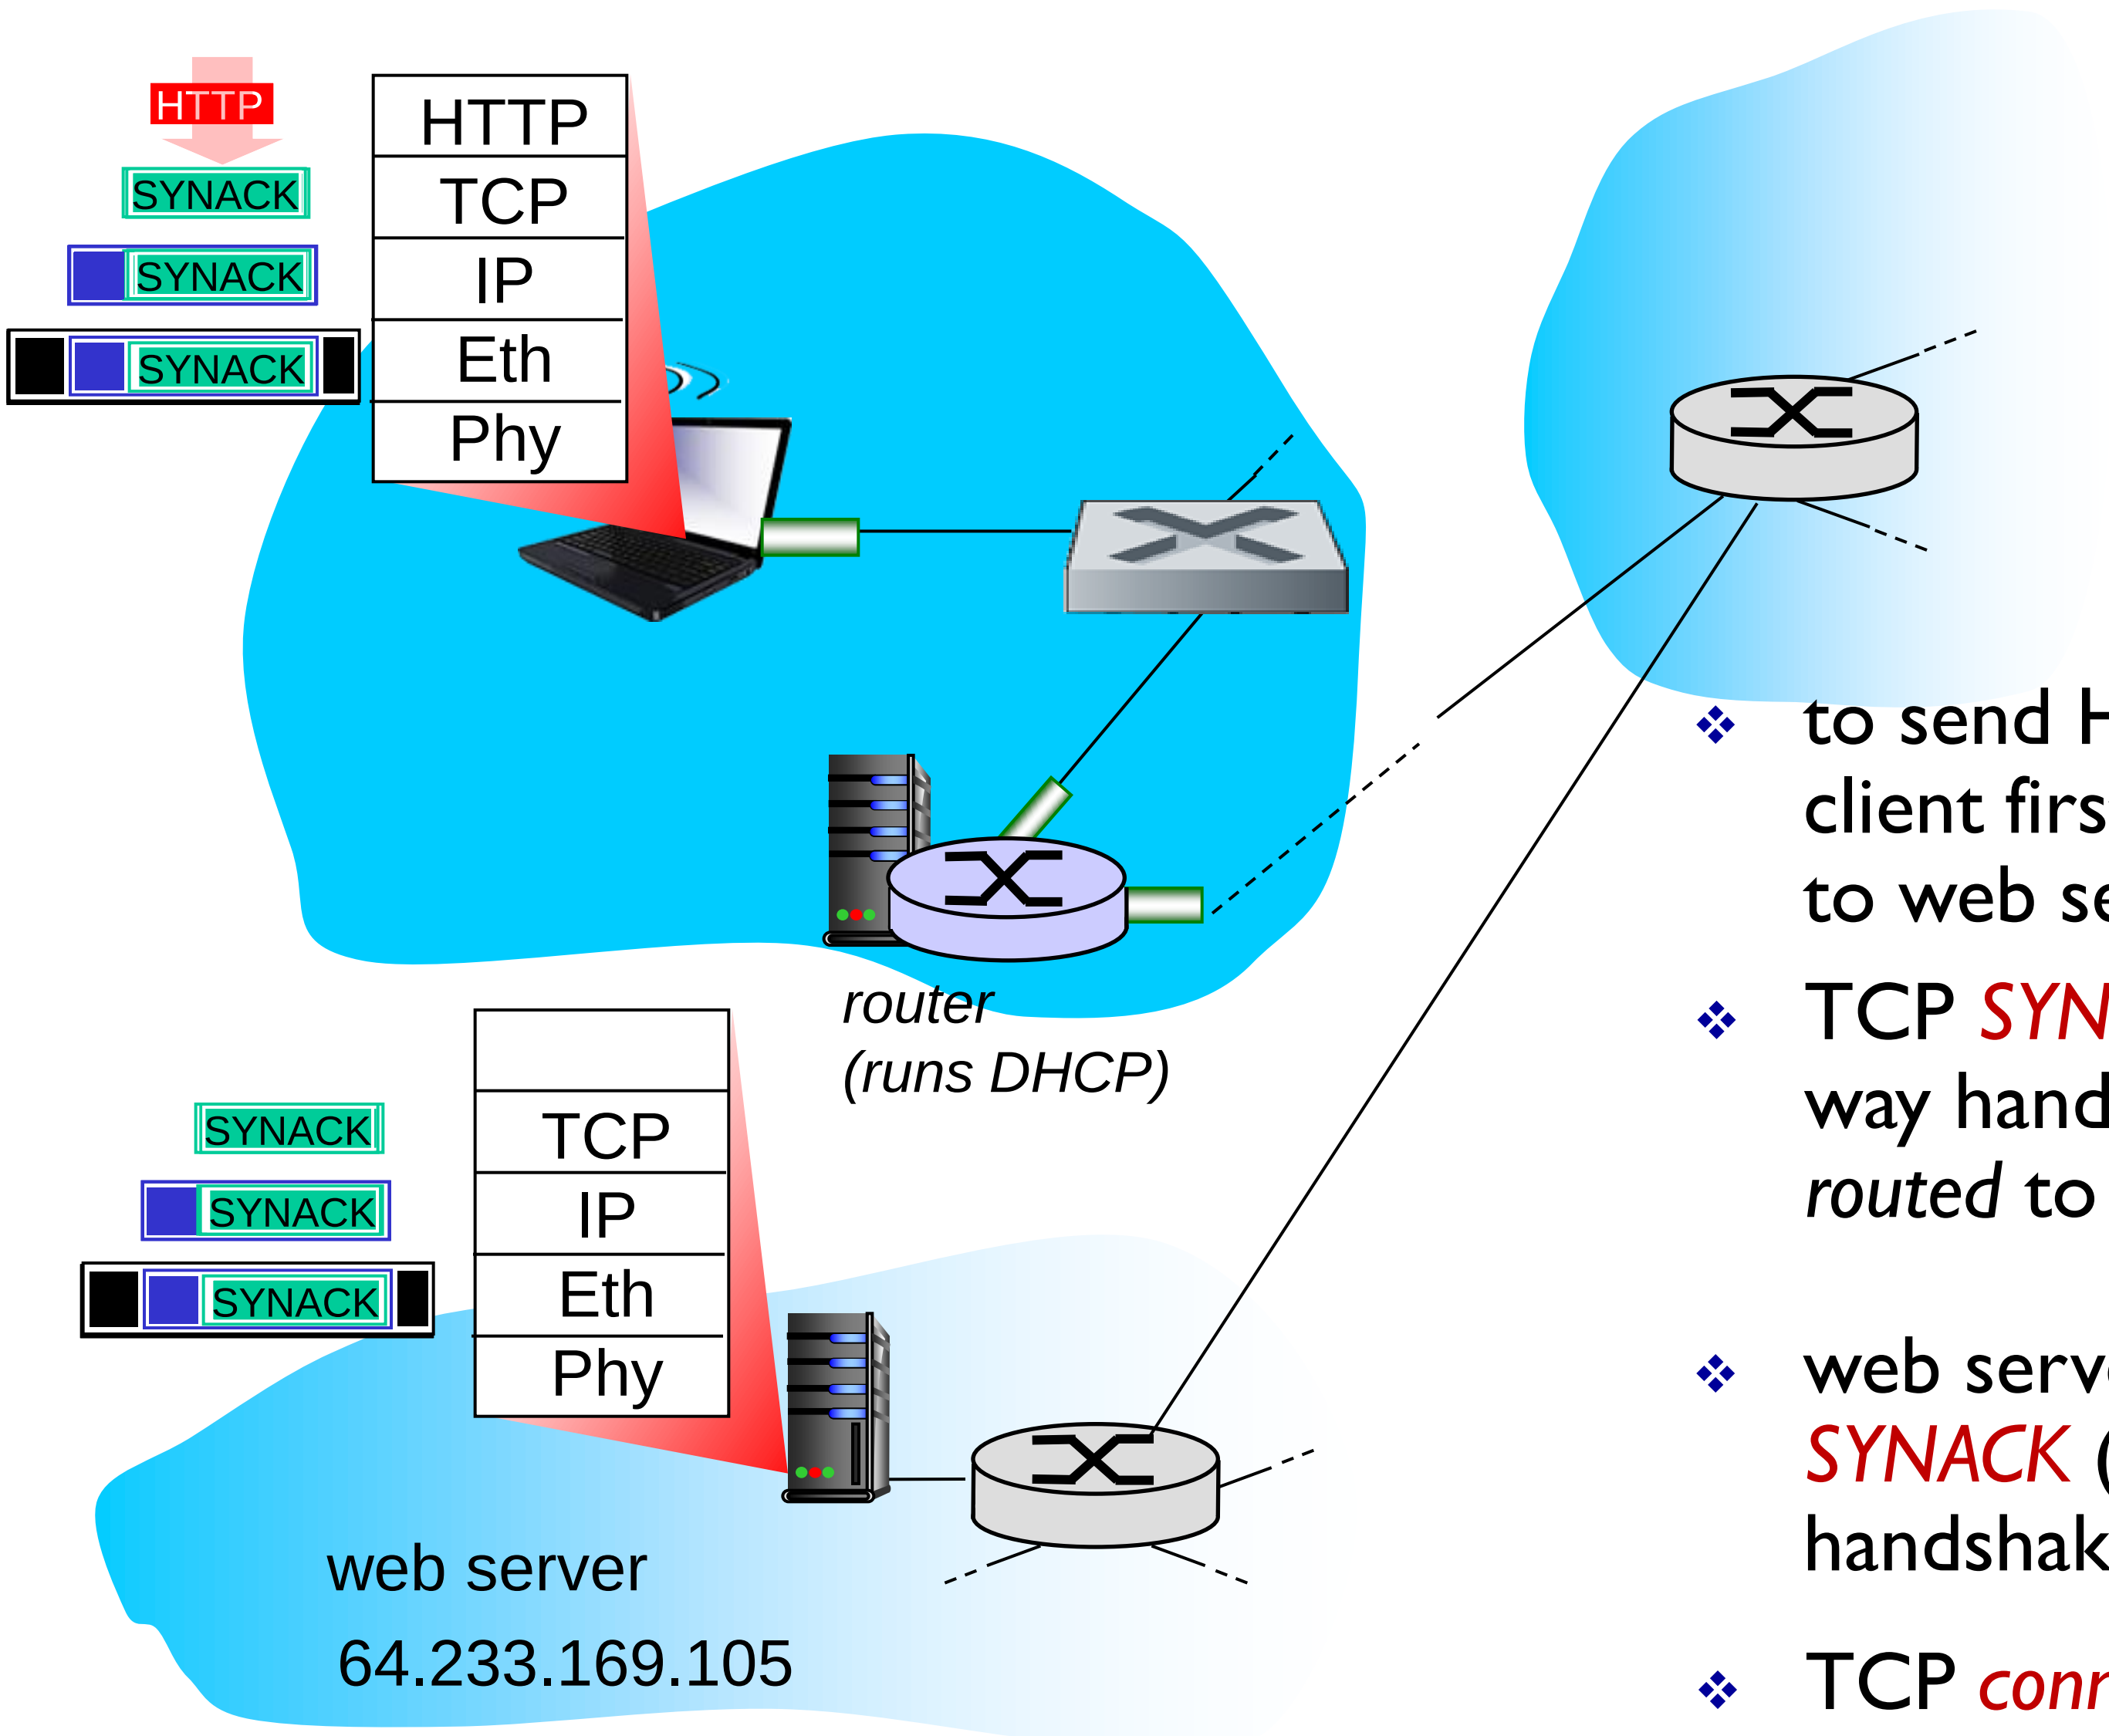

- to send HTTP request, client first opens *TCP socket* to web server
- TCP *SYN segment* (step 1 in 3-way handshake) *inter-domain routed* to web server
- web server responds with *TCP SYNACK* (step 2 in 3-way handshake)
- TCP *connection established!*

A day in the life… HTTP request/reply

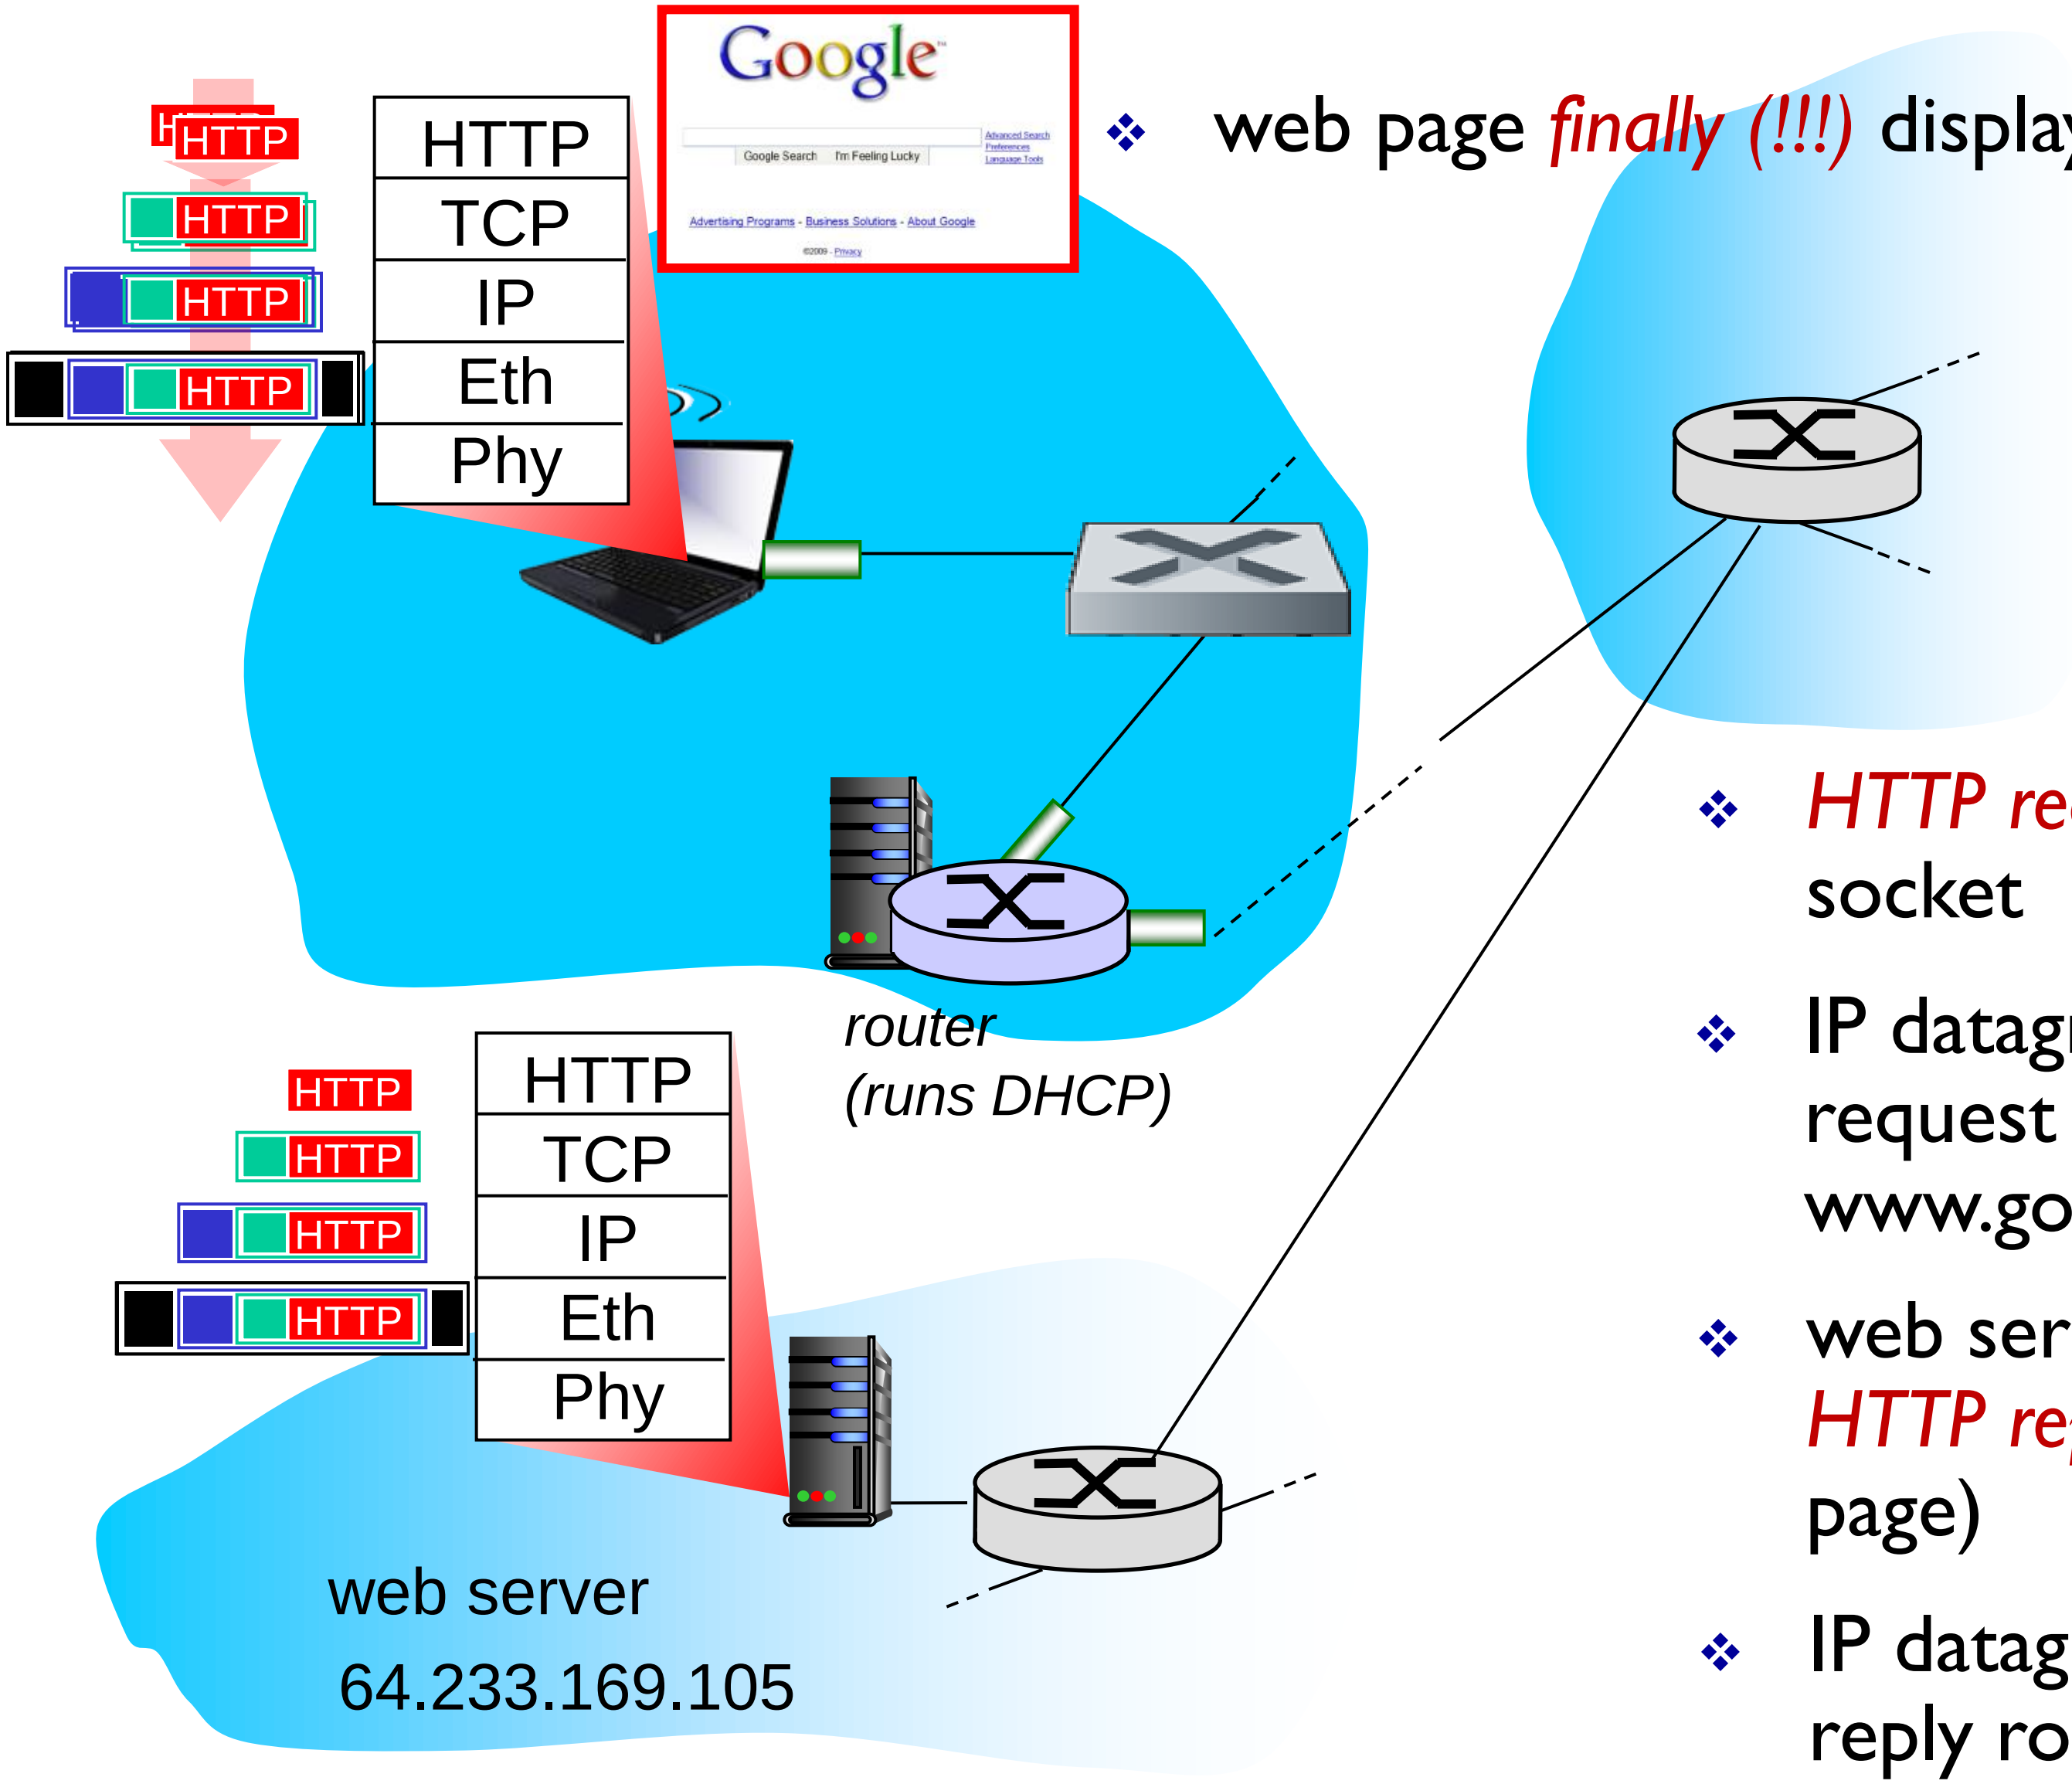

- web page *finally (!!!)* displayed
- *HTTP request* sent into TCP socket
- IP datagram containing HTTP request routed to www.google.com
- web server responds with *HTTP reply* (containing web page)
- IP datagram containing HTTP reply routed back to client

Chapter 5: Summary

- principles behind data link layer services:
  - error detection, correction
  - sharing a broadcast channel: multiple access
  - link layer addressing
- instantiation and implementation of various link layer technologies
  - Ethernet
  - switched LANS
- synthesis: a day in the life of a web request

Chapter 5: let's take a breath

- journey down protocol stack *complete* (except PHY)
- solid understanding of networking principles, practice
- ….. could stop here …. but *lots* of interesting topics!
  - wireless
  - multimedia
  - security
  - network management