## QEL, Spices Board

*In-house Training – 1: Analysis of Pesticide Residues* 

Lecture - 4
Introduction Modern Pesticide
Residue Analysis: Part II
24-Jul-23

Dr. Ramesh BN Spices Board



### Moving on

From last lectures...


#### What we have already covered:

- General principles of pesticide residue analsys
  - → Instrumentation for PRA: LC-MS/MS and GC-MS/MS
  - → QuEChERS, chemistry and practice
  - → General method development scheme for PRA
  - → pH dependency of QuEChERS
  - → Origin of matrix effects in GC-MS/MS and LC-MS/MS
  - → Matrix effects in spices during PRA


#### What we will cover today:

- → Optimization of QuEChERS method for different matrices in LC-MS/MS and GC-MS/MS
- → Use of analyte protectants to mitigate matrix effects in GC-MS/MS analysis
- Single residue methods:
  - → Dithiocarbamate analysis using GC-MS
  - → Ethylene oxide analysis using GC-MS/MS

## $\underset{A \text{ quick review...}}{Method \ development \ for \ PRA}$

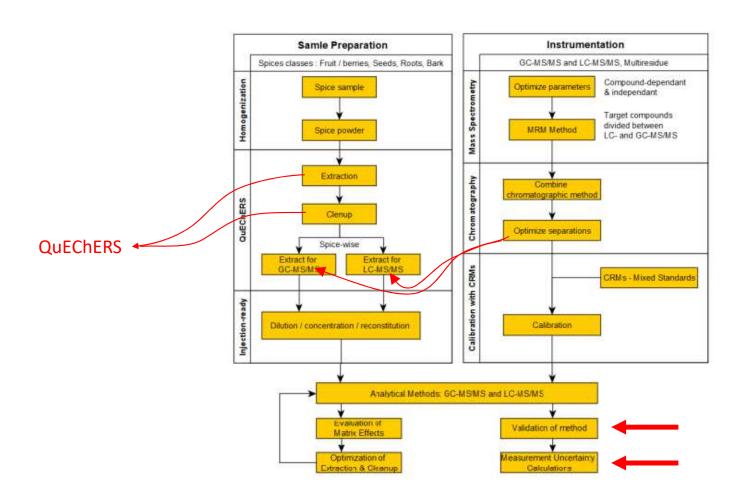


### QuEChERS A quick review...

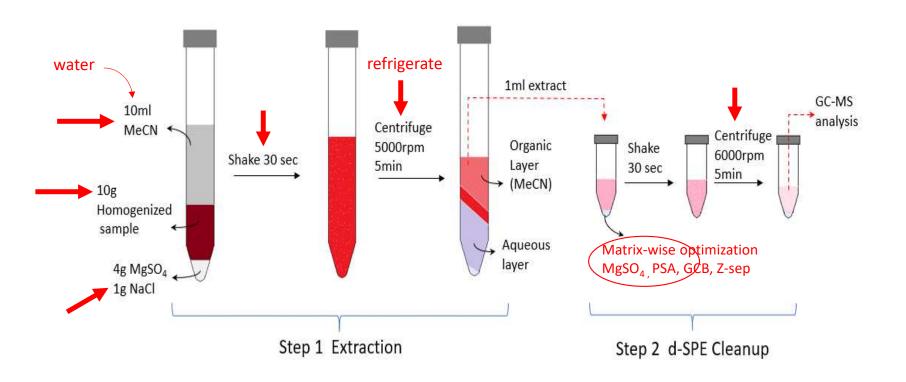

# QuEChERS § New adaptations

### New QuEChERS chemicals

#### Modern adaptations

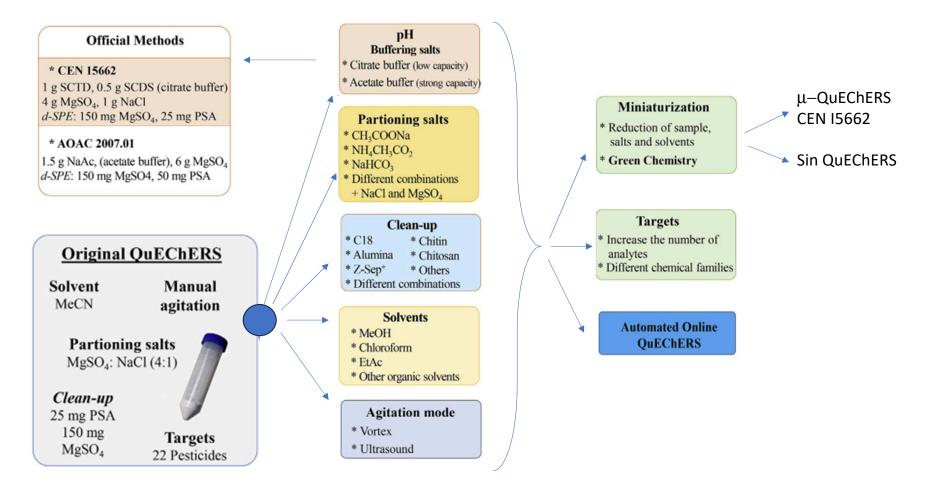

### QuEChERS chemicals

New adaptations for cleanup

## 'Classical' QuEChERS chemicals

- PSA Removes fatty acids, sugars, organic acids, lipids and some pigments
- C18 Removes high lipid contents
- GCB Removes co-extracted pigments, viz. carotenoids and chlorophyll from highly pigmented matrices (recovery loss in planar pesticides)

Brand	Product	Chemical	Useful for
Agilent	EMR-lipid	proprietary	Enhanced lipid removal (needs
			added water to activate)
	CarbonX	"	Enhanced chorophyll removal,
			replacement for GCB. Problems
			with planar pesticides (HCH)
	ChloroFiltr	"	Enhanced chorophyll removal,
			replacement for GCB. OK for
			planar pesticides.
Waters	Z-sep	ZrO2 and SiO2 with	Removes fats and pigments more
	Z-sep+	bound C-18	efficiently than traditional PSA,
			C18 and GCB sorbents


Alumina, florisil®, chitosan and diatomaceous earth: pesticide residues in rice, Cabrera et al. 2016

Chitosan as an economic alternative to the C18 sorbent for PRA in milk, Arias et. al. 2018

### Optimization in matrix is required!!

### QuEChERS Summing up

Perestrelo et. al. 2019

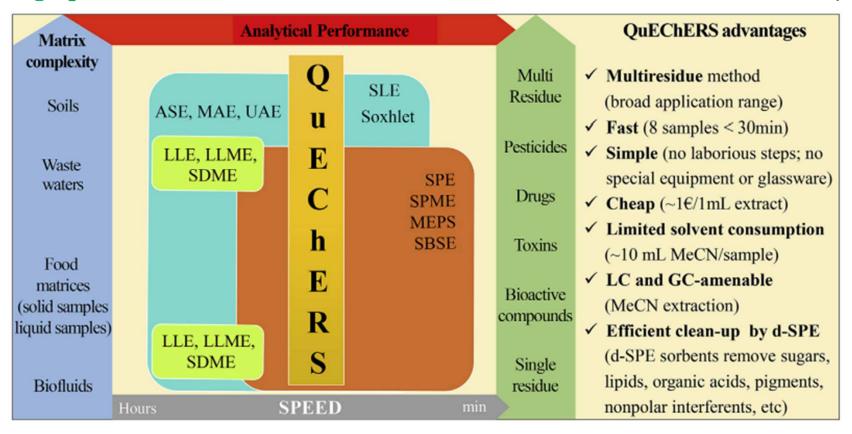

Overview of QuEChERS features and advantages over other extraction methods. Abbreviation: ASE - accelerated solvent extraction, d-SPE - dispersive solid-phase extraction, is chromatography, LC - liquid chromatography, LLE - liquid-liquid extraction, LLME - liquid-liquid microextraction, MAE - microwave-assisted extraction, MeCN — aceto-MEPS — microextraction in packed sorbent, SBSE - stir bar sorptive extraction, SDME, SLE - solid-liquid extraction, SPE - solid-phase extraction, Soxhlet — soxhlet extraction, SPME - solid-phase microextraction, USE - ultrasonic solvent extraction.

# Method optimization § Theory and practice

### Optimization vs Validation

Same or different?

#### Optimization

- → A method is being developed...
  - Many variables (steps) are involved (from sample weight to combination of QuEChERS chemicals)
  - We have to choose a combination of variables that give best performance for a matrix
  - How to arrive at the optimum values for different variables?
  - "Multivariate function with a set of constraints" Chemometrics

#### Validation

- A method has been optimized. Is it fit for our purpose?
  - → Many variables are involved (from sample weight to combination of QuEChERS chemicals)
  - Validation parameters are calculated for the optimized method
  - Gompared with standard validation requirements. Pass / fail?
  - → If not passed, optimize method further.

## Optimization

#### In practice:

- Choose one important 'constraint' e.g. recovery should be minimum 70% with a precision RSD of <10%, n=5.
- Fix one variable (e.g. sample weight) for the experiment
- Leave all the other variables at some base values obtained from literature (e.g. Anastassiades *et. al* 2003, original QuEChERS)
- Run the experiment with different values of the chosen variable (e.g sample weight = 1g, 2g, 4g...)
- Calculate the average recovery and precision.
- Fix the variable value that gave best results against the constraints as the optimum value (e.g. sample weight = 4g).
- Choose the next variable (e.g. amount of water added)

## Validation How?

## Use the Optimized method to calculate the validation parameters, and compare with a standard requirements


Parameter	Measured as	Performanc e criterion
Linearity	From a calibration curve of 5 levels, deviation of calculated concentration from true concentration	≤ ± 20 %
Recovery	Average recovery of each spike level analysed, with $n \ge 5$	70-120 %
Repeatability Precision (RSD <sub>r</sub> )	Relative standard deviation of each spike level analysed (same analyst, same day, $n \ge 5$ )	≤ 20 %
Within-laboratory reproducibility precision (RSD <sub>R</sub> )	Relative standard deviation of 3 replicates of each spike level performed on 3 non-consecutive days (different analysts, $n = 9$ ).	≤ 20 %
Specificity	Response in reagent blank and blank control samples in the same MRM and at the same retention time as the analyte.	≤ 30 % of LOQ
Ruggedness	Relative standard deviation for results obtained from five combinations of three parameters chosen as variables in the optimized method	≤ 20 %
Ion ratio	Quantifier: qualifier ratio in the sample matrix as compared to average of the ion ratios of calibration standards in the same batch	±30%
Retention time (min)  For the quantifying MRM transition, the retention time of the peak in the sample chromatogram as compared to the peak in the standard chromatogram		± 0.1

Method validation is required to ensure that the analytical method is fit for its intended purpose (e.g., assessing compliance of a sample against regulatory limits).

EU SANTE 12682/2019 Guidance document

# Analyte Protectants § GC-MS/MS

## Origin of Matrix Effect in GC-MS/MS A recap

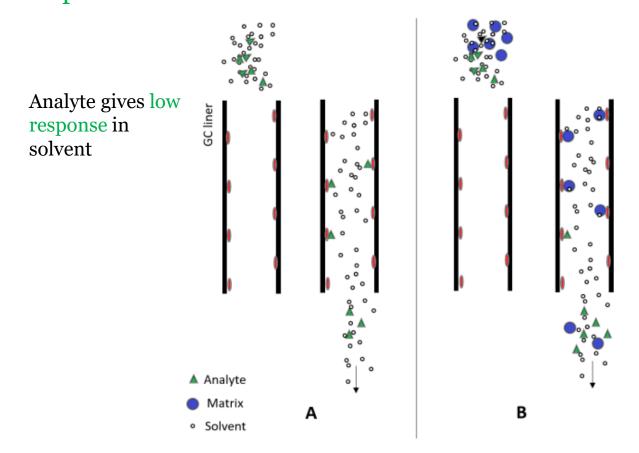

Analyte gives better response in matrix extract

- Matrix matched calibration is nearly always required
- Finding a blank matrix is sometimes difficult
- Analyte protectant is an alternative

## Analyte Protectants What?

Analyte protectants (AP) are compounds containing multiple hydroxyl groups

When added to solvent-based calibration standards in concentrations much higher than analyte concentrations, AP can mimic the matrix

AP get preferentially adsorbed on the active sites of the injection system in GC, thereby 'protecting' the analytes, and improving response

## Analyte Protectants

#### **Preparation of AP:**

2g of ethylene glycerol, 2ml of gluconolactone, 1 ml each of 50 mg/ml sorbitol and shikimic acid, diluted to 10 ml with 60:40 acetonitrile water mixture.

#### Effective concentrations:

~ 5% each of ethylene glycol and gluoconolactone, 5 mg/ml each of sorbitol and shikimic acid.




#### Use of Analyte Protectants in GC-Analysis a way to improve peak shape and reduce decomposition of susceptible compounds

Reported by: EURL-SRM Version 1 (last update: 22.04.2013)

#### Brief description of problem/observation/solution:


The GC-analysis of various pesticities is quite problematic due to unwanted tailing and decomposition phenomena. Both phenomena are related to active sites on the surface of the GC-system and become more pronounced the more contaminated the GC-system becomes. Replacing the liner and cutting the first part of the column are only temporary measures as new non-volatile components from the injected extracts are deposited forming new active sites. Analyte protectants (APs) help to reduce analyte tailing and decomposition within the sites. Analyte protectants (APs) help to reduce analyte tailing and decomposition within the hancement. Most effective as APs are compounds entailing multiple hydroxyl-groups with which they can effectively interact with the active sites with hydrogen bonds. To be effective APs have to be added to solutions (e.g. extracts, standard solutions) at concentration by farexeeding those of the analytes to be protected, in many cases the protective effect exhibited by APs is stronger than that of matrix components. With this in mind APs are added to both calibration solutions in solvent and sample extracts to equalize the protective potential, thus obvious each covering a different volutions. APs are often employed as a mixture of compounds each covering a different volutility range.

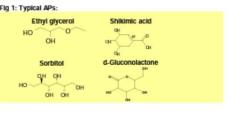

EU Reference Laboratory for Pesticides Requiring Single Residue Methods CVUA Stuftgart, Schaffandstr. 3/2, 70736 Fellbach, Germany FURB @rougas.hvuf. Page 1-2

Google "EU RL analyte protectants"

## Analyte Protectants Effective?

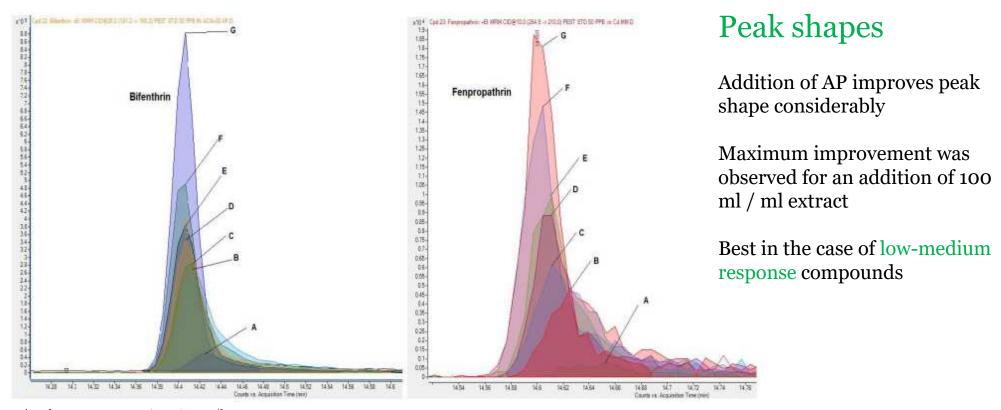


Analyte concentration 50  $\mu g/kg$ 

A = in solvent, G = in matrix extract

B, C, D, E, F = addition of 10, 20, 30, 50 and 100  $\mu$ l AP mix

**Spices Board Data** 

## Analyte Protectants Effective?

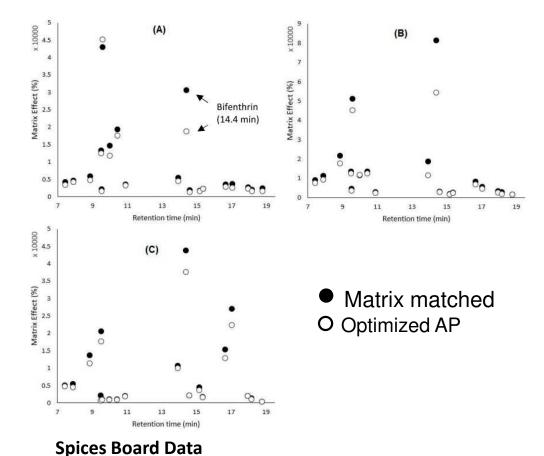

### Quantitation

Using optimized amount of AP / ml extract effectively cancelled the matrix effect in spices

Less effective in high-response compounds which showed high matrix enhancement

### **Analyte Protectants**

**Precautions** 

Use AP only in GC-MS/MS analysis, not in LC

#### Syringe contamination

- AP dissolves best in water or other polar solvents
- It is important to rinse the syringe thoroughly with water or a water-containing polar solvent mix after each injection (set rinse in injection method)
- After 100 injections, remove syringe and clean plunger with water.

#### Check for interferences

When using MS full-scan mode, high concentrations of AP may mask the identification of pesticides.

§ Analysis by GC-MS

Single Residue Analysis (1)

Application and analysis


Dithiocarbamates (DTC) are broad-spectrum fungicides extensively used in spices

- This class of compounds have complexed metal ions and thus usual sample preparation methods cannot be used
- Important in the case of Cardamom and black pepper (EU and Saudi Arabia have strict limits)

#### Analysis

- Sample preparation: DTC in extract is hydrolysed to quantitatively produce CS<sub>2</sub> which is absorbed in isooctane and analysed
- Instrumentation: GC-MS in selected ion monitoring (SIM) mode

#### Chemical structures

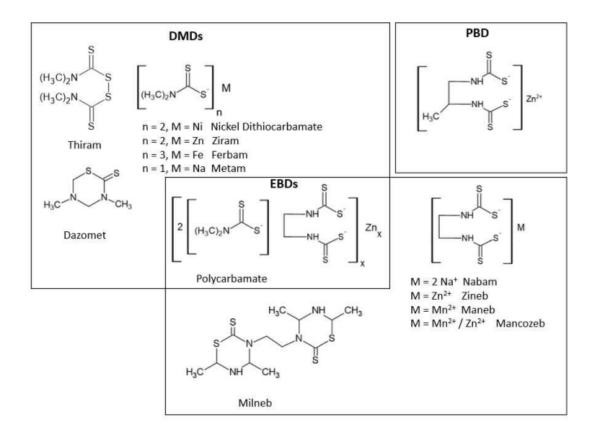

Conventional methods can't be used because of low solubility of the compounds in organic solvents

The compounds are hydrolysed to form CS<sub>2</sub> quantitatively which was absorbed into isooctane and analysed in GCMS

#### Analysis

- Presence of metal ion in DTC compounds (except in thiram and dazomet) makes conventional extraction analysis difficult
- A mixture of SnCl<sub>2</sub> and HCl is used to cleave the DTC compound and produce CS<sub>2</sub>
- This CS<sub>2</sub> is absorbed quantitatively in isooctane and analysed in GC-MS


Thiram has to be used in spiking studies, as it is the only water soluble DTC compound.

1 mole of thiram = 2 mols of CS<sub>2</sub> Purity of thiram also need to be accounted for

#### instrumentation


In selected ion monitoring (SIM) mode,

- Ion with m/z = 76 was used for quantitation
- Ion with m/z = 78, with intensity of about 9% of the quantifier ion, was used for qualification

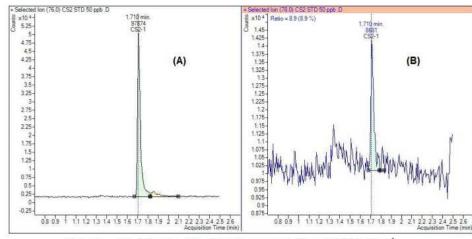

(A) m/z = 76, (B) m/z = 78, at LOQ concentration of 0.05 mg kg<sup>-1</sup>

GC method

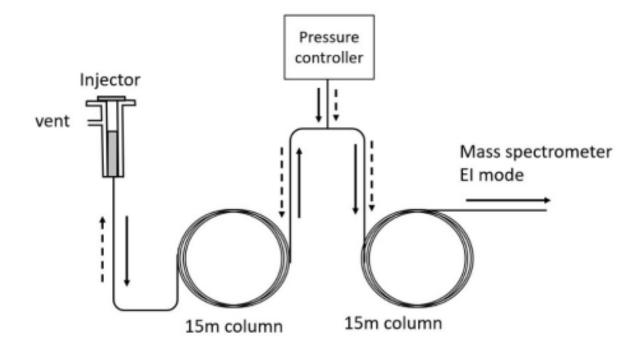

Mid-column backflush in GCMS improves precision considerably in DTC analysis

## Ethylene Oxide § Analysis by GC-MS/MS

Single Residue Analysis (2)

## Ethylene Oxide (ETO) Why?

Ethylene oxide is a microbial control agent (fumigant) and sterilizing agent

Used in spices in India, very effective for control of salmonella

Reported to be a carcinogen in studies conducted in European Union and USA


- Occupational exposure causes lymphoma and leukemia
- Declared as category 1 carcinogen by the International Agency Research of Cancer (IARC)in 1991

European Union considers ETO as a pesticide, and has MRLs

- → Chilli, ginger MRL is 0.02 mg/kg
- All other spices 0.1 mg/kg
- ☐ In 2022, EU made health certificate mandatory for spices exported from ☐ India to EU, demonstrating compliance with ETO MRL.

## Ethylene Oxide (ETO) How serious?

#### Rejections of Indian Spice Exports to EU (RASFF)

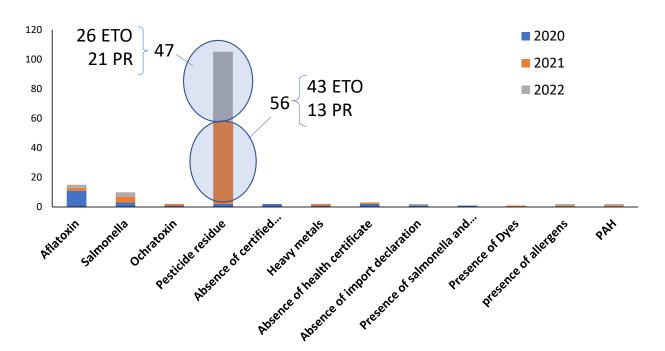


## Ethylene Oxide (ETO) Chemistry

Ethylene oxide is a three membered ring, highly strained and unstable

- haturally breaks down and forms 2-CE
- ETO residues can be removed by flushing with CO<sub>2</sub> after treatment, and reduce naturally in time
- → But 2-CE residues are stable and will remain on the treated product

Regulatory limit is for total ETO, i.e. sum of residual concentrations of ETO and 2-CE

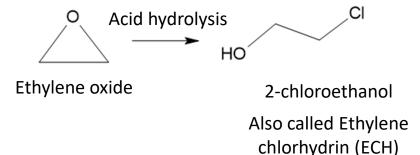


## Ethylene Oxide (ETO) Analysis

ETO can be analysed in two ways

- hydrolysis (HCl and NaCl), and analysing total 2-CE by GC-MS/MS. In this method, calculation is ETO(sum) = x(2CE) × 0.55
- Analysis of ETO and 2—CE separately using QuEChERS sample preparation followed by GC-MS/MS

Detecting ETO residues will be an indication of time elapsed after treatment, so EU recommends the QuEChERS method



## Ethylene Oxide

QuEChERS (EU method)

For cereals, spices and other dry commodities of low lipid content (based on EN 15662)

- Weigh 2 g ± 0.02 g of sample homogenates, add 10 mL of acetonitrile, shake 15 min
- Add the QuEChERS citrate buffer-partitioning salts mixture and shake for 1-2 minutes, centrifuge at >3000 g
- Dispersive SPE cleanup with C18/PSA/MgSO4 (25/25/150 mg/mL extract)
- GC-MS/MS analysis



#### EURL-SRM - Analytical Observations Report

Concerning the following...

- Compound(s): Ethylene oxide (EO), 2-Chioroethanol (2CE)
- o Commodities: Sesame seeds
- Extraotion Method(c): QuOI, QuECHERS
- Instrumental analysis: GC-MS/MS

#### Analysis of Ethylene Oxide and its Metabolite 2-Chloroethanol by the QuOil or the QuEChERS Method and GC-MS/MS

Version 1.1 (December 2020)

#### Background information / Initial Observations:

In late August 2020, Belgium initiated a RASFF notification concerning residues of the unauthorized substance ethylene oxide (EO) in various lots of sesame seeds from India at levels up to 186 mg/kg. On 9 September 2020, a notification this concerning was published in the RASFF portal (2020-3678). The affectad products were delivered to several member states and were used for the production of various processed foodstuffs. Until 20 November 2020, roughly 140 notifications concerning EO in seasme from India were notified within the RASFF portal with two of them being border rejections. These notifications originated from 17 different EU-Member states and 2 EFTA countries. The EOlevels encountered in the sesame samples mostly ranged between 0.1 and 10 mg/kg, all exceeding the EU-MRL (maximum residue limit) of 0.05 mg/kg.

For how long EO-lumigation has been in use or increasingly applied to sesame seeds in India will need to be investigated. In a review paper from 2004 concerning furnigation of oily seeds with focus on India", methyl bromide and phosphine are reported as the main furnigants used in India for oilseeds. The alternatives discussed in this review do not include EO. Given the strong antibacterial properties of EO (reportedly 10-loid more effective than methyl bromide"), it is conceivable that EO-lumigations may have been initiated in India as a counter-measure for reducing the incidences of seame seed contaminations with salmonelia and other fecal bacteria. These contaminations have led to numerous border rejections of seasme seed from India by EU Member Statles in the past two decades. Looking at the RASET portal," the first three notifications on salmonelia in seasme seeds were launched by

Community Reference Laboratory for Single Residue Methods CVUA Stuttgart, Schaftandatr. 3/2, 70736 Fellbach, Germany CRL@cvuss.bwl.de Page 1-2 -

Google "EU RL ethylene oxide"

<sup>\*</sup> Austria, Belgium, Crossia, Czech Republic, Finland, France, Italy, Germany, Latvia, Luxemburg, Poland, Slovenia, Spain, Sweden, Th Nedherbards, Norway Switzerland.


Sciniahnadar Rajendron, Chayadevi HS; Olisends -Storage and Insest Pest Control, JFST (2004), 41(4):369-367


<sup>\*</sup>L.T. Richardson and H. A. U. Monro; Furnigation of jute bags with ethylene swide and methyl bronkide to eradicate potato sing out bacteria.

<sup>\*</sup> https://webgate.ec.europa.cu/raof/-window/portal/?event-SearchForm&cleanSearch-

## Ethylene Oxide Analysis: GC-MS/MS (EU method)

Compound	Transition
Ethlene oxide	$44.1 \rightarrow 14$
	$44.1 \rightarrow 28$
	$44.1 \rightarrow 29.1  (QN)$
2-Chloroethanol	$80.1 \rightarrow 31.1  (QN)$
	$80.1 \to 43$
	$82.1 \rightarrow 31.1$

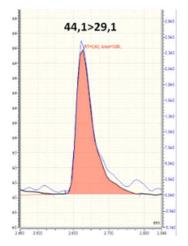

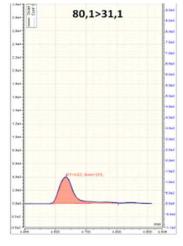


## Ethylene Oxide Issue of acetadehyde


Acetaldehyde can be found naturally in some products (e.g. sesame.

It may also be formed formed at high temperatures from ETO or 2-CE through thermal rearrangement.

Share same MRM transitions

Chromatographic separation is required

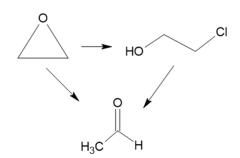

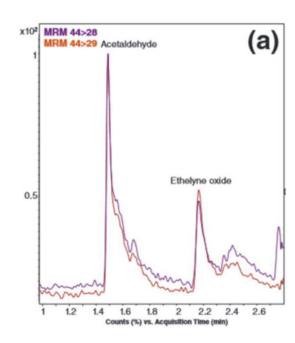

### More to learn..

Next session 31st June 2023

- (1) Introduction to instrumentation: LC-MS/MS, 03-Jul-23
- (2) Introduction to instrumentation: GC-MS/MS, 10-Jul-23
- (3) Modern pesticide residue analysis Introduction, 17-Jul-23
- (4) Advanced pesticide residue analysis, 24-Jul-23
- (5) Method validation: requirements and practice, 31-Jul-23
- (6) Introduction to measurement uncertainty calculation, 7-Aug-23

#### Dr Ramesh BN

Scientist C, Spices Board

WhatsApp: +918547662471 Mobile: +91 8547662471

Email (O): rameshbabu.n@nic.in Email (P): <a href="mailto:rameshbn1@gmail.com">rameshbn1@gmail.com</a>

Course website: http://ramesh-sb.github.io

## Thank you! § Questions?