


Meios Físicos

MC822 – Nelson Fonseca

(Apresentado por Carlos A. Astudillo)

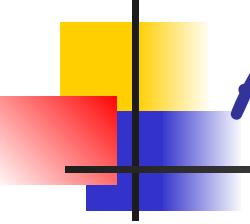


Agenda


- Definição de Conceitos Básicos
 - Frequência, cumprimento de onda, período e fase
 - Decibeis
 - Modulação e codificação
 - Capacidade de canal
- Meios de transmissão:
 - Guiados: par trenzado, cabo coaxial, power line, fibra óptica
 - Não Guiados: rádio frequência (RF), micro-ondas, satélites

Frequency, Period, and Phase


- $A \sin(2\pi ft + \theta)$, A = Amplitude, f = Frequency, θ = Phase, Period $T = 1/f$, Frequency is measured in Cycles/sec or **Hertz**

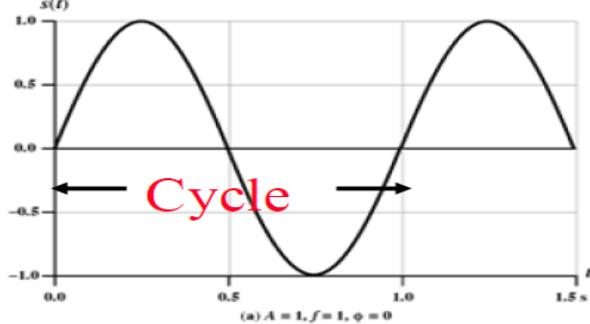


(a) $A = 1, f = 1, \phi = 0$

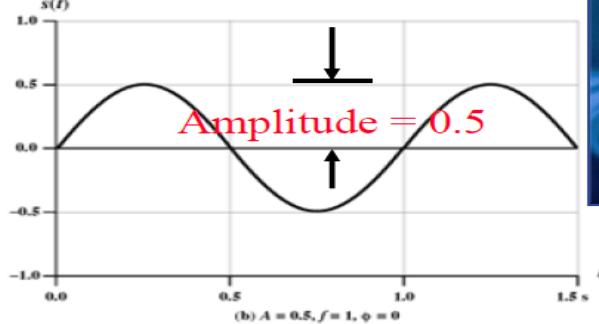

(b) $A = 0.5, f = 1, \phi = 0$

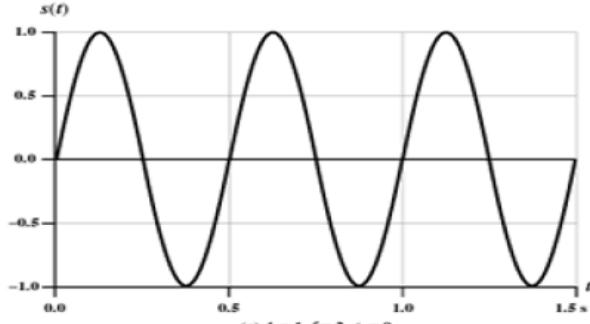

(c) $A = 1, f = 2, \phi = 0$

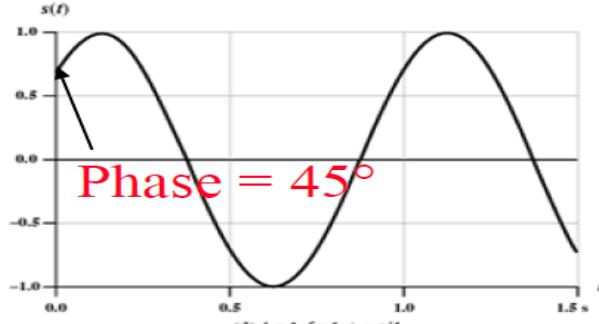



(d) $A = 1, f = 1, \phi = \pi/4$

Phase


- Sine wave with a phase of 45°

$$\begin{aligned}\sin(2\pi ft + \frac{\pi}{4}) &= \sin(2\pi ft) \cos(\frac{\pi}{4}) + \cos(2\pi ft) \sin(\frac{\pi}{4}) \\ &= \frac{1}{\sqrt{2}} \sin(2\pi ft) + \frac{1}{\sqrt{2}} \cos(2\pi ft)\end{aligned}$$

In-phase component I + Quadrature component Q

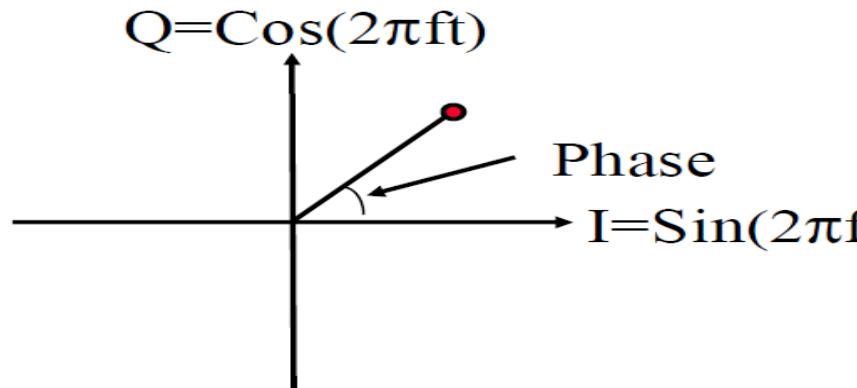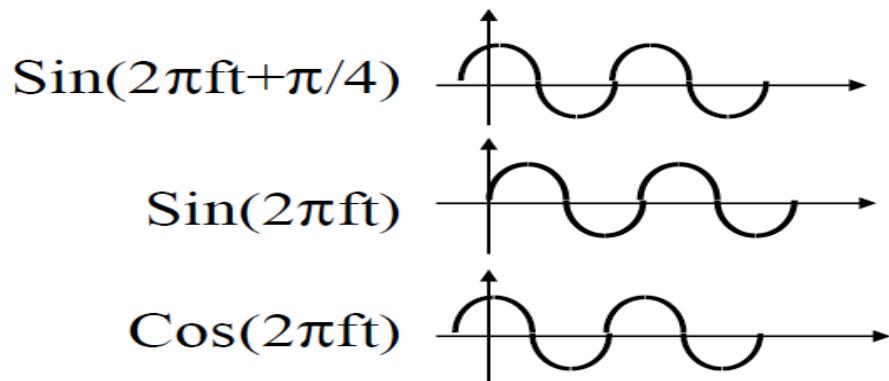

Wavelength

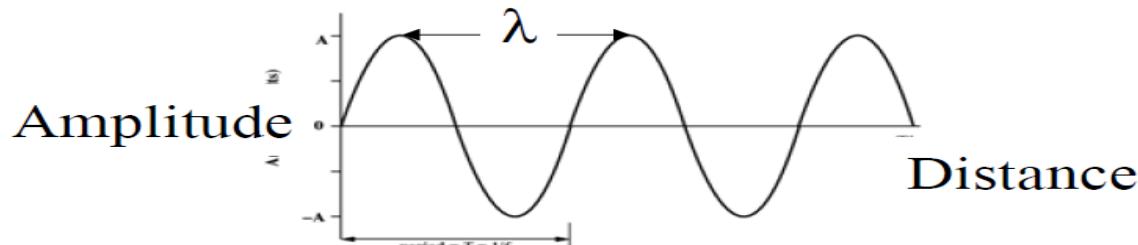







- Distance occupied by one cycle
- Distance between two points of corresponding phase in two consecutive cycles
- Wavelength = λ
- Assuming signal velocity v
 - $\lambda = vT$
 - $\lambda f = v$
 - $c = 3 \times 10^8 \text{ m/s}$ (speed of light in free space) = **300 m/ μ s**

Example

- Frequency = 2.5 GHz

$$\begin{aligned}\text{Wavelength } \lambda &= \frac{c}{f} \\ &= \frac{300 \text{ m}/\mu\text{s}}{2.5 \times 10^9} \\ &= 120 \times 10^{-3} = 120 \text{ mm} = 12 \text{ cm}\end{aligned}$$

Time and Frequency Domains

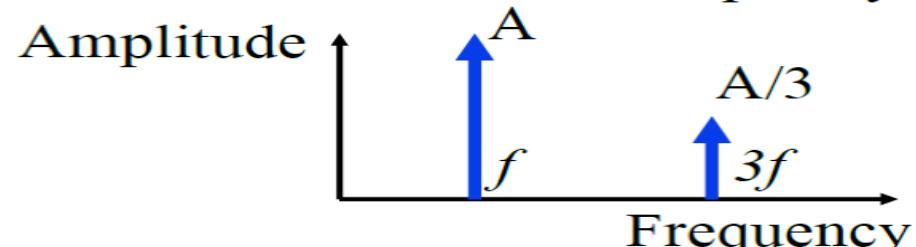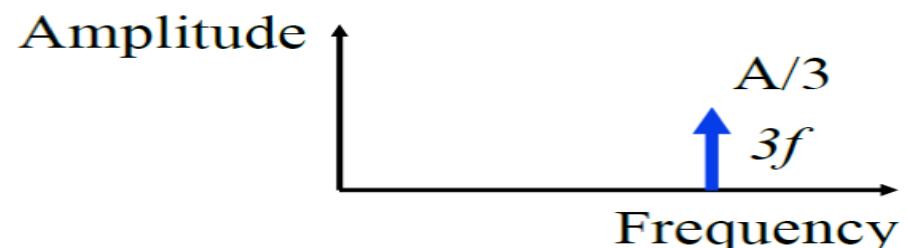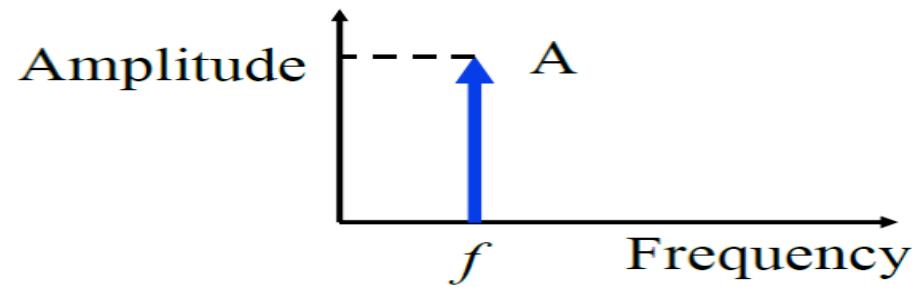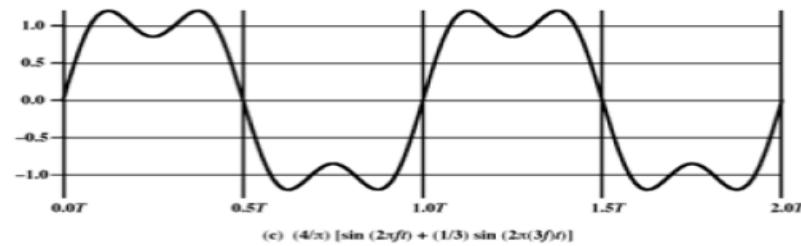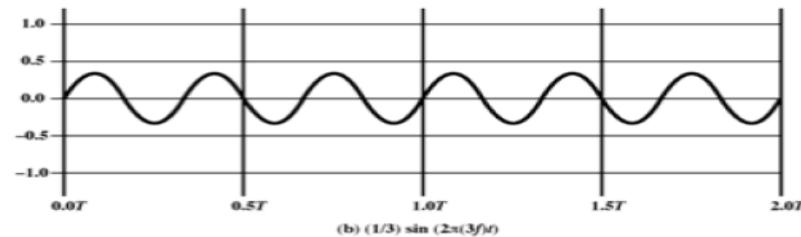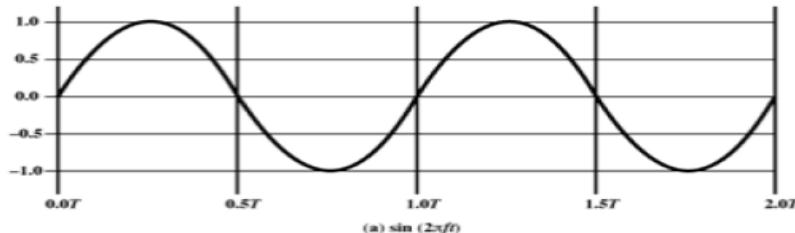


Time Domain


Frequency Domain

Decibels

- Attenuation = $\log_{10} \frac{P_{in}}{P_{out}}$ Bel
- Attenuation = $10 \log_{10} \frac{P_{in}}{P_{out}}$ decibel
- Attenuation = $20 \log_{10} \frac{V_{in}}{V_{out}}$ decibel
- **Example 1:** $P_{in} = 10 \text{ mW}$, $P_{out} = 5 \text{ mW}$
 $\text{Attenuation} = 10 \log_{10} (10/5) = 10 \log_{10} 2 = 3 \text{ dB}$
- **Example 2:** $P_{in} = 100 \text{ mW}$, $P_{out} = 1 \text{ mW}$
 $\text{Attenuation} = 10 \log_{10} (100/1) = 10 \log_{10} 100 = 20 \text{ dB}$

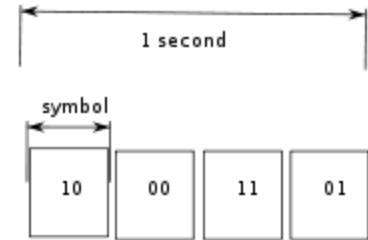

Coding Terminology

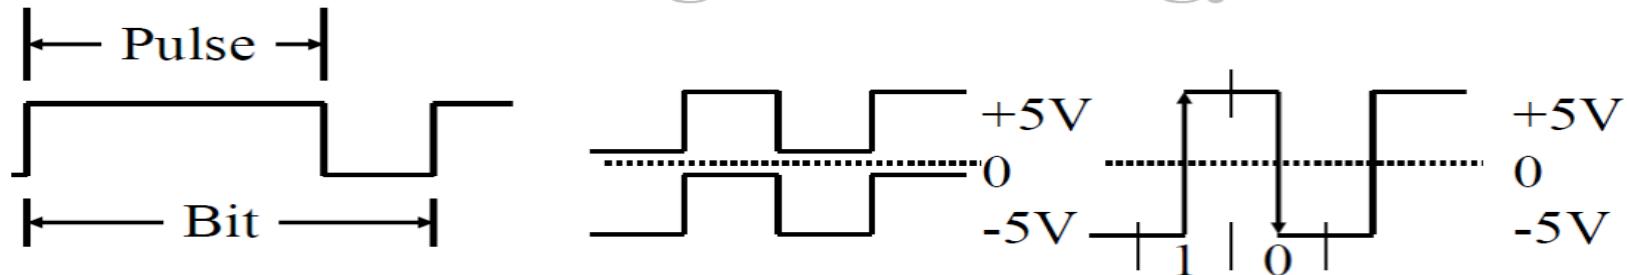


- **Signal element**: Pulse (of constant amplitude, frequency, phase) = **Symbol**
- **Modulation Rate**: $1/\text{Duration of the smallest element}$
=Baud rate
- **Data Rate**: Bits per second


Modulation

- Digital version of modulation is called **keying**


- **Amplitude Shift Keying (ASK):**

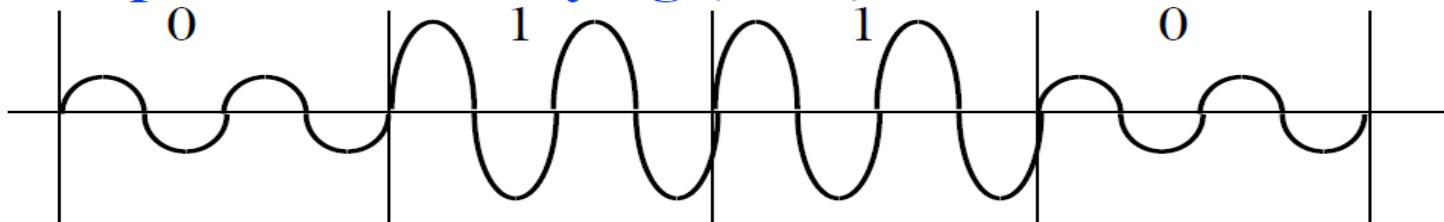

- **Frequency Shift Keying (FSK):**

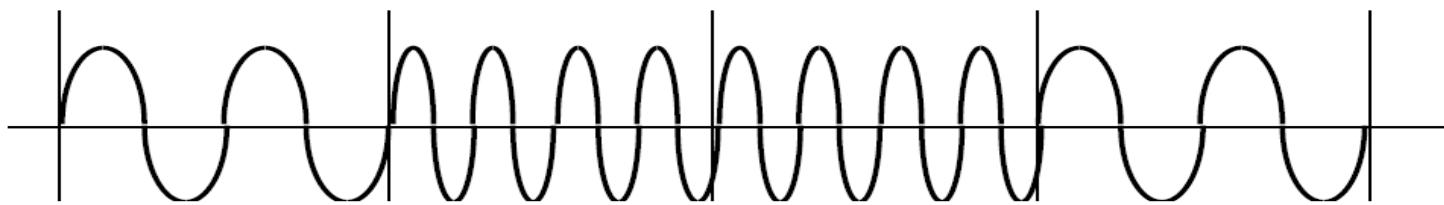


- **Phase Shift Keying (PSK):** Binary PSK (BPSK)

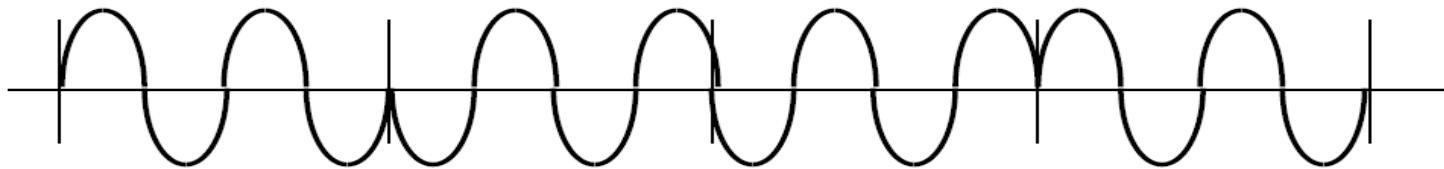


Modulation (Cont)

- **Differential BPSK:** Does not require original carrier

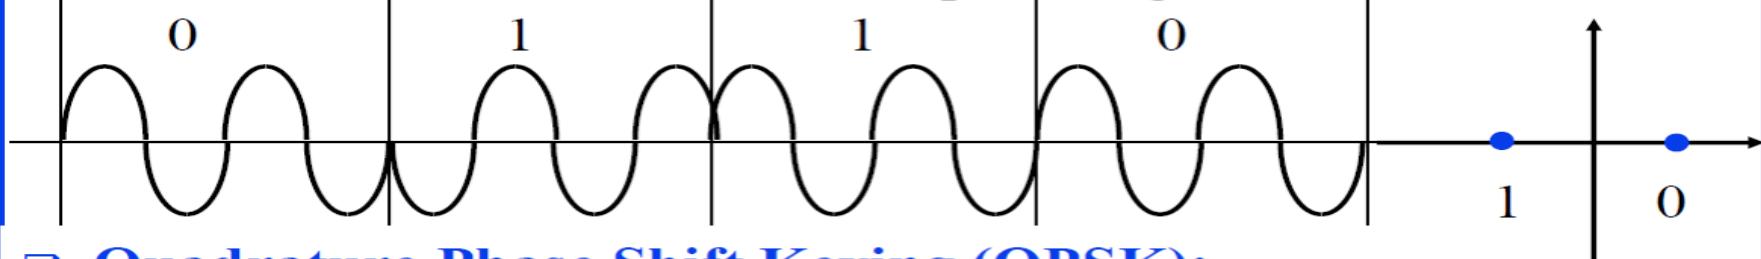

- **Quadrature Phase Shift Keying (QPSK):**

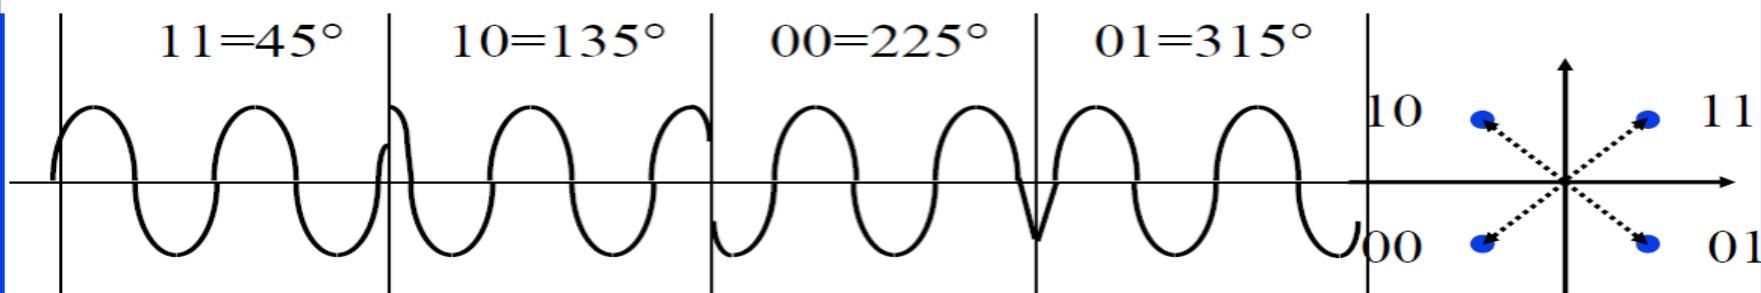

- In-phase (I) and Quadrature (Q) or 90 ° components are added

Ref: Electronic Design, "Understanding Modern Digital Modulation Techniques,"

<http://electronicdesign.com/communications/understanding-modern-digital-modulation-techniques>


Washington University in St. Louis

<http://www.cse.wustl.edu/~jain/cse574-14/>


©2014 Raj Jain

QAM

- Quadrature Amplitude and Phase Modulation
- 4-QAM, 16-QAM, 64-QAM, 256-QAM
- Used in DSL and wireless networks

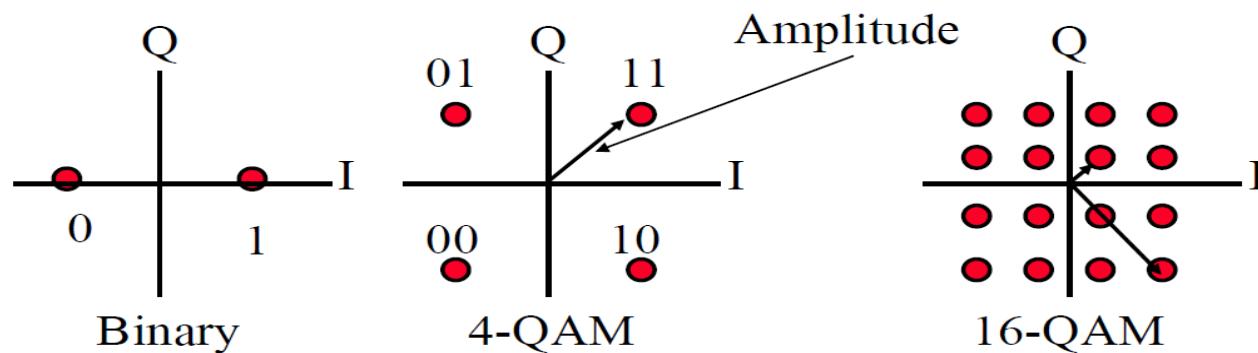


- 4-QAM \Rightarrow 2 bits/symbol, 16-QAM \Rightarrow 4 bits/symbol, ...

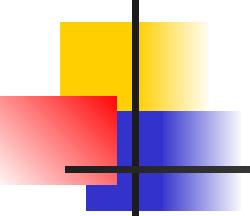

The most common digital modulation techniques are:

- Phase-shift keying (PSK)
 - Binary PSK (BPSK), using $M=2$ symbols
 - Quadrature PSK (QPSK), using $M=4$ symbols
 - 8PSK, using $M=8$ symbols
 - 16PSK, using $M=16$ symbols
 - Differential PSK (DPSK)
 - Differential QPSK (DQPSK)
 - Offset QPSK (OQPSK)
 - $\pi/4$ -QPSK
- Frequency-shift keying (FSK)
 - Audio frequency-shift keying (AFSK)
 - Multi-frequency shift keying (M -ary FSK or MFSK)
 - Dual-tone multi-frequency (DTMF)
- Amplitude-shift keying (ASK)
- On-off keying (OOK), the most common ASK form
 - M -ary vestigial sideband modulation, for example 8VSB
- Quadrature amplitude modulation (QAM), a combination of PSK and ASK
 - Polar modulation like QAM a combination of PSK and ASK [citation needed]
- Continuous phase modulation (CPM) methods
 - Minimum-shift keying (MSK)
 - Gaussian minimum-shift keying (GMSK)
 - Continuous-phase frequency-shift keying (CPFSK)
- Orthogonal frequency-division multiplexing (OFDM) modulation
 - Discrete multitone (DMT), including adaptive modulation and bit-loading
- Wavelet modulation
- Trellis coded modulation (TCM), also known as Trellis modulation
- Spread-spectrum techniques
 - Direct-sequence spread spectrum (DSSS)
 - Chirp spread spectrum (CSS) according to IEEE 802.15.4a CSS uses pseudo-stochastic coding
 - Frequency-hopping spread spectrum (FHSS) applies a special scheme for channel release

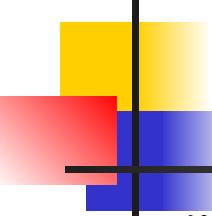

WiFi Modulation

WiFi systems use two primary radio transmission techniques.

- **802.11b (<=11 Mbps)** – The 802.11b radio link uses a direct sequence spread spectrum technique called **complementary coded keying** (CCK). The bit stream is processed with a special coding and then modulated using Quadrature Phase Shift Keying (QPSK).
- **802.11a and g (<=54 Mbps)** – The 802.11a and g systems use 64-channel orthogonal frequency division multiplexing (OFDM). In an OFDM modulation system, the available radio band is divided into a number of sub-channels and some of the bits are sent on each. The transmitter encodes the bit streams on the 64 subcarriers using Binary Phase Shift Keying (BPSK), Quadrature Phase Shift Keying (QPSK), or one of two levels of Quadrature Amplitude Modulation (16, or 64-QAM). Some of the transmitted information is redundant, so the receiver does not have to receive all of the sub-carriers to reconstruct the information.

The original 802.11 specifications also included an option for frequency **hopping spread spectrum** (FHSS), but that has largely been abandoned.


Adaptive Modulation

WiFi uses adaptive modulation and varying levels of forward error correction to optimize transmission rate and error performance.

As a radio signal loses power or encounters interference, the error rate will increase. Adaptive modulation means that the transmitter will automatically shift to a more robust, though less efficient, modulation technique in those adverse conditions.

Channel Capacity


- Capacity = Maximum data rate for a channel
- **Nyquist Theorem:** Bandwidth = B
Data rate $\leq 2 B$
- Bi-level Encoding: Data rate = $2 \times$ Bandwidth

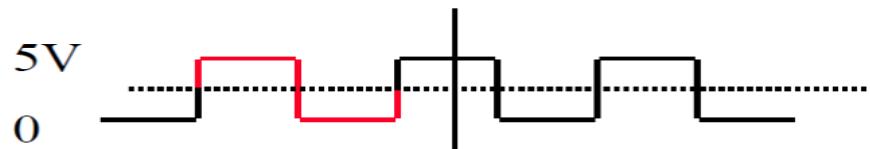

- Multilevel: Data rate = $2 \times$ Bandwidth $\times \log_2 M$



Example: M=4, Capacity = $4 \times$ Bandwidth

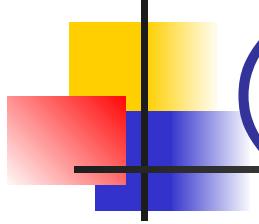


(3) The Nyquist Limit

For a noiseless channel, the maximum data rate is:

$$2H \log_2 V \text{ bits/sec}$$


where H is the channel bandwidth (in Hz) and V is the number of discrete levels of the signal.

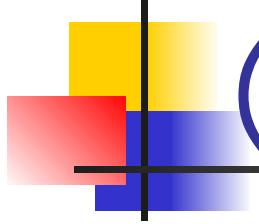

(4) The Shannon Limit

The maximum data rate of a noisy channel whose bandwidth is H Hz, and whose signal-to-noise ratio is S/N , is given by

$$H \log_2 (1+S/N).$$

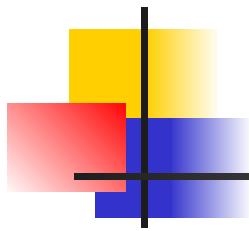

Shannon's Theorem

- Bandwidth = B Hz
Signal-to-noise ratio = S/N
- Maximum number of bits/sec = $B \log_2 (1+S/N)$
- Example: Phone wire bandwidth = 3100 Hz


$$S/N = 30 \text{ dB}$$

$$10 \log_{10} S/N = 30$$

$$\log_{10} S/N = 3$$


$$S/N = 10^3 = 1000$$


$$\begin{aligned} \text{Capacity} &= 3100 \log_2 (1+1000) \\ &= 30,894 \text{ bps} \end{aligned}$$

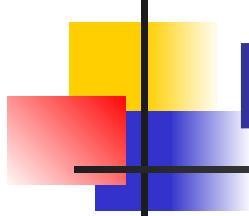

Par Trançado


- Longas distâncias sem repetidores
- Banda passante depende do diâmetro do fio e distância percorrida
- Crosstalk e atenuação
- Usado em telefonia e redes ethernet
- Para transmissão de vídeo introduz skew – introdução de linhas de atraso

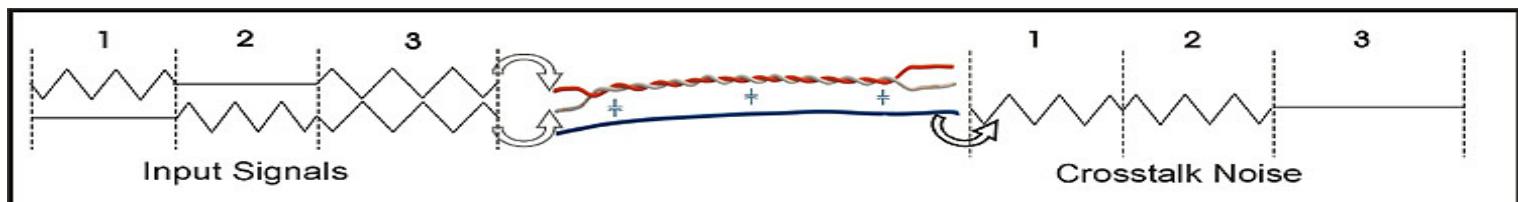

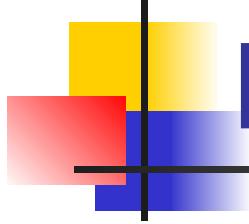


Par Trançado


- Categoria 3, 5, 6, 7 e 8
- UTP 25 pares

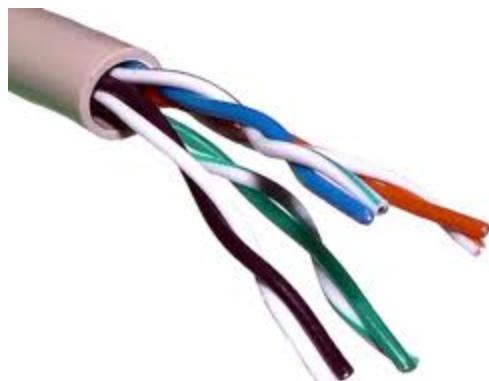

UTP

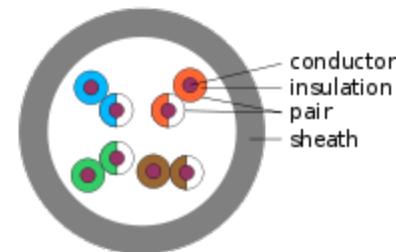


www.shutterstock.com · 16046893

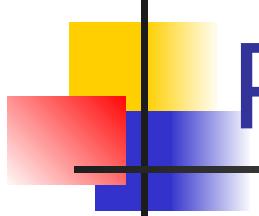

Par Trançado

- Cat3 (16 MHz) 10BASE TX e 100Baset
- Cat5 (100 MHz) 100BASE TX e 1000Baset
- Cat 6 (250 MHz) 1000Base T (1 Gbps)
- Cat 6e 10000Base T (10 gbps)
- CAT7 (10Gbps) e CAT7a (40 Gbps)
- CAT8 40 Gbps (em desenvolvimento)
- Distância máxima – 100 metros


Par Trançado

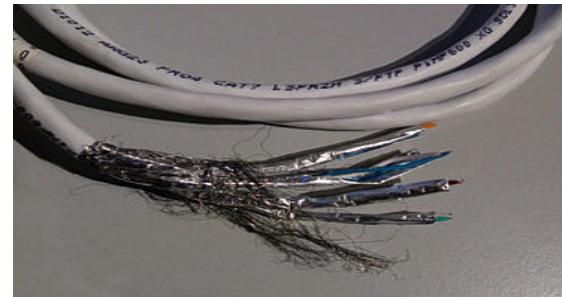

UTP Categories - Copper Cable



UTP Category	Data Rate	Max. Length	Cable Type	Application
CAT1	Up to 1Mbps	-	Twisted Pair	Old Telephone Cable
CAT2	Up to 4Mbps	-	Twisted Pair	Token Ring Networks
CAT3	Up to 10Mbps	100m	Twisted Pair	Token Ring & 10BASE-T Ethernet
CAT4	Up to 16Mbps	100m	Twisted Pair	Token Ring Networks
CAT5	Up to 100Mbps	100m	Twisted Pair	Ethernet, FastEthernet, Token Ring
CAT5e	Up to 1 Gbps	100m	Twisted Pair	Ethernet, FastEthernet, Gigabit Ethernet
CAT6	Up to 10Gbps	100m	Twisted Pair	GigabitEthernet, 10G Ethernet (55 meters)
CAT6a	Up to 10Gbps	100m	Twisted Pair	GigabitEthernet, 10G Ethernet (55 meters)
CAT7	Up to 10Gbps	100m	Twisted Pair	GigabitEthernet, 10G Ethernet (100 meters)


Cabo Coaxial

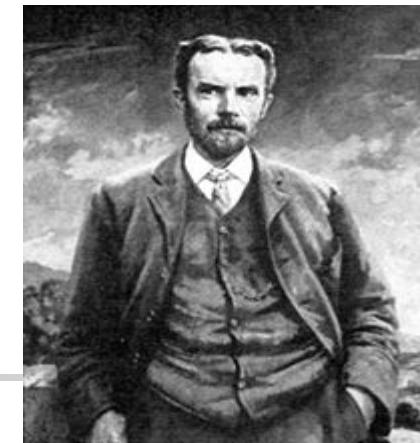

- Cabo Coaxial Banda Básica
 - 50 ohms
 - Transmissão digital

Oliver Heaviside

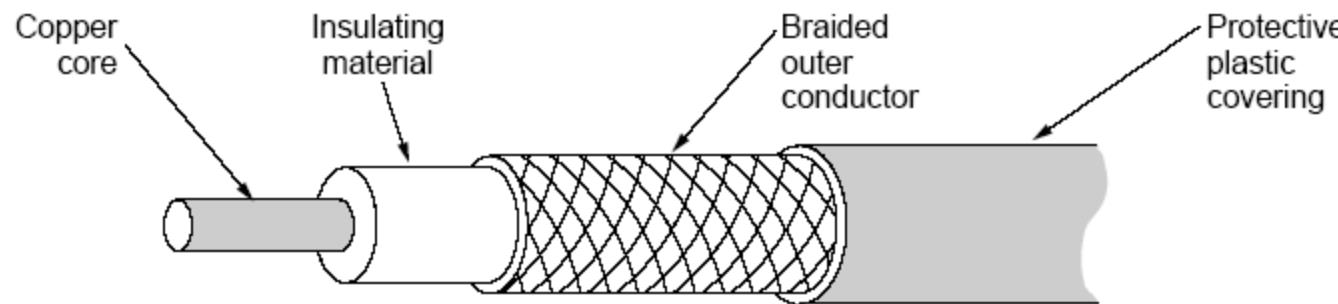
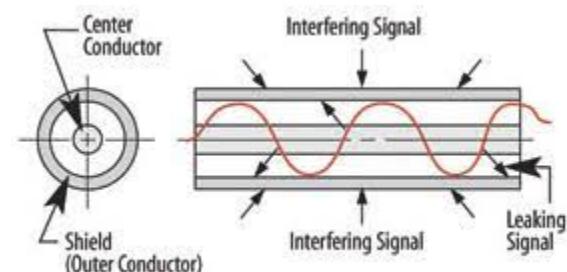


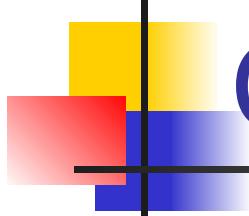

Cabo Coaxial




- Cabo Coaxial Banda Larga
 - 75 ohms
 - Transmissão analógica
 - TV a cabo, canais de 6 MHz - 3 Mbps
 - Repetidores transmitem em uma única direção: sistema com cabo duplo e sistema com cabo único

Cabo Coaxial

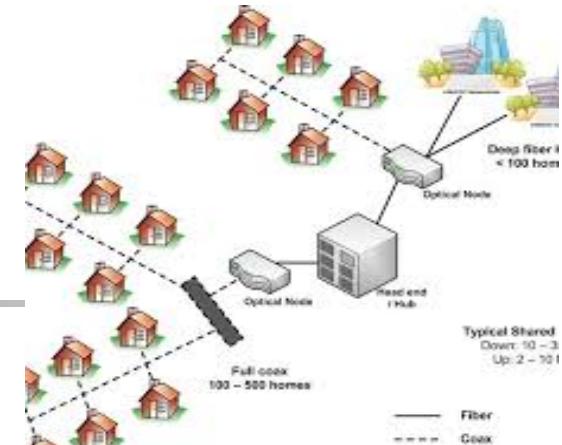
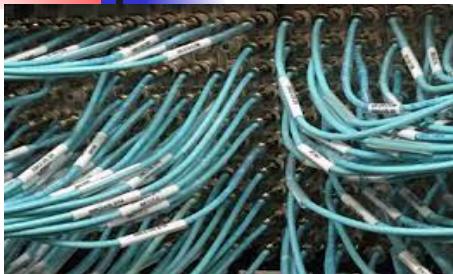



- Cabo Coaxial Banda Larga
 - Cabo duplo - transmissões em cabo são retransmitidas pelo head-end no outro cabo.
 - Cabo simples - Head-end recebe em uma freqüência e retransmite em outra.
 - Banda passante: freqüência fixa entre pares, disputa pelo meio, etc.

Cabo Coaxial

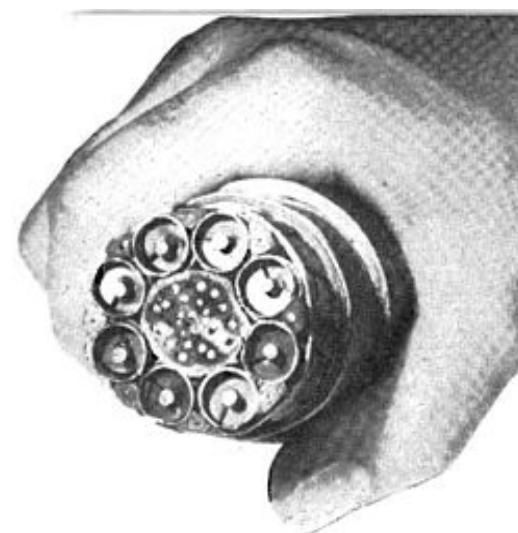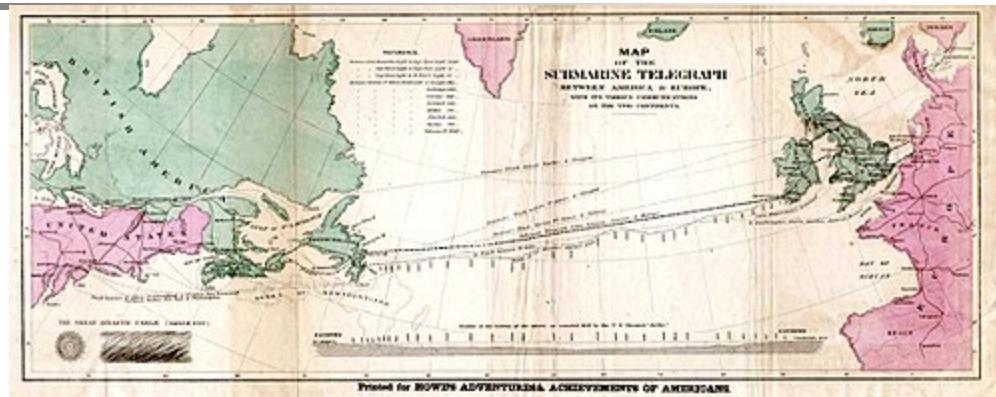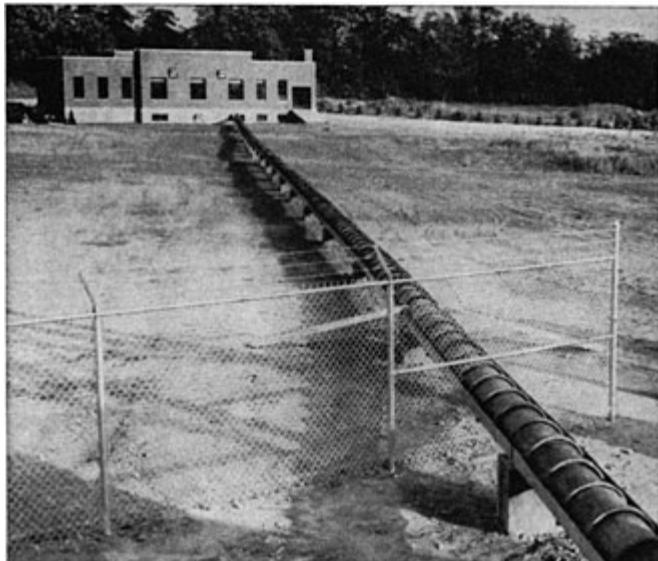

Cabo Coaxial

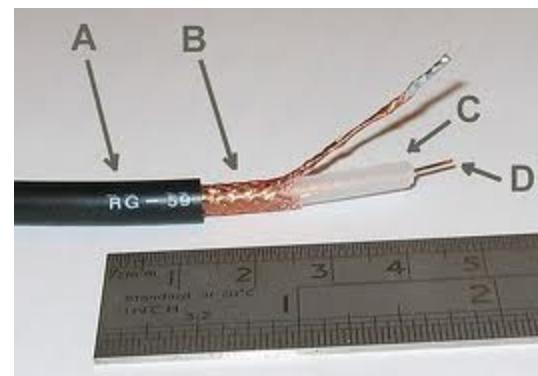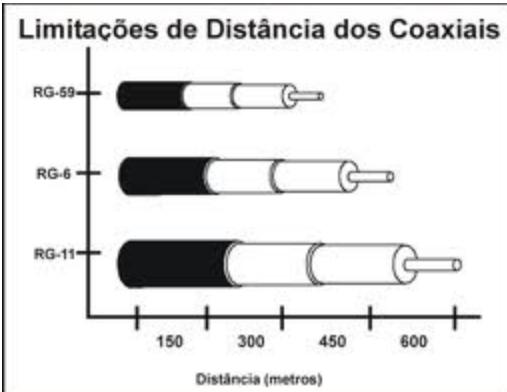

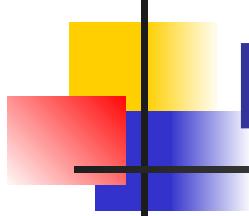

Power Line

- Uso de instalação elétrica para transmissão de dados – uso de diferentes frequências
- Qualidade sujeita à condições físicas do cabeamento – até 100Mbps

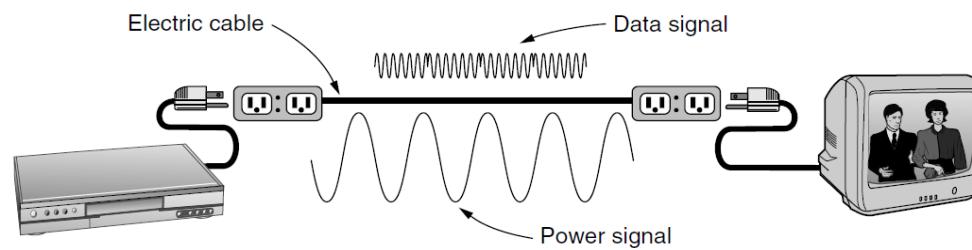




Figure 2-5. A network that uses household electrical wiring.


Fibras Ópticas

Fibras Óticas


- Princípio: refração.
- Multimodais e unimodais.
- 400Gbps por 12Km sem necessidade de amplificação


- ✓ Três componentes: fonte de luz, fibra e detector.
- ✓ Solitons: pulsos com formato inverso ao seno hiperbólico - grandes distâncias sem distorção.

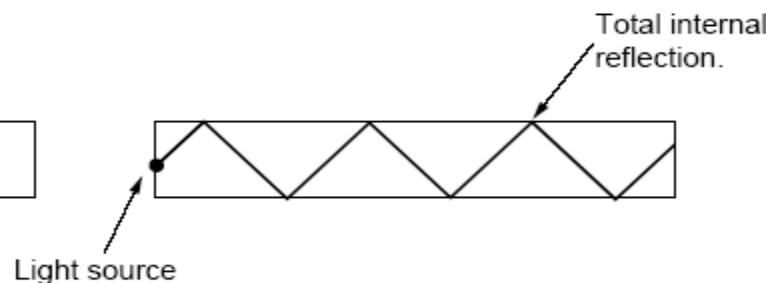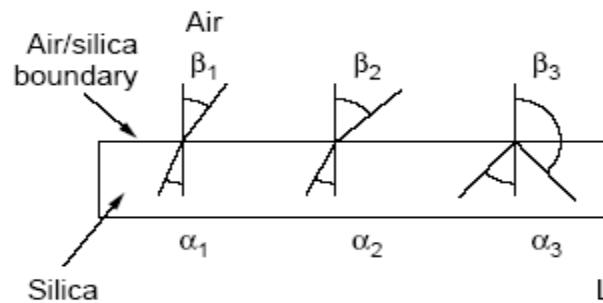

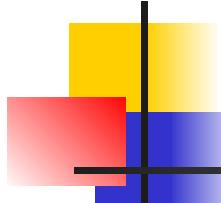


Fibras Ópticas

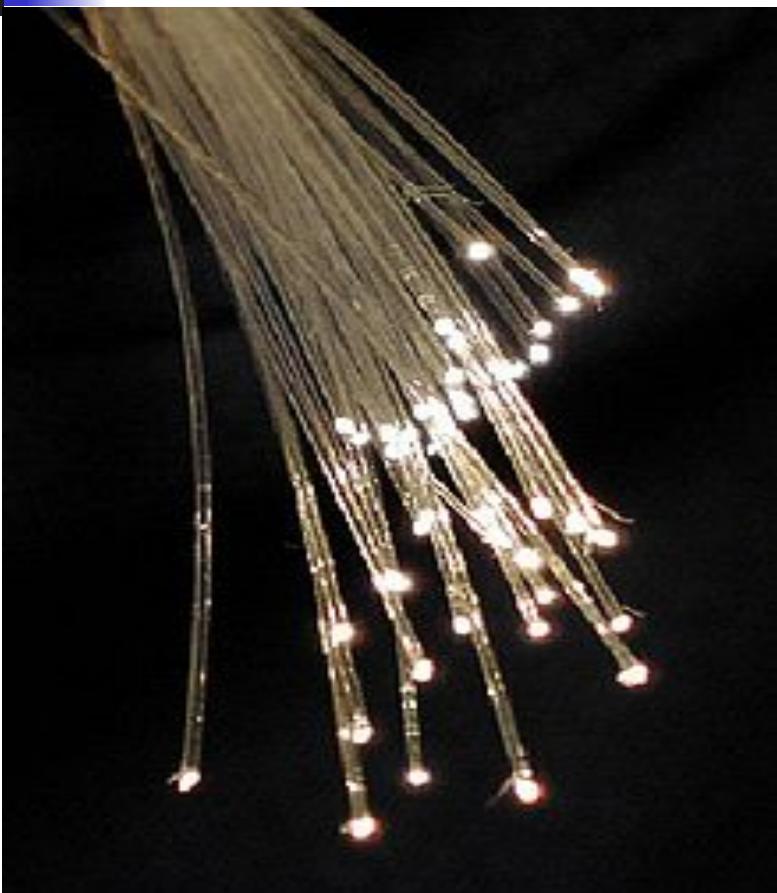


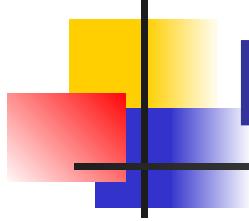


Fibras Ópticas

- Fibras Ópticas
 - Diâmetro: multimodais (50 micra), unimodais (10 micra).
 - Conexões: conexões (10% a 20% de perda), encaixadores (10% de perda), fusão.
 - Fontes de luz: diodos emissores de luz, lasers e semicondutores.
 - Recepção fotodiodo: 100 Gbps.

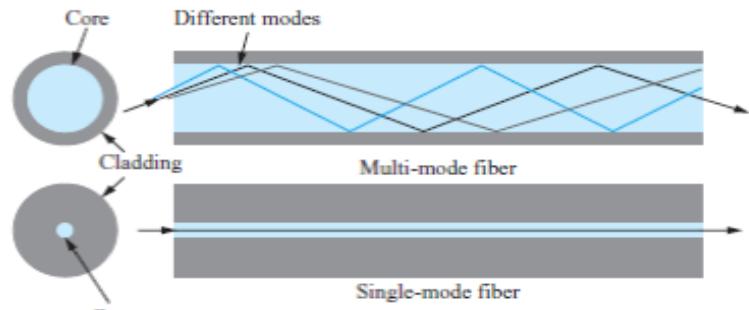


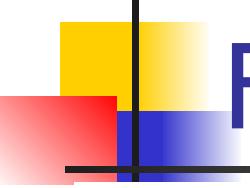

Fiber Cables

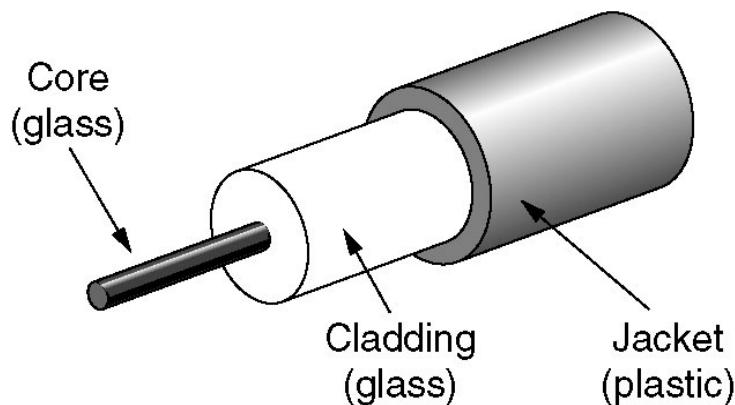


(a)

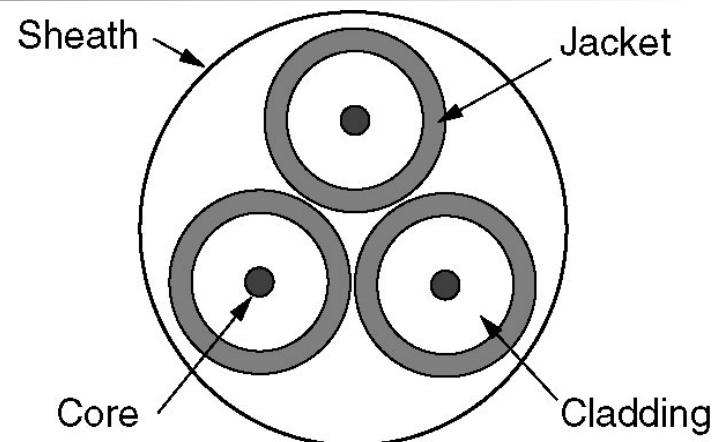

(b)




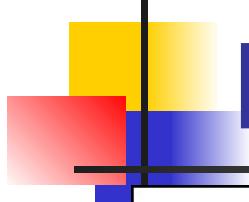


Fiber Cables (2)


Item	LED	Semiconductor laser
Data rate	Low	High
Fiber type	Multimode	Multimode or single mode
Distance	Short	Long
Lifetime	Long life	Short life
Temperature sensitivity	Minor	Substantial
Cost	Low cost	Expensive

Redes de Fibras Ópticas

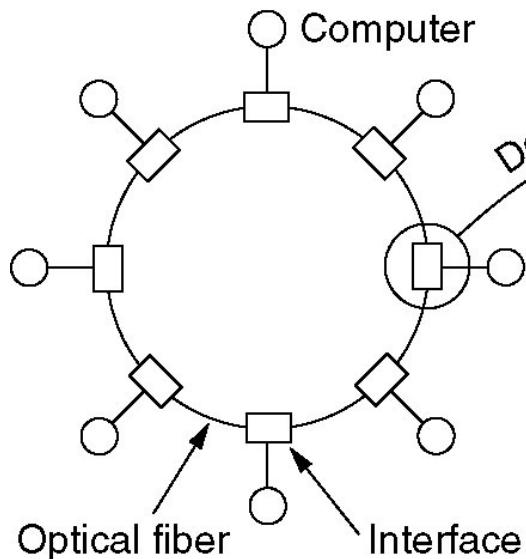


Detail of interface

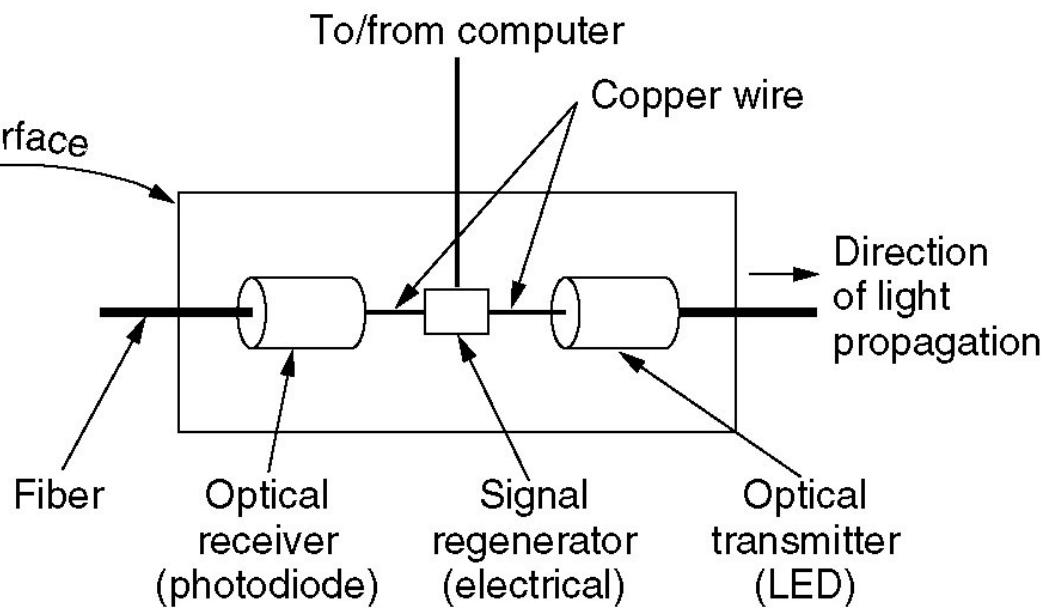

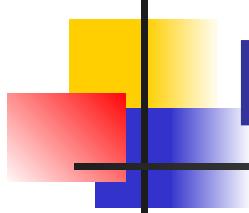

Redes Fibras Ópticas

- **Fibras Ópticas**
 - **Interface passiva:**
 - Conectores fundidos a fibra, diodos emissores de luz e fotodiodos.
 - Em caso de falha na interface passiva, não compromete transmissão
 - Perdem luz nas junções.

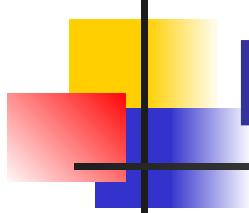



Redes Fibras Ópticas

- Fibras Ópticas
 - Repetidor ativo:
 - Converte sinal ótico em elétrico, regenera potência e converte sinal elétrico em ótico
 - Podem operar com altas bandas passantes
 - Em caso de falha, compromete o anel
 - Longas distâncias

What is WDM?


WDM = Wavelength Division Multiplexing

Refraction through a prism



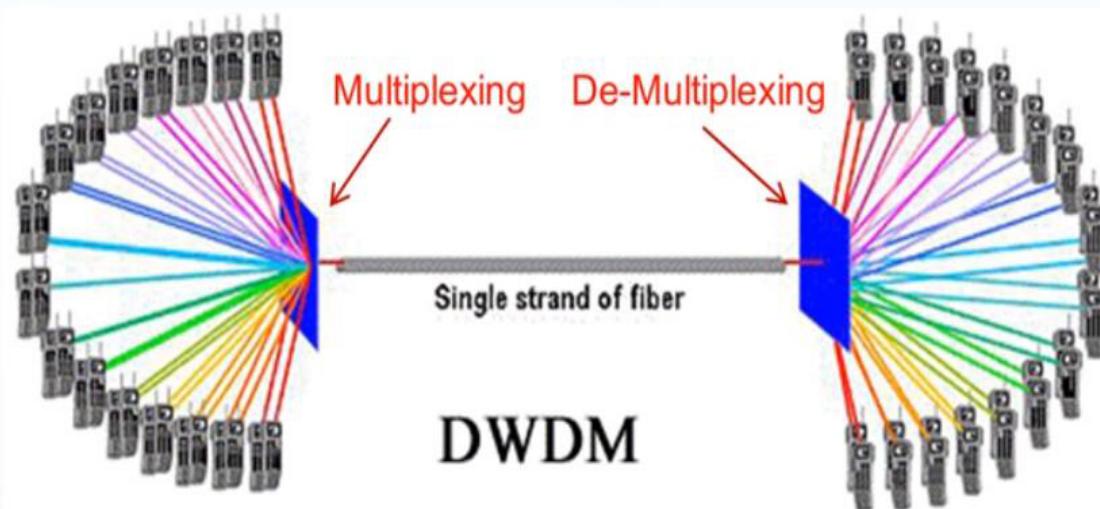
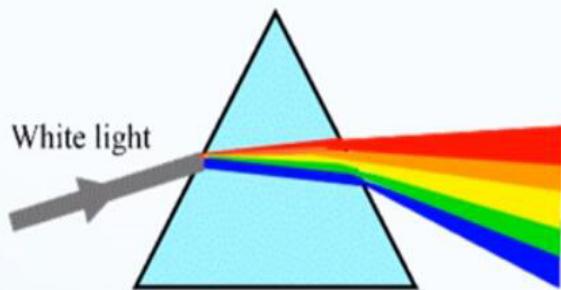


40 virtual high-speed channels per physical fiber
Expanding capacity of an OC-48 ring from 2.5 to 100 Gbps


WDM is used on fiber optics to increase the capacity of a single fiber

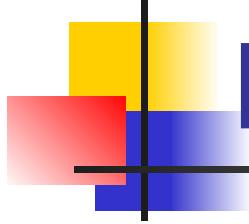

Multicore Fiber

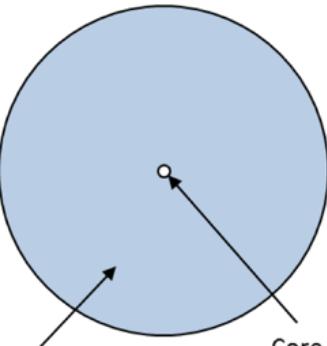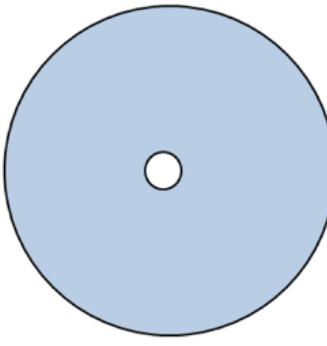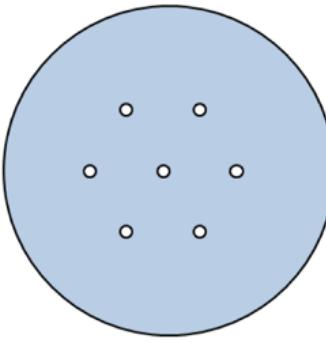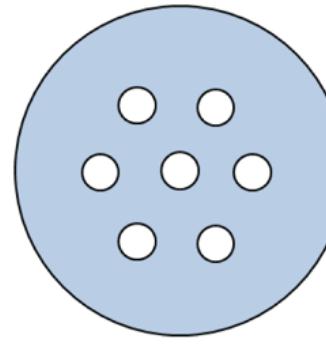Single-mode single-core fiber currently in practical use	Examples of new types of optical fiber being investigated		
	Example of multimode single-core fiber	Example of single-mode multicore fiber	Example of multimode multicore fiber
 <p>Clad</p> <p>Core</p>			

Multicore Fiber

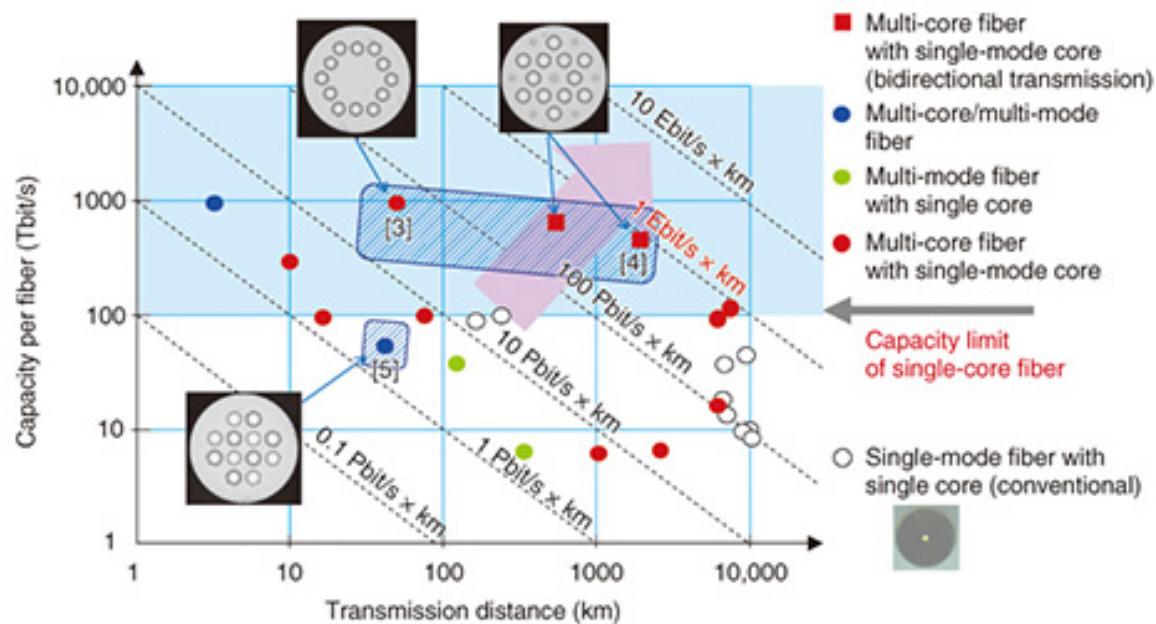

IC/Webmail China Mobile drives 800G 1100

LIGHTWAVE SUBSCRIBE VIDEOS WHITE PAPERS WEBCASTS BUYER'S GUIDE INNOVATION F LOG IN REGISTER

NETWORK DESIGN FTTX NETWORK AUTOMATION DATA CENTER 5G MOBILE TEST OPTICAL TECH BUSINESS

China Mobile drives 800G 1100 km with Huawei, YOFC

The tests used 800G coherent technology Huawei introduced as a module in February 2020 for its OptiXtrans optical transport platforms.

Author — Stephen Hardy

Apr 6th, 2021

IC/Webmail China Mobile drives 800G 1100 SAGE - Sistema de Apoio a Gestão

Huawei implanta rede de 400 Gb com Telefónica Chile

Por Redação - 10/12/13, 17:37 Atualizado em 10/12/13, 17:37

A Huawei anunciou na terça, 10, uma parceria com a Telefónica Chile para a implantação do que alega ser a primeira rede comercial WDM de 400 GB baseada no padrão de rede de transporte ótico (OTN). Segundo a fornecedora chinesa, a infraestrutura será a rede WDM metropolitana mais rápida da indústria. A ideia é que a operadora chilena aumente a largura de banda para serviços como LTE e IPTV na capital Santiago, que tem o maior consumo de banda larga do país.

Notícias relacionadas

RIM registra queda de 47% na receita no acumulado de nove meses

Digite aqui para pesquisar

IC/Webmail China Mobile drives 800G 1100 SAGE - Sistema de Apoio a Gestão Cisco ASR 9000 400-Gbps IPoDWDM

Cisco ASR 9000 400-Gbps IPoDWDM Line Card Data Sheet

Translations Download Print

Updated: April 7, 2017 Document ID: 42aa5b2f-68e7-4b31-be1a-74f24b2275b7

Product Overview

The Cisco® ASR 9000 Series IP over dense wavelength-division multiplexing (DWDM) collapses network layers by tightly integrating DWDM interfaces with the routing platform, thereby helping customers to increase operational efficiency by simplifying management and accelerating service delivery. The 400-Gbps throughput capable IPoDWDM line card provides customers with a flexible solution supporting multiple combinations of coherent 100G and 10G Ethernet ports, all in a single slot of the Cisco ASR 9000 Series Aggregation Services Routers. This IPoDWDM line-card solution further reduces transport elements, while supporting advanced multilayer features such as proactive protection and control-plane interaction, dramatically reducing operating expenses and capital cost.

The Cisco ASR 9000 400-Gbps IPoDWDM line card can support customer applications including video on demand, Internet Protocol Television (IPTV), point-to-point video, Internet video, and cloud-based computing. These line cards can also be used to deliver economic, scalable, highly available, line-rate Ethernet and IP/Multiprotocol Label Switching (IP/MPLS) edge services. The Cisco ASR 9000 Series line cards and routers are designed to provide the fundamental infrastructure for scalable Carrier Ethernet and IP/MPLS networks, supporting profitable business, residential, and mobile services (Figure 1).

Figure 1. Cisco ASR 9000 Series 400-Gbps IPoDWDM Line Card

Contact Cisco

Chat with Sales

Get a call from Sales

Product / Technical Support


Training & Certification

1-800-553-6387

US/CAN | 5am-5pm PT

Viewers of This Document Also Viewed


Digite aqui para pesquisar

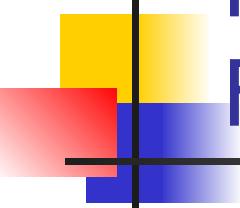


Fiber-to-the-curb Fiber-to-the-home


- **FTTH** (fiber-to-the-home): Fiber reaches the boundary of the living space, such as a box on the outside wall of a home. Passive optical networks and point-to-point Ethernet are architectures that are capable of delivering triple-play services over FTTH networks directly from an operator's central office
- **FTTN / FTTLA** (fiber-to-the-node, -neighborhood, or -last-amplifier): Fiber is terminated in a street cabinet, possibly miles away from the customer premises, with the final connections being copper.
- **FTTC / FTTK** (fiber-to-the-curb/kerb, -closet, or -cabinet): This is very similar to FTTN, but the street cabinet or pole is closer to the user's premises, typically within 1,000 feet (300 m), within range for high-bandwidth copper technologies

Fiber-to-X

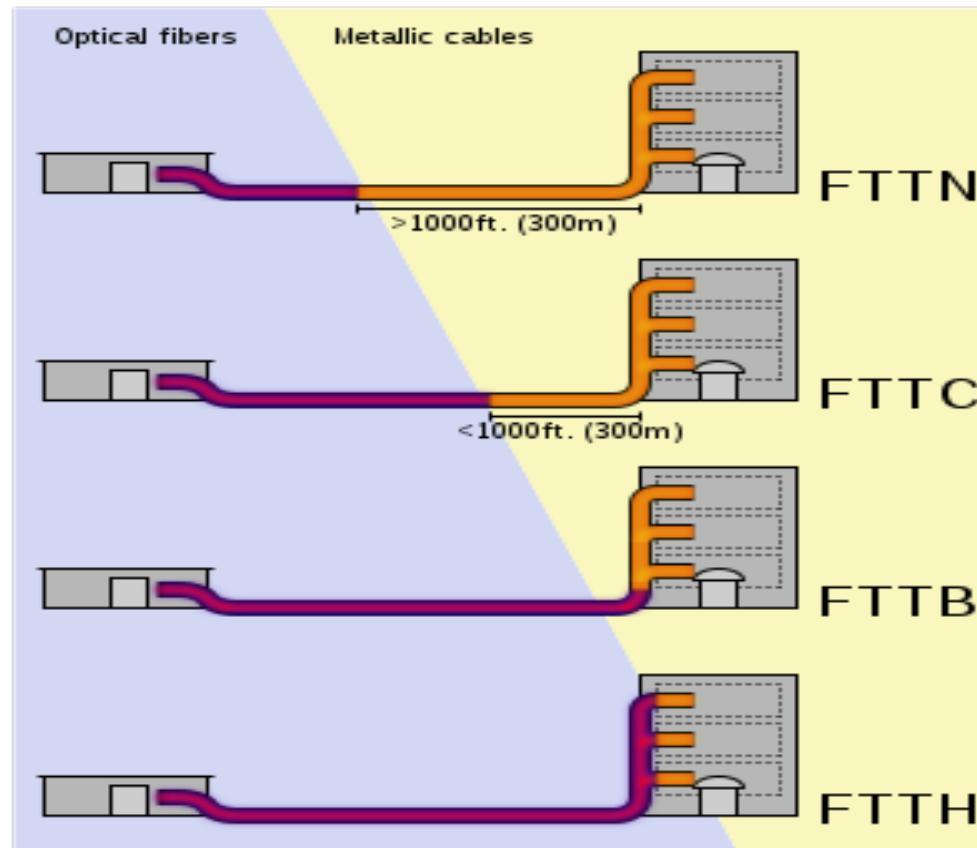


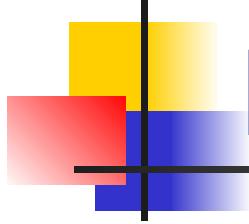


FTTH

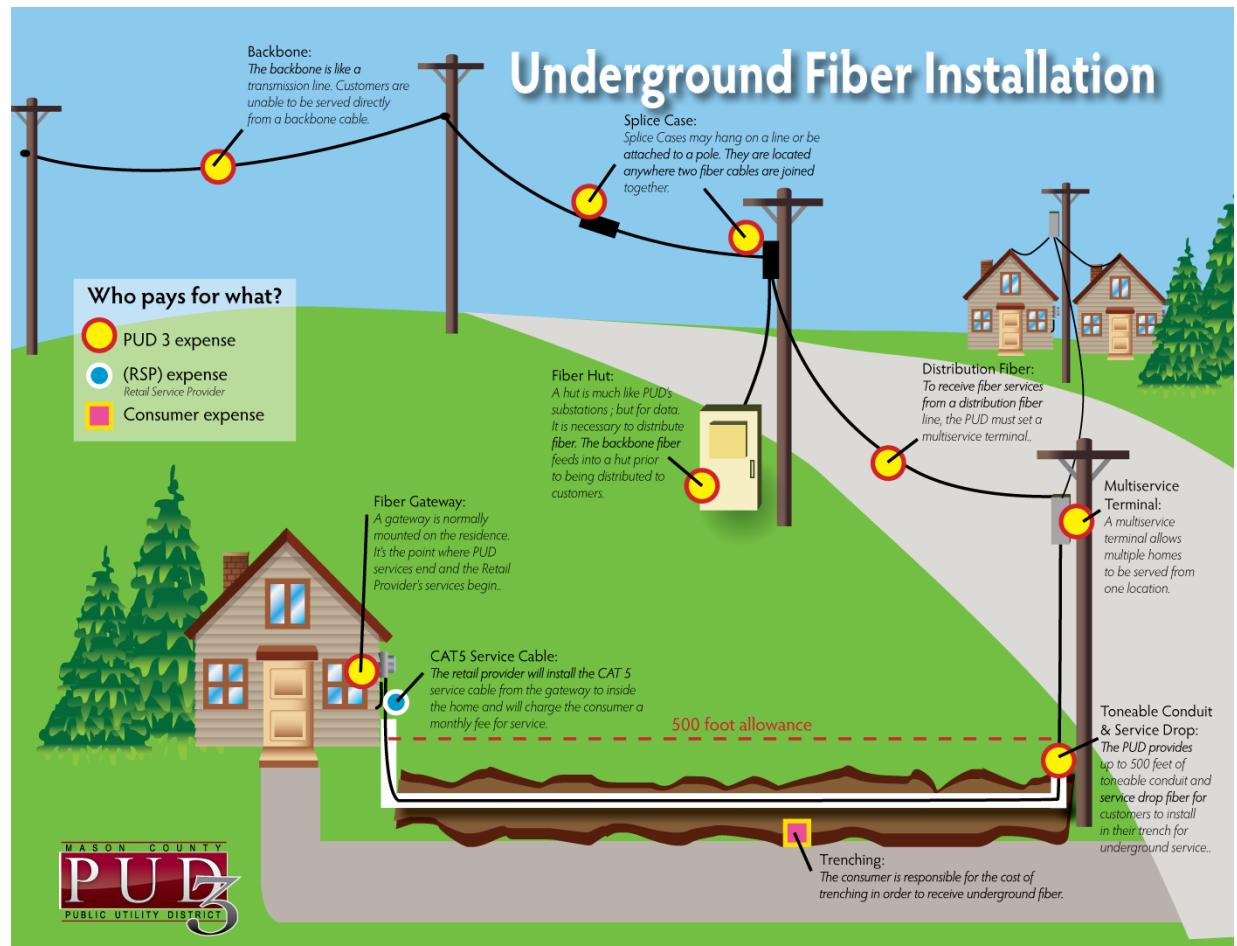


FTTC

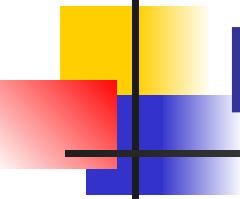


Fibre to the Distribution Point

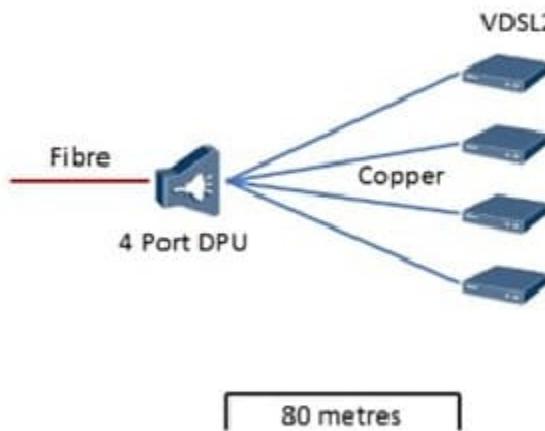



FTTdp upgrades

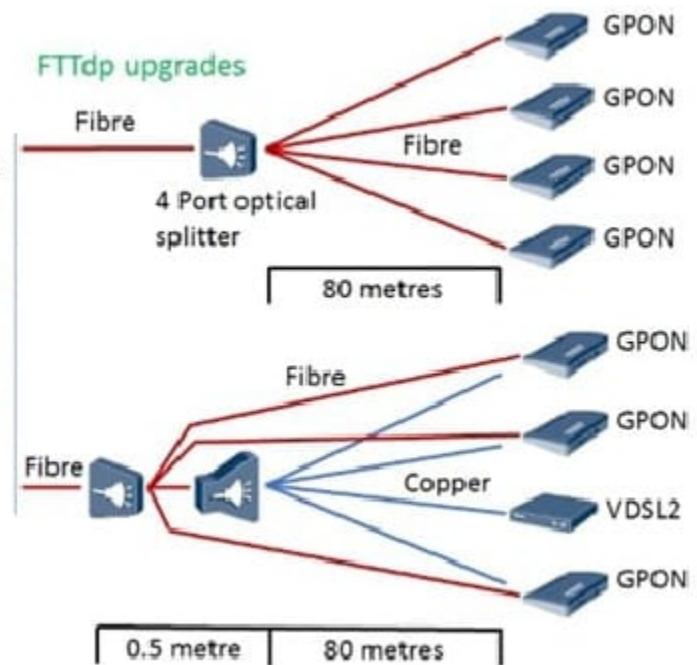


Interligação Redes Continentais

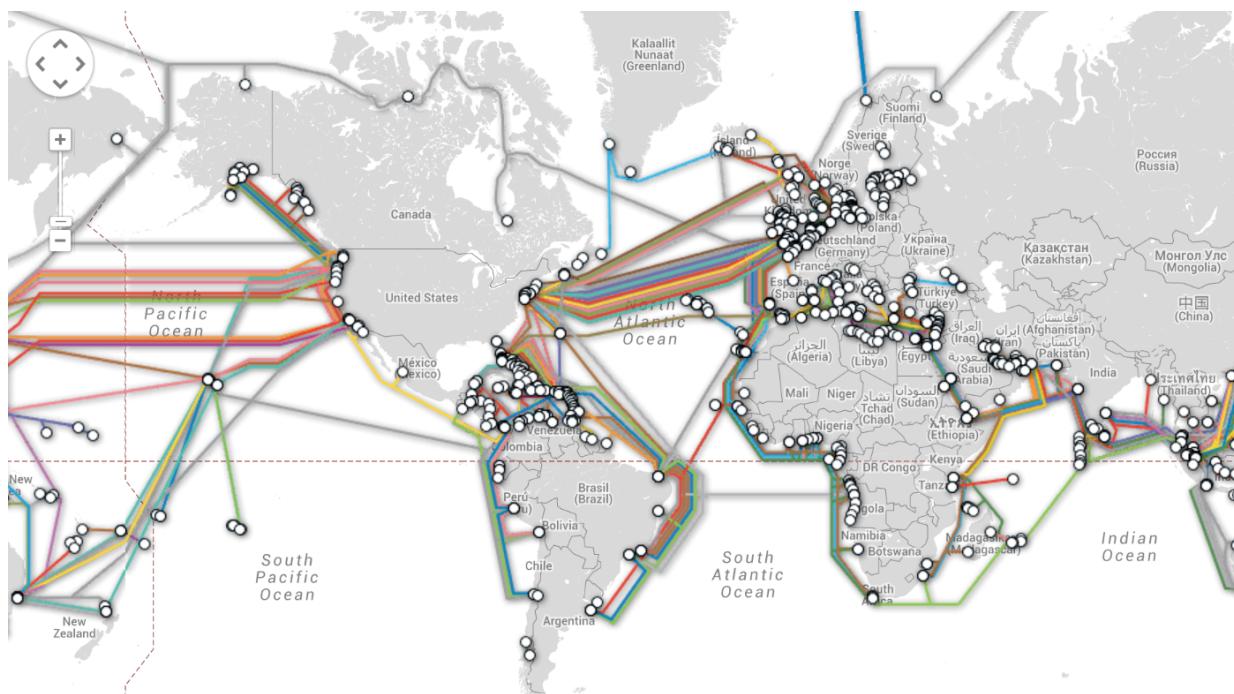

Interligação Redes Continentais

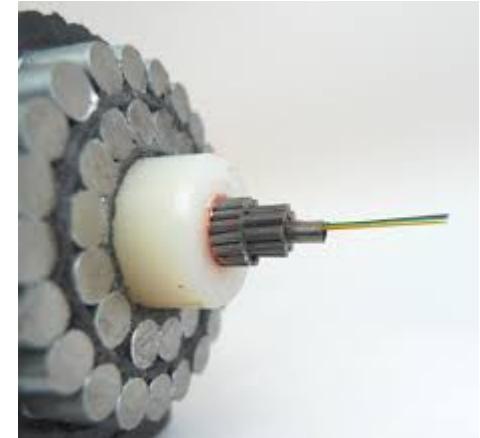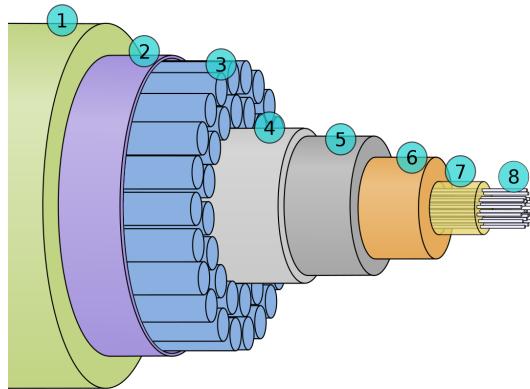

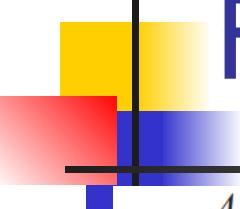


Fibras Ópticas

Advantages and Disadvantages of Optical Fiber

Advantages Fiber-optic cable has several advantages over metallic cable (twisted-pair or coaxial).


- D** Higher bandwidth. Fiber-optic cable can support dramatically higher bandwidths (and hence data rates) than either twisted-pair or coaxial cable. Currently, data rates and bandwidth utilization over fiber-optic cable are limited not by the medium but by the signal generation and reception technology available.
- D** Less signal attenuation. Fiber-optic transmission distance is significantly greater than that of other guided media. A signal can run for 50 km without requiring regeneration. We need repeaters every 5 km for coaxial or twisted-pair cable.
- D** Immunity to electromagnetic interference. Electromagnetic noise cannot affect fiber-optic cables.
- O** Resistance to corrosive materials. Glass is more resistant to corrosive materials than copper.
- O** Light weight. Fiber-optic cables are much lighter than copper cables.
- O** Greater immunity to tapping. Fiber-optic cables are more immune to tapping than copper cables. Copper cables create antenna effects that can easily be tapped.

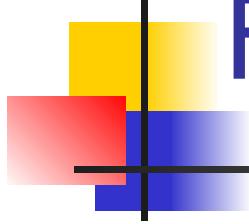

Fibras Ópticas

Disadvantages There are some disadvantages in the use of optical fiber.


- Installation and maintenance. Fiber-optic cable is a relatively new technology. Its installation and maintenance require expertise that is not yet available everywhere.
- Unidirectional light propagation. Propagation of light is unidirectional. **If** we need bidirectional communication, two fibers are needed.
- Cost. The cable and the interfaces are relatively more expensive than those of other guided media. If the demand for bandwidth is not high, often the use of optical fiber cannot be justified.

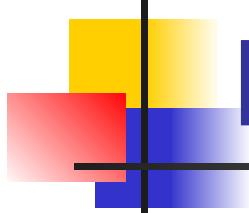


Fibras Ópticas

- Desvantagens Fibras:
 - Engenharia não muito disseminada.
 - Interfaces caras.
 - Comunicação unidirecional.

Spectrum Eletromagnético

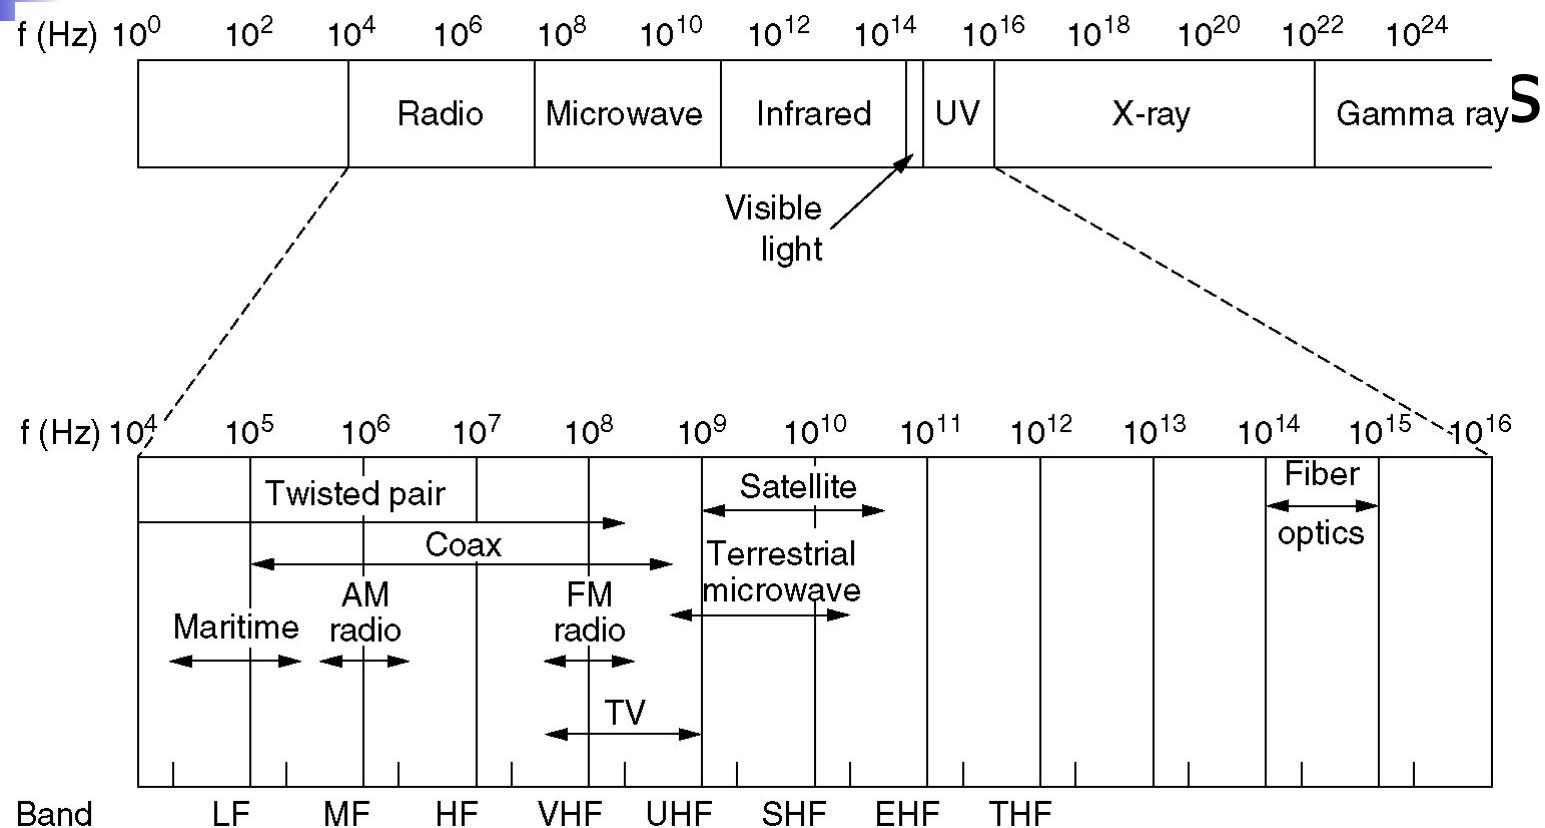

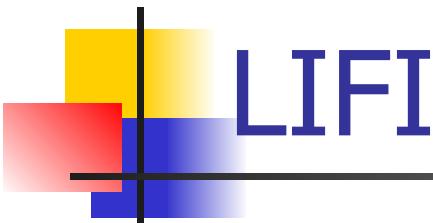



Detalhes da tecnologia


Os [diodos emissores de luz \(LED's\)](#) podem ser ligados e desligados mais rápido do que o olho humano pode detectar já que a velocidade de operação dos [LED's](#) é menor do que 1 μ s, gerando, consequentemente, a aparência de continuidade da fonte de luz. Esse processo de ligamento e desligamento invisível ao olho humano permite a [transmissão de dados](#) usando códigos binários, onde o [LED](#) ligado corresponde ao binário '1', e o desligado ao binário '0'. Assim, é possível codificar os dados por meio da variação da frequência da luz. Após esse processo, um dispositivo sensível à luz ([fotossensor](#)) recebe o sinal e o converte de volta para o formato original do dado.

Esse método de utilizar pulsos rápidos de luz para transmitir informação é tecnicamente referenciado como Comunicação por Luz Visível (CLV), onde o mesmo utiliza luz visível entre 400 e 800 [terahertz](#). Dados que excedem 100 [Mbps](#) podem ser alcançados através de [LED's](#) de alta velocidade com multiplexação adequada. Paralelamente, a transmissão de dados usando conjuntos de [LED's](#), onde cada [LED](#) transmite um único fluxo de dados, também pode ser usado para incrementar a frequência de dados pelo CLV.

Padronização



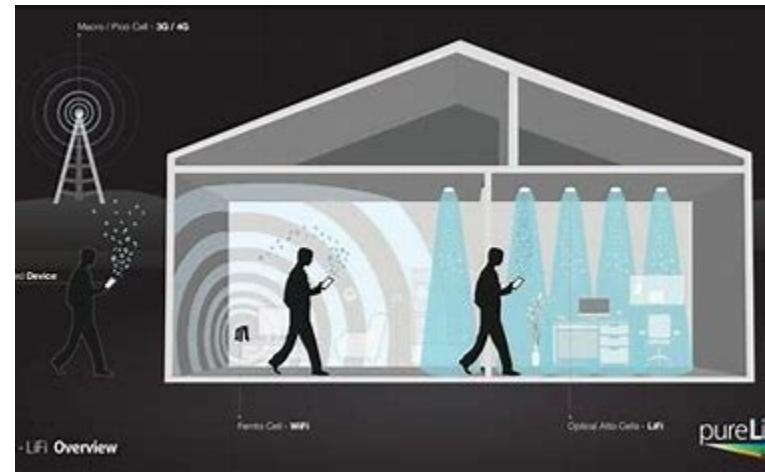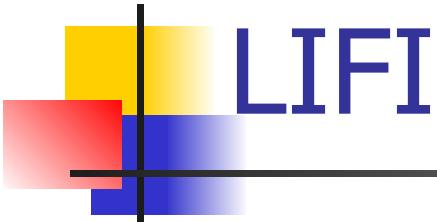

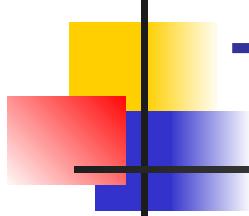

Transmissão

Ionosphere



Ground propagation
(below 2 MHz)

Ionosphere




Sky propagation
(2-30 MHz)

Ionosphere





Line-of-sight propagation
(above 30 MHz)

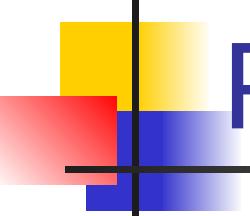


Rádio Frequência (RF)

- Onidirecional: transmissor e receptor não precisam estar alinhados.
- Baixas freqüências atravessam prédios.


- ✓ Altas freqüências tendem a viajar em linha reta e ricochetear, interferência.
- ✓ AM utiliza faixa MF, 1000 Km raio.
- ✓ HF, VHF - ondas são ricocheteadas na ionosfera.

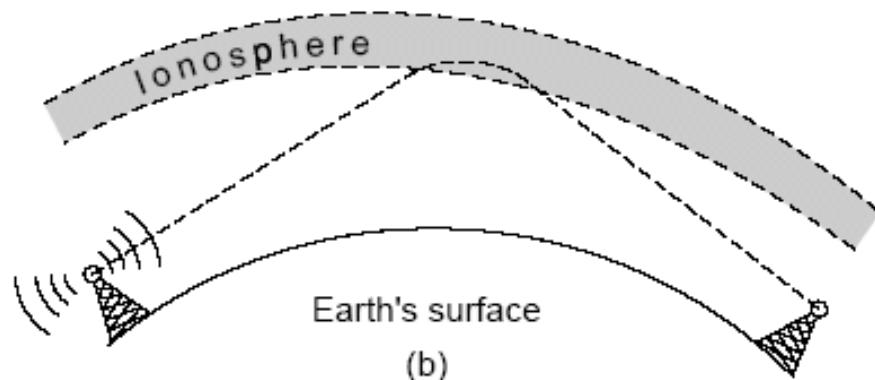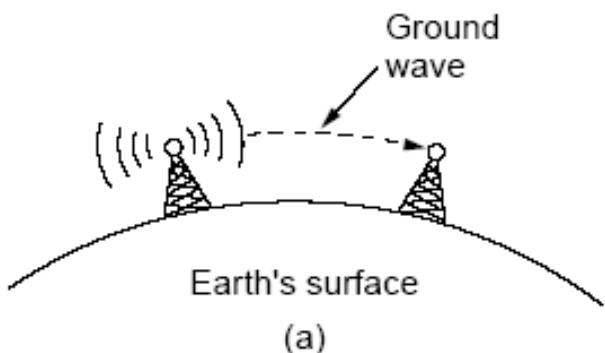

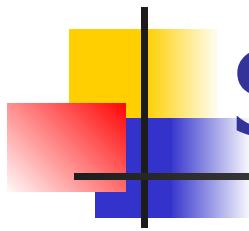

Spectrum Eletromagnético

<i>Band</i>	<i>Range</i>	<i>Propagation</i>	<i>Application</i>
VLF (very low frequency)	3-30 kHz	Ground	Long-range radio navigation
LF (low frequency)	30-300 kHz	Ground	Radio beacons and navigational locators
MF (middle frequency)	300 kHz-3 MHz	Sky	AM radio
HF (high frequency)	3-30 MHz	Sky	Citizens band (CB), ship/aircraft communication
VHF (very high frequency)	30-300 MHz	Sky and line-of-sight	VHF TV, FM radio
UHF (ultrahigh frequency)	300 MHz-3 GHz	Line-of-sight	UHF TV, cellular phones, paging, satellite
SHF (superhigh frequency)	3-30 GHz	Line-of-sight	Satellite communication
EHF (extremely high frequency)	30-300 GHz	Line-of-sight	Radar, satellite

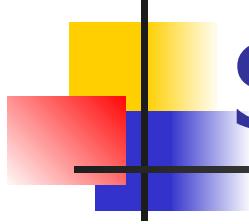


Spectrum Eletromagnético

- Espectro Eletromagnético
 - Velocidade no ar 3×10^8 m/s (2/3 no cabo)
 - $\lambda f = c$
 - majora transmissões, banda estreita
 - spread spectrum - transmissão muda de frequência

Hedy Lamarr



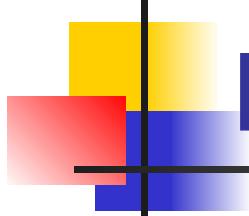


Banda industrial/científica/médica

- não necessita permissão, tipicamente 902 a 928 MHz 5.725 a 5.850 GHz

Banda industrial/científica/médica




- IEEE 802.11/Wi-Fi 2450 MHz e 5800 MHz bands
- Bluetooth 2450 MHz band : WPAN
- IEEE 802.15.4, ZigBee usa 915 MHz and 2450 MHz ISM bands.

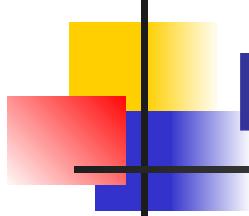

Banda industrial/científica/médica




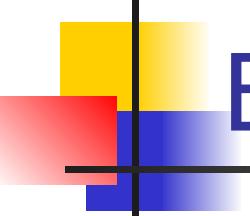

Banda industrial/científica/médica

Frequency range	Center frequency	Bandwidth	Type	Availability	Licensed users
6.765 MHz	6.795 MHz	6.78 MHz	30 kHz	A	Subject to local acceptance
13.553 MHz	13.567 MHz	13.56 MHz	14 kHz	B	Worldwide
26.957 MHz	27.283 MHz	27.12 MHz	326 kHz	B	Worldwide
40.66 MHz	40.7 MHz	40.68 MHz	40 kHz	B	Worldwide
433.05 MHz	434.79 MHz	433.92 MHz	1.74 MHz	A	only in Region 1, subject to local acceptance
868.00 MHz	868.90 MHz	868.40 MHz	0.9 MHz	A	Region 1, subject to local acceptance
902 MHz	928 MHz	915 MHz	26 MHz	B	Region 2 only (with some exceptions)
2.4 GHz	2.5 GHz	2.45 GHz	100 MHz	B	Worldwide
5.725 GHz	5.875 GHz	5.8 GHz	150 MHz	B	Worldwide
24 GHz	24.25 GHz	24.125 GHz	250 MHz	B	Worldwide
61 GHz	61.5 GHz	61.25 GHz	500 MHz	A	Subject to local acceptance
122 GHz	123 GHz	122.5 GHz	1 GHz	A	Subject to local acceptance
244 GHz	246 GHz	245 GHz	2 GHz	A	Subject to local acceptance


Type A (footnote 5.138) = frequency bands are designated for *ISM applications*. The use of these frequency bands for ISM applications shall be subject to special authorization by the administration concerned, in agreement with other administrations whose *radiocommunication services* might be affected. In applying this provision, administrations shall have due regard to the latest relevant ITU-R

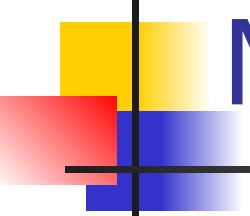

Microondas




- Microondas
 - Acima de 100 MHz ondas propagam em linha reta.
 - Alinhamento de transmissor e receptor.
 - Torres mais altas, maior distância necessita repetidores. Torres 100 m, repetidores a cada 80 Km.
 - Fading por múltiplos caminhos, ondas refratadas nas camadas baixas da atmosfera.

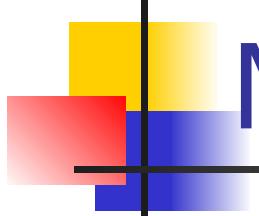

Microondas

- Microondas
 - Alta freqüência (10 GHz): absorção pela chuva.
 - Dispensa direito de uso do caminho.
 - Baixo custos.

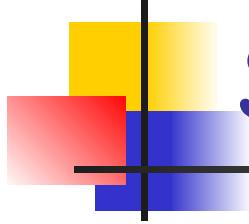

Satélites

- “Grande refletor no espaço”
- Possui transponders que recebem sinais em uma certa faixa de frequência, amplificam e retransmitem em outra faixa de frequência para evitar interferência com o sinal recebido (bent pipe)
- Pode haver processamento digital e data streams retransmitidos em largas faixas de frequência

Satélites

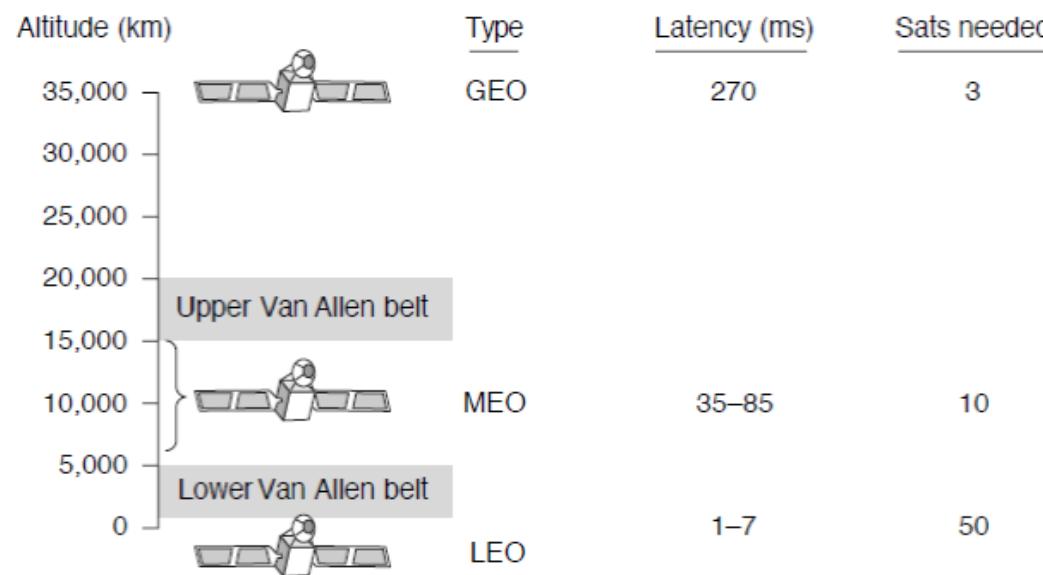


Figure 2-48. Communication satellites and some of their properties, including altitude above the earth, round-trip delay time, and number of satellites needed for global coverage.




Satélites

Band	Downlink	Uplink	Bandwidth	Problems
L	1.5 GHz	1.6 GHz	15 MHz	Low bandwidth; crowded
S	1.9 GHz	2.2 GHz	70 MHz	Low bandwidth; crowded
C	4.0 GHz	6.0 GHz	500 MHz	Terrestrial interference
Ku	11 GHz	14 GHz	500 MHz	Rain
Ka	20 GHz	30 GHz	3500 MHz	Rain, equipment cost

Figure 2-49. The principal satellite bands.

- Satélites geoestáticos, altura 36 Km, atraso de 270 ms, espaçado de 2 graus, 5000 Kg e 15 a 20 anos de vida útil
- Faixas de frequência alocadas para evitar interferência com transmissões microondas

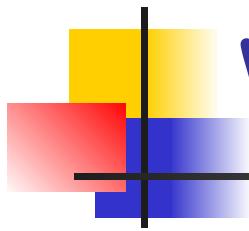

VSAT

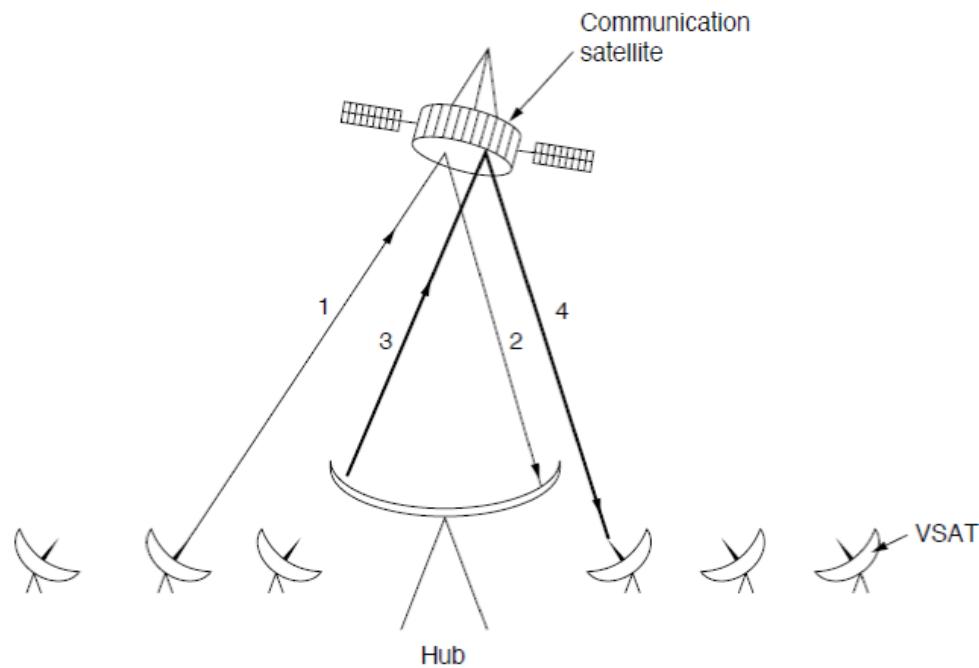


Figure 2-50. VSATs using a hub.

Satélites


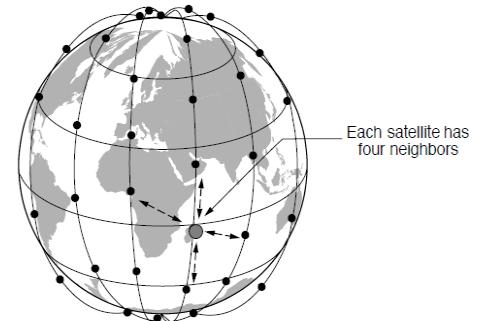



Figure 2-51. The Iridium satellites form six necklaces around the earth.

- Medium-Earth Orbit Satellite (MEOS) - período de 6 horas. 30 GPS satélites a altura de 10.4 Km altura, 7 a 10 anos
- Low-Earth orbit Sattelite (LEOS) - altura 0.5 a 1.5 Km, período de $1\frac{1}{2}$ a 2 horas, 40 a 150 milissegundos de atraso
- Highly Elliptical Orbit - órbita elíptica, altura e 1 a 39 km, período 12 horas
 - Iridium
 - Globalstar - 48 satletites
 - Cubesat - 10cm³, US 40K


Satélites

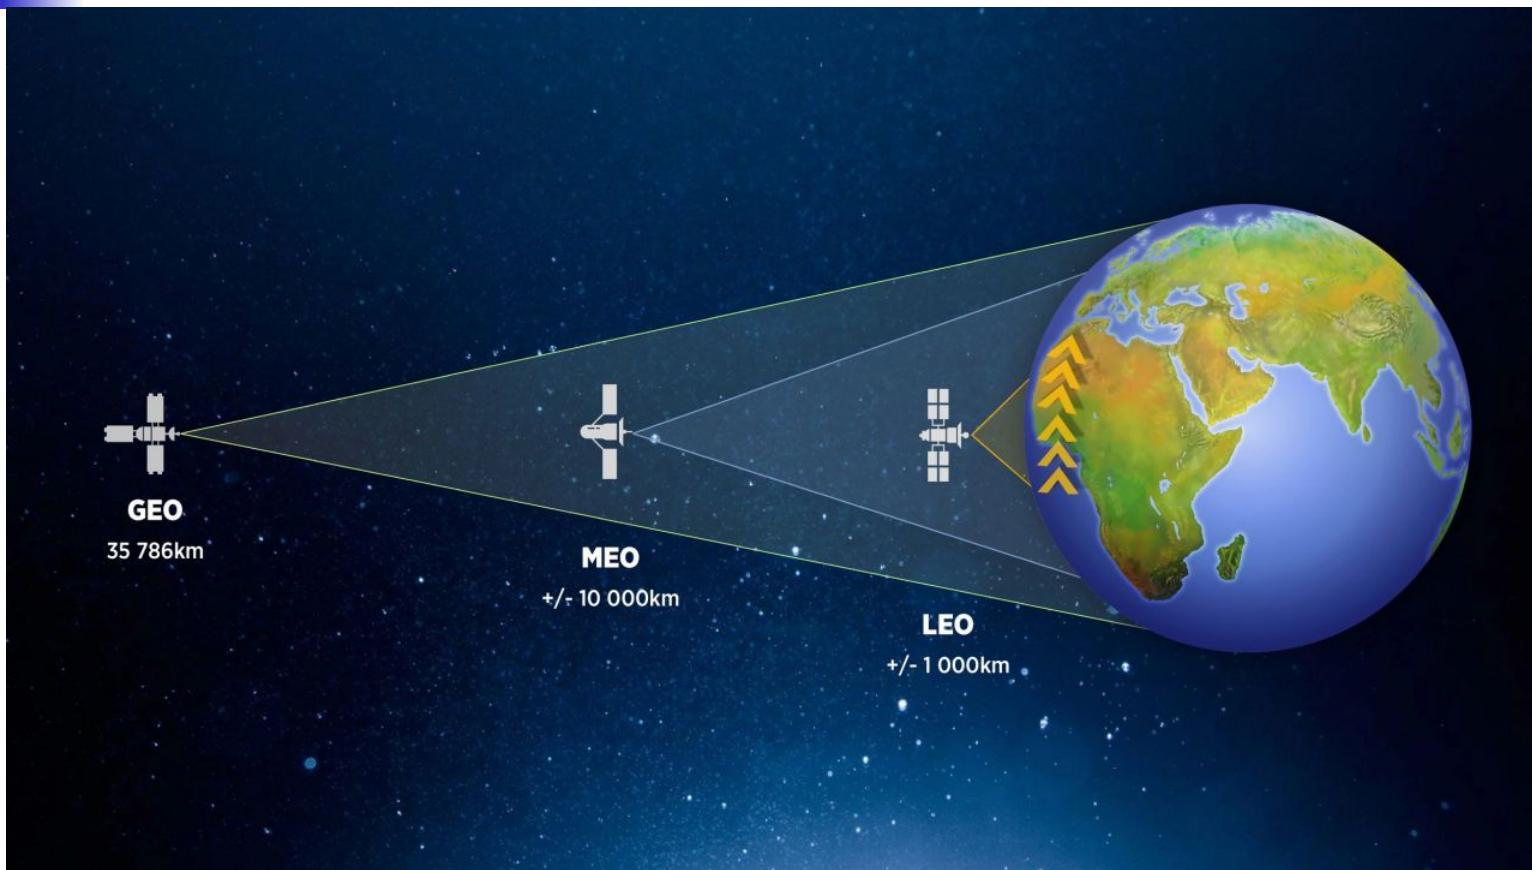

Satélites

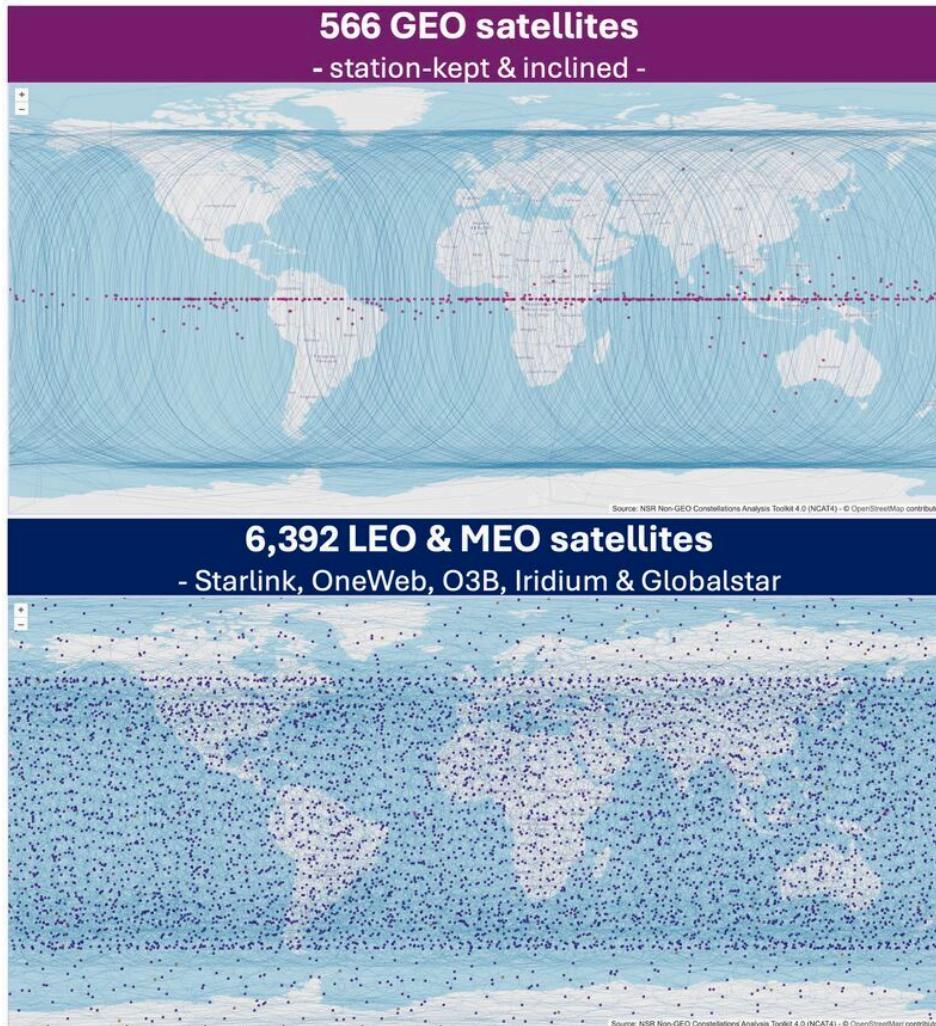

Satélites

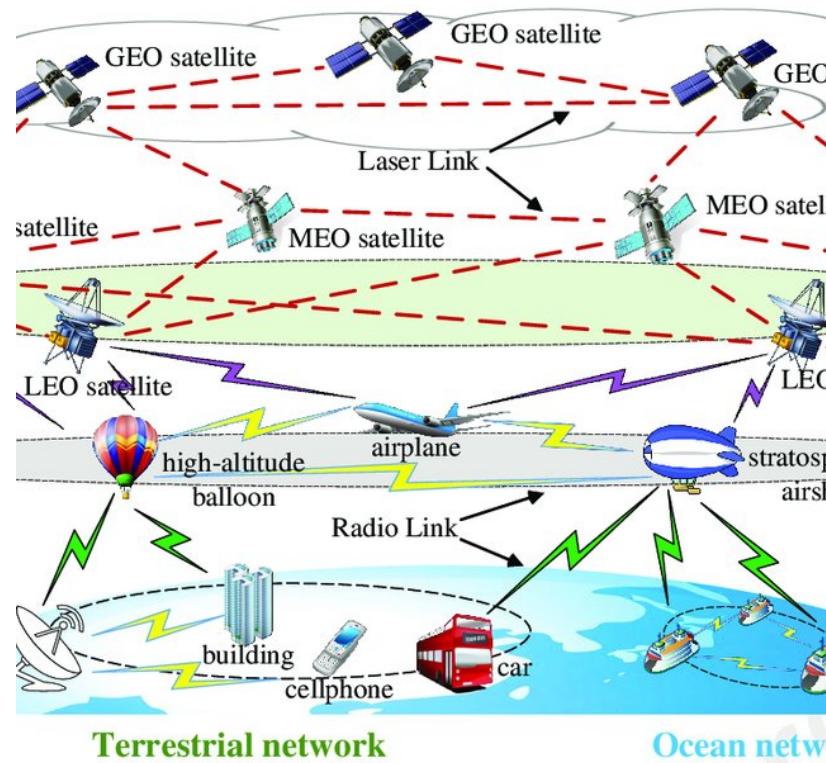

Unmanned Aerial Vehicles (UAVs)


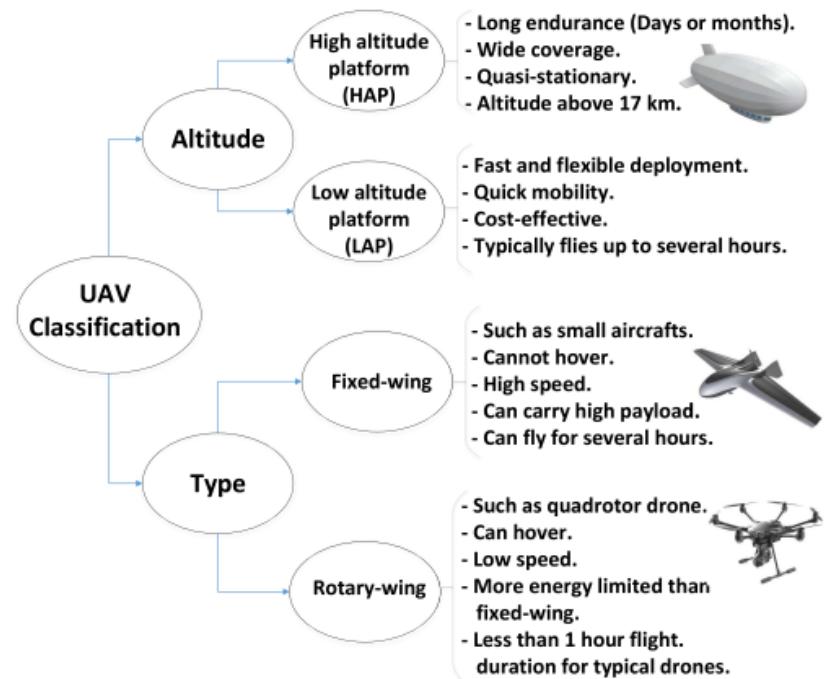


Fig. 1. UAV Classification.

6G Aerial-Terrestrial-Maritime Network

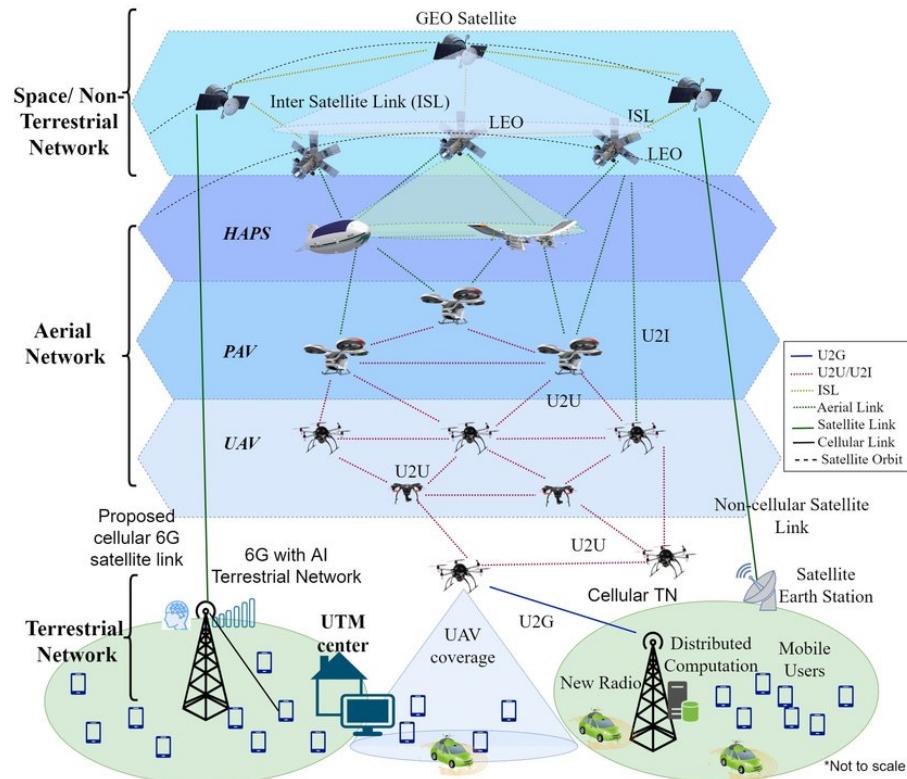

Pe Roberto Landell de Moura


Porto Alegre, RS. 1861–1928





Patentes no Brasil (1901)



Wave Transmitter

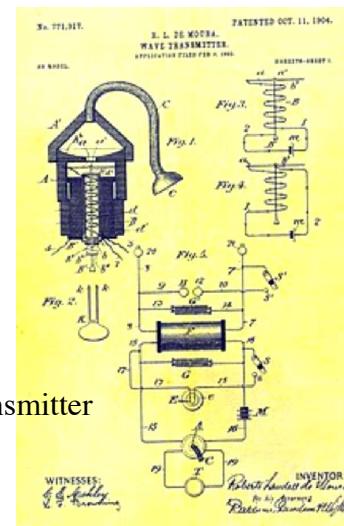

Patente Registrada nos Estados Unidos (1904)

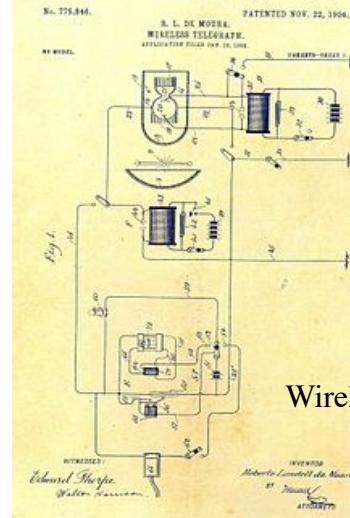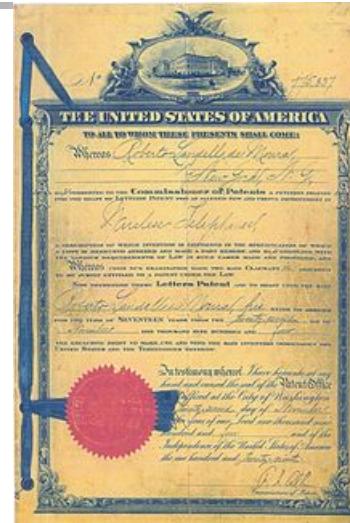

Wireless Telephone