

Operations at the La Silla 2.2 metres telescope

Rodolfo Angeloni

Paul Eigenthaler

paul.eigenthaler@icloud.com

Angela Hempel

ang.hmp1@gmail.com

Sam Kim

skim@astro.puc.cl

Iván Lacerna

Régis Lachaume

lachaume@astro.puc.cl

Markus Rabus

Since 2013, the operations at the La Silla 2.2 metres telescope involve minimal support by ESO. This guide intends to familiarise observers with the operations.

Version: July 30, 2019.



Contents

List of Figures	9
------------------------------	----------

List of Tables	11
-----------------------------	-----------

List of procedures	13
---------------------------------	-----------

1 Introduction	17
----------------------------------	-----------

1.1 Control room	17
---------------------	----

1.2 Overview of operations	17
-------------------------------	----

1.3 Security	18
-----------------	----

1.4 Telescope building	19
---------------------------	----

2 Early afternoon: daily start-up	21
---	-----------

2.1 Outline	21
----------------	----

2.2 WFI startup	27
--------------------	----

2.3 TCS startup	28
--------------------	----

2.4 FEROS startup	29
----------------------	----

2.5 GROND and FEROS AG	30
---------------------------	----

2.6 FEROS DRS	30
------------------	----

2.7 Additional material	30
2.7.1 Harmless error messages	30
2.7.2 Display settings	30
3 Afternoon: Day-time calibrations	33
3.1 WFI	33
3.2 FEROS	34
3.3 GROND	35
4 Sunset: Getting ready	37
4.1 Opening	37
4.2 Telescope readying	37
4.3 Making the instruments ready (at sunset)	38
4.4 Refining the night plan	39
5 Twilight: On-sky calibrations	41
5.1 Outline	41
5.2 WFI	42
5.2.1 Sky flats	42
5.2.2 Pointing	43
5.2.3 Focus (quick tips)	44
5.2.4 Standard fields (quick tips)	44
5.3 FEROS	45
5.3.1 Focus	45
5.3.2 Focus and spectrophotometric standard	45
5.3.3 Radial velocity standards	45
5.4 GROND	46
5.4.1 Sky flats	46
5.4.2 Focus	47
5.4.3 Photometric standard fields	47
5.4.4 RRM online	47

6	Night: Observing	49
6.1	WFI	49
6.1.1	Popup handling	49
6.1.2	Switching to WFI	49
6.1.3	Guiding	50
6.2	FEROS	51
6.2.1	Switching to FEROS	51
6.2.2	Guiding	53
6.3	GROND	54
6.3.1	Switching to GROND	54
6.3.2	React to an automatic trigger	55
6.3.3	Guiding	55
6.4	All instruments	56
6.4.1	Run an observing block	56
6.4.2	Skip the preset	56
7	Morning: Closing & Calibrations	57
7.1	Panels referred to	57
7.2	Telescope	57
7.3	Instruments	58
7.4	Dome	58
7.5	Tidying folders	58
7.6	Health checks & internal calibrations	59
8	Managing observing blocks	61
8.1	Transferring OBs from one's laptop	61
8.1.1	Standard way	61
8.1.2	Loading manually	61
8.2	OT	62
9	Software maintenance	63
9.1	Monthly	63
9.2	Every six months	64

10	Troubleshooting	65
10.1	No flux or little flux	65
10.2	Autoguider camera fails	65
10.2.1	GROND	68
10.2.2	FEROS	68
10.2.3	WFI	69
10.3	OB doesn't work	69
10.3.1	OB gives an error when started	69
10.3.2	OB stalls before starting to observe	70
10.3.3	Crash before an exposure	70
10.3.4	Crash during an exposure	72
10.3.5	Crash during telescope offset	72
10.3.6	Crash during a telescope focus offset	72
10.3.7	Crash at the beginning of sky flats	72
10.3.8	Crash during filtre change in WFI	72
10.4	Focus issues	73
10.4.1	GROND autoguider defocused	73
10.4.2	Defocused wih FEROS ACS	73
10.4.3	WFI focus sequence fails with a timeout	73
10.4.4	No focus offset when filtres are changed	73
10.5	FEROS ADC	73
10.5.1	ADC cannot be put off	73
10.5.2	Telescope focus is not corrected when ADC enters	74
10.6	FEROS-DRS	74
10.6.1	FEROS exposure number is close to 10 000	74
10.6.2	FEROS DRS fails	75
10.6.3	Problems to restart the FEROS-DRS and data subscriber	75
10.6.4	Data won't show up	76
10.7	Startup issues	77
10.7.1	FEROS	77
10.7.2	WFI	77
10.7.3	Hydraulics cannot be switched on/off	78
10.8	TCS issues	79
10.8.1	Start-up fails with 12p2cam error	79
10.8.2	Start-up fails with telescope not initialised	80

10.8.3 Quick TCS restart	80
10.8.4 No connection with VME	80
10.8.5 TCS is OFF on an instrument	81
10.8.6 Telescope doesn't take focus orders	81
10.8.7 TCS Setup panel is stuck	81
10.8.8 Main mirror cover cannot be moved	82
10.8.9 Dome doesn't move	82
10.8.10 Dome slit and telescope are not aligned	83
10.9 GROND issues	83
10.9.1 GROND M3 is stuck	83
10.9.2 GROND OB only crashes with TCS on	84
10.9.3 GROND IR exposure won't start	84
10.10 Freezing issues	85
10.10.1 Mouse pointer does not move	85
10.11 Pointing issues	85
10.11.1 Pointing is incorrect	85
10.11.2 Telescope is stuck at low elevation	86
10.12 Web pages	87
10.12.1 2.2m Environmental Monitor stuck	87
10.12.2 All sky camera	87
10.13 ESO database issues	87
11 Main systems	89
11.1 Telescope control software	89
11.1.1 Manual preset	90
11.1.2 Manual offset	90
11.1.3 Autoguider	90
11.2 WFI	92
11.3 FEROS	92
11.4 GROND	92
11.5 P2PP and OT	92
11.6 FEROS reduction software	92
11.7 Dome controls	92

11.8 Computers	92
Glossary	105



List of Figures

1.1	Layout of the telescope controls	17
1.2	Time flow of operations in the afternoon and twilights. Afternoon setup and calibrations should be started at least 2.5 hours before sunset to leave a small buffer for technical issues. This example is giving for a late fall night (May 15th), with presence required for about 15 hours.	18
1.3	Entering the old control room in the telescope building	19
1.4	Entering the computer room in the telescope building	20
1.5	Entering the dome	20
2.1	Operations time flow in the evening, doing start-up, calibrations, and tests in parallel. It should start latest 2.5 hours before sunset (see horizontal axis at the top). The time of the day, given in universal time on the bottom horizontal axis, corresponds to a date close to fall equinox (September 15th).	22
2.2	Wide field imager restart	27
2.3	Telescope control software restart	28
2.4	Fibre-fed Extended Range Optical Spectrograph (FEROS) restart.	29
2.5	Switching between GROND and FEROS guide cameras	30
2.6	FEROS data reduction software (DRS) Disk Monitor to check free disk space.	30
2.7	Changing the date of the FEROS DRS.	31
2.8	Harmless error message of the TCS during WFI restart	31
2.9	Harmless alarm display on WFI during TCS restart	31
2.10	Correct sky orientation of the GROND displays	32
6.1	Window to set FEROS fibre reference position	52
10.1	Rack with FEROS AG LCU	66
10.2	Command scanei to control environments	67

10.3 FEROS data subscriber	76
10.4 Telemetry window.	77
10.5 WFI electronics: power cycle button and boards	78
10.6 When TCS restart fails to reboot the FEROS AG LCU	79
10.7 VME rack in the computer room of the telescope building	81
10.8 Controlling the hydraulics and mirror cover.	82
10.9 Local control of the dome	83
10.10 Writing the M3 position in the database	83
10.11 The GROND mirror and main cover control box.	84
10.12 The GROND IRACE box	85
10.13 The “joystick” can be used to manually point the telescope.	87
11.1 Main panel of the telescope control software	89
11.2 Setup panel of the telescope control software	90
11.3 WFI autoguider	91
11.4 Status window of the telescope control software	92
11.5 Auxiliary functions of the telescope control software	94
11.6 WFI OS GUI	95
11.7 WFI state manager	95
11.8 WFI general state panel	96
11.9 FEROS control panel	97
11.10 FEROS instrument control software panel	98
11.11 The main displays of Gamma-Ray Burst Optical/Near-Infrared Detector (GROND).	99
11.12 Control panels for the detectors.	100
11.13 Dome Auxiliary Functions.	100
11.14 dome webcam	101



List of Tables

10.1 Pointing model parameters for each instrument, as of November 2015.	86
11.1 Main workstations and users	93
11.2 Common passwords.	93
11.3 Some useful reboots	93



List of procedures

2.1	Telescope and instrument startup	21
3.1	WFI dome flat-fields	33
3.2	FEROS afternoon calibrations	34
4.1	Dome opening and telescope readying	37
4.2	Telescope readying	37
4.3	Making instrument ready	38
5.1	Taking sky flats with WFI	42
5.2	Ensure that pointing is correct using FEROS	43
5.3	WFI pointing	43
5.4	WFI photometric standards	44
5.5	FEROS focusing	45
5.6	Focus and/or spectrophotometric standard	45
5.7	FEROS radial velocity standards	45
5.8	GROND evening flat fields	46
5.9	GROND standard field observation	47
5.10	GROND morning flat fields	47
6.1	Switch to WFI observations	49
6.2	Guiding with WFI	50
6.3	Restart guiding with WFI	50
6.4	Switch to FEROS observation	51
6.5	Guide a FEROS observation using reflection on the fibre head	53
6.6	Guide a FEROS observation blindly using off-fibre reference	53
6.7	Guide FEROS observation with the WFI guide camera	53

6.8	Switch to GROND observations	54
6.9	React to an automatic trigger	55
6.10	Guide with GROND	55
6.11	Skip the preset	56
7.1	Close the dome.	57
7.2	Put the instruments offline	58
7.3	Tidy folders	58
7.4	Launch morning health checks and internal calibrations	59
8.1	Transfer OBs from one's computer to the telescope, using p2pp check-in	61
8.2	Transfer OBs from one's computer to the telescope, using manual file transfer.	61
9.1	Monthly software maintenance	63
9.2	Monthly software maintenance	64
10.1	Investigate and fix the reason for the absence of flux in an instrument	65
10.2	Observe when the autoguider fails	65
10.3	Restart the GROND autoguider	68
10.4	Restart the FEROS autoguider	68
10.5	Fix WFI autoguider issues	69
10.6	Fix OB start error	69
10.7	Fix stalling of an OB	70
10.8	Investigate and fix a crash occurring before the start of an optical exposure	70
10.9	Fix a crash during an exposure	72
10.10	Fix a WFI filtre change crash	72
10.11	Remove the ADC from the optical path of FEROS	73
10.12	Fix the absence of focusing after FEROS ADC enters	74
10.13	Reset the exposure number	74
10.14	Fix a FEROS exposure number going above 10 000	74
10.15	Restart the FEROS data reduction software and data subscriber	75
10.16	Restart the data handler.	76
10.17	Restart environment	77
10.18	Activate FEROS or WFI telemetry	77
10.19	Fix WFI init error	78
10.20	Set the hydraulics for remote control	78
10.21	Fix FEROS AG LCU during start-up	79
10.22	Fix the telescope not initialized popup	80
10.23	Quick TCS restart	80
10.24	Solve the connection issue with the VME	80
10.25	Fix telescope focus issues	81

10.26Unstuck the TCS Setup panel	81
10.27Manually close the main mirror cover	82
10.28Set the dome for remote control	82
10.29Unlocking the grond M3 mirror	83
10.30Deep reset of GROND IRACE (verify this!)	84
10.31Recover the mouse pointer	85
10.32Fix WFI pointing issues.	85
10.33Preset manually to zenith.	86
10.34Restart the 2.2m environmental monitor	87
10.35Data do not appear in the database	87



1 — Introduction

The operational scheme at the La Silla 2.2 metres telescope involves minimal support by ESO. This guide intends to familiarise observers with the operations.

1.1 Control room

First of all, the control room, is located below the main ESO building, the one with the dining room. It is still shared with the two ESO telescopes, the NTT and the 3.6 m. If everything works without technical issue, you can do everything from there without any need to access the telescope building.

Figure. 1.1, p. 17 below shows the layout of the different components of the controls. Screens, keyboards, and mice are labeled to avoid confusion.

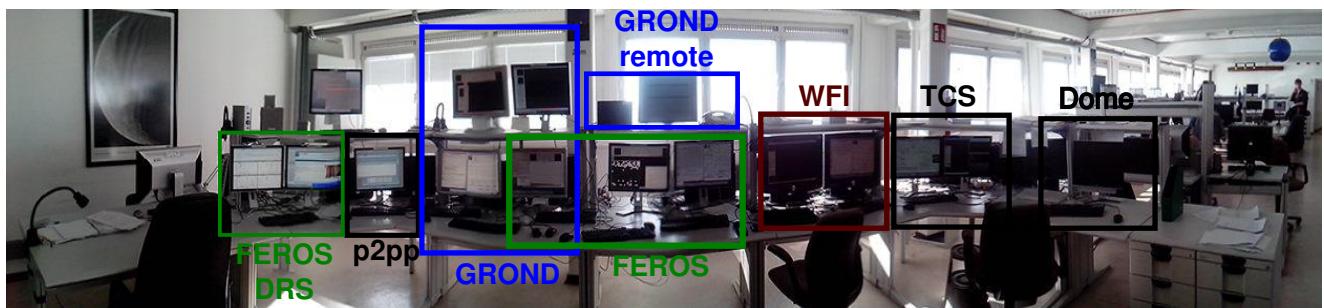


Figure 1.1: Layout of the telescope controls. From right to left: Windows desktop controlling and monitoring the dome, telescope control software, WFI controls, FEROS controls (bottom) and skype laptop connected to the GROND remote observers (top), GROND controls, p2pp machine where OBs are crafted and loaded by the visiting astronomer, and, finally, the FEROS data reduction software.

1.2 Overview of operations

In most nights, a support astronomer is present in the afternoon and the first part of the night, freeing the visitor of the afternoon and evening twilight calibration duties. Sometimes visitors are asked to perform all duties alone. In

that case, an experienced observer can start operations 2.5 hours before sunset to minimise working time, while giving a small time buffer to solve the commonest technical issues. Inexperienced ones should plan to start earlier or accept possible downtime in the very beginning of the night. Figure 1.2, p. 18 shows a time-optimised chart of operations in the afternoon and both twilights.

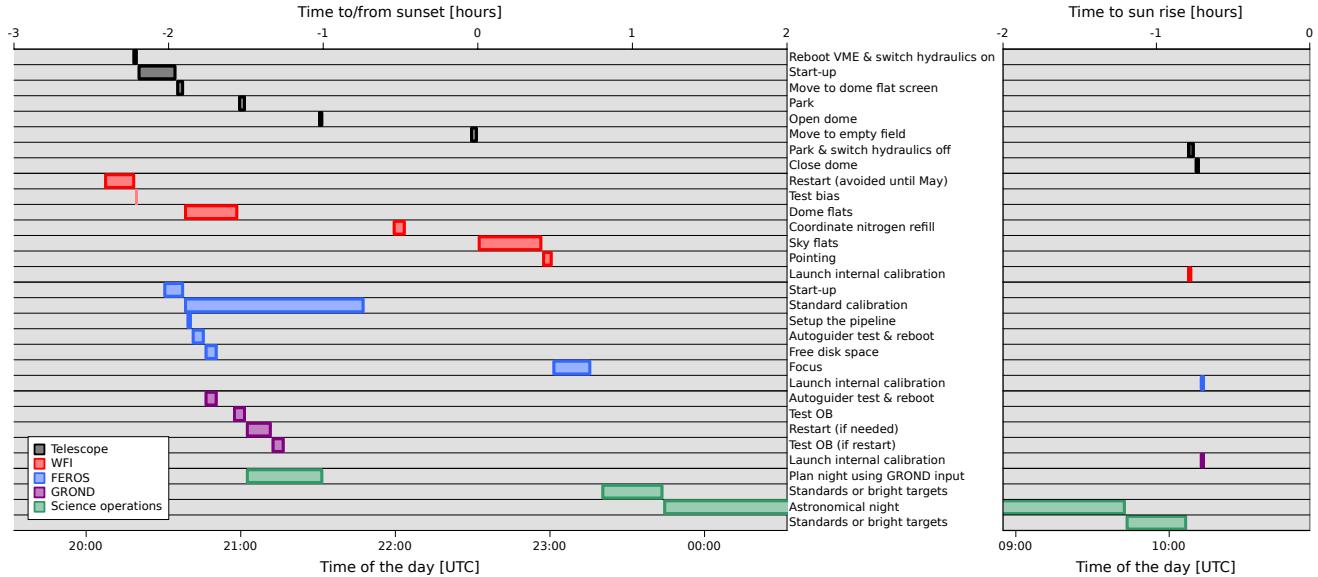


Figure 1.2: Time flow of operations in the afternoon and twilights. Afternoon setup and calibrations should be started at least 2.5 hours before sunset to leave a small buffer for technical issues. This example is giving for a late fall night (May 15th), with presence required for about 15 hours.

When no service astronomer is present (e.g. last part of the night), visiting astronomers will be asked to perform service observations for other groups, both for the follow-up of gamma-ray bursts and time-domain programmes. The number of allocated nights for visitors takes the average time loss into account, in case more down time, compensation will be considered in service mode. Since 2017, a long-term monitoring of quasi-stellar objects takes 1.5 to 2 hours daily, and targets of opportunity about 1 hour (15% long-term average). MPIA observers may be asked for additional service observations for the MPIA.

Chapters 2–6 can be seen as a step-by-step guide of the operations from the daily startup to the night time. Many of the steps need some knowledge of the **observing block (OB)** management and of the **broker for observing blocks (bob)** interface, which are presented in Chapter 8. Chapter 9 details monthly preventive software maintenance. Chapter 10 lists fixes to common issues at the telescope. We present the software components more in detail in Chapter 11.

1.3 Security

The main guidelines to avoid bodily harm are:

- Don't move the telescope or dome before checking no one is in the way. During the day, ESO technicians may address some issues or refill the instrument with nitrogen. If you operate from the remote control room, check the dome webcam.
- If you need to go to the dome, leave a conspicuous message in the control room and put the telescope in local control from the computer room of the telescope building.
- If you drive by night, go very slowly and defensively as you may not see a pedestrian or a dark donkey.
- If you walk, take the incoming traffic side and be very careful at night. Drivers don't use lights.

ESO has the duty to ensure telescope safety but you have to be proactive, too. In particular:

- If you are not able to close when you must (sunrise and inclement weather), you need to ask to the operators present at the NTT or the 3.6m. They have the duty to assist.
- The weather officer or the NTT operator will tell you when you need to close and when you may reopen, stick to it.
- If you have any doubts whether you may open in the afternoon, wait for the NTT to open or ask the ESO day-time operator.
- If the meteo monitor shows that the closing limits are reached (wind, humidity, clouds), close.
- If a sea of clouds below the observatory was present at sunset, be attentive as it is common for them to raise and increase humidity to 100% within minutes.

1.4 Telescope building

It is sometimes necessary to physically access the telescope building where there is an old control room (Fig. 1.3, p. 19), a computer room to physically access some relevant workstations (Fig. 1.4, p. 20), the FEROS room, and, obviously, the dome (Fig. 1.5, p. 20).

Some subsystems are controlled by machines gathered in big rack towers, these machines are called **LCU** or sometimes VME. There are also workstations controlling coordinating with one or more LCUs, they look like a normal desktop computer tower usually with no screen or keyboard.

In the dome itself, many electronic boxes attached at the telescope (see Fig. 1.5, p. 20) may need being “power cycled”, that is switched off and on. It is also possible to locally take control of telescope, dome, and mirror motion.



Figure 1.3: Entering the old control room in the telescope building



Figure 1.4: Entering the computer room in the telescope building. In front slightly to the left is the VME rack.



Figure 1.5: Entering the dome, from left to right: the **ADAM** controls, a computer to use the **TCS**, the dome controls, the bottom of the telescope.



2 — Early afternoon: daily start-up

Start-up should take about one hour, but small technical issues can lengthen it significantly. Ideally, it should be done early enough in the afternoon (2–3 pm in Winter, 3–4 pm in Summer), so that dome flat fields can be done before the nitrogen of [wide-field imager \(WFI\)](#) is refilled. Also, complicated issues should be diagnosed early, so that you benefit from the day-time support from ESO engineers. Night time support is not provided except for emergencies.

For an experienced observer alone in Winter, a later start-up can be done by optimising and hoping for the best (see Fig. 2.1, p. 22), but the risk is to lack time to perform dome flats and/or losing the very beginning of the night to technical issues.

The [TCS](#) and the [WFI](#) are entangled. In particular, the [WFI instrument control software \(ICS\)](#) controls the focus and pointing, and the [TCS](#) controls the [WFI autoguider \(AG\)](#). For this reason, the [WFI](#) should be rebooted before the [TCS](#). The other instruments, [GROND](#) and [FEROS](#), are more independent and need a later restart. Also, the [FEROS](#) and [GROND AG](#) should be checked and the [FEROS DRS](#) set to the right date.

2.1 Outline

To be on the safe side, the start-up sequence shall be performed in this order below. To gain a bit more time one can do [B1–B2](#) during [A1–A5](#) and [B5a–B7a](#) during [A8–A10](#). [FEROS](#), [GROND](#), the [AG](#) and the [DRS](#) ([C](#), [D](#), [E](#), [F1](#)) can be handled in parallel as soon as the [TCS](#) is booted ([B7a](#)).

If under time pressure, you can also do some day-time calibrations in parallel. Figure. 2.1, p. 22 gives a time-optimised flow of the day-time start-up and calibrations, showing what can be done in parallel. It should be started latest 2.5 hours before sunset.

Procedure 2.1. Telescope and instrument startup

A. [WFI restart \(8 min, in case of problems, see Fig. 2.2, p. 27\)](#)

- A1. On the screen BOB Wide Field Imager, go to the StartUp virtual desktop.
- A2. In a terminal, `osf2p2StartUp ini WFI F8`, where ini is your initials (Fig. 2.2(a), p. 27).
- A3. On the dialog, choose DAILY startup (Fig. 2.2(b), p. 27).
- A4. Click START on the appearing window (ESO220 WEEKLY FULL STARTUP, see Fig. 2.2(c), p. 27).
- A5. Wait until the start-up window says SCRIPT finished (about 11 minutes).

A black text window gives indication on the process (Fig. 2.2(d), p. 27)

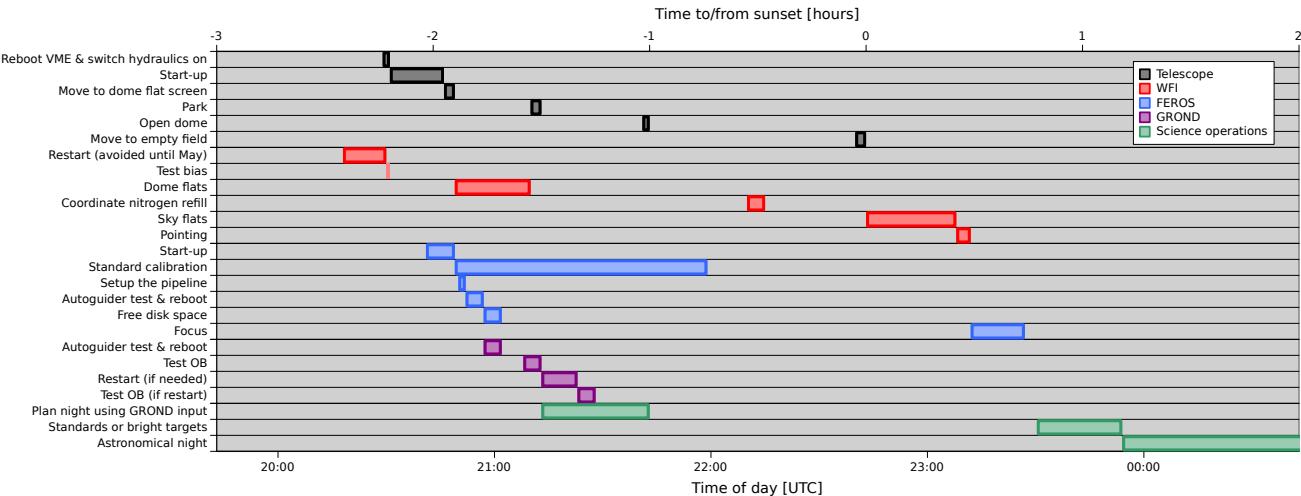


Figure 2.1: Operations time flow in the evening, doing start-up, calibrations, and tests in parallel. It should start latest 2.5 hours before sunset (see horizontal axis at the top). The time of the day, given in universal time on the bottom horizontal axis, corresponds to a date close to fall equinox (September 15th).

- A6. Close the startup window (Fig. 2.2(c), p. 27)
- A7. Close the emerging PDF (Fig. 2.2(e), p. 27).
- A8. Rearrange windows to the corresponding desktops (1 min, see Fig. 2.2(f), p. 27)
 - real time display (RTD) goes to all desktops, on the left screen.
 - other windows go to the desktop bearing their name, on the right screen.
- A9. Wait for the filtre wheel to be set to a specific filtre (1–2 min)
 - a. Locate the Filter field on the WFI General State panel
 - b. If it stays in MOVING for more than 2 minutes or you skipped full restart, reset filtre wheel (Procedure 10.10, p. 72).
- A10. In bob, execute testOB.oob (1 min)
 - a. Import it with window menu File→Load OBs→From file....
 - b. Click the Start button.
- B. **TCS restart (18 min, daily, see Fig. 2.3, p. 28)**
 - B1. Switch hydraulics and drives on
 - a. Go to web browser on screen Dome webcam & hydraulics (Fig. 2.3(a), p. 28).
 - b. Find the Dome Auxiliary Functions (tab called ADAM 6000...)
If it is not there, open it with the bookmark Dome controls.
Use the good seeing password if necessary.
 - c. Click HydOn, then button Hydr goes green.
 - d. Click DrivesOn, then button Drives goes green.

It may be needed to click two or three times to get green buttons.
 - B2. On the screen Telescope Control Software, go the the StartUp virtual desktop.
 - B3. If Cannot read "@w2p2wfi..." pop-up can be seen on the TCS screen (Fig. 2.3(b), p. 28), click OK.
 - B4. In a terminal type lccBoot lte2p2 and wait for command to end (2 min, Fig. 2.3(c), p. 28)
If none is there, you can open one with left-click mouse menu TCS User→tcs xterm.
If an error message appears on the WFI screen, click OK.
 - B5. Launch the start-up script
 - a. In the terminal type osf2p2StartUp ini ALL F8, with ini = your initials. (Fig. 2.3(d), p. 28)
Make sure WFI is fully booted (A5) before going on with the TCS start-up.
 - b. Click START on the appearing startup window titled ES0220 DAILY STARTUP (Fig. 2.3(e), p. 28)

- B6. Be proactive to handle some appearing pop-ups (14 min)
- One asking to check hydraulics and telescope is parked among other things (Fig. 2.3(f), p. 28).
Take your time to check each point and then click OK
 - One asking to switch on flat-field lamp (Fig. 2.3(g), p. 28)
Lamp should be on, check no one is in the dome, then click OK.
If it's off, on FAUX functions panel select 200V under FLAT FIELD LAMP
Then, telescope will do movement checks you can monitor on the webcam.
 - One asks to check for CCD alarms to be enabled (Fig. 2.3(h), p. 28)
Go to the large, black text window where all numbers below the two A1 Enab should be ones.
 - One asks to check that the flat-field lamp is off and telemetry active.
 - If flat-field lamp is on, turn it off unless you will do flats.
On FAUX functions panel select OFF under FLAT FIELD LAMP
 - On the Telemetry panel, ensure that the FEROS telemetry module is active
If not, activate it on the FEROS screen using fcdTelemetry (see Procedure 10.18, p. 77)
 - On the Telemetry panel, ensure that the WFI telemetry module is active
If not, activate it on the WFI screen using fcdTelemetry (see Procedure 10.18, p. 77)
 - If a telemetry was restarted, panel must be closed and reopened (see Procedure 10.18, p. 77)
- B7. Perform some post-start-up tidying
- Make sure the start-up window indicates SCRIPT finished.
 - Close startup window.
 - Close emerging PDF.
 - Rearrange windows to the corresponding desktops (1 min)
 - skycat go to all desktops, on the right screen.
 - Other windows go to the desktop bearing their name, on the left screen.
 - Ignore window CSS ALARM DISPLAY (Fig. 2.9, p. 31) if it pops up on the WFI screen.
- B8. Check and set up the **WFI AG** (1 min)
- Go to the TCS Control Panel
 - Under AG Field Acquisition, click Retrieve Field
 - Under Autoguider look that CCD Stat goes to Pending and integrating (10–15 s)
 - Check that an image is read out on the skycat window (30 s)
 - Select window menu View→Autoscale
 - If steps B8c–B8d do not work, see Procedure 10.5, p. 69.
 - On the skycat window, use window menu TCS→Pick Reference Star...
 - On emerging window (title Pick Reference Star), click Cancel Operation
- B9. Ensure that the pointing model is correct (1 min).
- Check that the sidereal time is correct.
Compare the TCS Control Panel and the wall clock
 - Select **WFI** pointing model.
 - On the TCS Status panel, use window menu Instrument selection→WFI
 - On the emerging popup select Continue
 - Check the pointing model parameters are non zero
 - Locate the TCS Setup Panel
 - Look values of ID, IH, and CH under Pointing Model Data
 - If they are zero, fix the pointing model.
 - Locate or open a tcs terminal
 - Type `~/bin/fixPointing.sh` and wait for command to return (15 s)
 - Redo steps B9b–B9c
- C. **FEROS restart (daily, 8–9 min, see Fig. 2.4, p. 29).**
- Only start after **TCS** is back online and doing telescope movements (B6b).

Under time pressure, you can skip points C1–C4, accepting an increased risk of night-time issues.

C1. On the screen FEROS BOB, go to the StartUp virtual desktop.

C2. Launch the weekly full start-up script (2 min)

- a. In a terminal type `osf2p2StartUp ini FEROS F8`, where ini is your initials. (Fig. 2.4(a), p. 29)
If none is available, use left-click mouse menu FEROS User→feros xterm.
- b. Click FULL on popup Select StartUp Type (Fig. 2.4(b), p. 29)
- c. Click START on the start-up window ES0220 WEEKLY FULL STARTUP (Fig. 2.4(c), p. 29).
A black text window should appear and give indications on the progress. (Fig. 2.4(d), p. 29)
- d. Wait for the weekly full start-up to indicate finished and close it (2 min)
 - (i) Close ES0220 WEEKLY FULL STARTUP when it says SCRIPT finished
 - (ii) Close the emerging PDF

C3. Perform the instrument start-up (4 min)

- a. Locate the Instrument Startup window and click START (Fig. 2.4(e), p. 29).
- b. A large, grey window giving details on the process should open.
If a timeout error occurs, see Sect. 10.7.1, p. 77.
- c. Wait for the large, grey window to close itself (3 min)
- d. Put the instrument online (1 min)
 - (i) On FEROS General State panel, use window menu Instrument→ONLINE
 - (ii) Wait for State to indicate ONLINE

C4. Rearrange windows to the corresponding desktops (1 min, see Fig. 2.4(f), p. 29)

- RTD goes to all desktops, on the left screen.
- Other windows go to the desktop bearing their names, on the right screen.
- There are two rtlds and two logMonitors, you can close one of each.

C5. Perform a test OB with telescope communication (1–2 min)

- a. On FEROS General State panel, select window menu Telescope→ENABLE
- b. In bob, run `testOB.oob` (1–2 min)
 - (i) Fetch it with window menu File→Load OBs→From file...(/OBD/Templates/).
 - (ii) Click Start
 - (iii) Wait for the exposure to finish (takes about 1 min).
 - (iv) If points C1–C4 were skipped, it will fail on the first attempt and proceed.
 - (v) Click OK on the error popups, one should say error closing w2p2cam
 - (vi) In bob, click on Reset status
 - (vii) Re-run it (point C5bii).
- c. FEROS General State panel, select window menu Telescope→IGNORE

D. GROND restart (daily, 5–11 min)

D1. Go to screen GROND BOB.

D2. Locate or open a terminal with user grondmgr.

You can use left-click mouse menu GROND user→grondmgr on wgrond

D3. In the case of a power cut or issues with GROND, restart the instrument (5 min)

- a. Type `grinsStop`, wait for shutdown window to finish and disappear.
- b. Type `grinsStart` and click Continue on the pop-up.
- c. Wait for startup window to finish and disappear (a few minutes).
If an error about “reply timed out” appears, then close the startup window and repeat from D3a.
- d. Rearrange windows.
- e. Use window menu Instrument→ONLINE in the GROND control panel (Fig. 11.11(b), p. 99).

D4. Do some preventive reinitialisations (1.5 min)

- a. Close bob.
- b. Launch bob from the terminal as user grondmgr (type `bob &`).
- c. In the same terminal, execute `grondGRI`.

- d. In the same terminal, execute grondSHUTTER && grondFM (might take 1 min).
- D5. From **bob**, execute the test **OB testOB.oob**, see Fig. 11.11(a), p. 99 (1 min)
- a. Ensure **TCS** is OFF (red button) by clicking TCS OFF.
 - b. Fetch **OB** with window menu File→Load OBs→From file...
 - c. Click Start.
- D6. Repeat the last step using communication with the TCS (2 min)
- a. Ensure **TCS** is ON (green button) by clicking TCS ON.
 - b. Fetch **OB** with window menu File→Load OBs→From file....
 - c. Click Start.
 - d. If you haven't done the full start-up, the first attempt should fail, you need to
 - (i) Click OK on the error popups, one should say error closing w2p2cam
 - (ii) Wait for the exposure to finish
 - (iii) In **bob**, click on Reset status
 - (iv) Click on start again.
 - (v) If error persists, close **bob** and open it again
 - e. Set telescope back to FEROS/WFI (0.5 min)
- In a terminal type, grondM3 WFI && grondMC CLOSE && grondCS CLOSE.
- D7. If a restart (point D3c) was done, set the image displays (1 min).
- a. Go to the GROND optical (FIERA) screen.
 - b. Find the **RTD** window (griz images).
 - c. Check that image is flipped along both axes and rotated (see Fig. 2.10(a), p. 32).
 - d. Go to the GROND infrared (IRACE) screen.
 - e. Find the irtd window (JHK images).
 - f. Check that images are received live.
The left column should have a green button with text Stop (see Fig. 2.10(b), p. 32).
If it is gray with text Start, click it so that it gets as described above.
 - g. Check that the image is horizontally flipped (see Fig. 2.10(b), p. 32).
 - h. Check that the image has positive pixel values
Find menu option Negative real time image
- E. **FEROS and GROND guide cameras setup** (3–8 min)
- E1. Go to the Autoguider GROND & FEROS screen.
- E2. Rearrange windows to their corresponding virtual desktops (1 min)
Autoguiding window should go to all desktops.
- E3. Use numbers 6, 3, 0.02 below Autoguider control and click Apply.
- E4. Check the **GROND** autoguider (1–4 min)
- a. select GROND below CCD change (see Fig. 2.5, p. 30)
 - b. If necessary, use Start exposure to change CCD Status to Infinite loop
 - c. Find window Telescope R.T.D.
 - d. Use window menu TCS→Attach camera
 - e. A bias image should be seen within seconds
 - f. If it fails in the previous steps, go to Procedure 10.3, p. 68 (3 min)
- E5. Check the **FEROS** autoguider (1–4 min)
- a. select FEROS below CCD change (see Fig. 2.5, p. 30)
 - b. If necessary, use Start exposure to change CCD Status to Infinite loop
 - c. Find window E2P2 Real Time Display
 - d. Click checkbox Camera on/off so that checkbox gets green
 - e. A bias image should be seen within seconds
 - f. Check that the image is horizontally flipped.
 - g. If it fails in the previous steps, go to Procedure 10.4, p. 68 (3 min)

F. FEROS data reduction software setup (2–5 min)**F1. Change the date (1 min)**

- a. Go to the DRS:main workspace of screen FEROS pipeline
- b. Locate or open FEROS DRS window
It opens with left-click left-click mouse menu FEROS User→FEROS DRS
- c. Stop the Reduce Queued Image Status
- d. Stop the Midas Session Status
- e. Change the date
- f. Start the Midas Session Status
- g. Start the Reduce Queued Image Status

F2. Free disk space (1–4 min)

- a. Go to Visitor workspace of screen FEROS pipeline
- b. Use or open a terminal
- c. If df -h /data indicates more than 80% disk usage, proceed
- d. Delete the oldest nights in /data/raw, /data/reduced, and /data/reduced/FEROS
Leave at least the last three nights.

Example: rm -rf /data/reduced/2018-01-* /data/reduced/FEROS/2018-01-*

G. Afternoon calibrations can be done right after start-up (see Chapter 3, p. 33)

- WFI flats may be done in parallel starting from point B6b
- FEROS standard calibration may be done in parallel starting from point D

2.2 WFI startup


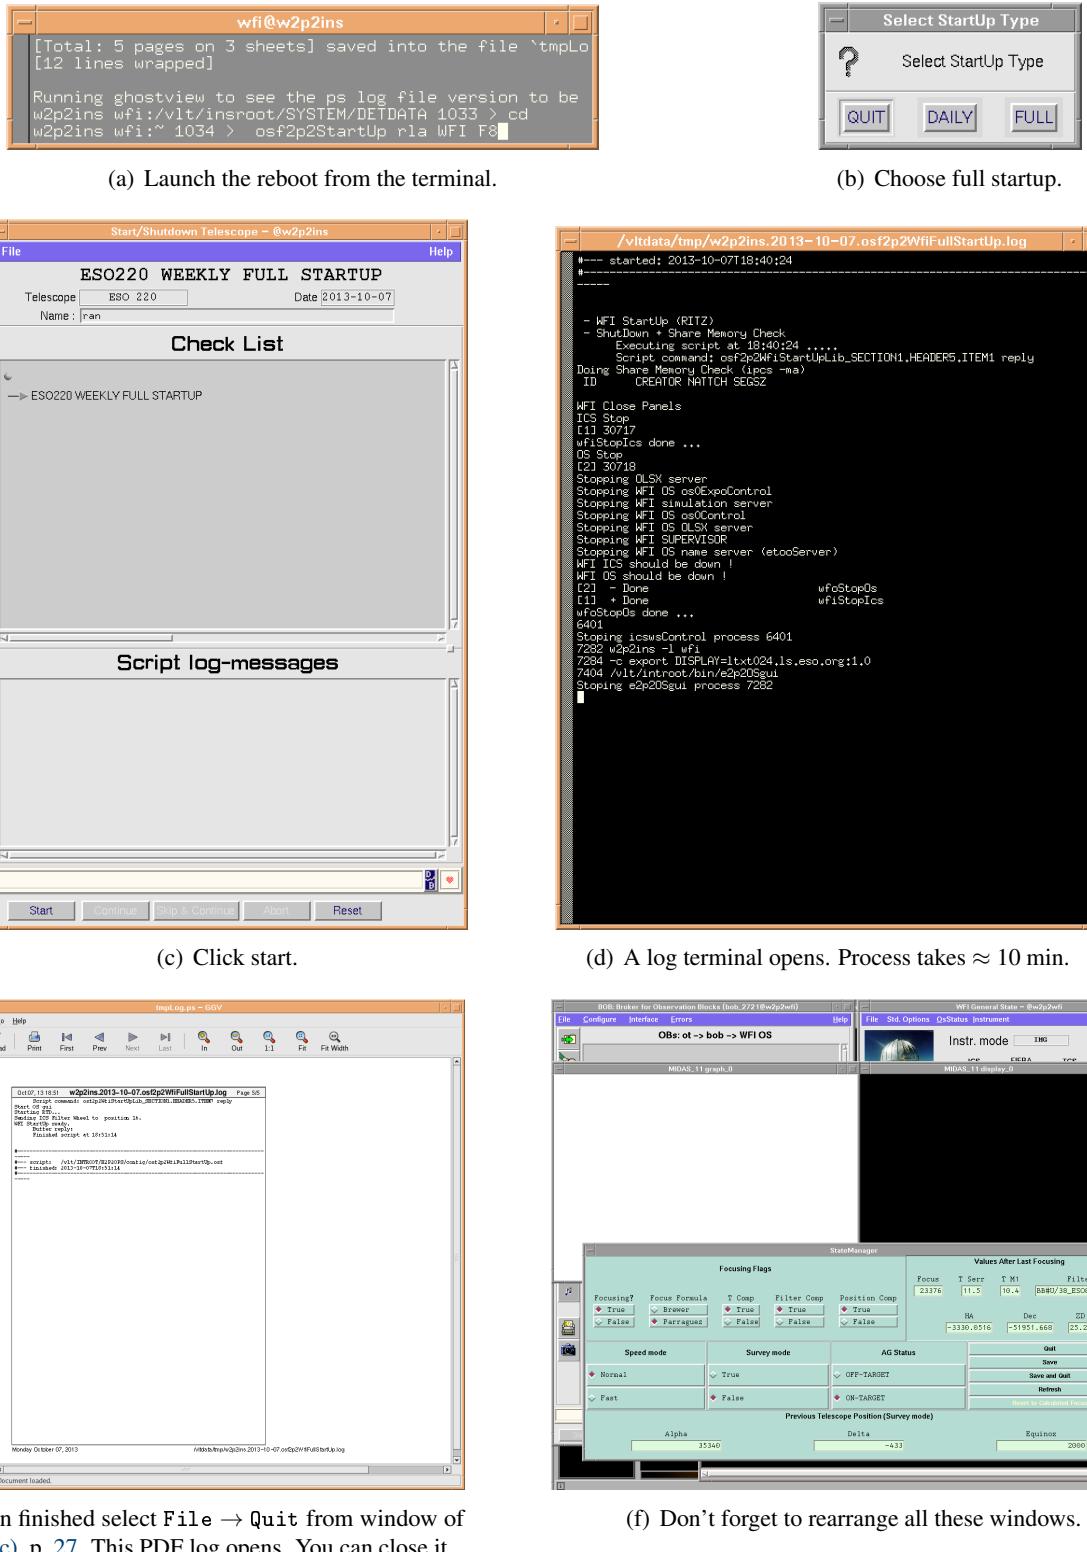


Figure 2.2: WFI restart. When done, don't forget to take a test bias.

2.3 TCS startup



(a) Turn hydraulics and drives on, Windows desktop.

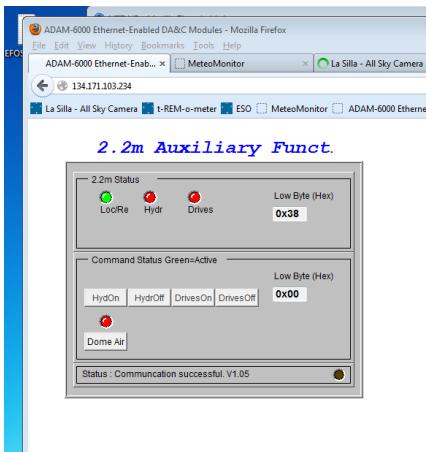


(b) On the TCS machine, give OK to this error.




(c) Reboot 1te2p2 machine.



(d) Launch the reboot from the terminal.

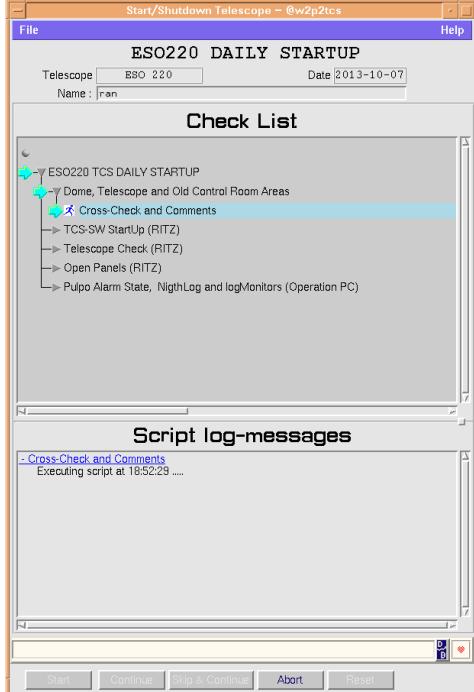


(e) Click start.

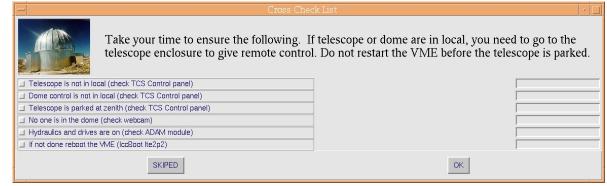


(f) Check elements then click OK to incoming pop-up.



(g) Check flat lamp is on or switch it on. After clicking OK, telescope should move.

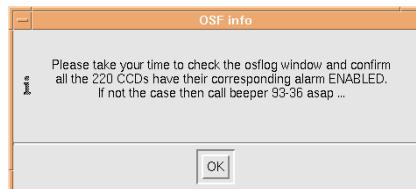

(h) Check that CCD alarms are on in the black text window.

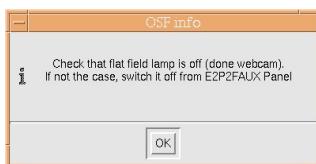

(i) Check flat field lamp is off, if not, turn it off

Figure 2.3: **TCS** restart. As for **WFI** there is a black terminal log and process ends with a PDF log being popped up. Emergent windows should be rearranged to their respective desktops. The **RTD** display should go to all desktops on the left screen, the other windows on the right screen.

2.4 FEROS startup

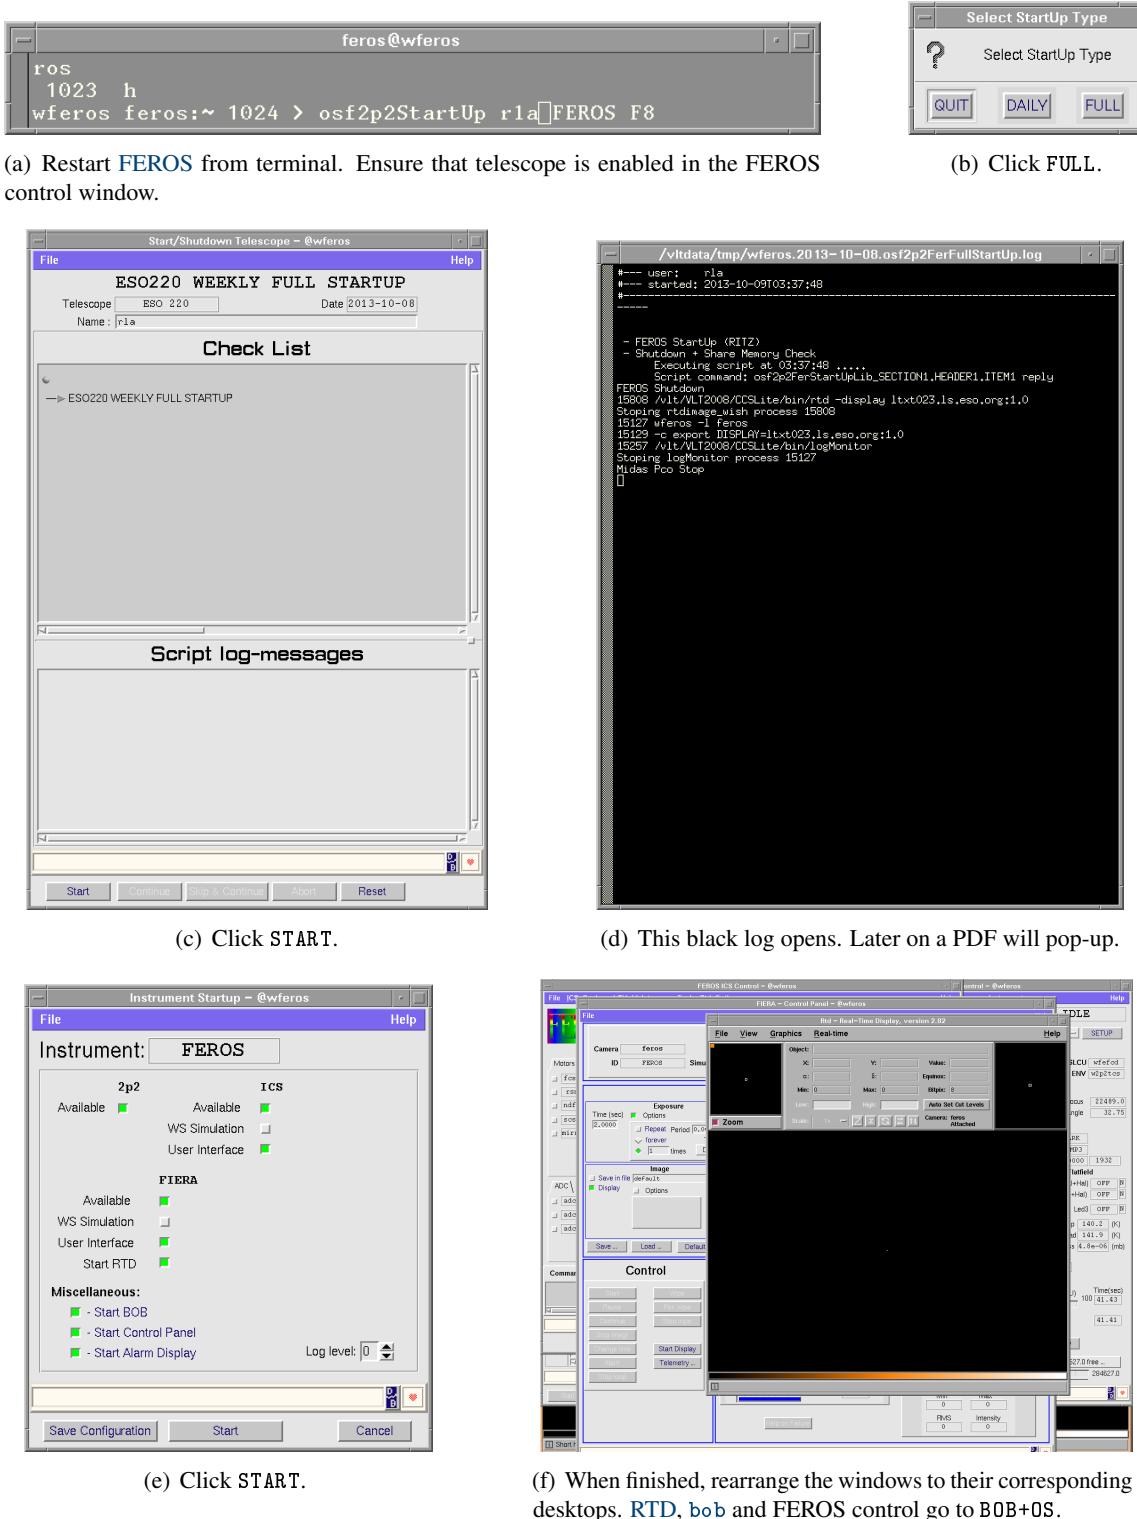


Figure 2.4: FEROS restart.

2.5 GROND and FEROS AG

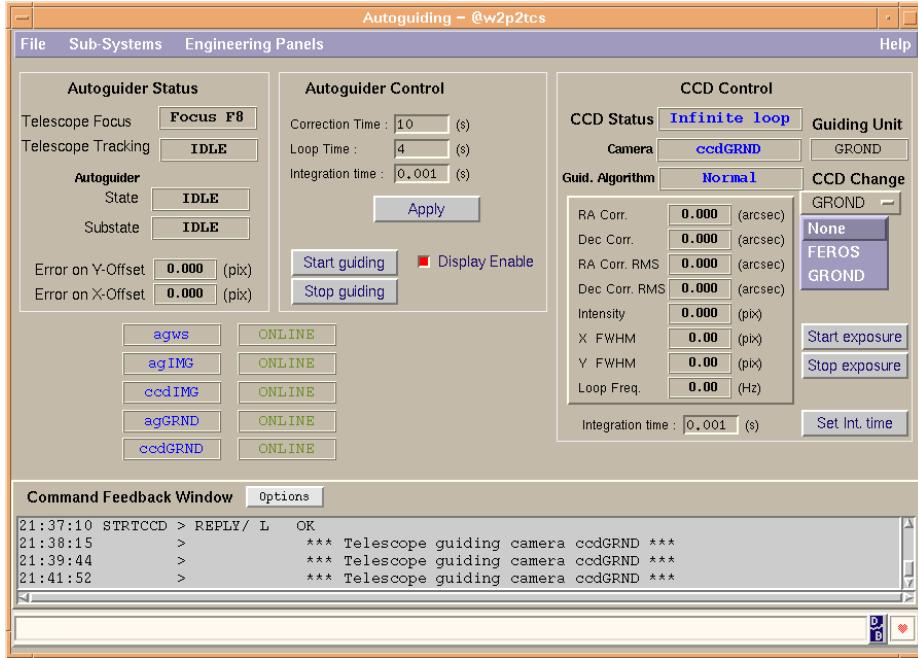


Figure 2.5: Switching between **GROND** and **FEROS** guide camera.

Check that the **GROND** and **FEROS** guide cameras work by switching between them on the **AG** window (see Fig. 2.5, p. 30). The switching should set the camera in CCD status Infinite loop. It may be necessary to click on Start exposure after switching to obtain this status. If status is Fail, the camera must be restarted (see Sect. 10.2, p. 65).

2.6 FEROS DRS

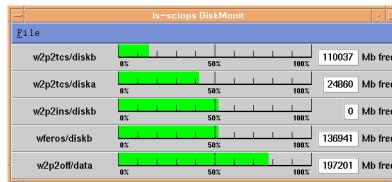


Figure 2.6: **FEROS DRS** Disk Monitor to check free disk space.

The **FEROS DRS** should be set to process the data of the current night. In the process the MIDAS session (with its characteristic blue window) is closed and reopened.

2.7 Additional material

2.7.1 Harmless error messages

2.7.2 Display settings

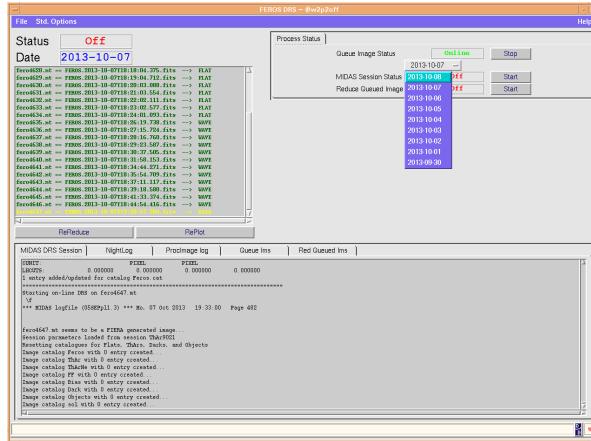


Figure 2.7: Changing the date of the FEROS DRS.

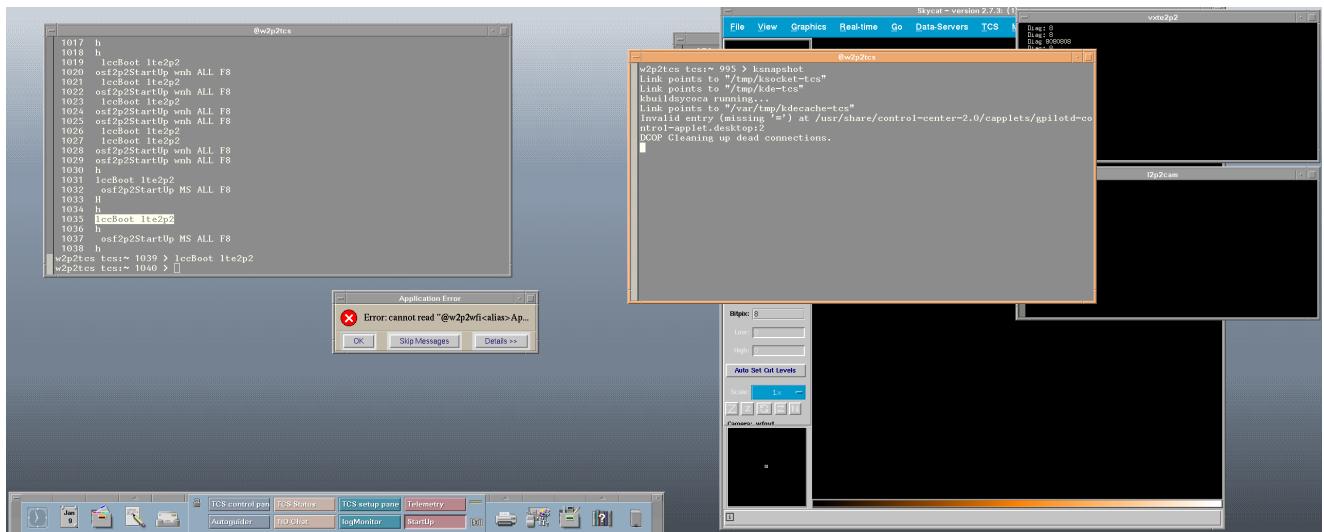


Figure 2.8: When restarting WFI, the TCS generally issues a harmless error message. Get over it and click OK.



Figure 2.9: CSS ALARM DISPLAY will typically pop-up on the WFI screen with a line in red when the TCS is restarted. Get over it and hide the window.

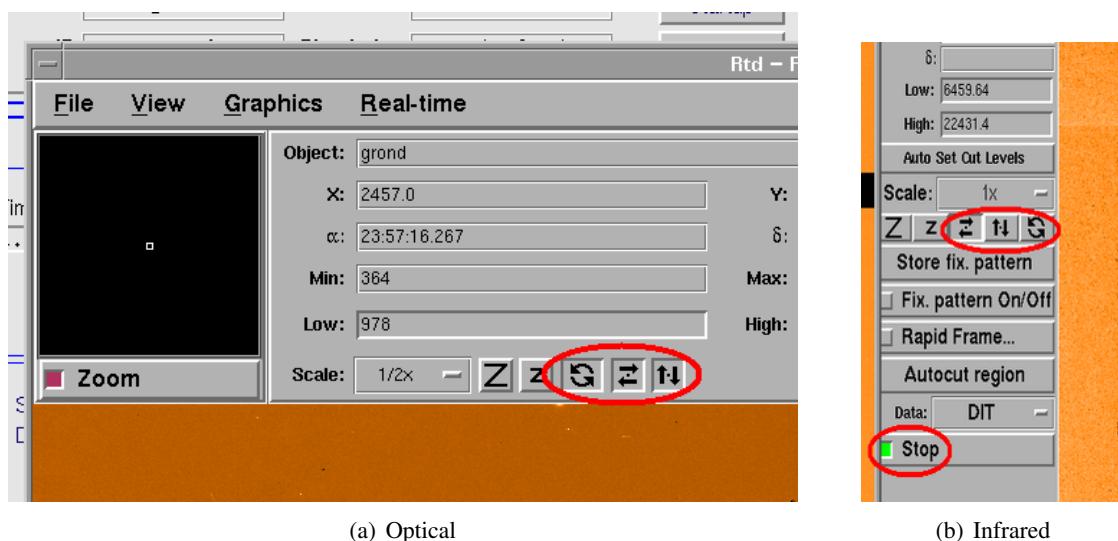


Figure 2.10: Correct sky orientation of the [GROND](#) displays. The infrared one is receiving data in real time (green checkbox).



3 — Afternoon: Day-time calibrations

The day-time observations use OBs either stored in `bob` or in a observing tool (`ot`) queue. Managing OBs with `bob` and `ot` is explained in more detail in Chapter 8, p. 61.

3.1 WFI

Internal calibrations and health checks are typically left running in the morning after the dome has been closed. See Sect. 7.6.

Procedure 3.1. WFI dome flat-fields

- A. Ensure that no one is in the dome nor will enter it.
- B. Prepare the telescope.
 - B1. If hydraulics is off, switch it on and wait for connection with VME
 - a. On the Dome Auxiliary Functions panel click Hydr On then Drives On.
 - b. On the Telescope Control panel, check if red message appears no connection.
 - c. If it is the case, wait for it to disappear (about 2 min)
 - B2. If hydraulics were off, initialise telescope
 - a. On the Telescope Setup panel, click Tel Init
 - b. Wait for the telescope status of the Telescope Control to go from WaitInit to Slew (2 min)
 - B3. Preset to flat-field screen
 - a. Go to the TCS Setup Panel (Fig. 11.2, p. 90) on screen Telescope Control Software.
 - b. Put Dome on automatic.
 - c. Preset the telescope to flat-field screen.
Click FF Scr below Fixed Presets
 - d. Wait for the movement to complete (2 min) before starting the flat-field OB.
On the TCS Control Panel (Fig. 11.1, p. 89) telescope status is Slew.
 - B4. Prepare shutters and mirrors
 - a. Click Open under the Main Mirror Cover.
 - b. Wait for opening to complete (2 min) before starting the flat-field OB
 - c. Open the WFI protective shutter.
In the Auxiliary Functions (Fig. 11.5, p. 94), OPEN the WFI PROTECTIVE SHUTTER.
 - d. Ensure the GROND mirror is on WFI

- e. Ensure the FEROS mirror is on FEROS
- C. Prepare the flat-field OB
- C1. Go to **bob** on the screen BOB Wide Field Imager.
 - C2. Fetch **bob** from file (window menu File→Load OBs→From file...) looking in subfolder DomeFlats.
 - If observing in UBVRI standard filters: DomeFlatCalPlan_new.oob (25 min).
 - During an observing period or a visitor run, a custom OB may be used
For instance: DomeFlatsP103.oob or DomeFlatsVisitorName.oob
 - To choose filters on the fly: DomeFlatGeneric_new.oob.
 - To test all filters: DomeFlatAllSnapshot.oob (1 flat per filter, 2 hrs 30 min).
 - C3. If choosing filters on the fly, customise the ob
 - a. Open the flat template, left-clicking on the triangle of WFI_img_cal_DomeFlat_new
 - b. Open the instrument section, left-click on the triangle of section INS
 - c. Use window menu Interface→Engineering.
 - d. Middle-click the filter name, fill in value, and type enter.
Name is ESONNN_name/width (NNN: number, name: filter name or wavelength)
In virtual desktop WFI ICS, a filter list is found below SETUP Instrument
 - e. Deactivate the filters you don't want.
Right-click the triangles to get a thumb down
- D. Execute OB (15–30 min usually).
- E. If no other types of flats are done, park the telescope
- E1. Go to the TCS Setup Panel on screen Telescope Control Software.
 - E2. Close to the Main Mirror Cover.
 - E3. Set the dome in Manual.
 - E4. Click Zenith below Fixed Presets (2 min)
 - E5. Close the WFI protective shutter.
In the **Auxiliary Functions** (Fig. 11.5, p. 94), CLOSE the WFI PROTECTIVE SHUTTER.
- F. If telescope will stay idle for hours, switch hydraulics off.

3.2 FEROS

A linearity check is left running in the morning (see Sect. 7.6). The standard **FEROS** calibration is generally done after startup. It is internal in a separate room, so it can be done while doing telescope movements, going to the dome, or even **WFI** or **FEROS** observations.

Procedure 3.2. FEROS afternoon calibrations

- A. Go to screen FEROS BOB.
- B. Check that FEROS does not communicate with the telescope
On the FEROS General State panel, use window menu Telescope→Ignore.
- C. Execute StanCalNorm.oob from **bob** (≈ 1 h).
 - C1. Use window menu File→Load OBs→From file....
 - C2. Click Start.
- D. Check that the **DRS** has processed it. **While Fabry-Pérot stays installed, it will fail.**
 - D1. Find a white graphics with title OBJ FIB GUESS.
 - D2. The wavelength solution should have 4×10^{-3} Angstroem rms or less and look flat.
 - D3. If not, restart calibration if possible.

3.3 GROND

GROND calibrations are left running in the morning after the dome has been closed (see Sect. 7.6). Some observers may ask for GROND linearity calibration using dome flats, providing the observing blocks and a detailed explanation.



4 — Sunset: Getting ready

4.1 Opening

Opening should take place about one or two hours before sunset if conditions allow it. In case of doubts, always ask to the day-time Telescope & Instrument Operator of ESO.

Procedure 4.1. Dome opening and telescope readying

- A. Check that the slit is oriented opposite to the Sun. It does not apply when opening at night.
 - A1. On the rose diagram of the TCS Control Panel, it should be to the East
 - A2. If not, rotate manually in the TCS Setup Panel
- B. Open the slit
 - B1. Go to the **TCS** setup panel (Fig. 11.2, p. 90)
 - B2. Check that the value below Main Mirror Cover is closed.
 - B3. If not, click Close (2 min).
 - B4. In the **TCS** setup panel (Fig. 11.2, p. 90), below slit, click Open (1 min)
- C. Turn on the Dome Air in the **Dome Auxiliary Functions** (Windows desktop, Fig. 11.13, p. 100).
- D. If opening during the night, you can directly prepare the telescope (Procedure 4.2, p. 37).

4.2 Telescope readying

A bit before sunset if doing sky flats or at sunset otherwise, you can ready the telescope and point to an empty field.

Procedure 4.2. Telescope readying

- A. Prepare the telescope
 - A1. If hydraulics is off, switch it on and wait for connection with VME
 - a. On the Dome Auxiliary Functions panel click Hydr On then Drives On.
 - b. On the Telescope Control panel, check if red message appears no connection.
 - c. If it is the case, wait for it to disappear (about 2 min)
 - A2. If hydraulics were off, initialise telescope
 - a. On the Telescope Setup panel, click Tel Init
 - b. Wait for the telescope status of the Telescope Control to go from WaitIni to Slew (2 min)
 - A3. Open the main mirror cover
 - a. Click Open under the Main Mirror Cover.

- b. Wait for opening to complete (2 min) before starting the flat-field OB
- B. Preset to an empty field if doing sky flats, a test with GROND, or readying before sunset
 - B1. Go to the TCS Control Panel (Fig. 11.1, p. 89)
 - B2. Below Catalogue Handling click Cat. Select.
 - B3. Choose Empty Fields 2011
 - B4. Select field with Up and Dwn.
Right ascension should be about 1 hour more than sidereal time at sunset.
Consider field quality: excellent, good, OK, poor.
 - B5. Click Preset.
- C. Set the dome motion in automatic.
On the TCS setup panel (Fig. 11.2, p. 90), below Dome, select the checkbox Automatic.

4.3 Making the instruments ready (at sunset)

Procedure 4.3. Making instrument ready

- A. Activate the connection between instruments and telescopes
 - A1. On the FEROS control panel (Fig. 11.9, p. 97), use window menu Telescope→Enable.
 - A2. On the GROND control panel (Fig. 11.11(b), p. 99), click TCS ON.
 - A3. Refresh the WFI general state panel (Fig. 11.8, p. 96).
 - Use window menu Std. Options→Refresh Database values.
 - Check that TCS is ONLINE.
- B. Open the instrument covers
 - B1. In the Auxiliary Functions (Fig. 11.5, p. 94), open the WFI protective shutter.
 - B2. For GROND observations, in a terminal open the main cover, the cold shutter, and the optical ones through these commands
 - a. grondMC OPEN
 - b. grondCS OPEN
 - c. grondSHUTTER
- C. Check for mirrors
 - C1. Check FEROS mirror (M3 Selected Mirror) on the FEROS control panel (Fig. 11.9, p. 97).
If necessary, set mirr3 motor on the ICS (Fig. 11.10, p. 98)
 - to WFI for observations with WFI or GROND;
 - to FEROS for observations with FEROS.

(Select the mirr3 check box, select instrument, click SETUP, unselect checkbox.)
 - C2. Check GROND mirror on the GROND control (Fig. 11.11(b), p. 99).
If necessary, type
 - grondM3 WFI for FEROS or WFI observations
 - grondM3 GROND for GROND observations.
- D. If no test OB with TCS on was done during the start-up, try to run a GROND test OB (1min1TD_test.oobd) on sky using bob (Fig. 11.11(a), p. 99).
 - D1. Fetch OB with window menu File→Load OBs→From file....
 - D2. Click Start.
 - D3. If an error occurs after the optical exposure has started
 - Click OK on the error popups
 - Wait for the exposure to finish
 - In bob, click on Reset status
 - Click on start again.
 - If error persists, close bob and open it again
 - D4. For other errors, do a grondSHUTTER, close bob and open it again.

4.4 Refining the night plan

On the GROND remote observer screen at the side of the small laptop, one of the GROND team members should have contacted you by slack to indicate their observing plan, if they have some monitoring to do. It generally consists of 1–3 targets to be observed within a time range, so that you try to accommodate with your own and/or other service observations. If it is detrimental to the other observations, there is sometimes some flexibility on which days they have their monitoring done, ask, but they have precedence.

If slack is closed, open a browser with the following link: <https://slack.com/signin>. Sign in to workspace grondobs.slack.com and continue. Use the credentials given on the cover of the laptop, account lasillaskype with password pwd*****. Under channel `remote_observing` you can usually find the observing plan (late afternoon).



5 — Twilight: On-sky calibrations

5.1 Outline

A. Flat-fielding

- A1. **WFI** flats can be done from sunset to sun at -10 degrees elevations depending on filtre.
Standard filtres have that order: U, V, R, I, and B.
Done daily if possible.
- A2. **GROND** flats are extensive and run from sun at -4 to -9 degrees elevation.
To be started when 2s J-band exposures feature a relatively flat field with 20 000 counts.
Done weekly.

B. Pointing & Focus

- B1. Pointing check should be performed daily. One basically points at a bright star and checks it falls where expected. You may use one of these methods:
 - with **WFI**, using an **OB** from **bob**.
 - with **FEROS**, using a standard or focus **OB**.
- B2. Focus is best done daily. If conditions are stable, at the beginning of the night, but may be delayed in case of bad seeing, fast varying temperature, or late opening.
 - a. **FEROS** focus should be performed nightly using an **OB** from **bob**
 - b. **WFI** focus should be done closest to science observations.
 - c. **GROND** focus is usually not performed.

C. Standards

- C1. The **FEROS** standards are
 - a. Spectrophotometric standards included in the Focus+Standard **OBs**.
 - b. Radial velocity standards by IAU and Soubiran, available from **bob**
- C2. **WFI** Landolt standard fields are available from **bob**.
- C3. **GROND** SDSS standard fields are available from **bob**.
The **GROND** team usually explicitly asks for them.

5.2 WFI

5.2.1 Sky flats

Sky flats in most narrow-band filters and the darkest broad-band ones (*U* & *V*) should be started right at sunset or slightly before sunrise. The brightest broad band filters (*R*, *I*, *B*) can be obtained with the sun at -6 to -9 degrees approximately. It is possible to obtain the five standard filters in one twilight provided they are started at sunset or in the morning twilight when the sun is at -9 degrees.

The procedure has been somehow modified (January 2014).

Procedure 5.1. Taking sky flats with WFI

- A. If not done, check that dome and main mirror cover are open (Procedure 4.1, p. 37).
- B. If not done, check GROND and FEROS mirrors (Procedure 4.3, p. 38, point C).
- C. If not done, check that the WFI main cover is open (Procedure 4.3, p. 38, point B).
- D. If not done, point the telescope to an empty field (Procedure 4.2, p. 37, point B).
 - D1. Go to TCS control panel the on screen Telescope Control Software.
 - D2. Below Catalogue handling click Cat. Select.
 - D3. Choose Empty Fields 2011
 - D4. Select field with Up and Dwn.
Right ascension should be about 1 hour from sidereal time, opposite to the Sun.
Consider field quality: excellent, good, OK, poor.
 - D5. Click Preset.
- E. Go to bob on screen BOB Wide Field Imager.
- F. Fetch sky flat OB from file (window menu File→Load OBs→From file...).
(Go to folder .../TEMPLATES/OBD/SkyFlats/)
 - For standard filters use SkyFlatsEveningCalPlan.oob
(SkyFlatsMorningCalPlan.oob in the morning)
 - Some other filters have their own flat OBs (e.g. SkyFlatsI203).
 - For a set of non standard filters use SkyFlatsGeneric.oob.
- G. If not doing the standard filters, customise OB.
 - G1. For non standard filters, edit the filter names.
 - a. Open the flat template, left-clicking on the triangle of WFI_img_cal_DomeFlat
 - b. Open the instrument section, left-click on the triangle of section INS
 - c. Use window menu Interface→Engineering.
 - d. Middle-click the filter name, fill in value, and type enter.
(In virtual desktop OS GUI, a filter list is found below SETUP Instrument)
 - G2. Deactivate unneeded templates.
Right-click the triangles to get a thumb down.
- H. Execute OB
 - H1. Click Start.
 - H2. For each template
 - a. Click OK to pop-up asking to preset.
 - b. After one minute, a pop-up estimates the exposure time.
In the evening, if the message is
 - an error message and a dimm test image (≤ 400 ADU), skip this template
 - In the morning, if the message is
 - an error message and a bright test image (≥ 20 kADU), skip this template

5.2.2 Pointing

Pointing with FEROS

If starting with FEROS, you can use the focus and/or standard star OB to check pointing.

Procedure 5.2. Ensure that pointing is correct using FEROS

- A. Update the model parameters
 - A1. Go to the Telescope Control Software workstation.
 - A2. Open or use a UNIX terminal.
 - A3. Type `~/bin/fixPointing.sh`
- B. Change pointing model to FEROS.
 - B1. Go to the TCS Status Panel (workspace Status, see Fig. 11.4, p. 92).
 - B2. Use window menu Instrument selection→FEROS
- C. Check the sidereal time
 - C1. On the digital clock of the control room, switch display to sidereal time.
 - C2. Go to the TCS Control Panel (workspace Control).
 - C3. The sidereal time of the TCS Control Panel should lag by approximately 5 s.
- D. Point at a FEROS focus/standard star. See Sect. 5.3.1, p. 45.

Pointing and autoguider test with WFI

If things go well, the bright star used for the test that should fall a few hundreds of pixels from the centre of the mozaic in the South-West direction.

Procedure 5.3. WFI pointing

- A. Switch the instrument to **WFI** on the **TCS** status panel.
(Instrument Selection, Fig. 11.4, p. 92. Do it even if it already says **WFI**).
- B. If not done, check that dome and main mirror are open, and dome is in automatic.
(Refer to Sect. 4.1, p. 37, points **B**, **A3** and **C**).
- C. If not done, check **GROND** and **FEROS** mirrors (Sect. 4.3, p. 38, point **C**).
- D. If not done, check that the WFI main cover is open (Sect. 4.3, p. 38, point **B**).
- E. Go to **bob** on screen BOB Wide Field Imager.
- F. Fetch pointing **OB** from file (window menu File→Load OBs→From file...).
(Go to folder `.../TEMPLATES/OBD/Pointing/`)
 - OBs are `Pointing-<ra>.obd`, where `<ra>` is the right ascension.
 - Choose an OB with `<ra>` close to sidereal time.
- G. After the exposure is taken, accept “refine acquisition”.
A small form asking for the star’s coordinates will appear.
- H. Use **Pick Object** in the **view** option of the **RTD** to obtain the star’s pixel coordinates.
- I. Input the pixel coordinates.
Copy them with the mouse from the Pick Object popup to the small form.
- J. **TEMPORARY: if offset values are large, it’s normal, WFI pointing was modified.** After `offset` and `quit` a popup should have appeared.
Click **OK** if satisfied with the offset values (in arcsec).
- K. If no star at all is seen, see Sect. 10.11.1, p. 85 to check that:
 - K1. You did not forget Points **A-D**.
 - K2. The sidereal time of the **TCS** is correct within seconds.
 - K3. The pointing parameters of the **TCS** are correct.
 - K4. Check that the star does not fall into the gap between two CCDs. (Give coordinates falling in the gap to the pop-up, offset and reacquire).
 - K5. Once you have a star, as long as the offset is large, use `offset` and `reacquire`

- K6. If the correct pointing model is selected, that should not take more than 2-4 repeats (max 10 min).
- L. At that point, the pointing is done, and a small test of the autoguider is done.
If it crashes, it has no impact on the pointing check. You can skip it if you do not intend to use the WFI autoguider.
- M. When asked, acquire a guide star on the [TCS](#).
On the [TCS](#) Control Panel, follow the steps of Sect. 6.1.3, p. 50
If it is still too bright to click on a guide star, click on background.
- N. Click **OK** to the popup asking for guiding on the [WFI](#) workstation.
- O. Wait for a short exposure to read out (30 sec).

5.2.3 Focus (quick tips)

Focus as close to your field in time and space.

Preset the telescope to the field to be observed.

Then, fetch a file from folder `.../TEMPLATES/OBD/Focus/`. Focus in the band to be observed. Otherwise, V-band should be OK (`focusV.oobd`).

Try to guide. If guiding is instable, better to have it off.

When focus sequence has been taken (≈ 6 min), click **OK** before you go to the MIDAS window (in the Midas desktop), then left-click and right-click on the upper star in whatever vertical sequence to measure focus.

Many times, you cannot adjust the measuring box with the up and down keys, so the focus is badly estimated (the fits do not have a parabolic shape). In that case, choose to remeasure it and the box should become adjustable (e.g. choose the upper star on other sequence).

5.2.4 Standard fields (quick tips)

Procedure 5.4. WFI photometric standards

- A. Go to screen BOB Wide Field Imager.
- B. If not done, switch the instrument to [WFI](#) on the [TCS](#) status panel (Fig. 11.4, p. 92).
- C. Fetch standard [OB](#) from list
 - C1. Use window menu `File→Load OBs→From file....`
 - C2. Go to folder `.../TEMPLATES/OBD/Standards/`.
 - C3. Select OB
 - If good image quality in *U* is needed, select `Standard-<RA>-<name>-UBVRI.oobd`.
 - If not, select `Standard-noAG-<RA>-<name>-UBVRI.oobd` (no guiding).
- D. Customize OB.
 - If non-standard filters are needed, edit filter names (Sect. 5.2.1, p. 42, item G1).
 - Deactivate unneeded templates.
(Right-click the triangles to get a thumb down.)
- E. Execute OB (20 min).
 - E1. Click Start.
 - E2. For each filter
 - a. Guide if required by a pop-up and click **OK**.
 - b. A pop-up with number of dithers to skip must be answered (with value 0).
If it doesn't appear it is hidden behind a window. If left unanswered, observation will just pause.

5.3 FEROS

You can choose focus only, or focus and standard, which takes only 5 min more. Radial Velocity (RV) standard can be taken any time needed (they take 5-10 minutes with overheads).

5.3.1 Focus

Procedure 5.5. FEROS focusing

- A. Check that dome and main mirror are open (Procedure 4.1, p. 37).
- B. Check GROND and FEROS mirrors (on WFI and FEROS, respectively. Sect. 4.3, p. 38, point C).
- C. Check that the WFI main cover is open (Sect. 4.3, p. 38, point B).
- D. Select instrument feros on the TCS Status panel (screen Telescope Control Software).
- E. Got to bob on screen FEROS OB and fetch focus OB:
 - E1. Use window menu File→Load OBs→From file....
 - E2. Select directory .../TEMPLATES/OBD/Focus/.
 - E3. Select Focus-<ra>....obd with <ra> close to sidereal time.
- F. Click Start.
- G. Acquire object on fibre and guide (see Sect. 6.2.1, p. 51, point D, & Sect. 6.2.2, p. 53).
- H. Perform the focus
 - H1. On the Autoguiding window, select numbers 6, 3, 0.2.
 - H2. After about 30 s, click OK to pop-up asking to ensure loop time is more than 3.
 - H3. A pop-up asks and suggest a focus estimate
 - a. If number is in range 300–500, it should be fine, click OK.
 - b. If not, fill in last remembered value or, if you don't have any, 400, then click OK.
 - H4. Shortly after, a pop-up asks to select a star to focus on
 - a. A MIDAS image appears, left and right-click on a non-saturated source.
 - b. Click OK to pop-up
 - H5. After about 5–10 min a fit to focus is done and a pop-up asks whether it is correct
 - a. If it seems correct, click OK.
 - b. If it seems incorrect, but you can spot a good focus value by eye
 - Click No
 - Give guesstimate to new pop-up
 - c. If you have no clue, just abort.

5.3.2 Focus and spectrophotometric standard

You may deactivate the focus sequence by thumbing down the second template in bob (10 min without focus).

Procedure 5.6. Focus and/or spectrophotometric standard

- A. Perform steps of Sect. 5.3.1, p. 45 except that
 - OB directory is .../TEMPLATES/OBD/Focus+Standard
 - OB name is Focus+Standard-<ra>....obd with <ra> close to sidereal time.
- B. After focus is done, change integration time to 0.01 on the Autoguiding window.
- C. Two pop-ups will ask to wait for object to be centred on the fibre. Wait for it to occur and click OK.

5.3.3 Radial velocity standards

Procedure 5.7. FEROS radial velocity standards

- A. Got to bob on screen FEROS OB and fetch standard OB:
 - A1. Use window menu File→Load OBs→From file....

- A2. Select directory .../TEMPLATES/OBD/RVStandard.
- A3. Select RVStandard...<ra>....obd with <ra> close to sidereal time.
- B. Proceed with guiding and answer popups, that's a normal observation (about 5 - 10 min).
 - B1. In the e2p2 RTD window, click Centering (below Image Control), then click on the object.
 - B2. In the Autoguiding window, set the integration time if necessary.
 - B3. OK on popups (FEROS OB) when the object is centred.

5.4 GROND

5.4.1 Sky flats

Evening flats

Before taking evening flat fields, check the relevant items of “no flux or little flux” in Sect. 10.1, p. 65. In particular the main mirror cover should be open and the dome set in automatic. The sky flats typically start when the sun is 4 degrees below the horizon. To be able to start on time, the following procedure should be started right at sunset.

Procedure 5.8. GROND evening flat fields

GROND flat field OB lasts about 30 min.

- A. If not done, check that dome and main mirror are open (Procedure 4.1, p. 37).
- B. If not done, point the telescope to an empty field (Procedure 4.2, p. 37, point B).
- C. If not done, set the dome in automatic.
- D. Go to GROND BOB screen.
- E. If not done in the evening, do some prophylaxis (Procedure 2.1, p. 21, points D4 and D6)
 - E1. Close bob.
 - E2. In the terminal, type grondGRI.
 - E3. In the terminal, type grondSHUTTER && grondFM (may last 1 min).
 - E4. From the terminal, launch a new bob with bob &.
 - E5. Execute a 1min1TD_test.obd with TCS ON.
- F. Set mirror and open shutters
 - F1. In the terminal, type grondM3 GROND.
 - F2. In the terminal, type grondMC OPEN.
 - F3. In the terminal, type grondCS OPEN.
- G. Get sky flat OB ready

In bob, fetch OB GROND_img_cal_skyflats_ev
(use Flats/ folder).
- H. Monitor the J-band counts.
 - H1. Go the the GROND infrared (IRACE) screen.
 - H2. Set the IR integration time to 2 s.
 - Find window Infrared Acquisition Module (see Fig. 11.12(b), p. 100).
 - Close to the INTEGRATION TIME, fill in value 2.
 - Press enter (Don't do Apply.)
 - H3. Draw cuts in the infrared image.
 - Go the the irtd window.
 - Go the the J-band (right handside)
 - Use window menu View→Cuts..., then click OK on the pop-up.
 - Draw a diagonal on the image with the mouse.
 - H4. Wait for the cuts to look flat and with about 20 000 counts. This should occur when the sun is about 4 degrees below the horizon.
- I. When counts are OK, on the GROND BOB screen, click Start in bob.

Standards

Procedure 5.9. GROND standard field observation

The procedure lasts 7 min.

- A. Select an SDSS standard field close to the meridian
In [bob](#) use window menu File→Load OBs→From file... and select one in subfolder Standards
- B. Execute it by clicking Start
- C. You can ignore guiding and click OK if the ob asks for it

Morning flats

Morning flat fields are trickier to get right. They should be started when the sun is at 9 degrees below horizon.

Procedure 5.10. GROND morning flat fields

- A. Point the telescope to an empty field as explained in Sect. 4.1, p. 37.
- B. Go to GROND BOB screen.
- C. Set mirrors and open shutters (if you were not already with GROND)
 - C1. In the terminal, type grondM3 GROND.
 - C2. In the terminal, type grondMC OPEN.
 - C3. In the terminal, type grondCS OPEN.
- D. Get sky flat OB ready
In [bob](#), fetch OB GROND_img_cal_skyflats_mo.
(Use Flats/ folder.)
- E. When sun is at 9 degrees below horizon, click Start on [bob](#).

5.4.2 Focus

The focus of **GROND** is stable and managed periodically by the MPE team. Defocused observations can be obtained by specifying a focus offset in the **OB**.

The **AG** can also be focused separately from the instrument, in case of defocused observations (I don't remember how to open the new GUI though).

5.4.3 Photometric standard fields

There are **OBs** for Landolt and SDSS standard fields that can be fetched from file with [bob](#) (10 min).

5.4.4 RRM online

In the GROND Control panel (Fig. 11.11(b), p. 99), click RRM ONLINE at the end of the twilight (beginning of the night) to allow for remote observations with this instrument.



6 — Night: Observing

6.1 WFI

6.1.1 Popup handling

`bob` will generally throw a few pop-ups during a typical observation. Failing to answer them, nothing will happen and time will be irremediably lost. These pop-ups may appear behind windows, so be proactive.

At the beginning of an observation, you may have have popups asking

- to recentre the object of interest if the observer has specifically asked for a precise position of his target. Three successive popups will ask whether to recenter, the pixel coordinates of the object, and whether to `Offset` and `quit`.
- to acquire the guiding, which you will click once you have done it. Almost all science observations will ask for it.

For an observation with large dithers (`COMBINED.OFFSET` is `F`) the guiding will be asked at the beginning of each exposure. It will also be asked for if at the beginning of a new template if the filtre is changed.

Error popups may also appear, see Chapter 10, p. 65.

6.1.2 Switching to WFI

You may start an OB once point **B** has been done. This minimises overheads by parallelising `preset` and mirror movements. However, beware that some acquisition templates (`movetopixel` and `movetogap`) don't ask before taking the acquistion image, so you should be faster than `preset`.

Procedure 6.1. Switch to WFI observations

- A. Open the **WFI** main cover.
- B. Switch the pointing model to **WFI**.
 - B1. Go to screen **Telescope Control Software**.
 - B2. Go to the **TCS Status Panel** (workspace **Status**, see Fig. 11.4, p. 92).
 - B3. Use window menu **Instrument selection**→**WFI**
- C. Check the **GROND M3 mirror**.
Go to screen **GROND BOB**.
 - C1. Ensure that the mirror is on **WFI**.

- a. Go to the GROND Control panel (workspace BOB+OS).
- b. Check the value of GROND M3.
- C2. If it is on **GROND**, set it to **WFI**.
 - In a terminal, type `grondM3 WFI`.
 - Redo point C1 (value should be MOVING then WFI).
- D. Check the **FEROS** `mirr3` mirror.
 - Go to screen FEROS BOB.
 - D1. Ensure that the mirror is on **WFI**
 - a. Go to the FEROS Control panel (workspace BOB+OS).
 - b. Check the value of M3 Selected Mirror.
 - D2. If it is on **FEROS**, set it to **WFI**.
 - a. Go to the FEROS ICS Control panel (workspace ICS).
 - b. Select the `mirr3` checkbox (in green) under the Motors section.
 - c. Select WFI on the same line.
 - d. Click SETUP at the bottom of the panel.
 - e. Unselect the `mirr3` checkbox.

6.1.3 Guiding

Procedure 6.2. Guiding with WFI

- A. On the **TCS** workstation, acquire the guide field
 - A1. Go to screen Telescope Control Software.
 - A2. Locate the TCS Control Panel (Fig. 11.1, p. 89).
 - A3. Click Retrieve Field below AG Field Acquisition.
- B. On the autoguider windows (Fig. 11.3, p. 91), chose the guide star
 - B1. Wait (≈ 30 s) for skycat to read out the guide field.
 - B2. On the same window, click Auto Set Cut Levels.
 - B3. Open the Pick Reference Star window if necessary.
 - In skycat chose window menu TCS→Pick Reference Star.
 - B4. Pick the reference star
 - On the Pick Reference Star window click Pick
 - On the skycat window, click a bright star not too close to the border.
- C. On the TCS Control Panel (Fig. 11.1, p. 89) start the guiding
 - C1. Activate the guiding
 - Click Box to Star below Autoguider.
 - C2. Wait for guiding to start
 - In a few seconds ACTIVE should appear in AG Stat.
- D. Proceed with the observation, typically by clicking on pop-up asking for guiding.

After a filtre change or when running several observing blocks on the same field, it is possible to reacquire guiding within a few seconds instead of the full procedure (1 min).

It is not possible to do it after a focus sequence.

Procedure 6.3. Restart guiding with WFI

- A. On the **TCS** machine, go to screen Telescope Control Software.
- B. On the TCS Control Panel (Fig. 11.1, p. 89)
 - B1. Click Start monitoring
 - B2. Click Stop monitoring
- C. Select the star on the autoguider windows (Fig. 11.3, p. 91)
 - C1. Click Pick object in the Pick reference star window.

- C2. Click on the star in the `skycat` window.
- D. On the TCS Control Panel (Fig. 11.1, p. 89) start the guiding
- D1. Activate the guiding
Click Box to Star below Autoguider.
- D2. Wait for guiding to start
In a few seconds ACTIVE should appear in AG Stat.
- E. Proceed with the observation, typically by clicking on pop-up asking for guiding.

6.2 FEROS

6.2.1 Switching to FEROS

You can start an OB once point **B** has been done. This minimises overheads by parallelising **preset**, mirror movements, and **AG** settings

Procedure 6.4. Switch to FEROS observation

- A. Switch the pointing model to **FEROS**.
- A1. Go to screen Telescope Control Software.
- A2. Go to the TCS Status Panel (workspace Status, see Fig. 11.4, p. 92).
- A3. Use window menu Instrument selection→**FEROS**
- B. Ensure the **FEROS** `mirr3` mirror is on **FEROS**.
- B1. Go to the **FEROS** Control panel on workspace `BOB+gen` state on screen **FEROS BOB**.
- B2. If the value of M3 Selected Mirror is **WFI**, set it to **FEROS**
- a. Go to the **FEROS** ICS Control panel (workspace `ICS`).
 - b. Select the `mirr3` checkbox (in green) under the Motors section.
 - c. Select **FEROS** on the same line.
 - d. Click **SETUP** at the bottom of the panel.
 - e. Unselect the `mirr3` checkbox.
- C. Ensure the **GROND** M3 mirror is on **WFI**.
- C1. Go to the **GROND** general state panel on workspace `bob+gen` space of screen **GROND BOB**
- C2. If the value **GROND** M3 is **GROND** send it to **WFI**.
In a terminal, type `grondM3 WFI`.
- C3. Check that value **GROND** M3 goes to MOVING then **WFI** (2 min)
- D. Set up the autoguider
- D1. Go to the **FEROS** workspace of screen Autoguider **GROND & FEROS**
- D2. Set up the autoguiding properties. (See Fig. 2.5, p. 30)
- a. Go to window Autoguider
If necessary open with left-click mouse menu **CAM user**→Autoguider.
 - b. Change the guiding unit to **FEROS**
Select **FEROS** under Guiding unit in the CCD Control area.
 - c. Select autoguiding loop times.
Under Autoguider control fill in the numbers from top to bottom
 - For focus: 6, 3, 0.02
 - For science targets adapt last number to magnitude (0.001–2.999).
 - d. Restart exposure so that guider takes new values into account.
 - If CCD Status is Infinite loop, click Stop exposure
 - Wait a few seconds for it to change to Inactive (check the exact word)
 - Click Start exposure.
- D3. Set up the autoguider real time image.
- a. Go window E2P2 Real Time Display.

- If necessary open with left-click mouse menu CAM user→E2P2...
- Activate the guide camera image flow if necessary.
If checkbox Camera On/Off is not green, click on it.
 - Ensure autoguider refreshes image
On the Autoguider control the checkbox Display Enable should be red
 - Ensure the image is horizontally flipped.
Right of scale the button ↔ should be pressed.
- D4. Set the fibre reference position if GROND was used
- Open or activate window Pick reference star (Fig. 6.1, p. 52).
Click Set Reference on window E2P2 Real Time Display.
 - Ensure the reference is set on the cursor's clicking position.
On window Pick reference star, select checkbox Pick Cursor.
 - Back on window E2P2 Real Time Display, click on fibre position.
Coordinates are x=822 and y=516, zooming to 3 or 4× helps to click accurately.
A box centred on the pixel should appear.
- E. Start the observation.

E1. Go the the bob+gen state workspace of screen FEROS BOB

E2. In bob, fetch OB and click Start

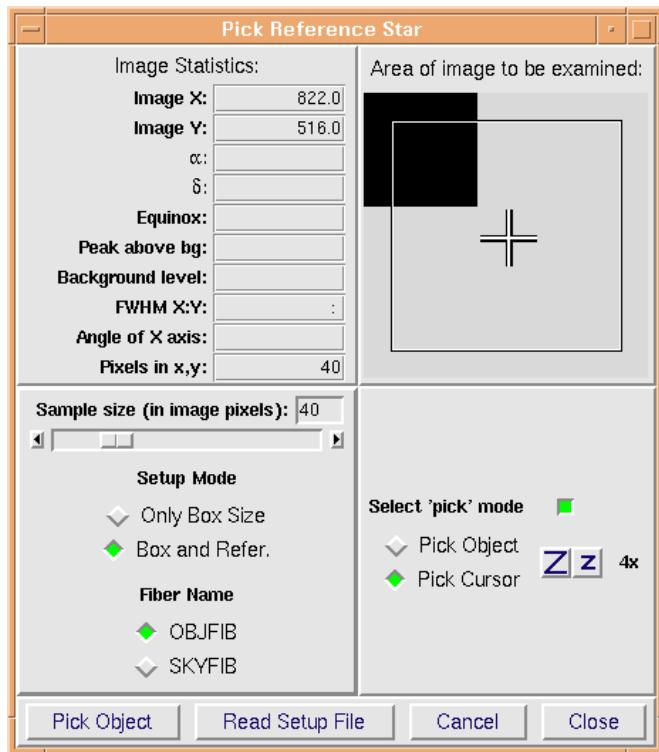


Figure 6.1: Window to set FEROS fibre reference position Pick reference star. Select checkbox Pick Cursor.

6.2.2 Guiding

On fibre

The fastest way to guide with FEROS is using the reflection on the fibre head. It is not adequate for faint stars (try to get $\approx 4\text{--}5000$ counts) or with bad weather.

Procedure 6.5. Guide a FEROS observation using reflection on the fibre head

- A. Check that **WFI AG** is off.
- B. Centre the target onto the fibre.
In window E2P2 Real Time Display, click Centering below Image Control and click on the target.
- C. In Autoguiding window, choose integration times (6, 3, x for bright targets with $x < 3$).
- D. Click Start guiding.

It is possible to guide blind using another star of the field in the fibre head viewer. It is not recommended and should be used as a last resort.

Off fibre

Procedure 6.6. Guide a FEROS observation blindly using off-fibre reference

- A. Check that **WFI AG** is off.
- B. Centre the target onto the fibre.
- C. Choose integration times (6, 3, x for bright targets with $x < 3$).
- D. Set reference to a star of the field.
- E. Start guiding.
- F. **Important:** at the end of the OB, set the reference back to fibre position.

Using WFI

This is the preferred method in bad weather or for faint targets. When the FEROS **atmospheric diffraction corrector (ADC)** is used the WFI guide field is extremely defocused and this guiding method may be unstable.

Procedure 6.7. Guide FEROS observation with the WFI guide camera

- A. Centre the target on the fiber.
In window E2P2 Real Time Display, click Centering below Image Control and click on the target.
- B. Change filtre to limit the defocus in the **WFI AG**
 - B1. Go to the workstation WFI BOB, workspace OS GUI.
 - B2. In panel e2p2 OS GUI, select filtre under SETUP Instrument.
 - If **FEROS ADC** is used, select Cousins *I*.
 - Other wise, use standard *R*.
 - B3. In the same panel, click apply.
 - B4. Wait for filtre change (≈ 1 min)
 - On the panel, field Filtre Name will first display Moving.
 - When the right filtre name appears, proceed with guiding.
- C. Proceed with guiding as for a **WFI OB** (Sect. 6.1.3, p. 50).
- D. Recentre the target on the fibre
 - D1. Go to the workstation Telescope Control Software.
 - D2. On the TCS Main Panel find the virtual racket.
 - D3. Select Offset and tick checkbox Combined Offsets.
 - D4. Enter offset values for both axes (0.3) and click Store.
 - D5. Use the arrows to centre if necessary.
- E. **Important:** stop guiding at the end of the **FEROS OB**.
In the TCS Control Panel, click Stop Monitoring (under AG Monitoring Parameters) and click

- Off (in the panel Autoguider).
- F. **Note:** when observing with the ADC, don't lose time centering on the first pop-up. No second pop-up will be issued after ADC has entered the beam path, so you should Pause the exposure if you take time acquiring guiding and centring the target.

6.3 GROND

6.3.1 Switching to GROND

You can start an OB once point A has been done. This minimises overheads by parallelising **preset**, mirror movements, and autoguiding configuration. If the Moon is between the first target and the current position or you are on a bright star, you should manually preset with the main cover closed to avoid blinding the IR detector.

Procedure 6.8. Switch to GROND observations

- A. Ensure the **GROND** main cover is closed to avoid pointing a bright target with open shutters
Your FEROS targets may be very bright or you might slew over the moon in your first GROND observation.
 - A1. Go to screen GROND BOB.
 - A2. In a terminal, type `grondMC CLOSE`.
 - A3. Wait for cover to close (10-15 s). on panel GROND General state
Due to a big, it will say Moving, Open, then Closed
- B. There is no need to switch the pointing model to **GROND**
GROND does it automatically, but you can do it to be consistent with FEROS and WFI.
- C. To gain time, ensure the **GROND** M3 mirror is on **GROND**
 - C1. Go to window GROND General State on screen GROND BOB
 - C2. If M3 says WFI, send it to GROND.
In a terminal, type `grondM3 GROND` and wait for it to go from MOVING to GROND
- D. Set up the autoguider on workspace
 - D1. Go to the GROND workspace of screen Autoguider GROND & FEROS
 - D2. Set up the autoguiding properties. (See Fig. 2.5, p. 30)
 - a. Go to window Autoguider,
If necessary open it with left-click mouse menu CAM user→Autoguider.
 - b. Change the guiding unit to **GROND**
Select GROND under Guiding unit in the CCD Control area.
 - c. Select autoguiding loop times.
Under Autoguider control fill in the numbers from top to bottom
8, 4, 1 is usually fine, then 1 can be increased or decreased (0.001–3.999) depending on guide star.
 - d. Restart exposure so that guider takes new values into account.
 - If CCD Status is Infinite loop, click Stop exposure
 - Wait a few seconds for it to change to Inactive (check the exact word)
 - Click Start exposure.
 - D3. Set up the autoguider real time image.
 - a. Go window Telescope R.T.D.
If necessary open it with window menu CAM User→Autoguider RTD Grond
 - b. Activate the guide camera image flow if necessary.
Use window menu TCS→Attach camera.
 - c. Ensure autoguider refreshes image
On the Autoguider control the checkbox Display Enable should be red
 - D4. Ensure the reference picking window Pick Reference Star is open
If necessary open it from **RTD** with window menu TCS→Pick Reference Star
- E. Start the observation

- E1. Go to the bob+gen state workspace of screen FEROS BOB
- E2. In bob, fetch OB and click Start
- E3. Wait for preset to near or reach target
Look on the Rose Diagram of the TCS Setup Panel on the TCS screen.
- E4. Open the main cover
 - a. Go to screen GROND BOB.
 - b. In a terminal, type grondMC OPEN.
 - c. Wait for cover to close (10-15 s) by checking value on panel GROND General State
Due to a bug, it will say Moving, Closed, then open Open.
- E5. Acquire guide star is needed or asked

6.3.2 React to an automatic trigger

Procedure 6.9. React to an automatic trigger

- A. Check that your exposure is being read out automatically, if not, do it manually
 - (*FEROS*) click END on FEROS Control
 - (*WFI*) click END on WFI General State panel.
If WFI wasn't read out and preset is started, frame is lost.
- B. Click OK on the trigger to start preset.
Preset will be automatic after 30 seconds.
- C. Set up the autoguider (unless you were observing with GROND).
Go to the screen Autoguider GROND & FEROS
- D. Switch off the *WFI* autoguider if needed
 - D1. Set up the autoguiding properties. (See Fig. 2.5, p. 30)
 - a. Go to window Autoguider, open it if necessary.
To open: left-click the workspace, choose Autoguider from menu CAM user.
 - b. Change the guiding unit to **GROND**
Select GROND under Guiding unit in the CCD Control area.
 - c. Select autoguiding loop times.
Under Autoguider control fill in the numbers from top to bottom
8, 4, 1 is usually fine, then 1 can be increased if necessary.
 - d. You may need to Start exposure.
 - D2. Set up the autoguider real time image.
 - a. Go window Telescope R.T.D., open it if necessary.
To open: left-click the workspace, choose Autoguider RTD Grond from menu CAM user.
 - b. Activate the guide camera image flow if necessary.
Use menu TCS → Attach camera.
 - D3. Ensure the reference picking window is open
 - a. Look for window: Pick Reference Star
To open: from RTD window use menu TCS → Pick Reference Star
- E. Start the guiding (Sect. 6.3.3, p. 55 below).

6.3.3 Guiding

Procedure 6.10. Guide with GROND

- A. Choose typical 8, 4, x values in the autoguider, with $x \leq 4$.
- B. When RTD has loaded an image, click Auto Set Cut Levels.
- C. In the TCS option, select Pick Reference Star.
- D. Click on a good star at least 100 pixels from the border.

E. In Autoguiding window, click Start guiding.

6.4 All instruments

6.4.1 Run an observing block

There are three ways to run an OB: use a template in [bob](#) and modify it on the fly; call it from [phase 2 preparation tool \(p2pp\)](#); call it from the [ot](#) execution sequence. The last method allows to automatically fetch and run OBs in a sequence, without lost time, but popups must be attended, of course.

6.4.2 Skip the preset

If the telescope is already on the right target, you can skip the [preset](#) when starting an OB. For observations requiring guiding, you should make sure that it is already on or acquire it right after the first exposure begins. On [WFI](#), it should be avoided if the observing template sets RETURN to F (false) and pointing position is important.

Procedure 6.11. Skip the preset

- Generic method
 - A. In [bob](#), open the acquisition template
Use left click on the triangle.
 - B. Edit the PREST field to F
You need to set bob to “engineering” mode.
Middle click on the value, it should be T by default.
 - C. Start the OB.
 - D. Start the guiding if needed
For [WFI](#), see quick guiding Procedure 6.3, p. 50
- Standard observation with FEROS or GROND
 - A. In [bob](#), deactivate the [preset](#) template
Use right click on the triangle.
 - B. Ensure guiding is working if needed
 - C. Start the OB.



7 — Morning: Closing & Calibrations

7.1 Panels referred to

When closing, you may need panels that are not automatically opened at startup. Here is how to find and open them.

- A. On the [TCS](#) screen, ensure that the [Auxiliary Functions](#) (Fig. 11.5, p. 94) is open.
If not, left-click on an empty region and select TCS panels → Aux Functions.
- B. On the [Windows desktop](#), ensure mozilla shows the [dome webcam](#) (Fig. 11.14, p. 101).
The tab named TRENDNET... can be opened with bookmark Dome Webcam.
- C. On the [Windows desktop](#), ensure mozilla has a tab with [Dome Auxiliary Functions](#).
Tab tab named ADAM 6000... can be opened with bookmark Dome Controls (Fig. 11.13, p. 100).

7.2 Telescope

To put the telescope to a safe parking position one has to follow steps in a definite order, in particular, it is best to close the main mirror cover before anything else. (Except in an emergency closing of the dome.)

Procedure 7.1. Close the dome.

- A. Close the main mirror cover.
In the TCS Setup Panel (Fig. 11.2, p. 90), click Close below Main Mirror Cover.
- B. Wait ≈ 2 min until it says closed.
In the same panel, it should state Closed below Main Mirror Cover.
- C. Park the telescope.
In the same panel, click Zenith under Fixed preset.
- D. Wait for preset to complete.
In the TCS Control Panel, the telescope should be at the zenith in the rose diagram.
- E. Put the dome in manual.
In the TCS Setup panel, click the Manual checkbox under Dome.
- F. Close the slit.
In the same panel, click Close under Slit.
- G. Switch on the light in the dome (Fig. 11.14, p. 101).
In the [Auxiliary Functions](#) (Fig. 11.5, p. 94), select 200V under Flat Field Lamp.

H. Check the slit is closed and telescope at zenith

Use the [dome webcam](#) (Fig. 11.14, p. 101) on the mozilla tab TRENDNET on the [Windows desktop](#).

I. Switch off the light in the dome.

In the [Auxiliary Functions](#), select OFF under Flat Field Lamp

If the panel is frozen, you can execute commands from a terminal, in directory bin: closemirror, presetzenith, closeslit, domemanual. Or you can try to revive the panel (See Procedure 10.26, p. 81).

If nothing works, you must ask for support from an ESO TIO. ESO is still responsible for the safety of the facilities.

7.3 Instruments

One should close the protective shutters of [WFI](#) and [GROND](#), cut the communication between instruments and [TCS](#), and ensure mirrors let light directly to [WFI](#) for dome flats.

Procedure 7.2. Put the instruments offline

A. Close the [WFI](#) protective shutter.

Check on the General State panel in the WFI monitor (Fig. 11.8, p. 96) that Protective Shutter State is CLOSED.

If not, go to [Auxiliary Functions](#) (Fig. 11.5, p. 94) and CLOSE the WFI Protective Shutter.

B. Deactivate [FEROS](#) communication.

In the FEROS control panel (Fig. 11.9, p. 97) select from menu Telescope → IGNORE.

C. Deactivate [GROND](#) communication.

In the GROND Control panel (Fig. 11.11(b), p. 99), click RRM STANDBY and TCS OFF

D. With [GROND](#), close the cold and protective shutters.

In a terminal, type grondCS CLOSE and grondMC CLOSE.

E. Ensure [FEROS](#) mirror is not in the way.

In panel FEROS Control (Fig. 11.9, p. 97), M3 Selection Mirror should state WFI

If not, int the [ICS](#) control panel (Fig. 11.10, p. 98), check the mirr3 box, select WFI, click SETUP.

F. Ensure [GROND](#) mirror is not in the way.

In panel GROND Control (Fig. 11.11(b), p. 99), GROND M3 should state WFI.

If not, type grondM3 WFI in a terminal.

7.4 Dome

Turn off ventilation and hydraulics using the [Dome Auxiliary Functions](#) (Windows desktop, Fig. 11.13, p. 100). If it is required, use the good seeing password.

A. Turn off the dome ventilation.

Click Dome Air if the button just above it is green.

B. Turn off the hydraulics.

Click Hydr0ff. The button above Hydr should go red.

7.5 Tidying folders

Scripts move the data of the previous nights are to a subdirectory directory and and remove old ones (already in the ESO archive) if disk space is needed. It can be done any time (night, day) on a daily basis for WFI and FEROS. The GROND team manages the data.

Procedure 7.3. Tidy folders

A. On the [WFI](#) screen, type ~/bin/sciopsTidyMess.sh in a terminal (wfi xterm).

- B. On the **FEROS** screen, type `~/bin/sciopsTidyMess.sh` in a terminal.

7.6 Health checks & internal calibrations

Launch health checks and internal calibrations.

Procedure 7.4. Launch morning health checks and internal calibrations

- A. Run **FEROS** linearity check.

In **bob**, load and run the daily linearity OB using Fetch an OB from file.
Name is `linearity-#-weekday` where `weekday` is that at the start of the night.

- B. Run the **WFI** health check, biases, and dark.

In **bob**, load and run the daily calibration OB using Fetch an OB from file.
Name is `WFI_cal_#-weekday` where `weekday` is that at the start of the night.

- C. Run **GROND** calibrations.

In **GROND bob**, load and run `GROND_cal.oob` using Fetch an OB from file
(`.../TEMPLATES/OBD/`).



8 — Managing observing blocks

8.1 Transferring OBs from one's laptop

8.1.1 Standard way

Procedure 8.1. Transfer OBs from one's computer to the telescope, using p2pp check-in

- On your laptop's p2pp select all your OBs.
- Use menu File → Check-in
- Use menu Readme → CheckIn Readme if necessary
- If using ot (advised)
 - From main ot window, use menu Queues → Repository Browser
 - Select OB name checkbox in the Repository Browser window
 - Empty all fields and enter your p2pp username
 - Click Query
 - Select all the OBs you need with the mouse (they should have status Defined)
 - Select Mark Status and chose (V)erified
 - Select the same OBs again
 - Append to queue, typically MPIA-YYYY-MM (named by year and month)
 - Find the window corresponding to this queue and use Menu → Save
- If using p2pp
 - TBW

8.1.2 Loading manually

If this fails, for instance for OBs longer than one hour, you should ssh them from your laptop and load them manually into the dhs computer.

Procedure 8.2. Transfer OBs from one's computer to the telescope, using manual file transfer.

- Check that your laptop accept ssh connections.
- Connect it to the cable network.
- Find your laptop's IP address. With linux or mac, /sbin/ifconfig or ifconfig should give it.
- On the p2pp machine create a directory let's say /yourusername/OBs
- On the same machine, type scp -r yourlogin@youripaddress:pathtoOBs /yourusername/OBs and type

your password.

- Open [p2pp](#) with your credentials
- Select your program ID on the left column
- Use menu **File** → **Import**

Note: if you cannot activate ssh services on your laptop, use a USB stick and someone else's computer. Alternatively, send an e-mail you will open on the p2pp machine (not advised).


8.2 OT

On the [p2pp](#) machine, there is a workspace to use OBs from the observing tool ([ot](#)). In the **Repository Browser** of the [ot](#), find your OB using fields such as instrument, period, ID, username, position, etc. Click on the OB and then on a tab called **Execution Sequence** that it is in the same panel.

There should be an open window which is called **Execution Sequence**. The selected OB will be listed there, maybe with a list of others. Use the buttons **move up** (or **move down**) to move the OB you want to run next to the top of the list since it has to be the first one.

Then, go to [bob](#) and use the menu **Configure** → **Environment**. In the **Process** tab change [p2pp](#) by [ot](#). Now you can fetch the OB from [ot](#).

Monthly
Every six months

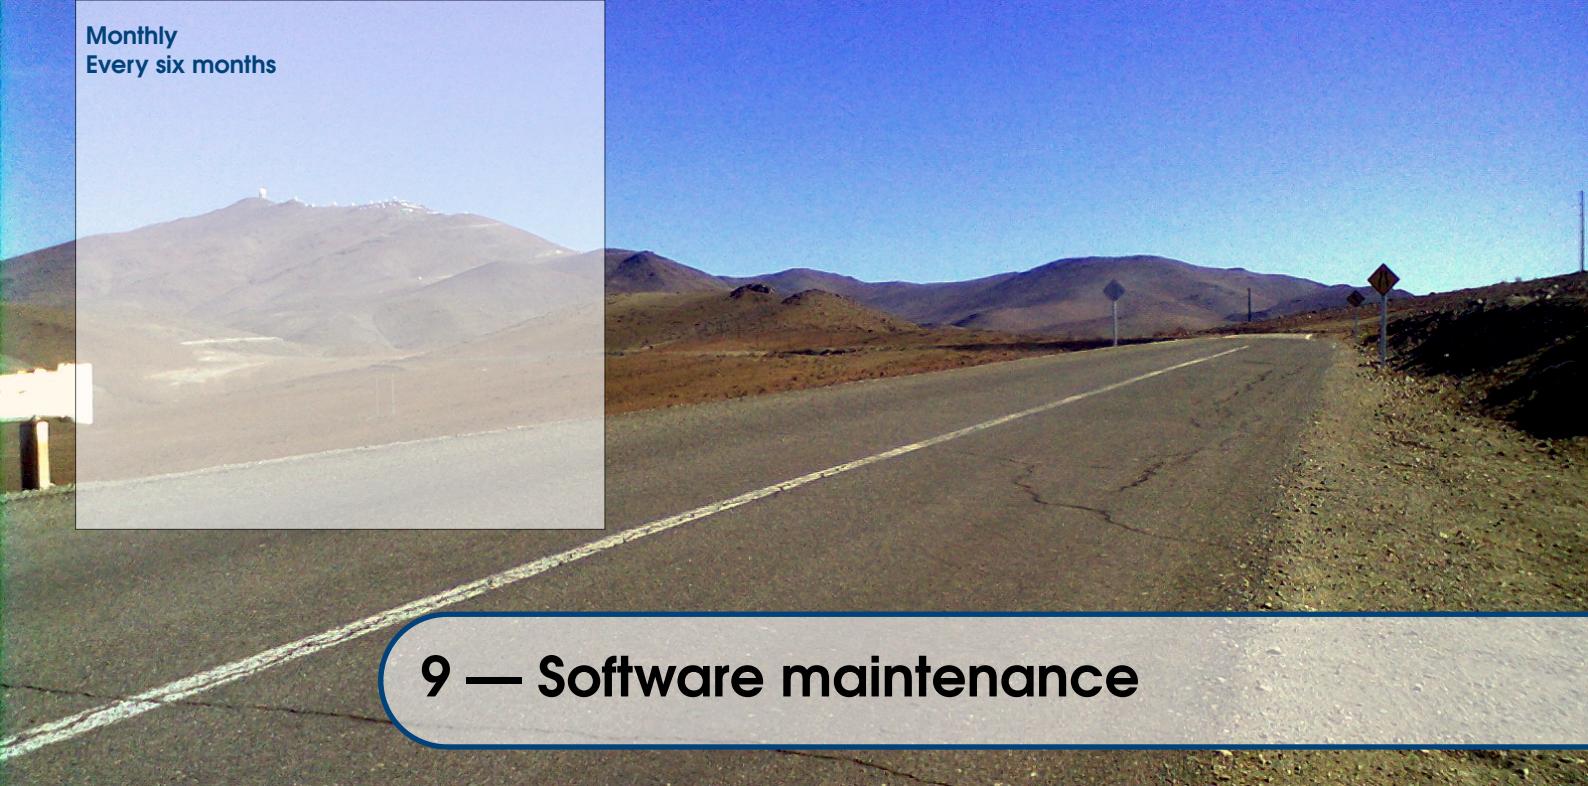

9 — Software maintenance

9.1 Monthly

About once a month a software maintenance should be done for prophylaxy.

Procedure 9.1. Monthly software maintenance

- A. Stop some processes and applications (2 min)
 - A1. On the p2pp/ot screen, exit applications
 - a. Locate the main `ot` window with the execution sequence and exit it.
 - b. Locate any open `p2pp` window and exit it
 - A2. On the pipeline screen, stop pipeline processes
 - a. Open or locate a terminal
 - b. Type `doControl stop`
 - c. Type `stopRBS`
 - A3. On the FEROS DRS screen, stop data processes following the first two points of Procedure 10.15, p. 75
 - a. Stop and close the `data subscriber` and the FEROS DRS panel (point A)
 - b. Kill processes and remove lock files (point B)
- B. Exit all sessions except GROND (1 min)
 - B1. On the `TCS` screen, exit the X environment
 - B2. On the `WFI` screen, exit the X environment
 - B3. On the `FEROS` screen, exit the X environment
 - B4. On the GROND and FEROS `AG` screen, exit the X environment
 - B5. On the `GROND` screen, exit the X environment
 - B6. On the p2pp/ot screen, exit the X environment
 - B7. On the pipeline workstation, exit the X environment
 - B8. On the FEROS DRS workstation, exit the X environment
- C. Power cycle all black Dell boxes except GROND's (2 min)
- D. Log into all sessions (2 min)
 - D1. On the `TCS` screen, login as `tcs`
 - D2. On the `WFI` screen, login as `wfi`
 - D3. On the `FEROS` screen, login as `feros`
 - D4. On the FEROS and GROND AG screen, login as `cam`
 - D5. On the GROND screen, login as `grond`

- D6. On the [p2pp/ot](#) workstation, login as dhs
- D7. On the pipeline workstation, login as pipeline
- D8. On the FEROS [DRS](#) workstation, login as astro
- E. Reboot workstations (except GROND)
 - E1. On the [TCS](#) screen, open a tcs terminal and type `reboot`
 - E2. On the [WFI](#) screen, open a wfi terminal and type `reboot`
 - E3. On the [FEROS](#) screen, open a feros terminal and type `reboot`
 - E4. On the FEROS DRS screen, open a terminal type `reboot` as root
 - E5. On the pipeline screen, open a terminal type `reboot` as root
 - E6. On the p2pp/ot screen, open a terminal type `reboot` as root
- F. Wait for the reboots to complete (20–30 min). You can check with any of the following:
 - The terminal disappears when clicked on
 - From a grond terminal, type `ping <machine>`.
 - `<machine>` can be [w2p2tcs](#), [w2p2ing](#) (WFI), [wferos](#), [w2p2dhs](#) (OT/p2pp), [w2p2pl](#) (pipeline), [w2p2off](#) (FEROS DRS).
 - Reboot is not done if `No route to host` is answered.
 - When ping starts sending internet speed stats reboot is almost complete (less than one minute left).
- G. Restart some processes and applications
 - G1. On the [p2pp/ot](#) screen, open [ot](#)
 - G2. On the pipeline workstation
 - a. Open a terminal
 - b. Type `dhsSubscribeControl start pipeline -backsince <date>`
pick `<date>` a few days ago
 - c. Type `doControl start wfi,feros`
 - d. Type `startRBS pipeline.config`
 - G3. On the FEROS DRS workstation, follow the last point of Procedure [10.15](#), p. [75](#) in order to
 - a. Open and configure [data subscriber](#) (point [C1](#))
 - b. Open the FEROS DRS panel (point [C2](#))
- H. Perform a full [TCS](#) restart

9.2 Every six months

Every six months a weekly software maintenance has an additional step with the reboot of the user workstation.

Procedure 9.2. Monthly software maintenance

- A. Stop processes and exit sessions (steps [A–B](#) of Procedure [9.1](#), p. [63](#))
- B. Have a reboot of the user workstation done (15 min?)
- B1. Contact IT at Paranal (Josefina Urrutia)
- B2. Coordinate a reboot of user workstation [uws2p2](#)
- B3. Wait for their confirmation that it is done
- C. Power cycle dell boxes, log into sessions, reboot workstations, restart processes, and start-up TCS (steps [C–H](#))

No flux or little flux
Autoguider camera fails
OB doesn't work
Focus issues
FEROS ADC
FEROS-DRS
Startup issues
TCS issues
GROND issues
Freezing issues
Pointing issues
Web pages
ESO database issues



10 — Troubleshooting

10.1 No flux or little flux

Procedure 10.1. Investigate and fix the reason for the absence of flux in an instrument

. Ensure that

- the slit is OPEN ([TCS](#) setup, Fig. 11.2, p. 90).
- the dome is on automatic ([TCS](#) setup, Fig. 11.2, p. 90) and the slit is aligned ([TCS](#), Fig. 11.1, p. 89).
- the Main Mirror Cover is OPEN ([TCS](#) setup, Fig. 11.2, p. 90).
- the `mirr3` mirror is on WFI or FEROS ([FEROS ICS](#), Fig. 11.10, p. 98) if observing with WFI or FEROS. If necessary, click its checkbox and SETUP.
- the M3 mirror is on GROND if observing with GROND and on WFI otherwise ([GROND control](#), 11.11(b)). Use `grondM3` WFI or `grondM3` GROND in the terminal if necessary.
- ([WFI](#)) the protective shutter is OPEN ([Auxiliary Functions on the TCS machine](#), 11.5).
- ([GROND](#)) the protective and cold shutters are OPEN ([GROND control](#), Fig. 11.11(b), p. 99). Use `grondMC` OPEN and `grondCS` OPEN in the terminal if necessary.
- ([GROND](#)) If images look like biases, restart [FIERA](#).
On the FIERA Control Panel do Shutdown / Startup.

10.2 Autoguider camera fails

The [GROND](#) and [FEROS](#) autoguider use the same system on screen Autoguider GROND & FEROS, between the GROND and FEROS screens. [WFI](#) has its own system on screen Telescope Control Software.

It is possible to go on observing with GROND and FEROS while restarting the autoguider, provided that the modules are deactivated on the [TCS](#). However, you need to reactivate them to do the last step of restarting the autoguider (`e2p2StartTCCDs`).

Procedure 10.2. Observe when the autoguider fails


- A. On screen Telescope Control Software go to `texttStatus` workspace
- B. On the TCS Status panel locate the modules section (Fig. 11.4, p. 92)
- C. Check ignore for the corresponding modules
 - For [GROND](#), `ag_ccdGRND` and `ccdGRND`



(a) Rack tower




(b) 12p2cam reset

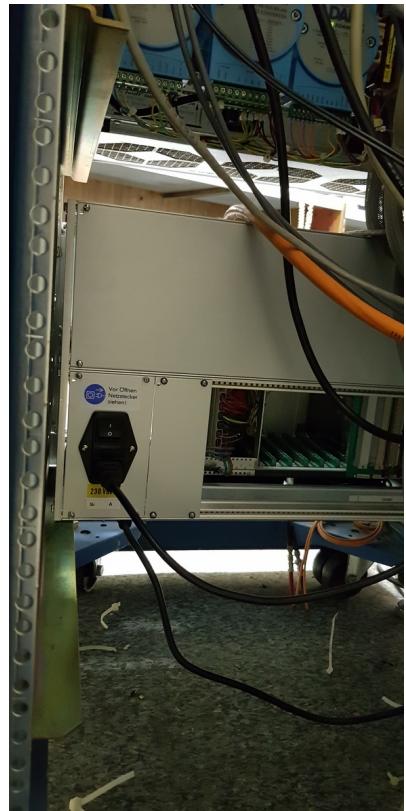

(c) 12p2cam power cycle

Figure 10.1: Rack with the FEROS AG LCU.

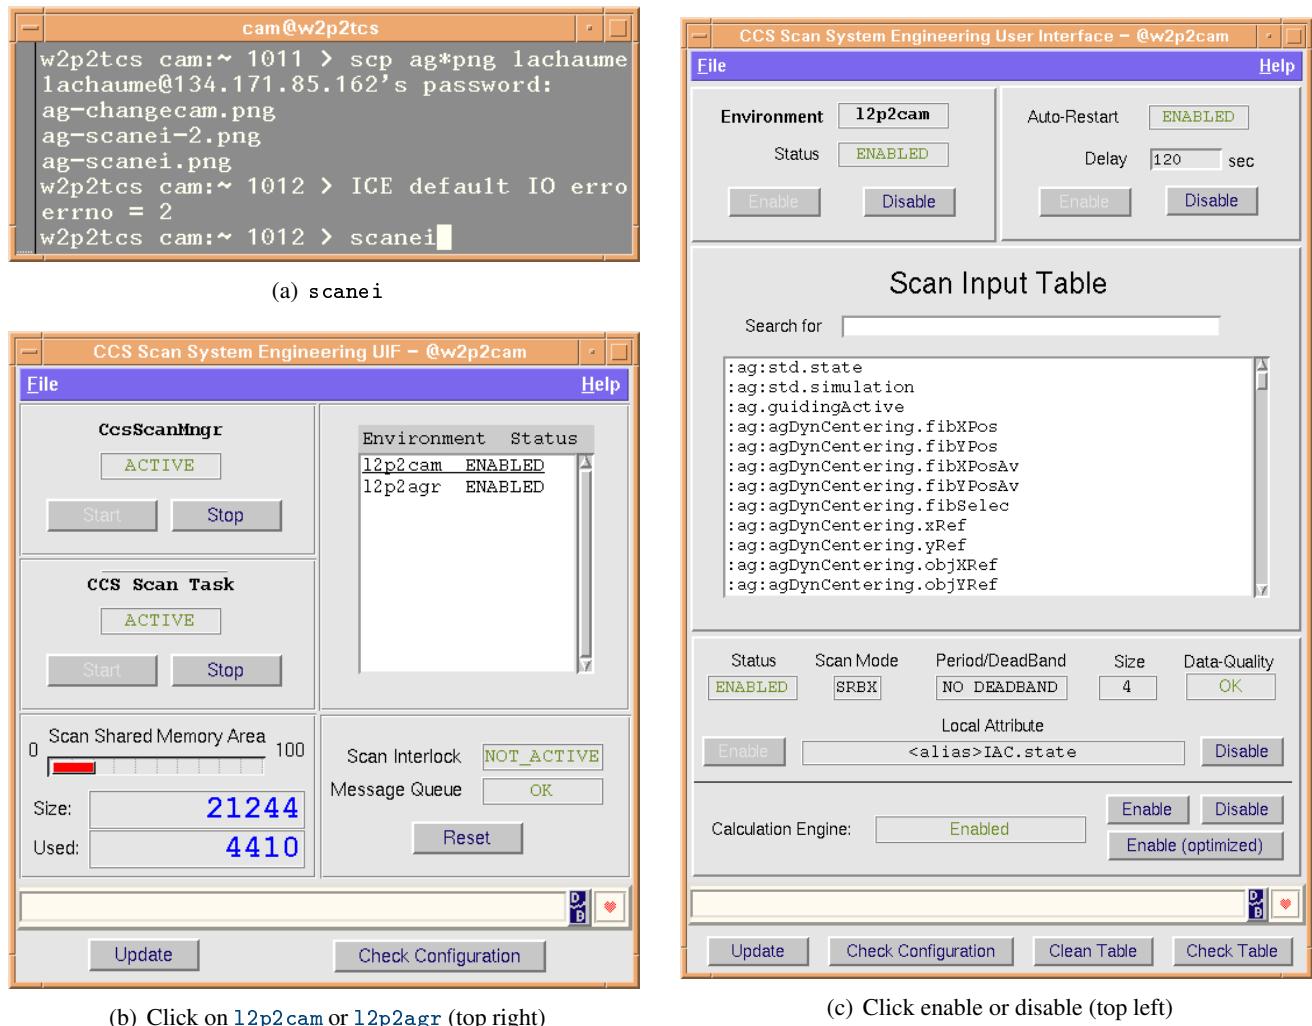Figure 10.2: `scanei` on the FEROS and GROND AG machine.

- For **FEROS**, ag_ccdGRND and ccdGRND
- D. Remember to uncheck them for e2p2StartTCCDs to work!

10.2.1 GROND

If you want to observe while fixing the issue you need to deactivate the modules in the **TCS**, see Procedure 10.2, p. 65. You will need to uncheck them just before starting the guider software with e2p2StartTCCDs.

Procedure 10.3. Restart the GROND autoguider

- A. If in a hurry try the quick restart (1–2 min)
 - A1. On screen Autoguider GROND & FEROS, find or open a terminal.
 - A2. Type e2p2StopTCCDs gag and wait for command to finish
 - A3. Type e2p2StartTCCDs gag and wait for command to finish
- B. If you have time or A does not solve the issue, go for the full restart (3–4 min)
 - B1. On screen Autoguider GROND & FEROS, find or open a terminal.
 - B2. Type lccBoot 12p2agr
 - B3. Wait for the command to finish (1–2 min)
 - B4. Type scanei to open the scanei GUI
 - a. Check that l2p2agr is ENABLED
 - b. If not, enable l2p2agr (see Fig. 10.2, p. 67)
 - c. Close the GUI
 - B5. Type e2p2StartTCCDs gag

10.2.2 FEROS

If you want to observe while fixing the issue you need to deactivate the modules in the **TCS**, see Procedure 10.2, p. 65. You will need to uncheck them before starting the guider software with e2p2StartTCCDs (step A4).

Procedure 10.4. Restart the FEROS autoguider

- A. Restart the **AG** software (1–2 min).
 - A1. On screen Autoguider GROND & FEROS, find or open a terminal.
 - A2. Type e2p2StopTCCDs fag
 - A3. Type e2p2StartTCCDs fag
 - A4. Wait for about 1–2 min for the command to exit successfully.
- B. If the problem persists or an error pops up in step A4, reboot the **AG LCU** (3–4 min)
 - B1. Type lccBoot 12p2cam
 - B2. Type scanei to open the scanei GUI
 - a. Check that l2p2cam is ENABLED
 - b. If not enable l2p2cam (see Fig. 10.2, p. 67)
 - c. Close the GUI
 - B3. Perform steps A1, A3, A4.
- C. If the problem persists or an error pops up in step A4, perform a hardware reset of the **LCU** (15 min)
 - C1. Go to the FEROS room located in the telescope enclosure.
 - C2. Locate the big blue rack tower (Fig. 10.1(a), p. 66).
 - C3. On the lower racks, near to l2p2cam label, push a small RST button (Fig. 10.1(b), p. 66).
 - C4. Perform steps A1, A3, A4.
- D. If this does not solve the issue, power cycle the **LCU** (15 min)
 - D1. Go to the FEROS room located in the telescope enclosure.
 - D2. On the back of the rack tower, unplug and replug the lower rack (Fig. 10.1(c), p. 66).
 - D3. Perform steps A1, A3, A4.

10.2.3 WFI

Failure of the **WFI** autoguider will generally be silent. It will just do nothing when asked to retrieve field or start monitoring.

If the quick 30 seconds fix does not work, it is not possible to observe with WFI during the 15–35 minute-long fix, but it should be possible to go on with GROND or FEROS with no guarantee though—the **TCS** has the bad habit of communicating with the WFI computers for focus.

Procedure 10.5. Fix WFI autoguider issues

Try in this order

- A. On the **TCS** screen, restart the autoguider (30 s)
 - A1. Use left-click menu Stop Autoguider
 - A2. Use left-click menu Start Auoguider

If window closes quickly (less than 10 s), it is a failure and the next step should be done.
- B. Restart the WFI technical CCD.
This should be done if Retrieve Field gives the error Error opening RPC connection or if point A does not solve the issue.
 - B1. On the WFI screen, locate or open a terminal.
 - B2. Type wfinsStopTCCDS and wait for it to complete
 - B3. Type wfinsStartTCCDS and wait for it to complet (2 min)
 - B4. Perform the AG restart of point A
- C. If an autoguider process is suspended, restart the **TCS**
 - C1. In a terminal, type i
 - C2. If there is an AG-related suspended proces, proceed as follow
 - C3. Deactivate the connection between **FEROS** and TCS
 - On the **FEROS** screen (Fig. 1.1, p. 17), locate the **FEROS** control panel (Fig. 11.9, p. 97)
 - From menu select Telescope → IGNORE
 - C4. Perform a full restart the **TCS** including VME reboot (Procedure 2.1, p. 21)
 - C5. Reactivate the connection between **FEROS** and TCS
 - On the **FEROS** screen (Fig. 1.1, p. 17), locate the **FEROS** control panel (Fig. 11.9, p. 97)
 - From menu select Telescope → ENABLE
- D. Reboot the **WFI** SPARC station and dependencies (15–35 min).
 - From a terminal type rlogin wffcd -l fcdrun
 - Once logged in, type reboot
 - Wait for reboot to complete (a few minutes)
In a terminal type ping wffcd and wait until it shows packets.
 - Reboot **WFI** computer (a few minutes)
On screen Wide Field Imager, type reboot in a terminal.
 - Do the **WFI** weekly startup (10 min)
 - Restart the TCS or just autoguider (see point 1 A), not sure here if TCS restart is needed.

10.3 OB doesn't work

10.3.1 OB gives an error when started

If an OB issues an error within seconds of being started.

Procedure 10.6. Fix OB start error

- A. If OB was already executed or aborted, click Reset status.
- B. Check that the object is observable (above 20 degrees).

- C. If telescope preset is needed, check that the communication with the **TCS** is on
 - (**FEROS**) Use menu **Telescope** → **Enable**.
 - (**GROND**) Click **TCS ON**.
- D. If telescope preset is not needed (e.g. calibrations), deactivate it in
 - (**FEROS, GROND**) Right-click the triangle of the acquisition template. (A thumb down should appear.
If you get a stop, go on clicking.)
 - (**WFI**) Set **PRESET.NEW** to F in the acquisition template.
(This needs menu **Interface** → **Engineering**.)

10.3.2 OB stalls before starting to observe

It may happen that an OB stalls, that means, nothing is happening. No error is reported but the telescope does not move, no integration seems to take place and the **bob** windows has stopped to give information about what is going on.

Procedure 10.7. Fix stalling of an OB

- (**WFI, FEROS**) Try to find a hidden pop-up asking for interaction (behind a window).
- (**WFI**) If OB stalls when focus order is sent by **bob**, set it manually.
In the TCS screen, enter focus value in the main panel (Fig. 11.1, p. 89).
Note: A permanent fix is to restart the **TCS** (see Sect. 10.8.3, p. 80).
- (**GROND**) If IR exposure does not start after the optical one has, reset the IR flip mirror.
In a terminal, type `grondFM`

10.3.3 Crash before an exposure

Here are possible fixes, from shortest to longest. Try each one in this order, until problem is fixed.

Procedure 10.8. Investigate and fix a crash occurring before the start of an optical exposure

- A. Close **bob** and launch a new one.
- B. **FEROS**
 - B1. Restart **FIERA**
On the **FIERA Control Panel** do **Shutdown / Startup**.
 - B2. Restart the instrument with telescope enabled
(In particular if the second exposure of the night fails.)
 - a. On the **FEROS Control panel**, use menu **Telescope** → **enabled**.
 - b. Do the full start-up procedure.
- C. **GROND**
 - C1. If error closing `w2p2cam` environment
 - a. If a **FIERA** exposure is running in **GROND Control**, click **End** or let it finish.
 - b. Type `grondSHUTTER` in a terminal.
 - C2. If the error mentions **IRACE**
 - a. Go to monitor **GROND IRACE**.
 - b. Locate the **Infrared Acquisition Module** (Fig. 11.12(b), p. 100)
 - c. Click **Reset** on the lower left part of the panel
 - d. Select from menu **Online** → **Online**
 - e. If it fails, you may need ≈ 40 min to deep restart (Procedure 10.30, p. 84) **IRACE**.
 - C3. Ensure only one **bob** is running
 - a. Find all **bobs** (`ps aux | grep bob`)
 - b. kill them
 - c. launch a new **bob**.

C4. (*GROND*) Restart **FIERA** (see B1).

C5. (*GROND*) Restart **GROND**.

- a. Type `grinsStop`
- b. Type `grinsStart`
- c. In GROND Control panel, put instrument ONLINE.

C6. (*GROND*) Reboot **GROND**.

C7. (*GROND*) If the GROND control has many TCS-related fields with gray background or the error says something about the FITS keyword TELESCOP, a last resort reboot of GROND may be needed. **BUT** in case of the first scenario, take a separate exposure with **FIERA** (in the control panel) first and check if these fields turn back to their usual color.

D. **WFI**

D1. Abort a possible running exposure manually, in particular if **bob** issues the error message “Cannot start exposure before the last one has read out” or some equivalent message (10 sec)

- a. On the e2p2 OS GUI (Fig. 11.6, p. 95) click Abort Exp./Seq.
- b. The GUI should display the text ABORT > INVOKED
- c. Wait for a few seconds for the answer ABORT > REPLY/ L OK.
- d. If it works, problem is solved, if not go to next point.

D2. Do a DAILY startup of **WFI** (5 min).

D3. Do a full restart of **FIERA** and **WFI** (10-15 min).

- a. Go to a wfi terminal or open it from menu wfi xterm.
- b. Shut down the instrument.
Type `wfinsShutdown`
- c. Check that the environment are enabled.
 - (i) Type `scanei &`
 - (ii) Go to the opening GUI titled CSS Scan System.
 - (iii) Check that `wwffcd` and `w2p2tcs` are ENABLED
 - (iv) If either environment is DISABLED, proceed with these points
 - (v) Click on DISABLED
 - (vi) In emerging GUI, click Enable just below Environment.
 - (vii) Close it with File → Quit.
 - (viii) Close CSS Scan System with menu File → Quit.

d. Restart the CCD managing components

- (i) Type `wfinsStopTCCDS`
- (ii) Type `wfinsStopSCCDS`
- (iii) Type `wfinsStartSCCDS`
- (iv) Type `wfinsStartTCCDS`

e. Restart the instrument.

Type `wfinsStartUp`.

f. Restart the **AG**

- (i) Go to screen Telescope Control Software.
- (ii) Left-click on an empty space to open the menu TCS User.
- (iii) Use menu TCS User → Stop autoguider.
- (iv) Use menu TCS User → Start autoguider.

g. Open missing windows on screens Wide Field Imager.

- (i) **bob** with menu WFI User → WFI → BOB (WFI).
- (ii) **RTD** with menu WFI User → WFI → WFI RTD.

h. Take a test bias.

D4. Restart the instrument. You will need to restart the autoguider on the **TCS** machine.

10.3.4 Crash during an exposure

Procedure 10.9. Fix a crash during an exposure

A. FEROS

- A1. OB crashes with “error closing cam environment” while an exposure (usually the first of the night) is running
- Let the current exposure finish and read out, it will be fine.
 - In the meantime, close and relaunch bob.

B. WFI

- B1. WFI stalls just before the read out of an exposure.

Abort it manually, if unsuccessful restart FIERA (follow point D in Sect. 10.3.3, p. 70)

C. GROND

- C1. OB crashes with “error closing cam environment” while an optical exposure is running
- End the optical exposure (if it’s a long one)
On the grond control panel, click END.
 - Wait for exposure to read out
 - Restart the OB without presetting
(In bob deactivate preset and reset status.)

- C2. OB stalls or crashes during an exposure

- In a terminal, execute grondFM. If issue is not fixed, proceed.
- Close and/or kill all bob instances
Find them by typing ps aux | grep bob in a terminal.
Kill them with kill -9 <pid> where <pid> is the job number.
- Launch bob
Type bob & in a terminal.
- In the same terminal, execute grondGRI and grondSHUTTER
- Wait for grondSHUTTER command to end (10 s to 1 min).

10.3.5 Crash during telescope offset

Here are possible fixes, from shortest to longest. Try each one in this order, until problem is fixed.

- Close bob and launch a new one. (Works with WFI).
- Restart the TCS (see Sect. 10.8.3, p. 80).

10.3.6 Crash during a telescope focus offset

If a timeout error occurs relating to FOCOFF or some message about focus that cannot be done:

- (GROND) Disable and enable w2p2tcs in scanei.
- (WFI) See Sect. 10.4.3, p. 73.

10.3.7 Crash at the beginning of sky flats

If the OB crashes before the pop-up asking for manual preset, it means bob must be killed and restarted.

10.3.8 Crash during filtre change in WFI

Procedure 10.10. Fix a WFI filtre change crash

If the OB crashes at the moment to change the filter using WFI and the Filter Name status is Moving on the WFI General State panel (Fig. 11.8, p. 96)

- A. On the e2p2 OS GUI (Fig. 11.6, p. 95), select the filtre on the Filter option below Setup Instrument.
- B. Click on the Apply button.
- C. Wait for filtre Filter Name to change from Moving to selected filtre (up to 2 min)
- D. In case of error: “icswsERR_MOVE_FILTER : Error during movement of filtre. ErrNo:7 ErrString: NO DETECTION”, reset the filtre controller
 - D1. On the [Auxiliary Functions](#) (Fig. 11.5, p. 94) in the [TCS](#), click on the RESET button below WFI FILTER CONTROLLER.
 - D2. Repeat steps A–C.

10.4 Focus issues

10.4.1 GROND autoguider defocused

If the [GROND AG](#) is highly defocused:

- When switching from [WFI](#) or [FEROS](#), focus fixes itself after the observing template starts.
- If the problem persists, FOC.OFFSET in the OB allows a manual workaround.

10.4.2 Defocused wih FEROS ACS

See Sect. 10.5.2, p. 74.

10.4.3 WFI focus sequence fails with a timeout

The [WFI](#) focus sequence may fail to communicate the focus offsets to the telescope. In that case, [bob](#) will display several lines of focus orders ending with a timeout message. Then an error pop-up will appear.

- Quick workaround: each time that [bob](#) displays a focus order, enter it manually in the [TCS](#) Control Panel, below M2 Focus, and click Preset to. This focus bug will not impact science OBs during the night, so don't worry.
- Clean fix: full restart of [WFI](#) and [TCS](#) (30 min).
- When the problem becomes recurrent, the [WFI](#) workstation should be rebooted.

10.4.4 No focus offset when filtres are changed

The focus sequence is run for a specific filtre, when changing filtres during an OB, the TCS should apply a focus offset, which should be seen in the TCS Control Panel, M2 Focus. If no offset is applied, check if in the [WFI](#) state manager, the Focusing flag should be True. The ESO people were not really clear on that.

10.5 FEROS ADC

10.5.1 ADC cannot be put off

At the start of an observation there is a message that the [ADC](#) cannot be put off. This happens after an observation using the [ADC](#). On the [FEROS ICS](#) (Fig. 11.10, p. 98) the line adca of the adc field contains ERROR in red.

Procedure 10.11. Remove the ADC from the optical path of FEROS

- . Try in order the following items.
 - Manually put it off from the [ICS](#) panel (Fig. 11.10, p. 98)
 - Select the checkbox of adca
 - Select OFF from the menu of adca

- Click SETUP on the bottom of the panel.
- Wait for ERROR to be replaced by OFF
- If it fails with a timeout error, restart the devices on the ICS panel
 - Use menu Device → Select all devices, then
 - Use menu Device → OFF
 - Use menu Device → ONLINE
 - Wait for about one minute for STATE to be ONLINE
- If in the last step there is an error that one of the devices that cannot be set ONLINE
 - Use menu LCU → Reboot LCU1
 - Use Device → Select all devices
 - Use menu Device → ONLINE
 - Wait for about one minute for STATE to be ONLINE
- If problem occurs repeatedly, FEROS needs a restart, and problem should be reported. Risk of the ADC getting physically stuck, needing intervention on the instrument.

10.5.2 Telescope focus is not corrected when ADC enters

Try in order the items of the following procedure.

Procedure 10.12. Fix the absence of focusing after FEROS ADC enters

- If no red messages appear below VME messages, manually preset to the theoretical focus displayed on the [TCS](#) main panel.
- If repeated red messages concerning M2 preset appear below VME messages on the [TCS](#) main panel (Fig. 11.1, p. 89), break the infinite set-focus loop
 - Under M2 Focus on the same panel, click Set >
 - Click Apply
 - Maybe play around more presetting M2 manually until red messages disappear
 - Re-execute the [FEROS OB](#) from preset.
- If the red messages don't disappear, restart the [TCS](#) (Sect. 10.8.3, p. 80).

10.6 FEROS-DRS

10.6.1 FEROS exposure number is close to 10 000

If it goes past 10 000, the reduction software will fail. It is very easy to fix before it has reached the limit.

Procedure 10.13. Reset the exposure number

- A. Close the [FEROS DRS](#).
- B. Open file /data/reduced/FEROS/.feroNNNN and replace number by 0000.
- C. Open the DRS again.

If the exposure number has reached the limit, the observations for that night will not be reduced, unless the following procedure is performed.

Procedure 10.14. Fix a FEROS exposure number going above 10 000

- A. Stop [data subscriber](#) and [DRS](#) (point A of Procedure 10.15, p. 75).
- B. Kill processes and tidy lock files (point B of Procedure 10.15, p. 75).
- C. Remove the night directory of the reduced data
In a terminal, type `rm -rf /data/reduced/FEROS/yyyy-mm-dd`, where the date is yyyy-mm-dd
- D. Change the [FEROS](#) exposure number (Procedure 10.13, p. 74)
- E. Restart the [data subscriber](#) (point C1 of Procedure 10.15, p. 75).

F. Restart the DRS (point C2 of Procedure 10.15, p. 75).

10.6.2 FEROS DRS fails

Check that

- A full standard calibration has been done
It should be on the same day with the same setup (binning and readout speed).
- The exposure number is smaller than 10 000.
In a terminal, write `cat /data/reduced/FEROS/.feroNNNN`.
If number is above 10 000, go to Procedure 10.14, p. 74.

10.6.3 Problems to restart the FEROS-DRS and data subscriber

If you cannot start the **FEROS DRS** this might be for the following reason: when rebooting `w2p2off` without bringing down the pipeline before, a hidden lock file may survive. If all other attempts have failed to start the DRS, follow these steps.

Procedure 10.15. Restart the FEROS data reduction software and data subscriber

- A. Stop **data subscriber** and **DRS** at the **DRS** computer (Fig. 10.3(a), p. 76).
 - A1. Stop and close the **data subscriber**
If window is frozen, you can use `xkill` from a terminal.
 - A2. Stop and close the **DRS** panel
If window is frozen, you can use `xkill` from a terminal.
- B. Kill processes and tidy lock files
 - B1. Type `killall -9 ferosReduceQueuedIms`
It either returns no process killed or nothing.
 - B2. Type `rm -f /data/reduced/.ferosQueueIms/.ferosReduceQueuedIms*.pid`
It is either silent or gives error no file removed
 - B3. Type `killall -9 ferosQueueIms`
It either returns no process killed or nothing.
 - B4. Type `rm -f /data/reduced/.ferosQueueIms/.ferosQueueIms*.pid`
It is either silent or gives error no file removed
- C. Restart the **data subscriber** and **DRS**
 - C1. Left click start **data subscriber** and configure it (Fig. 10.3(b), p. 76).
 - a. Program ID: service
 - b. Observer Name: service
 - c. Rename to Keyword: Name on INS ws
 - C2. Left click start FEROS DRS, start from top to bottom
 - a. Start Queue Image Status
 - b. Start MIDAS Session Status
 - c. Start Reduced Queued Image

Similarly, when rebooting the `w2p2off` with active **data subscriber**, the watch-dog log file may survive. Do:

- Start `cd $ DHS_LOG` (which corresponds currently to `/data/msg`)
- Remove the PID files therein

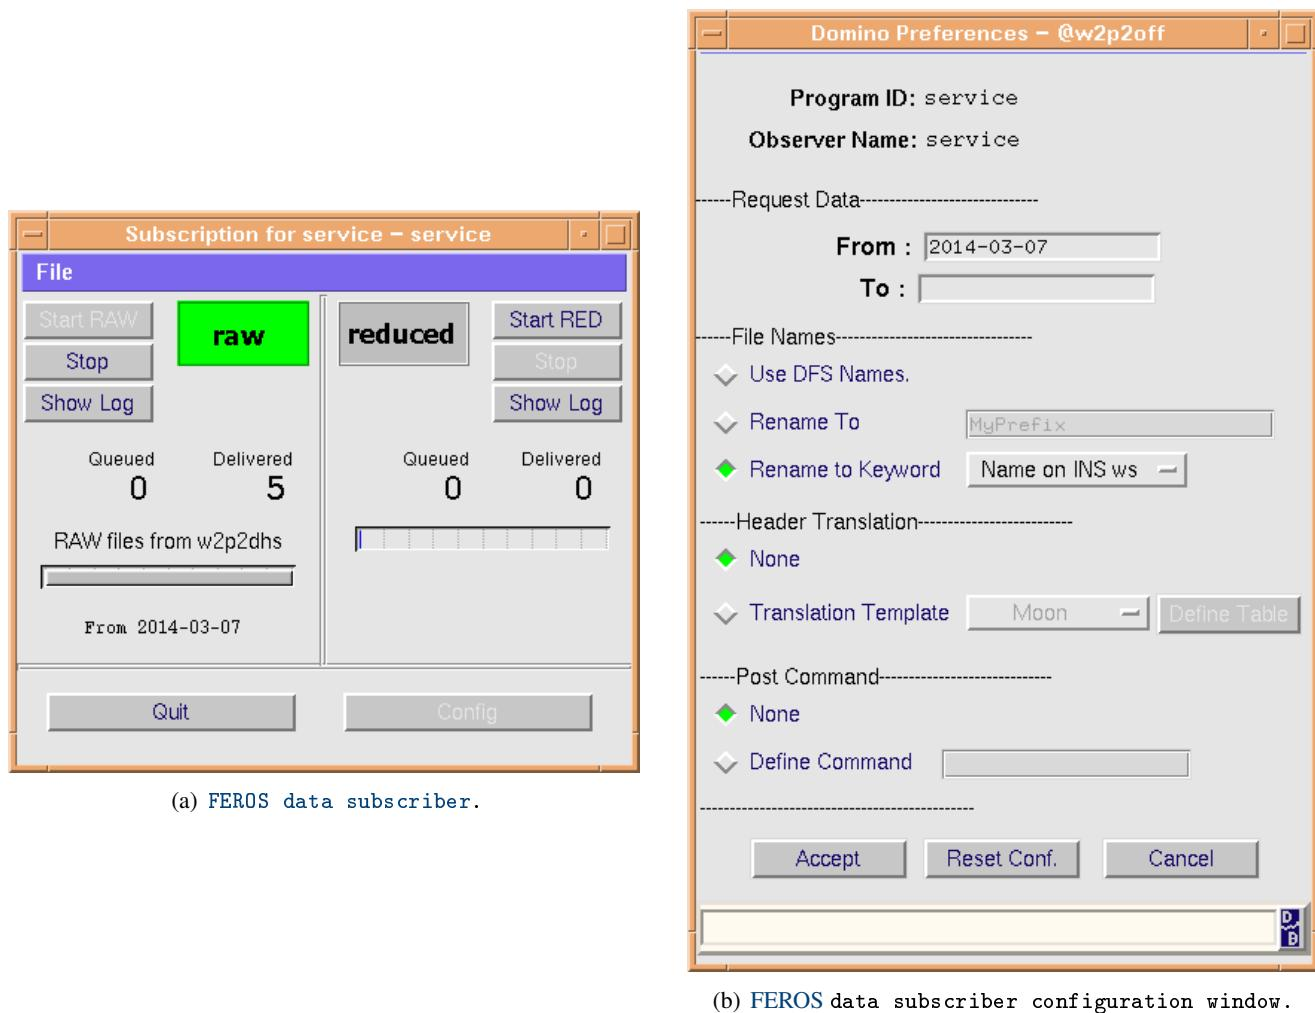


Figure 10.3: FEROS data subscriber.

10.6.4 Data won't show up

If data taken with FEROS do not show up in the ESO archive and/or in the FEROS DRS, you will need to restart processes on the data handling machine `w2p2p1` (username pipeline).

Procedure 10.16. Restart the data handler.

- Go to screen `w2p2p1` Pipeline
- In a terminal you will need to type some of the following
 - `dhsSubscribeControl start pipeline -backsince <date>`
where `<date>` in the format `YYYY-MM-DD` is where you want to start again.
 - `(needed?) pipelineControl stop`
 - `(needed?) pipelineControl start`
 - `(needed?) stopRBS`
 - `(needed?) startRBS pipeline.config`
 - `doControl stop`
 - `doControl start wfi,feros`

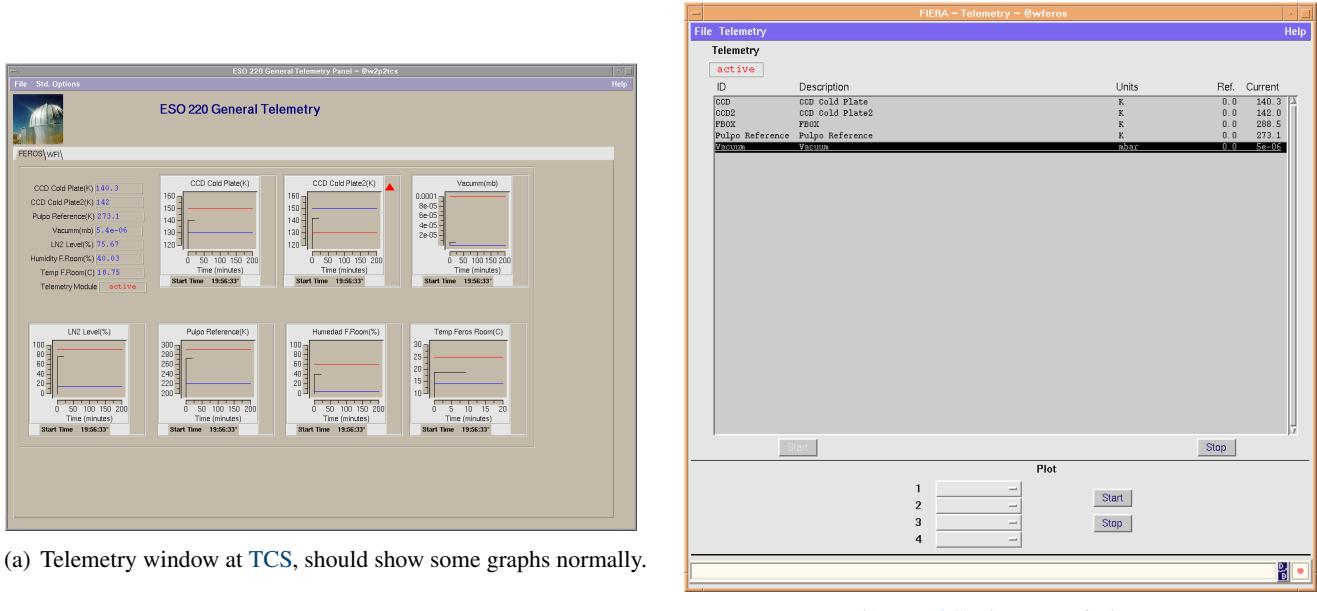


Figure 10.4: Telemetry window.

10.7 Startup issues

10.7.1 FEROS

- There is an error about process `fcdControl` stating “accepted PING but did not reply properly within 10000 msec”.
- Restart environment using Procedure 10.17, p. 77.
- There is a problem with the FEROS telemetry at TCS (window should show some graphs, Fig. 10.4(a), p. 77).
- Activate the telemetry using Procedure 10.18, p. 77

Procedure 10.17. Restart environment

- Type `vccEnvStop -e $RTAPENV`
- Type `vccEnvStart -e $RTAPENV`
- Redo the full startup procedure

Procedure 10.18. Activate FEROS or WFI telemetry

- Go to FEROS or WFI screen
- Open or locate a terminal and type `fcdTelemetry &`
- On the emerging FIERA - Telemetry GUI, press Start
- Close the GUI
- Go to TCS screen
- Close the ESO 220 General Telemetry Panel
- Open or locate a terminal and type `sciops2p2Telemetry &`

10.7.2 WFI

The commonest issues are:

- TCS is OFF after startup on the Control Panel

This is harmless. Use menu Gen. Options → Refresh Database Events.

- WFI startup stops with an error during WFI Init/Online
It most likely requires a power cycle of the WFI electronics, see below.



Figure 10.5: WFI electronics. The box on the right controls the power and can be used to power cycle. The box on the left contains the electronics boards that one may need to unplug and replug.

Procedure 10.19. Fix WFI init error

- Determin whether WFI passes the hardware self-test
 - Locate or open a logMonitor
 - If it was not active, choose to inspect the last 500 lines
 - Find red error “Failed to dispatch command for camera LOADED OK”.
 - Lines below and above contain “C40 ping failed” and “Could not download **FIERA** config”
 - You can also check directly whether WFI passes the self-test
In a terminal, type `rsh -l fcdrun wwffcd "export DISPLAY=$DISPLAY; fcdtestseq"`
- Reboot the **FIERA** workstation
 - In a terminal, type `rsh -l fcdrun wwffcd reboot`
 - Wait for 1–2 minutes for it to get back online
You may check in a terminal using `ping wwffcd`
- If WFI doesn’t pass the self-test, power cycle the WFI electronics
 - Go to the telescope floor
 - Locate the WFI power unit close to the FIERA electronics (Fig. 10.5, p. 78)
 - Switch it off
 - Wait for 30 seconds.
(On a 2nd or 3rd attempt, you may try to unplug/replug the electronics boards if you dare.)
 - Switch it on.
- If WFI passes the self-test, do a restart of the **FIERA**
 - In a terminal, type `fcdCtrl`
 - On the emerging GUI, click Shutdown
 - On the emerging GUI, click Startup
 - Wait for **FIERA** to restart (1 min ?)
- Do a full WFI restart (see Proc. 2.1 point A and Fig. 2.2, p. 27)
- You may have to redo steps B–E until WFI can finish the full restart.

10.7.3 Hydraulics cannot be switched on/off

If you see that the Loc/Re button is red on the 2.2m Auxiliary Funct on the Windows computer, it means that the hydraulics system is for local control in the dome.

You need to go to the dome.

Procedure 10.20. Set the hydraulics for remote control

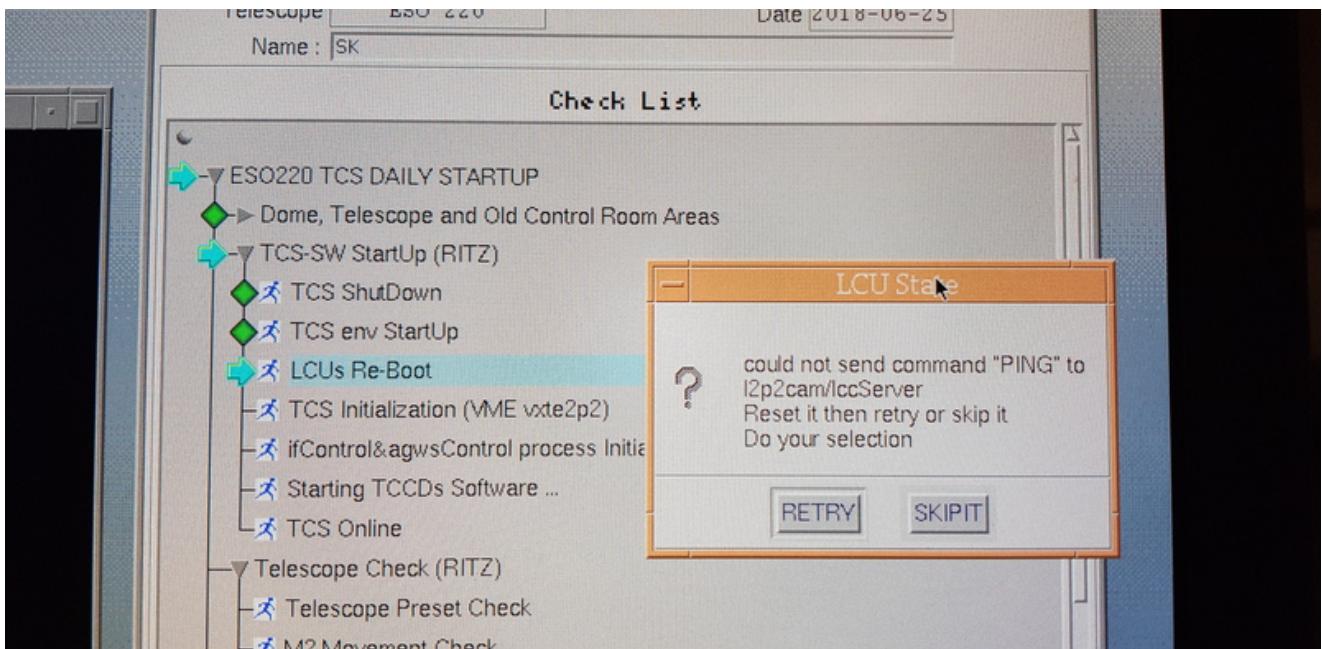


Figure 10.6: When TCS restart fails to reboot the FEROS AG LCU

- A. Go to the dome.
- B. Locate the gray 1.5-metre-high **ADAM** rack (Fig. 1.5, p. 20).
- C. Locate the switch for ADAM Remote / Local (Fig. 10.8, p. 82, lower left).
- D. Put it towards ADAM Remote.

10.8 TCS issues

10.8.1 Start-up fails with **l2p2cam** error

If the start-up stalls with error could not send command "PING" to **l2p2cam/lccServer**, you probably need to hard reboot the **FEROS AG LCU** in the dome, but try a software reboot first to save time.

Procedure 10.21. Fix FEROS AG LCU during start-up

- A. Try a software restart of the **FEROS AG LCU** (likely to fail).
 - A1. On the **TCS** screen, find or open a terminal
 - A2. Type `rsh l2p2cam reboot`
If it gives an error, proceed to step **B**
 - A3. Wait for 1–2 min for the reboot to complete
 - A4. Check that the LCU is up using `ping l2p2cam`
 - A5. Press **CONTINUE** in the Start/Shutdown panel
If it gives the same error popup, proceed to step **B**.
- B. Go to the dome and try, in that order (see Procedure 10.4, p. 68).
 - B1. A hard reset of the LCU
 - B2. A power cycle of the LCU

10.8.2 Start-up fails with telescope not initialised

If the start-up stalls with `telescope not initialised`, you probably forgot to switch the hydraulics and/or drives on or the telescope was not parked at zenith.

Procedure 10.22. Fix the telescope not initialized popup

- A. Ensure hydraulics and drive are on
 - A1. Locate the [Dome Auxiliary Functions](#) tab on screen Dome webcam & hydraulics.
 - A2. Check that the Hydr and Drives buttons are green.
 - A3. If not, switch the hydraulics and drives on (step [B1](#) in Procedure 2.1, p. 21).
- B. Manually initialise the telescope
 - B1. In a terminal type `~/bin/telinit`
 - B2. If an error reads "cannot initialise the telescope at more than 45 degrees from zenith"
 - a. Go to the dome and manually park it (Procedure [10.33](#), p. [86](#)).
 - b. Repeat step [B1](#)
 - B3. Wait for 2–3 min for initialisation to complete.
- C. On the error popup, press `SKIPIT`

10.8.3 Quick TCS restart

Many [TCS](#) issues are solved by a fast restart, with a time loss of ≈ 10 min. Before, it is important move the telescope to zenith since one cannot initialize it later if the telescope is at ≤ 45 degrees above the horizon.

Procedure 10.23. Quick TCS restart

- [preset](#) to zenith
 - On the [TCS](#) setup panel (Fig. [11.2](#), p. [90](#)), click Zenith under Fixed Presets.
 - Alternatively, if panel is frozen, type `~/bin/presetzenith` in a terminal.
- Execute the fast restart.
Type `e2p2NewStartUp` and wait for it to complete.
- Initialise the telescope
On the [TCS](#) setup panel (Fig. [11.2](#), p. [90](#)) press Initialize under Telescope.


10.8.4 No connection with VME

If the TCS Control Panel indicates “No connection” in red, just below VME messages, you can try the following:

Procedure 10.24. Solve the connection issue with the VME

- A. If you just switched hydraulics on, wait for a few minutes to see if connection is back.
- B. Do a remote reboot of the VME.
Type `lccBoot 1te2p2` in a terminal.
- C. Do a manual reboot of the VME in the dome.
 - C1. Go to the computer room of the telescope enclosure.
 - C2. Locate the VME (Fig. [1.4](#), p. [20](#)) in front of the entrance, slightly to the left.
 - C3. Press the small red/pinkish button (Fig. [10.7\(b\)](#), p. [81](#)).
 - C4. Locate the VME monitor, behind you if you face the VME.
 - C5. Wait for boot sequence to finish with “end of boot script” (Fig. [10.7\(c\)](#), p. [81](#))

A quick restart the [TCS](#) (Sect. [10.8.3](#), p. [80](#)) is generally needed right after a reboot of the VME.

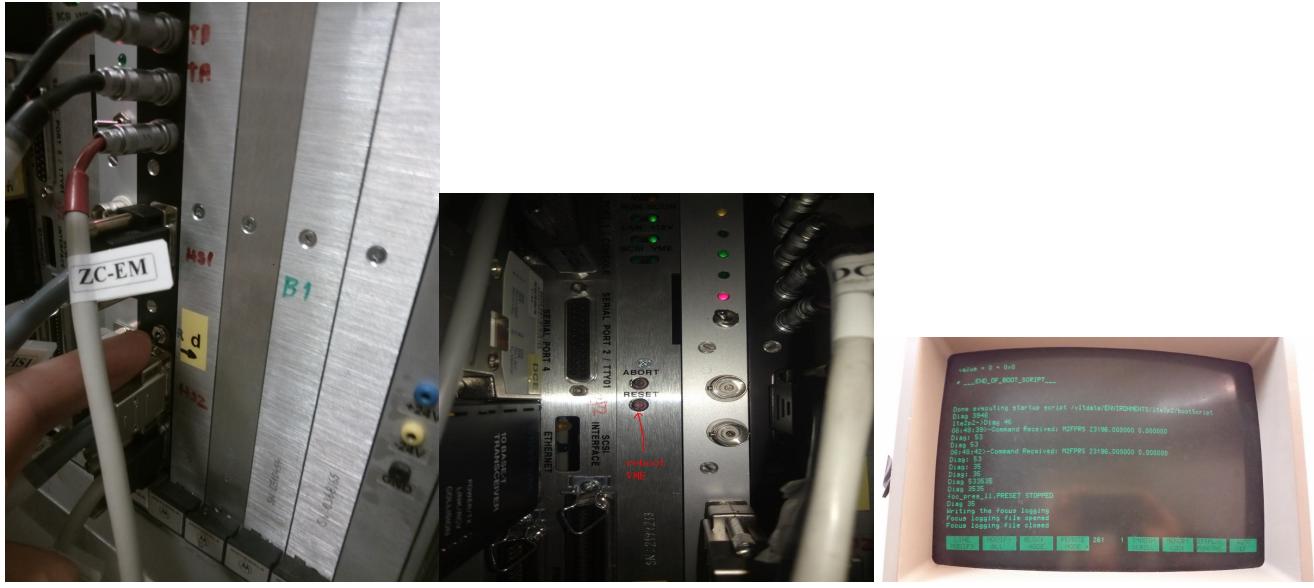

(a) Remote/local pointing control

(b) Reboot of the VME

(c) VME monitor

Figure 10.7: VME rack in the computer room of the telescope building *Left*: to manually point the telescope to zenith, you need to switch away from the yellow 'd' label. *Centre*: To hard reboot the VME, press the small red/pinkish reset button. *Right*: the VME monitor with the “end of boot script” after a reboot.

10.8.5 TCS is OFF on an instrument

The Control Panel of an instrument the TCS is in the state **OFF**. You should check the corresponding modules on the TCS Status panel. If red, try to bring them **ONLINE**.

10.8.6 Telescope doesn't take focus orders

Procedure 10.25. Fix telescope focus issues

- (*WFI*) OB stalls when focus order is sent by **bob**.
Set it manually from the **TCS** main panel (Fig. 11.1, p. 89)
- (*FEROS*) Focus is not corrected after insertion of the ADC.
See Sect. 10.5.2, p. 74.
- Focus cannot be set from the **TCS** main panel.
Restart the **TCS**, see Sect. 10.8.3, p. 80.

10.8.7 TCS Setup panel is stuck

If you need to close when the panel is stuck, a few command lines are available in /home/tcs/bin: `closemirror`, `closeslit`, `presetzenith`, `domemanual`.

Procedure 10.26. Unstuck the TCS Setup panel

- In a terminal type `killall rs232`
If “no process killed” appears, this procedure will not be useful.
- If the panel gets stuck again quickly (10–20 s), a restart of the **TCS** usually fixes the issue.



Figure 10.8: Controlling the hydraulics and mirror cover.

10.8.8 Main mirror cover cannot be moved

If the Main Mirror Cover state in the TCS Setup Panel says LOCAL you need to go to the dome, close it, and set it to remote control.

If the Main Mirror Cover state in the TCS Setup Panel stays in MOVING whatever order you send, you need to go to the dome, set it for local control, close it, and set it to remote control.

Procedure 10.27. Manually close the main mirror cover

- Go to the dome
- Locate the gray 1.5-metre-high ADAM control box (Fig. 1.5, p. 20).
- Locate the Main Mirror Cover controls (Fig. 10.8, p. 82, upper right)
- If the mirror was MOVING, press the yellow Local/Remote button.
- Press the red Mirror Close button.
- If any noise is heard, wait for the cover to be closed.
- Press the yellow Local/Remote button.

10.8.9 Dome doesn't move

If the Dome Status is Local on the TCS Control Panel, it means that the dome is for local control from the dome.

You need to go to the dome.

Procedure 10.28. Set the dome for remote control

- Go to the dome.
- Locate the dome controls (Fig. 1.5, p. 20), placed on the wall opposite to the entrance.
- On the dome controls (Fig. 10.9, p. 83) turn the control from local to remote



Figure 10.9: Local control of the dome

(a) ccsei window.

(b) M3 in the database

Attribute Name	Value
error	0
handset	0
initParallel	-1
initialised	0
lcuid	2
locked	0
moveOrder	-1
newPos	0
prefix	INS.M3
server	griddevServer
setupParallel	-1
simulation	0
state	1
substate	0

Figure 10.10: Writing the M3 position in the database

10.8.10 Dome slit and telescope are not aligned

For small zenithal angles, it is a normal setting since the telescope is not exactly at the centre of the dome. If you need to avoid the wind you need to orient the dome manually but be weary of vignetting!

10.9 GROND issues

10.9.1 GROND M3 is stuck

If GROND M3 mirror cannot be moved with the grondM3 command try in order the items of the procedure below.

Procedure 10.29. Unlocking the grond M3 mirror



Figure 10.11: The GROND mirror and main cover control box.

- Switch back-and-forth using grondM3 WFI and grondM3 GROND.
- Write the mirror position in the database (Fig. 10.10, p. 83)
 - A. In a terminal type ccsei
 - B. Click on CCS database monitor
 - C. Look down Appl_data → GROND → ICS → DEVICES → M3.
 - D. Select checkbox Enable Editing
 - E. set newPos value to 2 for GROND position or 0 for WFI.
 - F. Check on GROND control that mirror indeed moves.
 - G. Close the GUI.
- Reset the mirror from the dome.
 - A. In the dome, locate the M3/MC box below the main mirror (Fig. 1.5, p. 20).
 - B. On the box (Fig. 10.11, p. 84), press the grondM3 WFI button.

10.9.2 GROND OB only crashes with TCS on

It is a very tricky problem, randomly solved by a string of last resort reboots of GROND and TCS restarts.

10.9.3 GROND IR exposure won't start

An OB starts with the optical exposure but nothing happens in the infrared and the OB stalls. If grondFM doesn't solve the issue, this may need a full reset of the **IRACE** (IR electronics).

Procedure 10.30. Deep reset of GROND IRACE (verify this!)

- A. In a GROND terminal, do grinsStop as user grondmgr.
- B. Go to the computer room of the telescope building.
- C. Locate the **IRACE** workstation (Fig. 1.4, p. 20) and shut it down.
- D. Go to the dome
- E. Locate the power switch of the **IRACE** box (Fig. 10.12, p. 85) below the main mirror.
- F. Switch it off for 10 seconds then on again.
- G. Go back to the computer room and start the **IRACE** workstation.

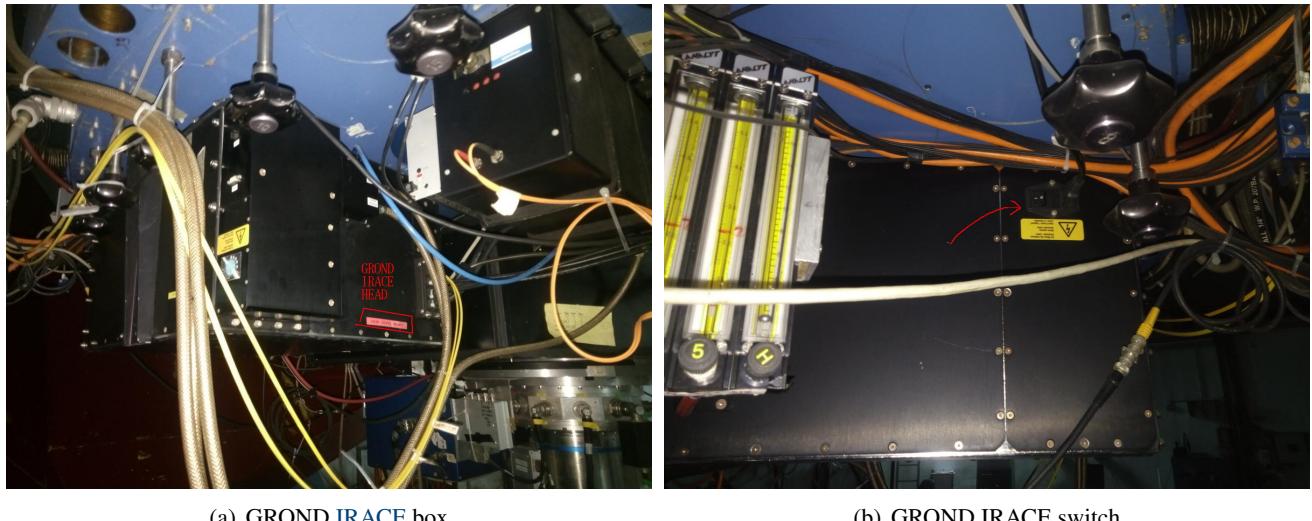


Figure 10.12: The GROND infrared electronics ([IRACE](#)) box below the main mirror of the telescope. The power switch is located towards the pier.

- H. Go back to the control room and reboot the GROND workstation.
- I. Do `~/bin/lastResortBeforeReboot.sh` as user `grondmgr`
- J. Reboot GROND workstation.
- K. Do `~/bin/lastResortAfterReboot.sh` as user `grondmgr`
- L. Put the instrument **ONLINE** in the GROND panel
- M. Do `grondSHUTER && grondFM`
- N. close and open bob

10.10 Freezing issues

10.10.1 Mouse pointer does not move

This is common on the [WFI](#) screens.

Procedure 10.31. Recover the mouse pointer

- A. Power cycle the black Intel box connected to the failing screen.
Press power button for 5 s, wait 5–10 s, switch it on, wait for start-up (1–2 min)
- B. Log in
For WFI, user `wfi` (other logins in Table 11.1).
- C. Open the panels from a terminal.
For WFI, type `~/bin/openPanels.sh`.

10.11 Pointing issues

10.11.1 Pointing is incorrect

After doing the pointing with [WFI](#) the target is not close to the central position (4150,3950). Also, it can happen during an observation with any instrument during the night that the object is not centred where it should.

Procedure 10.32. Fix WFI pointing issues.

- A. If not done, check the right instrument is selected on the [TCS Status Panel](#) (Fig. 11.4, p. 92).

Table 10.1: Pointing model parameters for each instrument, as of November 2015.

Parameter	FEROS	GROND	WFI
ID	-183.81	-230.04	-157.69
IH	72.92	-20.23	94.11
CH	136.07	28.89	31.41
NP		17.13	
ME		-113.61	
MA		2.22	
FO		91.83	
TX		-26.92	
HCEC		-18.57	
HCES		-22.55	

- B. Check if the current Pointing Model parameters in Table. 10.1 for **WFI** are selected on the **TCS** Setup Panel (blue numbers in the bottom right-hand panel of Fig. 11.2, p. 90). Typically the first three values ID, IH, CH are 0 because of a database issue.

In a hurry:

- Reset the database values
In a terminal type `~/bin/fixPointing.sh`
(Note: it can be done manually using `ccseiDb`)
- Select the instrument again

Otherwise, a quick TCS restart will generally solve the issue.

- C. Check that the Sidereal time on the **TCS** Control Panel is fine.

It should be within seconds of the actual one. You can get it from the digital clock in the control room using a switch on its right.

If not, you need to go to the dome and reboot the VME.

- D. Otherwise, it might be a problem with the **TCS**.

Try a quick **TCS** restart (Sect. 10.8.3, p. 80).

10.11.2 Telescope is stuck at low elevation

If telescope goes out of safe zone, reaching 20 degrees elevation, a too high hour angle, it will be stuck (by software). It also occurs if a restart or a reboot of the VME is done when the telescope points lower than 45 degrees.

In that case, the telescope should be parked to zenith manually.

Procedure 10.33. Preset manually to zenith.

- A. Go to the computer room in the telescope enclosure.
- B. Locate the VME rack (Fig. 1.4, p. 20).
- C. On the VME, set the switch away from d (Fig. 10.7(a), p. 81).
- D. Go to the dome and find the joystick (Fig. 10.13, p. 87).
- E. Using the controls put the telescope approximately to zenith.
- F. Go to the computer room in the telescope enclosure.
- G. On the VME rack, set the switch to d.
- H. Go to the control room below the dining room.
- I. Initialise the telescope
Click Initialize below Telescope in the TCS Setup Panel



(a) Location of the joystick



(b) Joystick

Figure 10.13: The “joystick” can be used to manually point the telescope.

10.12 Web pages

10.12.1 2.2m Environmental Monitor stuck

If the 2.2m Environmental Monitor is stuck.

Procedure 10.34. Restart the 2.2m environmental monitor

- Go to screen Telescope Control Software.
- In a terminal, execute command `e2p2StartEnvMon`
- After a few minutes refresh <http://www.ls.eso.org/lasilla/sciops/2p2/EnvMon>.

10.12.2 All sky camera

If the all sky camera LASCAM is stuck


- Use the Danish 1.54m camera at <http://allsky-dk154.asu.cas.cz/>
- Ask an ESO TIO to restart LASCAM.

10.13 ESO database issues

Procedure 10.35. Data do not appear in the database

- Wait for one or two days after the data is taken because there may be a lag
- If all observations including the calibrations do not show up, you can restart the data handler
See Procedure 10.16, p. 76
- If only a particular set of observations loaded directly from bob are impacted, check that the PID is correct
 - Open the OBs (usually in OBD directory on bob machine)
 - Check that the ESO PID has a valid format.
 - Science OBs must start with a leading zero for science PIDs, e.g. 0103.A-9001(A)
 - Calibration OBs should not have a leading zero, e.g 60.A-0040(Z)

- C3. Check that the ESO PID has been assigned
 - a. Open the ESO Observing Schedule Query Form
http://archive.eso.org/wdb/wdb/eso/sched_rep_arc/form
 - b. Fill telescope (La Silla -- 2.2 m) and period
 - c. Click Search
- C4. If not assigned or invalid format, contact User Support Department at ESO to fix it.
- D. Data taken as TEST (daily checks) do not appear in the archive.

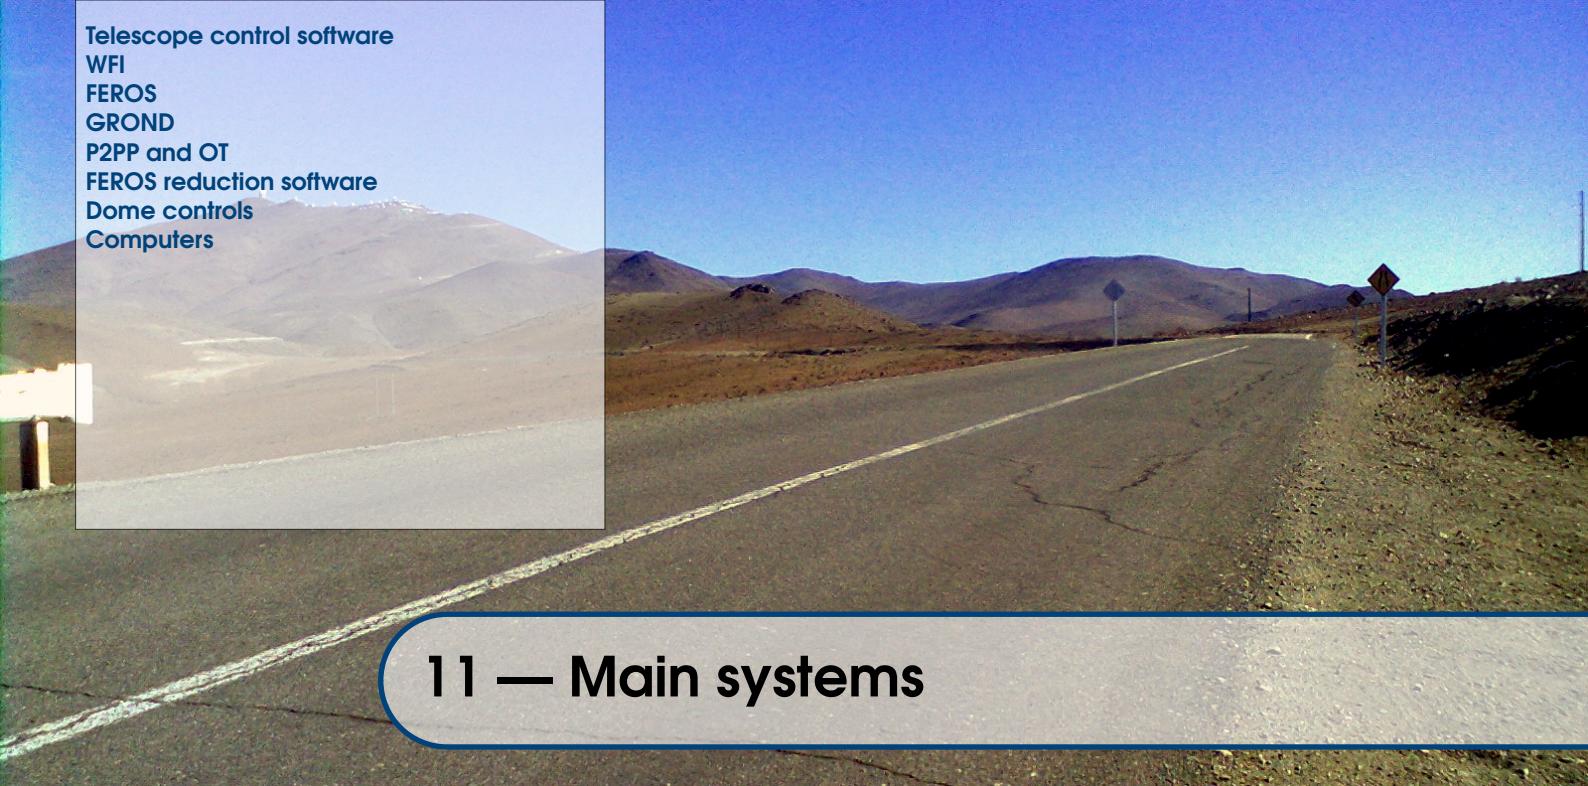

11 – Main systems

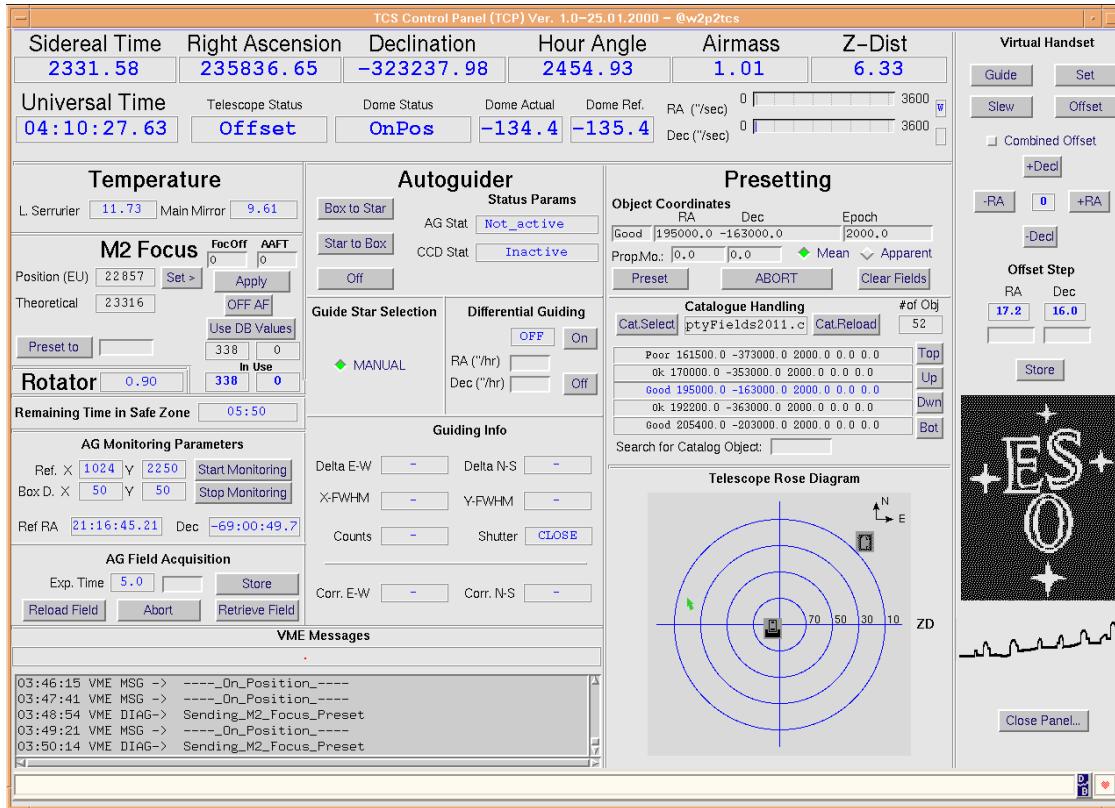


Figure 11.1: The TCS main panel allows to perform guiding with WFI and to manually preset or offset.

11.1 Telescope control software

The main panel of the TCS (Fig. 11.1, p. 89) gives a summary of focus, guiding, and pointing. The rose diagram gives telescope position, slit orientation (symbol just outside the outermost circle), Moon position (yellow circle), and some other info (green arrow). Telescope status and dome status indicate whether telescope is presetting,

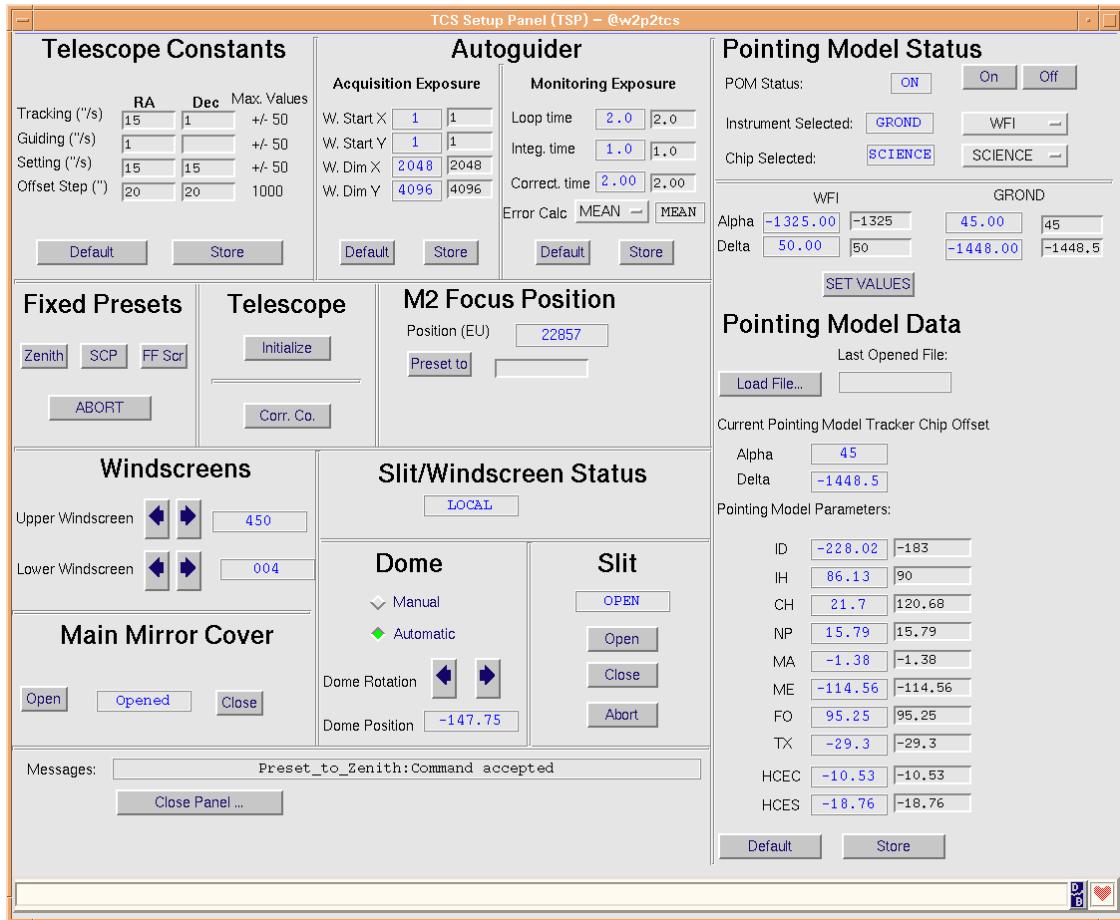


Figure 11.2: The **TCS** setup panel allows to open and close the dome, main mirror cover and setup the dome rotation. Additionally, fixed presets to zenith and flat screen can be sent.

slewing, guiding, or offsetting. The panel also allows some interaction. The **TCS** setup panel (Fig. 11.2, p. 90) allows more interaction, in particular concerning closing and opening.

11.1.1 Manual preset

The presetting area of the main **TCS** panel (Fig. 11.1, p. 89) allows manual preset, which is used for flat fields and **WFI** focus. Catalogues can be loaded with CalSelect, in particular EmptyFields for flat fielding. The item of the catalogues is selected with Top, Up, Dwn, Bot before Preset is clicked.

11.1.2 Manual offset

The virtual handset area of the main **TCS** panel (Fig. 11.1, p. 89) allows to give an offset which is used when looking for a guide star on **GROND** or centring a target on the **FEROS** fibre when guiding with the **WFI AG**. An offset is done by clicking Offset and selecting combined offset (useful when guiding). Offset steps are input with Store, then the racquet in the centre ($-RA$, $+RA$, $-Decl$, $+Decl$) can be used.

11.1.3 Autoguider

The **AG** in the **TCS** can be used for **WFI** and **FEROS** observations.

The **AG** Field Acquisition and Autoguider areas of the main **TCS** control panel (Fig. 11.1, p. 89) give control over

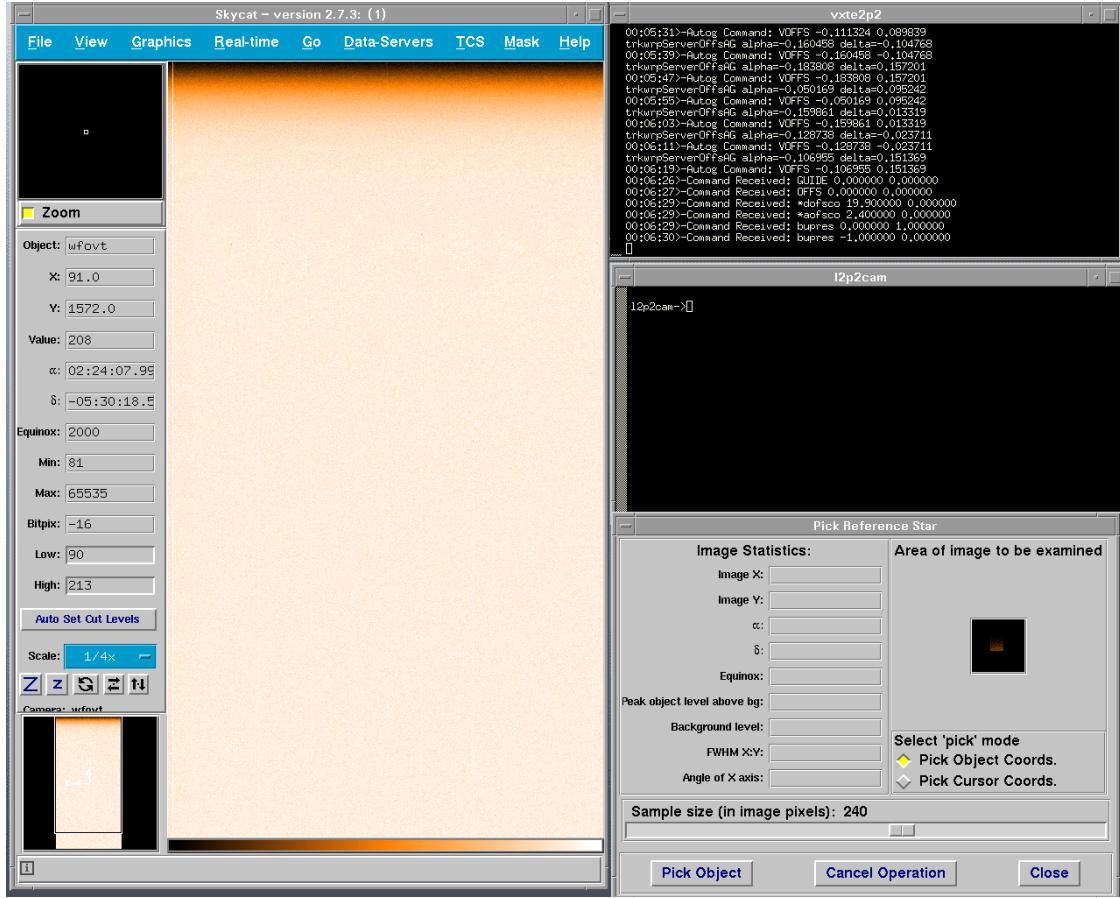


Figure 11.3: The AG field is displayed on the TCS RTD (left) where the reference star can be picked (using lower right window).

WFI AG. The buttons of interest are **Retrieve field** (to probe the AG field, displayed in Fig. 11.3, p. 91), **Box to star** (to start the guiding when a guide star has been picked) and **Off** (to turn off the AG). Tuning of the AG (e.g. integration time) can be done on the Autoguider area of the TCS setup panel (Fig. 11.2, p. 90).

Note that guiding must be set Off at the end of a **FEROS** observation using the **WFI AG**. The buttons **Stop Monitoring** and **Start Monitoring** are useful after a change of filters on the same field, for they avoid a **Retrieve Field**.

Differential guiding can be set, but a particular care should be paid to units (here arcsec/hour).



Figure 11.4: The TCS status window is mostly used to switch the pointing model between instruments.

11.2 WFI

11.3 FEROS

11.4 GROND

11.5 P2PP and OT

11.6 FEROS reduction software

11.7 Dome controls

11.8 Computers

Most components of the telescope can be accessed from any screen by using a graphical login: `tcs`, `cam` (guiders), `wfi`, `feros`, `dhs` (OBs), `astro` (pipelines), `grond`. They are detailed in Fig. 11.1, p. 93 and generally have the famous good seeing password. These machines need a reboot from time to time, using `reboot` as the normal user.

For some tidying tasks or reboots, you need to root password (hint: pirate).

Other components may need reboots, they are given in Table 11.3.

Table 11.1: Computers one can use a graphical login for, from any screen, to get access to instruments and controls. The password is the “good seeing” one shared by most La Silla computers. The screen they are normally shown on and the relevant unix users are also given.

Computer	Login	User	Monitor(s)	Description
<code>w2p2tcs</code>	tcs	tcs	Telescope Control Software	TCS
	cam	cam	Autoguider GROND & FEROS	Autoguiders
<code>w2p2ing</code>	wfi	wfi	Wide Field Imager BOB	WFI user
	wfimgr	—	—	manager account
<code>wferos</code>	feros	feros	FEROS BOB	basic user
	ferosmgr	—	—	manager account
<code>w2p2dhs</code>	dhs	service	p2p2 & ot	service observations (ot)
	visitor	p2pp	& ot	visitors (p2pp)
<code>w2p2off</code>	astro	astro	FEROS pipeline	data & pipelines
<code>w2p2pl</code>	pipeline	pipeline	w2p2pl pipeline	WFI/FEROS data handling
<code>wgrond</code>	grond	grond	GROND BOB / FIERA / IRACE	basic user
	grondmgr	—	—	startup, bob , commands

Table 11.2: Common passwords.

Component	User name	Password hint
Graphical interface user	tcs, cam, feros, wfi, grond, dhs, pipeline	.5a...
Other users	visitor, service	.5a...
Instrument manager	ferosmgr, grondmgr, wfimgr	pin2...
Workstation administrator	root	2be1...
Remedy tickets	2p2	.5a...
Observing tool	0	OHS4good
Dome auxiliary functions		.5a...
p2pp for MPIA	MPGUtility, MPGDDT	MPG@...

Table 11.3: Reboots you may (will) have to do besides those of the aforementioned computers.

Component	Reboot command	Alternative reboots
TCS LCU/VME	<code>lccBoot lte2p2</code>	rsh vxte2p2 reboot Reset button, VME rack, computer room at telescope*
WFI FIERA	<code>lccBoot wwffcd*</code>	rsh -1 fcdrun wwffcd reboot
FEROS LCU	<code>lccBoot lfeics1</code>	FEROS ICS, menu LCU → Reboot rsh -1 fcdrun lfeics1 reboot
FEROS AG	<code>lccBoot w2p2cam</code>	rsh <code>12p2cam</code> reboot Reset button, rack, FEROS room at telescope* Unplug rack, FEROS room at telescope*
FEROS FIERA	<code>lccBoot wfefcd*</code>	rsh -1 fcdrun wfefcd reboot
GROND FIERA		rsh <code>root@wgrccd</code> reboot Power switch, FIERA WS, computer room at telescope*
GROND IRACE		rsh <code>root@wgrdcs</code> reboot Power switch, IRACE WS, computer room at telescope*
GROND AG	<code>lccBoot w2p2agr</code>	rsh <code>12p2agr</code> reboot
User WS		call at Paranal 5959 to reboot <code>uws2p2</code> , first close all terminals

* Untested. * Manual reboot needed if soft fails.

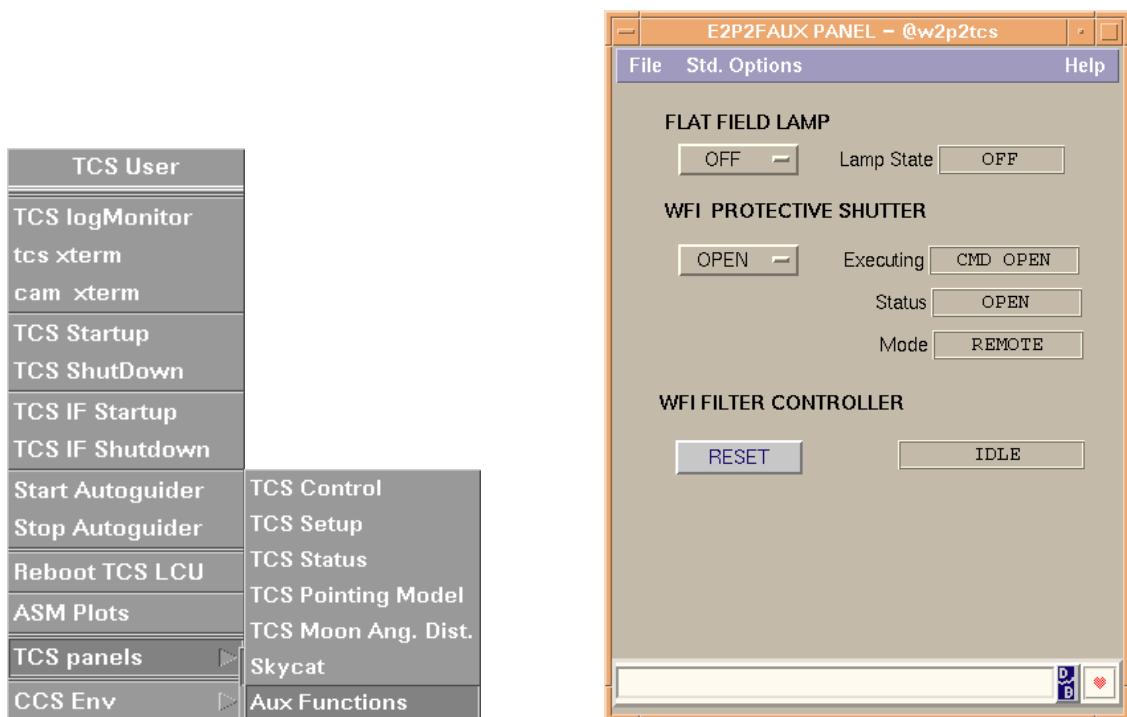


Figure 11.5: The [Auxiliary Functions](#) panel (right) is opened using the menu on the TCS machine (left). It is mostly used to switch the flat field lamp on and off, and to open or close the [WFI](#) protective shutter.

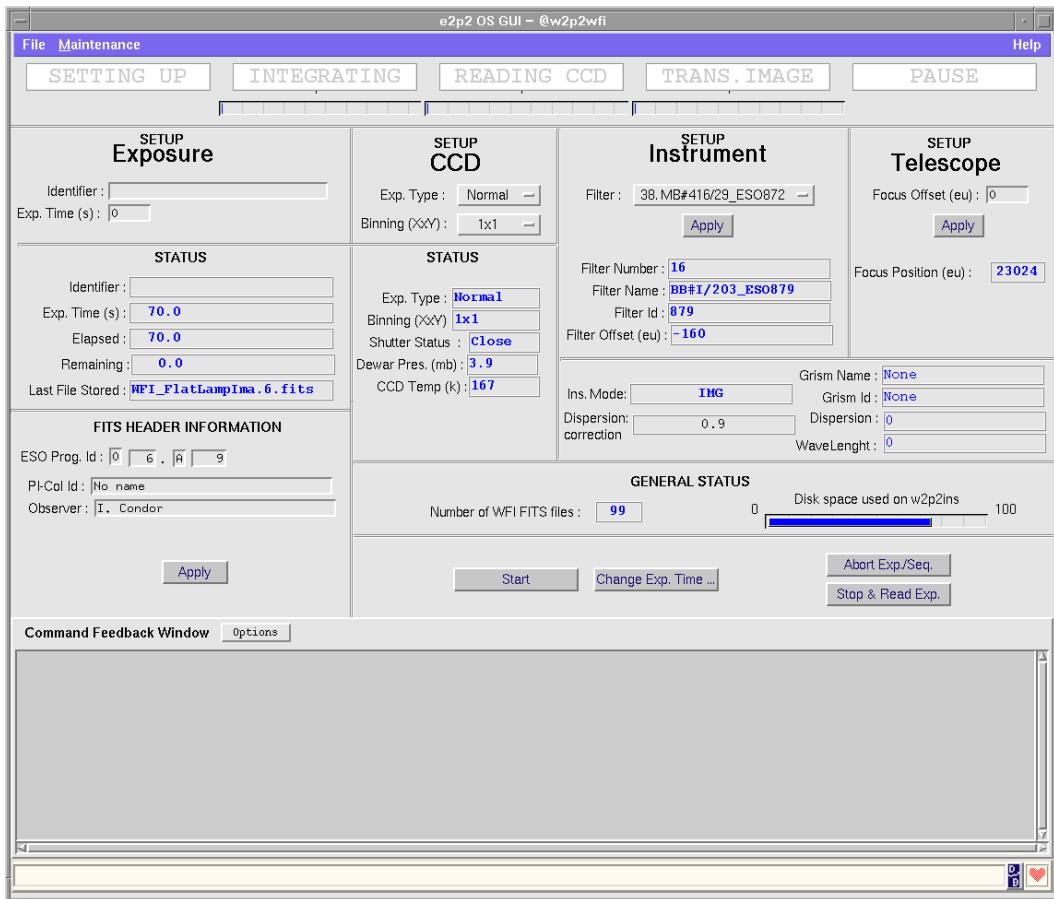


Figure 11.6: The WFI OS GUI can be used to change filters manually or take/abort CCD exposures.

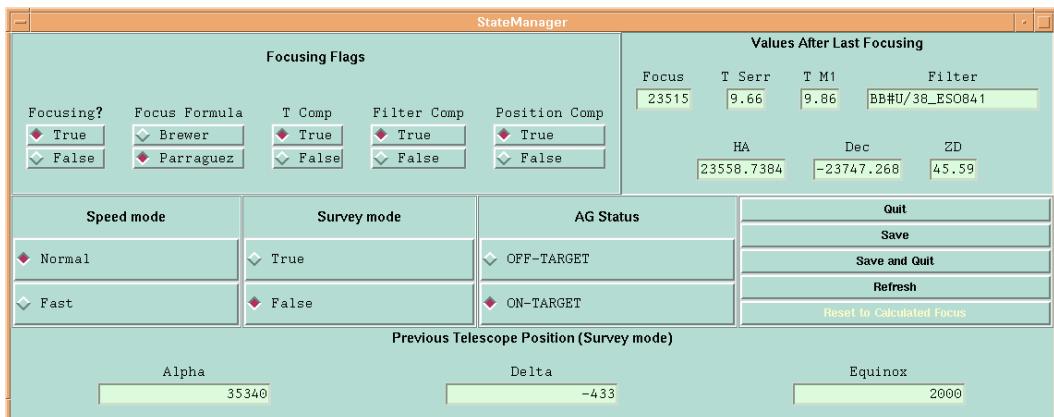


Figure 11.7: The WFI state manager holds information on telescope focus, also used for FEROS.

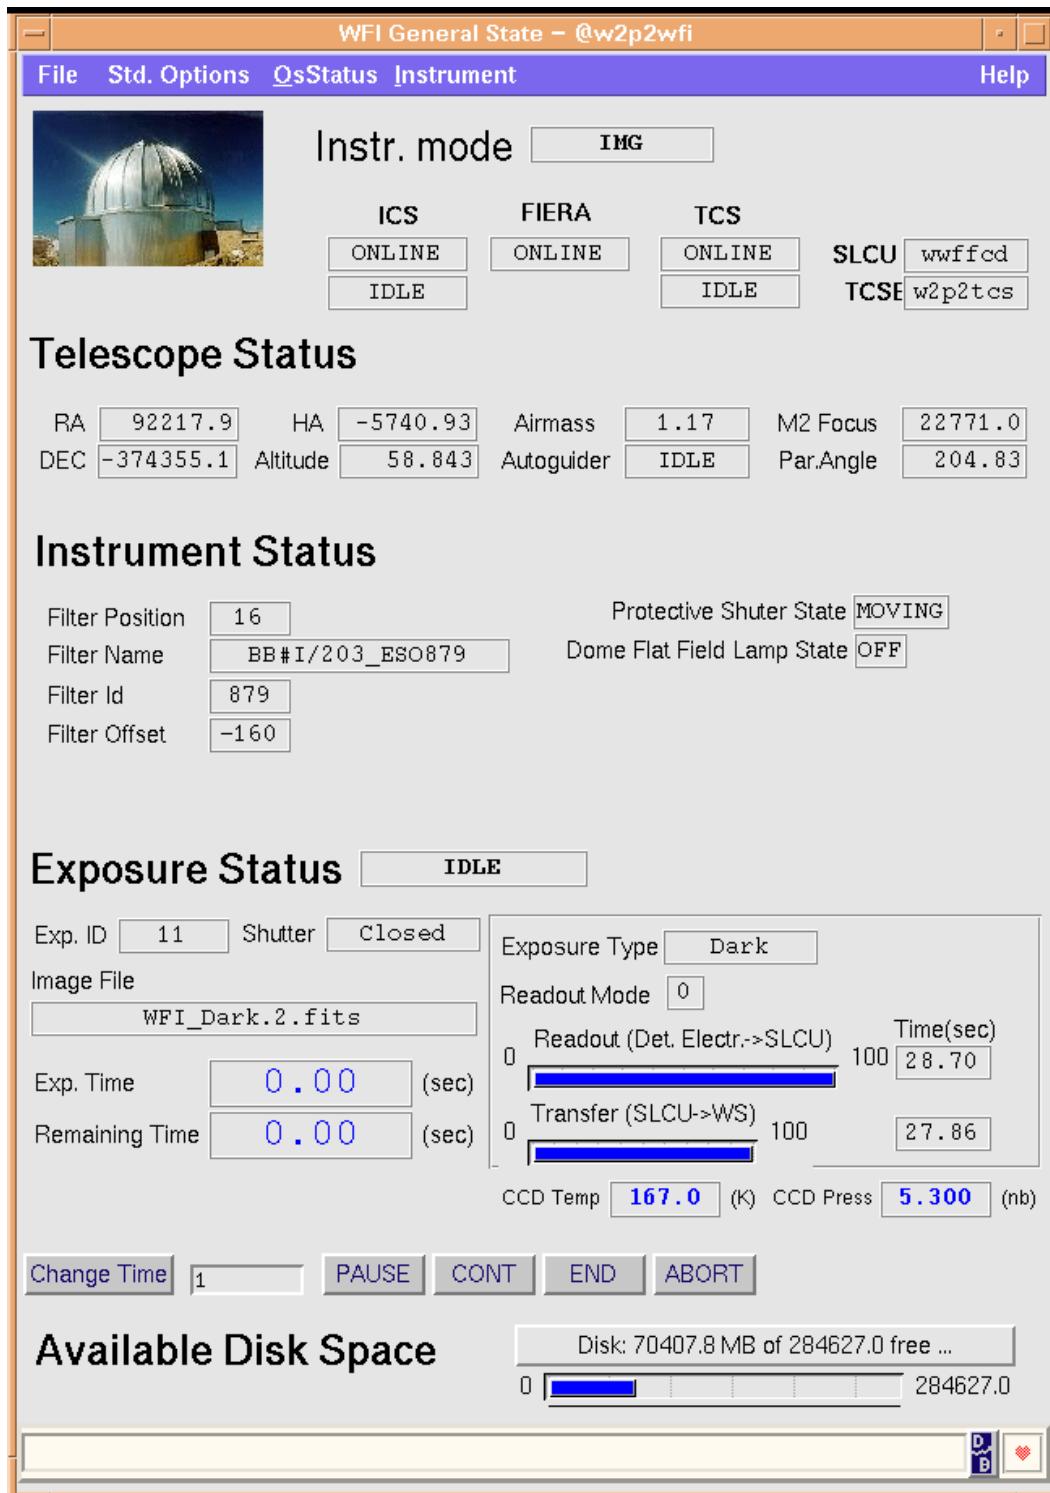


Figure 11.8: The **WFI** general state panel gives information about exposure, filters, and connection to **TCS**.

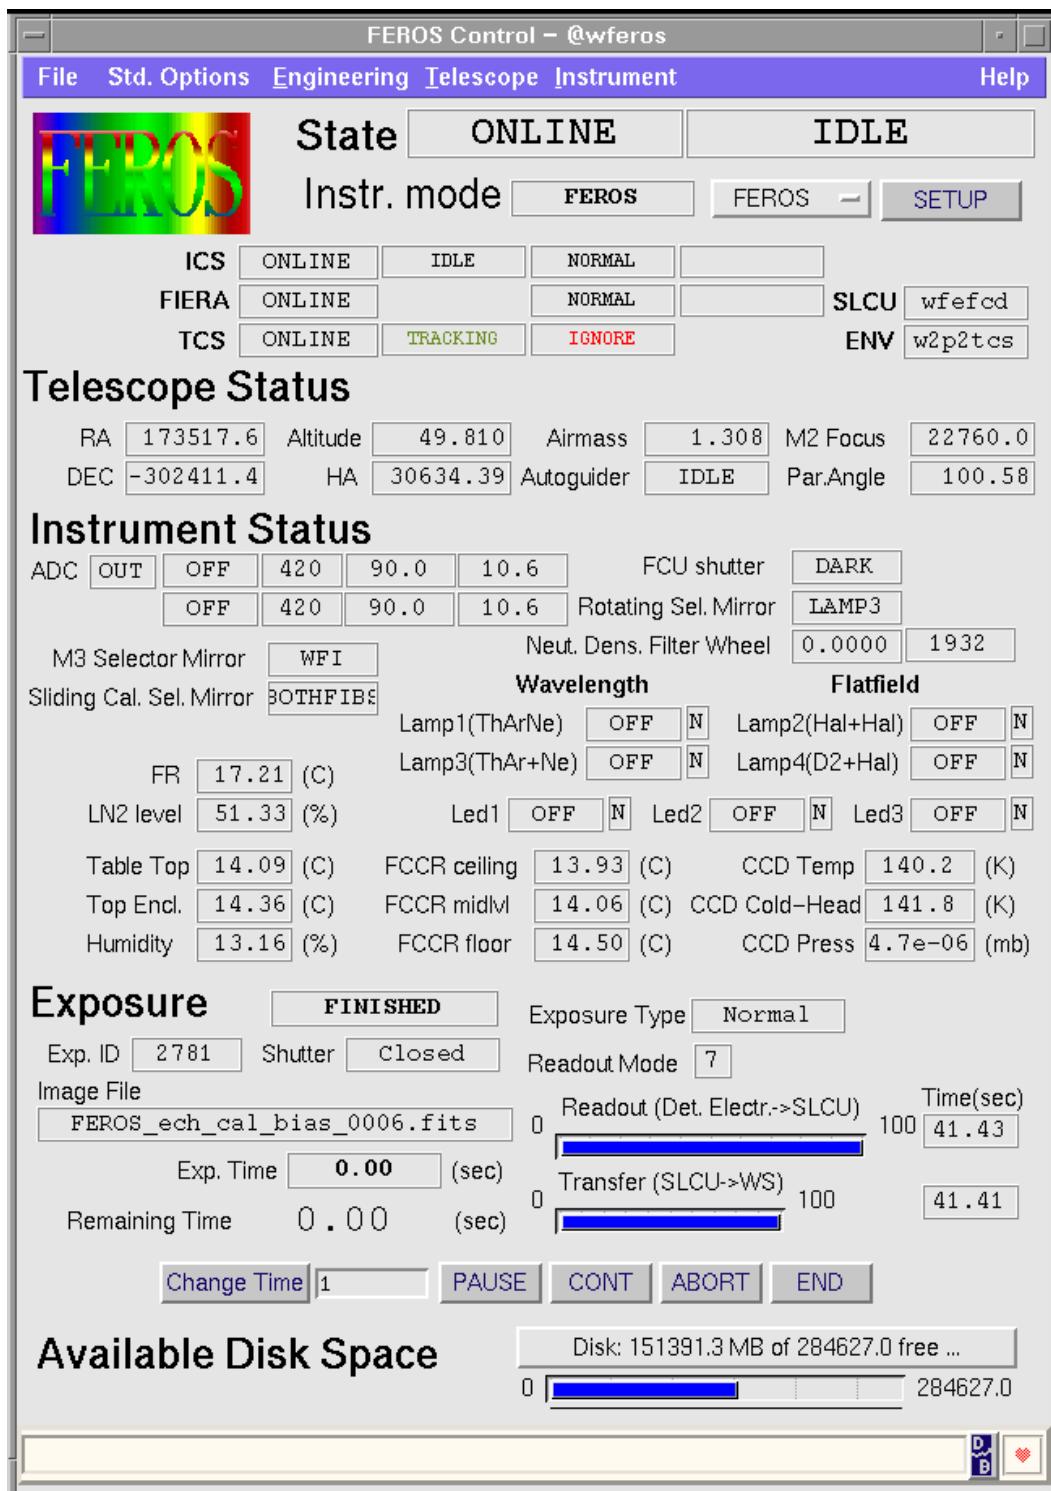


Figure 11.9: The **FEROS** control panel gives information about exposure, settings, lamps, and connection to **TCS**. Exposure times can be switched.

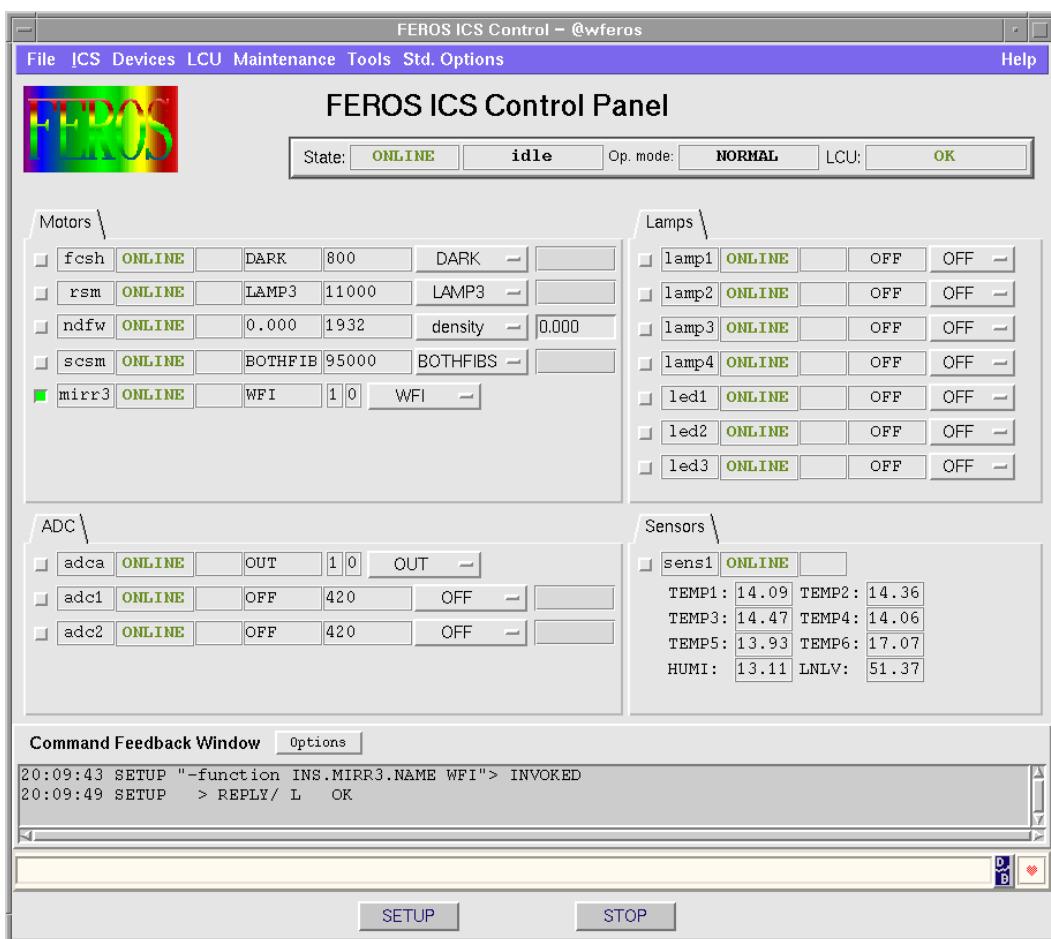


Figure 11.10: The FEROS ICS is mainly used to change the mirror `mirr3` from and back to `WFI`.

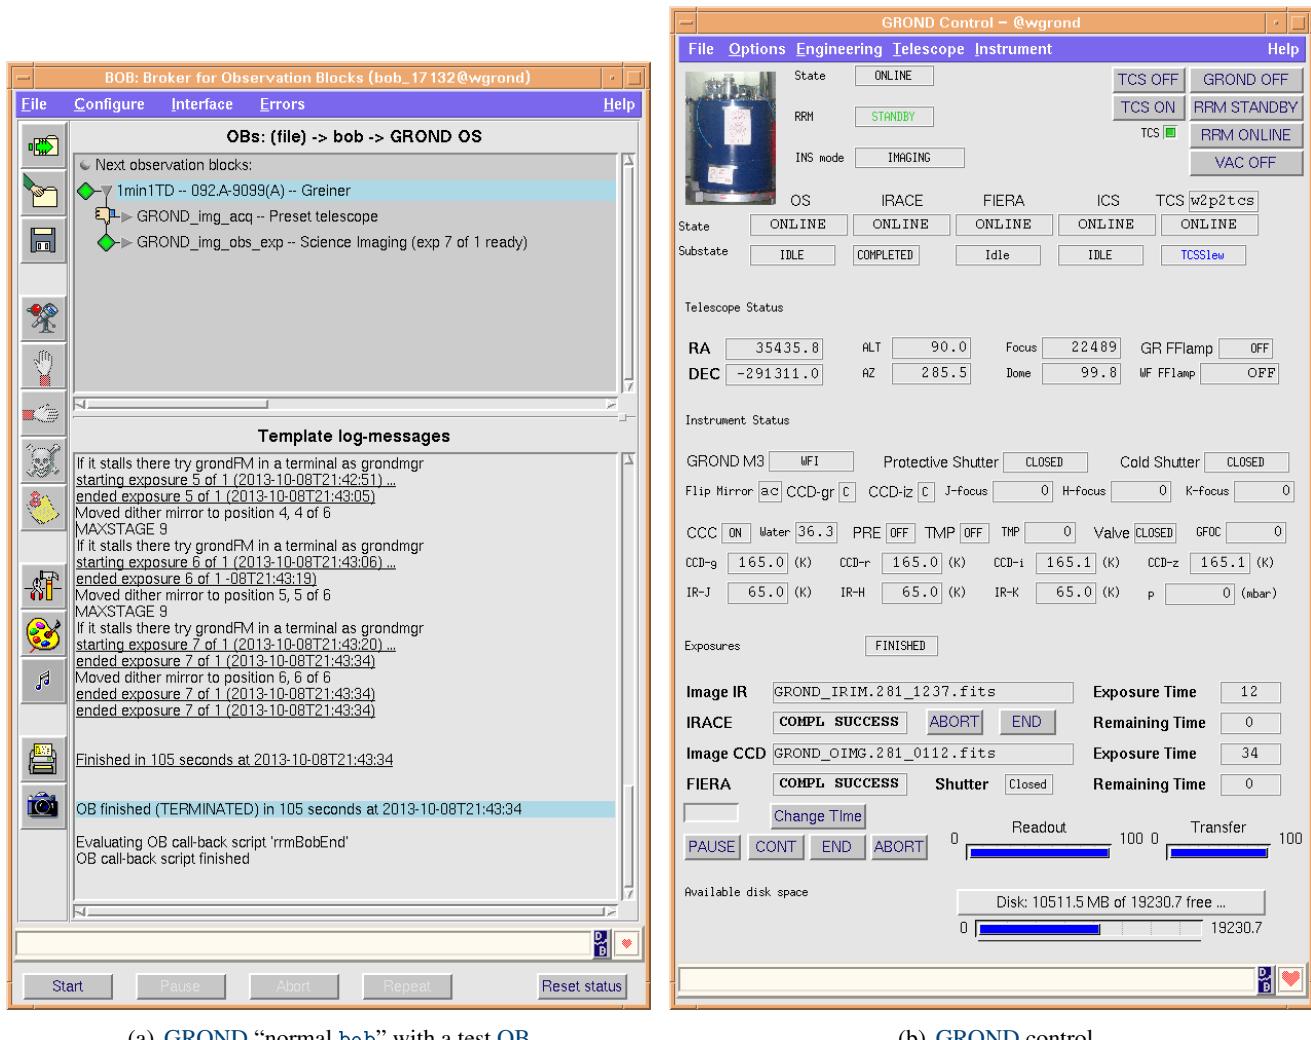


Figure 11.11: The main displays of GROND.

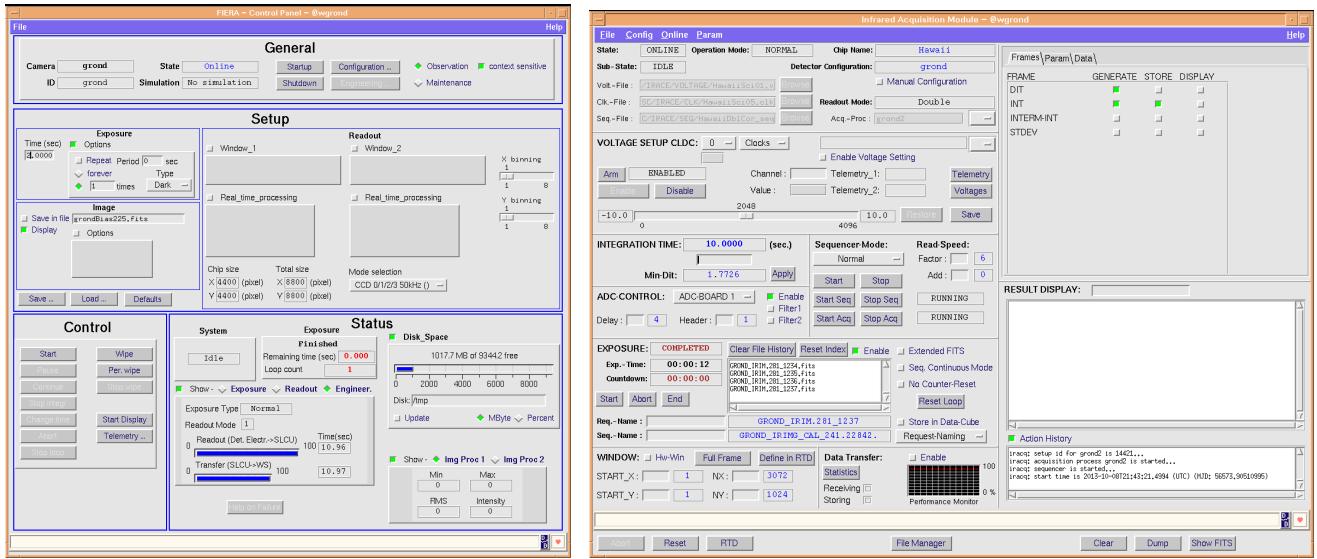


Figure 11.12: Control panels for the detectors.

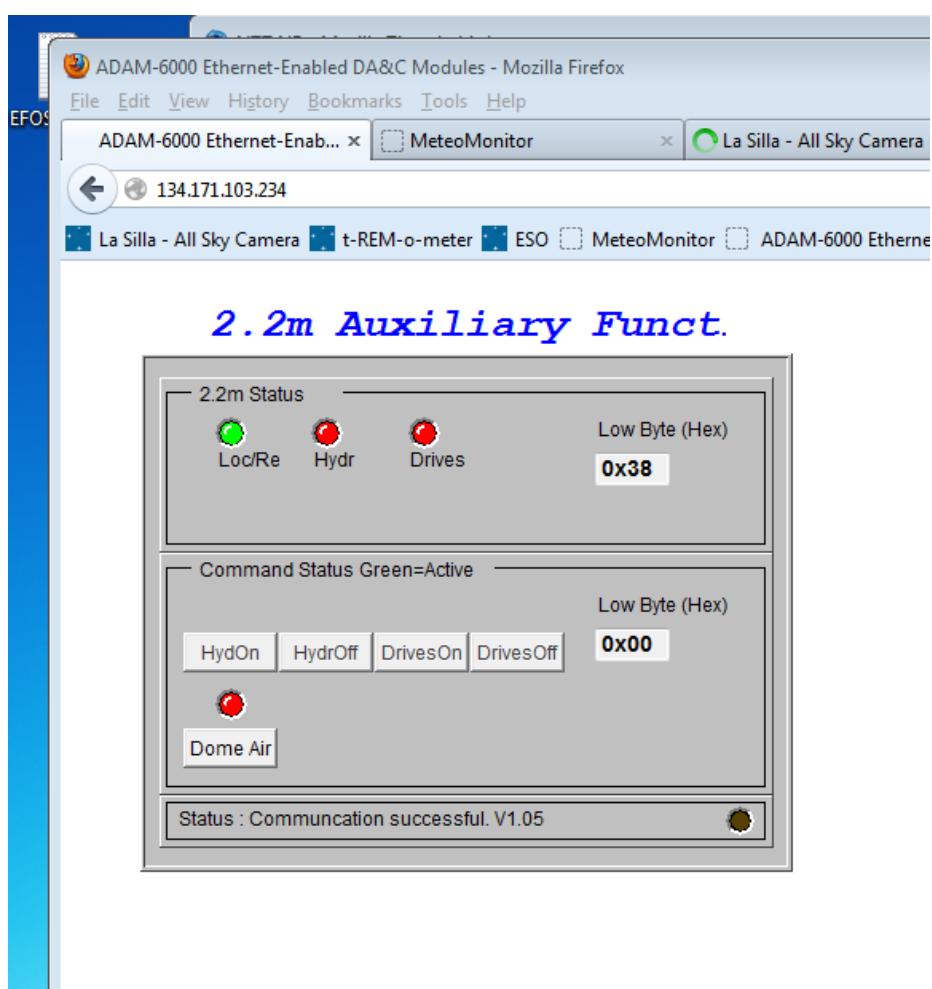


Figure 11.13: Dome Auxiliary Functions.

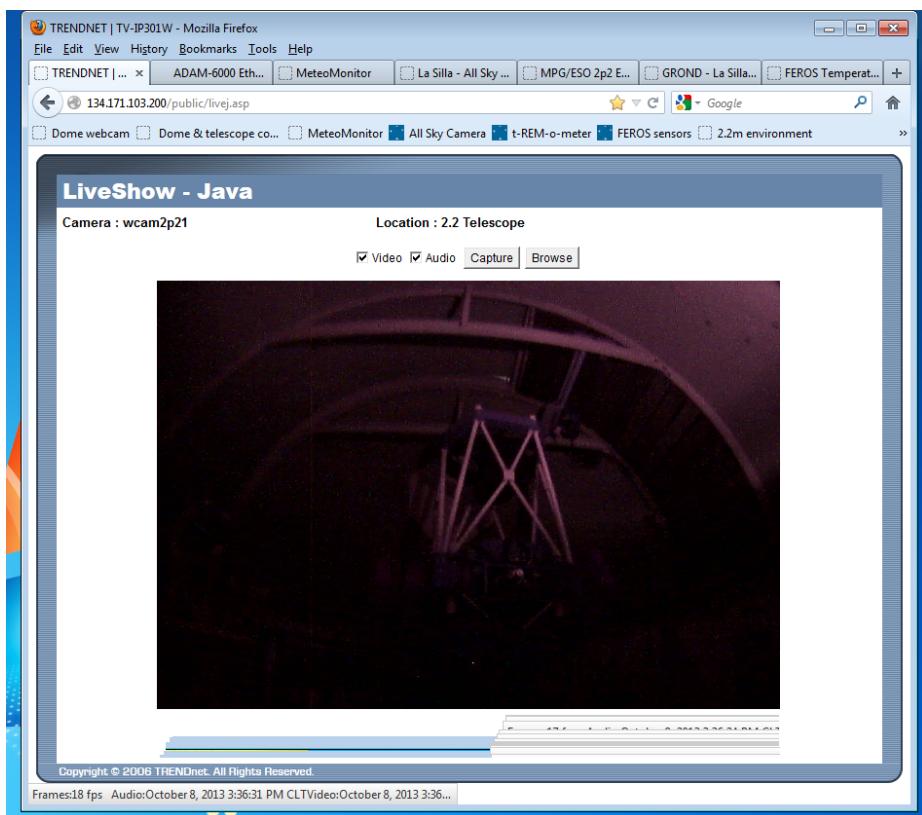


Figure 11.14: dome webcam



Glossary

ADAM

Telescope hydraulics and mirror cover control system. [20](#), [79](#)

ADC

atmospheric diffraction corrector [53](#), [73](#)

AG

autoguider [21](#), [23](#), [30](#), [47](#), [51](#), [53](#), [63](#), [66–68](#), [71](#), [73](#), [79](#), [90](#), [91](#)

Auxiliary Functions

Panel with cryptic title E2P2FAUX PANEL (Fig. 11.5, p. 94) controlling WFI shutter and flat-field lamp. [33](#), [34](#), [38](#), [57](#), [58](#), [65](#), [73](#), [94](#)

bob

broker for observing blocks [18](#), [22](#), [24](#), [25](#), [29](#), [33](#), [34](#), [38](#), [41–43](#), [45–47](#), [49](#), [56](#), [59](#), [62](#), [70–73](#), [81](#), [93](#), [99](#)

data subscriber

Software that fetches the FEROS data for reduction. [10](#), [63](#), [64](#), [74–76](#)

Dome Auxiliary Functions

ADAM 6000 tab of mozilla on the Windows desktop that contains hydraulics and ventilation control of the dome. [10](#), [22](#), [37](#), [57](#), [58](#), [80](#), [100](#)

dome webcam

View into the dome given by the TRENDNET tab of mozilla on the Windows desktop. [10](#), [57](#), [58](#), [101](#)

DRS

data reduction software [9](#), [17](#), [21](#), [30](#), [31](#), [34](#), [63](#), [64](#), [74](#), [75](#)

FEROS

Fibre-fed Extended Range Optical Spectrograph [9](#), [10](#), [17](#), [21](#), [23](#), [25](#), [26](#), [29–31](#), [34](#), [38](#), [41–43](#), [45](#), [50–53](#), [55](#), [58](#), [59](#), [63–70](#), [72–77](#), [79](#), [81](#), [90](#), [91](#), [95](#), [97](#), [98](#)

FIERA

Electronics systems controlling the optical detectors [65](#), [70–72](#), [78](#), [93](#), [100](#)

GROND

Gamma-Ray Burst Optical/Near-Infrared Detector [10](#), [17](#), [21](#), [24](#), [25](#), [30](#), [32](#), [38](#), [41–43](#), [45–47](#), [49–51](#), [54](#), [55](#), [58](#), [59](#), [63](#), [65](#), [67](#), [70–73](#), [83](#), [90](#), [99](#), [100](#)

ICS

instrument control software 21, 38, 58, 65, 73, 98

IRACE

Electronics systems controlling the infrared detectors. 70, 84, 85, 93, 100

12p2agr

LCU controlling the GROND autoguider 67, 68, 93

12p2cam

LCU controlling the FEROS autoguider 6, 66–68, 79, 93

LCU

Logical control unit, machine in a rack that controls an instrument or telescope subsystem. 19, 66, 68, 79

lfeics1

LCU of the FEROS instrument control software 93

lte2p2

LCU of the telescope control software 93

OB

observing block 17, 18, 25, 33, 34, 38, 41–47, 52, 53, 55, 61, 72, 74, 99

ot

observing tool 33, 56, 61–64

p2pp

phase 2 preparation tool 17, 56, 61–64

preset

Telescope movements (right ascension, declination, and secondary mirror focusing) needed to point at a new source. It is also used as a verb to refer to the action of ordering the telescope to move. 33, 38, 42, 49, 51, 54–56, 80

RTD

real time display 22, 24, 25, 28, 29, 43, 54, 55, 71, 91

TCS

telescope control software 17, 20–23, 25, 28, 31, 37, 38, 43, 44, 46, 50, 57, 58, 63–65, 68–74, 77, 79–81, 85, 86, 89–91, 93, 96, 97

uws2p2

User worksation of the 2.2m metre telescope. All workstation are virtually run on it. 64, 93

w2p2dhs

Workstation controlling the observing blocks 64, 93

w2p2ing

Workstation of WFI 64, 93

w2p2off

Workstation controlling the reduction of FEROS data 64, 75, 93

w2p2p1

Workstation controlling the communication with the ESO database 64, 76, 93

w2p2tcs

Workstation of the Telescope Control software 64, 71, 72, 93

wfefcd

Workstation controlling the FEROS detector electronics (FIERA) 93

wferos

Workstation of FEROS 64, 93

WFI

wide-field imager 17, 21–23, 26–28, 31, 33, 34, 38, 41, 43–45, 49–51, 53, 55, 56, 58, 59, 63–65, 69–73, 81, 85, 86, 89–91, 94–96, 98

wgrccd

Workstation controlling the GROND optical detector electronics (FIERA) 93

wgrond

Workstation of GROND 93

Windows desktop

Rightmost computer in the control room that controls the dome. 17, 28, 37, 57, 58, 104

wwffcd

Workstation controlling the WFI detector electronics (FIERA) 93