




Renbotics

Side Shield

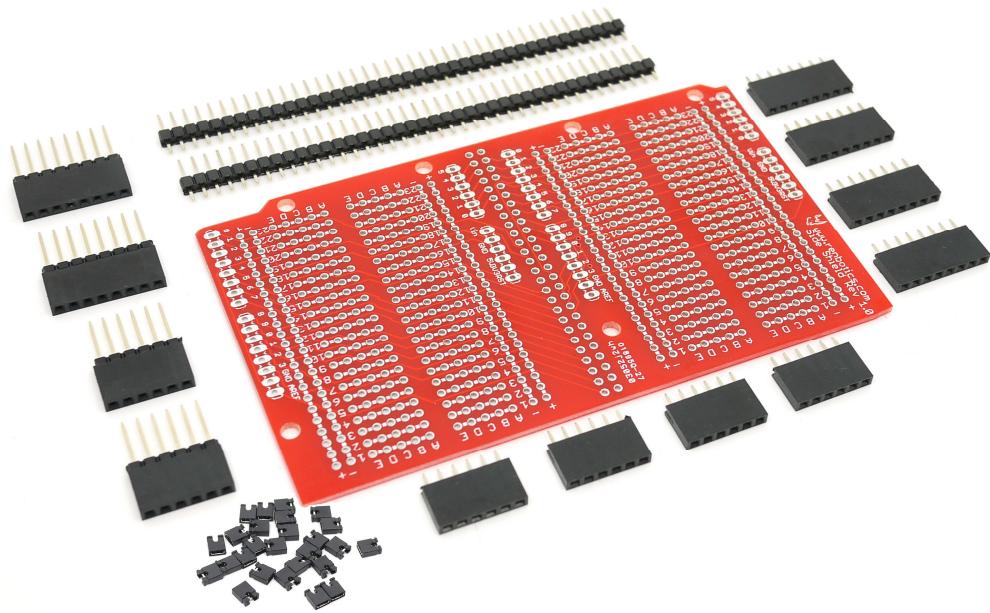

Applications

- Robotics
- Animatronics
- Mechatronic Art

Features

- Configurable Pin Mappings
- 2 x 322 Point breadboard style prototyping areas
- Compatible with Arduino Duemilanove and Arduino Uno



www.renbotics.com

Renbotics Side Shield Rev 1.0
Support: support@renbotics.com

Contents

Contents	2
Tables and Images	2
1. License	3
2. Disclaimer of Liability	3
3. Description	3
4. Features.....	3
5. Applications	3
6. Parts List.....	4
7. Assembly	5

Tables and Images

Image 1: Renbotics Side Shield Overview

Image 2: Renbotics Side Shield Parts

Image 3: Assembly Step 1

Image 4: Assembly Step 2

Image 5: Assembly Step 3

Image 6: Assembly Step 4

Image 7: Assembly Step 5



1. License



Renbotics Side Shield Rev 1.0 by [Adriaan Swanepoel](#) is licensed under a [Creative Commons Attribution 2.5 Australia License](#).

2. Disclaimer of Liability

Renbotics is not responsible for any special, incidental, or consequential damages resulting from any breach of warranty, or under any legal theory, including lost profits, downtime, good-will, damage to or replacement of equipment or property, and any costs or recovering of any material or goods associated with the assembly or use of this product. Renbotics reserves the right to make substitutions and changes to this product without prior notice.

3. Description

The Renbotics Side Shield makes it easy to extend your Arduino shield stacking sideways, remap conflicting pins between shields, and simplify using 3.3V shields with 5V Arduino's or compatible.

4. Features

- Configurable Pin Mappings
- 2 x 322 Point breadboard style prototyping areas
- Compatible with Arduino Duemilanove and Arduino Uno

5. Applications

- Robotics
- Animatronics
- Mechatronic Art



6. Parts List

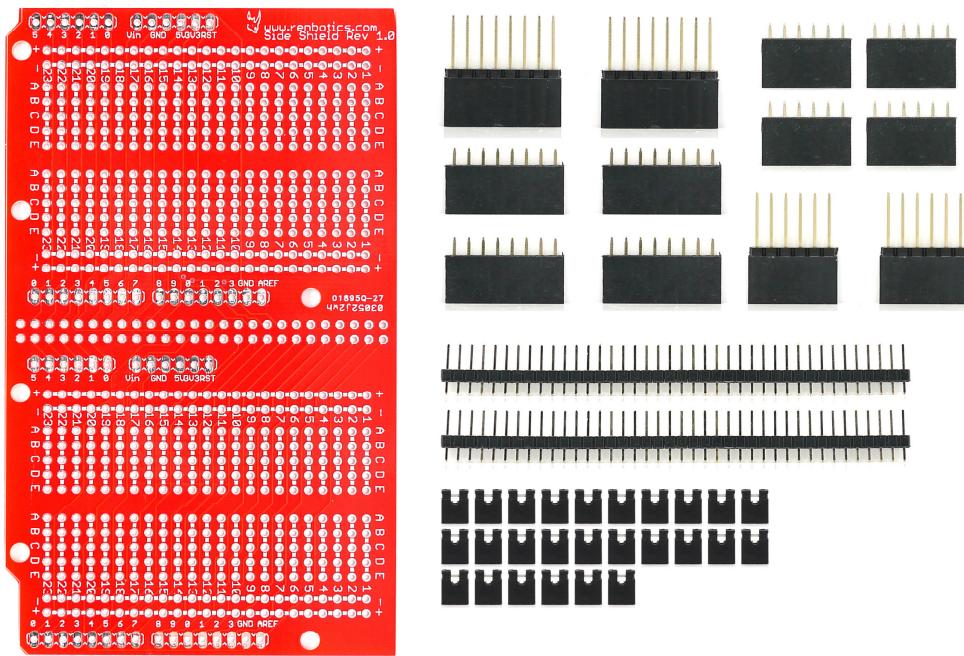


Image 2: Renbotics Side Shield Parts

- 1 x Renbotics Side Shield Bare
- 2 x 40 pin Male Breakaway Headers
- 2 x 6 pin Female Shield Stacking Headers
- 2 x 8 pin Female Shield Stacking Headers
- 4 x 6 pin Female Headers
- 4 x 8 pin Female Headers
- 26 x Jumpers



www.renbotics.com

Renbotics Side Shield Rev 1.0
Support: support@renbotics.com

7. Assembly

1. Cut the two 40 pin male headers to length and solder in place.

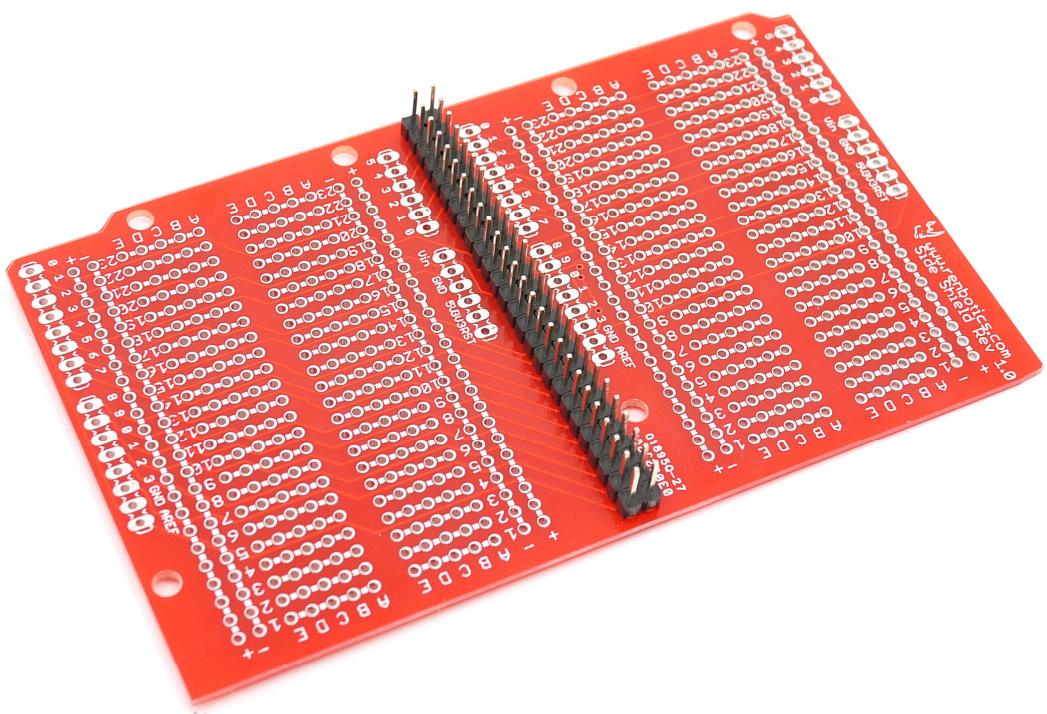


Image 3: Assembly Step 1



www.renbotics.com

Renbotics Side Shield Rev 1.0
Support: support@renbotics.com

2. Solder 2 x female 6 pin headers and 2 x female 8 pin headers to the left side
- OR
- Solder 2 x female stacking 6 pin headers and 2 x female 8 pin headers. See step 5 for more information.

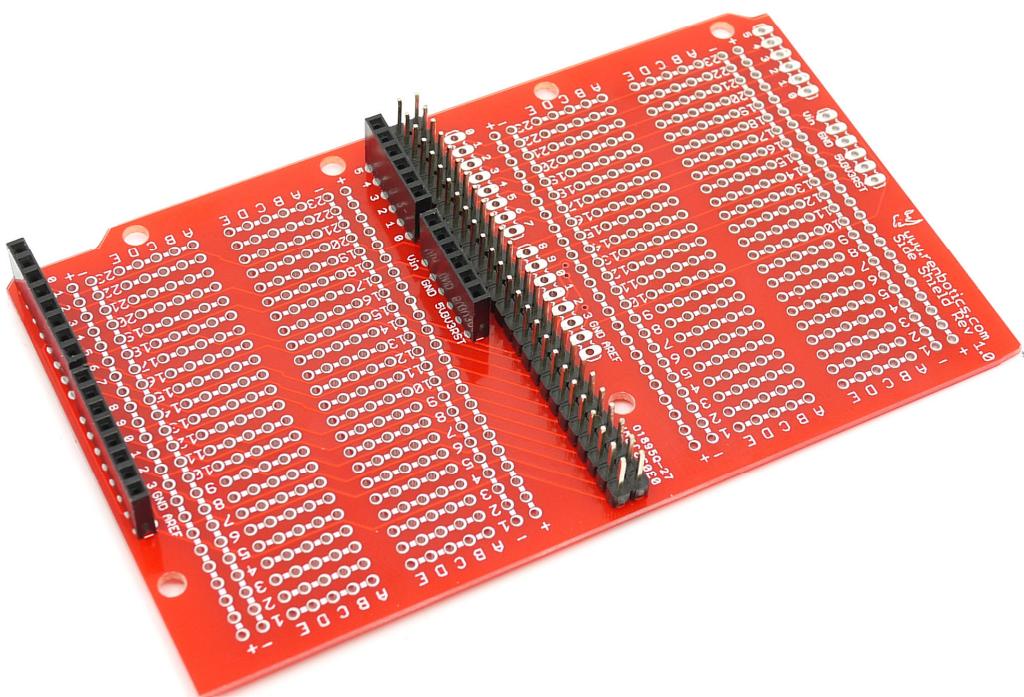


Image 4: Assembly Step 2



www.renbotics.com

Renbotics Side Shield Rev 1.0
Support: support@renbotics.com

3. Solder 2 x female 6 pin headers and 2 x female 8 pin headers to the right side

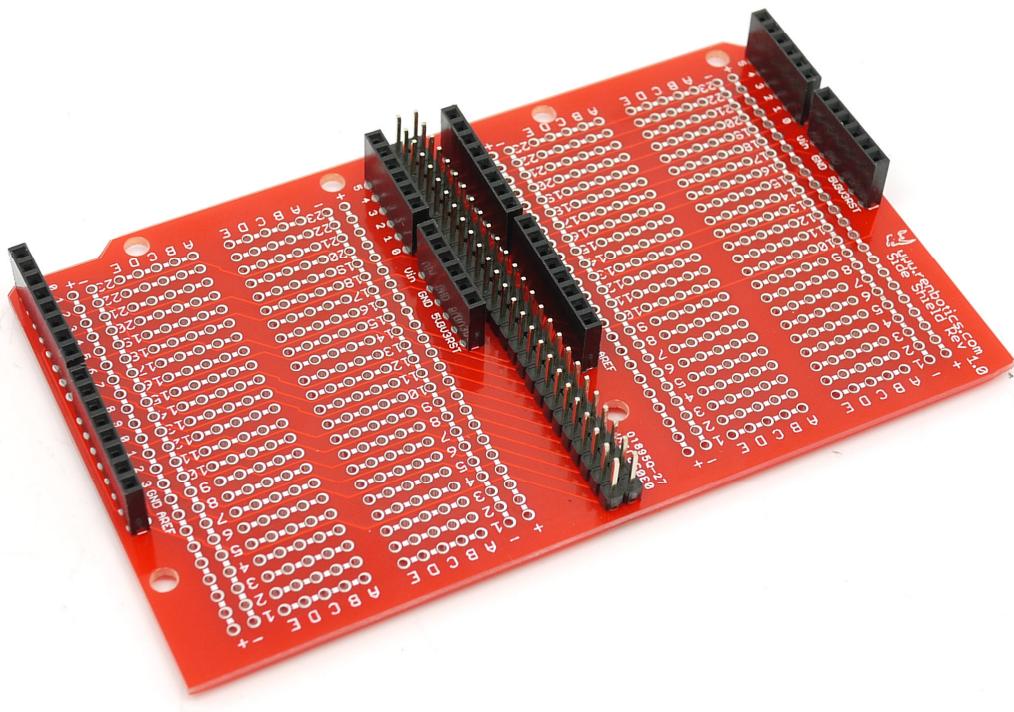


Image 5: Assembly Step 3



www.renbotics.com

Renbotics Side Shield Rev 1.0
Support: support@renbotics.com

4. For straight through connections from the left to the right side install the 26 jumpers.

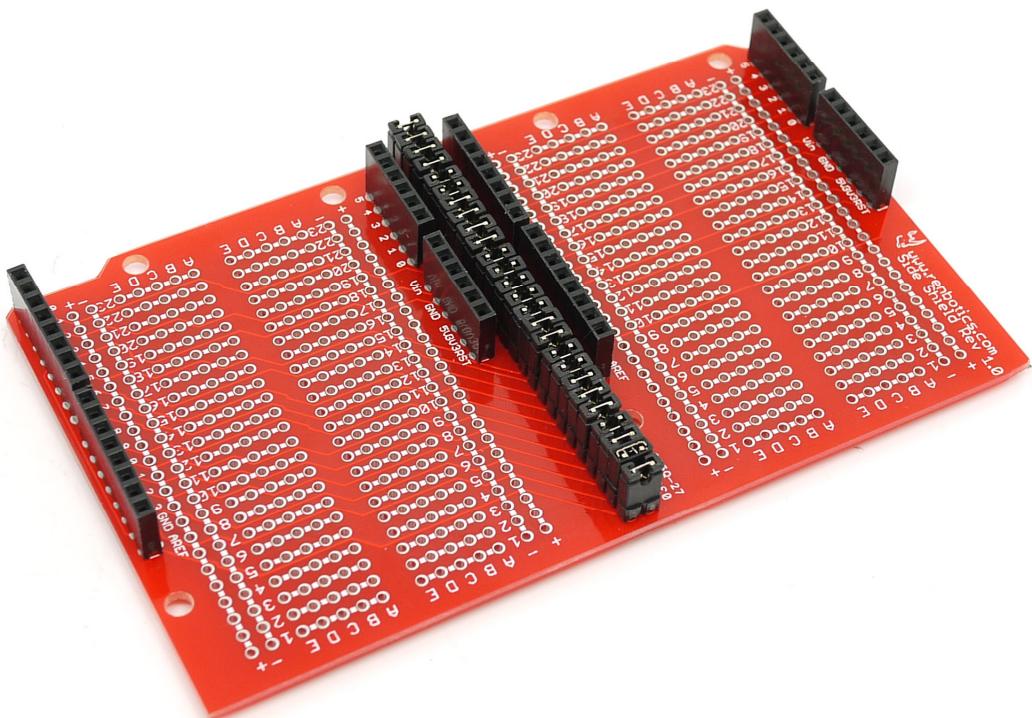


Image 6: Assembly Step 4



www.renbotics.com

Renbotics Side Shield Rev 1.0
Support: support@renbotics.com

5. Optional: Remove the female headers from your Arduino, Seeeduino etc. and replace with the supplied stacking headers.

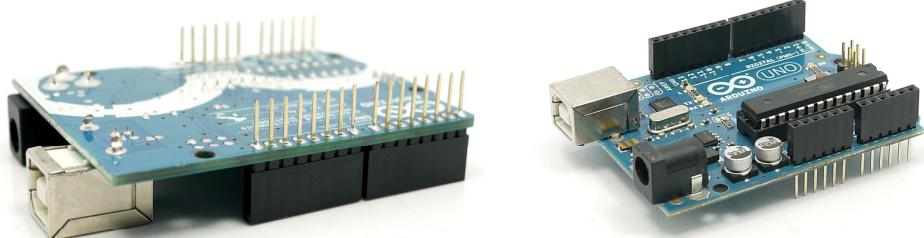


Image 7: Assembly Step 5