2016 PHANTOM TETH-AIR INSTALL, POLARIS AXYS





Locate the Upper Control Module (UCM)

Apply foam tape to back.

Position central to the throttle block.

Secure with medium wire ties, ensure that there is NO interference with flipper operation. Be careful not to synch wires under ties.

Position proximity sensor cable above hand.

Warming the sensor cable with a blow-dryer is useful for molding to desired shape.

Feed cable down to engine compartment, secure with wire ties, leave some slack.



Remove the side panels, hood and counsel.

The AXYS has 2 nylon bags to protect connectors. The bag behind the steering support contains the double blade tether plug.


Locate the factory tether connector now.

Locate the Lower Control Module LCM)

With wire ties, hang the (LCM) from the wiring harness that is strapped under the aluminum structure



Connect the Black and Green Phantom wires to the factory double blade tether plug. 11 inch wires are ideal. Polarity is not important.




Crimp a male blade connector on the Yellow wire (TACH), ideal wire length is 6 inches. Plug into the T-Tap connector. Use wire ties to provide strain relief.

Carefully clip the T-Tap connector on to the wire, squeeze the connector with plyers to close.

Connect the (UCM) to the (LCM) The connector is indexed so do not force or overtighten. Also check to make sure the large connector is also gently tightened.

Locate the DC Power plug above the clutch guard. Use the matching connector to connect the Phantom Brown to the sleds Red/White wire (+) and the Orange to the sleds Brown (Ground) Use wires at full length. Secure with ties.

Note: The Red Phantom wire is not used for Normally Open installations. Cut and tape off the Red wire to stop it from accidentally grounding. See typical wiring diagram below. The Phantom Green and Black wires (A-A) can also be connected to the factory tether plug if available.

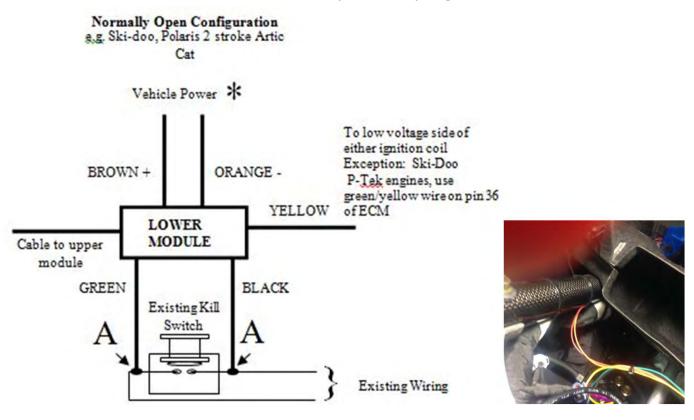

Secure all loose wires with wire ties. Avoid hot surfaces or sharp corners. There is an alternate power plug located behind the headlight if required. It is a male/female bullet connector.

Replace counsel, hood and side panels.

Don't forget any plugs, pins or bolts.

Apply the supplied decal and set up your Phantom as per the manual. Enjoy safe riding.