CDP-791/X111ES

SERVICE MANUAL

US Model Canadian Model

CDP-X111ES



AEP Model UK Model CDP-791

Photo: CDP-791

SPECIFICATIONS

Compact disc player

Frequency response $2 Hz - 20 kHz \pm 0.5 dB$

Signal-to-noise ratio

More than 108 dB

Dynamic range

More than 98 dB

Harmonic distortion

Less than 0.0027%

Output level 2 V (at 50 kilohms)

Load impedance over 10 kilohms

Load impedance over 50 kilohms

Output level max. 2 V (at 50 kilohms)

Channel separation

More than 100 dB

Outputs

LINE OUT (FIXED)

(phono jacks)

LINE OUT

(VARIABLE)

(phono jacks)

DIGITAL OUT

(OPTICAL) (optical output

connector)

PHONES

(stereo phone jack)

Output level max 10 mW Load impedance 32 ohms

Wave length 660 nm

Output level - 18 dBm

General

Power requirements

US, Canadian Model:

120 V AC, 60 Hz

AEP Model:

220 V - 230 V AC, 50/60 Hz

UK Model:

240 V AC, 50 Hz

Model Name Using Similar Mechanism	CDP-291/391
CD Mechanism Type	CDM14-5BD1
Optcal Pick-Up Block Type	BU-5BD1

Power consumption 12 W

Dimensions (approx., 430×110×280 mm (w/h/d)

including projections) (17×43/4×111/6 inches)

Weight (approx.)

4 0 kg (8 lbs 14 oz)

Supplied accessories

Audio cord

(2 phono plugs - 2 phono plugs)

Remote commander

R6 (AA) batteries

2

Remote commander RM-D791

Remote control

Infrared control

system

Power requirements

3 V DC with two R6 (size AA) batteries

Dimensions

Approx. $62 \times 20 \times 175$ mm (w/h/d)

(15/n×13/16×7 inches)

Weight

Approx. 130 g (4.6 oz) Including batteries

Design and specifications subject to change without notice.



COMPACT DISC PLAYER SONY

SAFETY CHECK-OUT


After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST


The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

- A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments
- A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
- 3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate lowvoltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

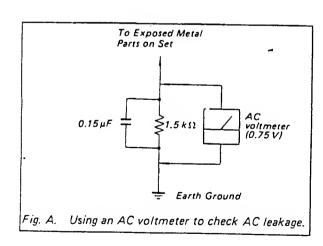

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK A OR DOTTEO LINE WITH MARK A ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUB-LISHED BY SONY.

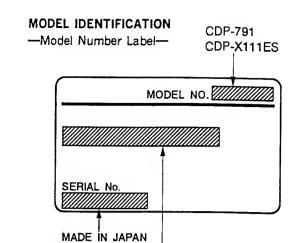

US Model:

MADE IN FRANCE

AC120V 60Hz 12W Canadian Model: AC: 120V 60 Hz 12W AC220 - 230V, 50/60Hz

AEP Model: UK Model:

Cantina

AC240V~50/60Hz

TABLE OF CONTENTS Tid.

Sect	tion <u>Title</u>	Page
Spec	cifications ·····	1
Safe	ty Check-out	2
Mod	del Identification · · · · · · · · · · · · · · · · · · ·	
1.	GENERAL	
	Notes on Handling the Optical Pick-up	
	Block or Base Unit	•• з
	Notes on Laser Diode Emission Check	
	Location of Controls · · · · · · · · · · · · · · · · · · ·	
	Adjusting Operating Voltage · · · · · · · · · · · · · · · · · · ·	
2.	DISASSEMBLY	4
3.	ELECTRICAL BLOCK CHECKING	
	S Curve Check · · · · · · · · · · · · · · · · · · ·	5
	RF Level Check · · · · · · · · · · · · · · · · · · ·	5
	E-F Balance Check · · · · · · · · · · · · · · · · · · ·	
	RF PLL Free-run Frequency Check · · · · · · ·	
	Focus/Tracking Gain	
4.	DIAGRAMS	
	IC101(CXA1372Q)PIN DESCRIPTIONS	. 7
4-1.	Block Diagram ······	
4-2.	Printed Wiring Boards	
4-3.	Schematic Diagram ·····	. 15
5.	EXPLODED VIEWS	· 21
6.	ELECTRICAL PARTS LIST	· 24

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SECURITE!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE A SUR LES DIAGRAMMES SCHEMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ OE FONCTIONNEMENT. NE REMPLACER CES COM-POSANTS QUE PAR DES PIÈCES SONY DONT LES NUMEROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

NOTES ON HANDLING THE OPTICAL PICK-UP **BLOCK OR BASE UNIT**

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential diference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30cm away from the objective lens.

For UK Model and AEP Model


CLASS 1 LASER PRODUCT LUOKAN 1 LASERLAITE KLASS 1 LASERAPPARAT

This Compact Disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the rear exterior.

Adjusting Operating Voltage

For the customers of the model equipped with the voltage selector


Check that the voltage selector is set to the local power line voltage. If not, set the selector to the correct position before connecting AC power cord to a wall outlet.

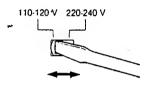

This section is extracted from instruction manual.

SECTION 1

Location of Controls

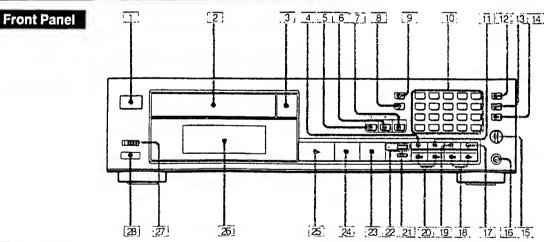


- 1 POWER switch @
- 2 Disc tray 10
- 3 📤 OPEN/CLOSE button @
- 4 PEAK SEARCH button @
- 5 CONTINUE button and indicator @, @, . . .
- 6 SHUFFLE button and indicator @
- 7 PROGRAM button and indicator @, @
- TIME SET button 49, 49
- EDIT/TIME FADE button (1), (1)
- 10 Numeric buttons 29
- 11 REPEAT button @
- 12 > 20 (over 20) button @
- 13 CHECK (program check) button 🙉, 🚳
- 14 CLEAR (program clear) button @. @. @
- 15 LINE OUT/PHONE LEVEL control @

GENERAL

- 16 PHONES jack
- 17 MUSIC SCAN button @
- 19 FADER button @ @
- 20 H◄►► (AMS*) buttons ②. ⑤
- 21 TIME button @
- [22] A. SPACE (auto space)/A. CUE(auto cue) button and auto cue indicator @, @
- [23] (stop) button @
- 24 II (pause) button @
- 图 ► (ptay) button @
- [26] Display window
- 27 TIMER switch @
- 28 Remote sensor @

Remote commander

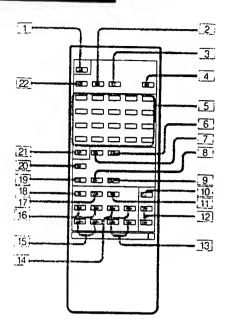

- OPEN/CLOSE button
 ■
- 2 SHUFFLE button @
- 3 PROGRAM button @. @
- 4 M.SCAN (music scan) button @
- 5 Numeric buttons @
- 6 CLEAR (program clear) button @. . .
- 7 CHECK button @, @
- 8 A ← B repeat button €
- 9 A.SPACE (auto space)/A.CUE (auto cue) button @. @
- [10] FADER button 60, 69
- [11] (stop) button @
- Line OUT LEVEL +/- (line out/headphone volume) buttons @
- [13] SLOW (low speed manual search) buttons @
- [14] <> (manual search) buttons @. @
- [15] INDEX buttons @
- [16] I AMS buttons @. @
- [17] II (pause) button @
- [18] ► (play) button @
- [19] CLEAR/REPEAT (A ←→ B repeat clear/repeat) button @

0


- [20] TIME button @
- [21] 20 (over 20) button @
- [22] CONTINUE button . O. O. O.

SECTION 2 DISASSEMBLY

BASE UNIT REMOVAL

Note: Follow the disassembly procedure in the numerical order given.

- 1. Remove CD mechanism from the set and turn over,
- 2. Turn the cam lacktriangle in the Arrow lacktriangle direction by the lacktriangle driver.
- 3. Take out disc table 2.
- 4. Remove bracket yoke 3.
- 5. Remove BU-5BD1 4 in the Arrow 4 direction.

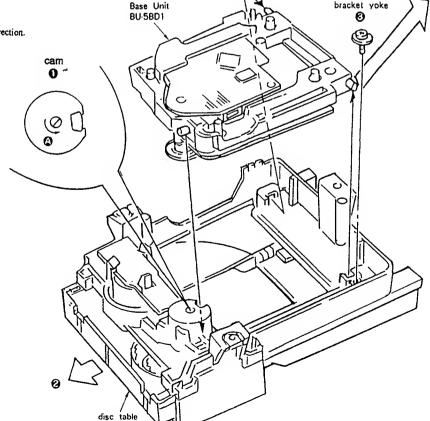


SECTION 3 ELECTRICAL BLOCK CHECKING

Note:


- CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
- 2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
- 3. Use the oscilloscope with more than $10M\Omega$ impedance.
- 4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

S Curve Check

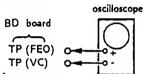


Procedure:

- Connect oscilloscope to test point TP (FEO) on BD board.
- 2. Connect between test point TP (FES) and TP (VC) by lead wire.
- Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
- 4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within 3±1Vp-p.

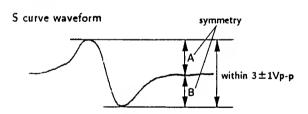

- 5. After check, remove the lead wire connected in step 2.
- Note: Try to mesure several times to make sure that the ratio of A: B or B: A is more than 10:7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

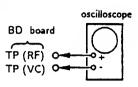


Procedure:


- Connect oscilloscope to test point TP (RF) on BD board.
- 2. Turn Power switch on.
- 3. Put disc (YEDS-18) in and playback.
- 4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note:

Clear RF signal waveform means that the shape "\one " can be clearly distinguished at the center of the waveform.

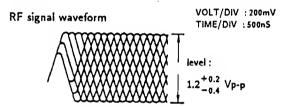

E-F Balance Check

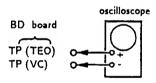

Procedure:

- Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire.
- 2. Connect oscilloscope to test point TP (TEO) on BD board.
- 3. Turn Power switch on.
- 4. Put disc (YEDS-18) in and playback.
- 5. Confirm that the osilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

Traverse oscilloscope




6. Remove the lead wire connected in step 1.

CDP

RF PLL Free-run Frequency Check

Procedure:

1. Connect frequency counter to test point (PCK) with lead wire.

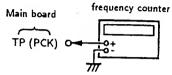

- 2. Turn Power switch on.
- 3. Confirm that reading on frequency counter is 4. 3218MHz.


Focus/Tracking Gain

This gain has a margin, so even if it is slightly off. There is no problem.

Therefore, do not perform, this adjustment.

Please note that it should be fixed to mechanical center position when you moved and do not know original position.

Adjustment Locations: [BD board]

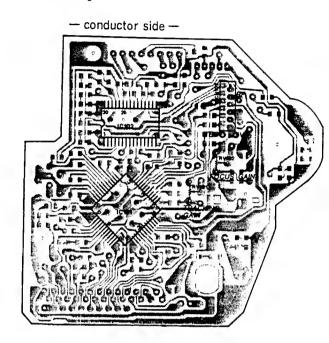

[Main board]

CN301

CN301


CN301


CN301

SECTION 4 DIAGRAMS

IC101 (CXA1372Q) PIN DESCRIPTIONS

PIN NO.	PIN NAME	1/0	- FUNCTION
ı	vc		2.5 Volts power supply.
2	FGD	I	Focus gain adjusting capacitor connected between ② pin and ③ pin.
3	FS3	1	Focus gain adjusting capacitor connected between ② pin and ③ pin.
4	FLB	1	Focus Servo low frequency boost-up capacitor connected.
5	FEO	0	Focus drive output.
6	FE-	1	Focus error amp inverted input.
7	SRCH	1	Connected capacitor to making the focus serch waveform.
8	TGU	1	Tracking gain adjusting capacitor connected between ® pin and ® pin.
9	TG2	1	Tracking gain adjusting capacitor connected between ® pin and ® pin.
10	A V CC		+5 Volts power supply.
11	TAO	0	Tracking drive output.
12	TA-	ı	Tracking amp inverted input,
13	SL+	1	Sled amp non-inverted input.
14	SLO	0	Sled drive output.
15	SL-	1	Sled amp non-inverted input,
16	FSET	I	Phase stabilizer setting resistor connected.
17	ISET	1	Current setting resistor connected,
18	SSTOP	1	Limit switch connection port.
19	AV EE		Ground (0V).
20	DIRC	I	Direct control port, Non-connected,
21	LOCK	1	Sled free-run protection is operate at "L".
22	CLK	1	Serial data transmission clock input form digital signal processor,
23	XLT	I	Latch input from digital signal processor.
24	DATA	I	Serial input from digital signal processor.
25	SENS	0	Outputs internal state corresponding to address.
26	XRST	i	System reset input, Reset at "L".
27	C. OUT	0	Tracking counter output.
28	D GND		Digitel ground, Grounded
29	MIRR	0	Mirror output digital signal processor.
30	DFCT	0	Deffect output, Deffect at "H",
31	ASY	1	Auto symmetry control input.
32	EFM	0	EFM Comparator output.
33	FOK	0	Focus OK.
34	CC2	i	Deffect bottom hold input.
35	CC1	0	Deffect bottom hold output.
36	DV CC		+5 Volts power supply.
37	CB	1	Deffect bottom hold capacitor connected.
38	CP	1	Mirror hold capacitor connected.
39	RFI	1	RF Signal input (Capacitance coupled).
40	RFO	I	RF Signal input (Direct Coupled).
41	DV EE		Grounded (OV).
42	TZC	I	Tracking Zero-cross comparator input.
43	TE	1	Tracking error amp input.
44	TDFCT	1	Deffect correction hold capacitor connected.
45	ATSC	1	Anti-shock input,
46	FZC	1	Focus Zero-cross comparator input.
47	FE	I	Focus error input.
48	FDFCT	I	Deffect correction hold capacitor connected.

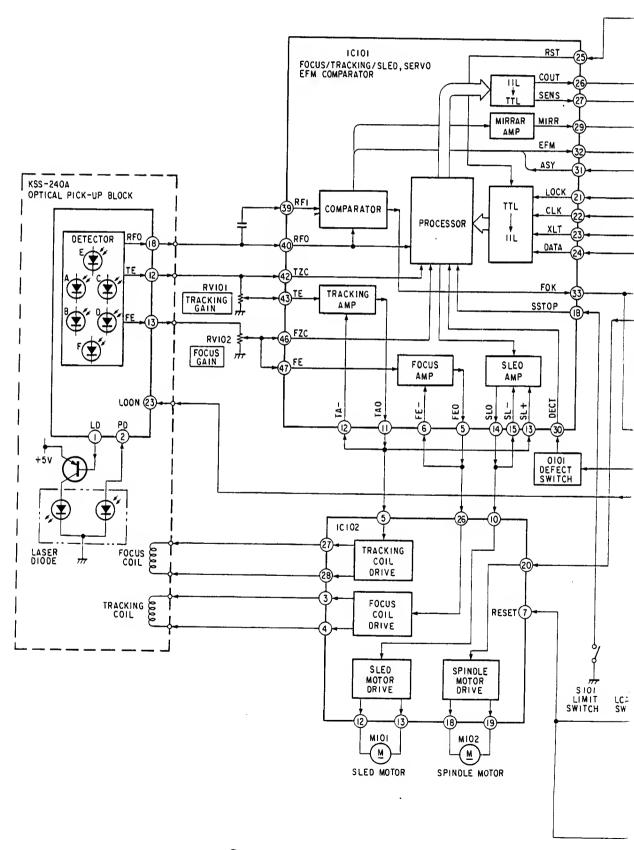


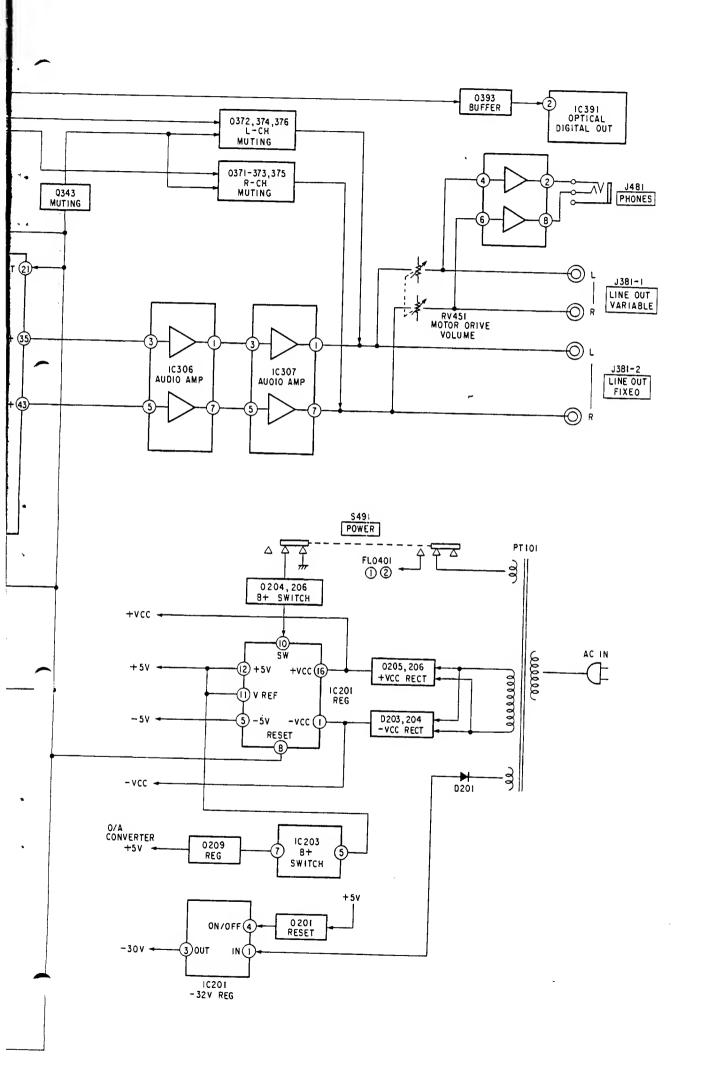

4-2. PRINTED WIRING BOARDS




• Circuit Boards Location

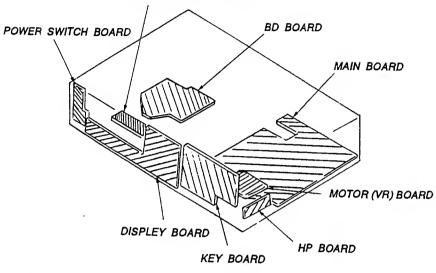



Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D101 D201 D202 D203 D204 D205 D206 D207 D208 D209 D341 D351 D401 D402 D403 D404	B-22 E-19 E-18 E-18 E-17 E-17 G-19 F-17 F-16 F-15 G-13 E-2 E-2 E-3 E-3	IC202 IC203 IC301 IC302 IC303 IC304 IC305 IC306 IC307 IC391 IC401 IC403 IC451 IC471 IC491	G-17 G-16 H-16 G-15 G-14 H-13 E-15 D-15 C-15 B-14 C-9 B-4 H-6 I-7
D405 D406 D407 D408 D409 D410 D411 D412 D413 D414 D415 D416 D417 D418 D419 D420 D421 D421	89999998888888888888888888888888888888	Q101 Q201 Q202 Q203 Q204 Q205 Q206 Q207 Q208 Q209 Q341 Q342 Q343 Q344 Q371 Q372 Q373	D-22 F-19 G-18 F-18 H-18 H-17 G-18 G-18 D-13 D-14 D-13 G-13 B-14 C-16 B-14
IC101 IC102 IC103 IC201	D-21 C-21 B-22 F-19	Q375 Q376 Q393 Q419 Q421	C-14 B-16 B-14 A-5 B-2


- : parts extracted from the component side.
- : parts mounted on the conductor side.

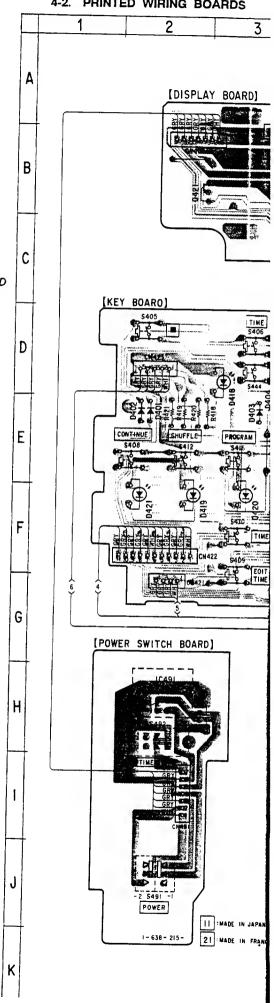

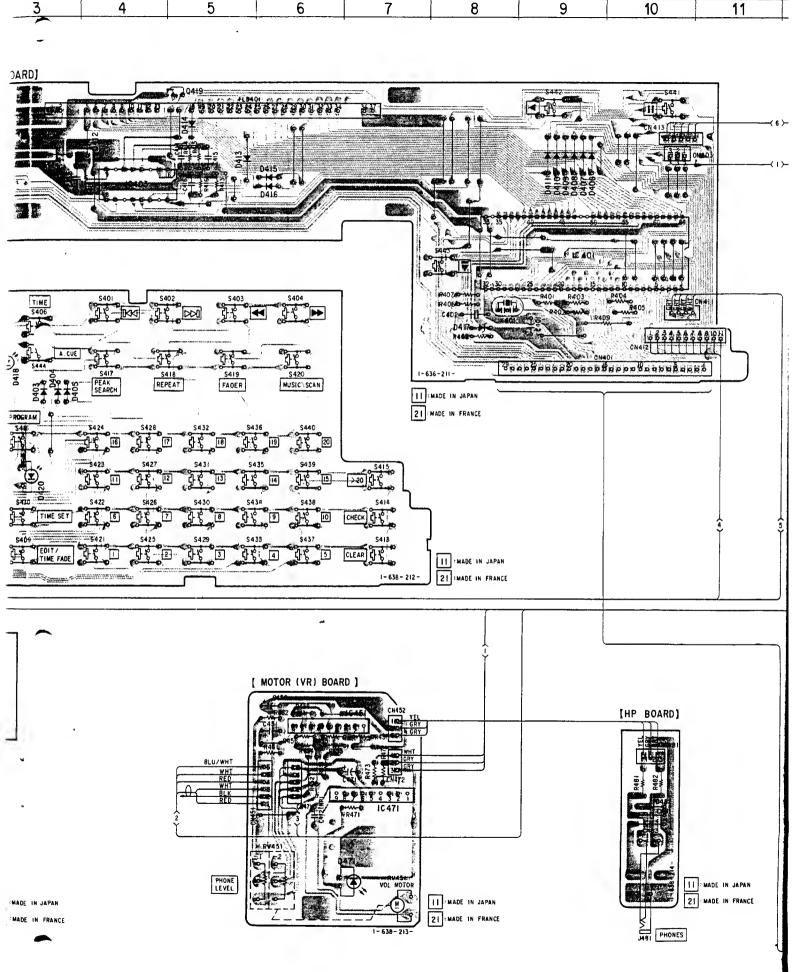


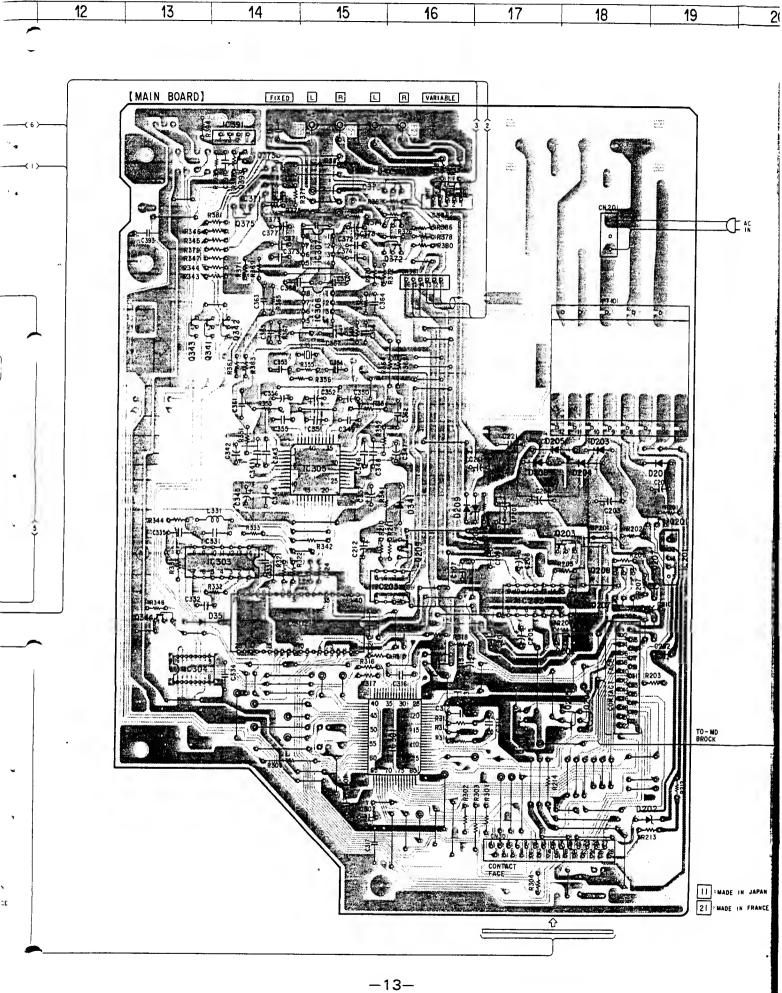



20 21 22 23 24 25 26 27

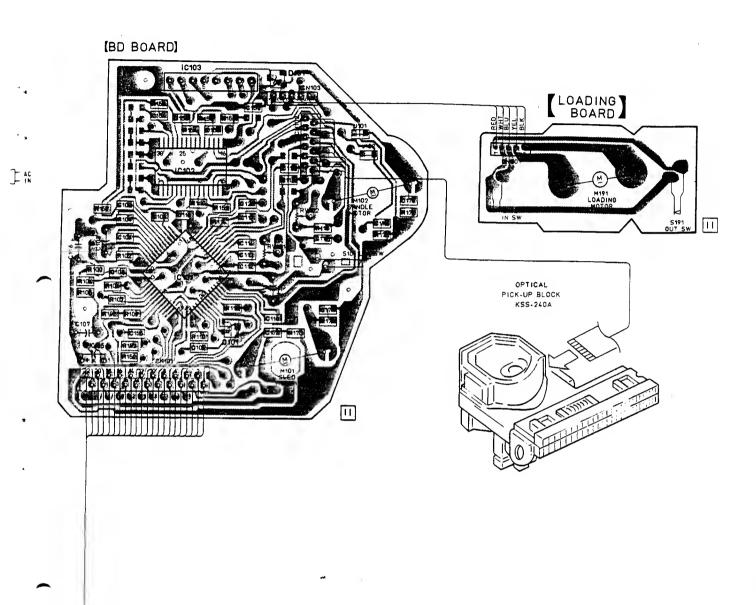



DE IN JAPAN
DE IN FRANCE

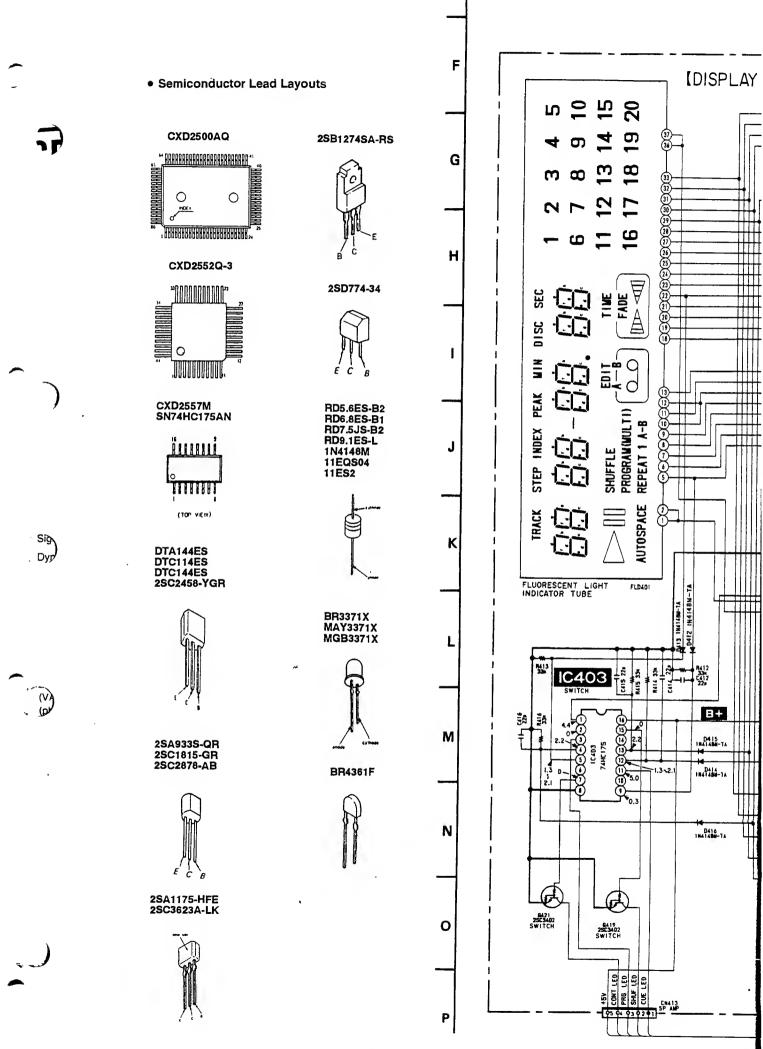


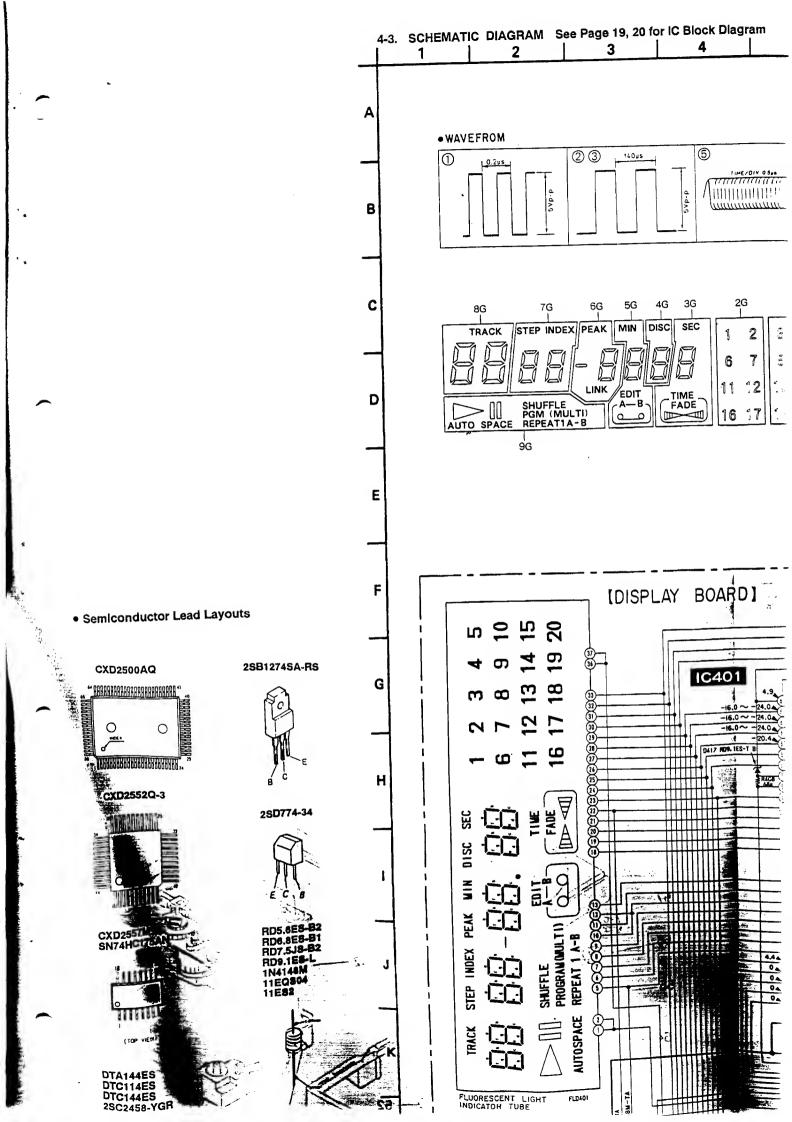


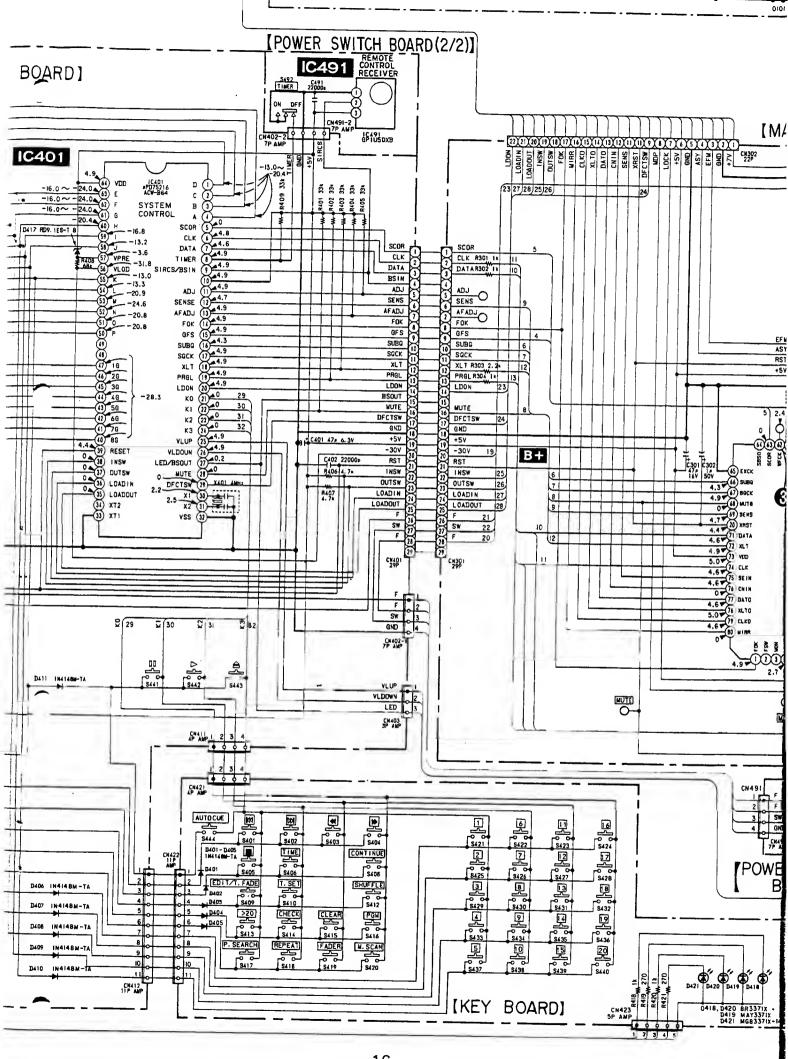


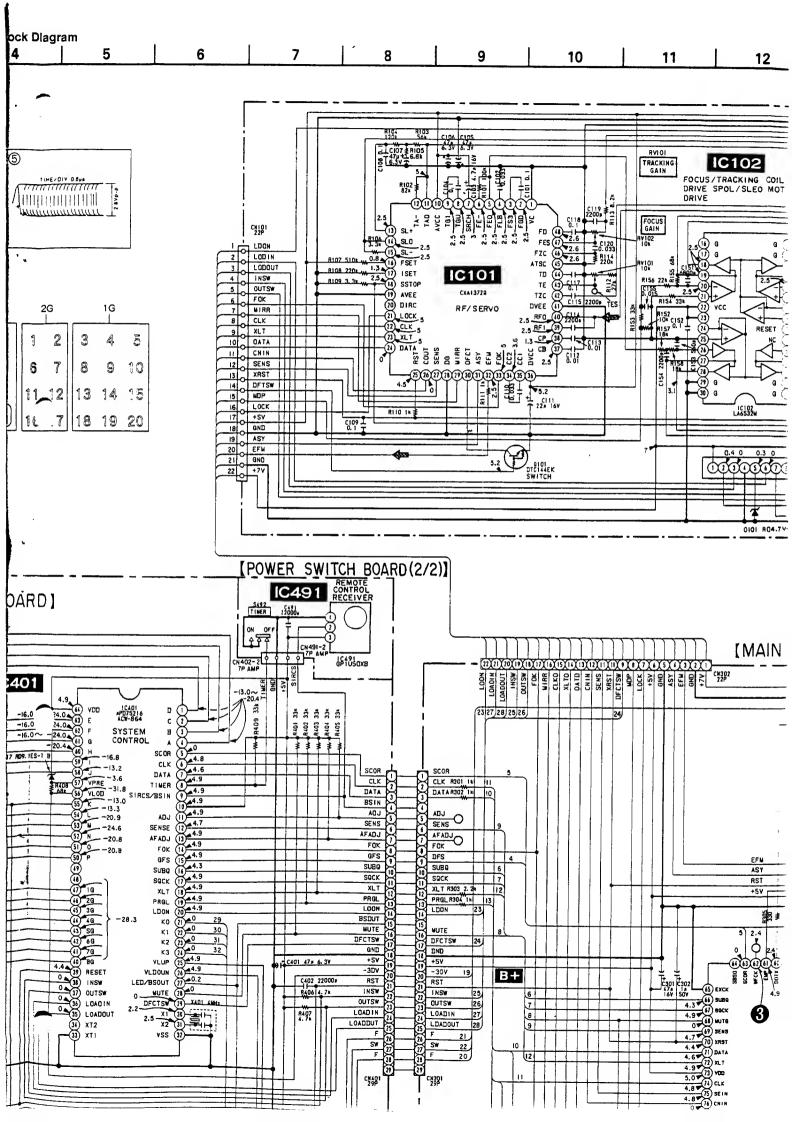

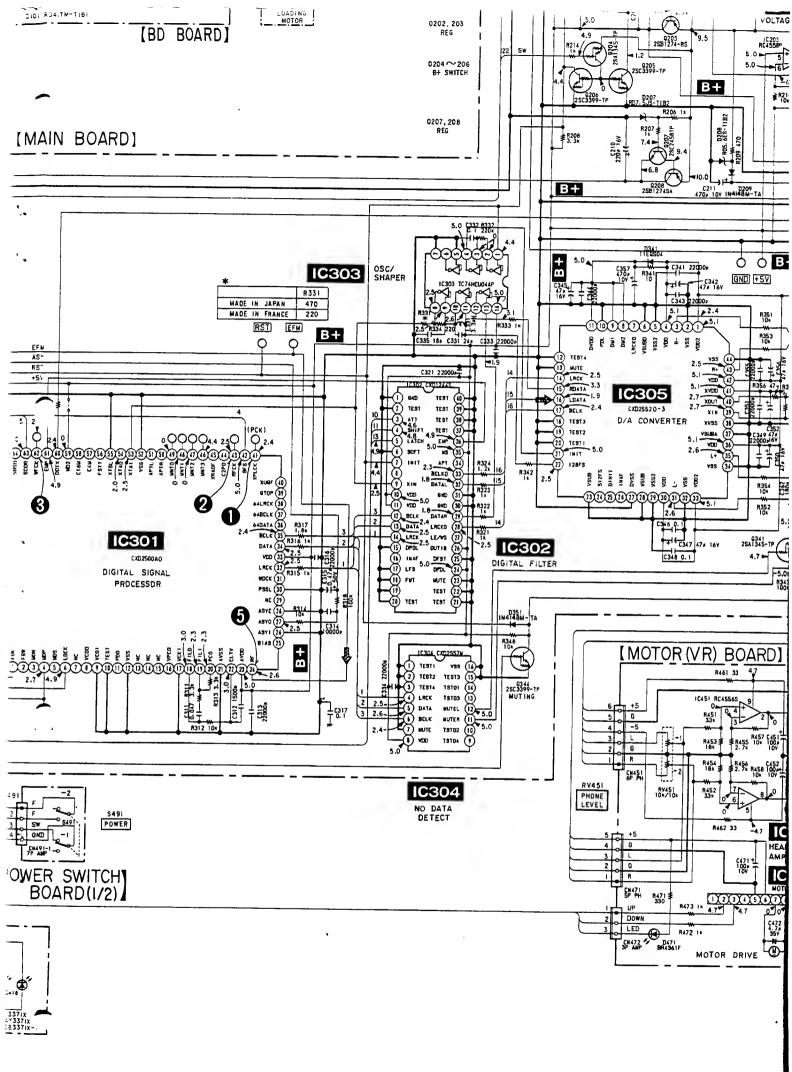

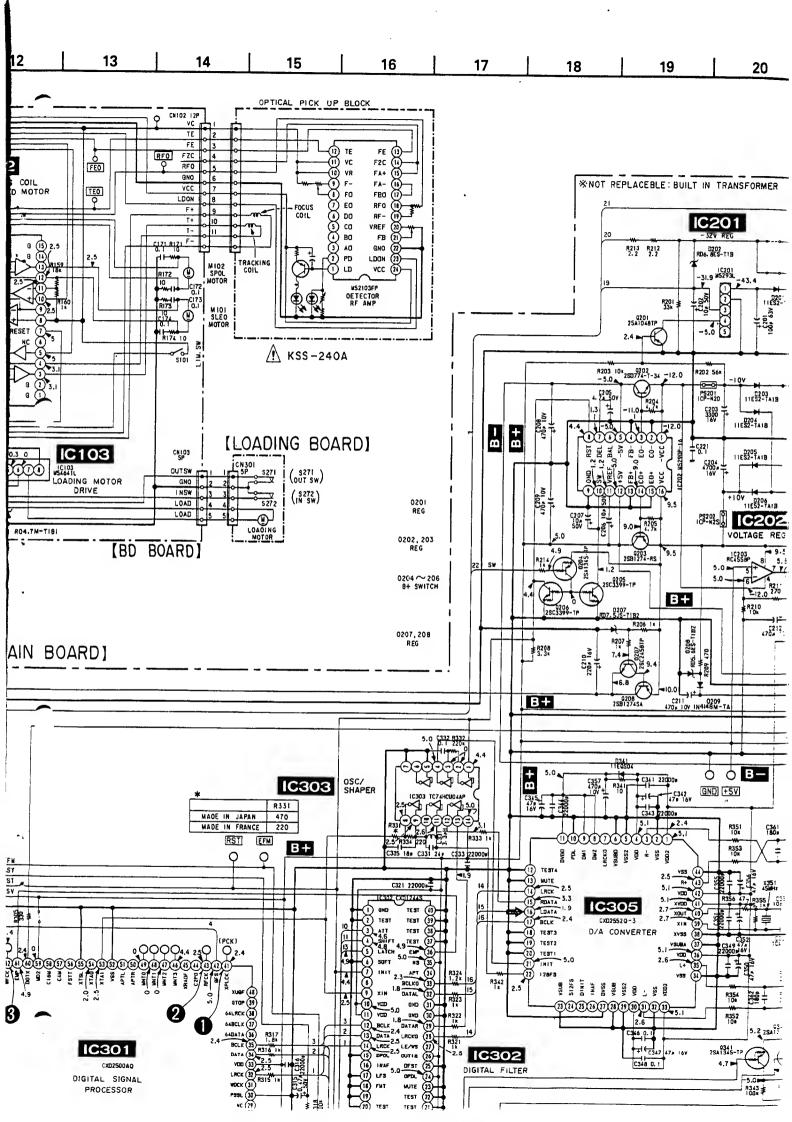

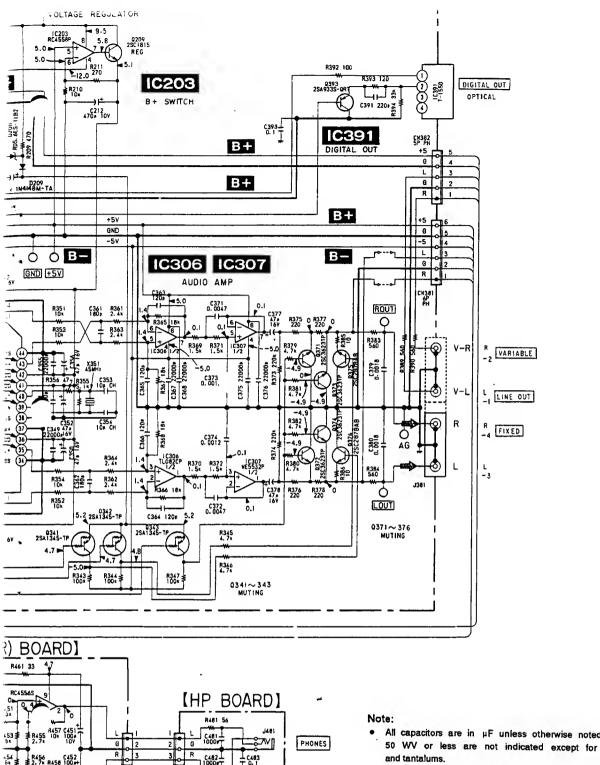

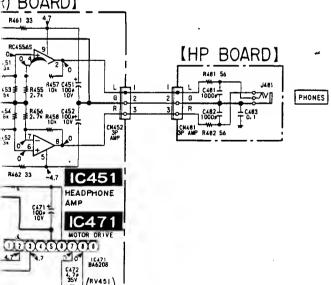

MOTOR,

STOR DRIVE

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics
- All resistors are in Ω and $1\!\!\!/_{\!\!4}$ W or less unless otherwise specified.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque A sont critiques pour la sécurité.

G

K

N

0

Ne les remplacer que par une pièce portant le numéro spéci-


- B + : B + Line.
- : B Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- Wavefroms are taken with a oscilloscope.

Voltage variations may be noted due to normal production tolerances.

- Circled numbers refer to wavefroms.
- Signal path.


: CD

: digital out

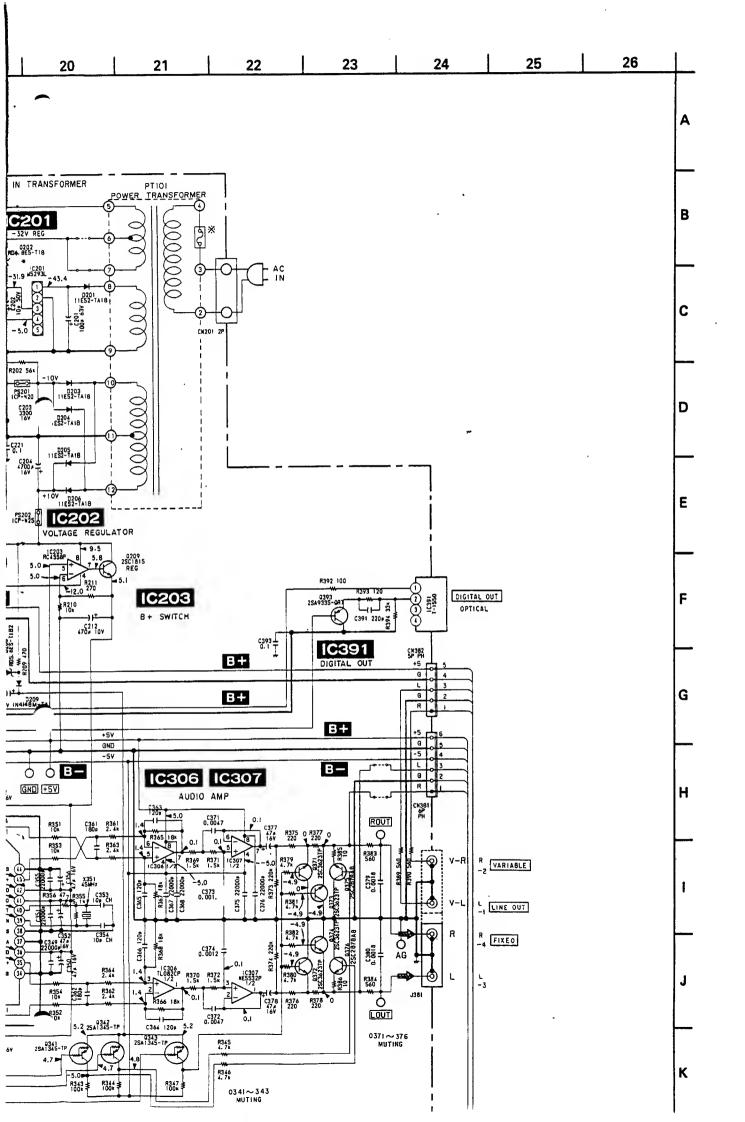


• IC Block Diagram


IC101 CXA1372Q

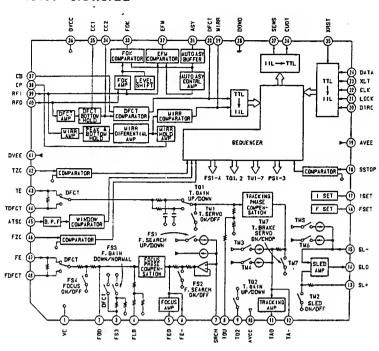


IC301 CXD2500AQ

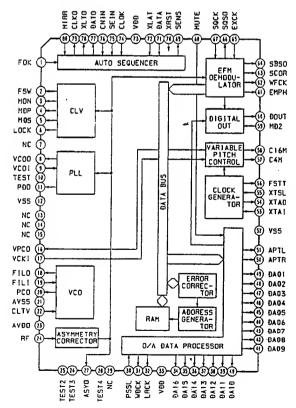


IC202 M5290P-16

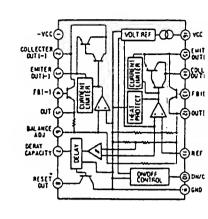



IC302 CXD1244S

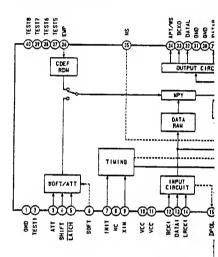


IC304 CXD2557M

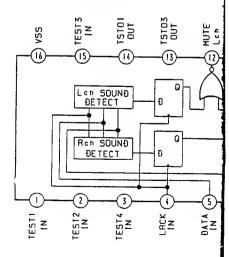


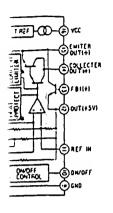

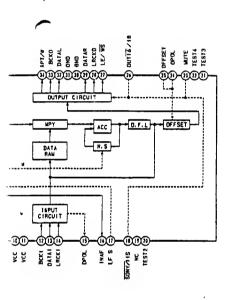


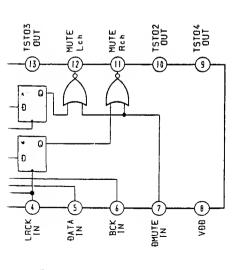

IC305 CXD2552Q-3

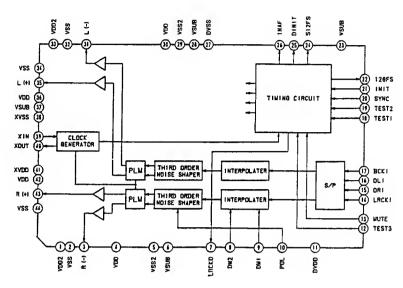

IC403 74HC175

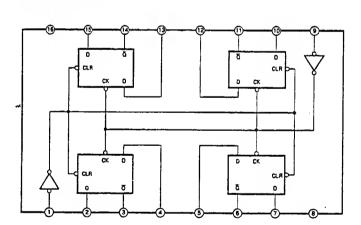

SECTION 5 EXPLODED VIEWS

NOTE:


- -XX and -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example: KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑ Parts Color Cabinet's Color Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


 The mechanical parts with no reference number in the exploded views are not supplied.

 Hardware (# mark) list is given in the last of this parts list. The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le neméro spécifié.

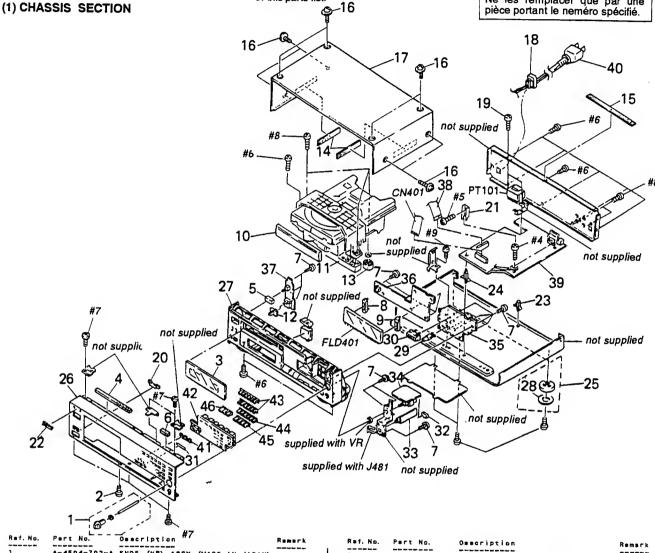


(2) CD MECHANISM SECTION (CDM14-5BD1)

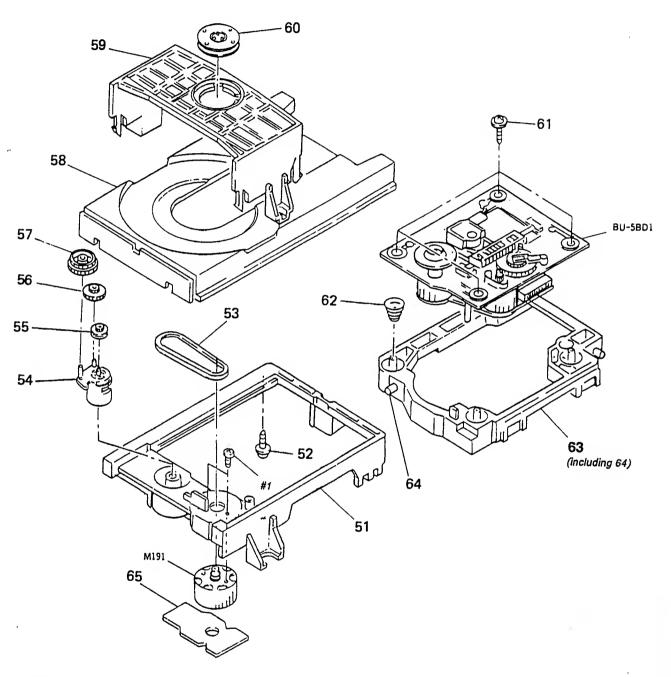

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51 52 * 53 54			,	59 60 61 62	4-933-110-01 1-452-538-11 4-933-134-01 4-917-541-01	MAGNET SCREW (+PTPWH M2.6X6)	
55 56 57 58	4-927-651-01 4-927-628-01 4-933-107-01 4-933-112-01	GEAR (C) GEAR (PL)		63 64 65 *	4-933-129-01 4-933-108-01 1-632-202-11 A-4604-363-A	HOLDER (BU) SHAFT (CAM) LOADING BOARD MOTOR (L) ASSY	

(3) OPTICAL PICK-UP BLOCK (BU-5BD1)

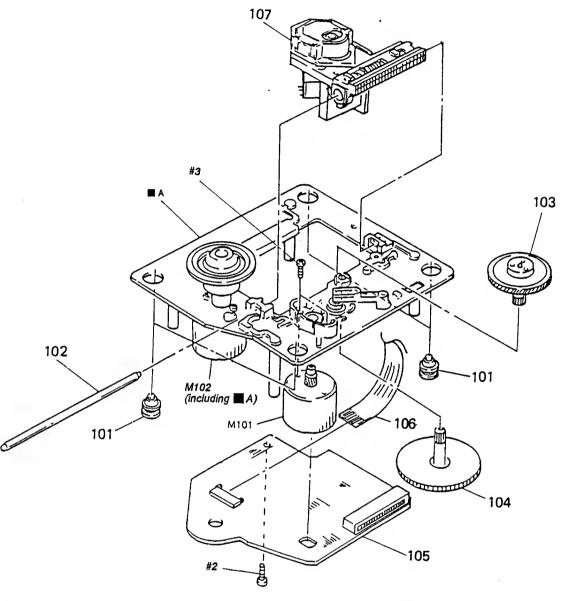

Ref. No	. Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101 102 103 104 105	4-917-565-01 4-917-567-01 4-917-564-01			M101	8-848-144-11 X-4917-523-3	WIRE, FLAT TYPE (12 CORE) DEVICE, OPTICAL KSS-240A BASE OUTSERT ASSY MOTOR ASSY, SLED	

Note: The components identified by mark A or dotted line with mark A are critical for safety. Replace only with part number specified.

BD

SECTION 6 ELECTRICAL PARTS LIST


NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
 All resistors are in ohms.
 METAL: Metal-film resistor
 METAL OXIDE: Metal Oxide-film resistor
 F: nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
 In each case, u: μ, for example: uA...: μA..., uPA..., μPA..., uPB...: μPB..., uPC...: μPC..., uPD...: μPD...
- CAPACITORS uF: μF
- COILS uH: μH

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le neméro spécifié.

Ref. No.	Part No.	Description			Remark		Part No.	Descript	ion		Remari
*	A-4617-161-A	BD BOARD, COM						< CONNEC	TOR >		
						CN101	1-568-796-11	SOCKET, (CONNECTOR 22F		
		< CAPACITOR >				CN102	1-568-795-11	SOCKET. (CONNECTOR 12P		
C101	1 160 000 00	05044440 00440				CN103 #	1-564-721-11	PIN. CON	NECTOR (SMALL	TYPE)	5.P
	1-163-038-00		0. 1uF		25V					·	
	1-163-989-11		0. 033uF		25V			< DIODE >	>		
	1-126-163-11		4. 7uf	20%	50 V						
	1-163-038-00		0. 1uF		25V	D101	8-719-105-72	DIODE RD4	1. 7M-B1		
100	1-126-154-11	ELECT	47uF	20%	6.3V	}					
2106	1 100 101 11							< 10 >			
	1-126-154-11		47 u F		6. 3V						
	1-126-154-11		47uF	20%	6.3V	IC101	8-752-050-82	IC CXA137	20		
	1-163-038-00		0. 1uF		25V	IC102	8-759-822-36	IC LA6532	M-T1		
	1-163-038-00		0. 1uF		25V	IC103	8-759-633-65				
110	1-163-989-11	CERAMIC CHIP	0. 033uF	10%	25V						
	4 444 445 44							< JACK >			
	1-131-367-00		22uF	10%							
	1-164-232-11		0. 01uF		50V	J101	1-216-295-00	METAL CHI	P 0	5%	1/10W
	1-164-232-11		0.01uF		50V	J102	1-216-295-00	METAL CHI	P 0	5%	1/10W
	1-164-161-11		0. 0022uF		100V					0,0	17 1011
:115	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	1007			< TRANSIS	TOR >		
117	1-163-038-00	CERAMIC CHIP	0. 1uF		25V	0101					
	1-163-038-00		0. 1uF			Q101	8-729-901-01	TRANSISTO.	R DTC144EK		
	1-164-161-11		0. 107 0. 0022uF	104	25V						
	1-163-989-11 (0. 00220F		100V			< RESISTO	R >		
	1-163-019-00 (0. 0068uF	10%							
	1 100 013 00 0	CUVWIO OILL	v. •voour	10%	204	R101	1-216-097-00	METAL CHI	P 100K	5%	1/10W
152	1-163-038-00 (SEDAMIA AUID	A 1r			R102	1-216-095-00	METAL CHIL	P 82K	5%	1/10W
	1-163-036-00 (1-163-006-11 (0. 1uF	100	25V	R103	1-216-091-00	METAL CHI!	P 56K	5%	1/10W
	1-164-161-11 (560PF	10%			1-216-099-00			5%	1/10W
			0. 0022uF	10%		R105	1-216-069-00	METAL CHIE	P 6.8K	5%	1/10W
	1-163-023-00 (1-163-028-00 (0. 015uF	5%	50V						
111	1-163-038-00 (EKAMIC CHIP	0. 1uF		25V		1-216-061-00			5%	1/10W
172 1	1_162 020 00 0	CDANIA AULA				R107	1-216-114-00	METAL GLAZ	?E 510K	5%	1/10W
	-163-038-00 (0. 1uF		25V	R108	1-216-105-00	METAL CHIP	220K	5%	1/10W
	-163-038-00 C		0. 1uF		25V		1-216-061-00 4			5%	1/10W
174 1	I-163-038-00 C	EKAMIC CHIP	0. 1uF		25V		1-216-049-00			5%	1/10W

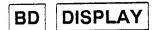

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description		Remark
R111	1-216-049-00		1K	5%	/10\			< D100E >		
R112	1-216-083-00	METAL CHIP	27K		/10W					
R113	1-216-071-00	METAL CHIP	_		/10W	0408		DIOOE 188202-1 (M)
R114	1-216-105-00	METAL CHIP	220K		/10W	D406	8-719-987-63	010DE 1N4148M (MA	DE IN JAPAN)	
R152	1-216-073-00	METAL CHIP	10K	5%	I/10W					
						0407		DIDDE 188202-1 (M		:)
R153	1-216-085-00	METAL CHIP	33K		I/10W	0407	8-719-987-63	DIODE 1N4148M (MA	DE IN JAPAN)	
R154	1-216-085-00	METAL CHIP	33K		I/10W					
R155	1-216-093-00	METAL CHIP	68K	5%	I/10W	D408		DIODE 188202-1 (N		:)
R156	1-216-081-00	METAL CHIP	22K	5%	I/10W	0408	8-719-987-63	D100E 1N4148M (MA	DE IN JAPAN)	
R157	1-216-079-00	METAL CHIP	18K	5%	1/10W					
						0409		D10DE 188202-1 (N		:)
R158	1-216-079-00	METAL CHIP	18K		1/10W	D409	8-719-987-63	D10DE 1N4148M (MA	DE IN JAPAN)	
R159	1-216-079-00	METAL CHIP	18K	5%	1/10W					
R160	1-216-049-00	METAL CHIP	1 K	5%	1/10W	0410	-	0100E 188202-1 (A		:)
R171	1-216-001-00	METAL CHIP	10	5%	1/10W	D410	8-719-987-63	DIODE 1N4148M (MA	(DE IN JAPAN)	
R172	1-216-001-00	METAL CHIP	10	5%	1/10W					
						0411		DIODE 188202-1 (A		:)
R173	1-216-001-00	METAL CHIP	10	5%	1/10W	0411	8-719-987-63	DIDDE 1N4148M (MA	AOE IN JAPAN)	
R174	1-216-001-00	METAL CHIP	10	5%	1/10W					
						D412		DIODE 188202-1 (M		E)
		< VARIABLE RE	SISTDR >			D412	~8-719-987-63	DIDDE 1N4148M (M/	ADE IN JAPAN)	
RV101	1-238-016-11	RES, ADJ, CAR	80N 10K			D413	8-719-107-94	D100E 188202-1 (MADE IN FRANC	E)
RV102		RES. AOJ. CAR				D413	8-719-987-63	DIODE 1N4148M (M/	ADE IN JAPAN)	
		< SWITCH >				D414	8-719-107-94	DIOOE 188202-1 ()	MADE IN FRANC	E)
						D414	8-719-987-63	D100E 1N4148M (M	ADE IN JAPAN)	
\$101	1-572-085-1	SWITCH, LEAF								
						D415	8-719-107-94	DIDDE	MADE IN FRANC	E)
******	**********	******	*******	*****	*******	D415	8-719-987-63	DIDDE 1N4148M (M	ADE IN JAPAN)	
	* 1-638-211-1	I DISPLAY BDARD	MADE IN	JAPAN)		D416		DIDDE 188202-1 (E)
	* 1-638-211-2	DISPLAY 8DARD	MADE IN	FRANCE)	D416	8-719-987-63	DIDDE IN4148M (M	ADE IN JAPAN)	

						D417	8-719-121-24	I DIDDE RD9. 1ES-L		
	* 4-941-171-0					i				
	* 4-941-172-0	1 HOLOER (R)						< FLUORESCENT IN	OICATOR >	
		< CAPACITOR >	•			FLD401	1-519-618-21	I INOICATOR TUBE,	FLUORESCENT	
								. 10 .		
C401	1-126-154-1		47uf	20%	6. 3V			< IC >		
C402	1-161-494-0		0. 022uF		25V				c.,	
C412	1-162-207-3	1 CERAMIC	22PF	5%	50V	10401		I IC uPD75216ACW-B	04	
C413	1-162-207-3	1 CERAMIC	22PF	5%	50V	1C403	8-759-916-5	5 IC SN74HC175AN		
								. TRINGIATAR :		
C414	1-162-207-3		22PF	5%	50 V			< TRANSISTOR >		
C415	1-162-207-3		22PF	5%	50 V		0 300 000 0	. TDANAIGTAR STAAA	450	
C416	1-162-207-3	1 CERAMIC	22PF	5%	50 V	0419		TRANSISTOR DIC11		
						0421	8-129-900-80	TRANSISTOR OTC11	469	**
		< CONNECTOR >	>					/ DECICTOR \		
			AULTIC TERM					< RESISTOR >		
CN 401	1-535-872-1	1 JUMPER, FILM	(With IERM	II NAL)		D 404	1_240 425 4	1 CADOON 9	3V EW	1/4W
						R401	1-249-435-1		3K 5%	1/4W
						R402	1-249-435-1			-
						R403	1-249-435-1		_	1/4W
						R404	1-249-435-1			1/4W
						R405	1-249-435-1	1 CARSON 3	3K 5%	1/4W

SPLA	Y HP	KEY									
Ref. No.	Part No.	Oescriptio	n		Remark	Ref. No.	Part No.	0escripti	on		Rem
 R406	1-249-425-11	CAR8DN	- 4. 7K	5%	1/4W		* 3-362-478-1 * 4-942-546-0				
R407	1-249-425-11	CAR8DN	4. 7K	5%	1/4W		* 4-942-346-U	ו חטנטנא (נ	LU/M/		
R408	1-249-439-11	CAR8DN	68K	5%	1/4W			< CDNNECT	rór >		
R409	1-249-435-11	CAR8DN	33K	5% 5%	1/4W 1/4W			COMME	1011 ×		
R412	1-249-435-11	CARBUN	33 K	J/A	1/411	CN421	* 1-568-953-1	1 PIN. CON	NECTOR 4P		
	1-249-435-11	CADODN	33K	5%	1/4W	CN422	* 1-568-938-1	1 PIN. CDNI	NECTOR 11P		
R413	1-249-435-11	CARRON	33K	5%	1/4W	CN423	* 1-568-954-1	1 PIN, CDN	NECTOR 5P		
R414	1-249-435-11		33K	5%	1/4W						
R415 R416	1-249-435-11		33K	5%	1/4W	1		< DIODE	>		
K410	1-243-403-11	OAHOON	•••								
		< SWITCH :	>			0401			S202-1 (MADE		
						0401	8-719-987-6	3 DIDOE 1N	4148M (MAOE	IN JAPAI	l)
\$441	1-554-303-21	SWITCH, T	ACTILE (II)	(MAOE	IN JAPAN)						=\
\$441	1-554-303-81	SWITCH, T	ACTILE (11)	(MAOE	IN FRANCE)	D402	8-719-107-9	4 DIOOE 18	\$202-1 (MADE	IN FRAI	ICE)
0441						0402	8-719-987-6	3 OIDDE IN	4148M (MADE	IN JAPA	()
S442	1-554-303-2	SWITCH, T	ACTILE (▷)	(MADE	IN JAPAN)			D.O.O.F. 4.D.	2000 1 /11105	IN EDA	ורב)
\$442	1-554-303-8	SWITCH, T	ACTILE (▷)	(MADE	IN FRANCE)	D403	8-719-107-9	4 DIOUE 15	S202-1 (MAOE 4148M (MADE	IN FRA	אוניבי) או
						D403	8-119-981-0	IS UTOUT IN	4140M (MAUL	IN JAIA	11/
\$443	1-554-303-2	I SWITCH, T	ACTILE (A)	(MADE	IN JAPAN)	0404	9_710_107_0	A DIDDE 19	\$202-1 (MADE	IN FRA	NCE)
\$443	1-554-303-8	I SWITCH, T	ACTILE (A)	(MADE	IN FRANCE)	0404			4148M (MADE		
						0404	0-113-301-	3 DIOOL IN	THOM WANDE	,,, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	,
		< CERAMIC	>			D405	8-719-107-	04 D100F 1S	S202-1 (MADE	IN FRA	NCE)
						0405	8-719-987-	3 DIODE 16	14148M (MADE	IN JAPA	N)
X401	1-577-358-2	1 VIBRAIDR.	CERAMIC 4M	πz		0403	0 113 301	,	,		•
	******			*****		D418	8-719-987-	97 DIODE 8F	3371X		
*****	*****	*******	*******	*****	*****	D419	8-719-971-	52 OIDDE MA	Y3371X-M-177		
	* 1-638-214-1	1 110 90400	(MADE IN IA	PAN)		D420	8-719-987-	97 D100E 81	R3371X		
	* 1-638-214-1 * 1-638-214-2	1 HD BDARD	(MADE IN FR	ANCE)		0421	8-719-987-	XX 0100E M8	3G3371X-14		
	¥ 1-030-214-2	*******	******	****							
		*********						< RESIS	TDR >		
		< CAPACIT	ror >				00		4.0	F#/	1/4\
						R418	1-249-417-		1 K	5% 5%	1/47
C481	1-162-294-3	1 CERAMIC	0.001	uf '	10% 50V	R419	1-249-410-		270		1/47
C482	1-162-294-3		0.001	uF '	10% 50V	R420	1-249-417-		1K 270	5% 5%	1/4₩
C483	1-164-159-1		0. 1uf	•	50V	R421	1-249-410-	11 CARBUN	210	JA	17 41
								HITCH S (MA	DE IN JAPAN)		
		< CONNEC	TOR >				\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	11011 > (min	DE IN ONLIN		
						\$401	1-554-303-	21 SWITCH.	TACTILE (KX	۵)	
CN481	* 1-568-941-	II PIN, CDN	NECTOR 3P			\$402	1-554-303-	21 SWITCH.	TACTILE (DE	(k	
						\$403	1-554-303-	21 SWITCH.	TACTILE (ď	
		< JACK >	***			\$404	1-554-303-	21 SWITCH,	TACTILE (>	> }	
	4 500 510	44 1407 14	RGE TYPE (P	HDNES)		\$405	1-554-303	-21 SWITCH.	TACTILE ()	
J481	1-568-519-	41 JAGN, LA	NOC THE (I	110111207							
		< RESIST	DR >			\$406	1-554-303	-21 SWITCH.	TACTILE (TI	ME)	
		/ 1/2121	· · ·			\$408	1-554-303	-21 SWITCH.	TACTILE (CD	NTINUE)	
R481	1-249-402-	11 CARSON	56	5	% 1/4W	\$409	1-554-303	-21 SWITCH.	TACTILE (ED	IT/TIME	FAOE)
R482	1-249-402-		56		% 1/4W	\$410	1-554-303	-21 SWITCH,	TACTILE (TI	ME SET)	
						\$412	1-554-303	-21 SWITCH.	TACTILE (SH	UFFLE)	
****	******	********	******	*****	*****	k		A4 - DUIT T	TARTILE AS	١٥١	
**************************************						5413		-21 SWITCH,	TACTILE (>2	U)	
	* 1-638-212-	11 KEY 8DAF	RD (MADE IN	JAPAN)		\$414	1-554-303	-Z1 SWITCH,	TACTILE (CH	EUK)	
	* 1-638-212-	21 KEY 8DAF	RD (MADE IN	FRANCE	<u>:</u>)	\$415			TACTILE (CL		
		*****	********	*****	*****	\$416			TACTILE (PC		CH)
						\$417	1-554-303	-zi swiich,	TACTILE (PE	AK STAI	UN)

KEY LOADING

MAIN

Ref. No.	Part No.	Oescription	Remark	Ref. No.	Part No.	Oescription	Remark
		CHITCH TACTUE	(REPEAT)	S 4 2 3	1-554-303-81	SWITCH. TACTILE (11)	3 -2-
\$418	1-554-303-21	SWITCH, TACTILE	(EADER)	\$424	1-554-303-81	SWITCH. TACTILE (16)	
\$419	1-554-303-21	SWITCH, TACTILE	UNISTE SEVAN	\$425	1-554-303-81	SWITCH, TACTILE (2)	
\$420	1-554-303-21	SWITCH. TACTILE	(1)	\$426	1-554-303-81	SWITCH, TACTILE (7)	
\$421	1-554-303-21	SWITCH, TACTILE	(6)	\$427	1-554-303-81	SWITCH, TACTILE (12)	
\$422	1-554-303-21	SWITCH, TACTILE	(0)	0461		• • • • • • • • • • • • • • • • • • • •	
		OULTON TACTILE	(11)	\$428	1-554-303-81	SWITCH, TACTILE (17)	
\$423	1-554-303-21	SWITCH, TACTILE	(15)	\$429		SWITCH, TACTILE (3)	
\$424	1-554-303-21	SWITCH, TACTILE	(10)	\$430	1-554-303-81	SWITCH, TACTILE (8)	
\$425	1-554-303-2	SWITCH, TACTILE	(7)	\$431	1-554-303-81	SWITCH. TACTILE (13)	
\$426	1-554-303-2	1 SWITCH. TACTILE 1 SWITCH, TACTILE	(12)	\$432	1-554-303-81	SWITCH, TACTILE (18)	
\$427	1-334-303-2	I SHILOR, INCITE	(12)				
\$428	1-554-303-2	1 SWITCH. TACTILE	(17)	\$433	1-554-303-81	SWITCH, TACTILE (4)	
S429		1 SWITCH, TACTILE		\$434		SWITCH, TACTILE (9)	•
\$430	1-554-303-2	1 SWITCH, TACTILE	(8)	\$435		SWITCH, TACTILE (14)	
S431	1-554-303-2	SWITCH. TACTILE	(13)	\$436		SWITCH, TACTILE (19)	
S 43 2	1-554-303-2	1 SWITCH, TACTILE	(18)	\$437	1-554-303-81	SWITCH, TACTILE (5)	
3437	1.004.000-5	, entirely therites	, ,				
\$433	1-554-303-2	1 SWITCH, TACTILE	(4)	\$438	1-554-303-81	SWITCH, TACTILE (10)	
\$434	1-554-303-2	1 SWITCH, TACTILE	(9)	\$439	1-554-303-81	SWITCH. TACTILE (15)	
\$435	1-554-303-7	1 SWITCH. TACTILE	(14)	\$440	1-554-303-81	1 SWITCH, TACTILE (20)	05 (1 0115)
\$435	1-554-303-2	1 SWITCH. TACTILE	(19)	\$444	~1-554-303-8 °	1 SWITCH, TACTILE (A.SP/	CCE/A, CUE)
\$437	1-554-303-2	1 SWITCH, TACTILI	(5)			()	MAGE IN FRANCE)
0401							
\$438	1-554-303-2	1 SWITCH, TACTILI	(10)	*****	; ***********	********	+++++++++++++++++++++++++++++++++++++++
\$439	1-554-303-2	1 SWITCH, TACTIL	(15)			. LOLDING BOARD (MADE 11	I FADAN'
\$440	1-554-303-2	1 SWITCH, TACTIL	E (20)		* 1-632-202-1	1 LOADING BOARD (MADE II	I CDYNGE)
\$444	1-554-303-2	1 SWITCH, TACTIL	(A. SPACE/A. CUE)		* 1-632-202-2	1 LOADING BOARD (MADE	1 LUNUCE)
			(MADE IN JAPAN)			********	********
	< SWI	TCH > (MADE IN F	RANCE)			< CONNECTOR >	
						4 DIN CONNECTOR (CHALL	TVDC\ ED
\$401	1-554-303-8	31 SWITCH, TACTIL	E (KM)	CN301	* 1-564-101-1	1 PIN. CONNECTOR (SMALL	III E) VI
\$402	1-554-303-8	31 SWITCH, TACTIL	E (DDI)			CWITCH	
\$403	1-554-303-8	BI SWITCH, TACTIL	E (44)	l		< SWITCH >	
\$404	1-554-303-8	BI SWITCH, TACTIL	E (▶▶)	0071	1 - 572 - 006 - 1	1 SWITCH, LEAF (OUT SW)	
\$405	1-554-303-	81 SWITCH, TACTIL	E (#)	\$271	1 572-000-1	1 SWITCH, LEAF (IN SW)	
			C (T1115)	\$272	1-317-000-1	I SHITCH LEAT (IN SH)	
\$406	1-554-303-	81 SWITCH, TACTIL	t (IIMt)	*****	*****	*******	******
\$408	1-554-303-	81 SWITCH, TACTIL	E (CONTINUE)	******	*********	· * * * * * * * * * * * * * * * * * * *	
\$409	1-554-303-	81 SWITCH. TACTIL	E (EDIT/TIME FADE)	1	± A=4617=011=	A MAIN 80ARD, COMPLETE	(US. Canadian)
\$410	1-554-303-	81 SWITCH, TACTIL	F (LIME 2FI)		+ A-4011-311-	A MAIN 80ARD, COMPLETE	(22) 42/14/14/14
\$412	1-554-303-	81 SWITCH, TACTIL	E (SHUFFLE)		* W-4011-917-	MANF	IN JAPAN: AEP)
			F (>20)		± A-4617-730-	-A MAIN 80ARD, COMPLETE	•
\$413	1-554-303-	81 SWITCH, TACTIL	.C (240) .C (0460V)	1	FA WOLL TOO		IN FRANCE: AEP. UK)
\$414	1-554-303-	81 SWITCH, TACTIL	.C (OREON) .C (OLEAD)			************	
\$415	1-554-303-	81 SWITCH, TACTIL	E (DEAN)				
\$416	1-554-303-	81 SWITCH, TACTIL	.C (FUM) E (DEAV CEADCU)		* 4-941-237-0	11 HEAT SINK	
\$417	1-554-303-	81 SWITCH. TACTIL	L ILENY SENULL)			19 SCREW +8 3X6	
0.44	1 55 4 000	81 SWITCH, TACTII	F (REPEAT)				
\$418	1-554-303-	81 SWITCH, TACTI	F (FADER)			< CAPACITOR >	
\$419	1-554-303-	81 SWITCH, TACTII	F (MISIC SCAN)	1			
\$420	1-554-303-	O STATION TACEL	E (1)	C201	1-124-572-	11 ELECT 100uf	20% 63V
\$421	1-554-303-	81 SWITCH, TACTI	E (6)	C202	1-126-059-		20% 50V
\$422	1-554-303-	81 SWITCH, TACTI	LL (0)	C203	1-124-887-	· · · · · · · · · · · · · · · · · · ·	20% 16V
				C204	1-126-937-		20% 16V
				C205	1-126-163-		20% 50V
				1 .0203	1 120 100-	11 22241	

MAIN

Ref. No.	Part No.	Oescription			Remark	Ref. No.	Part No.	Description			Remar
C206	1-126-059-11	ELECT	10 u F	20%	50 V	C372	1-130-479-00	MYLAR	0. 0047uF	5%	50 V
C207	1-126-059-11	ELECT	10uF	20%	50V	C373	1-130-472-00	MYLAR	0.0012uF	5%	50V
C208	1-124-997-11	ELECT	470uF	20%	10V	C374	1-130-472-00		0. 0012uF		50 V
C209	1-124-997-11		470uF	20%	10V	C375	1-161-494-00		0. 022uF	• • • • • • • • • • • • • • • • • • • •	2 5 V
C210	1-126-024-11	ELECT	220 uF		16V	C376	1-161-494-00		0. 022uF		25V
C211	1-124-997-11	ELECT	470uF	20%	10V	C377	1-126-022-11	ELECT	47 u F	2 0%	16V
C212	1-124-997-11	ELECT	470uF	20%	107	C378	1-126-022-11	ELECT	47uF	_	16 V
C221	1-164-159-11	CERAMIC	0. 1uF		50V	C379	1-130-474-00		0. 00 18 u F	5%	50V
C301	1-126-022-11	ELECT	47uF	20%	16V	C380	1-130-474-00		0. 0018uF		50V
C302	1-126-301-11		1uF	20%		C391	1-162-286-31		220PF	10%	
						C393	1-164-159-11		0. 1uF	107	50V
C311	1-130-491-00	MYLAR	0. 047uF	5%	50V						
C312	1-161-374-11	CERAMIC	0. 0015uF	20%	50V			< CONNECTOR	>		
C313	1-161-494-00		0. 0 22u F		2 5 V						
C314	1-162-306-11	CERAMIC	0. 01uF	20%	16V	CN201 <u></u> A*	1-580-230-11	PIN. CONNECT	OR (PC BOA	RO) 3	P
C315	1-126-300-11	ELECT	0. 47uf	20%	50V		1-568-844-11			,	
						CN302 *	1-568-822-11	SOCKET. CONN	ECTOR 22P		
C316	1-161-494-00	CERAMIC	0. 022uF		25V		1-564-708-11			TYPFI	6 P
C317	1-164-159-11	CERAMIC	0. 1uF		50V		1-564-707-11				
C321	1-161-494-00	CERAMIC	0. 022uF		25V				VIII (VIII) []	, ,, ,	Vi
C331	1-162-208-31		2 4 P F	5%	50V			< 010DE >			
C332	1-130-495-00		0. 1uF	5%	50V			(DIODE)			
						0201	8-719-200-82	DIDDE 11ES2			
C333	1-161-494-00	CERAMIC	0. 022uF		25V	0202	8-719-109-96		S_R1		
C334	1-161-494-00	-	0. 022uF		25V	0203	8-719-200-82		0-01		
C335	1-162-205-31		18PF	5%	50V	D204	8-719-200-82				
C341	1-161-494-00		0. 022uF	٧,,	25V	0204	0 113 200-02	DIODE TIESZ			
C342	1-126-022-11		47uF	20%	16V	D205	8-719-200-82	DIDDE 11ES2			
						D206	8-719-200-82	DIDDE 11ES2			
C343	1-161-494-00	CERAMIC	0. 022uF		25V	D207	8-719-114-49	DIDDE RD7. 5J	S-82		
C344	1-161-494-00	CERAMIC	0. 022uF		25V	D208	8-719-109-89	DIDDE RDS. 6E	S-82		
C345	1-126-022-11	ELECT	47uF	20%	16 V						
C346	1-164-159-11	CERAMIC	0. 1uF		50V	D209	8-719-107-94	DIDDE 188202	-1 (MADE I	N FRA	NCE)
C3 47	1-126-022-11	ELECT	47uF	20%	16V	D209	8-719-987-63	DIODE 1N4148	M (MADE IN	JAPA	N)
C348	1-164-159-11	CERAMIC	0. 1uF		50V	D341	8-719-210-21	DIDDE 11E0SO	1		
C349	1-161-494-00	CERAMIC	0.022uF		25V						
C350	1-126-022-11	ELECT	47uF	20%		D351	8-719-107-94	0100F 188202-	-1 (MADE I	N FRA	NCE)
C351	1-161-494-00		0. 022uF		25V	D351	8-719-987-63		•		
0352	1-126-022-11		47uF	20%					. (· · · · · ·	,
C353	1-162-199-31	CERANIC	10PF	5%	50V			< 1C >			
	1-162-199-31		10PF	5%		10203	0_750_622_40	IC MESOS			
				3/4			8-759-633-42				
C355	1-161-494-00		0. 022uF	20%	25V	10202	8-759-630-21		•		
C356 C357	1-126-022-11		47uf	20%		10203	8-759-945-58				
U331	1-124-997-11	ELEGI	470uF	20%	104	IC301 IC302	8-752-337-26 8-752-328-61				
0361	1-162-285-31	CERAMIC	180 PF	10%	50V						
C3,62	1-162-285-31	CERAMIC	180PF	10%	50V	IC303	8-759-917-18	IC SN74HCU04	A N		
2363	1-162-283-31	CERAMIC	120PF	10%	50V	10304	8-752-339-86				
2364	1-162-283-31	CERAMIC	120PF	10%	50V		8-752-335-53		}		
2365	1-162-283-31	CERAMIC	120PF	10%		IC306	8-759-990-82				
						10307	8-759-900-72				
2366	1-162-283-31	CERAMIC	120PF	10%	50V		8-749-921-20				
367	1-161-494-00		0. 022uF		25V						
	1-161-494-00		0. 022uF		25V						
2368	1-101-434-00										

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

MAIN

Dof No	. 0												
	o. Part No. 	Descriptio	n -		Remar 			0escri	ption				Remark
		< JACK >				R301	1-249-417-			,	v		
						R302	1-249-417-				K	5%	1/4W
J381		JACK. PIN	4P (LINE OUT	T) (AEP	. UK)		1-249-421-	11 CAROUN			K	5%	1/4W
J381	* 1-569-443-21	JACK, PIN	4P (LINE OUT	T) (US.	Canadian)	R304	1-249-417-	11 CARDUN			. 2K	5%	1/4W
						R305	1-249-411-	11 CARBON			K	5%	1/4W
		< COIL >					1 243-411-	TI CARBUN		3	30	5%	1/4W
L331	1-408-403-00	LNOUCTOR	3. 3uH			R3 11	1-249-423-	11 CARBON		3.	3 K	5%	1/4W
	1-406-403-00	INOUCIUN	s. sun			R312	1-249-429-	11 CARBON		10	OK	5%	1/4W
		2 1 I IIV \				R313	1-249-423-	11 CARBON		3.	3 K	5%	1/4W
		< FINK >				R314	1-249-429-	11 CARBON		10) K	5%	1/4W
PS201	1.522 005 00	1 1117 10				R3 15	1-249-417-	11 CARBON		- 1)	(5%	1/4W
PS202	1-532-685-00	LINK. IC				İ						•,•	1, 411
F3202	1-532-637-00	LINK, IC	1. 0A			R316	1-249-417-	11 CARSON		1 1	(5%	1/4W ·
			_			R317	1-249-420-	11 CARBON			8K	5%	1/4W
		< TRANSISTO	R >			R31B	1-249-441-	11 CARBON			OK	5%	1/4W
0004						R321	1-249-417-	11 CARRON		1.0		5%	
0201	8-729-119-76	TRANSISTOR	28A1175-HFE			R322	1-249-417-	11 CARRON		1.K		5%	1/4W
0202	8-729-140-96	TRANSISTOR	280774-34			i				1		376	1/4W
0203	8-729-821-73	TRANSISTOR	2\$81274\$A-R	S		R323	1-249-417-	11 CAPPON		11			4.4404
0204	B-729-900-65	TRANSISTOR	OTA144ES			R324	1-249-41B-	II CARDON		1 K		5%	1/4W
0205	8-729-900-89	TRANSISTOR	OTC144ES				1 243-410-	II CANDUN		1.	2 K	5%	1/4W
						R331	1-249-409-1	1 CARRON	220	S.V	1 / 100	//// 0.5	
0206	8-729-900-89	TRANSISTOR	DTC144ES			R331	1-249-413-1	1 CARBON		J7e	1/4₩	(MAUE	IN FRANCE)
0207	B-729-230-45	TRANSISTOR	2SC2458-YGR				1 243-410-1	CAROUN	470	376	1/4W	(MADE	IN JAPAN)
020B	8-729-B21-73	TRANSISTOR :	2\$81274\$A-R\$	ŝ		R332	1-047 007 0	0.0000					
0209	8-729-281-52	TRANSISTOR :	2SC1815-Y	-		R333	1-247-887-0	U CARBON		22		5%	1/4W
0341	8-729-900-65	TRANSISTOR I	DTA144FS			R334	1-249-417-1			1 K		5%	1/4W
							1-249-409-1	1 CARBON		221	0	5%	1/4W
0342	B-729-900-65	TRANSISTOR (PA 144ES			R341	1-249-393-1	1 CARSON		10		5%	1/4W
0343	8-729-900-65	TRANSISTOR (TAIAAEG			R342	1-249-417-1	1 CARBON		1 K		5%	1/4W
0344	B-729-900-B9	TRANSISTOR (TC144E0			20.00							
0371	B-729-141-30	TRANSISTOR O	00036334-IV			R343	1-249-441-1	1 CARBON		100) K	5%	1/4W
0372	B-729-141-30	TRANSISTOR 2	1903020A-LK			R344	1-249-441-1			100	X	5%	1/4W
		INANGIGION Z	300023A-EK			R345	1-249-425-1	1 CARSON		4. 7	7 K	5%	1/4W
0373	8-729-141-30	PANCICTOD O	CC2C224 1V			R346	1-249-425-1	1 CARBON		4. 7	ľK	5%	1/4W
0374	8-729-141-30	TRANSISION Z	303023A-LK			R347	1-249-441-1	1 CARBON		100	K	5%	1/4W
0375	8-729-231-55	TRANSISIUM Z	303023A-LK										.,
0376	0-723-231-33 0-720-221 CC T	THANSISTUR Z	SCZB/B-A8			R348	1-249-429-1	1 CARSON		10 K		5%	1/4W
0393	8-729-231-55 7	RANSISTUR Z	SCZB/B-A8			R351	1-249-429-1	1 CARBON		10K			1/4W
0030	8-729-920-68 1	KANSISIUK Z	24332-0K			R352	1-249-429-1	CARBON		10K			1/4W
		05010=05				R353	1-249-429-11	CARBON		10 K			1/4W
	<	RESISTOR >				R354	1-249-429-11	CARBON		10 K			1/4W
R201	1-249-435-11 C	ARRON	33 K	5%	1 / 414	0055							.,
R202	1-249-438-11 C		56K		1/4W	R355	1-247-848-11			5. 1	K	5%	1/4W
R203	1-249-429-11 C		30K 10K		1/4W	R356	1-249-401-11	CARBON		47			1/4W
R204	1-249-425-11 C	ADDON			1/4W	R361	1-247-840-00	CARBON		2. 4	K		1/4W
R205	1-249-425-11 C	AROUN	4. 7K		1/4W	R362	1-247-840-00	CARBON		2. 4			1/4W
	1-243-425-11 6	ANOUN	4. 7K	5%	1/4W	R363	1-247-840-00	CARBON		2. 41			1/4W
R206	1-249-417-11 C	ARBON	1 K	5%	1/4W								•
R207	1-249-417-11 C					R364	1-247-B40-00	CARBON		2. 41	(5% 1	1/4W .
R208	1-249-423-11 C				1/4W	R365	1-249-432-11	CARSON		18K			1/4W
R209	1-249-413-11 C				1/4W	R366	1-249-432-11	CARBON		18K			/4W
R210	1-249-429-11 C/				1/4W	R367	1-249-432-11	CARBON		18K			/4W
	1 243-423-11 W	MOON	10 K	5%	1/4W	R368	1-249-432-11	CARBON		18K			/4W
R211	1-249-410-11 CA	AR8ON	270	5% 1	1/4W	Baca	1 040 400 41						
R212	1-249-385-11 CA				1/4 11 1/6W	R369	1-249-419-11	CARBON		1. 5K		5% 1	/4W
R213	1-249-385-11 CA				1/6W	R370	1-249-419-11	CARBON		1. 5K		5% 1	/4W
R214	1-249-417-11 CA				1/6W 1/4W	R371 R372	1-249-419-11 1-249-419-11	CARSON		1. 5K			/4W
	· · · · · · · · · · · · · · · · · ·												

MAIN	MOTOR	RVR	POW	ER	SW					
Ref. No.	Part No.	Oescription			Remark	Ref. No.	Part No.	Description		Remark
R373	1-247-BB7-00		220K	5%	1/4₩			< 10 >		
R374	1-247-BB7-00	CARBON	220K	5%	1/4W					
R375	1-249-409-11	CARBON	220	5%	1/4W	10451	B-759-981-B9	IC RC4556S		
R376	1-249-409-11	CARBON	220	5%	1/4W	10471	B-759-962-08	IC BA6208		
R377	1-249-409-11	CARSON	220	5%	1/4W			< RESISTOR >		
R378	1-249-409-11	CARSON	220	5%	1/4W					
R379	1-249-425-11		4. 7K	5%	1/4W	R451	1-249-435-11	CARSON	33K 5	5% 1/4W
R3B0	1-249-425-11	CARBON	4.7K	5%	1/4W	R452	1-249-435-11			5% 1/4W
R381	1-249-425-11		4.7K	5%	1/4W	R453	1-249-432-11			5% 1/4W
R382	1-249-425-11		4. 7K	5%	1/4W	R454	1-249-432-11			5% 1/4W
						R455	1-249-422-11	-		5% 1/4W
R383	1-249-414-11	CARBON	560	5%	1/4W				2, , ,	17 411
" R384	1-249-414-11		560	5%	1/4W	R456	1-249-422-11	CARBON	2. 7K	5% 1/4W
R385	1-249-393-11		10	5%	1/4W	R457	1-249-429-11			5% 1/4W
R386	1-249-393-11		10	5%	1/4W	R458	1-249-429-11			5% 1/4W
R389	1-249-414-11		560	5%	1/4W	R461	1-249-399-11			5% 1/4W
11000	1 245 714 11	omino in	***	٠	""	R462	1-249-399-11			5% 1/4W
R390	1-249-414-11	CARRON	560	5%	1/4W	11402	1 243 033-11	CARDON	33 ;)/4π
R392	1-249-405-11		100		1/4W	R471	1-249-411-11	CARRON	330	5% 1/4W
R393	1-249-406-11		120	5%	1/4W	R472	1-249-417-11			5% 1/4W
R394	1-249-435-11		33K	5%	1/4W	R473	1-249-417-11			5% 1/4W
,,,,,,	1 240 400 11	GAIII GAI	0011	0,4	', -"		1 243 411 11	VALIDOR	IN .	77 17 411
		< SWITCH >						< VARIABLE RES	SISTOR >	
\$201 <u>A</u> A·	S201 ★· 1-571-722-11 SWITCH, VOLTAGE SELECTION			RV451	1-241-302-11	RES. VAR. CARE	BON 10K/10K	(PHONE LEVEL)		
			(110-1	204/22	?0-240V)	******	*********	*******	*********	******
		< CRYSTAL >								
								POWER SW BOARD		
X351	1-579-161-11	VIBRATOR. C	RYSTAL 45M	lz		*	1-63B-215-21	POWER SW BOARD		
******	*********	*********	*********	*****	******			< CAPACITOR >		
*	1-638-213-11	MOTOR VR BO	ARD (MADE I	N JAPA	AN)					
	1-638-213-21		-		•	C491	1-161-494-00	CERAMIC	0. 022uF	25V
		********	********	*****	****					
								< CONNECTOR >		
*	4-922-980-01	HOLDER (LED))							
						CN491 4	1-56B-934-11	PIN. CONNECTOR	7 7 P	
		< CAPACITOR	>							
				**				< 10 >		
C451	1-124-994-11	ELECT	100uF	209	6 10V j					
C 452	1-124-994-11	ELECT	100uF	209	6 10V	10491	8-749-922-36	IC GP1U50X8		
C471	1-124-994-11	ELECT	100uF	209	- 1					
C472	1-124-277-11	ELECT	4. 7uF	209	6 35V			< SWITCH >		
		< CONNECTOR	>			\$491	1-554-118-00	SWITCH, PUSH	(1 KEY) (POWE	R)
						\$492		SWITCH, SLIDE		
-CN451 *	1-564-708-11	PIN, CONNEC	TOR (SMALL	TYPE)	6P					
CN471 *	1-564-707-11	PIN. CONNEC	TOR (SMALL	TYPE)	5P					
CN472 ±	1-568-941-11	PIN CONNEC	TOR 3P	•						

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.

Replace only with part number specified.

< DIODE >

CN472 * 1-568-941-11 PIN. CONNECTOR 3P

8-719-970-49 DIODE 8R4361F

D471

Ref. No.	Part No.	Oescription Remark
		MISCELLANEOUS

38	1-575-002-1	1 WIRE. FLAT TYPE (22 CORE)
40 AŽ·	1-558-945-2	1 CORD. POWER (US. Canadian)
40 A	1-574-127-3	1 CORD, POWER (MAGE IN FRANCE: AEP)
40 A	1-574-390-3	1 CORD. POWER (UK)
40 2Å⋅	1-575-651-2	1 CORD. POWER (MAGE IN JAPAN: AEP)
60 *	1-452-538-1	1 MAGNET
106	1-575-001-1	1 WIRE. FLAT TYPE (12 CORE)
107 ΔΔ.	8-848-144-1	1 DEVICE. OPTICAL KSS-240A
W101	X-4917-523-	3 8ASE OUTSERT ASSY
W102	X-4917-504-	1 MOTOR ASSY. SLEO A MOTOR (L) ASSY
M191	A-4604-363-	A MOTOR (L) ASSY
Ь1101 ∀ ў∙	1-449-921-1	1 TRANSFORMER, POWER (US. Canadian)
PT101 🕰 •	1-449-922-1	1 TRANSFORMER. POWER
		(MAOE IN JAPAN:AEP)
¹T101 ∆ }∙	1-449-925-11	TRANSFORMER, POWER
		(MADE IN FRANCE:AEP.UK)
******	********	*************
	ACCESSOR	RY & PACKING MATERIAL

	1 405 504 44	ANNUADED DEMOTE (DI COC)
		COMMANDER, REMOTE (RM-0791)
		CORD. CONNECTION (MADE IN FRANCE: AEP. UK
	1-009-033-11	CORD. CONNECTION
	0 704 040 04	(Canadian, MAOE IN JAPAN, AEP
*		SHEET (STANDARD). PROTECTION
	3-707-584-01	COVER. BATTERY
	3-752-690-11	MANUAL. INSTRUCTION (ENGLISH, FRENCH,
		SPANISH, PORTUGUESE) (MADE IN JAPAN:AEP)
	3-752-690-21	MANUAL. INSTRUCTION (ENGLISH)
		(US. Canadian)
	3-752-690-41	MANUAL. INSTRUCTION (GERMAN. OUTCH.
		SWEOISH. ITALIAN) (MADE IN JAPAN: AEP)
	3-752-690-51	MANUAL. INSTRUCTION (ENGLISH, FRENCH.
		WIGH PORTHOUSES AMOS IN STRUCT

SPANISH, PORTUGUESE) (MADE IN FRANCE: AEP. UK)
3-752-690-61 MANUAL, INSTRUCTION (GERMAN, OUTCH.

3-795-629-11 INSTRUCTION

* 4-944-108-11 INDIVIOUAL CARTON

* 4-941-925-01 CUSHION

* 4-941-548-01 LASEL. CLASS 1 (AEP. UK)

SWEDISH. ITALIAN) (MADE IN FRANCE: AEP)

** T-621-775-10 SCREW +8 2.6X4 # 2	Remark
# 1 7-621-775-10 SCREW +8 2.6X4 # 2 7-685-134-19 SCREW +8TP 2.6X8 TYPE2 N-S # 3 7-621-255-15 SCREW +P 2X3 # 4 7-682-547-04 SCREW +BVTT 3X6 (S) # 5 7-682-547-09 SCREW +8 3X6 # 6 7-682-548-09 SCREW +8VTT 3X8 (S)	
# 2	
# 3	
# 3 7-621-255-15 SCREW +P 2X3 # 4 7-682-547-04 SCREW +BVTT 3X6 (S) # 5 7-682-547-09 SCREW +8 3X6 # 6 7-682-548-09 SCREW +8VTT 3X8 (S)	
# 5 7-682-547-09 SCREW +8 3X6 # 6 7-682-548-09 SCREW +8VTT 3X8 (S)	•
# 5 7-682-547-09 SCREW +8 3X6 # 6 7-682-548-09 SCREW +8VTT 3X8 (S)	
3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	
# 7 7-685-646-79 SCREW +8VTP 3X8 TYPE2 N-S	
# 8 7-685-647-79 SCREW +8VTP 3X10 TYPE2 N-S	
# 9 7-685-870-01 SCREW +BVTT 3X5 (S)	•

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.