Analysis of Trusses

Basic formulation and examples

Ricardo A. Fernandes

ricardoaf@lccv.ufal.br

Advisor: Adeildo S. Ramos Jr.








References

- Paulino, G. H. (2015) The Ground Structure Method: A computational method for optimal frames (pin-jointed frames).
 Presentation Georgia Tech.
- Ferreira, A. J. M. (2009) MATLAB Codes for Finite Element Analysis. Solids and Structures. Springer.
- Tornberg, A-K. (2013) Structures in Equilibrium. Minimizing with Constraints. Notes from Mathematical models, analysis and simulation KTH Royal Institute of Technology, Sweden.
- Bezanson, J.; Edelman, A.; Karpinski, S.; Shah, V. B. (2017) Julia: A Fresh Approach to Numerical Computing. Society for Industrial and Applied Mathematics Review, Vol. 59. No. I, pp. 65-98.
- Ramos Jr., A. S. (2019) Introdução à otimização estrutural. Notas de aula Programa de Pós-Graduação em Engenharia Civil UFAL, Brazil.

Coordinate Systems

Given the following isostatic truss:

4 nodes, 5 bars and 5 free DOFs

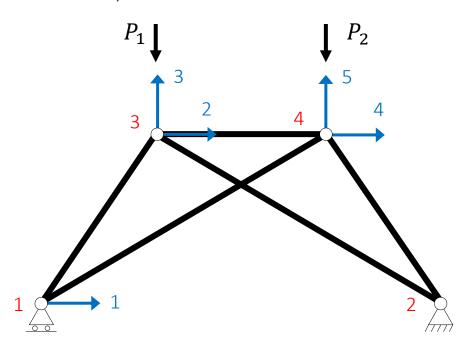

Global coordinate system

Displacements: $\mathbf{u} = [u_1 \quad u_2 \quad u_3 \quad u_4 \quad u_5]^T$


External forces: $\mathbf{f} = \begin{bmatrix} 0 & 0 & -P_1 & 0 & -P_2 \end{bmatrix}^T$

Internal coordinate system

Elongations:

$$\boldsymbol{\delta} = [\delta_1 \quad \delta_2 \quad \delta_3 \quad \delta_4 \quad \delta_5]^T$$

• Internal forces:
$$\mathbf{n} = [n_1 \quad n_2 \quad n_3 \quad n_4 \quad n_5]^T$$

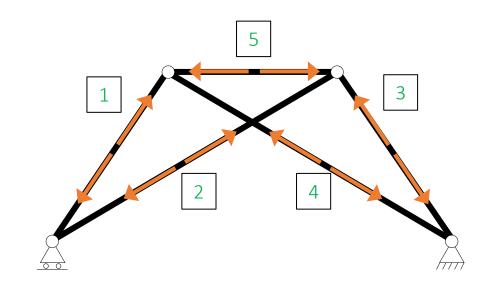


Global/Internal transformations

 $\mathbf{B}^T \mathbf{n} = \mathbf{f}$ \mathbf{B}^T is the force equilibrium matrix

 $\delta = B u$


B is the incidence matrix

Example

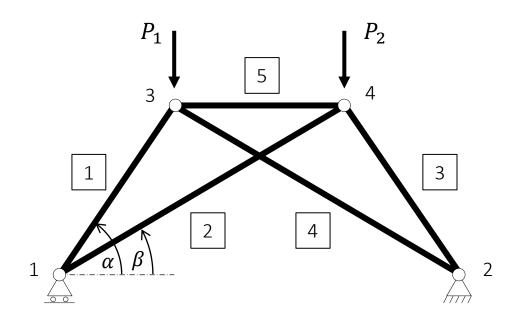

$$c_{\alpha} = \cos \alpha$$
 $c_{\beta} = \cos \beta$
 $s_{\alpha} = \sin \alpha$ $s_{\beta} = \sin \beta$

Performing nodal equilibrium

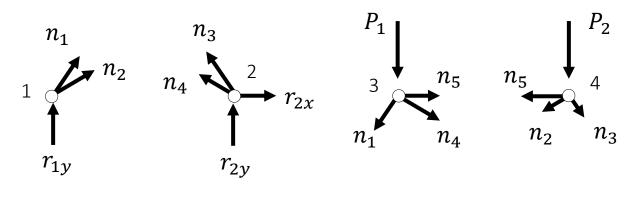

$$\begin{bmatrix} -c_{\alpha} & -c_{\beta} & 0 & 0 & 0 & 0 & 0 & 0 \\ -s_{\alpha} & -s_{\beta} & 0 & 0 & 0 & -1 & 0 & 0 \\ 0 & 0 & c_{\alpha} & c_{\beta} & 0 & 0 & -1 & 0 \\ 0 & 0 & -s_{\alpha} & -s_{\beta} & 0 & 0 & -1 & 0 \\ c_{\alpha} & 0 & 0 & -c_{\beta} & -1 & 0 & 0 & 0 \\ s_{\alpha} & 0 & 0 & s_{\beta} & 0 & 0 & 0 & 0 \\ 0 & s_{\beta} & s_{\alpha} & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} n_{1} \\ n_{2} \\ n_{3} \\ n_{4} \\ n_{5} \\ r_{1y} \\ r_{2x} \\ r_{2y} \end{bmatrix} = \begin{bmatrix} 0 \\ 0 \\ 0 \\ 0 \\ -P_{1} \\ 0 \\ -P_{2} \end{bmatrix}$$

Matrix is square and invertible: system is statically determinate

Example

Performing nodal equilibrium

- Each row (equation) is associated with a DOF
- Each column is associated with an unknown

$$\begin{bmatrix} \boldsymbol{B} & \boldsymbol{B}_{rn} \\ \boldsymbol{B}_{rr} & \boldsymbol{B}_{rr} \end{bmatrix}^T \begin{bmatrix} \boldsymbol{n} \\ \boldsymbol{r} \end{bmatrix} = \begin{bmatrix} \boldsymbol{f} \\ \boldsymbol{0} \end{bmatrix}$$

$$\begin{bmatrix} -c_{\alpha} & -c_{\beta} & 0 & 0 & 0 & 0 & 0 & 0 \\ -s_{\alpha} & -s_{\beta} & 0 & 0 & 0 & -1 & 0 & 0 \\ 0 & 0 & c_{\alpha} & c_{\beta} & 0 & 0 & -1 & 0 \\ 0 & 0 & -s_{\alpha} & -s_{\beta} & 0 & 0 & -1 & 0 \\ c_{\alpha} & 0 & 0 & -c_{\beta} & -1 & 0 & 0 & 0 \\ s_{\alpha} & 0 & 0 & s_{\beta} & 0 & 0 & 0 & 0 \\ 0 & s_{\beta} & -c_{\alpha} & 0 & 1 & 0 & 0 & 0 \\ 0 & s_{\beta} & s_{\alpha} & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} n_{1} \\ n_{2} \\ n_{3} \\ n_{4} \\ n_{5} \\ r_{1y} \\ r_{2x} \\ r_{2y} \end{bmatrix} = \begin{bmatrix} 0 \\ 0 \\ 0 \\ 0 \\ -P_{1} \\ 0 \\ -P_{2} \end{bmatrix}$$


Solving for internal forces

Keep only the free DOFs

$$\mathbf{B}^T \mathbf{n} = \mathbf{f}$$


$$\begin{bmatrix} -c_{\alpha} & -c_{\beta} & 0 & 0 & 0 \\ c_{\alpha} & 0 & 0 & -c_{\beta} & -1 \\ s_{\alpha} & 0 & 0 & s_{\beta} & 0 \\ 0 & c_{\beta} & -c_{\alpha} & 0 & 1 \\ 0 & s_{\beta} & s_{\alpha} & 0 & 0 \end{bmatrix} \begin{bmatrix} n_{1} \\ n_{2} \\ n_{3} \\ n_{4} \\ n_{5} \end{bmatrix} = \begin{bmatrix} 0 \\ 0 \\ -P_{1} \\ 0 \\ -P_{2} \end{bmatrix}$$

Example

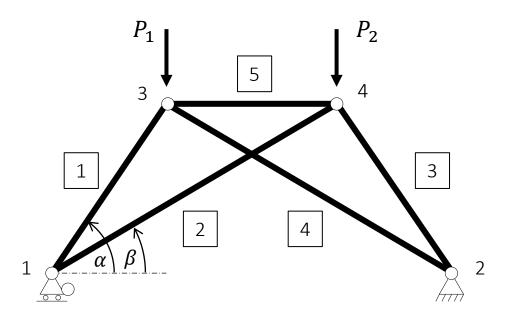

Given connectivity of the bars
$$\mathbf{BAR} = \begin{bmatrix} 1 & 3 \\ 1 & 4 \\ 2 & 4 \\ 2 & 3 \\ 3 & 4 \end{bmatrix}$$

We can define directional cosines for each bar

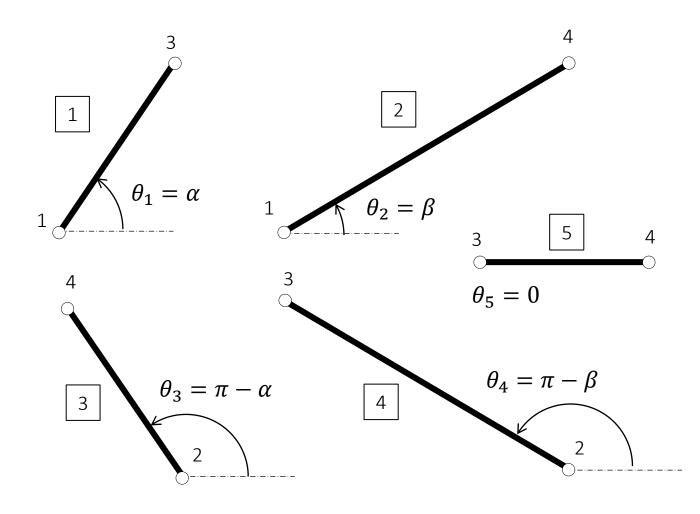

Example

Calculating directional unit vectors

For each bar

$$\theta_1 = \alpha \Rightarrow \hat{d}_1 = [c_\alpha \quad s_\alpha]^T$$

$$\theta_2 = \beta \Rightarrow \hat{d}_2 = \begin{bmatrix} c_\beta & s_\beta \end{bmatrix}^T$$

$$\theta_3 = \pi - \alpha \Rightarrow \hat{d}_3 = \begin{bmatrix} -c_{\alpha} & s_{\alpha} \end{bmatrix}^T$$

$$\theta_4 = \pi - \beta \Rightarrow \hat{d}_4 = \begin{bmatrix} -c_\beta & s_\beta \end{bmatrix}^T$$

$$\theta_5 = 0 \Rightarrow \hat{d}_5 = \begin{bmatrix} 1 & 0 \end{bmatrix}^T$$

$$oldsymbol{q}_e = egin{bmatrix} -\widehat{oldsymbol{d}}_e \ \widehat{oldsymbol{d}}_e \end{bmatrix}$$

A vector \boldsymbol{q}_e for each element \boldsymbol{e} can be used to assemble \boldsymbol{B}^T For example, let $\boldsymbol{e}=2$

$$\mathbf{BAR} = \begin{bmatrix} 1 & 3 \\ 1 & 4 \\ 2 & 4 \\ 2 & 3 \\ 3 & 4 \end{bmatrix} \Rightarrow \mathbf{DOF} = \begin{bmatrix} 1 & 2 & 5 & 6 \\ 1 & 2 & 7 & 8 \\ 3 & 4 & 7 & 8 \\ 3 & 4 & 5 & 6 \\ 5 & 6 & 7 & 8 \end{bmatrix} \qquad \mathbf{q}_{e=2} = \begin{bmatrix} -c_{\beta} \\ -s_{\beta} \\ c_{\beta} \\ s_{\beta} \end{bmatrix}$$


$$\begin{bmatrix} \boldsymbol{B} & \boldsymbol{B}_{rn} \\ \boldsymbol{B}_{rr} & \boldsymbol{B}_{rr} \end{bmatrix}^{T} = \begin{bmatrix} -c_{\alpha} & -c_{\beta} & 0 & 0 & 0 & 0 & 0 & 0 \\ -s_{\alpha} & -s_{\beta} & 0 & 0 & 0 & 0 & -1 & 0 & 0 \\ 0 & 0 & c_{\alpha} & c_{\beta} & 0 & 0 & -1 & 0 & 2 \\ 0 & 0 & -s_{\alpha} & -s_{\beta} & 0 & 0 & 0 & -1 & 0 \\ c_{\alpha} & 0 & 0 & -c_{\beta} & -1 & 0 & 0 & 0 & 2 \\ s_{\alpha} & 0 & 0 & s_{\beta} & 0 & 0 & 0 & 0 & 5 \\ 0 & c_{\beta} & -c_{\alpha} & 0 & 1 & 0 & 0 & 0 & 0 \\ 0 & s_{\beta} & s_{\alpha} & 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} \mathbf{B} & \mathbf{B}_{rn} \\ \mathbf{B}_{rr} & \mathbf{B}_{rr} \end{bmatrix}^{T}$$

Automatic Assembly of B^T

Example using Julia

Given

- List of nodal coordinates
- List of supported DOFs
- List of bar connectivity

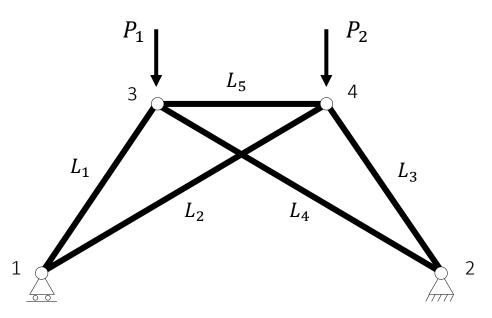

$$\mathbf{NODE} = \begin{bmatrix} 0 & 0 \\ 3 & 0 \\ 1 & 2 \\ 2 & 2 \end{bmatrix}$$

$$\mathbf{SUPP} = \begin{bmatrix} 0 & 1 \\ 1 & 1 \\ 0 & 0 \\ 0 & 0 \\ 0 & 0 \end{bmatrix}$$

$$\mathbf{BAR} = \begin{bmatrix} 1 & 3 \\ 1 & 4 \\ 2 & 4 \\ 2 & 3 \\ 3 & 4 \end{bmatrix}$$

Automatic Assembly of BT

In [1]: using LinearAlgebra

Given nodal coords and bar connectivity

```
In [2]: # Nodal coords: [xi, yi] = NODE[i,:]
NODE = [0 0; 3 0; 1 2; 2 2]

# Support DOF: 0 for free, 1 for fix
SUPP = [0 1; 1 1; 0 0; 0 0]

# Bar connectivity: bare have nodes ELEM[e,:]
BAR = [1 3; 1 4; 2 4; 2 3; 3 4];
```

Pre process data

```
In [3]: # Get number of DOFs
    n_dof = 2 * size(NODE, 1)
    println("Number of DOFs : ", n_dof)

# Define DOFs of each bar
    DOF = [2BAR[:, 1].-1 2BAR[:, 1] 2BAR[:, 2].-1 2BAR[:, 2]]
    println("DOFs of bars : ", DOF)

# Define free DOFs
free = setdiff(1:n_dof, findall(SUPP'[:] .== 1))
    println("Free DOFs : ", free)


Number of DOFs : 8
    DOFs of bars : [1 2 5 6; 1 2 7 8; 3 4 7 8; 3 4 5 6; 5 6 7 8]
    Free DOFs : [1, 5, 6, 7, 8]
```

Automatic Assembly of B^{T}

Example using Julia

Given

- List of nodal coordinates
- List of supported DOFs
- List of bar connectivity

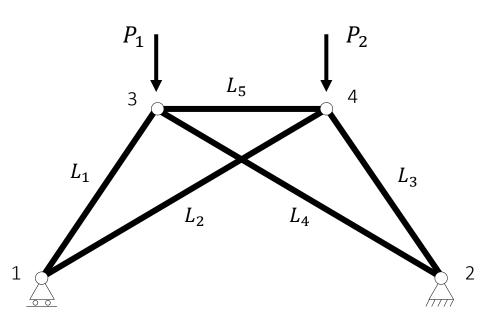

$$\mathbf{NODE} = \begin{bmatrix} 0 & 0 \\ 3 & 0 \\ 1 & 2 \\ 2 & 2 \end{bmatrix}$$

$$\mathbf{SUPP} = \begin{bmatrix} 0 & 1 \\ 1 & 1 \\ 0 & 0 \\ 0 & 0 \\ 0 & 0 \end{bmatrix}$$

$$\mathbf{BAR} = \begin{bmatrix} 1 & 3 \\ 1 & 4 \\ 2 & 4 \\ 2 & 3 \\ 3 & 4 \end{bmatrix}$$

Calculate length of bars

L4: 2.8284271247461903

L5 : 1.0

```
In [4]: # Define directional vectors of each bar
d(e) = NODE[BAR[e, 2], :] - NODE[BAR[e, 1], :]

# Calculate and show length of bars
n_bar = size(BAR, 1);
L = [norm(d(e)) for e in 1:n_bar]
[println("L$e : $(L[e])") for e in 1:n_bar];

L1 : 2.23606797749979
L2 : 2.8284271247461903
L3 : 2.23606797749979
```

Calculate directional unit vectors of bars

```
In [5]: # Calculate and show directional unit vector of each bar
d = [d(e) / L[e] for e in 1:n_bar]
[println("d$e : $(d[e])") for e in 1:n_bar];

d1 : [0.4472135954999579, 0.8944271909999159]
d2 : [0.7071067811865475, 0.7071067811865475]
d3 : [-0.4472135954999579, 0.8944271909999159]
d4 : [-0.7071067811865475, 0.7071067811865475]
d5 : [1.0, 0.0]
```

Assembly Force Equilibrium Matrix, BT

0.707107 -0.447214

0.707107

```
In [6]: # Init and fill BT matrix
        BT = zeros(n dof, n bar)
        for e in 1:n bar
            BT[DOF[e, :], e] = [-d[e]; d[e]]
        # Remove fixed DOFs
        BT = BT[free, :]
Out[6]: 5x5 Array{Float64,2}:
         -0.447214 -0.707107
                              0.0
                                          0.0
                                                    0.0
          0.447214 0.0
                               0.0
                                         -0.707107
                                                   -1.0
          0.894427 0.0
                               0.0
                                          0.707107
```

1.0

0.0

Case 1

Statical Determinacy

Given the force equilibrium relationship

$$\mathbf{B}^T \mathbf{n} = \mathbf{f}$$

$$g \times b \quad b \times 1 \quad g \times 1$$


g: Number of free DOFs


b: Number of bars


We can also evaluate matrix \boldsymbol{B}^T rank, r

Number of linearly independent column vectors

Case	Order	Rank	Structural type
1	g = b	r = g = b	Isostatic
2	g < b	r = g	Hyperstatic
3	$g \le b$	r < g	Mechanism or
4	g > b	$r \leq b$	partly constrained

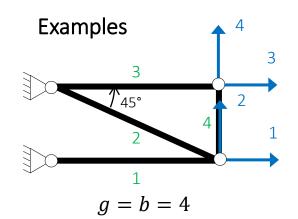

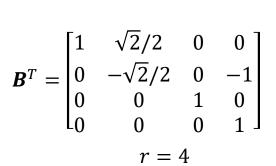

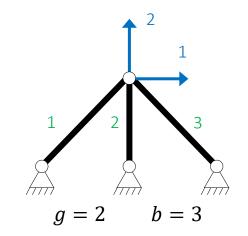

$$\boldsymbol{B}^{T} = \begin{bmatrix} \sqrt{2}/2 & 0 & -\sqrt{2}/2 \\ -\sqrt{2}/2 & -1 & -\sqrt{2}/2 \end{bmatrix}$$

$$r = 2$$

Statical Determinacy

Given the force equilibrium relationship

$$\boldsymbol{B}^T \boldsymbol{n} = \boldsymbol{f}$$

g: Number of free DOFs

 $g \times b \quad b \times 1 \quad g \times 1$


b: Number of bars

We can also evaluate matrix \boldsymbol{B}^T rank, r

Number of linearly independent column vectors


Case	Order	Rank	Structural type
1	g = b	r = g = b	Isostatic
2	g < b	r = g	Hyperstatic
3	$g \leq b$	r < g	Mechanism or
4	g > b	$r \leq b$	partly constrained

Examples

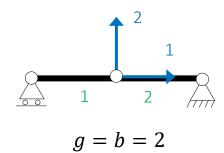



$$\mathbf{B}^T = \begin{bmatrix} 1 & -1 \\ 0 & 0 \end{bmatrix}$$
$$r = 1$$

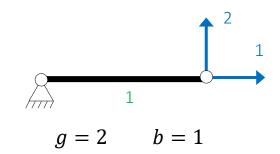

Case 4

$$\mathbf{B}^T = \begin{bmatrix} 1 \\ 0 \end{bmatrix}$$
$$r = 1$$

Stiffness Matrix

Strain-stress relationship

- Internal coordinate system
- Linear elastic material
- Young's modulus E_e

$$\sigma_e = E_e \; \varepsilon_e$$

Hooke Law

- Force-displacement relationship
- Bar stiffness k_e

$$\frac{n_e}{A_e} = E_e \frac{\delta_e}{L_e} \implies n_e = \left[\frac{E_e A_e}{L_e}\right] \delta_e$$

$$n_e = k_e \, \delta_e$$

Generalizing for all bars

• C is a diagonal matrix with bar stiffness (internal stiffness matrix)

$$\boldsymbol{C} = \begin{bmatrix} k_1 & 0 & \dots & 0 \\ 0 & k_2 & \dots & 0 \\ \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & \dots & k_{\text{nbars}} \end{bmatrix}$$

Merging all equations

■ **K** is the <u>global</u> stiffness matrix

$$f = B^{T} n = B^{T} (C \delta) = B^{T} C (B u) = (B^{T} C B) u$$

$$f = K u$$

Flexibility Matrix

Internal Flexibility Matrix, C^{-1}

■ Since **C** is the <u>internal</u> stiffness matrix

$$n = C \delta$$

$$\mathbf{C} = \begin{bmatrix} k_1 & 0 & \dots & 0 \\ 0 & k_2 & \dots & 0 \\ \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & \dots & k_{\text{nbars}} \end{bmatrix}$$

• Multiplying both sides of equation by C^{-1}

$$\mathbf{c}^{-1} = \begin{bmatrix} \frac{1}{k_1} & 0 & \dots & 0 \\ 0 & \frac{1}{k_2} & \dots & 0 \\ \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & & 1 \end{bmatrix}$$

Global Flexibility Matrix, F


• The inverse of global stiffness matrix, $F = K^{-1}$

Remarks

- In some cases, structures may not be sufficiently constrained:
 - Global stiffness may not be invertible
 - Global flexibility matrix cannot be determined
 - Global flexibility matrix may not not invertible
 - Global stiffness matrix cannot be determined
 - Even then, internal coordinate system is consistent
 - Internal stiffness and flexibility matrices can be determined!

Energetic Analysis

Energetic Analysis

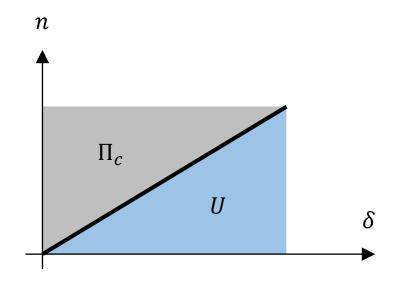

<u>Internal</u>

Global

$$U = \frac{1}{2} \boldsymbol{\delta}^T \boldsymbol{C} \boldsymbol{\delta}$$

$$U = \frac{1}{2} \mathbf{u}^T \mathbf{K} \mathbf{u}$$

$$\Pi_c = \frac{1}{2} \boldsymbol{n}^T \boldsymbol{C}^{-1} \boldsymbol{n} \qquad \Pi_c = \frac{1}{2} \boldsymbol{f}^T \boldsymbol{F} \boldsymbol{f}$$

$$\Pi_{c} = \frac{1}{2} \mathbf{f}^{T} \mathbf{F} \mathbf{f}$$

$$\Pi = U - \boldsymbol{f}^T \boldsymbol{u}$$

For linear elastic materials

$$\Pi_{c} = \frac{1}{2} \mathbf{f}^{T} \mathbf{K}^{-1} \mathbf{f} = \frac{1}{2} \mathbf{f}^{T} \mathbf{u} = \frac{1}{2} (\mathbf{K} \mathbf{u})^{T} \mathbf{u} = \frac{1}{2} \mathbf{u}^{T} \mathbf{K} \mathbf{u} = U$$

Questions? Comments?

This presentation

https://github.com/ricardoaf/conopt

New to Julia?

https://github.com/ricardoaf/juliafirststeps

