


# Op Amp Discovery

**Fast & Flexible Experimenters  
and Learning Board**

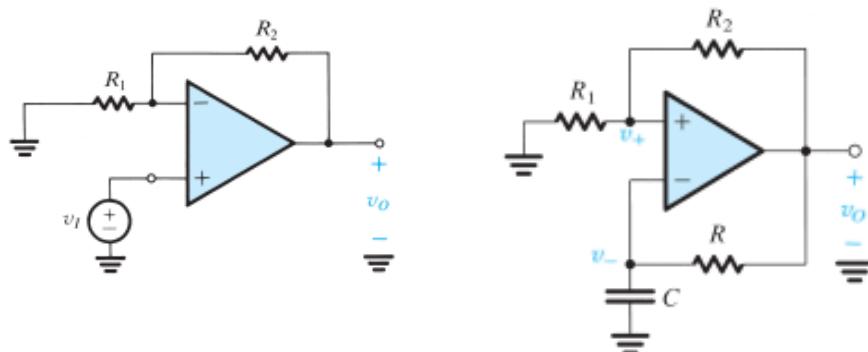

## Contents

1	Intro.....	2
2	Fast & Flexible Prototyping .....	2
3	Problems Solved.....	2
4	Overview .....	3
5	Quick Start Guide.....	4
6	Schematic .....	6
7	Op Amp Basic Circuits .....	9
8	Op Amp Circuits II .....	10
9	Op Amp Circuits III .....	11
10	Proto Area Schematics .....	12
11	Non-Inverting Amp Walk-Thru .....	13
12	Op Amp Discovery Sheets .....	14
13	Parts List.....	15
14	Bonus Sections .....	16


## 1 Intro

The Op Amp Discovery Board allows students, engineers and DIYers to quickly build and experiment with a variety of op amp configurations. **Hands-on learning boosts understanding and intuition!**

- Easy-to-use hybrid (breadboard / PCB).
- Explore 20+ classic op amp circuits
- Create your own circuits
- Power Rails & Signal Source Included on-board

## 2 Fast & Flexible Prototyping

Quickly build and explore many classic op amp circuits with component headers and configurable circuits. Follow self-directed or guided learning.

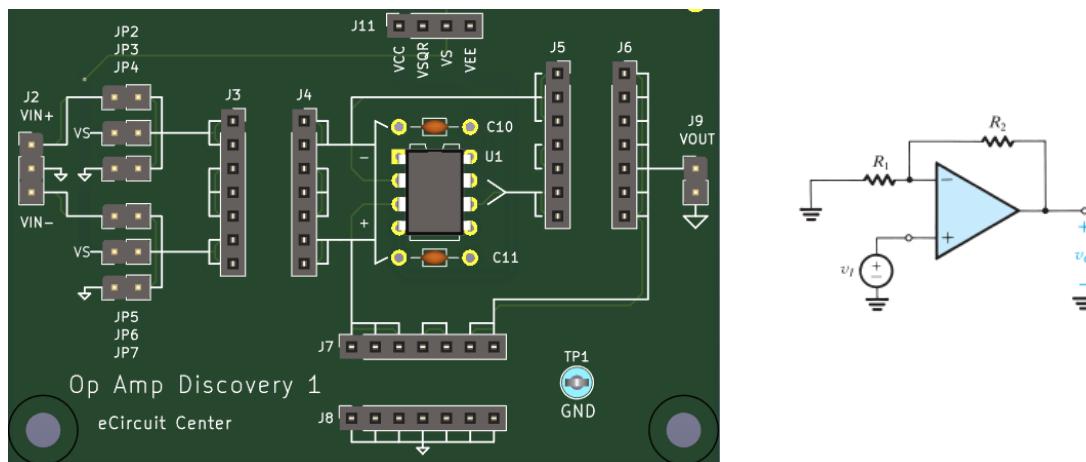

- Flexible - **easily install Rs, Cs or jumpers across any headers.**
- Fun problem solving - *How-to-build circuit on headers?*
- Configurable signal - DC, AC, square-wave, level trimpot

## 3 Problems Solved

Standard breadboards can be frustrating:


- Prone to opens, shorts, intermittent connections
- Confusing, difficult to probe and debug
- Requires expensive, bulky supplies and signal generators

Op Amp Discovery:

- Get circuits up and running fast!
- PCB arranged like schematic to reinforce learning.
- Minimal cost and PCB space - an affordable & portable learn-anywhere lab.
- Learning possible with a \$10 DMM only.

## 4 Overview

The Op Amp Discovery provides essential support circuitry for a stand-alone learning lab. Circuit flexibility allows for custom or more complex setups. *The “Schematic” style of the PCB layout builds understanding and intuition.*

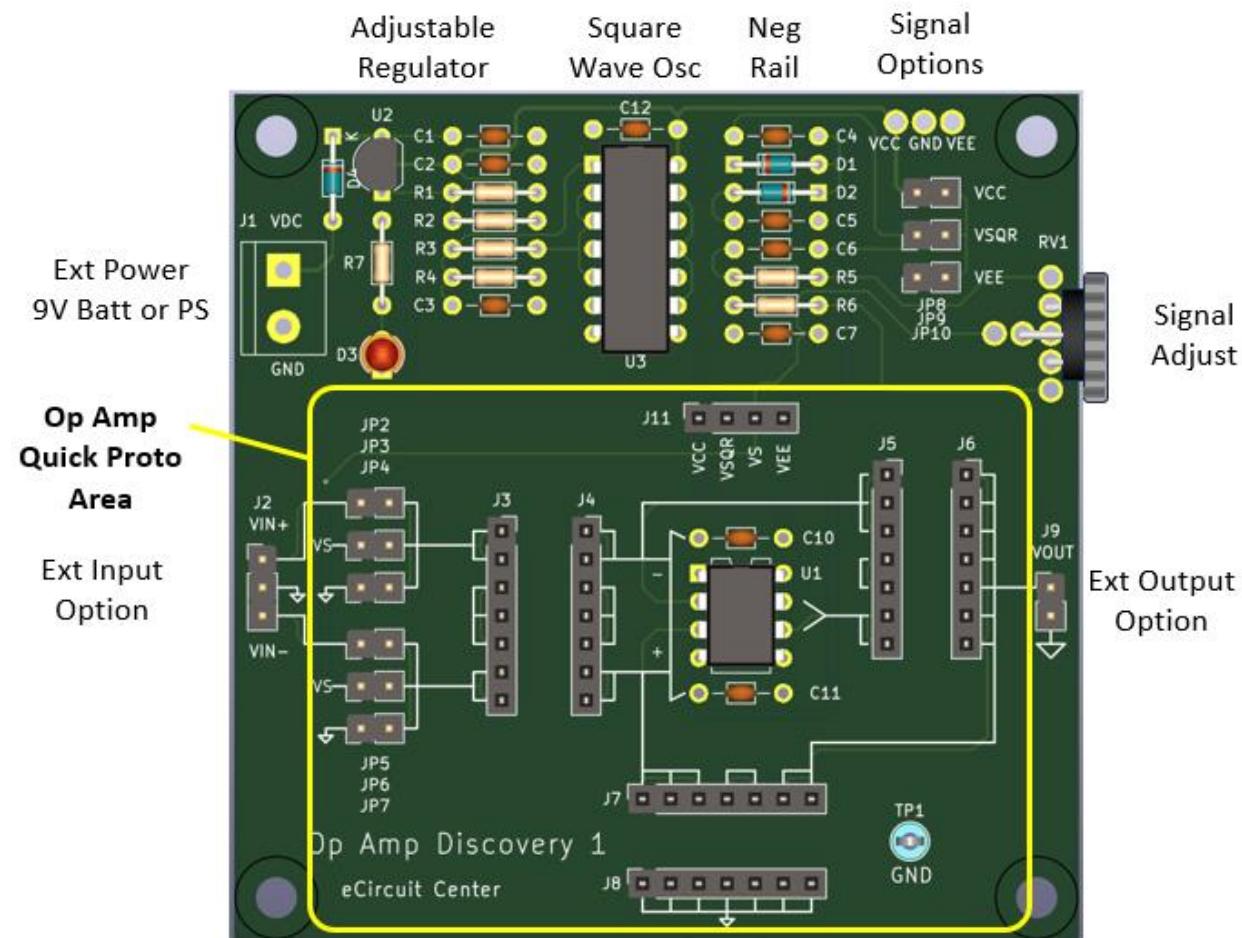

### Overview

- Quick Proto Headers for easy, flexible circuit building.
- Op Amp socket for DIP (or SMD on 8-pin header).
- Power from single source (9V battery)

### Signal Source

- Scalable Square Wave (0 to 5V)
- Selectable DC or AC coupling.
- Adjustable Amplitude (Trim Pot RV1)
- External Input / Outputs (Optional)


### Power Rails

- Positive Rail VCC: Adjustable Regulator (5V default)
- Negative Rail VEE: Cap Charge Inverter (-4.5V)
- Solder pads for External Rails option.


## 5 Quick Start Guide

### 5.1 Inverting Amplifier


Let's jump in with the Non-Inverting Amplifier. From the circuit diagram, how can you build the amplifier on the Op Amp Discovery board?

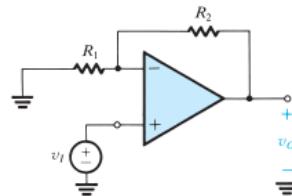

First, sketch out a possible build on the proto-area schematic.

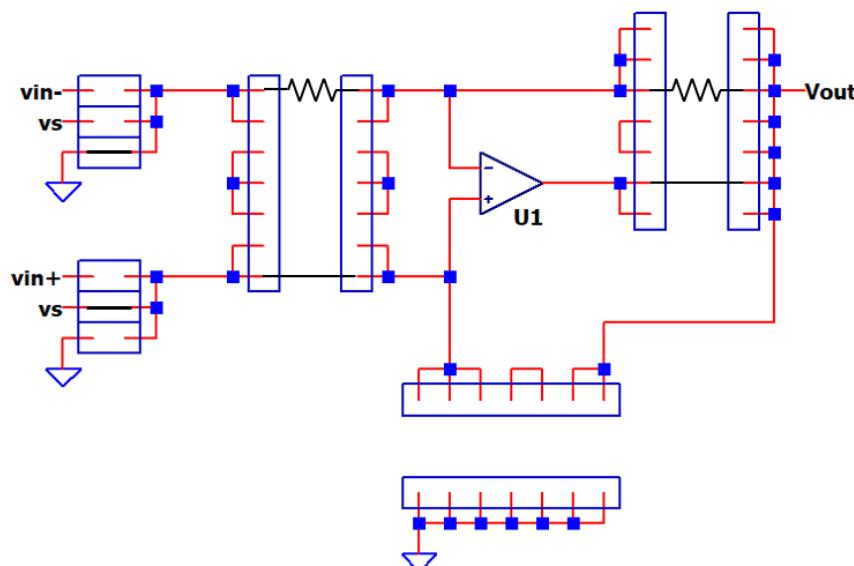


Then, simply install the resistors and wire jumpers - and the circuit's ready to explore!

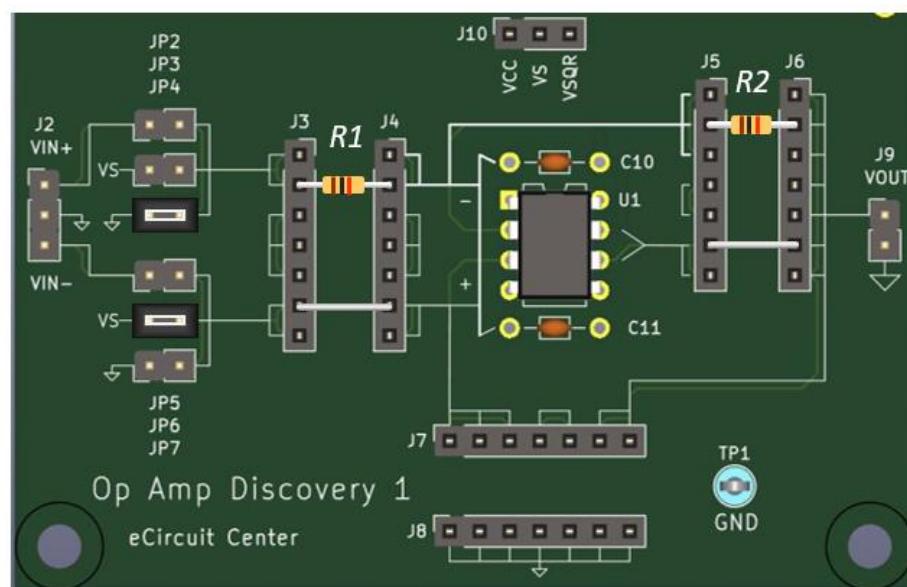


## 5.2 Your Turn!

How can you prototype the Inverting Low-Pass Filter?

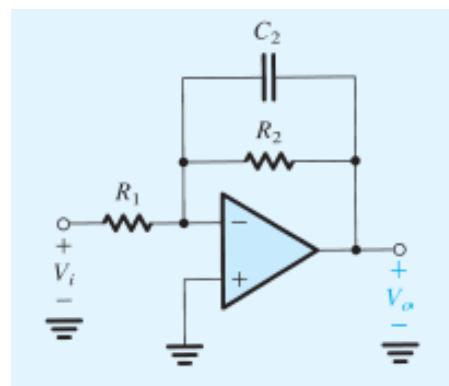

Grab a pencil and solve the quest of how-to-build the circuit on the blank proto schematic! More than one solution typically possible.

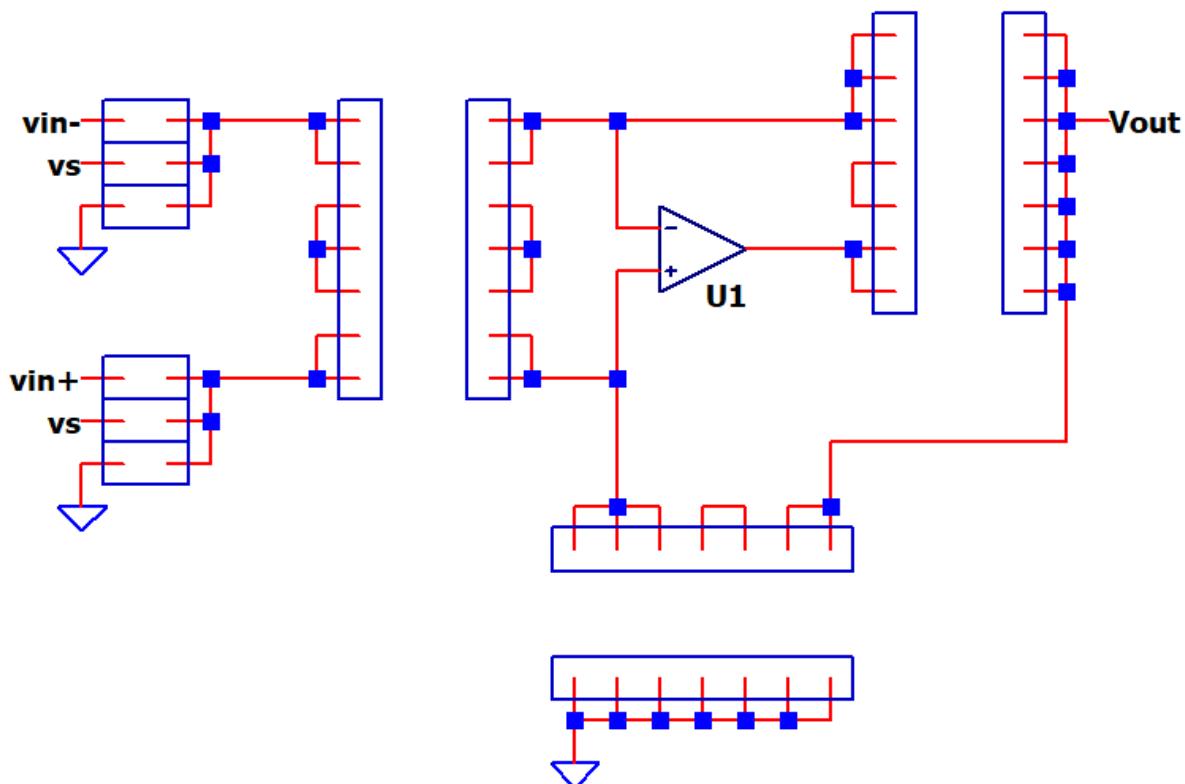


Next step: install the components, jumpers and then power up and explore the circuit.

Print out blank Proto Area Schematics from Section 10.

## 6 Schematic

The system implements classic circuits for easy implementation as well as for lessons of theory and practice.


### 6.1 Positive Adjustable Supply

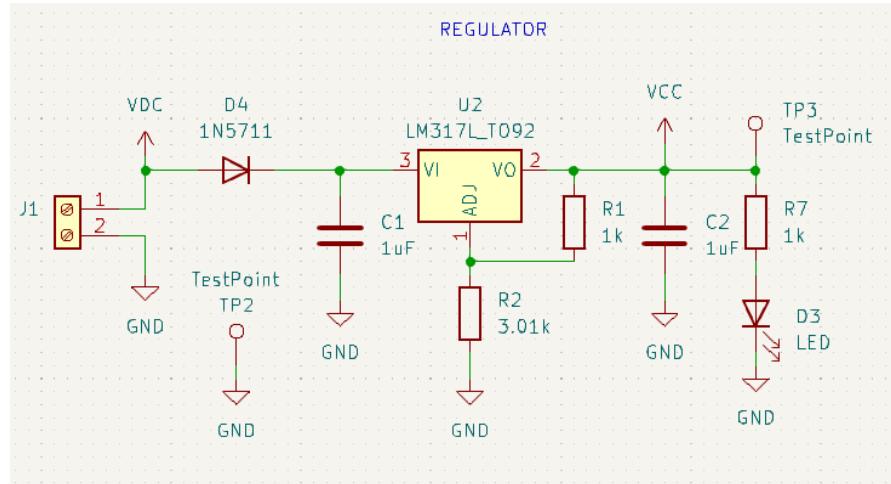

- U1 regulates external battery or power source to 5V
- R1, R2 adjust output  $V_{CC} = 1.25V \times (R_1 + R_2)/R_1$
- D4 prevents Vin reverse bias damage.
- D3 provides visual power indicator

### 6.2 Square-Wave Oscillator and Negative Rail


Square Wave provides Signal Source and drives Neg Rail Generator.

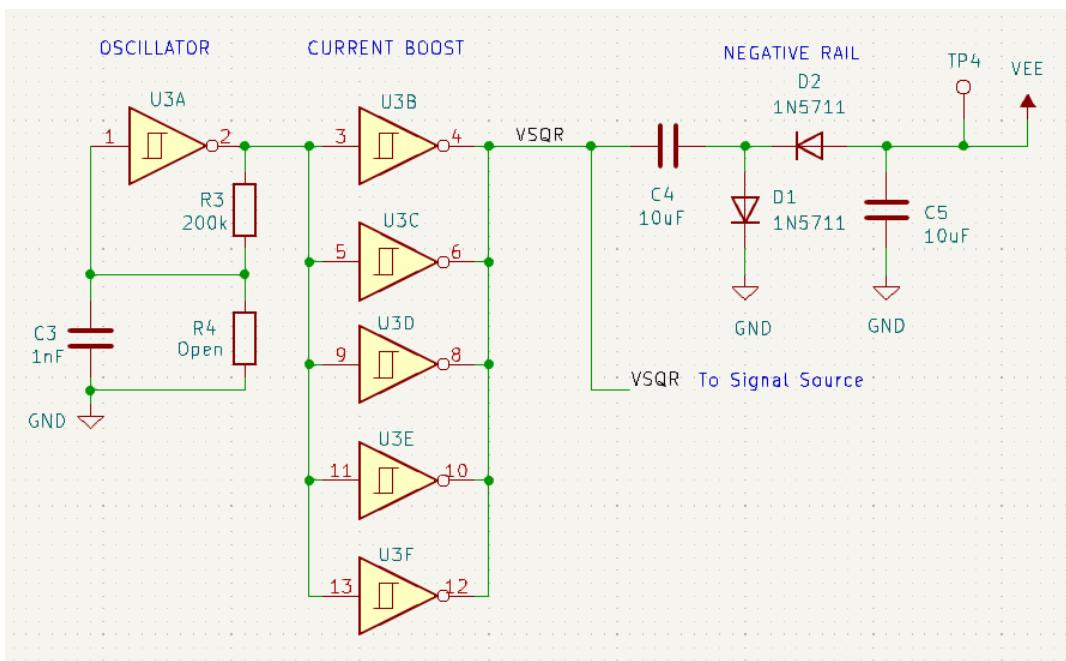

- Square-Wave Oscillator (U3A, R3, R4) creates 0-5V, 200kHz signal.
- Negative Rail developed by Capacitive Charge Pump (C4, C5, D1, D2).

## 6.3 Signal Source and Scaling

Signal components C6, R5, R6 and C7 easily changed on 4-pin headers for user flexibility.

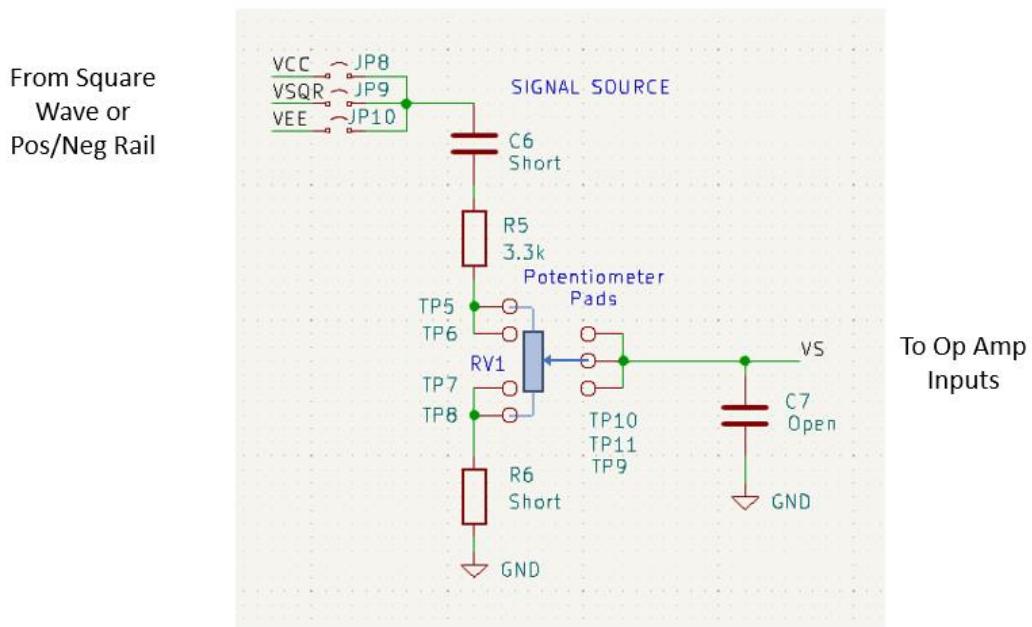

**RV1's multi-pad PCB layout accommodates a wide variety of Trim Pot types.**  
Flexible signal options.

- Select Signal Source (JP8-10): Square Wave (VSQR) or DC Level (VCC, VEE).
- Choose DC Coupling (C6=short) or AC Coupling (C6=cap)
- Scale signal between 0 and 5V (Resistor Divider R5, RV1 and R6).
- Adjust signal level (RV1)
- Apply Low-Pass Filter (C7 optional).

### DC Signal Scaling (R-Divider)

- Minimum

$$VS_{min} = Vin \cdot \frac{R6}{R5 + RV1 + R6}$$

- Maximum


$$VS_{max} = Vin \cdot \frac{R6 + RV1}{R5 + RV1 + R6}$$

### Default Signal Settings

- C6=short, R5=3.3k, RV1=1k, R6=short, C7=open, JP9=ON.
- RV1 adjusts VS for a 0 to 1.2V Square-Wave.

## 6.4 Op Amp Proto Area

Component headers and jumpers create a flexible and intuitive proto lab for exploring op amp circuits.

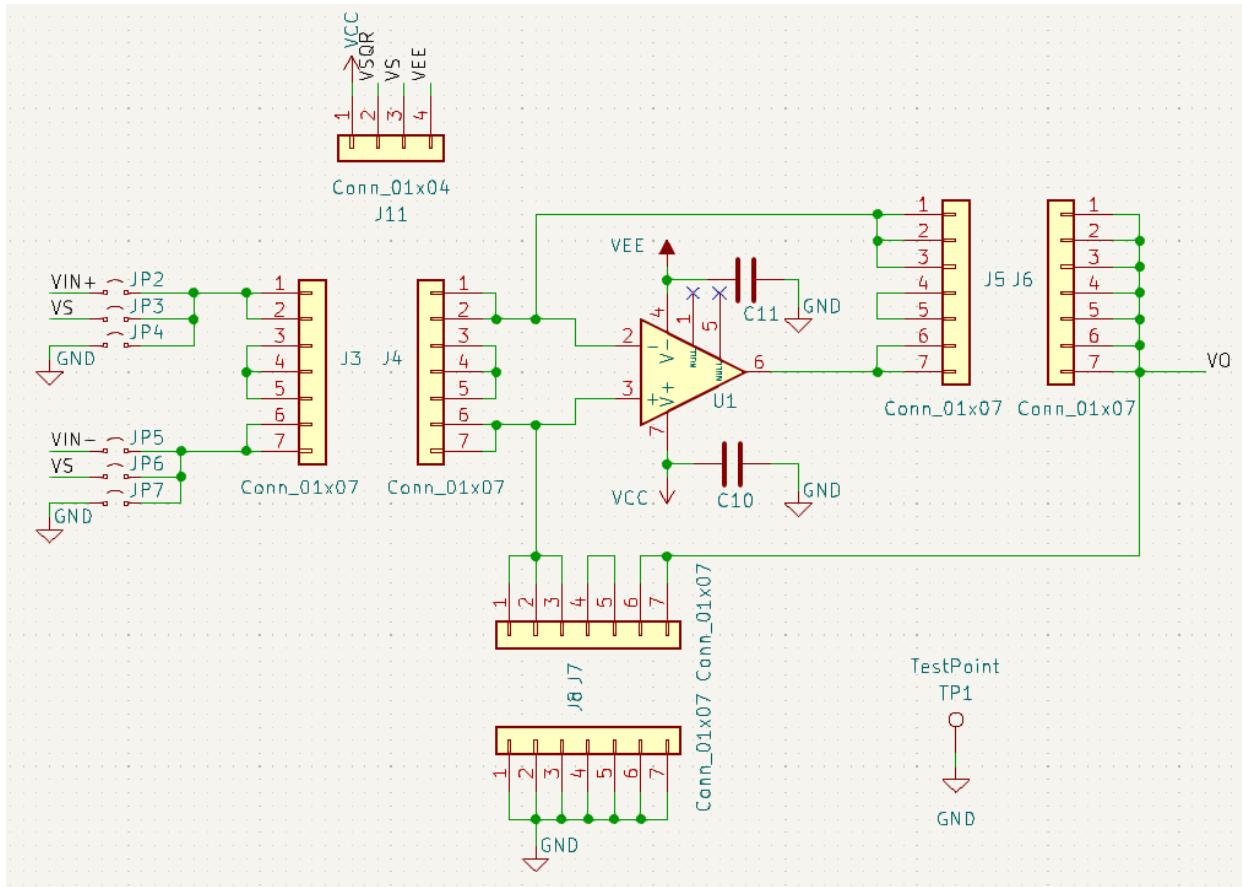

### Prototyping

- Easily install components (Rs, Cs, etc.) *across or within* any Header Sockets (J3 - J8).

### Input Signals





- Select VS, GND or  $V_{IN-}$  (ext) to U1 NEG input path (JP2-4).
- Select VS, GND or  $V_{IN+}$  (ext) to U1 POS input path (JP5-7).

### Advanced Circuits


- Connect to VCC, VSQR, VS or VEE (J11) for more advanced circuits.
- Install alternate op amps into U1 socket.
- Circuit stability provided by C10, C11 bypass capacitors.

## 7 Op Amp Basic Circuits

- Fast prototyping of key topologies.
- Basic to advanced applications.
- More op amp circuits possible!

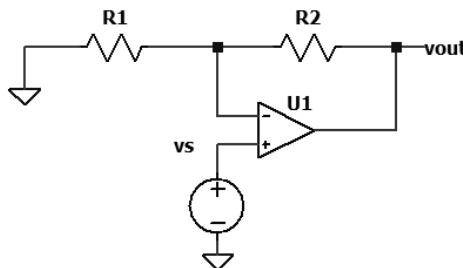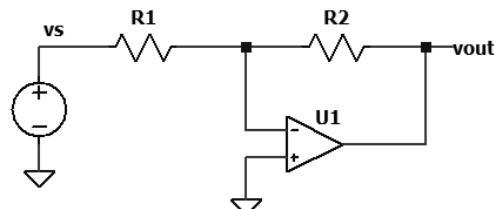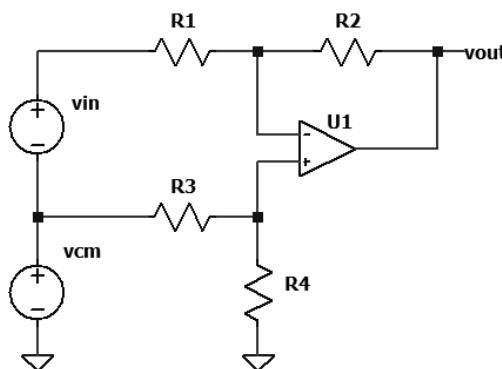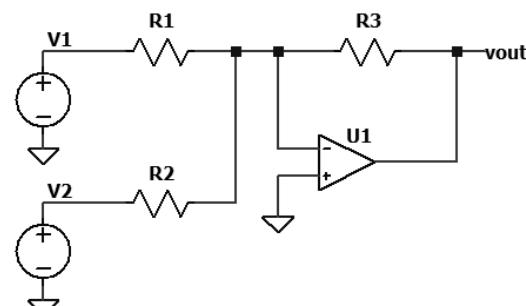
**Non-Inverting****Inverting****Differential****Summing**

- Grab a pencil - find a way to create the circuit on the Proto Area!








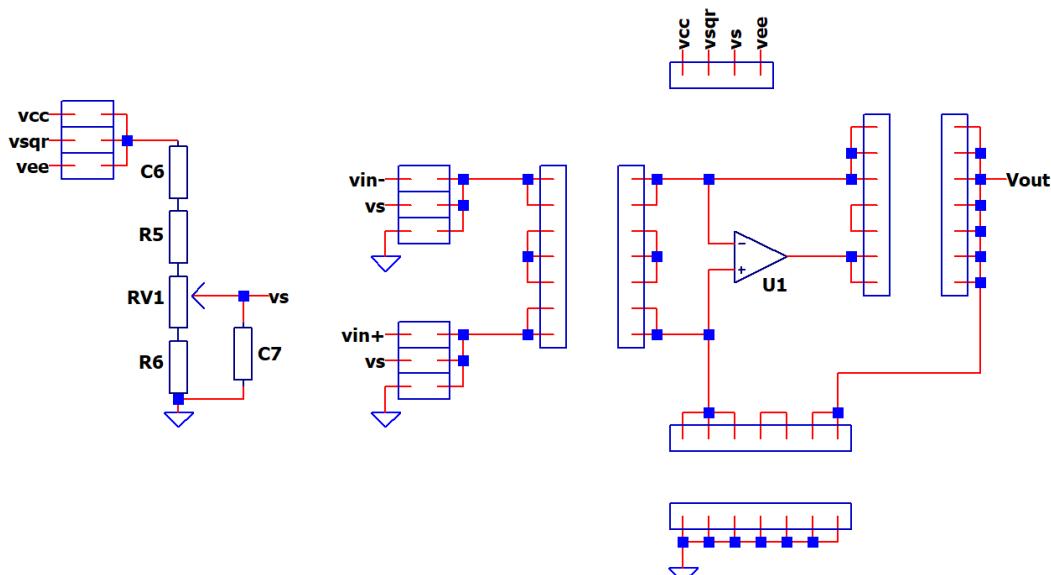


- Print out more Proto Area Schematics (Section 10).



## 8 Op Amp Circuits II

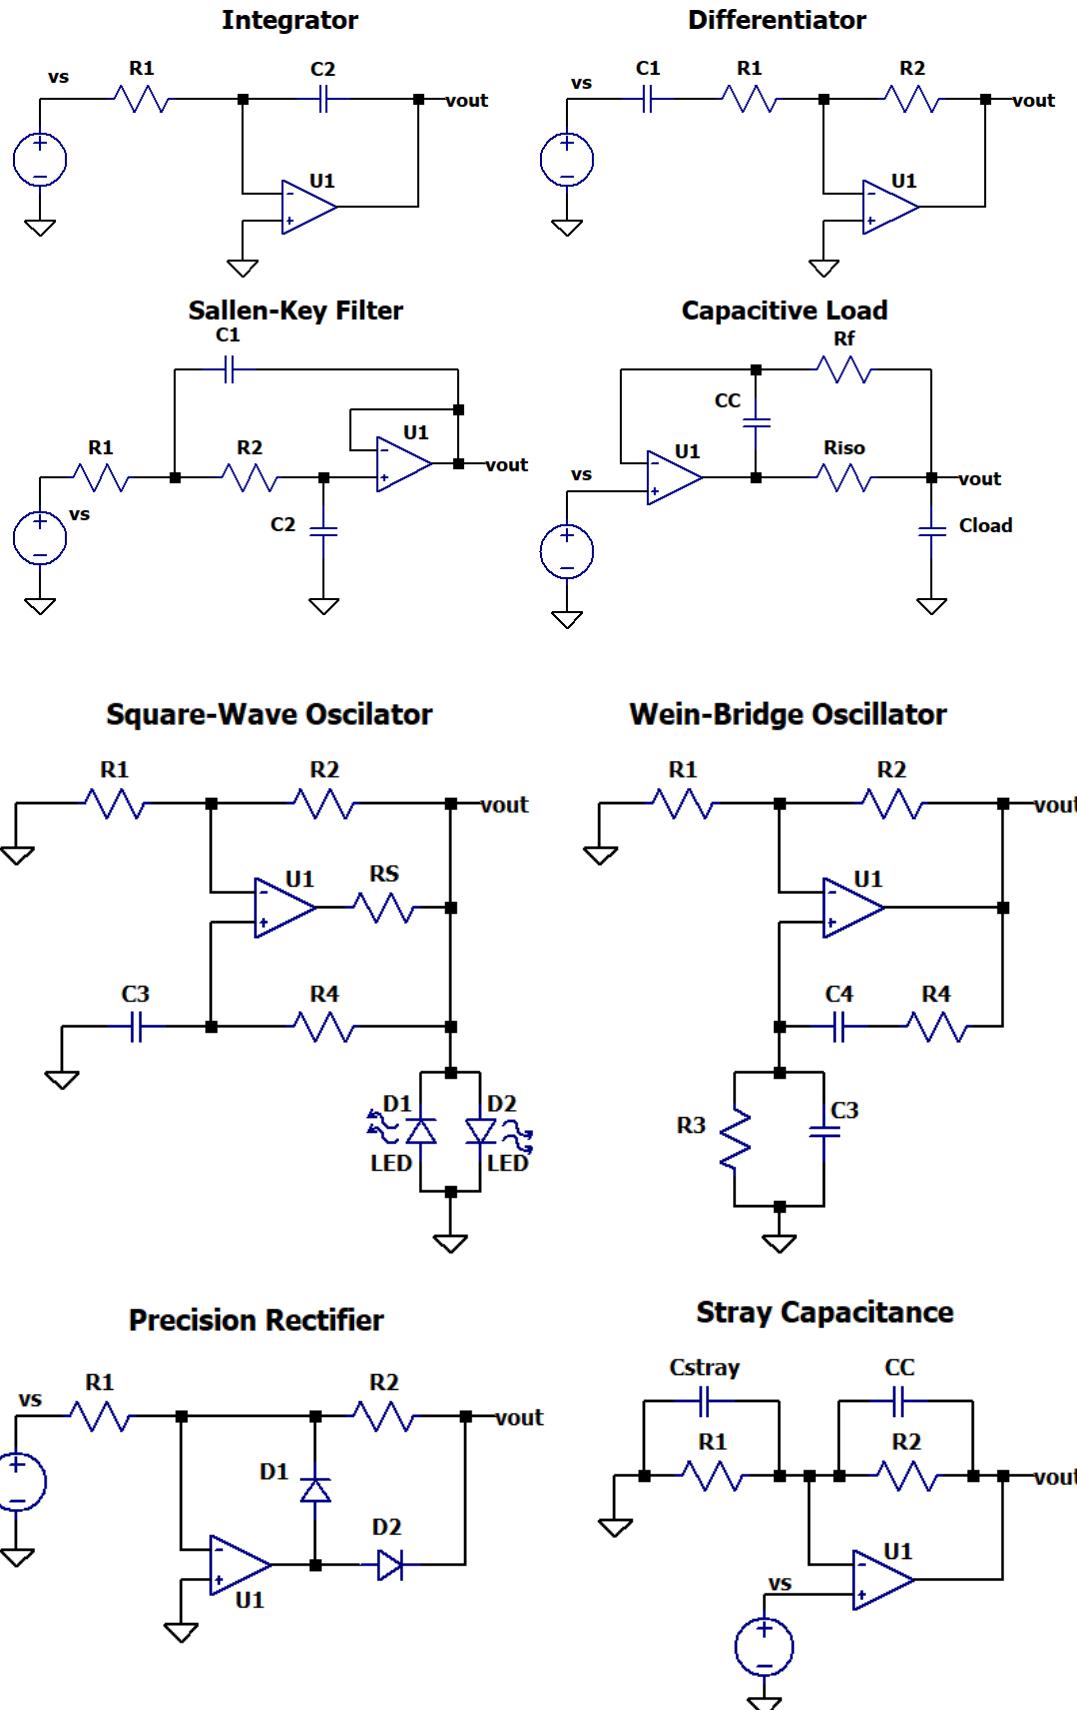

## 9 Op Amp Circuits III

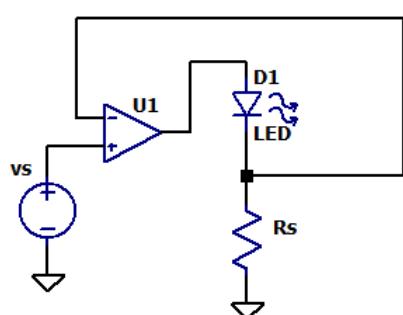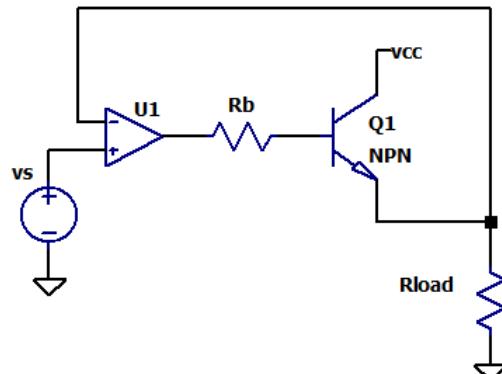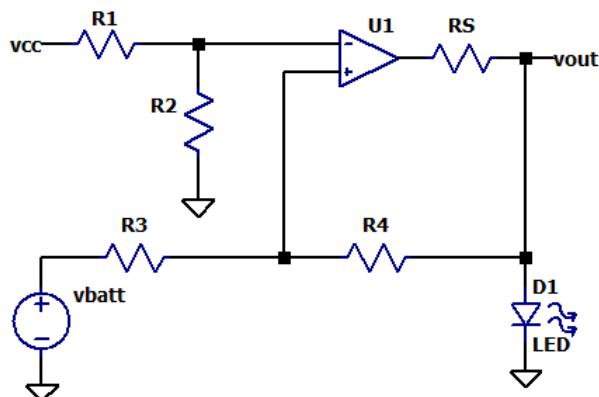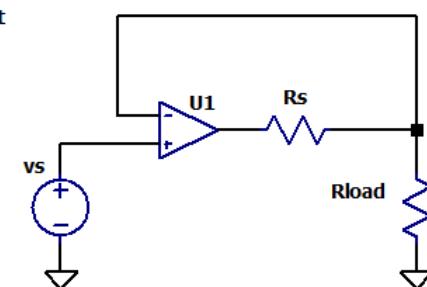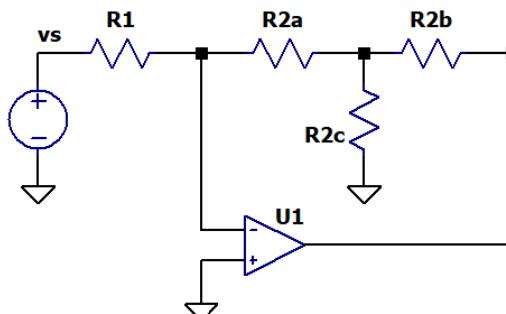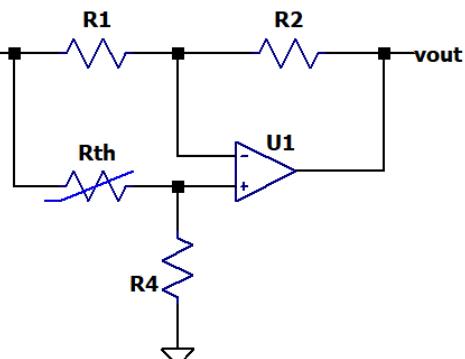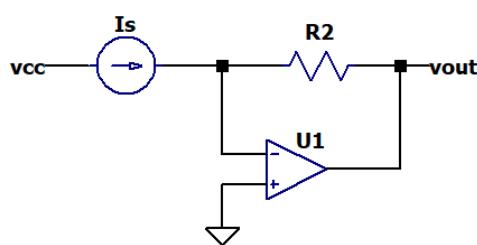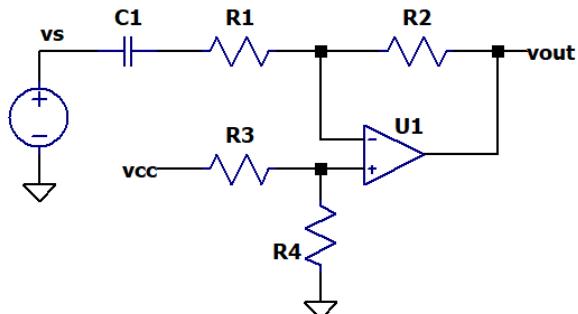
**LED Current Drive****Voltage Regulator****Comparator (Lo-Batt)****Buffer (Remote Sense)****T Feedback****Temperature Sense****I-to-V Converter****Single Supply Amp**

## 10 Proto Area Schematics

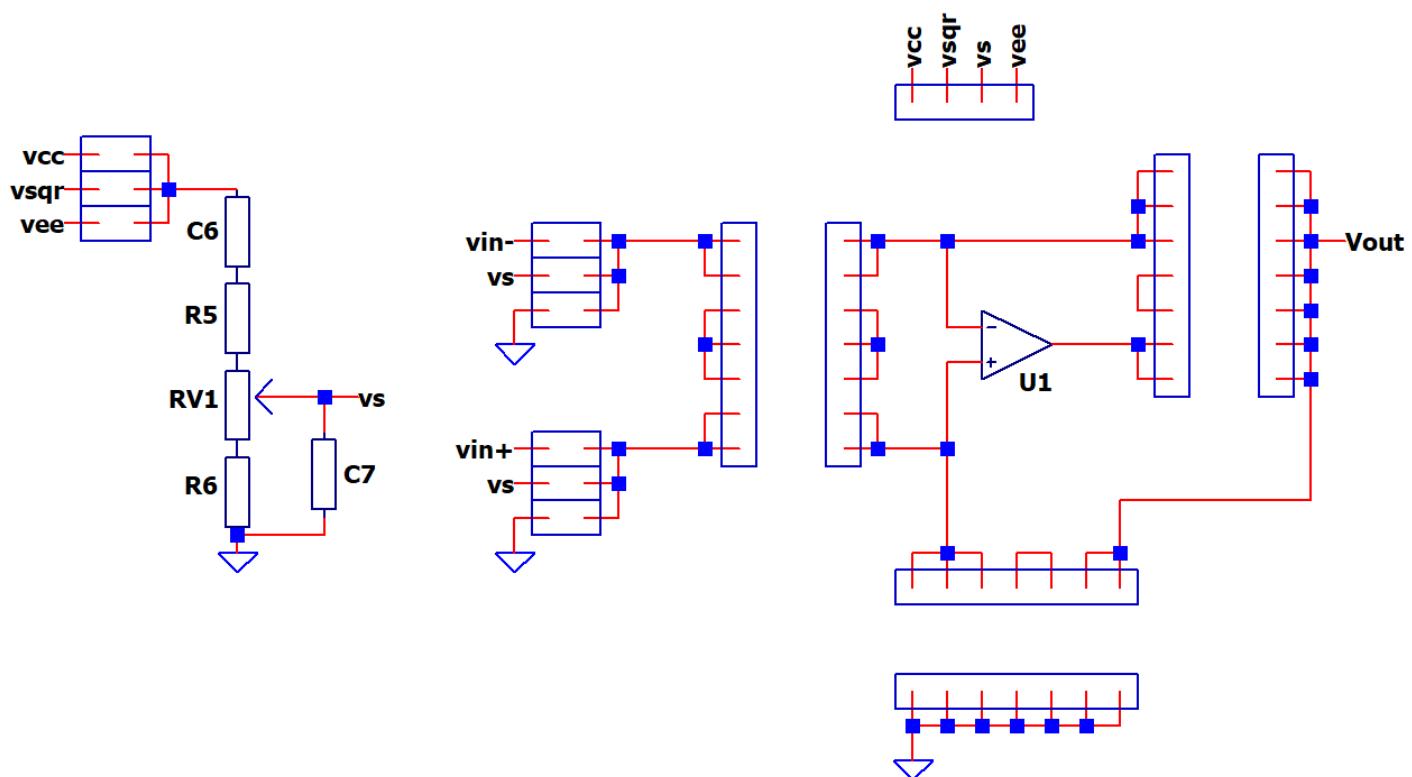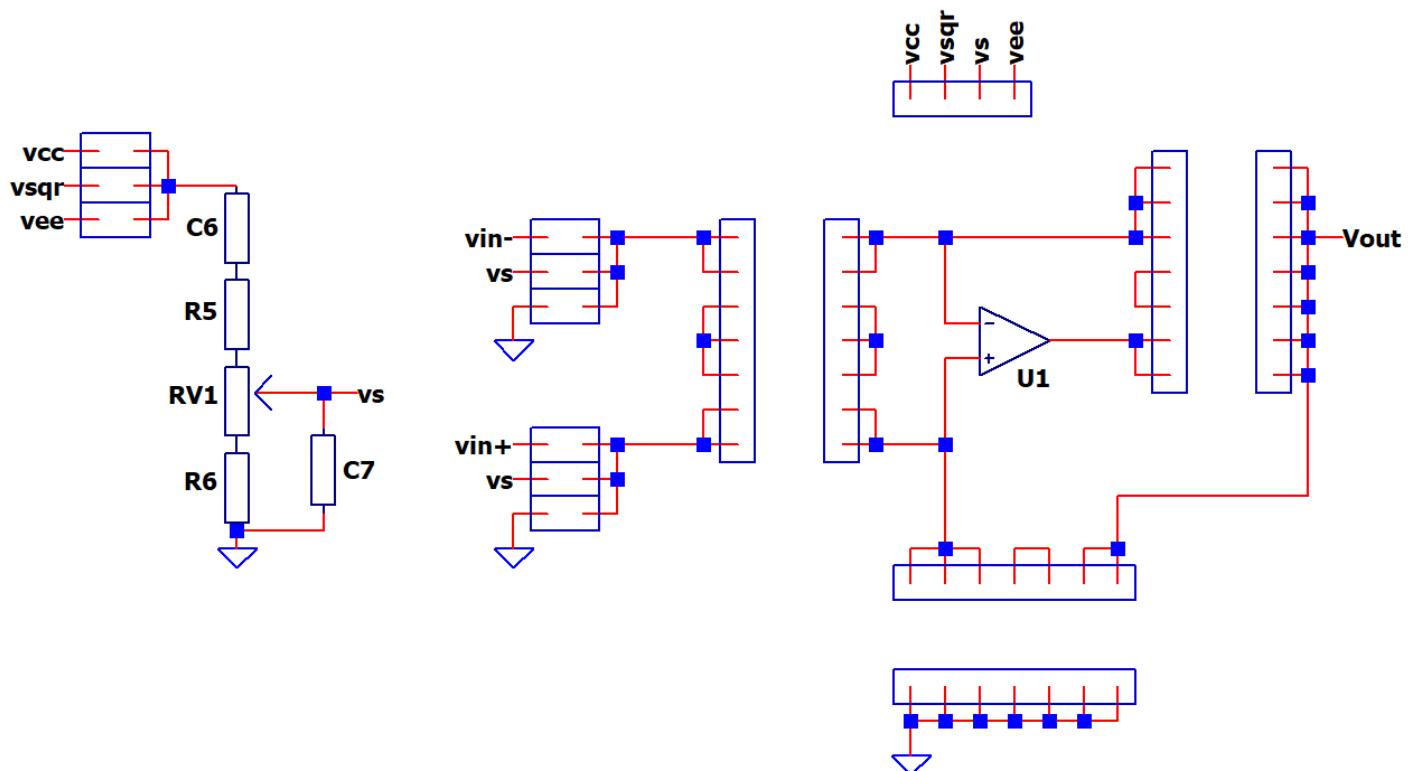

## 11 Non-Inverting Amp Walk-Thru

### 1. Define It – Draw Schematic, choose gains, signal levels, etc.

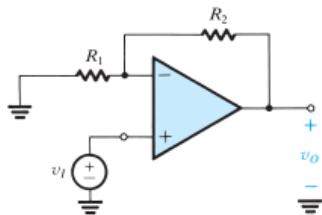


Let's amplify a signal by +3.  
 $K = V_{out}/V_s = R_1/R_2 + 1 = 3$   
 Choose  $V_s = 0.5V$

### 2. Design It – Calculate component values, signal levels.

Choose  $R_1 = 10k$ ,  
 Calc  $R_2 = (K-1) * R_1 = 20k$

$$\begin{aligned} V_{out} &= V_s \cdot K \\ &= 0.5V \cdot 3 \\ &= 1.5V \end{aligned}$$

### 3. Build It - Find a way to create it (sketch circuit below, install parts on Discovery Bd.)

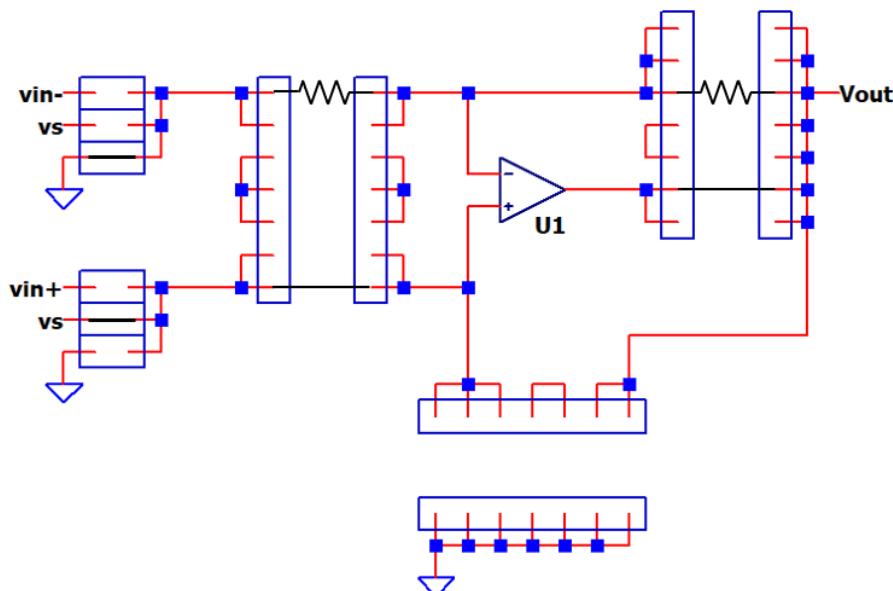

### 4. Test & Learn It – Plan setup, make measurements, verify levels, observe, connect to theory.

Power up the circuit (connect 9V Battery).  
 Connect Probe 1 to VS (Jumper at J3,4).  
 Connect Probe 2 to VOUT (R2 at Vout side).  
 Verify a unipolar square wave at VS.

Adjust RV1 for VS = 1V peak.  
*Did Vout achieve the goal?*

Move Probe 2 to U1 input- (R1 at U1 side).  
*Does U1.in- follow VS?*


*What happens if you double R1 or R2?*

## 12 Op Amp Discovery Sheets

1. Define It – Draw Schematic, choose gains, signal levels, etc.

2. Design It – Calculate component values, signal levels.

3. Build It - Find a way to create it (sketch circuit below, install parts on Discovery Bd.)

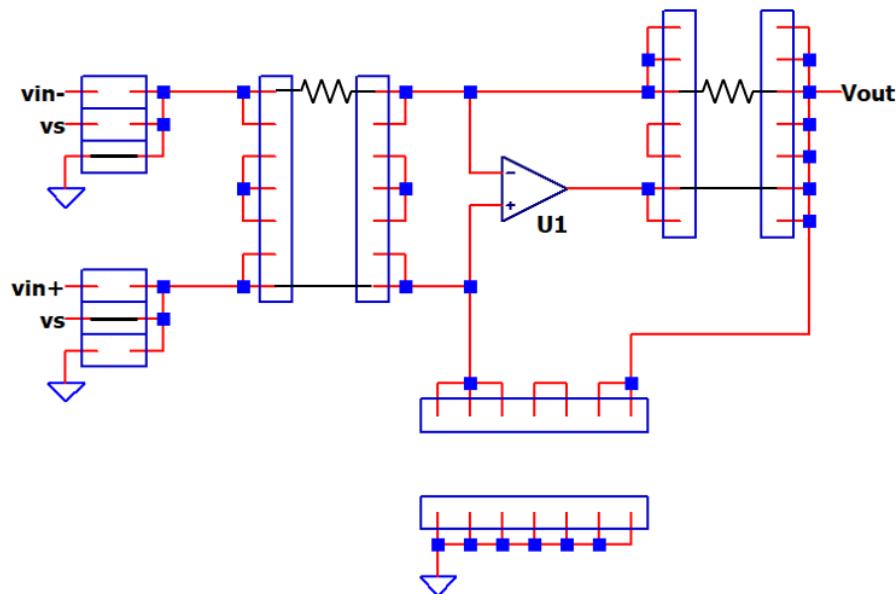

4. Test & Learn It – Plan setup, make measurements, verify levels, observe, connect to theory.

## 13 Parts List

Here's the default Bill of Materials. Modify and build for your own learning goals.

Reference	Qty	Value	Part #	Comment
C1, C2	2	1uF		All caps ceramic, $\geq +25V$
C3	1	1nF		
C4, C5	2	10uF		
C6, R6	2	Short		Short wires or resistor leads.
C7, R4	2	Open		
C10, C11, C12	3	0.1uF		
D1, D2, D4	3	Diode	1N5711	
D3	1	LED Yel	LTL-4253	Any color you prefer.
J1	1			Optional: solder battery / PS leads directly to pads.
J2	1	3-pin Header	TSW-103-08-T-S	Optional: for external inputs.
J9	1	2-pin Header	TSW-102-08-T-S	Optional: for external output.
JP2, JP3, JP4, JP5, JP6, JP7, JP8, JP9, JP10	9	2-pin Header	TSW-102-08-T-S	Jumper Shunt: Samtec SNT-100-BK-T
J3, J4, J5, J6, J7, J8	6	7-pin Socket Header	SSW-107-01-T-S	Sockets for circuit prototyping.
J11, J12, J13	3	4-pin Socket Header	SSW-104-01-T-S	J12,13 sockets for signal scaling components C6, R5, R6, C7.
R1, R7	2	1k		All resistors 1/4W, 5%.
R2	1	3.01k		
R3	1	200k		
R5	1	3.3k		
RV1	1	1k trimpot side adjust	3352W-1-102LF	5 PCB pads available for various pin styles. Alternate part with top adjust: 3386P-1-102TLF
TP1	1	TestPoint	5011	
U1	1	Op Amp	LMC6081IN/NOP8	Single op amp, rail-to-rail output, +/-7.5V supply max, DIP.
U1 socket	1	DIP-8 Socket	4808-3000-CP	
U2	1	Linear Regulator	LM317LZ	
U3	1	Hex Inverters Schmidt Trigger	74HC14APF	
U3 socket	1	DIP-14 socket	4814-3000-CP	

## 14 Bonus Sections

### 14.1 Learning Styles

Dive in any way that propels your learning with Open or Guided learning (or combinations of both).

1. *Explore circuits entirely on your own with self-directed learning.*
2. *Follow guided examples of circuits to observe op amp functions and behaviors.*
3. *Borrow ideas from a circuit example and follow-through on your own.*

### 14.2 DMM Only Learning (No Scope)

A Digital Multi-Meter (DMM) serves a low cost alternative to an oscilloscope. Budget DMMs are available from \$10 and up. See the Guided Examples document for tips on getting the most from a DMM.

### 14.3 Circuit Options

#### External Inputs/ Outputs

- Install header pins J2 (input) and J9 (output).
- Install 2-pin shunts at JP2 or JP5.

#### External Power Supplies

- Un-install U2, R1, C2, R7, C5, D2
- Connect external supplies to PCB plated holes labeled VCC, GND and VEE.

### 14.4 KiCAD Software

KiCad is a free and open-source software suite that provides a complete EDA toolset including schematic capture, PCB layout, 3D visualization, and circuit simulation.

<https://www.kicad.org/>

### 14.5 GitHub

The Op Amp Discovery Bd is an open-source project intended to make op amp learning as accessible and affordable as possible. You can download the documentation and KiCAD project files at <https://github.com/rick-ecircuit>

## 14.6 Experimenters Parts List

To explore op amps, you'll need a selection of parts to create the circuits.

Reference	Qty	Value
Resistors	3 each	100, 1k, 3.3k 10k, 20k, 33k, 39k, 47k 100k, 200k, 330k, 390k, 470k 1M, 4.7M
Capacitors	2 each	100pF, 1nF, 10nF, 100nF, 1uF
Semiconductors	2 each	BJT 2N3904 Diode 1N5711
LEDs	2 each	RED, GRN
Sensors	1 each	Thermistor 10k Photodiode
Jumpers	10 each	Use cut resistor leads

## 14.7 Feedback on eCircuit Center

- ✓ How is Op Amp Discovery helpful for you?
- ✓ What needs clarity?
- ✓ What circuits could be added?


Send your thoughts on the feedback form at eCircuit Center.

<https://ecircuitcenter.com/contact.htm>

**eCircuit Center** strives to provide informal, hands-on and fun experiences that lead to a deeper, more intuitive understanding of circuit design and analysis.

## 14.8 The Power of Play

- Key to analog success:  
*play, play, play with circuits!*

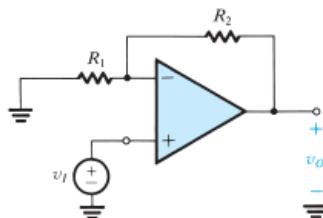

- Analog circuits appear more inviting (and less intimidating) when playing and tinkering.
- Learning and passion grow when you
  - Ask “what if” questions
  - Play with component values  
*Predict outcome!*
  - Small discoveries and learning fuel motivation and the joy of learning.