

Preliminary report on master project

Rikesh Chauhan

1 Motivation

We start with the technology development trend in microelectronics. The progress of different aspects of technology is discussed and compared with power/battery development. We end the chapter concluding the need for going cordless for supplying power for microelectronics.

1.1 Technology Trend

1.1.1 Size and weight : Lighter and tighter

Reduction in size and weight has been most dramatic that in course of some decades miniaturisation trend went from a room-sized fixed electronic into a wearable device. Most important milestone contributing for lighter and tighter devices is development of transistor in 1950s replacing large and bulky vacuum tubes, and development first IC in 1965 making it possible to integrate hundreds of transistors on a single silicon substrate of some square mm. Since then as stated by Moore's law, IC size is continuously shrinking. A typical modern IC now consists of billions of transistors of some tens of nm feature size.

1.1.2 Operation: Multi-functional and fast

On the contrary to shrinking device size, integrated functionality and device speed is increasing proportionally. The introduction of SoCs created of new dawn of multi-functionality IC by integrating many electronic components and/or systems on a single silicon substrate. Similarly multi-core CPU with parallel programmed instruction significantly increased work payload as stated by Amdahl's law. Similarly recent developments in IoT has introduced whole new dimension on

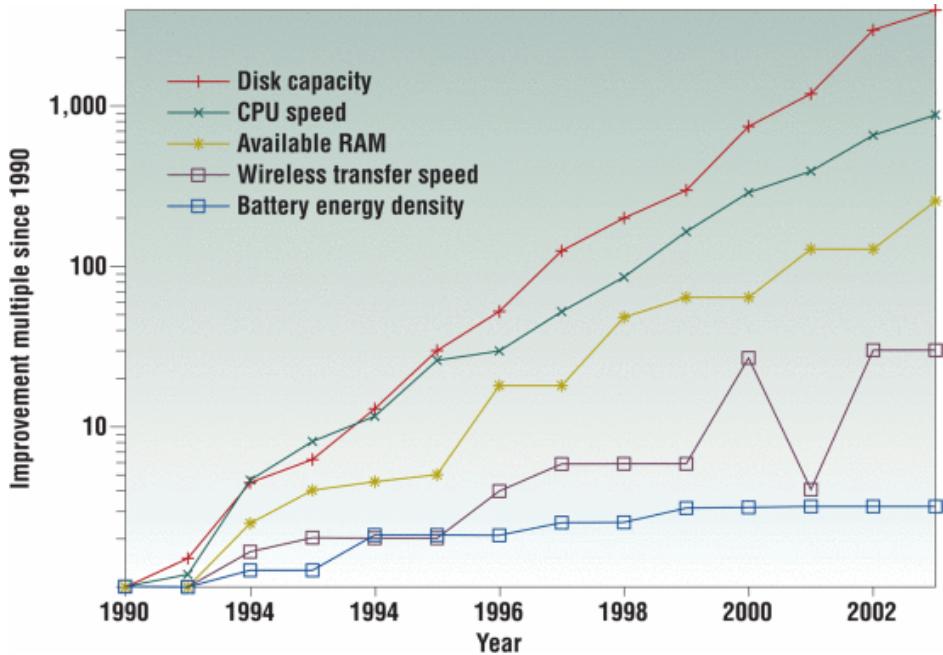


Figure 1: Mobile performance development trend [1]

multi-functionality by connecting many devices to a same local network or the internet[2].

1.1.3 Power consumption: Low-power

In terms of power consumption, though power density has increased due to increased transistor density and speed, power consumption per transistor and energy per operation, EOP, has significantly reduced. It is due to gradual shrinking in feature size and decrease in supply voltage. Similarly there has been a lot progress in LP design introducing new power optimal design techniques both at logic/circuit level and architecture level. Lately run time power optimisation technique by tracing realtime work load like dynamic voltage scaling and switching between different operation modes (sleep, nap, doze and active) have been popularly used to reduce power consumption[3].

1.1.4 Power supply: Cut the cord

In spite of dramatic technological advancement, battery technology has not evolved equally as good, see figure 1. It is not like there has been no progress in battery technology at all. There has been a lot improvements like increased volumetric energy density thereby reducing size, increased gravimetric energy density thereby reducing weight, reduced self discharge thereby increasing life time and increased charged cycle thereby increasing reuse.[CITE]. Today Li-ion has better choice for powering devices because of it better combined above mentioned characteristics and hence used excessively in portable and wearable devices.

But use of battery in today's portable and wearable devices is constraining the overall development of devices [CITE]. Batteries contribute significant proportion of total weight and size of the device. They supply limited power which means require regular recharge and in the long run need replacement. During recharge either device or battery has to be physically connected to power outlet.

A power source technology with high power density which perpetually and wirelessly power devices could eliminate all the above problems and challenges mentioned above. But how far have we gone to achieve this? In the next chapter, we will discuss the techniques of energy harvesting and wireless power transfer studied and implemented so far. Bluetooth Low Energy, BLE is taken as a reference device to drive and a power harvesting circuit is designed and implemented for BLE.

1.2 Thesis outline

all chapter summary

1.3 Energy Harvesting

In this chapter, we discuss the options to eliminate or minimise the bottlenecks of battery used in portable and wearable devices. We start with energy harvesting techniques and then wireless power transfer techniques.

There has been success in harvesting low power from ambient sources and a lot of effort and resources is being used for harvesting high power. As discussed earlier the technological advancement has given us low power electronics. These LP devices can now be powered solely by harvested energy, eventually making battery-less wirelessly powered electronic device a reality.

Energy harvesting system generally constitutes of energy source, transducer and power conditioning unit as shown in figure 2. Energy source can either be artificial like human walking or natural like sunlight. Transducer are devices which converts the energy from source which may be to electrical energy. And power conditioning unit process the harvested energy so that it can be used either to directly power a load or to store the energy.

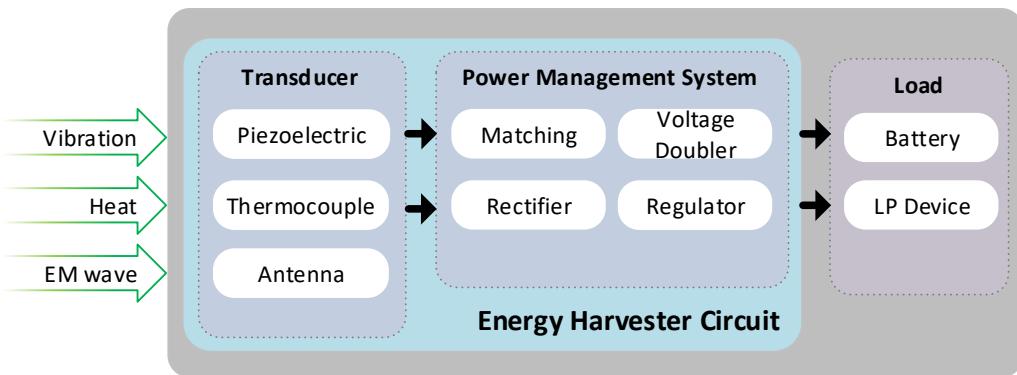


Figure 2: Functional block diagram of energy harvesting system

Depending upon the type of energy harvested from the surrounding environment, energy harvesting devices can be broadly classified into kinetic, electromagnetic and thermal energy sources[4]. These are briefly discussed below.

1.3.1 Kinetic energy harvesting

In kinetic energy harvesting, kinetic energy due to mechanical deformation of transducer is converted into electrical energy. Piezoelectrical material is good example of transducer for kinetic energy harvesting. Piezoelectrical materials are those which exhibit piezoelectric effect: when subjected to mechanical strain, it generates electrical charge proportional to applied strain. Strain is applied with either compression, slap or bending of the material.

1.3.2 Harvesting from Radiation

Electromagnetic energy harvesting is extraction of useful energy from ambient light or RF radiation. Solar energy harvesting is the most popular and widely successful EM energy harvesting for large scale energy generation. It makes use of semiconductor device called solar cells as transducer. These transducer converts incident light energy to electric energy due to photoelectric effect: when light is incident on semiconductor, electrons are emitted from the surface. Its application ranges from LP wrist watch to grid of photovoltaic system. The other popular example is harvesting from RF radiation, which are available almost everywhere in modern cities, to power RFIDs. In this technique, antenna or rectenna are used as transducer. However harvesting from RF radiation has been limited to very low power only.

1.3.3 Thermal energy harvesting

Similarly in thermal energy harvesting, thermal energy from any source in the environment is converted to useful electric energy. Thermopile is an example of thermal energy harvesting using thermocouples in series as transducer. Thermocouple is a electric device with two different conductors forming junctions. A thermocouple generates voltage proportional to temperature between junctions, known as Seebek effect. Connecting thermocouples in series increased the harvested voltage as in thermopile.

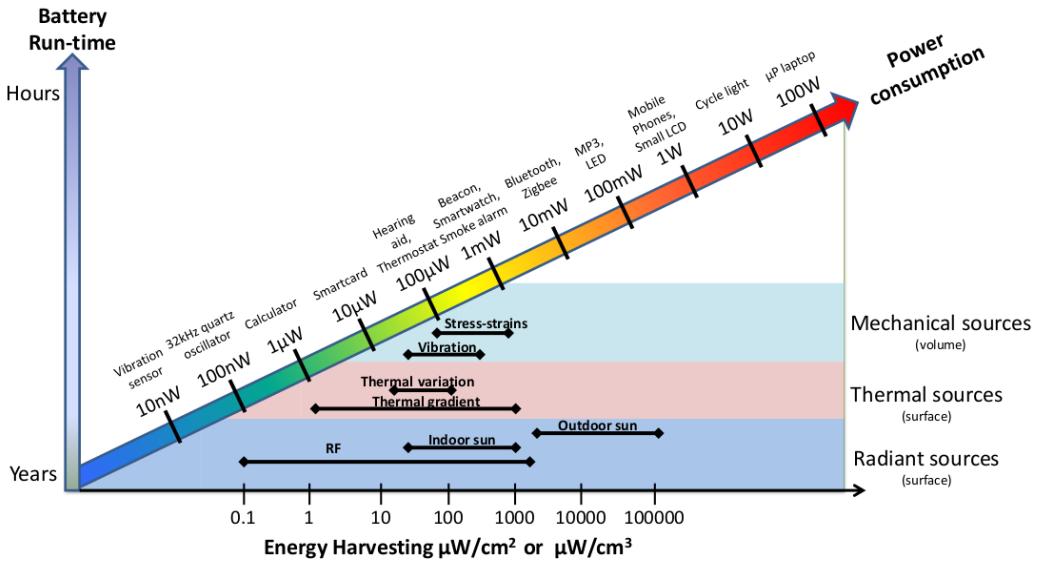


Figure 3: Power density of energy sources and consumption of electronic devices [5]

Figure 3 shows power density of different energy sources and power consumption of electronic devices. It is seem that the above discussed energy sources have a low power density which means very low power and some low power micro-electronic devices only have the privilege of integrating energy harvesting techniques so far. For most of the devices, the harvested power is not high enough to drive them yet. This means perpetual high density energy source is yet not realisable for most of the devices. But what about wireless transfer of already available power? We will discuss it ahead.

1.4 Wireless Power Transfer

As discussed earlier since the evolution of battery technology is not at par with rest of the development in microelectronic devices and energy harvesting techniques from natural sources has not yet evolved to high power density, wireless power transfer is by far best option to minimise challenges in battery powered devices.

Wireless power transfer is technique of cordlessly transferring electric energy across a air gap either to drive a load or to charge a battery. It eliminates the need of phycical power cables to recharge battery. and in the best case completely remove the battery. Wireless power trans-

fer methods implemented today can be broadly classified into radiative and non-radiative power transfer on the basis of transfer distance which can be further sub-classified on the basis of power transfer principle [6] as discussed below.

1.4.1 Non-radiative wireless power transfer

Non radiative method of wireless power transfer based on magnetic field coupling between two coils within the distance of coil dimension. Since magnetic field diminishes rapidly after distance greater than radius of coil, assuming that distance is less than near field and far field boundary, $\lambda/2\pi$ [7, pp. 63], better coupling and hence power transfer can happen only within this short distance, and thus it is also called near field power transfer. Near field also means that radiative EM wave is not yet fully created and hence the name non-radiative WPT. As energy transfer in magnetic field is non radiative, it is safe even to transfer higher power as there is no RF exposure. This is one of the main reason of its widespread application today.

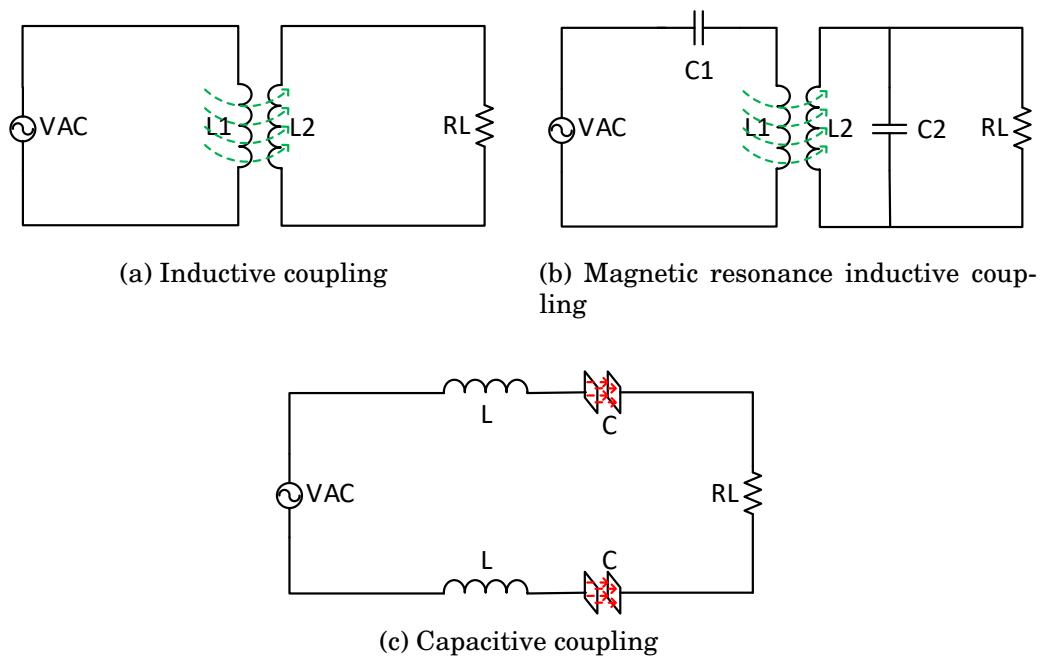


Figure 4: Near-field coupling models

Inductive power transfer, IPT

IPT is based on electromagnetic induction between two coils. Electric energy is transferred by coupling of magnetic field from the primary to secondary coil. As stated by Faraday law of induction, alternating current flowing in primary coil generates varying magnetic field which is when coupled with secondary coil includes voltage/current across the secondary coil.

In such conventional inductive coupling, larger air gap and difficulty in perfect alignment between the coils contribute to weak coupling, which directly translates into poor power transfer efficiency. This is why it is mostly used in LP devices and for short range in tens of mm transfer like RFIDs.

Magnetic resonance power transfer

The principle of magnetic resonance power transfer is same as IPT but with strong coupling between the coils. Instead of simple coil as in IPT, resonance is created at both primary and secondary coil at the same operating frequency. Such resonant IPT is often concisely called as Witricity, for wireless electricity and is less affected by coil misalignment and physical distance compared to conventional IPT [8]. A very key application of resonant IPT is that it can be used to simultaneously transfer/charge multiple power receivers from a single large source coil [9].

Because of its strong coupling between the coils, it can effectively transfer power for mid range in tens of cm. It is mostly used in wireless charging of medical implants and consumer electronics.

Capacitive power transfer, CPT

In capacitive power transfer, power transfer is done through capacitive coupling, use of E-field, between sending and receiving plates as transferring interface. For low power transfer, it is seen effective over IPT because of lower cost, smaller size and no shielding for EMI. However for higher power transfer is limited due to requirement of larger plate area and very close coupling [10].

1.4.2 Radiative wireless power transfer

Radiative power transfer used RF EM wave as a medium to deliver power. In contrary to near field, power is transferred through E-field of EM wave. The E-field can only develop after $\lambda/2\pi$ distance, at far field region, from the source [7, pp. 112], and energy can only be harvested in this far field region, it is called far field power transfer. However as EM wave is radiative and high power RF exposure has safety concerns on human.

Non-directive and directive radiative WPT

Radiative power transfer can be divided into directive and non-directive radiative power transfer. Non-directive power transfer is same as discussed in EM energy harvesting, where energy is harvested from isotropically radiated RF wave in the surrounding. Whereas in directive power transfer, dedicated transmitter antenna/antenna array is used to transmit EM wave to a particular direction of receiver antenna location. This point to point far field transfer technique is also called energy beam-forming and has better transfer efficiency than non-directive method.

Health concerns as governed by FCC and IEEE safety regulation policy on human exposure has limited its use to low power harvesting over longer distance using RF wave. But, as RF wave is also information carrier wave in wireless communication, its capacity to transmit both data and power simultaneously is expected to introduce new application in wireless communication field [6].

1.5 WPT Applications

It is seen today that IPT and magnetic resonance IPT are mostly used because of easier implementation, lower cost, wide range power transfer capability. For high power transfer in order of kilowatt, IPT is mostly used in the field of industrial automation like automated material handling and industrial micro-robots and automotive like electric vehicle charging. Similarly both IPT and magnetic resonance IPT are used for transferring power medium power up-to tens of watt. Their typical uses have been in charging battery in medical equipments and consumers electronics. In case of microelectronics devices like medical implants, body sensors, pacemaker etc, magnetic resonance IPT is

mostly used both to charge a battery or directly drive the device.



(a) Qualcomm EV charger



(b) Qualcomm mobile phone charger with foreign object detection feature



(c) IDT concept of wireless charging of bionic devices

Figure 5: Commercial application of wireless power transfer

In context of radiative power transfer, non-directive technique is mostly used in low power sensors and implants. Because of the low power requirement, mostly omnipresent RF signals are used to harvest energy. This technique has been used in both perpetually supplying power like in body sensor which continuously monitor some activity or sporadically supplying power like in RFID and body implants which work only when required. [CITE] reports future application of microwave power transfer can be in SPS (Solar Power Satellite) system and SHARP (Stationary High Altitude Relay Platform). SPS uses

satellite for harvesting solar energy in space and transfer that power to earth. Similarly SHARP is stationary charging station for unmanned aerial vehicles in stratosphere region by beaming power from earth.

1.6 Charger Standards

When wireless charging was introduced into consumer daily appliances, it was quickly realised the need of standard design protocols to maintain uniformity and avoid confusion for the manufacturers. Here are some mostly used standards in the market. All commercial standards discussed below use both IPT and resonant IPT techniques for charging, and have two elements: transmitter for transferring power and receiver device usually integrated into mobile, handheld or wearable devices. Both the transmitter and the receiver use the same control and management protocol in order to detect compatible electronic devices, exchange charging state information and control charging process.

1.6.1 Qi

Qi standard was introduced by Wireless Power Consortium in August 2008. It has standardised two categories of chargers: low power charger for mobile and music players and medium power charger. The power transfer was based on IPT and now is operating with magnetic resonance IPT too. Qi standard allow transmitter/charger to be either single fixed coil, single moving coil or array of coils. The transmitter coil type determines the positioning of the receiver, either guided or free. Qi charger also have foreign object detection feature [11]. Qi uses the same frequency for communication and power transfer, 80-300 KHz [12].



Figure 6: Qi

1.6.2 A4WP

A4WP is acronym for Alliance for Wireless Power which has introduced another independent wireless charging protocol. It uses

magnetic resonance IPT technique for power transfer. The main differences between A4WP from Qi are multiple device charging from a single charger, also called power transmitting unit, PTU and longer charging range. Similarly there are different category of PTUs from 1 to 5, most of them still on roadmap and supports wireless charging from low power to high power. A4WP used different frequency band for communication and power transfer, which are 2.4 GHz and 6.78 MHz respectively [13].

1.6.3 AirFuel Alliance

AirFuel Alliance is newly created wireless charging standard by merging Alliance for Wireless Power, A4WP and Power Matters Alliance, PMA in 2015 with backing of major device manufacturers [14]. Like A4WP, PMA was IPT based independent wireless charging standard. AirFuel Alliance is believed to fight the market dominance of Qi standard. AirFuel is expecting to expand charging standard beyond consumer electronics to industrial, medical and military applications [15].



Figure 7: AirFuel

1.7 This project

As mentioned in the last chapter, a typical microelectronics system, BLE, used extensively in all portable and wearable is taken as a reference load for this project. It requires 10 mA current from a supply of 1.8 V to drive BLE system. The purpose of this work will be to make a wireless power transfer system for cordlessly driving BLE or charging BLE battery. The target specification for this work is listed in table 1.

Figure 8 is the functional block diagram of proposed implementation of wireless power transfer in this work. From the discussion in wireless power transfer section, it is seen that IPT is the best option for being mature, easy and safe implementation. Since tuning the IPT transfer link at the operating frequency increases the transfer efficiency, magnetic resonance link is designed for this work. The antennas are designed with the specifications provided by NORDIC. The power

Table 1: Target specifications

Technology	TSMC 90nm 9M-1P
Chip area	TBA mm ²
Input AC voltage	2.5 V _p
Operating frequency	13.56 MHz
Maximum load	10 mA
Output DC voltage	1.8 V

management system includes rectifier, LDO and reference and bias circuit. The biasing and reference circuit is designed solely for learning the design technique without much effort on the accuracy of the generated biases and references. So externally supplied bias and reference will be the secondary option.

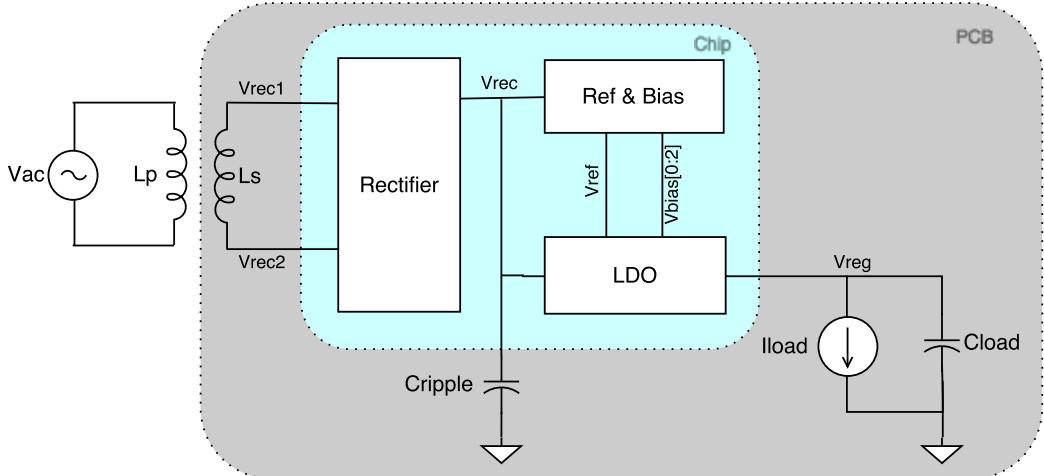


Figure 8: Block diagram of complete design

The chapter ahead discusses the design, analysis and implementation of the functional blocks in figure 8 starting with rectifier. The physics behind each block is less discussed, however the design choices and reasoning of choices will be clearly stated.

2 Rectifier

The most basic rectifier is conventional full wave bridge structure where the diodes are replaced by the diode connected MOS devices in CMOS technology. This topology though being simple to implement, has a major drawback. It requires at least twice the V_{tn} of a MOS device as there are two diode connected MOSEs in the conduction path for each cycle of the input signal.


Gate cross coupled and fully gate cross coupled topologies are improvements over conventional full wave rectifier. In gate cross coupled rectifier, two diodes of conventional rectifier is replaced by two gate cross coupled MOSEs working as switches where the voltage drop for every cycle is reduced to one threshold voltage. Similarly, in the fully gate cross coupled rectifier, all diodes are replaced by switches and hence the voltage drop is further reduced to twice the conduction drop only for every cycle. Even though this topology has least voltage drop, it suffers from the problem of reverse charge leakage because when the input ac amplitude is less than the output rectified voltage and the conducting pass devices are on simultaneously, current flows backward from output to input.

All the above discussed topology suffer from either large voltage drop or large power loss because of which their use are limited in low power and low voltage devices. The popular techniques for higher efficiency are using gate cross coupled rectifier along with passive or active circuitry for controlling other two pass devices. In passive rectifier, additional circuitry including bootstrap capacitor are used to reduce or eliminate threshold voltage one of which is discussed in this paper [16]. However, use of on-chip bootstrap capacitors limits its use where chip area and speed is of importance. On the other hand, in active rectifier, active circuitry is used to control pass devices. The use of active circuitry increase both voltage conversion efficiency (VCE) and power conversion efficiency (PCE) because the pass devices are made to conduct in linear region and hence less conduction drop, and reverse current flow can be completely eliminated and hence less power loss. However active rectifier is not problem free either. The major issue is starting of the active circuit as there is no regulated supply at the start up.

2.1 Design

In this project, active rectifier is chosen, primarily for better VCE and PCE and secondarily to avoid the use large on chip capacitors. [17] and [18] have discussed same active rectifier topology with a slight difference in active circuitry. [17] has implemented comparator with compensating the delay of comparator's output falling whereas [18] has implemented comparator with compensating both the falling and the rising delay of comparator's output in expense of added circuit complexity and power consumption. [17] has been used here for its simple design.

Figure 9a, 9b and 10 is the CMOS implementation of conventional full wave bridge rectifier, gate cross coupled rectifier and proposed active rectifier in [17]. The problem with 9a and 9b has already been briefly mentioned above. Though 9b is significantly improvement over 9a , it is still not a favourable topology with respect to the design technology chosen. In the gate cross couple rectifier of 9b, the cross coupled pMOSes act as switches, so the only voltage drop across them is conduction drop due to channel resistance. However the other two nMOSes are diode connected, so they have at least V_{tn} drop across them which means $V_{ac} \geq V_{dc} + V_{tn}$ for conduction.

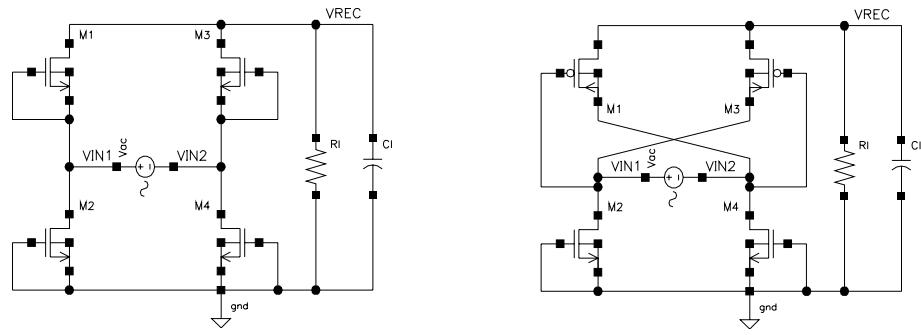

(a) Conventional full wave bridge rectifier (b) Gate cross coupled full wave rectifier

Figure 9: Rectifier topologies: conventional and gate cross coupled

The proposed active circuit in 10 is improvement over 9b which eliminates V_{tn} drop required for conduction by replacing diode connected nMOS with devices controlled by active circuit as shown in figure 11. The active circuit is a four input comparator that turns on nMOSes

fast when $V_{ac} > V_{dc}$ and turns off fast to avoid flow of current.

For the illustration of operation of comparator, consider the case when $V_{in1} > V_{in2}$ i.e. $V_{in1} > 0$ and $V_{in2} < 0$. During this half cycle, comparator $D1$ output is low and turns off $Mn2$ and also, $Mp1$ is reversed biased and hence there is no path to flow current along $Mn2$ and $Mp1$. For simplicity, assume $V_{ac} = V_{in1} - V_{in2}$. When V_{ac} reaches V_{tp} , $Mp3$ turns on which shorts V_{in1} to V_{rec} . When $V_{ac} > V_{rec}$, $D2$ output goes high, which turns on $Mn4$ and starts the conduction path for the first half cycle and starts charging C_L . When V_{ac} reaches maximum, it starts to decrease and at $V_{ac} < V_{rec}$, conduction stops as output of $D2$ is low and $Mn4$ is off. As V_{ac} further decreases to below V_{tp} , $Mp3$ is off too. This way rectifier in 10 conducts during positive half cycle eliminating the V_{tn} drop seen in 9b. Now the only drop is the conduction drop due to channel resistance of two pass devices along the conduction path. This drop is much less because during conduction both the device are operating in the linear region with small resistance. The operation is similar for $V_{in2} > V_{in1}$ where $Mn4$ and $Mp3$ are off and $Mn2$ and $Mp1$ conduct to charge C_L .

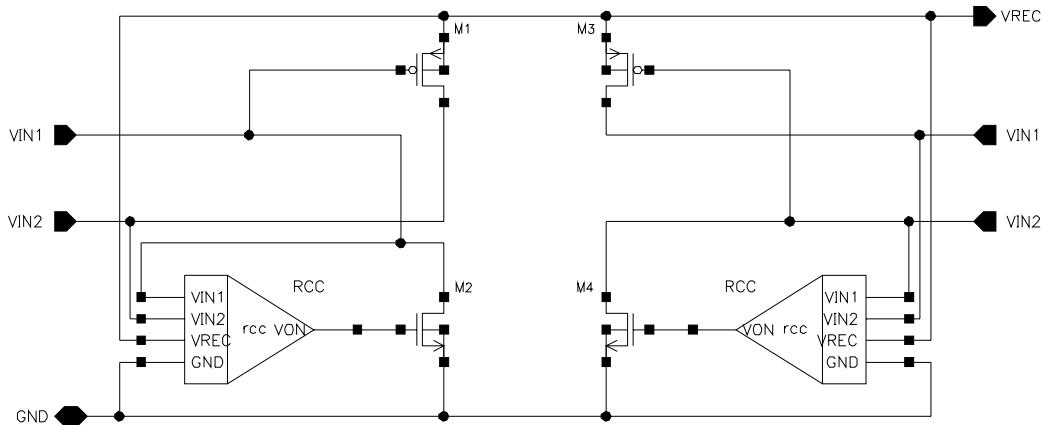


Figure 10: Gate cross coupled full wave active rectifier]

Figure 11 is the implementation of four input comparator $D2$ used in 10 as proposed in [17]. It is designed to self power and bias because no steady state supply is available at start up. $M1$, $M2$ and $M7$ monitors voltage across $Mn4$ i.e $V_{in2} - V_{gnd}$ and $M3$, $M4$ and $M8$ monitors voltage across $Mp3$ ie $V_{in1} - V_{rec}$. So when $V_{in1} - V_{rec} > V_{in2} - V_{gnd}$ which means $V_{ac} > V_{rec}$, output of $D2$ is high and turns on $Mn4$ in-

stantly. But when $V_{ac} < V_{rec}$, the output of comparator is delayed to fall which causes M_{n4} to conduct in reverse direction leading to significant reduction in power delivered to load. M_9 is introduced in order to overcome this problem which adds offset currents to increase V_{an} and V_{pn} faster, causing the output to decrease faster and turns off M_{n4} before $V_{ac} < V_{rec}$. This reverse current control technique compensates the comparator delay and increases the power efficiency of the rectifier.

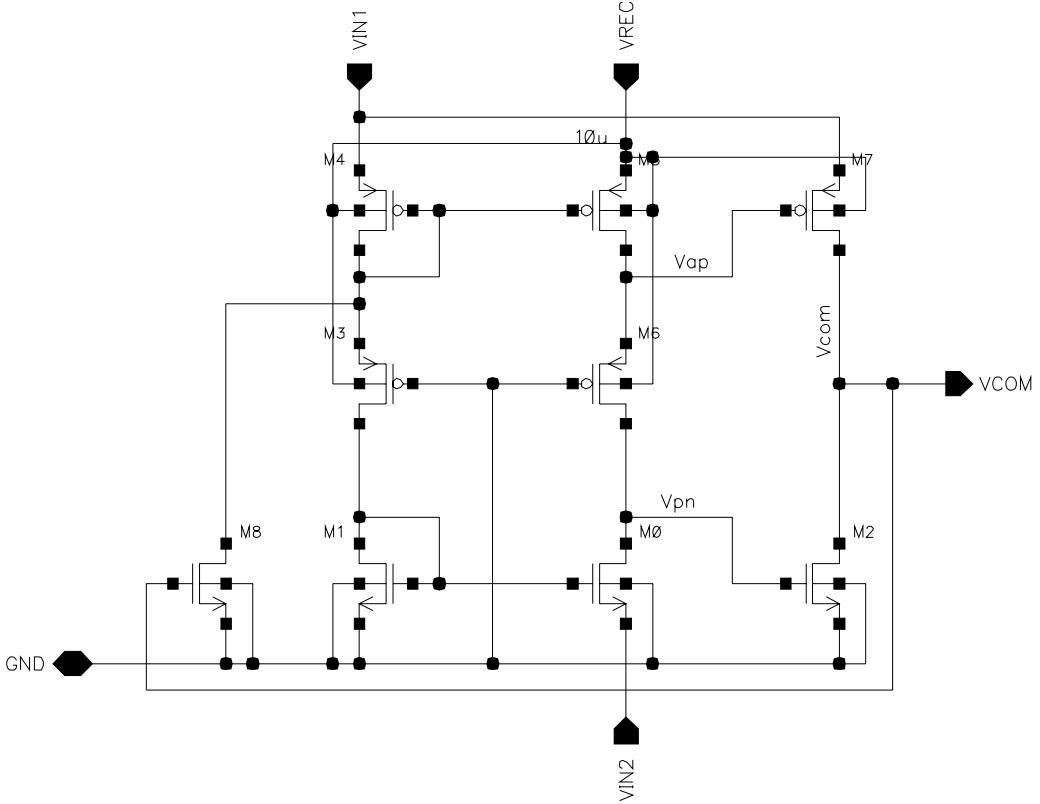


Figure 11: Comparator circuit, RCC

The design parameters for the rectifier is listed in table 2. The dimensions of the pass devices are first hand calculated by using square law current equation and devices parameters values given in the technology documents, and later optimised with simulation tool in order to make the rectifier to deliver the required current. Since nMOS does not have to have same device size as pMOS to deliver same current, optimal size ratio equation from [19] is used to find nMOS pass devices sizes. Thought maximum load for this work is 10 mA, It is always simulated with 1 mA extra load. This extra current is to account for the

fact that RCC is self powered and LDO which will follow this rectifier will be powered by V_{rec} . Similarly, the value of ripple rejection capacitor is chosen 100nF. This size of filter capacitor is calculated from capacitor current-voltage relationship with the assumption of keeping peak to peak ripple voltage below 5 mV to deliver 11 mA current.

Table 2: Rectifier design parameters

Wn/Ln, Wp/Lp	720um/280nm, 1.2mm/280nm
Rectifier area	TBA mm ²
Operating frequency	13.56 MHz
Input ac magnitude	2.5 Vp
Load current	11 mA
Ripple rejection capacitor	100 nF

2.2 Transient performance

Figure 12 is the test bench setup for simulation of the rectifier. Figure 13 show the simulation results showing voltages at the input ac and output rectified DC voltages and current through rectifying MOSes. These waveforms clearly follows the working principle discussed above. Two important observations can be made from plots. First, the rectified output V_{rec} is 2.2 V for V_{pp} ac input of 2.5 V for driving which means the voltage loss has been significantly reduced and the loss of around 300 mV yields to the conduction loss due the channel resistance. Secondly, the reverse current from output to input has been effectively eliminated as there is only positive current flowing to the load when all conducting devices are on.

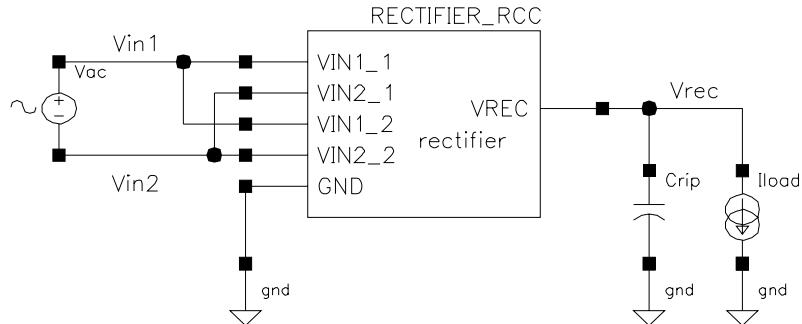


Figure 12: Testbench for rectifier

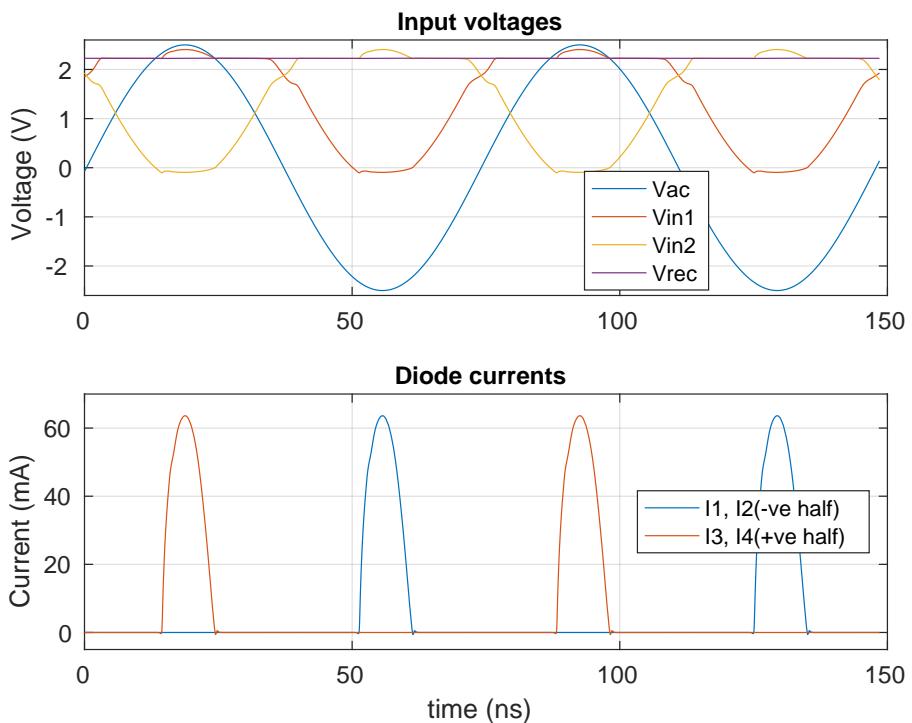


Figure 13: Voltage and current waveforms of the rectifier

Figure 14 presents both pre and post layout results of input voltages, Vin_1 and Vin_2 and output voltage, V_{rec} , for one cycle of ac input. The closer view of rectified output is shown in figure 15. The voltage drop of about 60 mV in layout result is accounted for the voltage drop due to the resistance of high current conduction path.

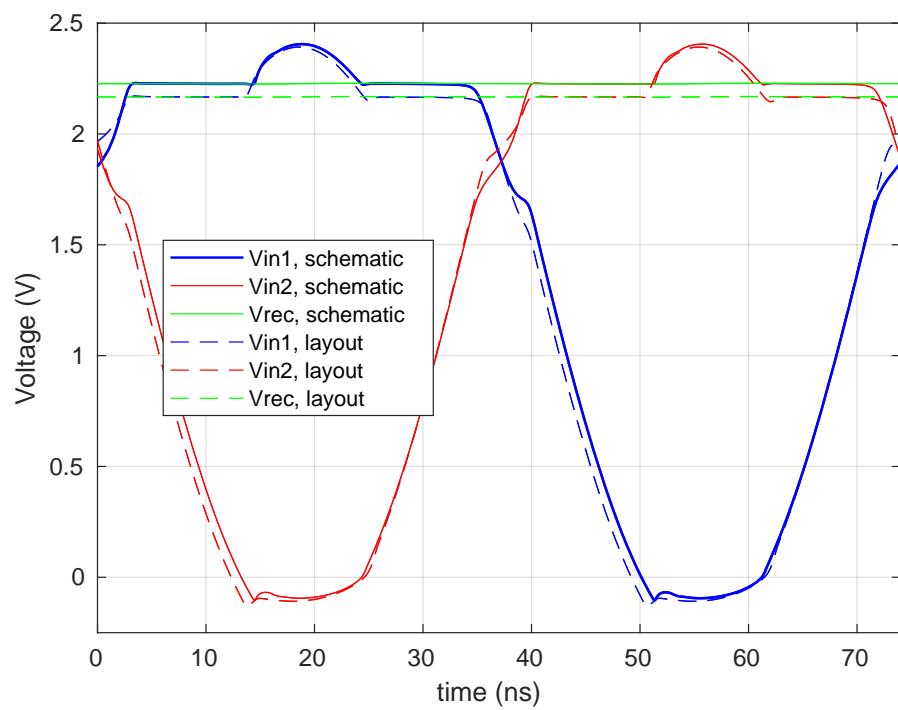


Figure 14: Voltages waveform for pre and post layout

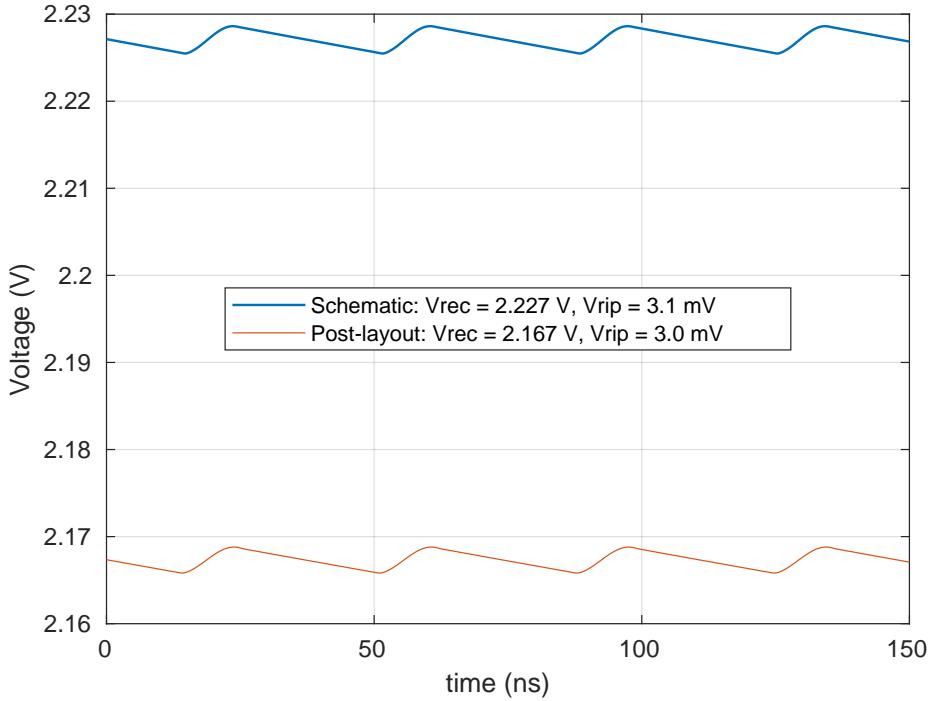


Figure 15: Rectified DC output for pre and post layout

2.3 DC performance

Similarly, figure 16 shows PCE, ratio of powered delivered to load to average power from the source and VCE, ratio of rectified DC, V_{rec} to peak ac input, $|V_{ac}|$ with respect to magnitude peak ac input signal. $|V_{ac}|$ is gradually increased in peak magnitude in step of 50 mV and VCE and PCE is calculated for every step. The plot shows both PCE and VCE are very less for input ac amplitude less than 1.8 V. It can be explained by the fact that required bias current and gate drive voltage for RCC circuit are not achieved for smaller input. [INCLUDE POST LAYOUT RESULT TOO]

Table 3 comparatively summarises performance for pre and post layout result of the design. The layout design is attached in appendix. The layout is made symmetrical with four inputs, as seen in test bench figure 12, instead of two. This is done to make the current conducting path equal which result in equal drop in voltage when it reaches the rectifying MOSEs. Similarly the paths from the pad to the recti-

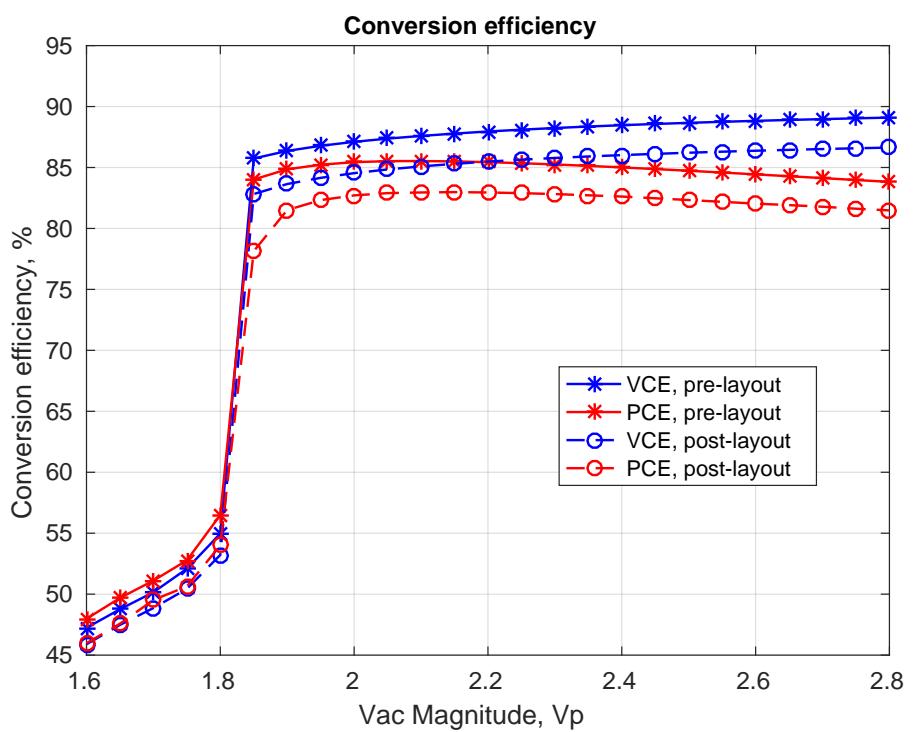


Figure 16: Voltage and power conversion efficiency

fier inputs are mask blocked for random metal fill to avoid inter layer coupling [WHY??]. The high current conduction routes are designed with wide parallel path of many higher level metal layers for reducing resistance in conduction path.

Table 3: Rectifier performance summary

	Schematic	Post-layout
Rectified DC	2.23 V	2.17 V
Ripple Vpp	3.1 mV	3 mV
Peak diode current	63.7 mA	-
PCE	84.5 %	-
VCE	88.6 %	86.2 %

3 LDO

Voltage regulator follows the rectifier designed above in order to regulated the rectified voltage to 1.8 V and deliver maximum load current of 10 mA. Since the output from the active rectifier is 2.2 V and the required regulated voltage is 1.8 V, charge pump or SMPS of boost type is irrelevant here. Buck SMPS could be an option for voltage regulation but LDO is preferred for it better performance in terms of noise and faster settling of regulated voltage. [20].

Figure 17 shows a circuit of typical LDO with pMOS as pass element. As shown in the figure, the components includes an error amplifier (EA), a pass device (M_{pass}), a feedback circuit (R_1 and R_2) and load (C_{out} and I_{load}). A more general and complete LDO circuit also includes circuitry for generation of reference voltage and bias current/voltage. In this project it will be discussed separately later. The working principle of LDO is that the error amplifier compares the scaled down regulated voltage, V_{div} with V_{ref} and regulates the internal resistance of the pass transistor such that the error, $V_{ref} - V_{div}$ is least or zero ideally.

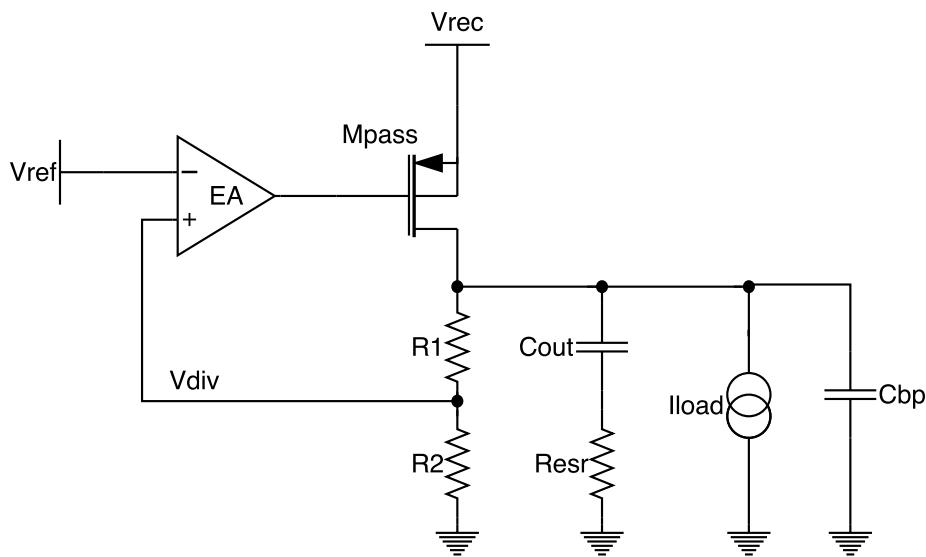


Figure 17: Generic LDO with pMOS pass device

[21] and [22] are two examples of CMOS implementation of LDO. [21] has proposed bulk modulation technique for improving load regulation and stability of capacitor-less LDO. Similarly [22] has proposed

techniques for increasing current efficiency of LDO especially at no or low load condition. Though the techniques discussed in these designs have not been used, they have given good insight into different design parameters of LDO.

3.1 Design

Figure 18 shows the CMOS implementation of LDO in this project. The components in this design include a folded cascode differential amplifier as error amplifier, pMOS buffer, pMOS pass device and feedback network of resistors.

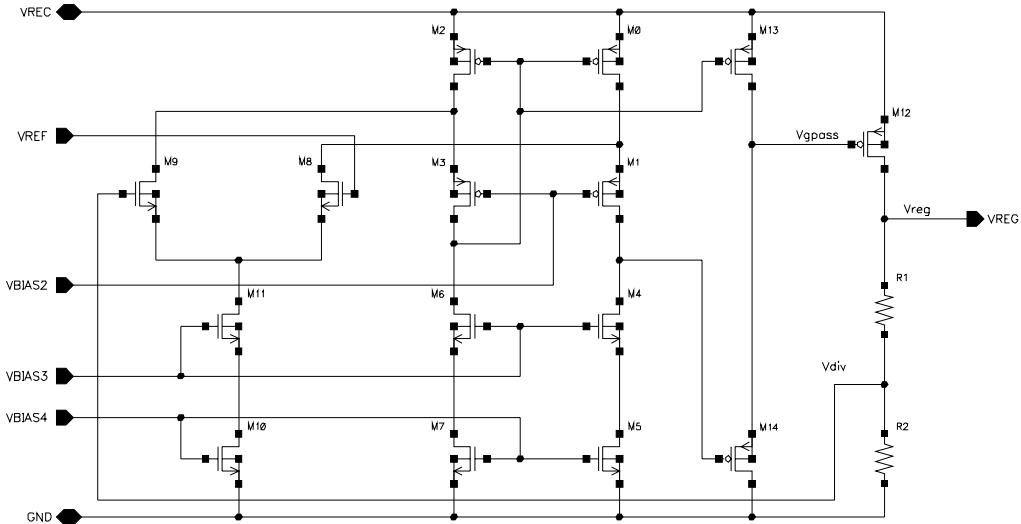


Figure 18: CMOS implemenation of LDO

As briefly mentioned above, the error amplifier amplifies the error i.e. difference in scaled regulated voltage, V_{div} and reference voltage, V_{ref} . It is known that an amplifier with higher open loop DC gain reduces the closed loop gain error and hence amplifier with higher gain is desired here which in turn increase the accuracy of regulated voltage, V_{reg} [21]. Typically error amplifier has gain $> 40dB$ which is not achieved with a single stage amplifier with this technology. Higher gain can be achieved by cascading multiple single stage but with increased difficulty in making the multistage amplifier stable. So for achieving higher DC gain and at the same time for stability conveni-

ence, folded cascode amplifier [23, pp. xx] is chosen.

Table 4: LDO design parameters

Pass device	pMOS
$(W_p/L_p)_{\text{pass}}$	540um/280nm
Input supply	>2.2 V
Error amplifier	folded cascode
Vbias2	1.1 V
Vbias3	0.88 V
Vbias4	0.68 V
Vref	1.17 V
C _{load}	> 5 μF
R _{esr}	> 0.5 Ω
Regulated output voltage	1.8 V
I _{load} max.	10 mA

The amplifier has a nMOS differential input stage, preferably for its higher mobility for achieving more gain. Reference voltage, V_{ref} will be bandgap voltage, 1.17 V, of silicon and thus ICMR for EA lies almost at half the supply voltage. This amplifier drives a pMOS buffer which is used to supply sufficient current to drive the large pass transistor. Moreover, pMOS as a buffer passes 1 better which means it can turn off the pass device completely and hence LDO regulates better at low load or no load condition. However for heavier load/larger load current, this pMOS buffer is not able to pull down the gate of pass device sufficiently lower. This is overcome by making the pass device large enough to feed the required maximum load current.

The pass device is a pMOS transistor in this design. It is chosen because it has several advantages over it's counterparts like nMOS and BJT devices in terms of dropout voltage, quiescent current, input voltage, thermal response and noise[24]. Prominently, there are two factors that give pMOS edge over other devices; dropout voltage and quiescent current, when it comes to application in low power and low voltage devices. nMOS as a pass device requires a positive drive voltage with respect to output to operate. On the other hand, pMOS is driven by a negative signal with respect to input which means pMOS is

preferable for a low input LDO. Similarly compared to BJTs, pMOS requires less headroom and less quiescent current to be driven[24], [25], which means low dropout and low power operation, typical requirement of today's micro devices' power supply.

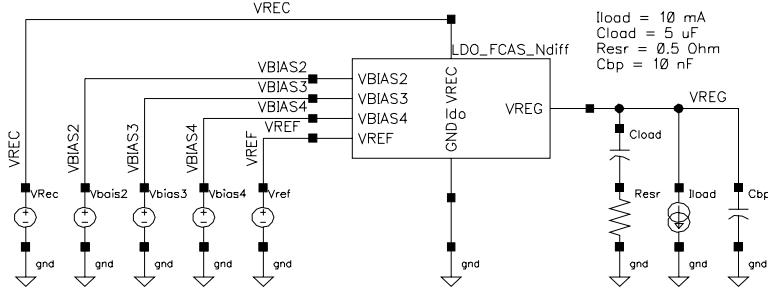


Figure 19: LDO testbench setup

However, pMOS as a pass device in LDO causes challenges in stability. As mentioned above, LDO utilises a high gain feedback loop in order to provide a regulated output voltages independent of load current and in any system with feedback loop, the locations of poles and zeros determine stability of the system. In case of the pMOS LDO, the pass device is configured in a common source configuration. LDO with big output cap has a dominant pole at the output, which is a low frequency pole. The second pole is located at the gate of pass device because as mentioned earlier pMOS pass device is large and has a big parasitic capacitance. This second pole may be located closer to the dominant pole, resulting in significant reduction in phase margin (PM). Consequently, this may lead to instability of the LDO with pMOS pass device. Various methods have been implemented for ensuring the stability of the pMOS LDO. In this project, a large external capacitor, C_{load} in figure 17, is used for stabilising the system at the cost of additional settling time. When an external capacitor is used for designing a stable LDO, the minimum value of capacitance, C_{load} and minimum value of its equivalent series resistance (ESR), R_{esr} should be specified[25]. C_{load} determines the dominant pole of the LDO and R_{esr} in series with C_{load} introduces a left half plane zero below unity gain frequency, UGF of LDO in order to cancel out the non-dominant pole below UGF, producing a stable LDO system.

3.2 Transient response

Figure 20 is the transient simulations of the LDO which illustrates generation of regulated output voltage, V_{reg} for both maximum load, 10 mA. For maximum load, it takes minimum 107 us to produce stable voltage. Since a large capacitor is used for stabilising LDO, it takes longer time. Compared to schematic result, it takes 9 us extra time which can be accounted additional parasitic capacitance of interconnects at the output of LDO.

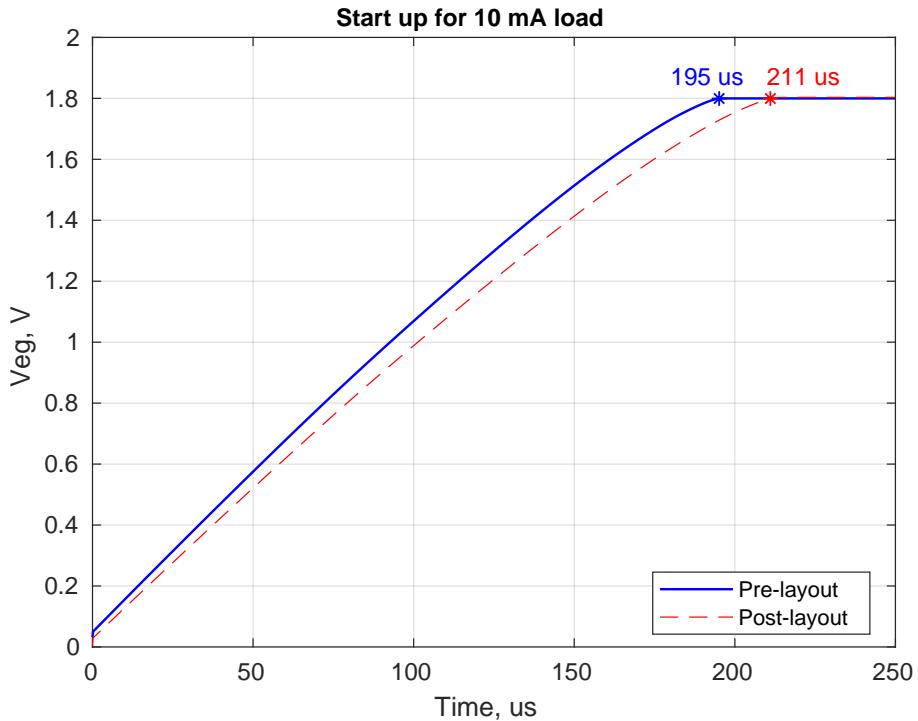


Figure 20: LDO transient simulation

Figure 21 and 22 show the transient response of LDO for line, V_{rec} and load, I_{load} variation. It gives information about how well and how fast regulated output settles for line and load variations. In figure 21 load is given as pulse varying from 10 uA to 10 mA with both falling and rising time of 1 ns keeping input supply constant to 2.2 V. Sudden increase in load causes the output voltage to drop. The error amplifier then takes some time adjusts the gate voltage of pass device to low to fully turn on the device. Likewise when the load suddenly drops to min-

imum, it causes the output voltage to increase. Again error amplifier adjust it back by increasing the gate voltage of pass device to turn it off. Similarly for line variation observation, input, V_{rec} is pulsed from 2 V to 2.5 V with 1 ns rising and falling time keeping load current constant to 10 mA. Sudden increase in input voltage causes output to increase and vice-versa. As in load variation case, similar recovery pattern is seen. In both case of load and line regulation, the out put voltage is maintained quickly, less than 0.15 us. Both results from schematic and post layout have same transition behaviour except post layout result offset by 3.7 mV as explained in DC response section below.

Line regulation, change in regulated output voltage due to maximum change in input voltage and load regulation, change in output voltage due to maximum change in load current are calculated from values shown in respective plots and are listed in table 5.

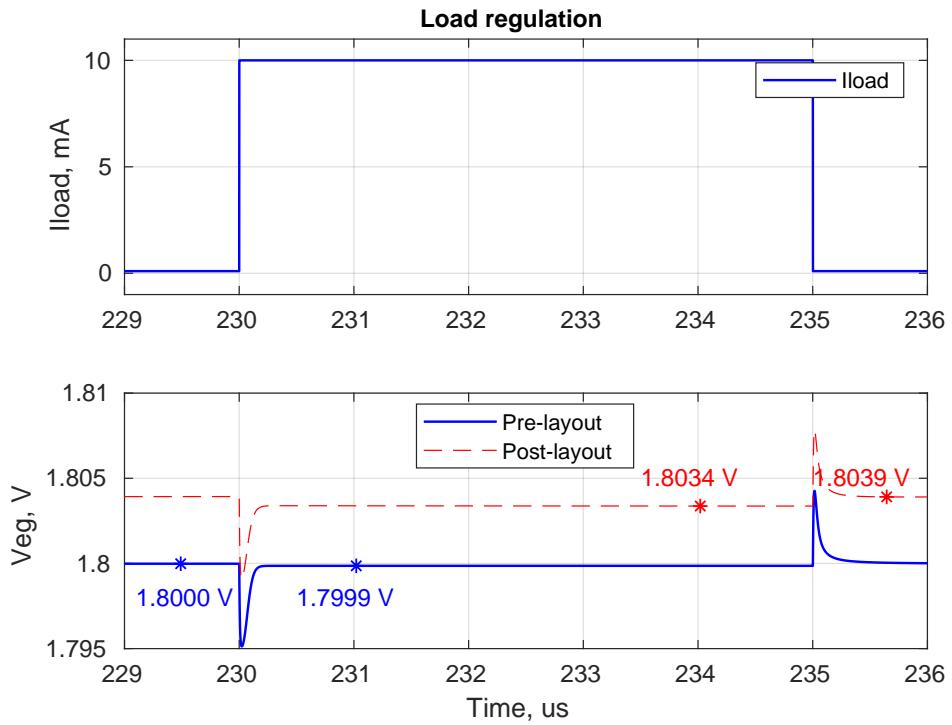


Figure 21: LDO step load regulation

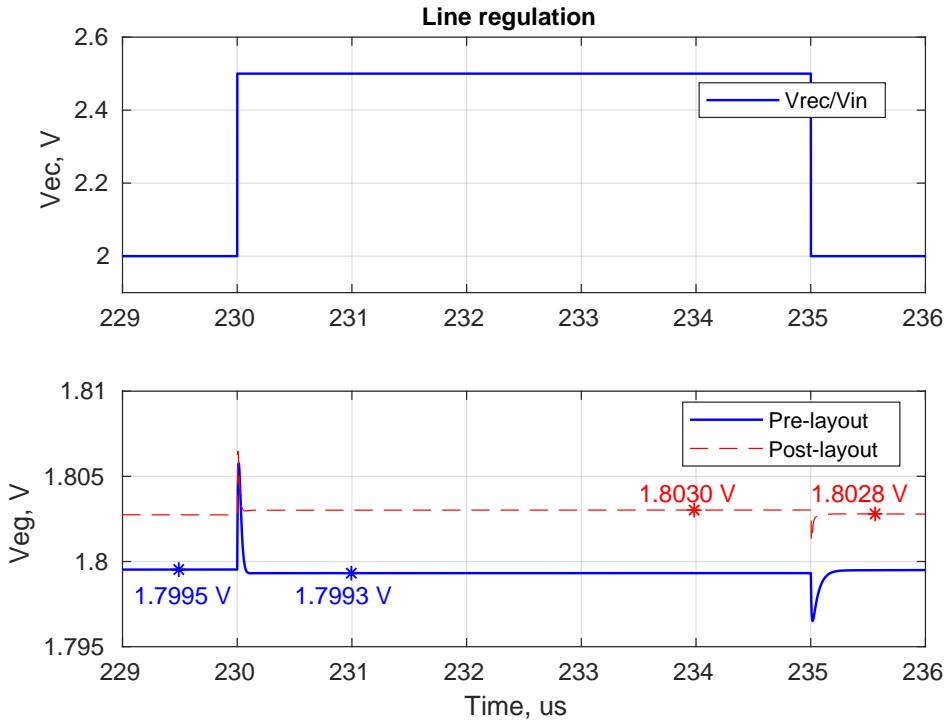


Figure 22: LDO step line regulation

3.3 DC response

Figure 23 and 24 show LDO response to input voltage, V_{rec} sweep and output load, I_{load} sweep. As seen in 23, the regulator is turned off for input below 1.85 V. Since the input is also the supply for the entire design, higher voltage is required for creating proper biasing of internal folded cascode error amplifier. However after turning on, it requires only 100 mV drop for proper regulation for maximum load and is even lesser for lighter load. This shows that minimum value of supply required for LDO to function properly is 1.95 V. In 24, it is seen that regulated output voltage for post layout simulation is 3.7 mV higher than for schematic. Since $V_{reg} = (1 + R_1/R_2) * V_{ref}$, the mismatch in the resistors has resulted in slightly higher ratio, consequently increasing the close loop gain.

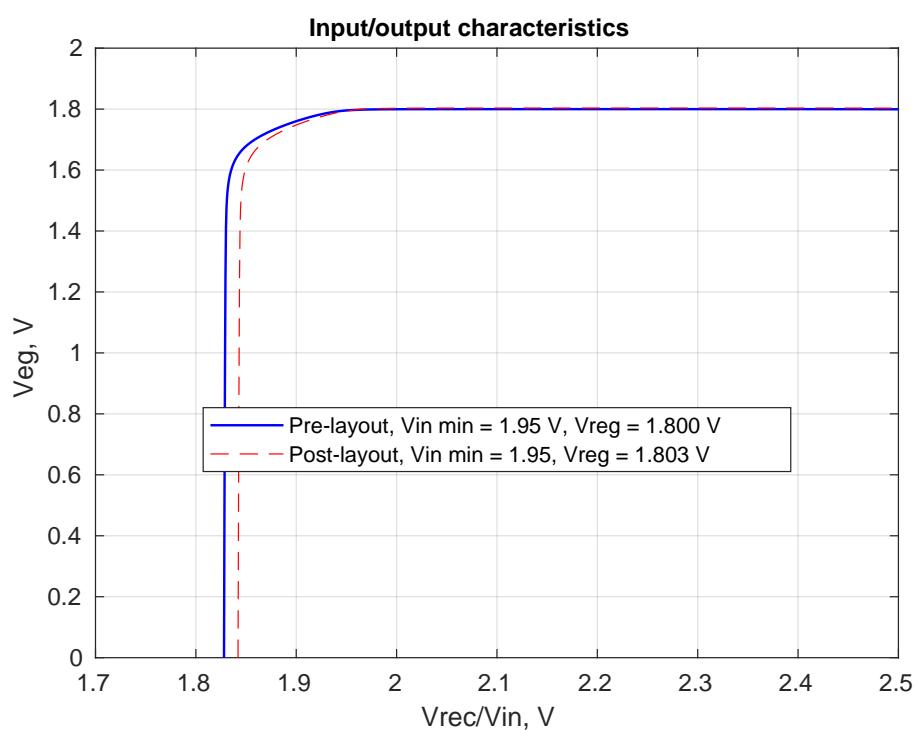


Figure 23: Regulated voltage with supply variation

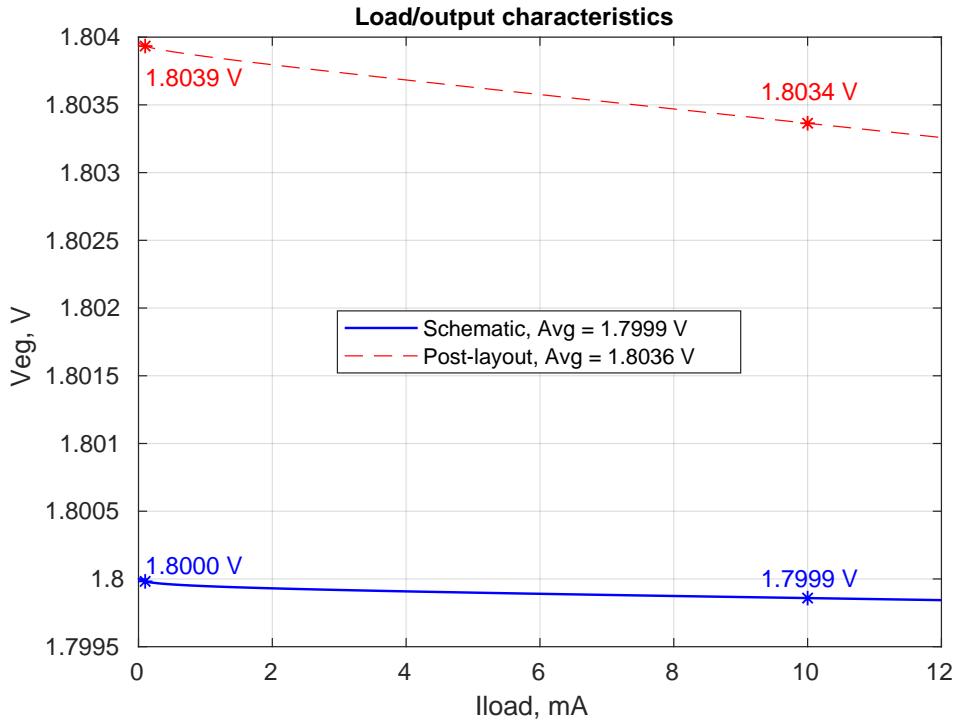


Figure 24: Regulated voltage with load variation

3.4 AC response

Figure 25 is open loop gain and phase margin of LDO without and with compensation. In the upper uncompensated bode plot, two poles below UGF are seen: the first one at 300 KHz due to output resistance of pass device and its parasitic capacitance, and the second one at 60 MHz due to buffer output resistance and gate capacitance of pass device. UGF is at 100 MHz. Due to these two poles both occurring below UGF, the PM fallen to -45°. For making the LDO stable, as discussed in the beginning, a capacitor, C_{load} , 2.5 uF with specific series equivalent resistance, R_{esr} , 0.8 Ω is used at the output. C_{load} and pass device output resistance creates the dominant pole at 1 KHz and R_{esr} and C_{load} creates a left half plane zero below UGF which cancels the non dominant pole. This eventually gives 75°PM and 30 dB GM.

Likewise figure 26 is the plot showing PSSR of this LDO. It can be seen that it has poor PSSR performance for frequency higher than 200 KHz. Low frequency noise like 50Hz supply ripple is effectively rejected.

ted. In this design 13.56 MHz ripple and its first harmonics is expected in the input of LDO because rectified output from rectifier operating at 13.56 MHz as input signal is used as supply and/or input for this LDO. Unfortunately, PSSR performance is worst around this frequencies. However the ripple rejection is still -36 dB at 13.56 MHz which is decent. As seen in figure 25, the open loop gain of LDO feedback circuit is 90 dB, which has contributed in achieving decent PSSR even at higher frequency[26]. This paper also discusses that UGF frequency corresponds to the roll off frequency of PSSR, which can also been seen by comparing plots 25 and 26. The stability technique in this design also gives adverse effect on PSSR performance as UGF is significantly lowered by large output capacitor.

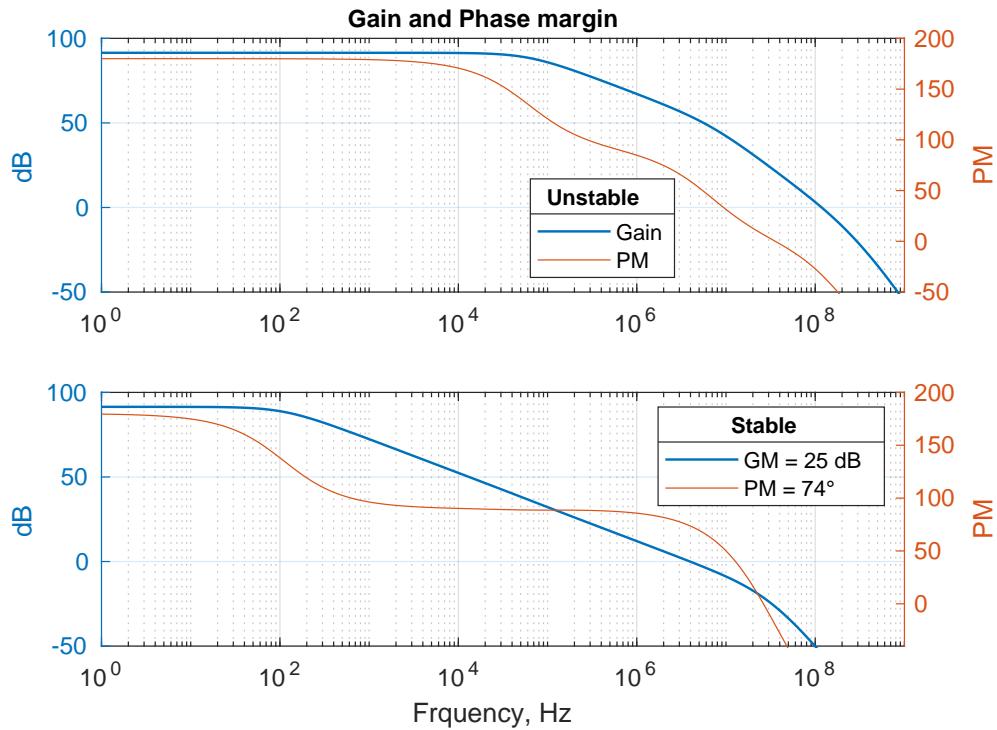


Figure 25: LDO stability before and after compensation

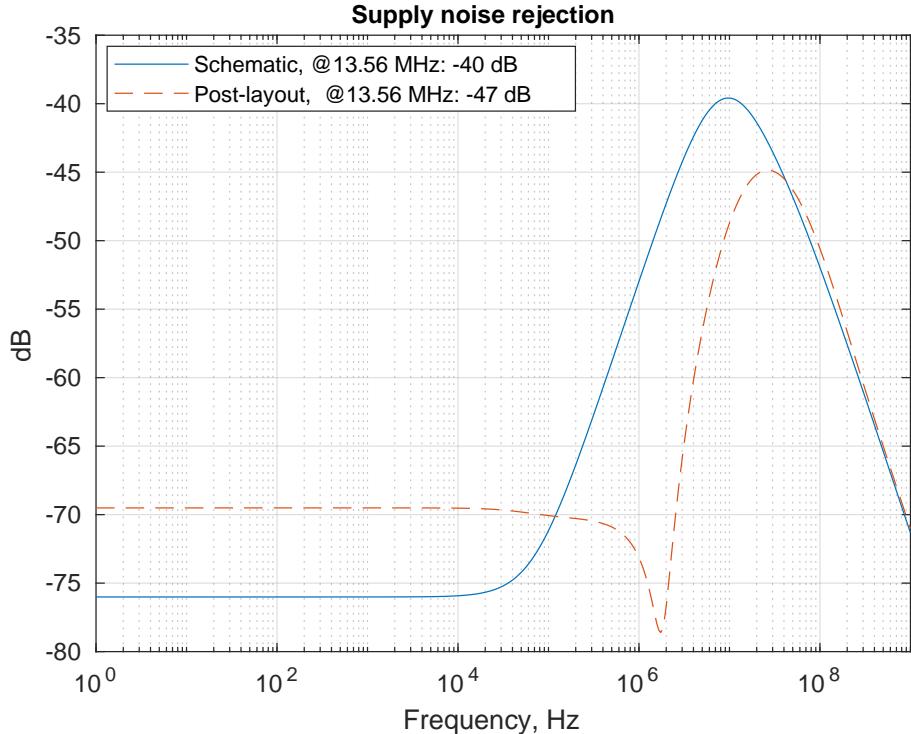


Figure 26: PSSR performance

Table 5 summarizes the performance of LDO regulator discussed above. Power efficiency is calculated as power delivered to load to power consumed from the source. Quiescent current includes biasing currents for error amplifier, feedback resistors and buffer which is obtained by taking the difference of current drawn from the source and current delivered to the load. Both power efficiency and quiescent current is calculated for maximum load operation.

Table 5: LDO performance summary

	Schematic	Post-layout
PSSR	-40 dB @ 13.56 MHz	-47 dB @ 13.56 MH
Phase margin	75°	
Gain margin	30 dB	
Power efficiency	80.9 %	81 %
Quiescent current	105 uA	114 uA
Load regulation	13 uV/mA	54 uV/mA
Line regulation	395 uV/V	-511 uV/V

Reference and biasing circuit design follows next.

4 Reference and biasing

Reference and biasing circuit is important part of any analog circuit. It is required to bias the designed circuitry with proper voltages and currents for operating all the devices in the intended region. For reliable and consistent performance of the system, the references and biases should be independent of supply voltage and temperature variations. Moreover with the trend of shrinking device sizes, mismatch and process parameters variations have been so pronounced that these factors affect the operation of the devices. So for the todays' devices, it is necessary to design reference and biasing independent of PVT variations.

There are different methods of generating reference voltages and bias currents discussed in literatures. Basically, supply independent current source is generated first and then this current is passed through a resistor to get a reference voltages. Some ways of creating supply insensitive current sources are threshold voltage referenced, diode (V_{BE} in BJT) referenced thermal voltage referenced current sources [27, pp. 305-315]. However, these current sources are not temperature independent. Threshold voltage of MOS and forward voltage of diode or V_{BE} have a negative temperature coefficient TC and hence they produce a CTAT (complementary to absolute temperature) current. On the other hand, the thermal voltage(V_T) has positive TC and hence it produce a PTAT (proportional to absolute temperature) current. So these techniques, though being insensitive to supply variations, still cannot be used for accurate reference voltage generation because of temperature dependence. So bandgap reference (BGR) design is used to generate the required reference voltage for the LDO in this design which has significantly less PVT variations than the last three methods.

BGR design involves summing up two voltages of which one is PTAT and the other is CTAT, both having equal and opposite TCs. The equal and opposite TCs cancels out leaving the resultant voltage with a zero TC. Figure 27 is the CMOS implementation of reference and biasing circuit for this project which includes startup circuit, BGR circuit and biasing circuit.

PTAT current is first generated using thermal voltage referenced current source using PNP transistor as diodes, resistor and a op-amp controlled current mirror [28, pp. 391-392]. The current is $I = V_T \ln(n)/R_1$, where $V_T = kT/q$ is thermal voltage with positive TC and n is number

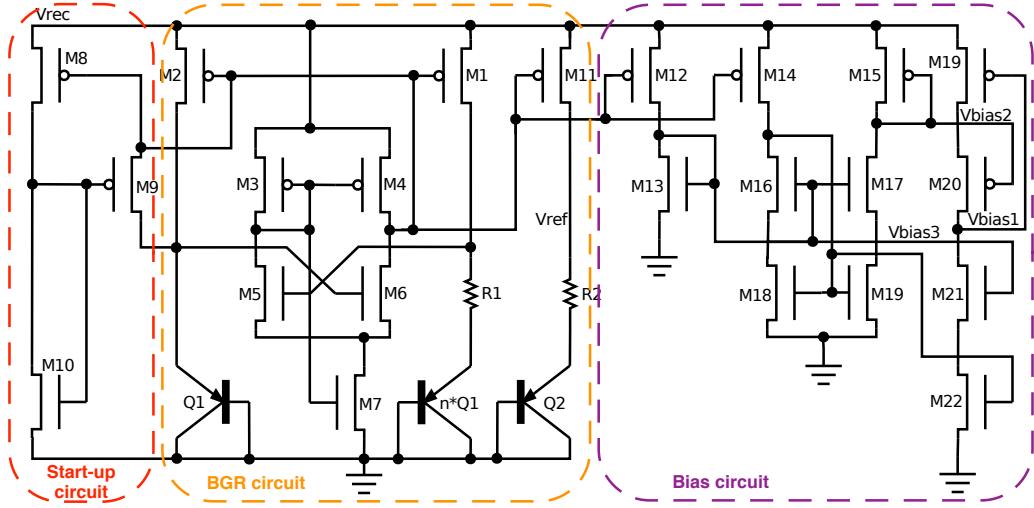


Figure 27: BGR and bias generation circuit

of parallel PNP transistors. This current is passed through a resistor, R_2 to create a PTAT voltage which is in series with a diode realised with a parasitic PNP transistor. The value of R_2 is so chosen such that the positive TC of PTAT voltage across it is equal to negative TC of V_{BE} . The temperature independent reference voltage is then given as $V_{ref} = V_{BE} + \alpha V_T \ln(n)$, where $\alpha = R_2/R_1$ is equal to $\Delta V_{BE}/\Delta T$. Similarly the folded cascode operational transconductance amplifier (OTA) working as an error amplifier in LDO requires additional bias voltages which are produced as shown. Wide swing current mirror topology is used here for bias voltage generation.

In case of the supply independent and self biased circuit, there may be start-up issue. If all the transistors carry zero current, they may indefinitely remain off even when the supply is turned on. Therefore start-up circuit is added in order to ensure that the devices are turn on as supply voltage is provided. Once the circuit is fully operational, the start-up circuit is off and does not effect the normal operation of BGR circuit.

Figure 28, 29 and 30 illustrates temperature, DC and transient simulation of the BGR circuit respectively for slow(ss), fast(ff) and typical(tt) corners. The plots shows that V_{ref} is fairly independent with PVT variations. Similarly, I_{bias} variations used for generating the bias voltages remains within considerable range. Table 6 summarises the

performances of the BGR design.

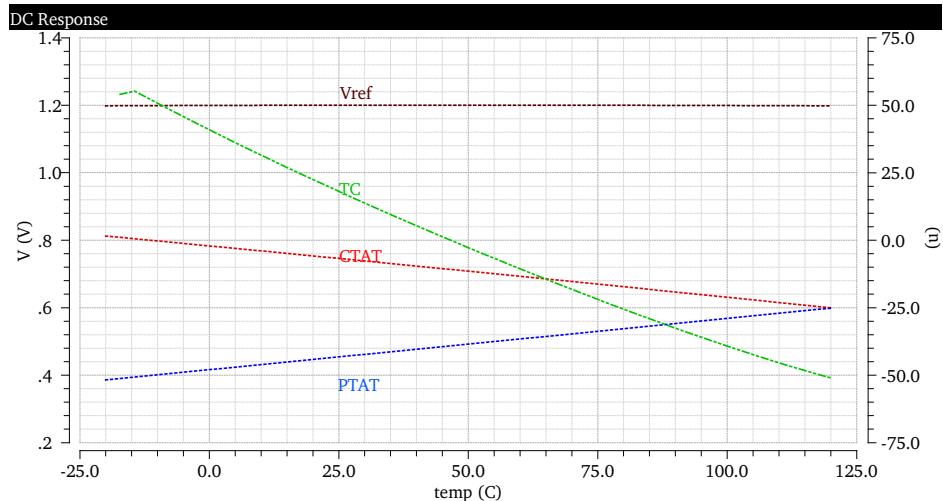


Figure 28: BGR over temperature varitaion

Table 6: BGR parameter and performance

V_{ref}	1.201.1 V @slow corner
	1.201.4 V @fast corner
	1.200.1 V @typical corner
TC @27°C	16.4 μ V/°C
I_{bias}	8.95 μ A @slow corner
	11.37 μ A @fast corner
	10.04 μ A @typical corner

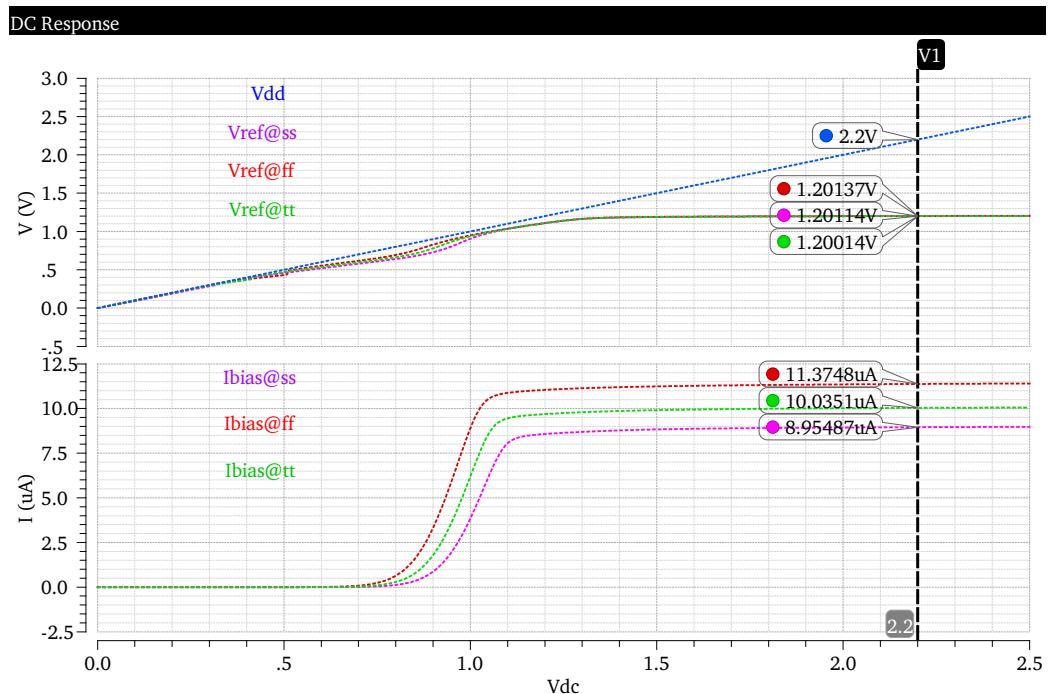


Figure 29: BGR DC performance

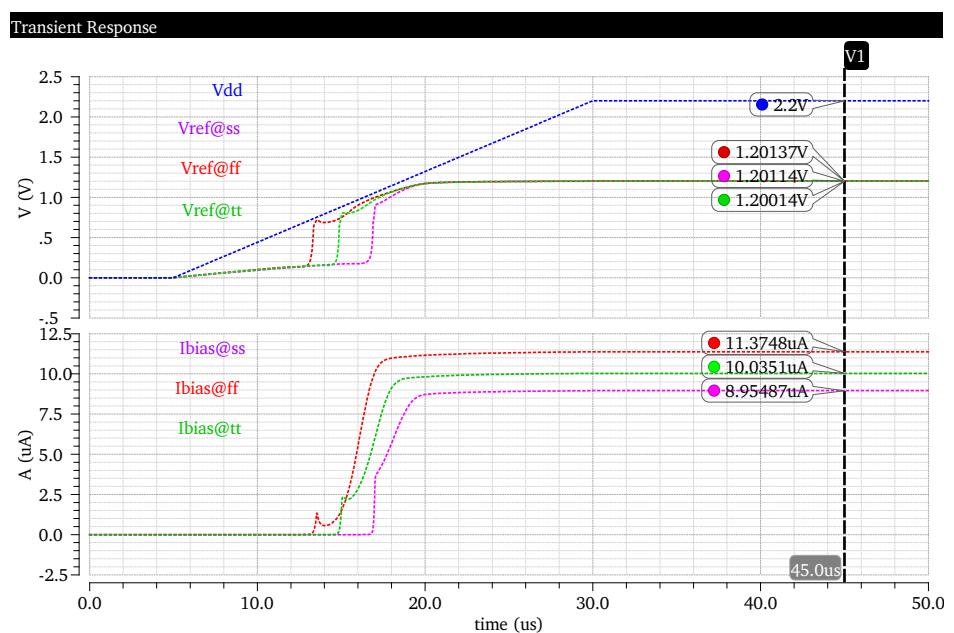


Figure 30: BGR transient performance

5 Antenna Design

All the components discussed above are part of any power management system which takes DC input from power line and creates regulated output as required. However, the objective here is to replace direct power line connection with wireless link. Since the intention is to just create a wireless power transfer link, the option which is easier to implement, convenient to operate and gives higher transfer efficiency is the primary choice here. And the literatures in wireless power transfer studies show inductive coupling meets all these requirement.

Inductive coupling boils down to principle of electromagnetic induction. When alternating electric current is passed through a coil, say primary, it generates alternating magnetic field. If another coil, say secondary, is placed in this changing magnetic field, alternating voltage/current is induced in the coil. In other word, power from primary coil is transferred wirelessly to secondary coil through magnetic field and this is popularly known as inductive power transfer link. And this induced ac voltage is rectified and then used to power up the load.

The energy transfer efficiency between the coils depends on how much of the magnetic field generated by the primary is captured by the secondary coil. And the capture of magnetic field by the secondary coil in turn depends on shape and size of two coils, their separation and alignment. All these factors influencing the transfer efficiency collectively gives a quantity called coupling factor, k . A perfect inductive link has a coupling factor 1, which means all the magnetic flux generated by primary is captured by secondary. However normally achieved coupling factor in practical inductive link is 0.3 and at best 0.5. So for better transfer of efficiency, some improvisation is done to the inductive link, so that efficiency is less affected by coil separation and alignment. This is done by tuning both the primary and secondary coil to same frequency i.e. creating resonance at some frequency so that coil coupling is the strongest at that frequency. This method of creating better wireless energy transfer link is popularly known as magnetic resonance coupling.

In this project, first an antenna coil is designed and characterised. Then inductive link created using that antenna is studied and finally magnetic resonance technique is implemented to increase transfer efficiency at the operating frequency. The antenna dimensions are provided

by Nordic Semiconductor which is one of their design already used in some application. Since having similar shape and size of antennas is important in gaining more transfer efficiency, the same antenna type is used as both primary and secondary coils.

5.1 Inductor model

Figure 31 is a lumped model of a planar antenna/coil/inductor made on a PCB. R_p , series DC resistance of wire and C_p , inter-winding self capacitance. These parasitics determine quality factor and self resonance frequency, SRF of the antenna. The quality factor is given as $Q = \omega L / R_p$ and SRF as $SRF = 1 / (\sqrt{LC_p})$, for this simple model.

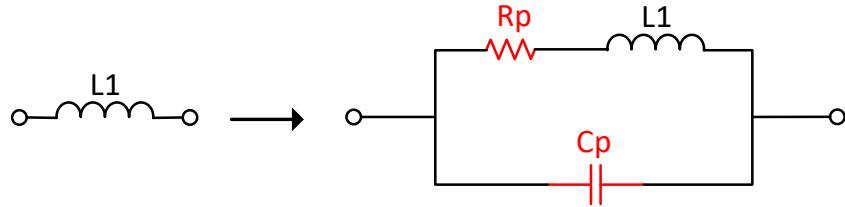


Figure 31: Real antenna model

For purpose of this work, with provided dimensions of the antenna, it is first modelled in HFSS as shown in figure 32a and its equivalent lumped circuit in figure 32b. It is important to note here that L1 in 32b is in fact 31. However, in the discussion ahead, these parasitics are not explicitly mentioned for simplicity because the parameter extraction will include these factors too and on the other hand the operating frequency here is much less than coil SRF. To realise a real antenna, physical parameters of materials used for making printed antenna on a PCB are also given for the model. After completing model, frequency sweep is done for extracting S parameter of the antenna which was eventually used to estimate self inductance of the modelled coil. The performance estimation of single antenna here and couple system later is based on formulas in [28]. In order to check and compare the estimated inductance value from the model, Modified Wheeler Formula, a mathematical approximation model described in [29] is used. The qualities of antenna obtained from extracted S-parameter are listed in

table 7. The table shows that modelled inductance value is less than mathematically approximated value. This difference can be explained with two things. Firstly, mathematical calculation assumed that the antenna is spiral and rectangular with sharp edge but the model has rounded edge. Secondly, during modelling besides dimensions of the coils, physical parameters of coil materials are also used but these are not considered for mathematical calculation.

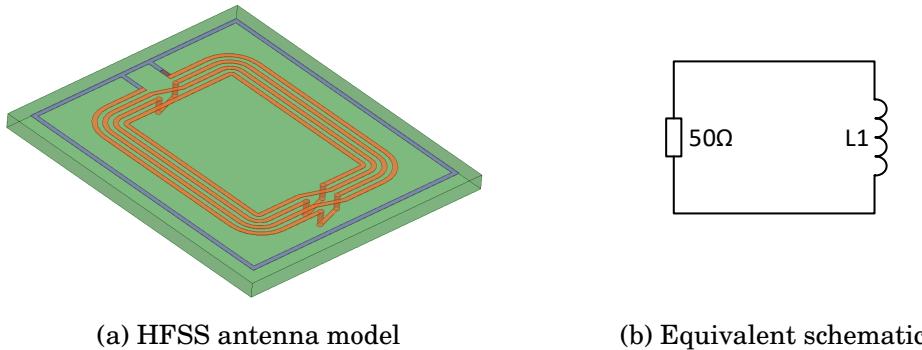


Figure 32: Antenna model

Table 7: Characterisation of antenna

	HFSS model	Modified Wheeler [29]
Self Inductance	448 nH	644 nH
SRF	125 MHz	
Quality factor		
Parasitic Resistance		
Parasitic Capacitance		

5.2 Inductive link: coupled coils

In the next step, an inductive link is realised by using two antennas: one as primary and other as secondary, aligned one over other and separated by air gap as shown in figure 33a, equivalently shown as lumped

schematic in figure 33b. Coupling system of these antennas is simulated for varying distance of magnetic field interaction to observe the difference in performance. The same procedure as used for single coil above, is used to extract self inductance of each coil, L_1 and L_2 , mutual inductance of two coils, L_{12} , coupling coefficient between the coils, k and quality factor, Q . The extracted values for coil separation of 1mm, 5mm and 10mm are listed in table 8 calculated at operating frequency of 13.56 MHz.

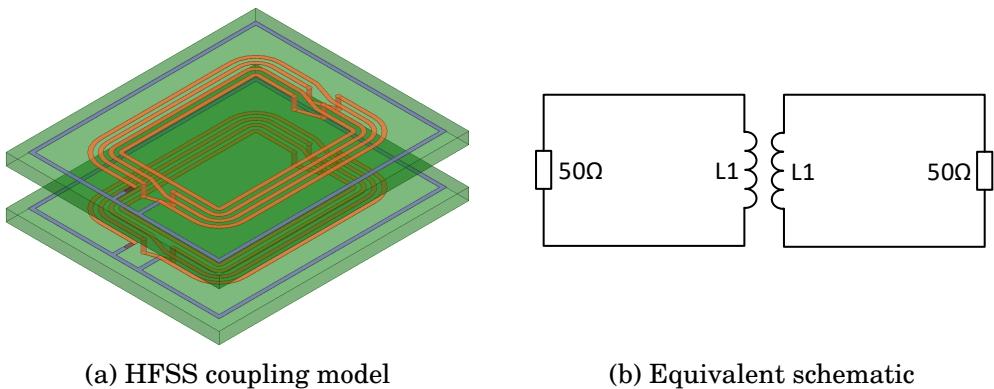


Figure 33: Antenna coupling model

Table 8: Coupling parameters for varying coils distance

Parameter	1 mm	5 mm	10 mm	mm
L_1	-	-	-	nH
L_2	-	-	-	nH
L_{12}	-	-	-	nH
k	-	-	-	-
Q	-	-	-	-
SRF				

It is observed that L_1 and L_2 are same as in table 7 as it is the same coil used as primary and secondary. Similarly L_{12} and k , related as $L_{12} = k\sqrt{(L_1L_2)}$, are both decreasing with distance as expected. With increase in separation, less and less magnetic flux generated by

primary coil is linked with the secondary, creating a loosely coupled inductive link.

The power transfer efficiency of the physical link created by coupled coils is very important. [CITE] states that efficiency depends k of coupling system and Q of coil and hence high k and high Q is always desirable and obviously coil optimisation is the most important part of coupling system design. [30] and [31] discusses some techniques to optimise transfer efficiency of inductive link: [30] about matching the load for better resonance whereas [31] about designing optimal coil geometry for higher Q . The former one compares the efficiency of general inductive coupling and conventional resonant coupling and their limitation in achieving higher efficiency. This eventually proposes optimal resonant load transformation which has better immunity to poor coupling and load variation. Likewise, the later one describes step by step iterative process of designing an antenna with optimal geometry for the given design constraints.

5.3 Magnetic Resonance Coupling

In this project, conventional magnetic resonance coupling as in is implemented to tune both primary and secondary to the power career frequency. The purpose here is to match the impedance of primary antenna to source impedance and secondary antenna of coupling system to load impedance in order to maximise the power transmission from the source to the load.

For the purpose of making a resonant inductive link, the S parameter of coupled antenna system in HFSS is exported to ADS in order to design matching networks using capacitors only. Impedance of primary antenna is matched to 50Ω source resistance and impedance of secondary is matched to load impedance (50Ω load or input impedance chip(?)) as shown in 34. C_{p1} , series capacitor and C_{p2} , shunt capacitor together with L_1 creates parallel resonant circuit at 13.56 MHz on the primary side and C_{s1} , shunt capacitor together with L_2 creates the secondary resonant circuit at same operating frequency. Thus a pair of LC tank circuit is made tuned at same frequency. Such matching network is designed for all three coil separation distances as above, but resonant coupling system with 5 mm separation is taken as a typical example and presented here.

The reflection power loss, S_{11} and S_{22} , at both primary and secondary terminal, power transfer gain, S_{21} , from primary to secondary and Q-factors for both antennas before and after creating resonance are shown in figure 35, this and this.

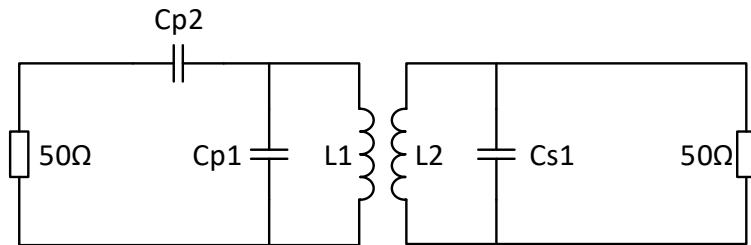


Figure 34: Resonant coupled inductive link

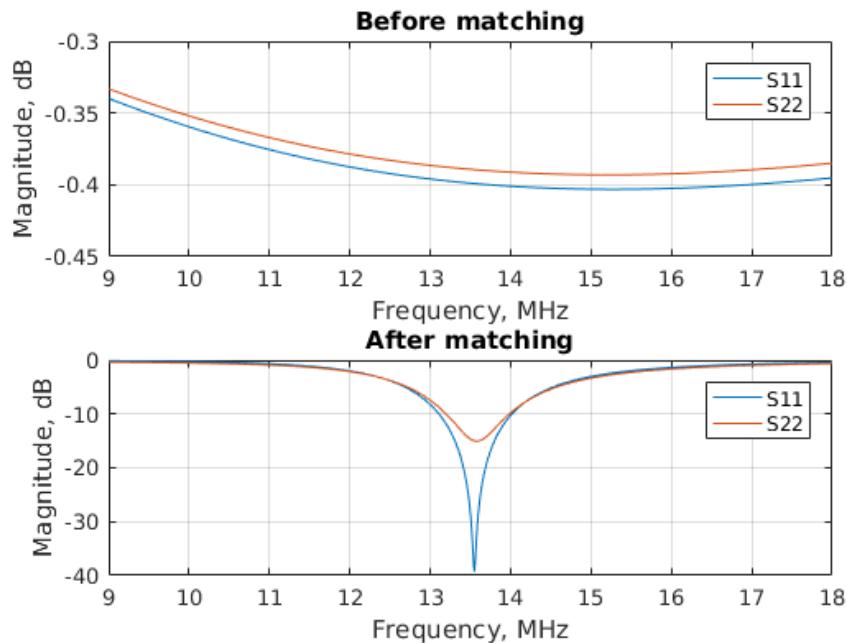


Figure 35: Power loss before and after matching

The performance of magnetic resonant coupling link designed in this work is summarises in table 9 below.

Table 9: Performance of resonant inductive link

C_{p1}	C_{p2} and C_{s1}	
Resonant frequency		13.56
Primary reflection loss		
Secondary reflection loss		
Primary to secondary gaining		http://beta.goal.com/en/news/mbappe-born-to-be-the-best
Q-factor		

6 Power Receiving Unit

Wireless power transfer, WPT system always constitutes two main units: power transmitting unit, PTU and power receiving unit, PRU. Each unit comprises of resonator, power conditioner and control circuits as shown in figure 36. Both the resonators in PRU and PTU are tuned to operating frequency, which create a physical transfer link. Power conditioner circuit in PTU includes at least power amplifier and matching circuit, whereas in PRU, it includes matching circuit, rectifier and regulator. Similarly both these units have control block which facilitates transfer procedure and communication between these units. In this work, design and analysis of PRU is the main objective.

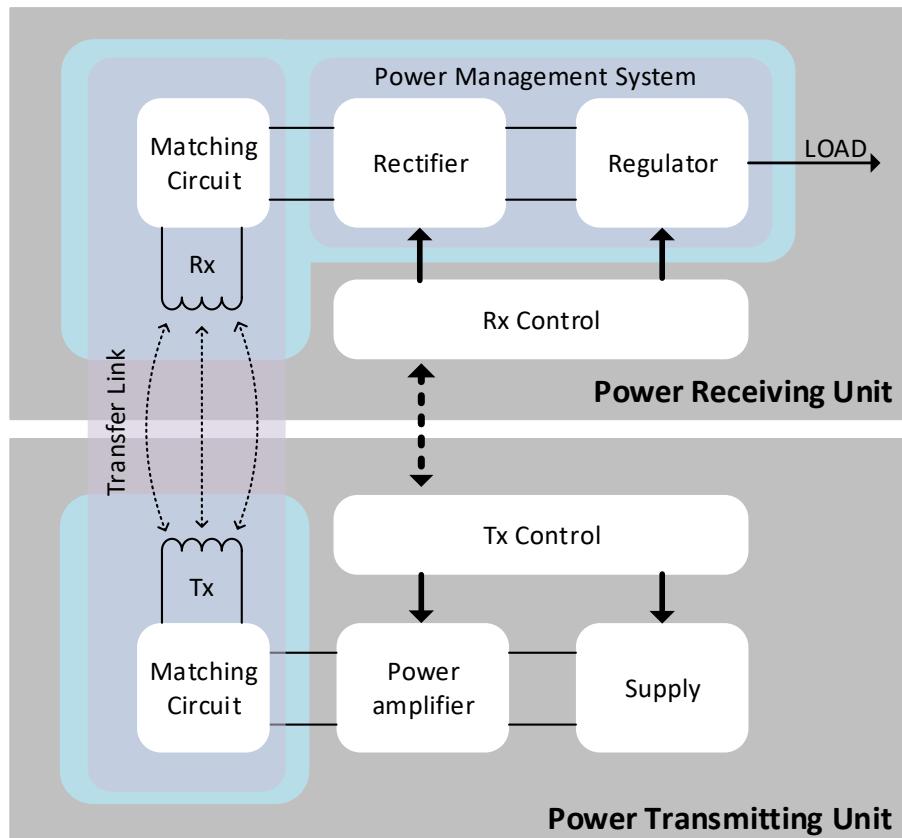


Figure 36: WPT block diagram

In figure 36 above, the block highlighted in blue is the PRU system in this design. Secondary coil, Rx is the receiver resonator, and

rectifier and regulator is power conditioning block. The primary coil is driven by a power source and AC signal is generated at the secondary as discussed earlier in antenna design section. The rectifier then rectifies this AC signal to DC. The DC output of the rectifier is then fed to LDO to produce regulated DC output required to drive a load. The reference and biasing circuit generates required reference and biasing DC voltages for the LDO.

The PRU unit is broken down into two sub units for step wise analysis. As seen in the block diagram, it is functionally divided into Transfer Link and Power Management System (PMS). Firstly, PMS is simulated excluding the transfer link to characterise the performance of PMS. Secondly, the whole PRU system: PMS with transfer link created with coupled antenna, Tx and Rx, is simulated to observe the performance of whole PRU. Though it has already been told earlier, one important thing must be mentioned here again before going further. Even though reference and biasing circuit has been integrated into the PMS system, it has been designed with an option to override it externally. This externally supplied reference and biasing will be primarily used for the PRU system simulation. The result with on-system biases and reference will be explicitly noted when used.

7 Power Management System

Figure 37 is the top level of PMS in this design and test bench setup is shown in figure 38. The purpose here is to give differential signal Vin1 and Vin2 from source Vac and see Vrec and Vreg outputs while driving maximum load. The other inputs are external biases, reference, control and supply for LDO and buffer. Other outputs are biases voltages to examine the performance of BGR circuit which is disabled now with external control signal Vctl low.

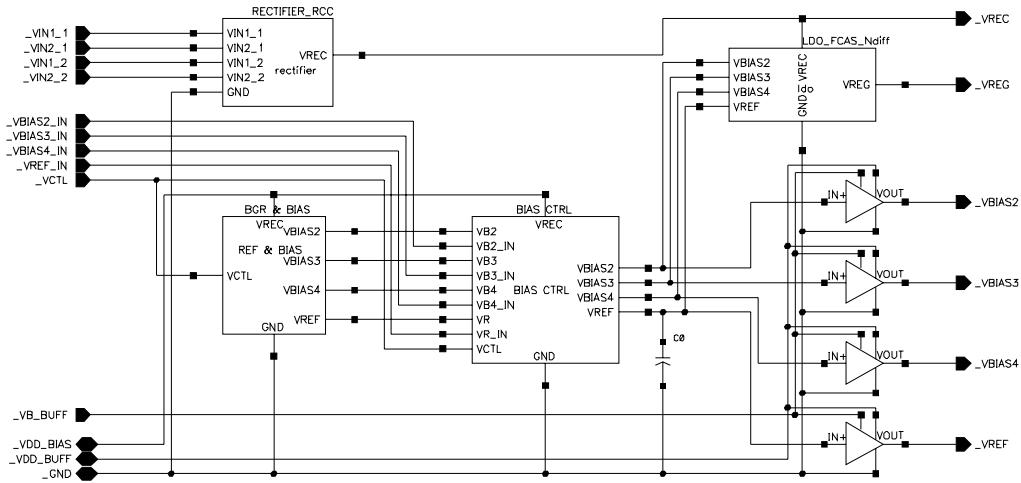


Figure 37: WPT PMS implementation

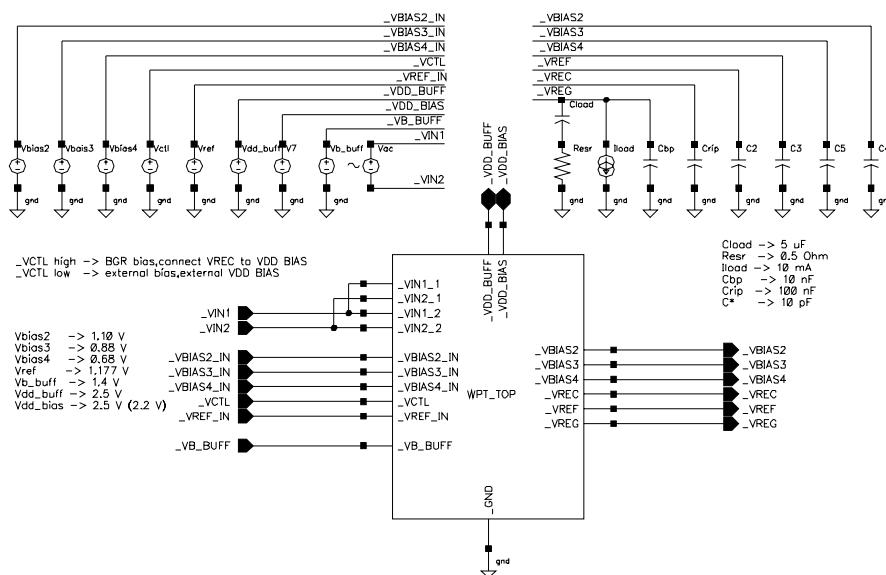


Figure 38: Test bench for PMS simulation

In the testbench above, stimuli voltages like input and biases and components like capacitors and resistors are used. The values for these stimuli and components are listed in table 10 for convenience.

Table 10: PMS testbench stimuli voltages and components

V_{ac}	2.5 V _p
Operating frequency	13.56 MHz
C_{rip}	> 100 nF
$V_{bias2}, V_{bias3} \& V_{bias4}$	1.1, 0.88 & 0.68 V
$C_{load} \& R_{esr}$	> 2.5 μ F & > 0.5 Ω
$I_{load} = I_{max}$	10 mA
$V_{dd_{buff}} \& V_{dd_{bias}}$	2.5 & 2.2 V
$V_{b_{buff}}$	1.4 V
V_{cntl}	0 V for external biases 2.5 V for internal biases

8 Simulation result

Figure 39 and 40 shows input and output waveforms of PMS block. On comparing Vrec with that of rectifier only section, two distinct difference can be observed: additional drop in Vrec and additional time to get maximum Vrec. As already mentioned that final parasitic extraction from layout not just include the core but also the tracks from pad to the core inputs, which obviously contributes more resistance in the conduction path and hence more drop in Vrec. Similarly, it has passive and active rectification region is clearly seen here. [MORE HERE ABOUT IT]. The regulated output, Vrec is similar to as discussed in LDO section. The only difference is longer start up time because Vrec from rectifier is input to the LDO and minimum input to LDO is not reached unless active rectification starts.

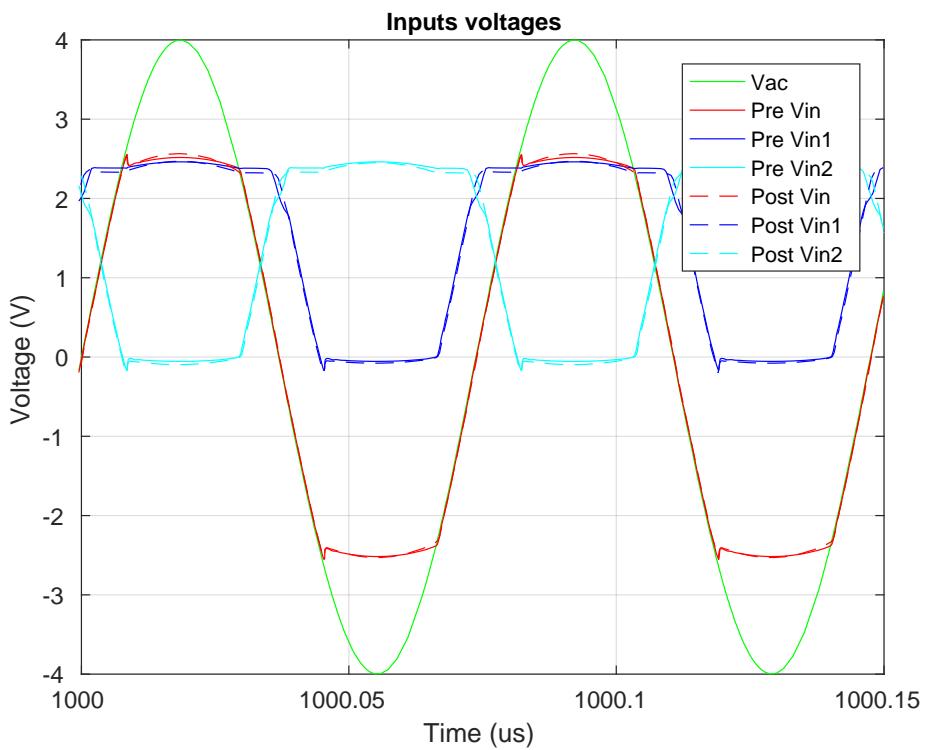


Figure 39: Input voltage waveform of PMS

Figure 41 gives a zoomed view of rectified, Vrec and regulated, Vreg output voltages and their characteristics are same as discussed in rectifier and LDO section.

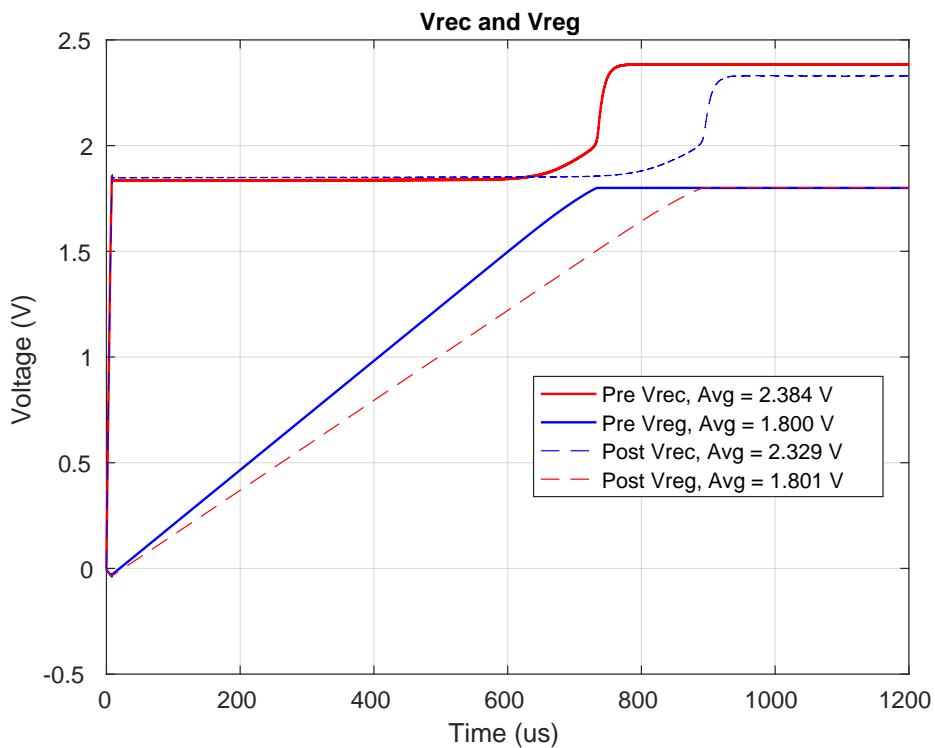


Figure 40: Vrec and Vreg voltages of PMS

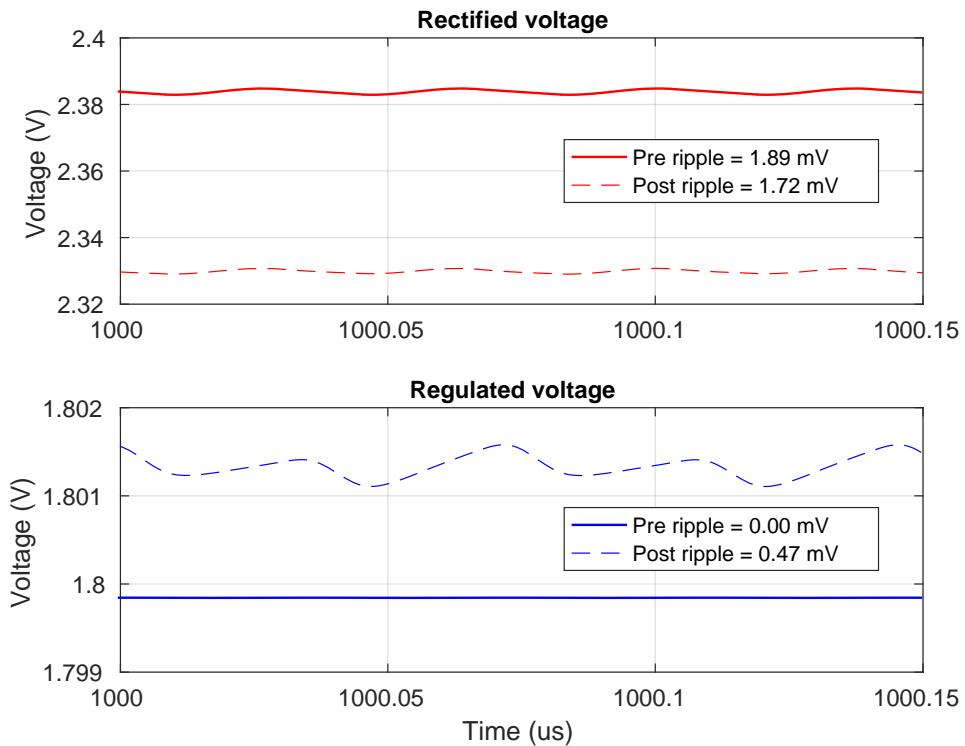


Figure 41: Ripple in V_{rec} and V_{reg}

Figure 42 shows transient waveform of current drawn and power consumed by PMS system. The comparision of waveforms gives some vital information of this design: current drawn and hence power during negative and positive half rectification is not the same, and reverse leakage is comparatively prominent for layout simulation. This means path from pad to rectifying diode are not exactly same, resulting in different resistive path and hence asymmetrical voltages reaching the rectifying diodes. [ANYTHING MORE?]

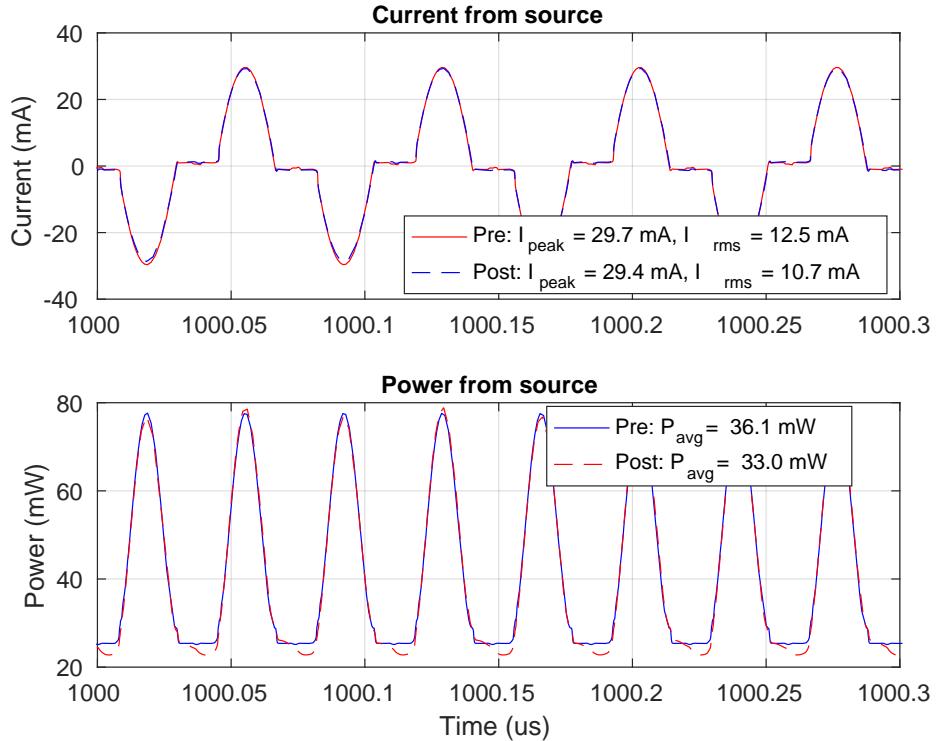


Figure 42: Current and power consumption

The performance of PMS system is tabulated as in table 11. The power consumption was calculated by taking average of power waveform and power conversion efficiency, η_{pms} , is taken as ratio of power delivered to maximum load ($I_{load} = 10 \text{ mA}$) to total power consumed from the source. [COMMENT ON HIGHER LAYOUT EFFICIENCY]

Table 11: PMS performance summary

	Schematic	Post-layout
V_{rec}	2.24 V	2.13 V
ΔV_{rec}	2.9 mV _{pp}	2.9 mV _{pp}
V_{reg}	1.800 V	1.801 V
ΔV_{reg}	0.0 mV _{pp}	0.4 mV _{pp}
η_{pms}	62.9 %	68.8 %

9 PRU Unit

Figure 43 is test bench for complete PRU unit. It includes PMS shown in figure 37 and resonant inductive link shown in figure 33. The inductive link used here is coupling model extracted from HFSS for the case of 5 mm separation between the coils where both antennas are tuned at the operating frequency, 13.56 MHz using capacitors C_{p1} , C_{p2} and C_{s1} given in table 8[CHECK TABLE]. The primary antenna is driven by voltage signal source V_{ac} and the secondary antenna generate differential signal V_{in1} and V_{in2} , which are inputs to the PMS chip.

In this testbench, a resistor, R_s of 50Ω is used in series with signal source, V_{ac} to realize a source resistance. The magnitude of V_{ac} is gradually increased till the differential signals V_{in1} and V_{in2} in secondary antenna reach the optimal value of 2.5 V for maximum load. Other biasing voltages and component values remain the same as in PMS simulation test bench given in table 10.

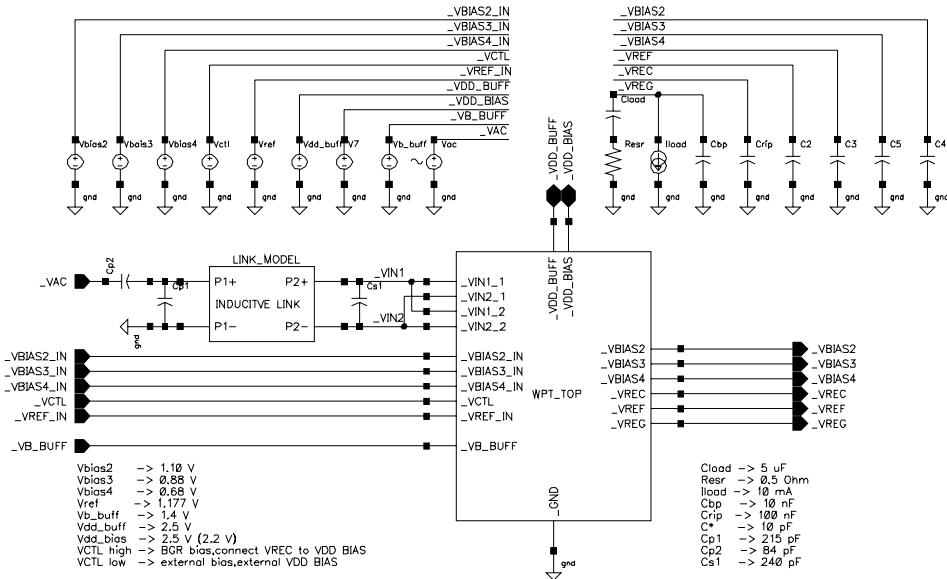


Figure 43: Test bench for complete PRU unit

The parasitic extraction of the compete layout also includes the tracks from pad to core inputs. The pad-frame layout provided by the fab was used to accurately draw the tracks from pad to core I/O terminals.

10 Simulation result

Figure 44 is the plot presenting input and output voltages to the inductive link: V_{ac} is input to the primary antenna, where driver V_{ac} with primary antenna is PTU in this work, and V_{in1} and V_{in2} are differential voltages generated across the secondary antenna, where secondary antenna with PMS chip is PRU in this work. In order to obtained the optimal amplitude of differential signals, the magnitude of V_{ac} is required to rise to 5.5 V.

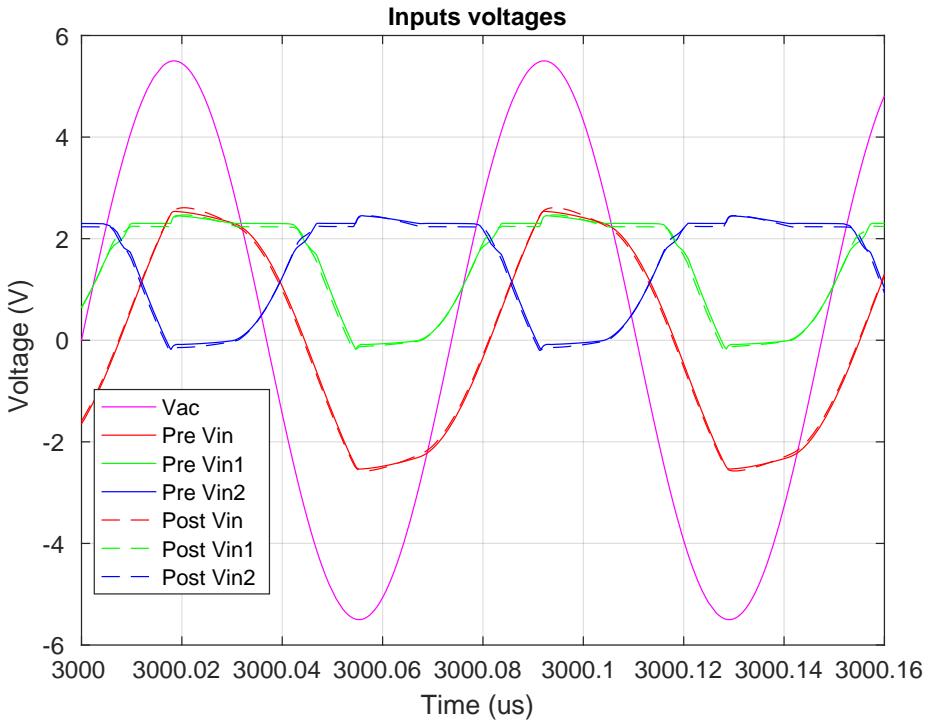


Figure 44: Input voltage waveforms

In figure 45, rectified voltage, V_{rec} and regulated voltage, V_{reg} waveform from the PMS chip is shown where its inputs are the differential signals shown in figure 44. The distinct thing of these waveforms on comparing with PMS system is much longer time required to reach steady state operation. In contrast to PMS only performace of 360 us, PMS in WPT system require 2.7 ms to operate normally. [WHY WHY???] It is taking much longer time for the active rectifier to start active rectification because ...

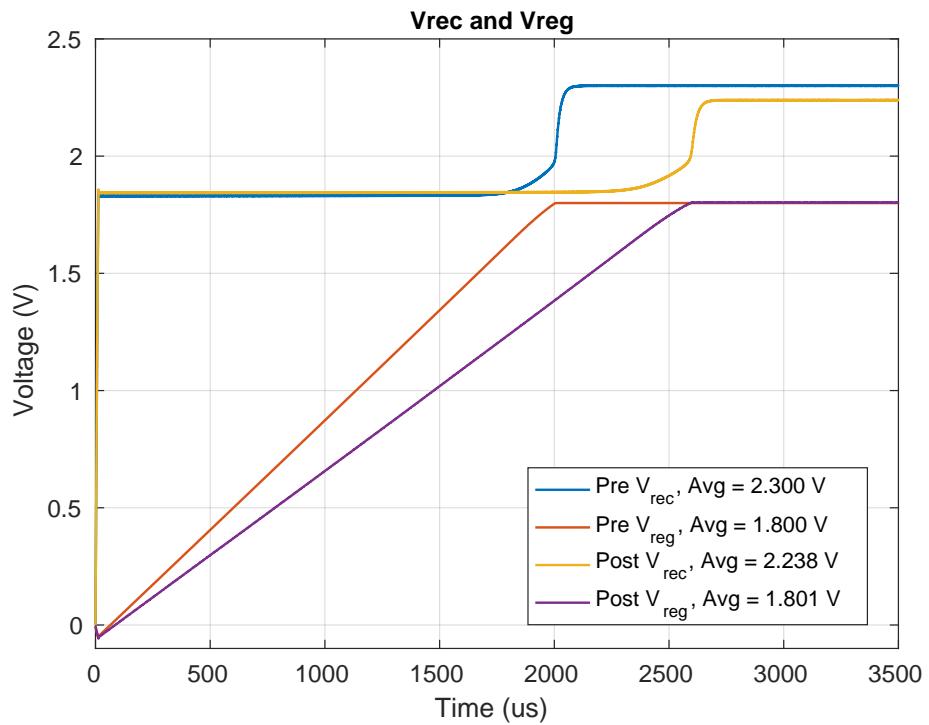


Figure 45: Vrec and Vreg voltages

Figure 46 is a closer look over steady state V_{rec} and V_{reg} along with inherent ripple in them.

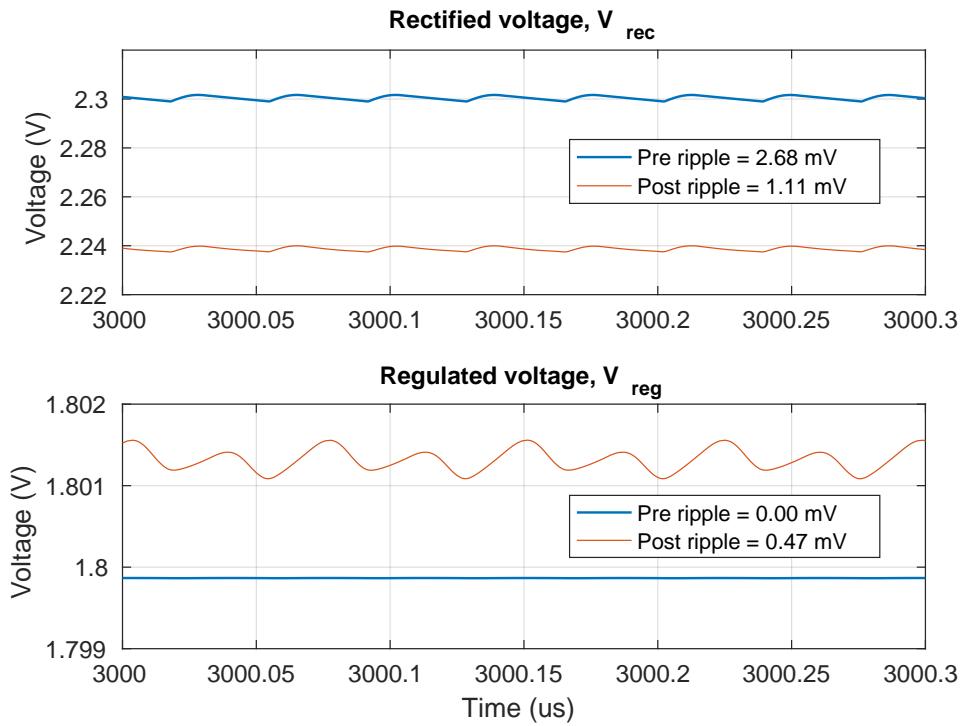


Figure 46: Ripple in V_{rec} and V_{reg}

Figure 47 shows instantaneous current and power waveform from the driver during stable operation. These are complete sine waves as the primary is driven by sinusoidal voltage source. The peaks of power waveform have additional smaller peak on the falling side which corresponding to extra power consumed due to reverse leakage across rectifying diodes of the rectifier.

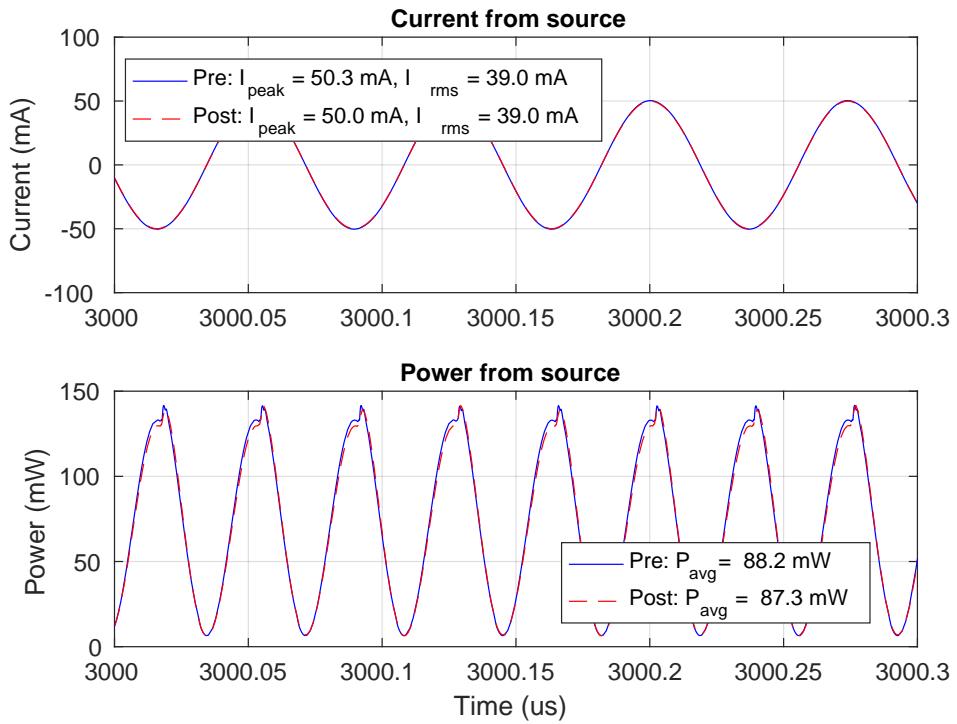


Figure 47: Current and power consumption

One important thing observed in schematic and post layout simulation of WPT system is almost same performance in both pre and post layout simulation as depicted by the above waveforms. [IS IT ? It LOOKS SO, BUT WHY?]

Finally, the performance of the above discussed WPT system for maximum load and coil separation of 5 mm is tabulated in table 12. Power consumption and power efficiency, η_{wpt} , is calculated as discussed in earlier section. η_{wpt} of complete WPT system can also be given as

$$\eta_{wpt} = \eta_{link} * \eta_{rect} * \eta_{ldo} \quad (1)$$

This means η_{wpt} in table 12 should be equal to that obtained by equation 1, which in fact it is.

Table 12: WPT performance summary

	Schematic	Post-layout
V_{ac}	5.5 V	5.5 V
V_{rec}	2.3 V	2.24 V
ΔV_{rec}	2.7 mV _{pp}	1.1 mV _{pp}
V_{reg}	1.800 V	1.801 V
ΔV_{reg}	0.0 mV _{pp}	0.5 mV _{pp}
η_{wpt}	- %	- %

The above analysis and characterization of WPT system is for inductive link with coil separation of 5 mm for driving maximum load. The same analysis is repeated for other two cases: a stronger inductive link created from 1.5 mm coil separation and a weaker inductive link created from 10 mm coil separation. The post layout performance of WPT system for these different inductive links is listed below in table 13.

Table 13: WPT performance summary for all inductive link

	Sepr: 1.5 mm	Sepr: 5 mm	Sepr:10 mm
k	-	-	-
V_{ac}	- V	5.5 V	- V
I_{peak}	- μ A	- μ A	- μ A
η_{wpt}	- %	- %	- %

11 Chip and PCB

After post layout simulation of complete PRU system, it was sent for production to TSMC fab in November 2016 and was received in February 2017. The manufactured chip was packaged in 84 I/O pins JLCC package. The full layout is included in appendix *. It is designed in 90nm process using 2.5 V devices. This process provides 1P-9M - 1 poly layer and 9 metal layers. However in this design, 1 poly and 8 metal layers is used. Basically every component layout used up-to 4 metal layers. Only the high current paths are made with parallel path of

higher metal layers. The micrograph of produced layout is shown in figure 48.

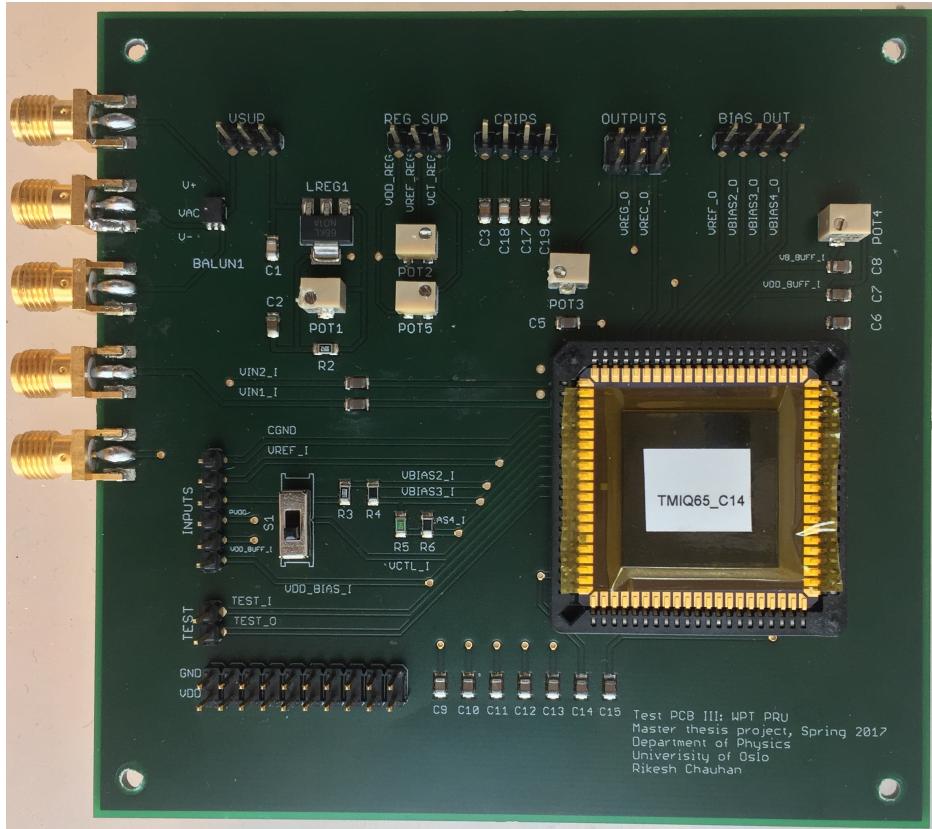


Figure 48: Micrograph of WPT chip

While the chip was in production, test PCB board and antennas were designed and produced. EAGLE is used as PCB design tool. Jumper header pins are used for DC voltages whereas for ac inputs SMA connectors are used. Similarly, for decoupling and ripple rejection SMD MLCC capacitors are used but for stability purpose of LDO, electrolytic capacitor is used owing to requirement of better accuracy and higher ESR for compensation capacitor. In order to have better control of supplies to bias, buffer and pad circuits on board regulator is used. For convenience, instead of providing biases voltages from power supply, on board resistive network is implemented to generate required bias voltages. For sanity check of the chip, balun is used to create differential signal inputs. The test PCB and antenna are shown in figure 49.

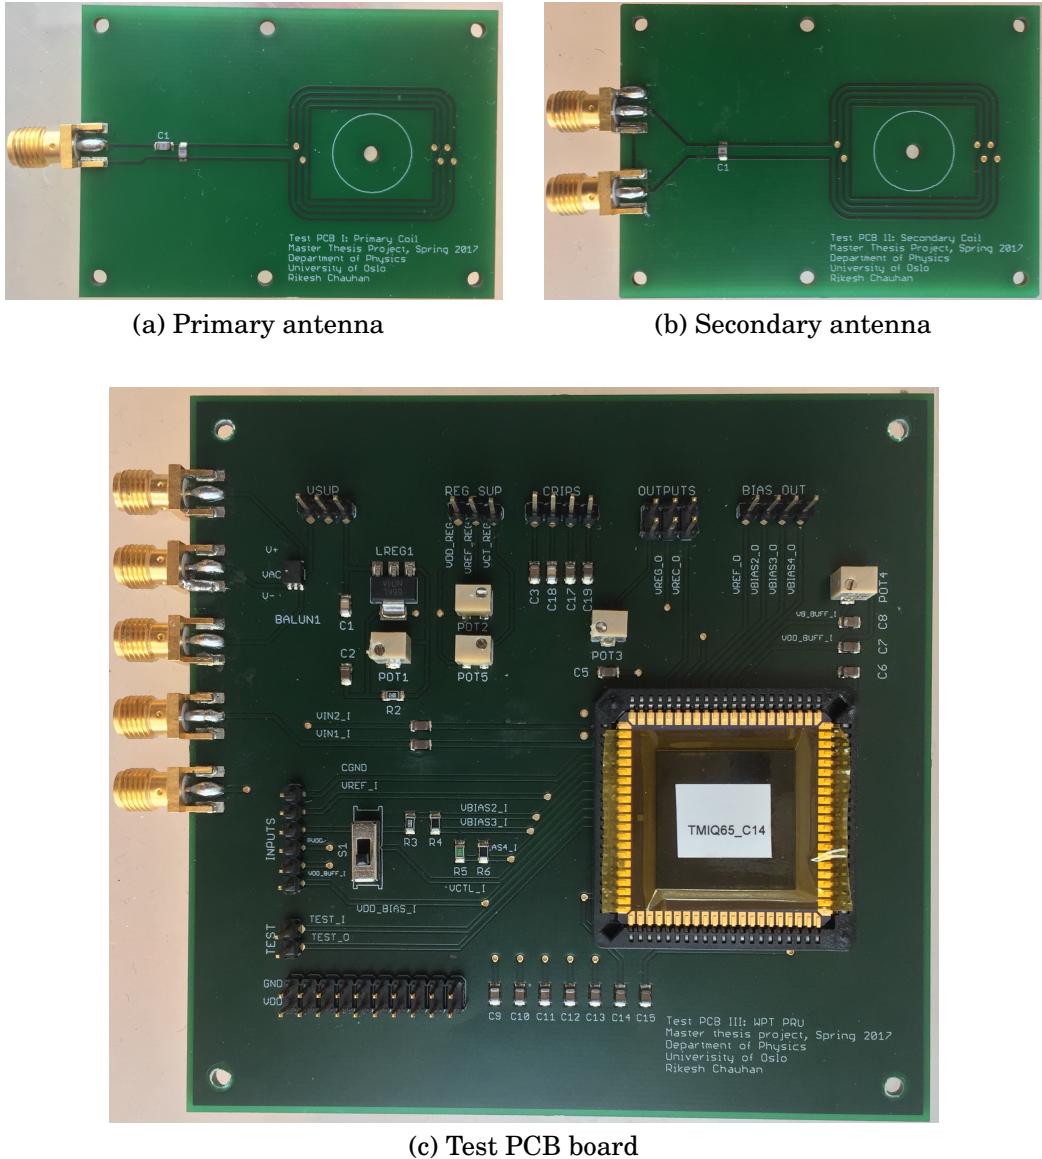


Figure 49: Antenna and test PCBs

12 Measurement Setup

The laboratory setup done for measurement of data is shown in figure[figure]. The primary antenna is driven by V_{ac} from arbitrary wave-

form function generator [name]. The differential ac signals V_{in1} and V_{in2} generated from the secondary antenna, which are fed to the rectifier of PMS chip is measured with channel 1 and channel 2 of oscilloscope [name]. V_{rec} and V_{reg} are measured with channel 3 and channel 4 respectively. [name] is used as power supply to the regulator on PCB. This regulator is generates 2.5 V as VDD and 1.18 V as V_{ref} . This VDD is used as supply for pad/ESD, on chip buffers and on board bias generation circuit. [name] is used to measure current where required.

13 Measurement Results

As in simulation, first the performance of rectifier and LDO are measured, then PMS and finally WPT system which are presented below.

14 Rectifier

For measuring the performance of rectifier, balun on test PCB is used to generated V_{in1} and V_{in2} . V_{ac} of 13.56 MHz frequency is supplied to the balun. Its magnitude is adjusted so that the magnitude at the input of rectifier, V_{in} ($V_{in1} - V_{in2}$) is 2.75 V, maximum for 2.5 V transistor in 90 nm process. 2.75 V is chosen instead of 2.5 V in order to compensate for loss due to pad resistance when conducting peak diode current. The pad residence is measured to be 2Ω and from simulation peak diode current is seen too exceed 64 mA. The bias and reference voltages for LDO are grounded in order to disable LDO for now. The voltage waveforms for 10 mA load is shown in figure [ref].

The average rectified output is same for simulated and measured result. However, the measured performance does not match the simulated performance. It has two major differences with simulated result: V_{reg} has larger ripple and V_{in1} and V_{in2} are different in shape.

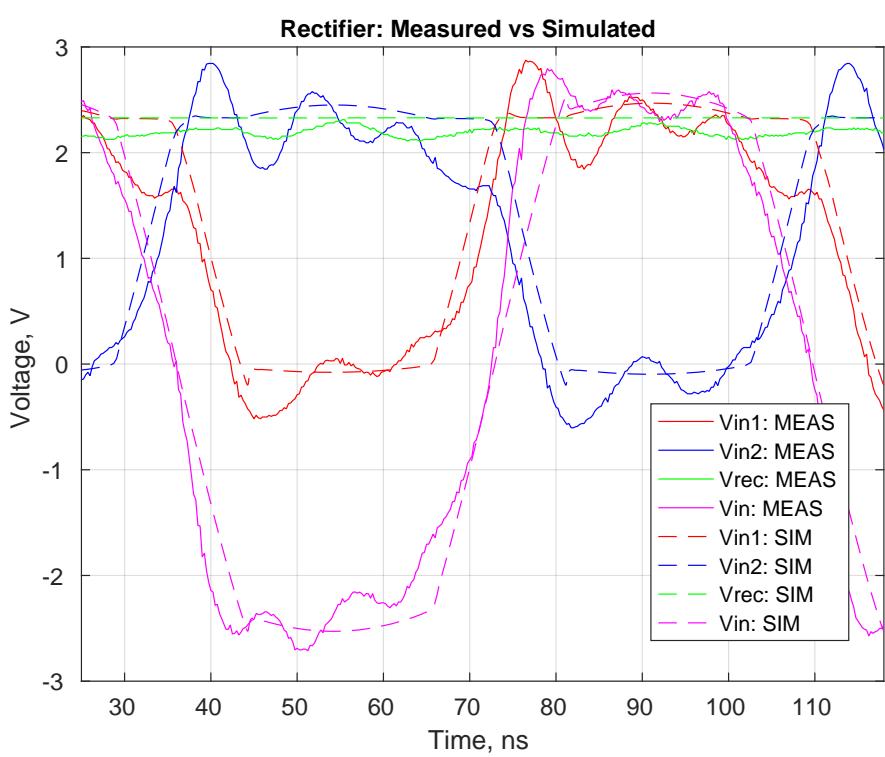


Figure 50: Measured rectifier waveform for 10 mA load

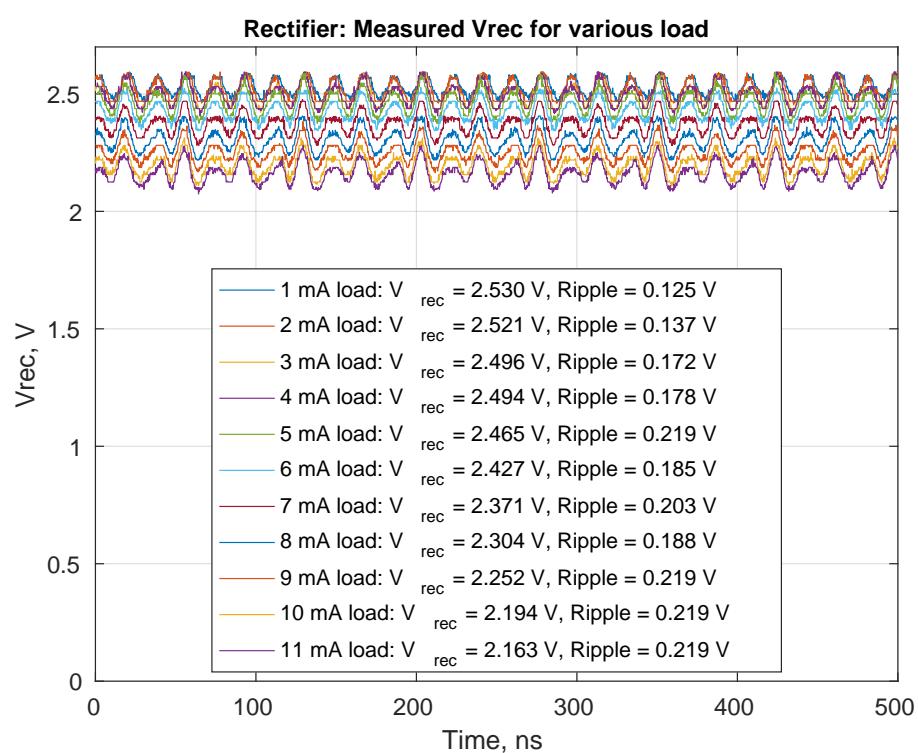


Figure 51: Measured rectifier output for various load

References

- [1] J. A. Paradiso and T. Starner. ‘Energy scavenging for mobile and wireless electronics’. In: *IEEE Pervasive Computing* 4.1 (Jan. 2005), pp. 18–27. ISSN: 1536-1268. DOI: [10.1109/MPRV.2005.9](https://doi.org/10.1109/MPRV.2005.9).
- [2] Lopez Research. *An Introduction to the Internet of Things (IOT)*. Retrieved from: http://www.cisco.com/c/dam/en_us/solutions/trends/iot/introduction_to_IoT_november.pdf. Nov. 2013.
- [3] Jan Rabaey. *Low Power Design Essentials*. 1st. Springer Publishing Company, Incorporated, 2009. Chap. 3,5,8,10. ISBN: 0387717129, 9780387717128. DOI: [10.1007/978-0-387-71713-5](https://doi.org/10.1007/978-0-387-71713-5).
- [4] Loreto Mateu and Francesc Moll. ‘Review of energy harvesting techniques and applications for Microelectronics’. In: *Proceedings of SPIE - The International Society for Optical Engineering*. Vol. 5837. June 2005.
- [5] Drayson Technologies Limited. ‘RF Energy Harvesting for the Low Energy Internet of Things’. In: (2015), p. 7.
- [6] X. Lu et al. ‘Wireless Charging Technologies: Fundamentals, Standards, and Network Applications’. In: *IEEE Communications Surveys Tutorials* 18.2 (Secondquarter 2016), pp. 1413–1452. ISSN: 1553-877X. DOI: [10.1109/COMST.2015.2499783](https://doi.org/10.1109/COMST.2015.2499783).
- [7] Klaus Finkenzeller. *RFID Handbook: Fundamentals and Applications in Contactless Smart Cards, Radio Frequency Identification and Near-Field Communication*. 3rd. John Wiley & Sons Ltd, 2010. ISBN: 9780470665121.
- [8] S. L. Ho et al. ‘A Comparative Study Between Novel Witricity and Traditional Inductive Magnetic Coupling in Wireless Charging’. In: *IEEE Transactions on Magnetics* 47.5 (May 2011), pp. 1522–1525. ISSN: 0018-9464. DOI: [10.1109/TMAG.2010.2091495](https://doi.org/10.1109/TMAG.2010.2091495).
- [9] B. L. Cannon et al. ‘Magnetic Resonant Coupling As a Potential Means for Wireless Power Transfer to Multiple Small Receivers’. In: *IEEE Transactions on Power Electronics* 24.7 (July 2009), pp. 1819–1825. ISSN: 0885-8993. DOI: [10.1109/TPEL.2009.2017195](https://doi.org/10.1109/TPEL.2009.2017195).
- [10] M. P. Theodoridis. ‘Effective Capacitive Power Transfer’. In: *IEEE Transactions on Power Electronics* 27.12 (Dec. 2012), pp. 4906–4913. ISSN: 0885-8993. DOI: [10.1109/TPEL.2012.2192502](https://doi.org/10.1109/TPEL.2012.2192502).

- [11] Retrieved from: <https://www.wirelesspowerconsortium.com/developers/specification.html>.
- [12] Ian Poole. *Qi Wireless Charging Standard*. Retrieved from: <http://www.radio-electronics.com/info/power-management/wireless-inductive-battery-charging/qi-wireless-charging-standard.php>.
- [13] Ian Poole. *A4WP Wireless Charging Tutorial*. Retrieved from: <http://www.radio-electronics.com/info/power-management/wireless-inductive-battery-charging/a4wp-wireless-charging.php>.
- [14] Rich McCormick. *Former wireless charging rivals join forces as new AirFuel Alliance*. Retrieved from: <https://www.theverge.com/2015/11/3/9666960/airfuel-alliance-formed-a4wp-pma-wireless-charging>. Nov. 2015.
- [15] Retrieved from: <https://www.airfuel.org>.
- [16] S. S. Hashemi, M. Sawan and Y. Savaria. ‘A High-Efficiency Low-Voltage CMOS Rectifier for Harvesting Energy in Implantable Devices’. In: *IEEE Transactions on Biomedical Circuits and Systems* 6.4 (Aug. 2012), pp. 326–335. ISSN: 1932-4545. DOI: [10.1109/TBCAS.2011.2177267](https://doi.org/10.1109/TBCAS.2011.2177267).
- [17] Y. H. Lam, W. H. Ki and C. Y. Tsui. ‘Integrated Low-Loss CMOS Active Rectifier for Wirelessly Powered Devices’. In: *IEEE Transactions on Circuits and Systems II: Express Briefs* 53.12 (Dec. 2006), pp. 1378–1382. ISSN: 1549-7747. DOI: [10.1109/TCSII.2006.885400](https://doi.org/10.1109/TCSII.2006.885400).
- [18] H. M. Lee and M. Ghovalloo. ‘An Integrated Power-Efficient Active Rectifier With Offset-Controlled High Speed Comparators for Inductively Powered Applications’. In: *IEEE Transactions on Circuits and Systems I: Regular Papers* 58.8 (Aug. 2011), pp. 1749–1760. ISSN: 1549-8328. DOI: [10.1109/TCSI.2010.2103172](https://doi.org/10.1109/TCSI.2010.2103172).
- [19] Gaurav Bawa and Maysam Ghovalloo. ‘Analysis, design, and implementation of a high-efficiency full-wave rectifier in standard CMOS technology’. In: *Analog Integrated Circuits and Signal Processing* 60.1 (2009), pp. 71–81. ISSN: 1573-1979. DOI: [10.1007/s10470-008-9204-7](https://doi.org/10.1007/s10470-008-9204-7).

- [20] Ian Poole. *PSU | Linear Power Supply*, Radio-electronics.com. Retrieved from: <http://www.radio-electronics.com/info/power-management/linear-power-supply-psu/basics-tutorial.php>.
- [21] K. Keikhosravy and S. Mirabbasi. ‘A 0.13- μm CMOS Low-Power Capacitor-Less LDO Regulator Using Bulk-Modulation Technique’. In: *IEEE Transactions on Circuits and Systems I: Regular Papers* 61.11 (Nov. 2014), pp. 3105–3114. ISSN: 1549-8328. DOI: [10.1109/TCSI.2014.2334831](https://doi.org/10.1109/TCSI.2014.2334831).
- [22] G. A. Rincon-Mora and P. E. Allen. ‘A low-voltage, low quiescent current, low drop-out regulator’. In: *IEEE Journal of Solid-State Circuits* 33.1 (Jan. 1998), pp. 36–44. ISSN: 0018-9200. DOI: [10.1109/4.654935](https://doi.org/10.1109/4.654935).
- [23] Behzad Razavi. *Design of Analog CMOS Integrated Circuits*. 1st ed. New York, NY, USA: McGraw-Hill, Inc., 2001. ISBN: 0072380322, 9780072380323.
- [24] Brian M. King. *Advantages of using PMOS-type low-dropout linear regulators in battery applications*. Retrieved from: http://www.ti.com/sc/docs/apps/msp/journal/aug2000/aug_04.pdf. Aug. 2000.
- [25] Everett Rogers. *Stability analysis of low-dropout linear regulators with a PMOS pass element*. Retrieved from: <http://www.ti.com/lit/an/slyt194/slyt194.pdf>. 1999.
- [26] John C. Teel. *Understanding power supply ripple rejection in linear regulators*. Retrieved from: <http://www.ti.com/lit/an/slyt202/slyt202.pdf>. 2005.
- [27] Paul R. Gray et al. *Analysis and Design of Analog Integrated Circuits*. 5th. New York, NY, USA: Wiley Publishing, 2009. ISBN: 978-0-470-24599-6.
- [28] M. Drakaki, A. A. Hatzopoulos and S. Siskos. ‘CMOS Inductor Performance Estimation using Z- and S-parameters’. In: *2007 IEEE International Symposium on Circuits and Systems*. May 2007, pp. 2256–2259. DOI: [10.1109/ISCAS.2007.378732](https://doi.org/10.1109/ISCAS.2007.378732).
- [29] S. S. Mohan et al. ‘Simple accurate expressions for planar spiral inductances’. In: *IEEE Journal of Solid-State Circuits* 34.10 (Oct. 1999), pp. 1419–1424. ISSN: 0018-9200. DOI: [10.1109/4.792620](https://doi.org/10.1109/4.792620).

- [30] R. F. Xue, K. W. Cheng and M. Je. ‘High-Efficiency Wireless Power Transfer for Biomedical Implants by Optimal Resonant Load Transformation’. In: *IEEE Transactions on Circuits and Systems I: Regular Papers* 60.4 (Apr. 2013), pp. 867–874. ISSN: 1549-8328. DOI: [10.1109/TCSI.2012.2209297](https://doi.org/10.1109/TCSI.2012.2209297).
- [31] U. M. Jow and M. Ghovanloo. ‘Design and Optimization of Printed Spiral Coils for Efficient Transcutaneous Inductive Power Transmission’. In: *IEEE Transactions on Biomedical Circuits and Systems* 1.3 (Sept. 2007), pp. 193–202. ISSN: 1932-4545. DOI: [10.1109/TBCAS.2007.913130](https://doi.org/10.1109/TBCAS.2007.913130).
- [32] R. Jacob Baker. *CMOS Circuit Design, Layout, and Simulation*. 3rd. Wiley-IEEE Press, 2010. ISBN: 0470881321, 9780470881323.
- [33] David A Johns and Ken Martin. *Analog integrated circuit design*. 2E. John Wiley & Sons, 2012. ISBN: 978-1-118-09233-0.
- [34] ‘The concepts of inductive powering’. In: *Inductive Powering: Basic Theory and Application to Biomedical Systems*. Ed. by Koenraad Van Schuylenbergh and Robert Puers. Dordrecht: Springer Netherlands, 2009, pp. 41–76. ISBN: 978-90-481-2412-1. DOI: [10.1007/978-90-481-2412-1_2](https://doi.org/10.1007/978-90-481-2412-1_2). URL: https://doi.org/10.1007/978-90-481-2412-1_2.

List of Figures

1	Mobile performance development trend [1]	2
2	Functional block diagram of energy harvesting system	4
3	Power density of energy sources and consumption of electronic devices [5]	6
4	Near-field coupling models	7
5	Commercial application of wireless power transfer	10
6	Q_i	11
7	AirFuel	12
8	Block diagram of complete design	13
9	Rectifier topologies: conventional and gate cross coupled	15
10	Gate cross coupled full wave active rectifier]	16
11	Comparator circuit, RCC	17
12	Testbench for rectifier	19
13	Voltage and current waveforms of the rectifier	19
14	Voltages waveform for pre and post layout	20
15	Rectified DC output for pre and post layout	21
16	Voltage and power conversion efficiency	22
17	Generic LDO with pMOS pass device	24
18	CMOS implemenation of LDO	25
19	LDO testbench setup	27
20	LDO transient simulation	28
21	LDO step load regulation	29
22	LDO step line regulation	30
23	Regulated voltage with supply variation	31
24	Regulated voltage with load variation	32
25	LDO stability before and after compensation	33
26	PSSR performance	34
27	BGR and bias generation circuit	37
28	BGR over temperature varitaion	38
29	BGR DC performance	39
30	BGR transient performance	39
31	Real antenna model	41
32	Antenna model	42
33	Antenna coupling model	43
34	Resonant coupled inductive link	45
35	Power loss before and after matching	45
36	WPT block diagram	47
37	WPT PMS implementation	49
38	Test bench for PMS simulation	49

39	Input voltage waveform of PMS	51
40	Vrec and Vreg voltages of PMS	52
41	Ripple in Vrec and Vreg	53
42	Current and power consumption	54
43	Test bench for complete PRU unit	55
44	Input voltage waveforms	56
45	Vrec and Vreg voltages	57
46	Ripple in Vrec and Vreg	58
47	Current and power consumption	59
48	Micrograph of WPT chip	61
49	Antenna and test PCBs	62
50	Measured rectifier waveform for 10 mA load	64
51	Measured rectifier output for various load	65

List of Tables

1	Target specifications	13
2	Rectifier design parameters	18
3	Rectifier performance summary	23
4	LDO design parameters	26
5	LDO performance summary	35
6	BGR parameter and performance	38
7	Characterisation of antenna	42
8	Coupling parameters for varying coils distance	43
9	Performance of resonant inductive link	46
10	PMS testbench stimuli voltages and components	50
11	PMS performance summary	54
12	WPT performance summary	60
13	WPT performance summary for all inductive link	60

Acronyms

- BGR** bandgap reference
- CMOS** complementary metal-oxide-semiconductor
- CTAT** complementary to absolute temperature
- DC** direct current
- ESR** equivalent series resistance
- FCC** Federal Communications Commission
- GM** gain margin
- ICMR** input common mode range
- IEEE** Institute of Electrical and Electronics Engineers
- JLCC** J-Lead Chip Carrier
- MLCC** Multi-Layer Ceramic Capacitor
- MOS** metal-oxide-semiconductor
- nMOS** n-channel MOS
- OTA** operational transconductance amplifier
- PCE** power conversion efficiency
- PM** phase margin
- pMOS** p-channel MOS
- PMS** Power Management System
- PRU** Power Receiving Unit
- PSSR** power supply rejection ratio
- PTAT** proportional to absolute temperature
- PTU** Power Transfer Unit
- PVT** process voltage temperature

SMD Surface Mounted Device

SMPS switch mode power supply

SRF Self Resonance Frequency

TC temperature coefficient

UGF unity gain frequency

VCE voltage conversion efficiency

V_p peak voltage

V_{pp} peak to peak voltage

V_{tn} thresold voltage of n-channel MOS

V_{tp} thresold voltage of p-channel MOS

WPT Wireless Power Transfer