

# Microwave Oven

## User manual

MC28A5147\*\*



SAMSUNG


# preparation

## **CONNECTING SMARTTHINGS (Wi-Fi Model Only)**



1. Launch a QR code reader app and scan the QR code image on the product.
2. Try connecting the SmartThings app to the product.

## **REGISTERING THE PRODUCT / READING THE MANUAL / CONNECTING TO SERVICES**

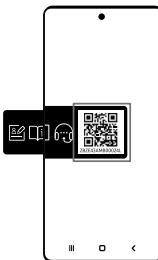

1. Launch a QR code reader app and scan the QR code image on the product.

We provide online manuals that can be accessed via your smartphone or our website to contribute in reducing the usage of manuals in paper format, as part of efforts to save the Earth.

# contents

<b>safety instructions .....</b>	<b>3</b>
Important safety instructions .....	3
General safety .....	6
Microwave operation precautions .....	7
Limited warranty .....	7
<b>installation .....</b>	<b>8</b>
Accessories .....	8
Installation site .....	8
Turntable .....	8
<b>maintenance .....</b>	<b>9</b>
Cleaning .....	9
Replacement (Repair) .....	9
Care against an extended period of disuse .....	9
<b>oven features .....</b>	<b>10</b>
Oven .....	10
Control panel .....	10
<b>oven use .....</b>	<b>11</b>
How a microwave oven works .....	11
Checking that your oven is operating correctly .....	11
Cooking/Reheating .....	12
Power levels and time variations .....	12
Adjusting the cooking time .....	12
Stopping the cooking .....	13
Setting the energy save mode .....	13
Using the slim fry cook features .....	13
Using the sensor cook features .....	18
Using the indian recipe cook features .....	21
Using the curd/dough proof features .....	58
Using the power defrost features .....	59
Using the roti & naan features .....	60
Spit-roasting .....	61
Using the crusty plate .....	62
Convection .....	62
Grilling .....	63
Choosing the accessories .....	63
Combining microwaves and grill .....	63
Combining microwaves and convection .....	64

## safety instructions

Switching the beeper off .....	64
Using the child lock features .....	65
Using the turntable on/off features .....	65
<b>cookware guide .....</b>	<b>65</b>
<b>cooking guide .....</b>	<b>66</b>
<b>troubleshooting and information codes .....</b>	<b>75</b>
Troubleshooting .....	75
Information codes .....	76
<b>technical specifications .....</b>	<b>76</b>
<b>correct disposal of this product (waste electrical &amp; electronic equipment) .....</b>	<b>77</b>

### **IMPORTANT SAFETY INSTRUCTIONS**

READ CAREFULLY AND KEEP FOR FUTURE  
REFERENCE.

**WARNING:** If the door or door seals are damaged,  
the oven must not be operated until it has been  
repaired by a competent person.

**WARNING:** It is hazardous for anyone other than a  
competent person to carry out any service or repair  
operation that involves the removal of a cover which  
gives protection against exposure to microwave  
energy.

**WARNING:** Liquids and other foods must not be  
heated in sealed containers since they are liable to  
explode.

**WARNING:** Only allow children to use the oven  
without supervision when adequate instructions have  
been given so that the child is able to use the oven in  
a safe way and understands the hazards of improper  
use.

This appliance is intended to be used in household  
only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;

- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

Only use utensils that are suitable for use in microwave ovens.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

Do not use this appliance for other purposes than cooking. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. Use this appliance only for its intended use as described in the manual.

Do not put corrosive chemicals or vapors in or on this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

The microwave oven is intended to be used on the counter top (freestanding) use only, the microwave oven shall not be placed in a cabinet.

Metallic containers for food and beverages are not allowed during microwave cooking.

The care should be taken not to displace the turntable when removing containers from the appliance.

The appliance shall not be cleaned with a steam cleaner.

The appliance should not be cleaned with a water jet.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This oven should be positioned proper direction and height permitting easy access to cavity and control area.

Before using the your oven first time, oven should be operated with the water during 10 minute and then used.

If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.

The microwave oven has to be positioned so that plug is accessible.

**WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

**WARNING:** Accessible parts may become hot during use. Young children should be kept away.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

A steam cleaner is not to be used.

**WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

The appliance must not be installed behind a decorative door in order to avoid overheating.

**WARNING:** The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised.

**CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

The door or the outer surface may get hot when the appliance is operating.

The temperature of accessible surfaces may be high when the appliance is operating.

The surfaces are liable to get hot during use.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

## GENERAL SAFETY

Any modifications or repairs must be performed by qualified personnel only.

Do not heat food or liquids sealed in containers for the microwave function.

Do not use benzene, thinner, alcohol, or steam or high-pressure cleaners to clean the oven.

Do not install the oven: near a heater or flammable material; locations that are humid, oily, dusty or exposed to direct sunlight or water; or where gas may leak; or an uneven surface.

This oven must be properly grounded in accordance with local and national codes.

Regularly use a dry cloth to remove foreign substances from the power plug terminals and contacts.

Do not pull, excessively bend, or place heavy objects on the power cord.

If there is a gas leak (propane, LP, etc) ventilate immediately. Do not touch the power cord.

Do not touch the power cord with wet hands.

While the oven is operating, do not turn it off by unplugging the power cord.

Do not insert fingers or foreign substances. If foreign substances enter the oven, unplug the power cord and contact a local Samsung service centre.

Do not apply excessive pressure or impact to the oven.

Do not place the oven over fragile objects.

Ensure the power voltage, frequency, and current matches the product specifications.

Firmly plug the power plug into the wall socket. Do not use multiple plug adapters, extension cords, or electric transformers.

Do not hook the power cord on metal objects. Make sure the cord is between objects or behind the oven.

Do not use a damaged power plug, power cord, or loose wall socket. For damaged power plugs or cords, contact a local Samsung service centre.

Do not pour or directly spray water onto the oven.

Do not place objects on the oven, inside, or on the oven door.

Do not spray volatile materials such as insecticide on the oven.

Do not store flammable materials in the oven. Because alcohol vapours can contact hot parts of the oven, use caution when heating food or drinks containing alcohol.

Children may bump themselves or catch their fingers on the door. When opening/closing the door, keep children away.

### Microwave warning

Microwave heating of beverages may result in delayed eruptive boiling; always use caution when handling the container. Always allow beverages to stand at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating. In the event of scalding, follow these First Aid instructions:

1. Immerse the scalded area in cold water for at least 10 minutes.
2. Cover with a clean, dry dressing.
3. Do not apply any creams, oils, or lotions.

To avoid damaging the tray or rack, do not put the tray or rack in water shortly after cooking.

Do not use the oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of hot oils.

### Microwave oven precautions

Only use microwave-safe utensils. Do not use metallic containers, gold or silver trimmed dinnerware, skewers, etc.

Remove wire twist ties. Electric arcing may occur.

Do not use the oven to dry papers or clothes.

Use shorter times for small amounts of food to prevent overheating or burning.

Keep the power cord and power plug away from water and heat sources.

To avoid the risk of explosion, do not heat eggs with shells or hard-boiled eggs. Do not heat airtight or vacuum-sealed containers, nuts, tomatoes, etc.

Do not cover the ventilation slots with cloth or paper. This is a fire hazard. The oven may overheat and turn off automatically and will remain off until it cools sufficiently.

Always use oven mitts when removing a dish.

Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.

Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.

Do not operate the oven when it is empty. The oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the oven is started accidentally.

Install the oven in compliance with the clearances in this manual. (See Installing your microwave oven.)

Use caution when connecting other electrical appliances to sockets near the oven.

## MICROWAVE OPERATION PRECAUTIONS

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Do not operate the oven with the door open. Do not tamper with the safety interlocks (door latches). Do not insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residue to accumulate on sealing surfaces. Keep the door and door sealing surfaces clean by wiping with a damp cloth and then with a soft, dry cloth after each use.
- Do not operate the oven if it is damaged. Only operate after it has been repaired by a qualified technician.
- Important:** the oven door must close properly. The door must not be bent; the door hinges must not be broken or loose; the door seals and sealing surfaces must not be damaged.
- All adjustments or repairs must be done by a qualified technician.

## LIMITED WARRANTY

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:

- Door, handles, out-panel, or control panel that are dented, scratched, or broken.
- A broken or missing tray, guide roller, coupler, or wire rack.

Use this oven only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.

Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact a local Samsung service centre or find help and information online at [www.samsung.com](http://www.samsung.com).

Use this oven for heating food only. It is intended for domestic use only. Do not heat any type of textiles or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the oven.

To avoid deterioration of the oven surface and hazardous situations, always keep the oven clean and well maintained.

# installation

## ACCESSORIES


Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	<b>1. Roller ring</b> , to be placed in the centre of the oven. <b>Purpose:</b> The roller ring supports the turntable.
	<b>2. Turntable</b> , to be placed on the roller ring with the centre fitting on to the coupler. <b>Purpose:</b> The turntable serves as the main cooking surface; it can be easily removed for cleaning.
	<b>3. High rack, Low rack</b> , to be placed on the turntable. <b>Purpose:</b> The metal racks can be used to cook two dishes at the same time. A small dish may be placed on the turntable and a second dish on the rack. <b>The metal racks can be used in grill, convection and combination cooking.</b>
	<b>4. Crusty plate, see page 62.</b> <b>Purpose:</b> The crusty plate is used to brown food better in the microwave or grill combination cooking modes. It helps keep pastry and pizza dough crisp.
	<b>5. Roasting spit, coupler barbecue and Skewer</b> to be placed in the glass bowl. <b>Purpose:</b> The roasting spit is a convenient of barbecuing a chicken, as the meat does not have to be turned over. It can be used for grill combination cooking.
	<b>6. Glass bowl</b> , to be placed on the turntable. <b>Purpose:</b> Roasting stand is placed on the glass bowl.

**DO NOT** operate the microwave oven without the roller ring and turntable.


## INSTALLATION SITE

- Select a flat, level surface approx. 85 cm above the floor. The surface must support the weight of the oven.
- Secure room for ventilation, at least 10 cm from the rear wall and both sides, and 20 cm from above.
- Do not install the oven in hot or damp surroundings, such as next to other microwave ovens or radiators.
- Conform to the power supply specifications of this oven. Use only approved extension cables if you need to use.
- Wipe the interior and the door seal with a damp cloth before using your oven for the first time.

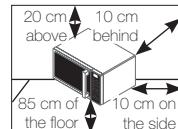

## TURNTABLE

Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

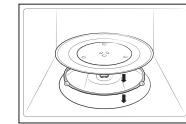

# maintenance

## CLEANING

Clean the oven regularly to prevent impurities from building up on or inside the oven. Also pay special attention to the door, door sealing, and turntable and roller ring (applicable models only).


If the door won't open or close smoothly, first check if the door seals have built up impurities. Use a soft cloth in soapy water to clean both the inner and outer sides of the oven. Rinse and dry well.

### To remove stubborn impurities with bad smells from inside the oven

1. With an empty oven, put a cup of diluted lemon juice on the centre of the turntable.
2. Heat the oven for 10 minutes at max power.
3. When the cycle is complete, wait until the oven cools down. Then, open the door and clean the cooking chamber.

### To clean inside swing-heater models

To clean the upper area of the cooking chamber, lower the top heating element by 45° as shown. This will help clean the upper area. When done, reposition the top heating element.

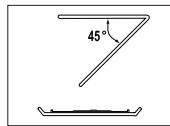

### ⚠ CAUTION

- Keep the door and door sealing clean and ensure the door opens and closes smoothly. Otherwise, the oven's lifecycle may be shortened.
- Take caution not to spill water into the oven vents.
- Do not use any abrasive or chemical substances for cleaning.
- After each use of the oven, use a mild detergent to clean the cooking chamber after waiting for the oven to cool down.

## REPLACEMENT (REPAIR)

### ⚠ WARNING

This oven has no user-removable parts inside. Do not try to replace or repair the oven yourself.


- If you encounter a problem with hinges, sealing, and/or the door, contact a qualified technician or a local Samsung service centre for technical assistance.
- If you want to replace the light bulb, contact a local Samsung service centre. Do not replace it yourself.
- If you encounter a problem with the outer housing of the oven, first unplug the power cord from the power source, and then contact a local Samsung service centre.

## CARE AGAINST AN EXTENDED PERIOD OF DISUSE

- If you don't use the oven for an extended period of time, unplug the power cord and move the oven to a dry, dust-free location. Dust and moisture that builds up inside the oven may affect the performance of the oven.

## oven features

### OVEN

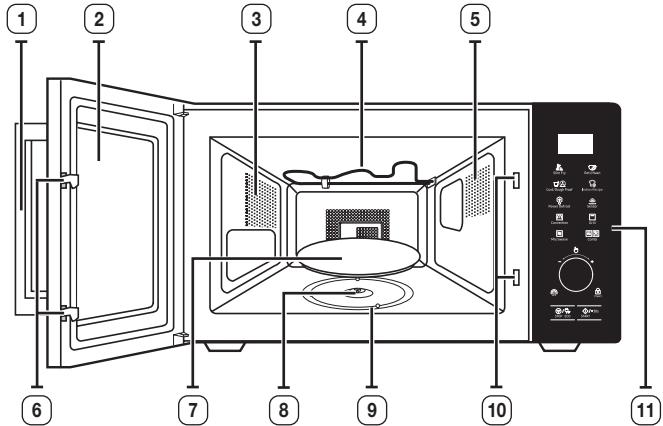

- 1. DOOR HANDLE
- 2. DOOR
- 3. VENTILATION HOLES
- 4. HEATING ELEMENT
- 5. LIGHT
- 6. DOOR LATCHES
- 7. TURNTABLE
- 8. COUPLER
- 9. ROLLER RING
- 10. SAFETY INTERLOCK HOLES
- 11. CONTROL PANEL

### CONTROL PANEL



- 1. SLIM FRY
- 2. ROTI/NAAN
- 3. CURD/DOUGH PROOF
- 4. INDIAN RECIPE
- 5. POWER DEFROST
- 6. SENSOR
- 7. CONVECTION
- 8. GRILL
- 9. MICROWAVE
- 10. COMBI
- 11. TURNTABLE ON/OFF
- 12. MULTI FUNCTION SELECTOR DIAL
- 13. CHILD LOCK
- 14. STOP/ECO
- 15. START/+30s

English - 10

## oven use


### HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.

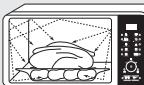

1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
  - Quantity and density
  - Water content
  - Initial temperature (refrigerated or not)

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre.
- The same temperature throughout the food.

### CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "Troubleshooting" on the page 75.

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 900 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the right side of the door. Place a glass of water on the turntable. Close the door.



Press the **START/+30s** button and set the time to 4 or 5 minutes, by pressing the **START/+30s** button the appropriate number of times.

**Result:** The oven heats the water for 4 or 5 minutes. The water should then be boiling.

## COOKING/REHEATING

The following procedure explains how to cook or reheat food.

**ALWAYS** check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.

	<ol style="list-style-type: none"><li>1. Press the <b>Microwave</b> button. <b>Result:</b> The following indications are displayed: </li></ol>
	<ol style="list-style-type: none"><li>2. Turn the <b>Multi Function Selector Dial</b> until the appropriate power level is displayed. At that time, press the <b>Multi Function Selector Dial</b> to set the power level.<ul style="list-style-type: none"><li>• If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.</li></ul></li></ol>
	<ol style="list-style-type: none"><li>3. Set the cooking time by turning the <b>Multi Function Selector Dial</b>. <b>Result:</b> The cooking time is displayed.</li></ol>
	<ol style="list-style-type: none"><li>4. Press the <b>START/+30s</b> button. <b>Result:</b> The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished.<ul style="list-style-type: none"><li>• The oven beep and flash "0" 4 times.</li><li>• The oven will then beep one time per minute.</li></ul></li></ol>

## POWER LEVELS AND TIME VARIATIONS

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity.

You can choose between six power levels.

Power level	Percentage	Output
HIGH	100 %	900 W
MEDIUM HIGH	67 %	600 W
MEDIUM	50 %	450 W
MEDIUM LOW	33 %	300 W
DEFROST	20 %	180 W
LOW	11 %	100 W

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

## ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the **START/+30s** button once for each 30 seconds to be added.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

	To increase the cooking time of your food during cooking, press the <b>START/+30s</b> button once for each 30 seconds that you wish to add. <ul style="list-style-type: none"><li>• Example: To add three minutes, press the <b>START/+30s</b> button six times.</li></ul>
	Just turning <b>Multi Function Selector Dial</b> to adjust cooking time. <ul style="list-style-type: none"><li>• To increase cooking time, turn to right and to decrease cooking time, turn to left.</li></ul>

## STOPPING THE COOKING

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Temporarily : Open the door or press the <b>STOP/ECO</b> button once.  <b>Result:</b> Cooking stops. To resume cooking, close the door again and press the <b>START/+30s</b> button.
Completely	Completely : Press the <b>STOP/ECO</b> button once.  <b>Result:</b> Cooking stops. If you wish to cancel the cooking settings, press the <b>STOP/ECO</b> button again.

## SETTING THE ENERGY SAVE MODE

The oven has an energy save mode.

	<ul style="list-style-type: none"> <li>• Press the <b>STOP/ECO</b> button. <b>Result:</b> Display off.</li> <li>• To remove energy save mode, open the door or press the <b>STOP/ECO</b> button and then display shows "0". The oven is ready for use.</li> </ul>
---	---

### Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and "0" will be displayed after 25 minutes.

Oven Lamp will be turned off after 5 minutes with door open condition.

## USING THE SLIM FRY COOK FEATURES

The 22 **Slim Fry** cook features include/provide pre-programmed cooking times.

You do not need to set either the cooking times or the power level.

You can adjust the Slim Fry cook category by press the **Slim Fry** button.

First, place the food in the centre of the turntable and close the door.

 **ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly. **ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.

	<ol style="list-style-type: none"> <li>1. Press the <b>Slim Fry</b> button.</li> </ol>
	<ol style="list-style-type: none"> <li>2. Select the category of food by turning the <b>Multi Function Selector Dial</b> and press the <b>Multi Function Selector Dial</b>.</li> </ol> <ol style="list-style-type: none"> <li>1) India Slim Fry</li> <li>2) Potatoes/Vegetables</li> <li>3) Seafood</li> <li>4) Chicken</li> </ol>
	<ol style="list-style-type: none"> <li>3. Select the type of food that you are cooking by turning the <b>Multi Function Selector Dial</b>. Refer to the table on the following page for a description of the various pre-programmed settings.</li> </ol>
	<ol style="list-style-type: none"> <li>4. Select the size of the serving by turning the <b>Multi Function Selector Dial</b>.           <ul style="list-style-type: none"> <li>• The serving size differs depending on the menu, and some menus do not provide a serving size.</li> <li>• You can skip this step for a menu that does not provide a serving size.</li> </ul> </li> </ol>
	<ol style="list-style-type: none"> <li>5. Press the <b>START/+30s</b> button.</li> </ol>

The following table presents the 22 **Slim Fry** auto programmes for frying. It contains its quantities and appropriate instructions.

You will use less oil compared to frying with oil fryer, while you will get tasty results.

Programmes are running with a combination of convection, top heater and microwave energy.

### 1. Indian Slim Fry

Code/Food	Serving Size	Ingredients
1-1 <b>Samosa Pockets</b>	4 pieces	<p>Maida (all-purpose flour) - 1 cup, Oil - 2 tbsp., Ajwain (optional) - large pinch, Water - enough to knead the maida, Salt to taste, Oil for brushing</p> <p><b>For the filling:</b> Boiled potatoes (crumbled) - 2, Boiled peas - <math>\frac{1}{4}</math> cup, Grated ginger - <math>\frac{1}{4}</math> tsp., Red chilli powder - 1 tsp., Coriander powder - <math>\frac{1}{2}</math> tsp., Cumin powder - a pinch, Kasuri methi - a pinch, Lemon juice - dash, Garam masala - a pinch, Chopped coriander leaves, Salt to taste</p> <p><b>Instructions</b> Mix the maida with salt, oil, ghee and ajwain, combine to form a crumbly mixture. Now slowly add enough water to make pliable dough, not too soft. Divide the dough and shape into balls. Keep aside covered with moist cloth for 15-20 minutes. Now prepare the filling for the samosa by mixing all the ingredients for filling. Divide the dough into 4 equal parts and make into balls. Roll each ball into 6-inch diameter circles and cut each circle in half. Spread the paste lightly all along the edge of one semicircle. Spread potato filling in centre leaving the edges fold it into triangle shape pockets or desired shape seal the edges with a little water. Continue filling the rest of the Samosa Pockets. Now Keep the 4 Samosa Pockets on the crusty plate and brush all sides with vegetable oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button.</p>

Code/Food	Serving Size	Ingredients
1-2 <b>Veg. Cutlets</b>	6 pieces	<p>Potatoes - 2 medium (300 g), Boiled and shredded, Mixed vegetables - 2 cups (250 g) : peas, carrots, green beans, corn, Paneer - 3~4 oz (100 g), Onions - <math>\frac{1}{4}</math> medium (75 g), Green chillies (chopped) - to taste, Cilantro (Coriander leaves), chopped - 10 sprigs, Assorted nuts(chopped) - 1 Tbsp. (example: walnuts, peanuts, etc), Salt to taste, Chaat masala - 1 tsp., Dried mango powder (Amchur) - 1 tsp., Red chilli powder - <math>\frac{1}{2}</math> tsp. or to taste, Roasted cumin powder - <math>\frac{1}{2}</math> tsp., Bread crumbs for coating, Oil for brushing</p> <p><b>Instructions</b> Finely chop all the Mixed Vegetables and put them in a bowl. Do the same with the Paneer and pour into a bowl. Into the bowl, add in Potatoes, Onions, Green Chillies, Cilantro, and Mixed Nuts. Mix gently but well. Add in the dry spices: Salt, Chaat Masala, Dry Mango Powder, Roasted Cumin Powder and Red Chilli Powder. Again mix well but gently. Put the bread crumbs in a plate. Make cutlets to the size desired, roll in the crumbs and coat well with the bread crumbs. Brush a little Oil on the crusty plate. Now Keep the 4 Veg Cutlets on the crusty plate and brush all sides with vegetable oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button.</p>

Code/Food	Serving Size	Ingredients
1-3 Bread Pakoras	4 pieces	<p>Bread slices - 4, Salt to taste, Green chilli (chopped) - 1, Coriander powder - <math>\frac{1}{4}</math> tsp., Red chilli powder - <math>\frac{1}{4}</math> tsp., Roasted cumin powder - <math>\frac{1}{2}</math> tsp.</p> <p><b>For the batter:</b>            Gram flour (besan) - 1 cups, Salt to taste, Red chilli powder <math>\frac{1}{4}</math> teaspoon, Dry mango powder (amchur) - <math>\frac{1}{4}</math> tsp., Garam masala powder - <math>\frac{1}{6}</math> tsp., Oil for brushing</p>
		<p><b>Instructions</b>            Mix gram flour, salt, soda bicarbonate, red chilli powder, amchur, garam masala powder in a bowl. Add sufficient water to make thick and smooth batter. Cut the slices into desired shape. Brush little Oil on the crusty plate. Dip the bread slices in the batter. Keep the 4 pieces on the crusty plate and brush all sides with vegetables oil. Put the crusty plate on high rack and press start button. When beep, turn the side over and press start button.</p>

Code/Food	Serving Size	Ingredients
1-5 Mix Veg. Pakora	12 pieces	<p>Chickpea flour - 1 cup, Salt - 1 tsp., Turmeric - <math>\frac{1}{4}</math> tsp., Ground cumin - <math>\frac{1}{2}</math> tsp., Green chilli - <math>\frac{1}{4}</math> tsp., Potato - 1, Onion - 1, Olive oil</p>
		<p><b>Instructions</b>            Mix the chickpea flour with the salt, green chillies and the spices. Stirring with a whisk, add 200 ml (1 cup) of water. Finely chop the Potatoes and onions. Add them to the water-chickpea batter. Brush a little oil on the crusty plate. Put one-one tbsp of batter on the crusty plate and brush them with cooking oil. Put the crusty plate on high rack and press the start button. When beep, turn the side over and press start button.</p>
1-6 Aloo Bonda Flip Overs	6 pieces	<p>Mashed aloo (potatoes) - 2 (large boiled), Green chilies (chopped) - 1~2, Coriander leaves (finely chopped) - 1 tbsp., Gram flour - 1cup, Salt to taste, Red chilli powder to taste, Garam masala powder - <math>\frac{1}{4}</math> tsp., Turmeric powder - <math>\frac{1}{4}</math> tsp., Oil for brushing</p>
		<p><b>Instructions</b>            Add salt, chili powder, garam masala, coriander, and green chilies to the mashed aloo (potatoes) and mix well. In a bowl take a cup of gram flour; add turmeric powder, little salt and chili powder to it. Add little water bit by bit and mixing with hand make a batter (neither too thick nor too loses). Make small balls of aloo (potato) mixture and flatten them to make turnovers. Brush little oil on the crusty plate. Dip each ball in the batter and keep it on the crusty plate and brush it with oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button. Serve aloo bona hot with chutney.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-7 Flat Bread Roll</b>	4 pieces	White bread or brown bread - 5~6 slices, Potatoes - 2 (medium size), Dry pomegranate seeds - $\frac{1}{2}$ tsp. or dry mango powder - $\frac{1}{2}$ tsp., Crushed black pepper - $\frac{1}{2}$ tsp. or black pepper powder $\frac{1}{4}$ tsp., Red chilli powder - $\frac{1}{4}$ tsp., Green chilli - 1 (chopped), Garam masala powder - $\frac{1}{4}$ tsp., Cumin powder - $\frac{1}{4}$ tsp., Chaat masala - $\frac{1}{2}$ tsp., Coriander leaves - 2 to 3 tsp. (chopped), Salt as required, Oil for brushing

**Instructions**  
Boil the potatoes. When they are still warm, peel and mash them and keep aside. Add the pomegranate powder, crushed black pepper, red chili powder, chopped green chilies, coriander leaves, garam masala powder, cumin powder and chaat masala powder and salt. Mix the whole filling well. Make small to medium rolls of the filling depending on the size of the bread and how many you are going to use. Take a slice of bread and dampen it with water, squeeze the water from the bread. Place the filling in the center of the bread. Roll the bread and close the edges so as to get an even outer cover and to cook them evenly gently press them to make them flat. Make all bread rolls this way and keep aside. Brush little oil on the crusty plate. Now Keep the 4 bread rolls on the crusty plate and brush all sides with olive oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button. Serve the bread rolls with tomato sauce or green chutney.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-8 Paneer Pakora</b>	10 pieces	Paneer - 150 g (10 square pieces), Gram/ besan flour - 1 cup, Red chilly powder - 1 tsp., Mango powder - $\frac{1}{2}$ tsp., Roasted cumin powder - $\frac{1}{2}$ tsp., Garam masala powder - $\frac{1}{2}$ tsp., Oil to brush, Salt to taste
		<p><b>Instructions</b>  Cut paneer into thick medium sized square shaped pieces. Sprinkle salt , red chilli and cumin powder over the paneer pieces and mix well. In a bowl, mix, gram flour, red chilli powder, mango powder, roasted cumin powder, garam masala powder and salt. Add little water and beat the mixture to form a thick &amp; smooth batter. Brush little oil on the crusty plate. Dip the paneer pieces, into the batter and keep on the crusty plate. Brush all sides of paneer pieces with olive oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button. Serve the paneer pakora with tomato sauce or green chutney.</p> <p><b>1-9 Mirchi Pakora</b></p>

**For the filling:**  
Boiled potato - 1 (medium), Salt, Red chilli powder, Chaat masala

**Instructions**  
Add all the dry ingredients to the batter. Add little water so as to form a thick batter. Give 1 vertical slits on the green chillies and deseed them. in a small bowl mash boiled potato and add dry spices. Fill the chillies with potato filling. Brush, little oil on the crusty plate .Dip them in the batter. Evenly coat the mirch (chillies) with batter. Put the mirchi pakora on the crusty plate and brush them with oil. Put the crusty plate on high rack and press the start button. When beep, turn the side over and press start button.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-10 Aloo Tikki</b>	6 pieces	<p>Boiled, peeled and mashed potatoes - 2, Boiled and coarsely crushed green peas - ¼ cup, Finely, chopped coriander (dhania) - ½ tbsp., Chaat masala - ½ tsp., Chilli powder - ⅛ tsp., Lemon juice - ½ tsp., Salt to taste, Olive oil</p> <p>Combine all the ingredients in a bowl (except green peas) and mix well. Divide the mixture into 6 equal portions and shape each portion into a round. Fill the crushed green peas in the potato ball and make it flat. Brush little oil on the crusty plate. Keep the tikki on the crusty plate and brush both sides with olive oil. Put crusty plate on high rack and press start button. When beep, turn the side over and press start button.</p>

## 2. Potatoes/Vegetables

<b>Code/Food</b>	<b>Serving Size</b>	<b>Instructions</b>
<b>2-1 Frozen Oven Chips</b>	300-350 g 450-500 g	Distribute frozen oven chips evenly on the crusty plate. Set plate on low rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.
<b>2-2 Frozen Potato Croquettes</b>	200-250 g 300-350 g	Distribute frozen potato croquettes evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
<b>2-3 Homemade French Fries</b>	300-350 g 450-500 g	Use hard to medium type of potatoes and wash them. Peel potatoes and cut into sticks with a thickness of 10 x 10 mm. Soak in cold water (for 30 min.). Dry them with a towel, weigh them and brush with 5 g olive oil. Distribute homemade fries evenly on the crusty plate. Set plate on low rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.
<b>2-4 Potato Wedges</b>	200-250 g 300-350 g 400-450 g	Wash normal sized potatoes and cut them into wedges. Brush with olive oil and spices. Put them with the cut side on the crusty plate. Set plate on high rack. Stand for 1-3 minutes.
<b>2-5 Frozen Onion Ring</b>	100-150 g 200-250 g	Put frozen breaded onion rings or frozen breaded squid rings evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
<b>2-6 Sliced Courgettes</b>	100-150 g 200-250 g	Rinse and slice courgettes. Brush with 5 g olive oil and add spices. Put slices evenly on the crusty plate and set plate on high rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.

### 3. Seafood

Code/Food	Serving Size	Instructions
3-1 Frozen Prawns	200-250 g 300-350 g	Distribute frozen breaded prawns evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
3-2 Fish Cutlets	200-250 g 300-350 g	Distribute breaded fish cutlets evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
3-3 Fried Squid	100-150 g 200-250 g	Distribute breaded squid rings evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.

### 4. Chicken

Code/Food	Serving Size	Instructions
4-1 Frozen Chicken Nuggets	200-250 g 300-350 g	Distribute frozen chicken nuggets evenly on the crusty plate. Set plate on low rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.
4-2 Chicken Drumsticks	200-250 g 300-350 g 400-450 g	Weigh drumsticks and brush with oil and spices. Place them evenly on high rack. Turnover after beep sounds, oven will stop process. Press start to continue. Stand for 1-3 minutes.
4-3 Chicken Wings	200-250 g 300-350 g	Weigh chicken wings and brush with oil and spices. Place them evenly on high rack. Turnover after beep sounds, oven will stop process. Press start to continue. Stand for 1-2 minutes.

## USING THE SENSOR COOK FEATURES

The 8 **Sensor Cook** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the Sensor Cook category by turning the **Multi Function Selector Dial**.

First, place the food in the centre of the turntable and close the door.

-  Use only dishes that are microwave-safe.

	<b>1.</b> Press the <b>Sensor</b> button.
	<b>2.</b> Select the type of food that you are cooking by turning the <b>Multi Function Selector Dial</b> . Refer to the table on the following page for a description of the various pre-programmed settings.
	<b>3.</b> Press the <b>START/+30s</b> button. <b>Result:</b> Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) "0" is displayed again.

-  Use only recipients that are microwave-safe.

-  If the inside temperature is over the 60 °C, cooling fan will operate for 3 minutes. You can't use **Sensor** button temporarily until oven get cool to a desired temperature for sensor safe mode.

The following table presents 8 **Sensor Cook** programmes. It contains its recommended weight range per item after cooking and appropriate instructions. In the beginning of the programme the display shows the sensor period. After this period the cooking time and power level is calculated automatically and the remaining cooking time will be displayed. The cooking process is controlled by the sensor system for your convenience.

Use oven gloves while taking out!

Code/Food	Serving Size	Instructions
1 Drinks	150-250 g	Pour the liquid (room-temperature) into ceramic cup or mug. Reheat uncovered. Place in the centre of turntable. Leave them to stand in the oven. Stir drinks before and after standing time. Be careful while taking the cup out (see safety instructions for liquids). Stand for 1-2 minutes.
2 Broccoli Florets	200-500 g	Rinse and clean fresh vegetables, such as broccoli and prepare florets. Put them evenly into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp.). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for broccoli as well as sliced courgette, egg plant, pumpkin or pepper. Stand for 1-2 minutes.
3 Sliced Carrots	200-500 g	Rinse and clean fresh vegetables, such as carrots and cut into round slices evenly. Put them into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp.). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for sliced carrots as well as cauliflower florets or turnip cabbage. Stand for 1-2 minutes.

Code/Food	Serving Size	Instructions
4 Cauliflower Florets	200-500 g	Rinse and clean fresh vegetables, such as cauliflower florets and prepare florets. Put them evenly into a glass bowl with lid. Add 30-45 ml water (2-3 tbsp.). Put bowl in the centre of turntable. Cook covered. Stir after cooking. This programme is suitable for broccoli as well as sliced courgette, egg plant, pumpkin or pepper. Stand for 1-2 minutes.
5 Jacket Potatoes	200-800 g	Rinse and clean potatoes, each 200 g. Brush with olive oil and pierce skin with a knife. Put in a circle on the turntable. Stand for 2-3 minutes.
6 Boiling Pasta	100-300 g	Use a large glass ovenware dish with lid. Add hot boiling water of 4 times, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1-3 minutes.
7 Mini Ravioli	200-400 g	Put mini ravioli in a deep ceramic plate. Put plate in the centre of turntable. Cover with plastic lid. Stand for 2-3 minutes.
8 Chicken Pieces	200-500 g	Brush chilled chicken pieces with oil and spices. Put skin-side down on the low rack. Turnover, as soon as the oven beeps. Push start button to continue process. Stand for 2-3 minutes.

## **Auto sensor cooking instructions**

The Auto Sensor allows you to cook your food automatically by detecting the amount of gases generated from the food while cooking.

- When cooking food, many kinds of gases are generated. The Auto Sensor determines the proper time and power level by detecting these gases from the food, eliminating the need to set the cooking time and power level.
- When you cover a container with its lid or plastic wrap during Sensor Cooking, the Auto Sensor will detect the gases generated after the container has been saturated with steam.
- Shortly before cooking ends, the remaining cooking time will begin its count down. This will be a good time for you to rotate or stir the food for even cooking if it is necessary.
- Before auto sensor cooking food may be seasoned with herbs, spices or browning sauces. A word of caution though, salt or sugar may cause burn spots on food so these ingredients should be added after cooking.

## **Utensils & Cover for sensor cooking**

- To obtain good cooking results with this function, follow the directions for selecting appropriate containers and covers in the charts in this book.
- Always use microwave-safe containers and cover them with their lids or with plastic wrap. When using plastic wrap, turn back one corner to allow steam to escape at the proper rate.
- Always cover with the lid intended for the utensil being used. If the utensil does not have its own lid, use plastic wrap.
- Fill containers at least half full.
- Foods that require stirring or rotating should be stirred or turned toward the end of the Sensor Cook cycle, after the time has started to count down on the display.

## **Important**

- After installing the oven and plugging into an electrical outlet, do not unplug the power cord. The gas sensor needs time to stabilize in order to cook satisfactorily.
- It is not advisable to use the auto sensor cooking feature on a continuous cooking operation, i.e. one cooking operation immediately after another.
- Install the oven in a well ventilated location for proper cooling and airflow and to ensure the sensor will operate accurately.
- To avoid poor results, do not use the Auto sensor when the room ambient temperature is too high or too low.
- Do not use volatile detergent to clean your oven. Gas resulting from this detergent may affect the sensor.
- Avoid placing the oven near high moisture or gas emitting appliances, since this will interfere with the proper performance of the Auto Sensor.
- Always keep the inside of the oven clean. Wipe all spills with a damp cloth. This oven is designed for household use only.

## USING THE INDIAN RECIPE COOK FEATURES

The 200 **Indian Recipe** cook features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the Indian Recipe cook category by press the **Indian Recipe** button.

First, place the food in the centre of the turntable and close the door.

 **ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly. **ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.

	1. Press the <b>Indian Recipe</b> button.
	2. Select the category of food by turning the <b>Multi Function Selector Dial</b> and press the <b>Multi Function Selector Dial</b> .
	3. Select the type of food that you are cooking by turning the <b>Multi Function Selector Dial</b> . Refer to the table on the following page for a description of the various pre-programmed settings.
	4. Press the <b>START/+30s</b> button.

The following table presents the various **Indian Recipe** (Veggie) programmes and appropriate Instructions.

 Use oven gloves when taking out food.

### 1. Soups & Snacks

Code/Food	Serving Size	Ingredients
1-1 <b>Tomato Soup</b>	400-500 g	Tomato - 6 ea (medium size), Garlic - 7~8 Cloves, Carrot - 1 ea (small size), Celery - 1 stalk, Onion - 1 ea (medium size), Pepper corns - 5~6, Oil - 1 tbsp., Butter - 1 tbsp., Salt & sugar as per your taste, Cream - 2 tbsp. Water - 2 cups
<b>Instructions</b>		Wash all vegetables. Cut tomatoes into quarters. Peel & chop garlic. Peel & cut carrots in rounds. Chop celery, slice onion & crush pepper corns. In microwave safe glass bowl put oil onion, carrot, celery and garlic. Add 2 cups of water & cook. When beep, let it be cool and then blend in blender. Pour them in microwave safe glass bowl and add butter, tomato puree, salt and sugar. Stir well and cook. After cook strain and add cream and serve it hot.
1-2 <b>Sweet Corn Soup</b>	300-350 g	Sweet corn - 0.2 kg, Water - 1.5 cup, Oil - 1 tbsp., Corn flour - 1 tbsp., Chopped onion - 2 tbsp., Green chili - 1 ea (chopped), Salt, Sugar, Pepper corns as per your taste
<b>Instructions</b>		Grind sweet corn with water ( $\frac{1}{2}$ cup). Put it in microwave safe glass bowl and cook. When beep, add oil, green chili, onion, flour, water (1 cup), salt, sugar and pepper corn. Mix well and cook.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-3 Mushroom Soup</b>	400-450 g	Potato - 1 ea, Cabbage - 50 g, Onion - 1 ea (small size), Mushroom - 100 g, Tomato sauce - 2 tbsp., Oil - 2 tbsp., Water - 2 cups, Salt, Sugar, Pepper as per taste
<b>Instructions</b>		Chop all vegetables. In microwave safe glass bowl put potato, cabbage, onion, 2 cups of water and cook. When beep, grind the stalk with some water and then add oil, chopped mushroom, salt, black pepper, sugar and tomato sauce. Mix well and press start. Serve hot and garnish with grated cheese.
<b>1-4 Spinach Soup</b>	400-500 g	Spinach leaves - 2 cup (chopped), Butter - 1 tbsp., Milk - ½ cup, Salt, Pepper, Nutmeg powder as per your taste
<b>Instructions</b>		In microwave safe glass bowl Put spinach leaves and some water. When beep, blend the spinach to a smooth puree in a blender. And then add butter, milk, salt, pepper, and nutmeg powder. Mix well and press start.
<b>1-5 Tom Yum Soup</b>	300-350 g	Mushroom - 6~7 (chopped), Fresh coriander leaves a few spring, Green or fresh red chili - 3~4, Lemon grass - 4 inches stalk, Lime leaves - 4~5, Salt as per your taste, Thai red curry paste - 2 tbsp., Lemon juice - 2 tbsp., Water - 4 cups
<b>Instructions</b>		In microwave safe glass bowl add 4 cups of water, lemon grass, lime leaves, 2 red or green chilies and salt. Mix well and cook. When beep, grind the stalk with some water and then add oil, chopped mushroom and Thai red curry paste. Serve hot with Lemon juice & red or green chili.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-6 Mix Vegetable Soup</b>	400-500 g	Carrot - 1 ea (medium size, chopped), Cauliflower - 50 g (chopped), Onion - 2 tbsp. (chopped), Green peas - ¼ cup, Butter - 1 tbsp., Milk - 1 cup, Salt & pepper as per your taste, Water - 1 cup
<b>Instructions</b>		In microwave safe glass bowl add 1 cup of water, carrot, cauliflower and green peas. When Beep, grind the stalk with some water. Put the butter in a glass bowl. Add chopped onion, stalk, milk, salt and pepper. Mix well and press start. Serve hot.
<b>1-7 Cream of Lettuce Soup</b>	400-500 g	Lettuce leaves - 2 cups, Onion - 2 ea (chopped), Milk - 2 cups, Plain flour - 2 tbsp., Butter - 2 tbsp., Salt, Sugar, Pepper as per your taste
<b>Instructions</b>		In microwave safe glass bowl add lettuce leaves with water and cook. When beep, grind the stalk with some water and then put the butter, plain flour, onion, lettuce puree, milk, salt, sugar and pepper. Mix well and press start. Serve hot.
<b>1-8 Garlic Bread</b>	300-400 g	Bread (French) - 3 slices, Butter - 3 tbsp., Garlic - 2 tbsp., Grated cheese - 3 tbsp., Salt, Pepper, Oregano, Chili flakes as per taste.
<b>Instructions</b>		Pre-heat the oven 200 °C with the convection function. Mix butter, garlic, salt, pepper, oregano and make a paste. Apply this paste on both sides of the bread and sprinkle grated cheese and chili flakes. Put these breads on crusty plate and put in on low rack. When beep, select menu and cook.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-9 Vegetable Pizza</b>	200-250 g	Pizza Base - 100 g, Pizza topping - 3 tbsp., Mixed vegetables (Tomato, Capsicum, Onion) - 1 cup, Grated Cheese - ½ cup, Chili Flakes as per your taste, Oregano for seasoning, Butter- 1 tbsp.
<b>Instructions</b>		Pre-heat the oven at 200 °C with the convection function. Spread the butter at both the sides of Pizza base than add pizza topping, mixed vegetable and cheese on pizza base, and put the pizza on crusty plate and put it on low rack. When beep, select menu and cook. Serve with oregano and chili flakes on top.
<b>1-10 Dhokla</b>	200 g	Gram flour - 200 g, Warm water - 75 ml, Curd - 3 tbsp., Green chili-ginger paste - 1½ tsp., Fruit salt - 1½ tsp., Salt, Sugar as per your taste
<b>Instructions</b>		Grease the microwave safe flat dish, with little oil. Mix gram flour, curd, sugar, salt, water, ginger-green chili paste, yellow color, fruit salt together. Pour the mixture in greased dish and cook. Cut it into pieces, garnish with grated coconut and coriander and serve with sauce or chutney.
<b>1-11 Lazeez Paneer Toast</b>	4 slices	Butter - 1½ tbsp., Brown or white bread - 4 slices, Garlic (5-6 cloves, crushed and chopped) - 1 tsp., Leaves of Palak (Spinach + washed & shredded) - 100 g, Paneer - 150 g, Basil or Coriander - 1 tbsp. (chopped), Mozzarella cheese (grated) - 5 tbsp., Salt & Pepper - each ¼ tsp., Red chili flakes as per your taste, butter- ½ tsp.
<b>Instructions</b>		Wash and shred the spinach leaves into thin ribbons. In microwave safe bowl add butter, garlic, spinach and cook with MWO 900 W for 4 min. When beep add grated paneer, basil, mozzarella cheese and mix well. Spread the mixer on the toast. When beep take spread bread slice on high rack on crusty plate with a little butter spread at the upside down of the toast and cook.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-12 Poha</b>	300-400 g	Poha - 0.3 kg, Oil - 3 tbsp., Onion - 1 cup (chopped), Green chili - 4 ea, Mustered, Cumin, Asafetida, Turmeric, Curry leaves for tempering, Grated Coconut & Coriander for garnishing
<b>Instructions</b>		In microwave safe bowl put oil mustered, cumin, green chili, onions, turmeric powder curry leaves. Mix well and cook. When beep add washed poha, salt and sugar to taste. Mix well and press start. Garnish coconut and coriander. Serve hot.
<b>1-13 Upama</b>	300-400 g	Rava/ Suji (Semolina) - 1 cup or 100 g, Oil - 2 tbsp., Mustard seeds - 2 tsp., Cumin - 2 tsp., Urad Dal (Black Gram) - ½ tsp., Green Chilies - 2 ea, Curry Leaves - 7~8, Water - 200 ml, Sugar & Salt as per your taste, Lemon Juice - 1 tsp.
<b>Instructions</b>		In microwave safe bowl put oil, mustard seeds, cumin, black gram, green chilies, curry leaves, and rava suji/semolina. Mix well and cook. When beeps add water, sugar and salt to taste, lemon juice, mix well and then press start. Garnish with coriander and bhujia.
<b>1-14 Daliya</b>	300-400 g	Daliya - 100 g, Sugar - 75 g, Milk and water - each 200 ml, Ghee - 1 tbsp., Cardamom powder, Kishmish, Cashew nuts as per your taste
<b>Instructions</b>		Soaked Daliya for 1 hr. Drained water. In microwave safe bowl add daliya and ghee and cook. When beep add milk, water, sugar mix well, cover it and then press start. After finish, add cardamom powder, kishmish and cashew nuts mix well.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-15 Chili Honey Vegetables</b>	200 g	Mix Vegetable (Carrot, Muter, Corn, Cauliflower, French Beans etc : cut small pieces) - 200 g, Honey - 2 tbsp., Salt, Lemon juice, Pepper powder as per your taste, Water as required
	<b>Instructions</b> In microwave safe bowl take vegetables and some water. When beeps drain water and add honey, salt, lemon juice, pepper powder mix well and then press start.	
<b>1-16 Idli</b>	8 ea	Instant Idli Mix - 2 cups, Curd - 1 cup, Ginger Garlic Chili paste and salt as per your taste, Water as required
	<b>Instructions</b> Mix all the ingredients and make a batter, pour this batter to greased microwave safe idly stand and cook. Serve hot with Chutney & Sambar.	
<b>1-17 Steamed Vegetables</b>	200 g	Mix Vegetable (Cauliflower, Carrot, Capsicum Muter Corn, French beans : Cut in small pieces) - 200 g, Sugar, Pepper powder, Salt as per your taste, Water - 3 cups
	<b>Instructions</b> In microwave safe glass bowl take vegetables and some water and cook. Drain water and in another bowl take cooked vegetables, sugar, paper powder, salt. Mix well and serve hot.	
<b>1-18 Sukhi Moong Dal</b>	300-400 g	Moong dal - 150 g, Onion (chopped) - 2 ea, Water - 1 cup, Ginger garlic paste, salt, turmeric powder, Chili garam masala, coriander powder, cumin powder & pepper powder
	<b>Instructions</b> In microwave safe glass bowl take oil, onion and ginger-garlic paste and cook. When beep add moong dal and all other ingredients with water and press start.	

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>1-19 Vegetable Pasta</b>	200-250 g	Pasta - 200 g, Oil - 1 tbsp., Grated Cheese - 3 tbsp., Pasta Sauce, Spring Onion, Water as per your taste, Salt as required
	<b>Instructions</b> In microwave safe bowl add pasta and water and cook. When beep strain Pasta and mix with all the ingredients and then press start. Serve hot.	
<b>1-20 Chana Chat</b>	200-250 g	Boiled Chana - 100 g, Boiled Potato - 1 ea, Ginger paste - 1 tbsp., Green chili paste - 1 tbsp., Oil - 1 tbsp., Salt, Red chili powder, Pepper, Garam masala, Chat Masala and Lemon juice as per taste, Muster seeds, Cumin and Asafetida for tempering
	<b>Instructions</b> In microwave safe bowl take mustard seeds, cumin, asafetida, oil, green chili paste and ginger paste, mix well and press start, when beep add boiled chana, boiled potato, salt, garam masala, chat masala mix and cook. serve with lemon juice.	

## 2. Vegetables & Rice

Code/Food	Serving Size	Ingredients
2-1 Mutter Paneer	400-500 g	Boiled Mutter - 100 g, Paneer - 200 g, Onions - 2 (paste), Tomato - 2 (puree), Garlic-ginger paste - 1 tsp., Oil - 2 tbsp., Red chili powder, Garam masala, Fresh Cream, Salt, Turmeric, Sugar, Kasoori methi, Coriander as per your taste, Cream - 2 tbsp.
		<p><b>Instructions</b></p> <p>In microwave safe bowl add oil, onions and ginger-garlic paste and cook. When beep add tomato puree, cream, salt, turmeric, sugar, boiled mutter, paneer, kasoori methi (except masala) and then press start.</p>
2-2 Aloo Ghobi	300-400 g	Cut Potatoes - 200 g, Cut Cauliflower - 200 g, Cut Tomatoes - 100 g, Oil - 2 tbsp., Turmeric powder, Coriander powder, Red chili powder, Cumin seeds, Salt, Garam masala, Water as per your taste
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, potatoes, cauliflower. Mix well and cook. When beep, add tomatoes, other ingredients, water and then press start.</p>
2-3 Karela Masala	300-400 g	Karela (Cut small Pieces) - 8/10, Onion Grind - 2 ea, Tomato Puree - 2 ea, Ginger, Garlic Past - 2 tbsp., Coriander Powder, Cumin Powder, Turmeric Powder, Red chili powder, Garam Masala, Salt as per your taste, Oil- 3 tbsp., Cream - 1/4 Cup, Water - 1/2 Cup
		<p><b>Instructions</b></p> <p>In microwave safe bowl take oil, onions and cook. When beeps, add ginger garlic paste, karela pieces and all the spices, add tomato puree, half cup water, cream and then press start. Serve hot with rice.</p>

Code/Food	Serving Size	Ingredients
2-4 Aloo Methi	150-200 g	Aloo (Boiled) - 2 ea, Dry Methi - 1 cup, Green chilies - 2-3 ea, Oil - 2 tbsp., Salt, turmeric, Mustard seeds, Cumin as required
		<p><b>Instructions</b></p> <p>In microwave safe bowl take oil, mustard, cumin, green chilies and cook. When beep, add methi leaves, turmeric, salt and mix well. Press start. After done, add boiled aloo and mix well.</p>
2-5 Kadhi Pakoda	400-500 g	Ghee - 2 tbsp., Gram Flour - 3 tbsp., Curd - 200 g, Water - 300 ml, Salt, Sugar, Cumin, Green Chili, Ginger, Curry Leaves as per your taste, Gram flour for Pakoda - 100 g, Red Chili powder, Turmeric, Ajwain, Salt as per your taste
		<p><b>Instructions</b></p> <p>In bowl take gram flour and add salt, ajwain, red chili powder, little oil to it and make soft dough and make small ball form it. In microwave safe glass bowl add ghee, cumin, curry leave, curd, water, gram flour, sugar, salt, green chili, ginger. Mix well and cook. When beep, add kadhi mixture to prepared ball dough and then press start. Serve hot with rice.</p>
2-6 Dal Tadaka	400-500 g	Soaked Arhar Dal (Soaked for 1 hr) - 200 g, Water - 300 g, Oil - 2 tbsp., Cumin - 1 tbsp., Green Chilies - 2-3 ea, Curry Leaves - 5~6 ea, Salt, Coriander, Cumin Powder, Turmeric, Asafetida, Kasoori methi, Lemon juice as per your taste
		<p><b>Instructions</b></p> <p>In microwave safe bowl take dal, water, turmeric, asafetida. Cover and cook. When beep take oil, cumin, chopped green chilies, curry leaves, salt, coriander, cumin powder, kasurimethi, lemon juice, water and then press start. Garnish with tomato.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>2-7 Lazeez Bhindi</b>	400-500 g	Bhindi (Cut into pieces) - 400 g, Onion (Chopped) - 2 ea, Tomato (Chopped) - 2 ea, Ginger Garlic Paste - 2 tbsp., Coriander Powder, Cumin Powder, Turmeric, Red Chili Powder, Garam Masala, Salt as per your taste, Oil as required, Cream - 2 tbsp.
<b>Instructions</b>		In microwave safe glass bowl take oil, chopped onion, ginger garlic paste and cook. When beep add powder masala, chopped tomato, bhindi, salt, cream and then press start.
<b>2-8 Palak Paneer</b>	400-500 g	Palak Leaves (Spinach) (Boiled & Grinded) - 300 g, Onion (Chopped) - 2 ea, Tomato (Chopped) - 2 ea, Ginger Garlic Paste - 2 tbsp., Paneer - 150 g, Oil - 3 tbsp., Garam Masala, Coriander, Cumin Powder, Salt, Fresh Cream as per your taste
<b>Instructions</b>		In microwave safe glass bowl take oil, chopped onion, ginger garlic paste and cook. When beep add tomato and all the masala, palak paste, paneer and cream. Mix it well and then press start.
<b>2-9 Mixed Masala Vegetable (South Indian Style)</b>	400-500 g	Mix Vegetables (yam, custer beans, white ash guard, white pumpkin, red pumpkin, raw banana, carrots) - 400 g (peeled and cut), 2" pieces fresh coconut - 1 cup, Green Chili - 2~3 ea, Cumin - ½ tsp., Curry Leaves - 7~8 ea, Turmeric - ¼ tsp., Curd - ¼ cup, Coconut oil - 1 tsp., Salt and Sugar as per taste
<b>Instructions</b>		Make paste of coconut, green chili and cumin with little water and keep aside. In microwave safe glass bowl take all the vegetables with some water and cook. When beep strain the vegetables and add coconut oil, curry leaves, turmeric. Mix well and press start. After done add curd, paste of coconut and mix well.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>2-10 Stuffed Tomato</b>	200-300 g	Tomato - 4 ea, Onion (Chopped) - 1 ea, Paneer - ½ cup, Coriander, Cumin Powder, Salt & Sugar as per your taste, Butter - 1 tbsp.
<b>Instructions</b>		Cut tomatoes and scoop out the pulp to have plain tomato cups. Grate paneer then mix coriander, cumin powder and stuff the mixture with tomatoes. In microwave safe glass bowl add butter, chopped onions, tomatoes and cook.
<b>2-11 Sambhar</b>	400-500 g	Arhar Dal/Red Gram - 100 g, Oil - 2 tbsp., Onion - 1 ea (Chopped), Tomato - 1 ea (Chopped), Mix vegetables (drumsticks, ghia/bottle gourd, red pumpkin, brinjal, ladies finger) - 1 cup, Mustard Seeds - 1 tsp., Asafetida - ¼ tsp., Tamarind pulp, Cumin seeds, Green chili, Sambhar masala, Salt as required
<b>Instructions</b>		In microwave safe glass bowl put dal, turmeric powder, onions, green chilies, tomatoes, mixed vegetables and add some water. Cover and cook. When beep, add oil, asafetida, cumin, curry leaves, red chilies, sambhar masala, tamarind pulp, salt, water and then press start.
<b>2-12 Kashmiri Aloo</b>	300-400 g	Small Pealed Potato - 8/10, Onion Grind - 2 ea, Tomato Puree - 2 ea, Ginger, Garlic Paste - 2 tbsp., Coriander Powder, Cumin Powder, Turmeric Powder, Red chili powder, Garam Masala, Salt as per your taste, Oil - 3 tbsp., Cream - ¼ Cup, Water - ½ Cup
<b>Instructions</b>		In microwave safe bowl take water, prick potatoes and cook. When beeps, add oil, onions, ginger-garlic paste, all other ingredients and then press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
2-13 Corn & Shimla Mirch Rice	400-500 g	Soaked Rice 200 g, Corn 50 g, Chopped Simla Mirch - 1 ea, Oil - 2 tbsp., Black cardamom - 2 or 3, Cumin seeds - ½ tsp., Onions - 2 ea (Chopped), Green chili & salt as per your taste
		<b>Instructions</b> In microwave safe glass bowl take oil, black cardamom, cumin seeds, chopped onions, green chili & salt, soaked rice and cook. When beep add water and salt. Mix well and cover and then press start.
2-14 Jeera Aloo	400-500 g	Half boiled potatoes 400 g (cut into finger chips), Cumin seeds - 1 tsp., Turmeric Power - ¼ tsp., Red Chilli Powder - 1 tsp., Oil - 2 tbsp., Salt as per your taste, Chopped Coriander Leaves - 1 tsp.
		<b>Instructions</b> In microwave safe glass bowl take oil, cumin seeds and cook. When beep add all ingredients and then press start. Garnish chopped coriander and serve hot.
2-15 Baigan (Brinjal) Bharta	400-500 g	Bharte Ka Baigan (Brinjal) 300 g, Chopped Onion - 2 ea, Chopped tomato - 2 ea, Ginger Garlic Cloves - 3 to 4 tsp., Oil - 2 tbsp., Red Chili Powder, Cumin Powder, Salt as per your taste, Chop Coriander 2 tbsp.
		<b>Instructions</b> Pierce garlic cloves in brinjal than Keep brinjal on high rack and grill for 20 min. When beep peel & chop the brinjal, keep aside. In microwave safe glass bowl add oil, onion, tomato, all powder masalas, salt and mix chopped brinjal & mix it well and press start. Garnish with chopped Coriander.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
2-16 Dosa Sabji	400-500 g	Boiled potato peeled & chop 300 g., Chopped Onion 2 Nos., Green chili salt, turmeric powder as per your taste, Oil 2 tbsp., Mustard Seeds, Cumin seeds, Curry leaves for tempering
		<b>Instructions</b> In micro wave safe glass bowl take oil, mustard seeds, cumin seeds, curry leaves, green chili, turmeric powder, onion and cook. When beep mix it well and add chopped potato. Mix it well and press start. Garnish with coriander leaves.
2-17 Aloo (Potato) Masala	450-500 g	Chopped Aloo (potato) - 300 g, Onion - 1 ea (Chopped), Tomato - 1 ea (Chopped), Ginger Garlic paste - 1 tsp., Coriander powder - 1 tsp., Cumin powder - ½ tsp., Garam Masala - ½ tsp., Oil - 2 tbsp., Red chili powder, Turmeric powder, salt as per your taste, Chopped coriander leaves, 1 cup of water
		<b>Instructions</b> In microwave safe glass bowl take oil, chopped onion, ginger garlic paste, chopped tomato, chopped potato. Mix well and cook. When beep, add chopped potato, powder masala, 1 cup of water, mix it well and press start. Garnish with coriander leaves.
2-18 Vegetable Biryani	400-500 g	Soaked Basmati Rice 200 g, Water - 400 ml, Ghee - 2 tbsp., Cloves, Cinnamon, Black pepper, Cardamom - 2 pieces, Salt & Sugar as per your taste, Mixed vegetables (cauliflower, peas, french beans & carrot : chopped) - 1 cup
		<b>Instructions</b> In microwave safe glass bowl add ghee, vegetables, all masalas and soaked basmati rice, mix it well and cook. When beep, add water, salt & sugar. Cover it and press start. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
2-19 Khichadi	400-500 g	Soaked Rice - 100 g, Soaked Moong Dal - 50 g, Oil - 1½ tbsp., For Masalas : Coriander powder - 1 tbsp., Cumin seed powder - ½ tbsp., Water - 400 ml, For tempering : Mustard seeds, Asophotida, Green chili, Curry leaves & salt as per your taste
<b>Instructions</b>		
In microwave safe glass bowl take oil & tempering material except salt. Add soaked rice, moong dal and cook. When beep add water and salt, mix it well, cover it and press start.		
2-20 Lemon Rice	400-500 g	Soaked Rice - 150 g., Mustard seeds - ½ tsp., Urad dal - ½ tsp., Grated ginger - 1 tsp., Roasted Daria - 1 tsp., Dry red chili - 2, Curry leaves - 7~8., Turmeric powder - ½ tsp., Lemon juice - 1 tsp., Oil - 2 tbsp., Salt as per your taste, Chopped coriander - 1 tbsp., Water - 350 ml
<b>Instructions</b>		
In microwave safe glass bowl take oil, mustard seeds, urad dal, grated ginger, roasted daria, dry red chili, curry leaves, turmeric powder, lemon juice, salt, soaked rice and cook. When beep add water and salt, mix it well, cover it and press start. Garnish with chopped coriander & serve hot.		

### 3. Sweets & Tandoori

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
3-1 Suji Halwa	200-250 g	Suji - 150 g, Ghee - 4 tbsp., Sugar - ¾ cup., Water - 3 cup, Dry Fruit, Cardamom Powder as per your test
<b>Instructions</b>		
In microwave safe glass bowl take suji, ghee and cook. When beep, add water, sugar, dry fruit & cardamom powder, mix well and press start.		
3-2 Atta Ladoo	300-350 g	Atta - 2 cup, Ghee - 100 g, Powder Sugar - 75 g, Cardamom powder - 1 tbsp., Almonds (Chopped) - ¼ cup
<b>Instructions</b>		
In microwave safe glass bowl add atta, ghee, mix well and cook. When beep stir well and press start. When cool and cardamom powder, sugar powder, mix well and make ladoo.		
3-3 Besan (Bengal Gram flour) Laddoo	300-350 g	Besan (Bengal Gram flour) - 2 cups, Ghee - 100 g, Powder Sugar - 75 g, Cardamom powder - 1 tbsp., Almonds (Chopped) - ¼ cup
<b>Instructions</b>		
In microwave safe glass bowl add besan and ghee, mix well and cook. When beep stir well and press start. When cool and cardamom powder, sugar powder, mix well and make ladoo.		
3-4 Sweet Rice	400-500 g	Soaked Basmati Rice - 200 g, Water - 400 ml, Sugar - 150 g, Lemon Juice - 1 tsp., Almand - 50 g, Resins - 50 g, Cardamom Powder - 1 tsp., Yellow colour a pinch, Ghee - 2 tbsp., Saffron - ¼ tsp.
<b>Instructions</b>		
In microwave safe glass bowl take ghee, soaked basmati rice and water. Cover and cook. When beep, add sugar, lemon juice, almand, resins, cardamom powder, Yellow colour, saffron and press start. Serve hot.		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
3-5 <b>Gajar (carrot) ka Halwa</b>	450-500 g	Grated carrot - 400 g, Milk - 100 g, Khoya - 50 g, Sugar - 100 g, Milk Powder - 50 g, Cardamom powder - 1 tsp., Almonds & resins - 2 tbsp.
<b>Instructions</b>		In microwave safe glass bowl add grated carrot, milk, khoya, milk powder, mix it well and cook. When beep stir well and add sugar, cardamom powder, mix it well and press start. Decorate it with almonds & resins. Serve hot or cold.
3-6 <b>Kalakand</b>	450-500 g	Grated paneer - 300 g, Condensed Milk - 200 g, Milk powder - 3 tbsp., Corn Flour - 1 ½ tbsp., Cardamom powder - 1 tsp., Almond pieces as per your taste
<b>Instructions</b>		In microwave safe glass bowl take grated paneer, condensed milk, milk powder, corn flour, cardamom powder, mix well and cook. When beep stir well and press start. Garnish it with almonds and when set, cut into pieces.
3-7 <b>Shahi Tukda</b>	250-300 g	Bread slice - 4 ea, Condensed milk - 150 ml, Milk - 100 ml, Sugar - 4 tbsp., Almond - pista pieces - 4 tbsp., Saffron & cardamom powder - 1 tsp., ghee-1 tsp.
<b>Instructions</b>		Brush up a little ghee at both the sides of bread slices and arrange bread slices on crusty plate at high rack and cook, keep aside. In an another microwave safe glass bowl add milk, condensed milk, sugar, cardamom powder and saffron, stir well and cook. Garnish with almonds and pistachios. Serve hot.
3-8 <b>Khoya Barfi</b>	450-500 g	Grated Khoya - 300 g, Powdered sugar - 150 g, Milk powder - 2 tbsp., Saffron - ¼ tsp., Cardamom powder - 1 tsp., Almond pieces as per your taste
<b>Instructions</b>		In microwave safe glass bowl take grated khoya, milk powder, saffron & cardamom powder, Mix well and cook. When beep add powdered sugar and stir well and press start. Garnish it with almonds and when set, cut into pieces.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
3-9 <b>Phirani</b>	450-500 g	Rice (soaked in 200 ml. milk for 1 hr.) - 0.3 kg, Milk - 300 ml, Sugar - 200 g, Saffron - 1 tsp., Cardamom powder - 1 tsp., Pista pieces - 1 tbsp.
<b>Instructions</b>		Blend soaked rice with milk. Pour this microwave safe bowl and cook. When beep adds sugar, saffron, cardamom powder, mix it well & press start. Take it out, stir it. When cool, decorate with pista pieces and serve cool.
3-10 <b>Pongal (South Indian Sweet)</b>	350-400 g	Soaked rice - 100 g, Soaked green gram - 50 g, Water - 500 ml, Grated Jaggery - 200 g, Ghee - 50 g, Cardamom powder - 1 tbsp., Dry fruits as per your taste
<b>Instructions</b>		In microwave safe glass bowl put ghee, soaked rice, green gram, water, mix it well, cover it and cook. When beep add jaggery, cardamom powder, dry fruits and press start.
3-11 <b>Shakkarkandi (Sweet Potato)</b>	300-350 g	Shakkarkandi (Sweet Potato) - 200 g, lemon Juice 1 tbsp., Chaat Masala - ½ tbsp., rock salt powder - ½ tsp.
<b>Instructions</b>		Put Shakarkandi on high rack and cook. When beep turn it over and cook. Peel and cut shakkarkandi into small pieces add all other ingredients and serve hot.
3-12 <b>Harabhara Kabab</b>	300-400 g	Boiled Potato (mashed) - 200 g, Mix vegetable (mashed) - 100 g, Ginger garlic paste - 1 tsp., Chili paste - 1 tsp., Salt, Garam masala, Oil and bread crump's as required
<b>Instructions</b>		Mix all the ingredients and make cutlets in desired shape. Place cutlets on crusty plate at high rack and cook. When beeps turn the cutlets and press start. Serve with sauce.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>3-13 Paneer Tikka</b>	250-300 g	Paneer - 200 g, Marinate : Hung Curd - 4 tbsp., Ginger Garlic Paste - 1 ½ tbsp., Red Chili Powder, Garam Masala as per your taste, Lemon Juice - 1 tbsp., Edible Red Color - 1 pinch, Oil - 1 tbsp.
		<b>Instructions</b> Mix all the ingredients of marinate thoroughly. Add paneer pieces and keep it for 2 hrs in a refrigerator. Keep the pieces on crusty plate at high rack. Apply little oil on it and cook. When beep, turn the pieces and then press start. Serve hot with chutney.
<b>3-14 Aloo Tikka</b>	400-500 g	Baby Potato (peeled) - 400 g Curd - ½ cup Ginger garlic paste - ½ tbsp., Coriander powder, cumin powder, red chili powder, kasoori methi, salt & oil as per your test
		<b>Instructions</b> Take peeled aloo, add curd, ginger garlic paste, other spices and salt. Mix them well and put them on crusty plate at high rack, Sprinkle oil and cook. When beep turn potato and press start. Serve hot.
<b>3-15 Tandoori Gobhi</b>	250-300 g	Gobhi (Cut big flowers) - 200 g, Marinate : Hung Curd - 4 tbsp., Ginger Garlic Paste - 1½ tbsp., Red Chili Powder, Garam Masala as per your taste, Lemon Juice - 1 tbsp., Edible Red Color - 1 pinch, Oil - 1 tbsp.
		<b>Instructions</b> Mix all the ingredients of marinate thoroughly. Add gobhi pieces and keep it for 2 hrs in a refrigerator. Keep the pieces on crusty plate at high rack. Apply little oil on it and cook. When beep, turn the pieces and press start. Serve hot with chutney.
<b>3-16 Tandoori Arvi</b>	450-500 g	Arbi - 400 g, Curd - 1 cup, Chat Masala, Salt, Garam Masala, Ginger garlic paste, Red chili powder, Turmeric powder as per your taste, Oil and water required.
		<b>Instructions</b> In microwave safe glass bowl take arbi with some water. Peel the arbi and mix with all ingredients. Keep crusty plate on high rack & place Arbi with Masala on it and cook. When beep turn the Arbi and press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>3-17 Tandoori Sabzi</b>	500-550 g	Mix vegetables - Ladies finger, Dauli flower, Brinjals, Mushroom, Potato, Paneer cubes - 0.5 kg (cut into medium size pieces), Onion paste, Ginger-Garlic Paste, Tomato Puree, Red Chilli Powder, Turmeric Powder, Garam Masala, Salt as per your taste, Oil - 3-4 tbsp., Coriander - For garnishing
		<b>Instructions</b> In microwave safe glass bowl take oil, onion paste, ginger garlic paste, vegetables, red chilli powder, turmeric powder, garam masala, chat masala, salt and tomato puree, mix well and cook. When beep, transfer this mixture on crusty plate and place it at high rack, spread evenly and press start. Serve hot with tandoori nan.
<b>3-18 Tandoori Aloo</b>	250-300 g	Baby Potato - 1 cup, Cream - 1 tbsp., Dried Fenugreek leaves - ¼ tsp., Oil - 1 tbsp., Salt to taste, To be ground into a paste : Kashmiri chili - 4 ea, Garlic - 2 cloves, Ginger - 12 mm (½"), Coriander-cumin seed powder - 2 tsp.
		<b>Instructions</b> In microwave glass bowl add the prepared paste, salt, mix it well and cook. Add potatoes, cream and kasuri methi and press start.
<b>3-19 Vegetable Kabab</b>	8 Kababs	Boiled vegetables - Potato, Cauliflower, Carrot, Green peas - 0.1 kg, Water - 3 tbsp., Cornflour - 1~2 tbsp., Bread crumbs - 1 tbsp., Ginger-Garlic paste - ½ tsp., Chili paste - ½ tsp., Garam Masala - ¼ tsp., Lemon juice, salt, sugar as per your taste
		<b>Instructions</b> Mix boiled vegetables and strained bengal gram, ginger-garlic paste, red chili powder, garam masala, coriander-cumin powder, salt, bread crumbs, coriander leaves together. Apply little oil to your palms and shape as desired like tikki balls and roll over with corn flour. Cutlet rolls, brush with little oil. Place kebabs on crusty plate at high rack and cook. When beep, turn kababs and press start. Serve it with chutney and salads.

Code/Food	Serving Size	Ingredients
3-20 Stuffed Mushroom	200-250 g	Mushroom - 150 g, cottage cheese- 3 tbsp., Grated cheese - 2 tbsp., corns - 1 tbsp., corn flour- 2 tbsp., lemon juice- 1 tbsp., red chilli powder- ¼ tsp., garam masala- ½ tsp., Salt as per your taste, Butter - 2 tbsp.  <b>Instructions</b> Hollow the mushrooms and marinate with lemon juice, salt, red chilli powder, butter and garam masala, keep aside for 15 minutes. In another bowl mix cottage cheese, grated cheese and corn and season as per taste. Stuffed the mushrooms with cottage cheese mixture and coat with corn. (flour mixed in very less water.) Grease the crusty plate with some butter and place the mushrooms on it, brush up a little butter on mushrooms and put the crusty plate on high rack and cook. When beep brush up a little more butter and cook.

#### 4. Continental

Code/Food	Serving Size	Ingredients
4-1 Cheese Cutlet	8 ea	Potatoes - 4 ea (boiled), Cottage cheese - 200 g, Chopped coriander - 2 tbsp., Chopped green chili - 1 tsp., Chopped onion - 1 ea, Chopped cabbage - 2 tbsp., Bread crumbs - 4 tbsp., Oil for applying, Salt as per your taste  <b>Instructions</b> Mash the potatoes very well, add all ingredients, mix it well and shape the cutlet as you wish. Take it on crusty plate at high rack, applying oil and cook. When beep, turn the pieces and press start.

Code/Food	Serving Size	Ingredients
4-2 Tomato Basil Soup	300-400 g	Chopped tomato - 4 ea, Fresh basil leaves -20~25, Crushed peppercorns - 10~15, Chopped onion - 1 ea, Chopped garlic - 7~8, Celery sticks finely chopped - 2 tbsp., Corn flour - 2 tbsp. (dissolve in 1 cup of water), Salt and Sugar as per your taste, Water - 3 cups, Olive oil - 2 tbsp.

Code/Food	Serving Size	Ingredients
4-3 Vegetable Chowmein	400-450 g	Noodles - 200 g, Water - 2 cups, Mix Vegetables - 100 g, Soya Sauce, Chili Sauce, Viengar, Salt & Pepper as per your taste, Oil as required

Code/Food	Serving Size	Ingredients
4-4 Risotto Rice	450-500 g	Basmati Rice (soaked) - 150 g, Spinach (chopped) - 100 g, Butter - 3 tbsp., Chopped onion - 2 ea, Chopped Garlic - 2 tsp., Grated cheese - 3 tbsp., Salt & Pepper as per your taste, Water - 300 ml

Code/Food	Serving Size	Ingredients
4-4 Risotto Rice	450-500 g	Basmati Rice (soaked) - 150 g, Spinach (chopped) - 100 g, Butter - 3 tbsp., Chopped onion - 2 ea, Chopped Garlic - 2 tsp., Grated cheese - 3 tbsp., Salt & Pepper as per your taste, Water - 300 ml  <b>Instructions</b> In microwave safe glass bowl take butter, onion, garlic and cook. When beep add spinach (chopped) soaked rice, water, salt & pepper and mix well. Cover and press start. Garnish with grated cheese and serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>4-5 Potato Dumpling</b>	200-250 g	Boiled & Grated Potatoes - 2 ea, Grated Paneer - 2 tbsp., Chopped Spinach - ½ cup, Chopped Green Chili - 1 tsp., Maida - 2~3 tbsp., Baking Powder - 1 pinch, Nutmeg Powder - 1 pinch, Salt & Pepper as per your taste, Butter - 1 tbsp., Chopped Garlic - 1 tbsp., Pizza Sauce - ½ cup, Grated Cheese - 3 tbsp.
		<b>Instructions</b> Mix grated potatoes, paneer, spinach, green chili, maida, baking powder, nutmeg powder, salt & pepper together and make 10-12 balls from it, place them in MWO steamer and cook. When beep, in other microwave safe bowl take butter, chopped garlic, steamed balls, cheese, pizza sauce, mix well and press start.
<b>4-6 Baked Vegetables</b>	350-400 g	Half boiled vegetables (carrot, cauliflower, french beans - cut into small pieces, sweet corn & green peas etc.) - 300 g, Plain flour - 2 tbsp., Butter - 2 tbsp., Milk - 2 cups, Water - ½ cup, Grated cheese - 5 tbsp., Salt, sugar, pepper as per your taste
		<b>Instructions</b> In microwave safe glass dish take butter, vegetables, plain flour, milk, water, salt, sugar and pepper, mix well and cook. When beep mix it well & spread grated cheese on it. Keep the dish on high rack and press start. Serve hot.
<b>4-7 Cheese Cabbage Rice</b>	350-400 g	Soaked rice - 1 cup, Cabbage - 50 g (chopped), Capsicum - 1 ea (chopped), corn - 50 g, Grated cheese - 100 g, chopped coriander - 2 tbsp., Water - 3 cup, Black pepper powder - ¼ tsp., Salt & Sugar as per your taste, Butter - 2 tbsp.
		<b>Instructions</b> In microwave safe glass bowl take butter, rice, chopped cabbage, chopped capsicum, corn, black pepper powder, salt, sugar, mix well and cook. When beep add all other ingredients and press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>4-8 Noodles with Tomato and Cheese Sauce</b>	400-450 g	Ribbon noodles - 250 g, Tomato sauce - ½ cup, Pizza sauce - ½ cup, Cheese sauce - 1 cup, Oil - 2 tbsp., Grated cheese - 2 tbsp., Salt, sugar & pepper as per your taste, Fresh Cream - 2 tbsp., Oregano - ½ tsp., Water - 4 cups
		<b>Instructions</b> In microwave safe glass bowl add noodles, oil and cook. When beep drain & keep a side. In another bowl add tomato sauce, pizza sauce, cheese sauce, fresh cream, salt, sugar & pepper, mix it well and add boiled noodles, sprinkle cheese and press start. Serve hot.
<b>4-9 Macaroni Hot Pot</b>	250-300 g	Shell Macaroni - 200 g, Chopped Onion - 2 ea, Chopped capsicum - 1 ea, Chopped Tomato - 2 ea, Chopped Garlic - 1 tsp., Red chili powder - ½ tsp., One small can baked beans - 200 g, Tomato ketchup - 6 tbsp., Grated cheese - 4 tbsp., Butter - 1 tbsp., Salt as per your taste, Oil - 1 tbsp., Water - 4 cups
		<b>Instructions</b> In microwave safe glass bowl add shell macaroni, oil, water and cook. When beep drain & keep a side. In another bowl add butter, salt, onion, capsicum, tomato, garlic cloves, chili powder, cheese, baked beans and press start. When beep add macaroni, mix it well and serve hot.
<b>4-10 Macaroni Supreme</b>	300-350 g	Macaroni - 200 g, White sauce - 2 tsp., Chopped Parsley - 4 tbsp., Nutmeg powder - 1 pinch, Oregano - ½ tsp., Grated cheese - 50 g, Chopped tomato - 1 ea, Butter - 1 tbsp., Oil - 1 tbsp., Salt & pepper as per your taste
		<b>Instructions</b> In microwave safe glass bowl add shell macaroni, oil, water and cook. When beep drain & keep a side. In another bowl add butter, salt, nutmeg powder, oregano, parsley, white sauce, mix well. Add macaroni, cover with cheese and press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>4-11 Pasta</b>	400-450 g	Penne Pasta - 200 g, Chopped onion - 2 tbsp., Chopped garlic - 2 tsp., Chopped spinach - 75 g, Cream - 1 cup, Grated cheese - 3 tbsp., Butter - 2 tbsp., Nutmeg Powder - 1 pinch, Oregano - ½ tsp., Salt & pepper as per your taste, Oil - 1 tbsp., Water - 3 cups
<b>Instructions</b>		In microwave safe glass bowl take pasta, water, oil and When beep drain the water & keep a side. In another bowl add butter, chopped onion, chopped garlic, spinach, cream, nutmeg powder, salt, pepper powder, oregano, mix it well and press start. After done pasta & cheese, mix it well & serve hot.
<b>4-12 Corn &amp; Potato Baked</b>	300-350 g	Boiled sweet corn - 100 g, Boiled Potatoes - 2 ea, Finely chopped onion - 1 ea, Finely chopped green chili - 2 ea, Grated cheese - 4 tbsp., White sauce - 1 cup, Fresh cream - 2 tbsp., Butter - 2 tbsp., Salt & Pepper as per you taste
<b>Instructions</b>		In microwave safe glass dish take butter, onion, green chili and cook. When beep add white sauce, chopped potatoes, sweet corn, fresh cream, salt, pepper, mix it well and sprinkle cheese. Transfer it on high rack and press start. Serve hot.
<b>4-13 Vegetable Au Gratin</b>	500-550 g	Vegetables (carrot, cauliflower, peas, french beans : cut into bite size pieces) - 300 g, Oil or butter - 2 tbsp., White sauce - 1 cup, Pepper - 1 tsp., Cream - 100 g (½ cup), Water - ½ cup, some chopped celery or coriander leaves for garnishing
<b>Instructions</b>		In microwave safe bowl butter, mix vegetables, water and cook. When beep add all other ingredients and press start. Sprinkle chopped celery or coriander and serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>4-14 Vegetable in Thai Curry</b>	500-600 g	For green paste : Green chillies - 6~8, Spring onions - 3 ea (chopped along with the green part), Lemon grass leaves - 4 (optional), Ginger - 2" piece, Coriander leaves - 3 tbsp., For main dish : Coconut milk - 1½ cups, Salt - 1½ tsp., A tiny piece of jaggery, Coriander powder - 1 tbsp., Cumin powder - 1 tbsp., Oil - 2 tbsp., Chopped mix vegetable (carrot, cabbage, peas ) - 1 cup
<b>Instructions</b>		In grinder prepare green paste. Churn grated one coconut in mixer. In microwave safe glass bowl add vegetables, oil and cook. When beep add salt jaggery and coconut milk. Mix well & press start.
<b>4-15 Vegetable Ala Kiev</b>	550-600 g	Mix vegetable (cauliflower, peas, cabbage : cut into long pieces 18-20) - 350 g, French beans cut into 1 piece, Carrots - 2 (medium size, cut into 1 piece), Celery - 2 (chopped fine), Capsicums (cut into ¼" pieces) - 2, Milk - ½ cup, Maida - 2 tbsp., Pepper - 1 tsp., Mustard powder - 1 tsp., Salt - 1 tsp., Grated cheese (Amul) - 4 tbsp.
<b>Instructions</b>		In microwave safe glass bowl mix vegetable, cauliflower, peas, carrots, celery and french beans & add 2-3 tbsp. water, cover and cook. When beep add all ingredients and press start. Add grated cheese. Garnish with parsley or coriander.
<b>4-16 Mushroom Gratin</b>	500-550 g	Mushrooms quartered (cut into 4 pieces each) - 200 g, Oil or butter - 2 tbsp., Maida (flour) - 2 tbsp., Salt - 1 tsp., Pepper - 1 tsp., Rum or sherry (optional) - 1 tsp., Cream - 100 g (½ cup), Water - ½ cup, Some chopped celery or coriander leaves for garnishing
<b>Instructions</b>		In microwave safe plate butter, maida and cook. When beep add all other ingredients, mix well and press start. Sprinkle chopped celery or coriander and serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
4-17 Cheese Straw	200 g	Refined flour - 100 g, Grated cheese - 25 g, Butter-50 g, Cold water as required, Pepper powder - ¼ tsp., Baking powder - ½ tsp., Chili powder - ½ tsp., Salt - ¼ tsp.
		<p><b>Instructions</b></p> <p>Pre-heat the oven 180 °C with the convection function. Sieve refined flour, pepper powder, baking powder, chili powder, salt. In a bowl maida, butter, cheese &amp; rub it with finger chips till it resembles bread crumbs. Add little cold water to make a soft dough. Roll it in ½ cm. roti and cut thin strips, twist them &amp; put on the baking tray. Put them on crusty plate at low rack. When beep, select menu and cook.</p>
4-18 Almond Muffins	350 g	Refined flour - 115 g, Margarine - 85 g, Egg - 2 ea, Baking Powder - 1 tsp., sugar powder- 115 g, Milk - 50 ml, Almond essence - ¼ tsp., Crushed almond & walnut - 4 tbsp.
		<p><b>Instructions</b></p> <p>Pre-heat the oven 180 °C with the convection function. Cream margarine and sugar until light and fluffy. Blend in beaten egg and sieve together flour and baking powder. Add alternately and mixing well after each addition, add crushed almond, walnut, almond essence. Put into greased muffin trays and put them on low rack. When beep, select menu and cook.</p>
4-19 Orange Muffins	12 ea	Refined flour - 115 g, Margarine - 85 g, Egg - 2 ea, Orange Juice - 20 ml, Baking Powder 1 tsp., powdered sugar - 115 g, Milk - 50 ml, Orange rind (Chopped finely) - 1 tsp. and orange squash- 50 ml
		<p><b>Instructions</b></p> <p>Pre-heat the oven 200 °C with the convection function. Cream margarine and sugar until light and fluffy. Blend in beaten egg and orange rind. Sieve together flour and baking powder. Add alternately orange squash and orange juice mixing well after each addition. Put into greased muffin trays and put them at low rack. When beep, select menu and cook.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
4-20 Pasta in Pesto Sauce	400-450 g	Fussily Pasta - 200 g, Oil - 1 tbsp., Cream - 1 cup, Grated cheese - 3 tbsp., Butter - 2 tbsp., Oregano - ½ tsp., Salt & pepper as per your taste, Olive Oil - 1 tbsp., Pesto Sauce - 4 tbsp., Water - 3 cups
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take Pasta with water, oil and cook. When beep drain the water &amp; keep a side. In another bowl add butter, olive oil, pasta, cream, salt, pepper powder, oregano, cheese, pesto sauce. Mix it well &amp; press start. Serve hot.</p>

## 5. Cake & Confectionery

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
5-1 Butter Sponge	450-500 g	Refined flour - 120 g, Margarine - 90 g, Egg - 2 ea, Powder Sugar - 120 g, Baking Powder - 1 tsp., Milk as required, Vanilla essence - ¼ tsp.
		<p><b>Instructions</b></p> <p>Pre-heat the oven 200 °C with the convection function. Grease and dust 8" cake tin. Sieve flour with baking powder thrice. Cream margarine and powdered sugar until light and fluffy. Beat egg and add to the creamed mixture little by little beating thoroughly between each addition. Fold in the shifted flour a little at a time. Adjust consistency of the batter with milk to get a dropping consistency. Put it in cake tin at low rack, when beep select menu and cook.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
5-2 <b>Mawa Cake</b>	400-450 g	Refined flour - 85 g, Margarine - 70 g, Egg - 2 ea, Powder Sugar - 100 g, Baking Powder - ¼ tsp., Mava - 30 g, Butter - 30 g, Cardamom powder - ¼ tsp., Nutmeg - ¼ tsp.
		<b>Instructions</b> Pre-heat the oven 180 °C with the convection function. Grease and dust 7" cake tin. Sieve flour with baking powder. Cream margarine, butter and powdered sugar until light and fluffy. Beat egg and add grated mava mixing will be between each addition. Fold in floursifted with baking powder & spice. Check consistency & pour into greased & lined 7" mould. Put it on low rack, when beep select menu and cook.
5-3 <b>Chocolate Cake</b>	450-500 g	Refined flour - 115 g, Margarine - 55 g, Egg - 2 ea, Powder Sugar - 85 g, Baking Powder - 1 tsp., Soda Bicarb - ½ tsp., Milk as required, Cocoa powder - 2 tbsp., Chocolate essence - 1 tsp.
		<b>Instructions</b> Pre-heat the oven 200 °C with the convection function. Grease and dust 8" cake tin. Sieve flour with baking powder, cocoa powder & soda bicarb. Cream butter & sugar until light & fluffy. Add egg & beat in well. Add essence & fold in refined flour with sufficient milk to make a soft consistency. Pour in a greased & lined cake tin. Put it on low rack, when beep select menu and cook.
5-4 <b>Date &amp; Walnut Cake</b>	450-500 g	Refined flour - 115 g, Margarine - 90 g, Egg - 2 ea, Powder Sugar - 115 g, Baking Powder - ½ tsp., Soda Bicarb - ¼ tsp., Seedless Date - 100 g, Walnut - 50 g, Milk as required, Vanilla essence - ½ tsp.
		<b>Instructions</b> Pre-heat the oven 180 °C with the convection function. Grease and dust 8" cake tin, Sieve flour with baking powder & soda bicarb. Cream butter & sugar until light & fluffy. Add egg & beat in well. Add essence. Fold in the flour alternating with chopped dates & walnut. Adjust consistency with milk. Put it in greased & lined cake tin. Put it on low rack. When beep, select menu and cook.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
5-5 <b>Banana Bread</b>	450 g	Refined flour - 225 g, Margarine - 125 g, Egg - 2 ea, Powder Sugar - 200 g, Baking Powder - ½ tsp., Soda Bicarb - 1 tsp., Riped Banana - 3 ea, Walnut - 50 g, Milk as required, Vanilla essence - 1 tsp.
		<b>Instructions</b> Pre-heat the oven 180 °C with the convection function. Grease and dust 10" cake tin, Sieve flour with baking powder & soda bicarb. Cream butter & sugar until light & fluffy. Beat egg separately. Add gradually to creamed mixture, beating well all the time. Add mashed banana with 1 table spoon of flour. Mix well. Fold in flour. Add chopped walnuts. Pour into a greased loaf tin. Put it on low rack, When beep, select menu and cook.
5-6 <b>Victoria Sponge Cake</b>	450-500 g	Refined flour - 170 g, Margarine - 170 g, Egg - 3 ea, Powder Sugar - 170 g, Baking Powder - 1½ tsp., Milk - ½ cup, Vanilla essence - 1 tsp.
		<b>Instructions</b> Pre-heat the oven 200 °C with the convection function. Grease and dust 9" cake tin, Sieve flour with baking powder. Cream butter & sugar until light & fluffy. When the mixture is light & creamy, add the egg, one at a time, beating each time thoroughly. If the mixture curdles while adding the egg, add a little flour before adding the next egg. Finally fold the flour & add the milk until the mixture forms a dropping consistency. Add the vanilla essence. Mix well. Pour the mixture into the prepared tin. Put it on low rack, When beep, select menu and cook.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>5-7 Brownie</b>	400-450 g	Refined flour - 100 g, Butter - 75 g, Egg - 2 ea, Chopped Almonds - 3 tbsp., Powder Sugar - 80 g, Baking Powder - 1 tsp., Milk - ¼ cup, Chocolate essence - 1 tsp., Cocoa powder - 2 tbsp., Water - ½ cup
<b>Instructions</b>		
<p>Pre-heat the oven 200 °C with the convection function. Grease and dust 8" cake tin. Sieve flour with baking powder. Mix cocoa powder with half cup of hot water. In a bowl add powder sugar &amp; butter &amp; beat well. Add egg &amp; essence &amp; again beat well. Add almonds to Refined flour, mix well, add maida mix with butter mixture. Add cocoa solution to it &amp; again mix well. For spoon dropping consistency add milk. Pour the mixture in a greased tin. Put it on low rack, When beep, select menu and cook.</p>		
<b>5-8 Swiss Roll</b>	200-250 g	Refined flour - 80 g, Condensed Milk - 100 g, Butter - 50 g, Soda Bicarb - 1/8 tsp., Baking Powder - ½ tsp., Milk - ½ cup, Vanilla essence - ½ tsp., Mix Fruit Jam - 2 tbsp.
<b>Instructions</b>		
<p>Pre-heat the oven 200 °C with the convection function. Grease and dust Square cake tin of 8", Sieve flour with baking powder &amp; Soda. In a bowl add condensed milk &amp; butter, beat well, add refined flour, essence &amp; for spoon dropping consistency. Place the butter paper at the bottom of the tray &amp; pour the batter on it. Put it on low rack, When beep, select menu and cook. Remove this cake on another butter paper &amp; spread mix fruit jam over it. Roll it &amp; cut slices.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>5-9 Marble Cake</b>	450-500 g	Refined flour - 150 g, Condensed Milk - 200 g, Butter - 100 g, Soda Bicarb - ½ tsp., Baking Powder - 1 tsp., Vanilla essence - 1 tsp., Cocoa Powder - 2 tbsp., Milk or water as required
<b>Instructions</b>		
<p>Pre-heat the oven 200 °C with the convection function. Sieve refined flour, baking powder &amp; soda. In a bowl add condensed milk &amp; butter &amp; beat well. Add refined flour, essence &amp; mix. For spoon dropping consistency add milk or water. Divide the mixture in two parts. Add cocoa powder in one part. Put the plain batter &amp; cocoa batter alternately in the tin. Run a spoon through the batter, put it on low rack, when beep select menu and cook.</p>		
<b>5-10 Coconut Toffee</b>	300-350 g	Condensed Milk - 200 g, Fresh grated coconut - 1 cup, Chopped walnut - 100 g, Ghee - 2 tbsp.
<b>Instructions</b>		
<p>In microwave safe glass bowl mix the condensed milk, coconut and cook. When beep, add ghee and press start. After done add the chopped walnuts &amp; mix well. Spread the mixture on a well greased tin. Press &amp; level by pressing with a wet cloth. After 5 min. mark into small pieces. Remove when cold.</p>		
<b>5-11 German Biscuits</b>	400-450 g	Refined flour - 170 g, Butter - 115 g, Powder sugar - 60 g, Cashew nut powder - 60 g, Almond essence - ¼ tsp.
<b>Instructions</b>		
<p>Pre-heat the oven 180 °C with the convection function. Sieve the flour, cream butter &amp; sugar very well until light &amp; creamy. Add the Almond essence &amp; beat. Add cashew nut &amp; sieved refined flour &amp; mix well. The mixture will form into a dough. Roll into sticks &amp; shape into a circle. Arrange this on baking tray. Put it on low rack, When beep, select menu and cook. Cool the biscuits. Serve them.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>5-12 Coconut Cookies</b>	200-250 g	Refined flour - 85 g, Margarine or butter - 55 g, Desiccated coconut - 40 g, Powder sugar - 55 g, Water - 2 tsp.
		<p><b>Instructions</b></p> <p>Pre-heat the oven 180 °C with the convection function. Cream the margarine &amp; sugar very well until light &amp; creamy. Add 2 tsp. of water. Sieve the flour &amp; add to the creamy mixture. Add the desiccated coconut &amp; mix well. Shape the biscuit as you wish. Arrange them on a baking tray. Put it on low rack, When beep, select menu and cook.</p>
<b>5-13 Cumin Biscuits</b>	200 g	Refined flour - 120 g, Powder sugar - 1 tbsp., Butter - 50 g, Cumin & ajwain powder - 1 tsp. each, Soda bi carb - 1 pinch, Baking powder - 1/4 tsp., Water as required
		<p><b>Instructions</b></p> <p>Pre-heat the oven 180 °C with the convection function. Sieve refined flour, baking powder &amp; soda bi carb in a bowl, add powder sugar &amp; butter &amp; beep well. Add refined flour, cumin &amp; ajwain powder &amp; little water, make a soft dough. Roll a thick roti &amp; cut cookies with the cutter. Prick with a fork. Arrange on cookie tray and place it on low rack, select menu and cook.</p>
<b>5-14 Chocolate Cookies</b>	200-225 g	Refined flour - 115 g, Margarine or butter - 60 g, Powder sugar - 60 g, Vanilla essence - 1/2 tsp., Baking powder - 1/2 tsp., Cocoa powder - 1 tbsp., Golden syrup - 1 tbsp.
		<p><b>Instructions</b></p> <p>Pre-heat the oven 160 °C with the convection function. Sieve the flour with cocoa &amp; baking powder together. Cream the margarine &amp; sugar very well until light &amp; creamy. Add the vanilla essence &amp; golden syrup &amp; beat very well. Add the flour to the mixture &amp; mix it well. Shape the biscuit as you wish. Arrange them on a baking tray. Put it on low rack, When beep, select menu and cook.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>5-15 Jam Biscuits</b>	200-250 g	Refined flour - 115 g, Margarine or butter - 60 g, Powder sugar - 60 g, Vanilla essence - 1/2 tsp., Cornflour - 25 g, Salt - 1 pinch, Milk as required, Jam
		<p><b>Instructions</b></p> <p>Pre-heat the oven 160 °C with the convection function. Sieve the flour, salt &amp; cornflour together. Rub in the margarine with finger tips. Add the sugar &amp; mix well. Add just enough milk to make a dough. Roll out the dough into about 6 mm (1/4") thickness. Cut with a round biscuit cutter. In every alternate biscuit, make a hole in the centre with about 12 mm (1/2") nozzle. Arrange them on a baking tray. Put it on low rack, When beep, select menu and cook. Cool the biscuits. Make pairs of one biscuit with hole and one without and sandwich with jam.</p>
<b>5-16 Melting Moments</b>	200-250 g	Refined flour - 85 g, Margarine or butter - 85 g, Powder sugar - 100 g, Vanilla essence - 1/2 tsp., Cornflour - 25 g, Milk as required
		<p><b>Instructions</b></p> <p>Pre-heat the oven 180 °C with the convection function. Sieve the flour &amp; cornflour together. Cream the margarine &amp; sugar very well until light &amp; creamy. Add the flour. If required, add a few drops of milk. Mix very well. Shape the biscuit as you wish. Arrange them on a baking tray. Put it on low rack. When beep, select menu and cook. Cool the biscuits. Serve them.</p>
<b>5-17 Shrewsbury Biscuits</b>	400-450 g	Refined flour - 225 g, Margarine or butter - 100 g, Powder sugar - 85 g, Lemon essence - 1/4 tsp., Egg - 1 ea, Milk as required
		<p><b>Instructions</b></p> <p>Pre-heat the oven 180 °C with the convection function. Sieve the flour. Cream the margarine &amp; sugar very well until light &amp; creamy. Add the egg &amp; mix it well. Add the sieved flour. If required add a little milk to make a dough. Knead until smooth. Roll out thinly. Prick all over with a fork. Stamp into round. Place the biscuits on a baking tray. Put it on low rack. When beep, select menu and cook. Cool the biscuits. Serve them.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
5-18 Almond Cookies (Pistachio)	250-300 g	Refined flour - 115 g, Margarine or butter - 50 g, Powder sugar - 50 g., Cardamom powder - ¼ tsp., Nutmeg powder - ¼ tsp., Chopped almond - 1 tbsp., Chopped Pistachio - 1 tbsp., Little saffron, Milk as required
<b>Instructions</b>		Pre-heat the oven 180 °C with the convection function. Sieve the flour. Cream the margarine & sugar very well until light & creamy. Add the saffron, cardamom & nutmeg powder & mix very well. Add the sieved flour & make a dough. Roll out the dough using a little flour. Sprinkle a few nuts & give a light final roll. Cut into desired shape. Put it on cookie tray at low rack, When beep, select menu and cook. Cool the biscuits. Serve them.
5-19 Choco - Cashew Biscuits	250-300 g	Refined flour - 85 g, Margarine or butter - 85 g, Powder sugar - 85 g, Cashew nut powder - 85 g, Almond Essence - ¼ tsp., Cocoa - 1 tbsp.
<b>Instructions</b>		Pre-heat the oven 180 °C with the convection function. Sieve the flour. Cream the margarine & sugar very well until light & creamy. Add the Almond essence & mix very well. Add the flour, cocoa & cashew nut mix well, chill the mixture for 10 min. Roll out & cut out with round biscuit cutter. Put it on cookie tray at low rack. When beep, select menu and cook. Cool the biscuits. Serve them.
5-20 Kesar Nankatai	400 g	Refined flour - 100 g, Powder sugar - 100 g, Ghee - 100 g, Semolina - 100 g, Cardamom powder - ½ tsp., Nutmeg powder - ½ tsp., Fresh curd - 1 tsp., Soda Bicarb - ¼ tsp., Saffron - ¼ tsp., Milk - 1 tsp.
<b>Instructions</b>		Pre-heat the oven 180 °C with the convection function. Sieve the flour. Cream the ghee & sugar very well until light & creamy. Add the cardamom & nutmeg powder & cream it again. The saffron dissolve in a 1 tsp. of milk. Add the curd, soda bicarb & prepared saffron. Mix well. Add the flour & semolina & knead well. Make a small round. Arrange them on a baking tray. Put it on low rack, When beep, select menu and cook. Cool the biscuits. Serve them.

The following table presents the various **Indian Recipe** (Non-Veggie) programmes and appropriate Instructions.

## 6. Soups & Snacks

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
6-1 Chicken Shorba	300-400 g	Boneless Chicken - 100 g, Chopped Onion - 1 (medium size), Chopped Garlic - 4~5 cloves, Oil - 1 tbsp., Cumin Seeds - ½ tsp., Water - 1 cup, Coconut Milk - 1 cup, Peppercorns - 5~6, Salt as per taste, Cream - ¼ cup, Chopped Coriander Leaves - 2 tbsp.
<b>Instructions</b>		In microwave safe glass bowl add oil, chopped onion, garlic cloves, cumin seeds & chicken, peppercorns. Mix well and cook. When beep add all the other ingredients, mix it well and press start.
6-2 Chicken Soup	350-400 g	Boneless Chicken - 150 g, Ginger paste - 1 tsp., Garlic paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
<b>Instructions</b>		In microwave safe glass bowl add oil, chicken in small pieces, ginger paste, garlic paste, corn flour paste & water, mix it well and cook. Serve hot.
6-3 Crab Soup	400-450 g	Crab - 150 g, Ginger paste - 1 tsp., Garlic paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 350 ml
<b>Instructions</b>		In microwave safe glass bowl add oil, crab, ginger paste, garlic paste, corn flour paste & water, mix it well. Mix it well and cook. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
6-4 Chicken Corn Soup	450-500 g	Boneless Chicken - 100 g, Crushed Corn - 50 g, Ginger Paste - 1 tsp., Garlic Paste - 1 tsp., Salt & Pepper Powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
<b>Instructions</b>		In microwave safe glass bowl add oil, chicken in small pieces, crushed corn, ginger paste, garlic paste, corn flour paste & water, mix it well and cook. Serve hot.
6-5 Chicken Manchow Soup	450-500 g	Boneless Chicken - 150 g, Ginger, Garlic, Green Chili - 1 tbsp.(small pieces), Salt & Pepper Powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Vinegar - 1 tsp., Chili sauce - ½ tsp., Soya sauce - ½ tbsp., Oil - 2 tbsp., Water - 350 ml
<b>Instructions</b>		In microwave safe glass bowl add oil, chicken in small pieces, ginger, garlic, green chili pieces, corn flour paste & chili sauce, soya sauce & vinegar, water, mix it well and cook. Serve hot.
6-6 Sea Food Soup	300-350 g	Water - 200 ml, Prawns - 100 g, Ginger, Garlic, Green Chili - 1 tbsp. (small pieces), Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp. (dissolve in ½ cup of water), Oil - 2 tbsp.
<b>Instructions</b>		In microwave safe glass bowl add oil, chicken in small pieces, ginger, garlic, green chili pieces, corn flour paste & water, mix it well and cook. Serve hot.
6-7 Mutton Soup	300-350 g	Boneless Mutton - 150 g, Ginger paste - 1 tsp., Garlic Paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
<b>Instructions</b>		In microwave safe glass bowl add oil, mutton in small pieces, ginger paste, garlic paste, corn flour paste & water, mix it well, cook. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
6-8 Herb Chicken Soup	350-400 g	Boneless Chicken - 150 g, Chopped Celery - 1 tbsp., Chopped Parsley - 1 tbsp., Oregano - ½ tsp., Chopped Coriander - 1 tbsp., Ginger Paste - 1 tsp., Garlic Paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
<b>Instructions</b>		In microwave safe glass bowl add oil, chicken in small pieces, ginger paste, garlic paste, chopped celery, chopped parsley, oregano, chopped coriander, corn flour paste & water, mix it well and cook. Serve hot.
6-9 Tom Yum Chicken Soup	300-350 g	Chopped Boneless Chicken - 150 g, Fresh Coriander Leaves a few springs, Green or Fresh red chili - 3-4, Lemon Grass - 4 inches stalk, Lime leaves - 4-5, Salt as per your taste, Thai red curry paste - 2 tbsp., Lemon juice - 2 tbsp., Water - 350 ml
<b>Instructions</b>		In microwave safe glass bowl add water, boneless chicken, lemon grass, lime leaves & 2 red or green chili, salt, oil, thai red curry paste, lemon juice & cook. Serve hot.
6-10 Chicken Chowmein	400-450 g	Noodles - 200 g, Water - 2 cups, Boiled Boneless Chicken -100 g, Soya Sauce, Chili Sauce, Vinegar, Salt & Pepper as per your taste, Oil as required
<b>Instructions</b>		In microwave safe glass bowl take noodles and 2 cups water and cook. When beep, drain all the water from it & keep noodles a side. In other microwave safe glass bowl take oil & boneless chicken and press start. After done add all ingredients with noodles mix well & serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>6-11 Chicken Pizza</b>	200-250 g	Pizza Base - 100 g, Pizza Sauce - 3 tbsp., Boiled Boneless Chicken - 100 g, Grated Cheese - ½ cup, Chili Flakes as per your taste, Oregano for seasoning, butter-1 tbsp.
		<b>Instructions</b> Pre-heat the oven 200 °C with the convection function. Spread the butter at both the sides of pizza base than add pizza sauce, boneless chicken, cheese on pizza base. Put the pizza on crusty plate and place it on low rack. When beep select menu and cook. Serve with oregano and chili flakes on top.
<b>6-12 Fish Pepper</b>	350-400 g	Fish slice - 300 g, Salt, Lemon juice, Pepper powder as per your taste, Oil - 3 tbsp., Chopped Onion - 4 tbsp., Chopped Tomato - 3 tbsp., Chopped Garlic - 2 tsp., Water as required, Coriander leaves - 1 tbsp.
		<b>Instructions</b> Marinate fish slice with salt, lemon juice & pepper powder for one hour. In microwave safe bowl put oil, chopped onion, chopped tomato, chopped garlic & cook. When beep add marinated fish, salt to taste & ¼ cup of water and press start. Garnish with chopped coriander leaves.
<b>6-13 Lemon Chicken</b>	400-450 g	Boneless Chicken - 300 g, Lemon juice - 3 tbsp., Salt as per your taste, Honey - 3 tsp., Pepper powder - 1 tsp., Olive Oil - 2 tbsp., Corn Flour - 2 tbsp., Corn Flour Paste - 2 tbsp. (dissolve in ½ cup of water), Chopped Coriander leaves - 1 tbsp.
		<b>Instructions</b> Marinate chicken with pepper powder, salt, lemon juice & keep for one hour in refrigerator. In microwave safe bowl take olive oil, marinated chicken & mix it well, and cook. When beep, add honey, corn flour paste & press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>6-14 Kheema Ball</b>	300-350 g	Boiled Chicken Kheema - 175 g, Boiled & Mashed Potato - 3 ea, Ginger, Garlic paste, Salt, Garam Masala, Coriander, Lemon juice as per your taste, Bengali Gram powder - 2 tbsp.
		<b>Instructions</b> Mix all the ingredients together. Make balls from it. Place the balls greased microwave multiple pan on 2nd level and cook. When beep turn over the balls and cook, serve hot.
<b>6-15 Chili Chicken</b>	300-350 g	Boneless Chicken - 250 g, Chopped Ginger - ½ tsp., Chopped Garlic - ½ tsp., Vinegar - 1 tbsp., Soya sauce - 2 tbsp., Ajinomoto - ½ tsp., Green chili - 4~5 ea (slit length ways), One medium capsicum : cut into thin strips, One small onion - cut into ½" thin strips, Onion leaves - 2~3 (cut into long strips), Sugar - 1 tsp., Salt as per your taste, Sherry - 2 tsp., Corn Flour - 2 tsp.(dissolve in ½ of water), Oil - 2 tbsp.
		<b>Instructions</b> In microwave safe glass bowl mix oil, ajinomoto, ginger-garlic, chili, soya sauce & chicken and cook. When beep add all ingredients & ¼ cup of water, mix it well, cover it & press start. Serve hot.
<b>6-16 Ginger Chicken</b>	300-350 g	Boneless Chicken - cut into small pieces, Soya sauce - 3 tbsp., Grated Ginger - 1 tbsp., Thinly sliced Ginger - 1 tbsp., Spring onion - 3~4 (chopped with green part), Sherry - 2 tbsp., Ajinomoto - ½ tsp., Salt as per your taste, Pepper powder - 1 tsp., Corn Flour - 2 tsp. (dissolve in ½ of water), Oil - 2 tbsp.
		<b>Instructions</b> In microwave safe glass bowl mix oil, chicken, grated ginger, sherry, spring onion & soya sauce. Mix it well & cover it & cook. When beep add salt, pepper & sliced ginger. Mix it well, add corn flour paste, ¼ cup of water, mix it well and press start. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
6-17 <b>Chicken with Mushroom &amp; Baby Corn</b>	400-450 g	Boneless Chicken - 225 g, Sliced Mushroom - 100 g, Diagonally sliced baby corn - 100 g, Garlic Paste - 1 tsp., Ginger Paste - 1 tsp., Oil - 2 tbsp., Soya Sauce - 1 tsp., Vinegar - 1 tsp., Salt & Pepper as per your taste, Corn Flour - 2 tbsp.(dissolve with half cup of water), Ajinomoto - 1/4 tsp.
		<b>Instructions</b> In microwave safe glass bowl take oil, ginger paste, garlic paste, chicken and cook. When beep add mushroom, baby corn, all other ingredients, 1/2 cup of water, mix it well & press start. Serve hot.
6-18 <b>Schezwan Chicken</b>	500-550 g	Boneless Chicken - 400 g, Grind red chili - 10, Oil - 3 tbsp., Garlic paste - 1 tbsp., Garlic finely - 1 tbsp. (chopped), Tomato sauce - 4 tbsp., Vinegar - 1 tbsp., Red Chili Sauce - 2 tbsp., Soya Sauce - 1 1/2 tbsp., Salt & Sugar as per your taste, Corn flour - 1 tbsp., Ajinomoto - 1/4 tsp., Orange color - 1 pinch
		<b>Instructions</b> In microwave safe glass bowl add oil, chopped garlic, grind red chili and cook. When beep add garlic paste & all other ingredients. Mix it well & press start.
6-19 <b>Sweet &amp; Sour Chicken</b>	400-450 g	Boneless Chicken - 200 g, Cauliflower - 50 g (cut into 1/2 inch pieces), Carrot - 1 (medium size, cut into round), Spring Onion - 2~3 (finely chopped), Capsicum - 1 (medium, cut into long pieces), Tomato - 1 (cut into thick sticks), Vinegar - 4 tsp., Sugar - 2 tsp., Tomato sauce - 2 tbsp., Soya sauce - 1 1/2 tsp., Ajinomoto - 1/4 tsp., Oil - 2 tbsp., Orange red color - 1 pinch, Red Chili Powder, Salt as per your taste, Corn flour - 4 tbsp. (mixed in 1/4 cup of water)
		<b>Instructions</b> In microwave safe glass bowl add oil, red chili powder, chicken and cook. When beep add carrot, spring onion, cauliflower, capsicum, tomato & all other ingredients. Mix it well & press start. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
6-20 <b>Chicken Hong Kong</b>	400-450 g	Boneless Chicken - 250 g (cut into bite size pieces), Cashew nut - 15~20, Dried broken red chillies - 6, Fresh garlic - 4~5 (chopped), Sherry - 2 tbsp., Salt & Sugar as per your taste, Oil - 2 tbsp., Ajinomoto - 1/2 tsp., Cornflour - 2 tsp. (dissolve in 1 cup of water)
		<b>Instructions</b> In microwave safe glass bowl add oil, ginger, soya sauce, sherry, ajinomoto, salt, sugar, chicken and cook. When beep add broken dried red chili powder, garlic, corn flour, cashew nut, all other ingredients. Mix it well and press start.

## 7. Indian Special Chicken Dishes

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-1 <b>Chicken with Capsicum</b>	450-500 g	Chicken Breast - 250 g, Chopped Spaghetti - 75 g, Chopped green, Red, Yellow capsicum - Each 1 ea, Chopped Onion - 1 ea, Chopped tomato - 2 ea, Olive oil - 4 tbsp., Salt & pepper as per your taste, Grated cheese - 2 tbsp., Water - 1/2 cup
		<b>Instructions</b> In microwave safe glass bowl add olive oil, chicken, salt and cook. When beep add all ingredients. Mix it well, add water, cover it & press start. Sprinkle grated cheese & serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>7-2 Chicken Korma</b>	500-550 g	Chicken - 450 g, Cashew nut powder - 2 tbsp., Ginger-garlic & green chili paste - 2 tbsp., Yogurt - ½ cup, Red chili powder - 1 tsp., Coriander powder - 2 tsp., Oil - 3 tbsp., Salt - as per your taste, Fresh cream - ½ cup, Garam Masala Powder - 1 tsp., Turmeric powder - 1 tsp., Chopped Coriander leaves
<b>Instructions</b>		
<p>Beat yogurt with ginger-garlic &amp; green chili paste, red chili powder, coriander powder &amp; salt. Marinate chicken in this mixture for one hour. Take it in refrigerator. In microwave safe glass bowl take oil, marinated chicken &amp; cook.</p> <p>When beep mix cashew nut paste, garam masala powder and press start. Mix it well &amp; serve hot. Garnish it with chopped coriander leaves.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>7-4 Butter Chicken</b>	500-550 g	Boneless Chicken - 400 g, Lemon juice - 1 tbsp., Kashmiri red chili powder - 1 tsp., Salt & sugar - as per your taste, Butter - 4 tbsp., Ginger-garlic paste - 2 tbsp., Garam Masala - 1 tsp., Yogurt - ½ cup, Dried fenugreek leaves - 1 tsp., Mustard oil - 2 tsp., Chopped onion paste - 1 cup, Tomato puree - ½ cup, Chopped coriander - 1 tbsp., Fresh cream - ½ cup & orange-red color - 1 pinch
<b>Instructions</b>		
<p>Marinate chicken with yogurt, mustard oil, lemon juice, ginger-garlic paste &amp; place it in refrigerator for 1 hr. In microwave safe glass bowl add butter, onion paste, chicken &amp; cook. When beep add all other ingredients, mix it well &amp; cover it &amp; press start. Garnish with chopped coriander.</p>		
<b>7-5 Chicken &amp; Mushroom with Tomato</b>	500-600 g	Boneless Chicken - 450 g, Chopped Mushroom - 8~10, Spring onion - 3~4, Finley chopped Garlic - 5~6, Chopped red chili - 1 tbsp., Pepper powder - ¼ tsp., Tomato puree - ½ cup, Honey - 2 tsp., Oregano - ¼ tsp., Butter - 2 tbsp., Salt as per your taste
<b>Instructions</b>		
<p>In microwave safe glass bowl take oil, garlic, chicken, salt and cook. When beep add mushroom, tomato puree &amp; all other ingredients, mix it well. Cover it and press start. Sprinkle spring onion &amp; serve hot.</p>		
<b>7-6 Chicken with Fenugreek</b>	500-550 g	Chicken - 500 g (medium size pieces), Chopped fresh fenugreek - 2 cup, Coriander leaves - 2 tbsp., Garam masala powder - 1 tsp., Red chili powder - 1 tsp., Yogurt - 1 cup, Butter - 2 tbsp., For Fine Paste : Onion - 1 ea, Garlic - 4~5 cloves, Ginger - 1", Green chili - 2~3, Water - 1 cup
<b>Instructions</b>		
<p>In microwave safe glass bowl take butter, chicken, paste and cook. When beep add fenugreek leaves, yogurt &amp; all other ingredients, ½ cup of water press start. Serve hot. Garnish with coriander leaves.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-7 Chicken Jalfreji	500-600 g	Chicken - 500 g (medium size pieces), Onion - 1 (chopped), Garlic - 4~5 flakes, Tomato Puree - 4 ea, Grated Ginger - 1 tsp., Garam Masala - 1 tsp., Cumin Powder - 1 tsp., Red Chili Powder - 1 tsp., Lemon Juice - ½ tsp., Turmeric powder - 1 tsp., Oil - 3 tbsp., Capsicum - 1 ea, Cream - 1 cup
<b>Instructions</b>		In microwave safe glass bowl add oil, onion, ginger, garlic, haldi, chicken and cook. When beep add capsicum & all other ingredients, all spices & lemon juice except cream. Mix well and press start. After done add cream, mix it well & serve hot.
7-8 Chicken Jalfrahi	600-700 g	Chicken - 500 g (cut into long pieces), Yogurt - ½ cup, Lemon juice - 2 tbsp., Cream - ½ cup, Salt as per your taste, Garam Masala - 1 tsp., Coriander powder - 1 tsp., Cumin powder - 1 tsp., Saffron - ¼ tsp., Chopped coriander - 1 tsp. for garnish
<b>Instructions</b>		Beat well yogurt, cream & lemon juice & add all other ingredients. Marinate chicken & put it in refrigerator for 2 hrs. In microwave safe glass bowl add marinated chicken, cover it and cook.
7-9 Pickled Chicken	350-400 g	Boneless chicken - 250 g (cut into long & thin strips), Red chili powder - ½ tsp., Vinegar - 4 tbsp., Sugar - 1 tbsp., Soya sauce - 1 tsp., Tomato sauce - 2 tbsp., Oil - 2 tbsp., Salt & sugar as per your taste. Orange red color - 1 pinch, Corn flour - 2 tsp. (dissolve with ½ cup of water)
<b>Instructions</b>		In microwave safe glass bowl add oil, ginger, red chili powder & chicken. Mix it well & cook. When beep add all other ingredients. Mix it well & press start. Note : Instead of chicken, fish & prawns can be used.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-10 Yogurt Chicken	500-600 g	Chicken - 500 g, Yogurt - 1 cup, Finely chopped mint leaves - 1 tbsp., Corn flour - 1 tbsp.(mix in 2 tbsp. water), Oil - 2 tbsp., Chopped onion - 1 ea, Chopped green chili - 2~3, Chopped ginger - 1 tbsp., Garam Masala - 1 tsp., Dried fenugreek leaves - 1 tsp., Salt as per your taste, Chopped coriander - 1 tbsp.
<b>Instructions</b>		In microwave safe glass bowl add oil, onion, green chili, ginger & chicken, mix it well & cook. When beep add all other ingredients, ½ cup of water. Cover it and press start. Sprinkle chopped mint & coriander leaves. Serve hot.
7-11 Chicken Makhani	600-700 g	Chicken - 600 g (cut into pieces of your choice), Chopped onion - 1 ea, Ginger paste - 1 tsp., Garlic paste - 1 tsp., Tomato puree - ½ cup, Garam Masala - 1 tsp., Coriander powder - 1 tsp., Cumin powder - 1 tsp., Chili powder - 1 tsp., Turmeric powder - 1 tsp., Dried Fenugreek leaves - 1 tsp., Cashew nut powder - 4 tbsp., Cream - ½ cup, Oil - 4 tbsp., Orange-red colour - 1 pinch, Chopped coriander leaves
<b>Instructions</b>		In microwave safe glass bowl take oil, ginger-garlic paste, onion, turmeric, chili powder, chicken and cook. When beep add all other ingredients, 1 cup of water. Cover it and press start. Garnish with coriander leaves.
7-12 Chicken Dilbahar	600-700 g	Chicken - 500 g (cut into pieces of your choice), Chopped onion - 2 ea, Garlic paste - 1 tsp., Oil - 4 tbsp., Chopped green chili - 2~3, Chopped Almond paste - 2 tbsp., Garam Masala - 1 tsp., Milk - 1 cup, Chopped coriander - 1 tbsp., Water - ½ cup, Salt as per your taste
<b>Instructions</b>		In microwave safe glass take oil, onion, garlic paste, green chili, chicken. Mix it well and cook. When beep add all other ingredients ½ cup of water, cover it and press start. Garnish with coriander leaves.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-13 <b>Green Chicken</b>	700-800 g	Chicken - 500 g (cut into pieces of your choice), Chopped green chili - 3~4, Chopped coriander - ½ cup, Chopped mint - ¼ cup, Two sticks chopped celery, Chopped spring onion - 2 ea, Garlic paste - 1 tsp., Ginger paste - 1 tsp., Cumin powder - 1 tsp., Oil - 3 tbsp., Salt - 1 tsp.
		<p><b>Instructions</b></p> <p>Grind together mint, coriander, celery, green chili to a paste. In microwave safe glass bowl take oil, green paste &amp; all other ingredients. Mix well and cook. When beep add ½ cup water, mix it well and press start. Serve hot.</p>
7-14 <b>Goanese Chicken</b>	600-700 g	Chicken - 500 g (cut into pieces of your choice), Chopped onion - 2 ea, Chopped tomato - 2 ea, Ginger-garlic paste - each 1 tsp., Red chili powder - 1 tsp., Turmeric powder - 1 tsp., Cumin powder - 1 tsp., Cinnamon powder - ½ tsp., Oil - 4 tbsp., Vinegar - 2 tbsp., Water - 1 cup
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, ginger-garlic, onion, chicken, red chili powder, turmeric powder and cook. When beep add 1 cup water, all other ingredients, mix it well and press start. Garnish with coriander leaves and serve hot.</p>
7-15 <b>Chicken Masala</b>	500-600 g	Chicken - 400 g (cut into pieces of your choice), Chopped onion - 3 ea, Chopped tomato - 3 ea, Ginger-garlic paste - each 1 tsp., Turmeric, Red chili powder - each 1 tsp., Garam Masala - 1 tsp., Oil - 2 tbsp., Salt as per your taste, Chopped coriander, Water - 1 cup
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, ginger-garlic, onion, chicken, red chili powder, turmeric powder and cook. When beep add 1 cup water, all other ingredients, mix it well and press start. Garnish with coriander leaves &amp; serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-16 <b>Kadhai Chicken</b>	600-700 g	Chicken - 400 g (cut into pieces of your choice), Ginger-garlic paste - each 1 tsp., Tomato puree - ½ cup, Red chili powder - ½ tsp., Coriander powder - 1 tsp., Garam masala - 1 tsp., Sugar - 1 tsp., Two large capsicum cut into strips, Corn flour - 2 tbsp. (dissolve in 3 cups of water), Oil - 4 tbsp., Dried fenugreek leaves - 1 tsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, ginger-garlic, onion, chicken, red chili powder and cook. When beep add 3 cup water, all other ingredients, mix it well and press start. Garnish with coriander leaves &amp; serve hot.</p>
7-17 <b>Kheema Masala</b>	400-500 g	Kheema (chicken) - 200 g, Chopped onion - 1 ea, Chopped tomato - 1 ea, Ginger garlic paste - 1 tsp., Turmeric, Salt, Red chili, Cumin powder, Garam masala as per taste, Oil and water as required, Dhaniya for garnishing
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take kheema with water and cook. When beep drain water and keep aside. In another microwave safe bowl add oil, chopped onion, tomato, ginger garlic paste and all the masala and press start. After done, add boiled kheema to this, mix well and serve.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-18 Chicken Chettinad	700-800 g	Chicken - 500 g (cut into pieces of your choice), Ginger-garlic paste - each 1 tsp., Tomato puree - ½ cup, Red chili powder - ½ tsp., Chopped onion - 2 ea, Coconut Oil - 3 tbsp., Curry leaves -10~12, Freshly Crushed pepper - 2 tsp., Chopped Coriander powder - 1 tsp., Garam masala - 1 tsp., Water - 2 cups, Yogurt - ½ cup
		<p><b>Instructions</b></p> <p>Marinate chicken with yogurt, ginger-garlic paste, pepper corns, salt and keep in refrigerator for 1 hr. In microwave safe glass bowl add coconut oil, chopped onion, garam masala and marinated chicken. Mix well and cook. When beep add all other ingredients mix it well and press start. Garnish with coriander leaves. Serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
7-20 Pepper Chicken	400-450 g	Boiled boneless chicken - 300 g, Salt, Lemon juice, Pepper powder as per your taste, Oil - 3 tbsp., Chopped onion - 4 tbsp., Chopped tomato - 3 tbsp., Chopped garlic - 2 tsp., Water as required, Coriander leaves - 1 tbsp.
		<p><b>Instructions</b></p> <p>Take boiled chicken, marinate with salt, lemon juice, pepper powder for 1 hour. In microwave safe bowl put oil, chopped onion, chopped tomato, chopped garlic and cook. When beep add marinated chicken, salt to taste, ¼ cup of water and press start. Garnish with chopped coriander leaves.</p>

## 8. Tandoori

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
8-1 Roasted Prawns	600-700 g	Prawns - 500 g, Chopped onion - 2 ea, Chopped tomato - 2 ea, Oil - 2 tbsp., Red Chili powder - 1 tsp., Turmeric powder - ½ tsp., Ginger-garlic paste - each 1 tsp., Garam Masala - 1 tsp., Cumin powder - 1 tsp., Coriander powder - 1 tsp., Chopped coriander leaves - 2 tbsp. Little water
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl add oil, finely chopped onion, chopped tomato, ginger-garlic paste, red chili powder, turmeric powder and cook. When beep add prawns, all other ingredients mix it well, and press start. Garnish with coriander leaves. Serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>8-2 Fish Cutlet</b>	350-400 g	Fish fillet - 250 g, Boiled potato - 2 ea, Bread crumbs - 1 cup, Oil - 2 tbsp., Red chili powder - 1 tsp., Turmeric powder - 1 tsp., Ginger-garlic paste - 1 tsp., Salt as per your taste, Garam Masala - 1 tsp., Coriander leaves - 2 tbsp.
<b>Instructions</b>		In bowl take fish fillet, all other ingredients except oil and mix well. Make cutlets. Place them at crusty plate on high rack, put some oil around cutlets and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.
<b>8-3 Fish Tikka</b>	500 g	Fish (pomfert) - 400 g, Thick yogurt - ½ cup, Chat Masala - 1 tsp., Ginger-garlic paste - each 1 tsp., Orange red colour - 1 pinch, Oil - 2 tbsp., Semolina - 2 tbsp., Red chili powder - 1 tsp., Salt as per your taste, Coriander leaves - 2 tbsp.
<b>Instructions</b>		Marinate fish slice with salt, thick yogurt, ginger-garlic paste, orange-red colour, red chili powder, mix it well & keep it in refrigerator for ½ hr. Roll it in semolina. Put them on crusty plate at high rack, put some oil around, and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.
<b>8-4 Green Masala Pomfret</b>	400 g	Fish (pomfert) - 400 g, Ginger-garlic paste - 1 tsp. each. Oil - 2 tbsp., Semolina - 2 tbsp., Salt as per your taste, Coriander leaves - 2 tbsp. For green paste : Fresh coconut - 1 cup, Coriander leaves - 4 tbsp., Green chili - 2~3, Cumin seeds - 1 tsp., Garlic - 10~12 cloves, Lemon juice - 1 tbsp., Salt & Sugar as per your taste, Make a fine paste of it.
<b>Instructions</b>		Make the slice of the fish. Apply the green paste all over the fish. Roll out fish in semolina. Put on crusty plate at high rack, put some oil around, and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>8-5 Fish Malai Kabab</b>	400-450 g	Fish fillet - 300 g, Garlic paste - 1 tsp., Anised powder - 1 tsp., Dry mango powder - 1 tsp., Red chili powder- 1 tsp., Cream - 4 tbsp., Oil - 2 tbsp., Salt as per your taste, Coriander leaves - 1 tbsp.
<b>Instructions</b>		Place fish in a bowl. Add all the ingredients & mix well. Let it marinate for 2 hrs. at refrigerator. Place kebab on crusty plate at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.
<b>8-6 Goanese Fish Kabab</b>	400-500 g	Surmai (Goanese fish) - 300 g (cut into pieces), Tamarind juice - 2 tbsp., Red chili powder - 1 tsp., Turmeric powder - ½ tsp., Cumin powder - ½ tsp., Coconut oil - 1 tbsp., Rice flour - 1 tbsp., Chopped peppercorn - 1 tsp., Salt as per your taste, Coriander leaves - 1 tbsp.
<b>Instructions</b>		Place fish in a bowl. Add all the ingredients & mix well. Let it marinate for 1 hr. at refrigerator. Place kebab on crusty plate at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.
<b>8-7 Sesame Fish (Goanese Recipe)</b>	400-500 g	Surmai (Goanese fish) - 400 g (cut into pieces), Dry mango powder - 1 tsp., Red chili powder - 1 tsp., Turmeric powder - ½ tsp., Garam Masala - 1 tsp., Ginger-garlic paste - each 1 tsp., Coconut oil - 2 tbsp., Rice flour - 1 tbsp., Salt as per your taste, Sesame seeds - 4~5, Coriander leaves - 1 tbsp.
<b>Instructions</b>		In a bowl add fish & all the other ingredients except sesame seeds & mix well & let marinate for 2 hrs. at room temperature. Lift one piece at a time & roll in sesame seed so that it is fully covered. Place fish on crusty plate high rack, put some oil around fish and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
8-8 Coconut Fish Kabab	400-500 g	Fish (pomfert) - 400 g (cut into pieces), Ginger- garlic paste - each 1 tsp., Pepper powder - ½ tsp., Cumin powder - ½ tsp., Lemon juice - 2 tbsp., Corn flour - 1 tsp., Powdered coconut (desiccated coconut) - 4 tbsp., Salt as per your taste
<b>Instructions</b>		
<p>In a bowl add fish pieces &amp; all other ingredients except coconut. Mix well, let it marinate for 2-3 hrs. at room temperature. Pick fish pieces one by one &amp; roll into the coconut so that fully coated with it. Place fish on crusty plate at high rack, put some oil around the kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>		
8-9 Chicken Tikka	400-450 g	Boneless chicken - 400 g, Thick yogurt - ½ cup, Chat Masala - 1 tsp., Ginger-garlic paste - each 1 tsp., Orange red colour - 1 pinch, Oil - 2 tbsp., Semolina - 2 tbsp., Red chili powder - 1 tsp., Salt as per your taste, Coriander leaves - 2 tbsp.
<b>Instructions</b>		
<p>Marinate chicken with salt, thick yogurt, ginger-garlic paste, orange-red colour, red chili powder, mix it well &amp; keep it in refrigerator for ½ hr. Roll it in semolina. Put on crusty plate at high rack, put some oil around the tikkas and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
8-10 Kheema Cutlet	350-400 g	Boiled Kheema - 250 g, Boiled potato - 2 ea, Bread crumbs - 1 cup, Oil - 2 tbsp., Red chili powder - 1 tsp., Turmeric powder - 1 tsp., Ginger-garlic paste - 1 tsp., Salt as per your taste, Garam Masala - 1 tsp., Coriander leaves - 2 tbsp.
<b>Instructions</b>		
<p>In bowl take kheema &amp; all other ingredients except oil &amp; mix well. Make cutlets. Put them on a metal tray, add some oil around the cutlets. Put them on crusty plate on rack, put some oil around the cutlets and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>		
8-11 Chicken Malai Kabab	400-450 g	Boneless chicken - 300 g, Garlic paste - 1 tsp., Anissed powder - 1 tsp., Dry mango powder - 1 tsp., Red chili powder - 1 tsp., Cream - 4 tbsp., Oil - 2 tbsp., Salt as per your taste, Coriander leaves - 1 tbsp.
<b>Instructions</b>		
<p>Place chicken in a bowl. Add all the ingredients &amp; mix well. Let it marinate for 2 hrs. at refrigerator. Place kebab on crusty plate at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>		
8-12 Green Chicken Kabab	400-450 g	Boneless chicken - 400 g, Ginger-garlic paste - 1 tsp. each. Oil - 2 tbsp., Semolina - 2 tbsp., Salt as per your taste, Coriander leaves - 2 tbsp. For Green paste : Fresh coconut - 1 cup, Coriander leaves - 4 tbsp., Green chili - 2~3, Cumin seeds - 1 tsp., Garlic - 10~12 cloves, Lemon juice - 1 tbsp., Salt & sugar as per your taste & make a fine paste of it.
<b>Instructions</b>		
<p>Make the slice of the chicken. Apply the green paste all over the chicken pieces. Roll out fish in semolina. Keep on crusty plate at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>8-13 Chicken Kheema Cutlet</b>	350-400 g	Boiled Kheema - 250 g, Boiled potato - 2 ea, Bread crumbs - 1 cup, Oil - 2 tbsp., Red chili powder - 1 tsp., Turmeric powder - 1 tsp., Ginger-garlic paste - 1 tsp., Salt as per your taste, Garam Masala - 1 tsp., Coriander leaves - 2 tbsp.
		<p><b>Instructions</b></p> <p>In bowl take chicken kheema, all other ingredients except oil &amp; mix well. Make cutlets. Put them on a metal tray, put some oil around the cutlets. Keep this on crusty plate at high rack, put some oil around the cutlets and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>
<b>8-14 Saucy Kabab</b>	500-550 g	Boiled Kheema - 500 g, Ginger-garlic-green chili paste - 1 tsp. each, Chopped onion - 1 ea, Red chili powder - 1 tsp., Cumin powder - ½ tsp., Garam Masala - 1 tsp., Salt as per your taste, Corn flour - 2 tbsp. For sauce : Mix vinegar - 1 tsp., Soya sauce - 1 tsp., Tomato sauce - 2 tbsp., Chili sauce - 1 tbsp.
		<p><b>Instructions</b></p> <p>Mix kheema, all other ingredients and shape into kebab as you wish. Apply little oil, place this on crusty at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Coat kebab with sauce. Serve hot.</p>
<b>8-15 Sesame Chicken</b>	400-500 g	Boneless chicken - 400 g (cut into pieces), Dry mango powder - 1 tsp., Red chili powder - 1 tsp., Turmeric powder - ½ tsp., Garam Masala - 1 tsp., Ginger-garlic paste - 1 tsp. each, Coconut oil - 2 tbsp., Rice flour - 1 tbsp., Salt as per your taste, Sesame seeds - 4-5, Coriander leaves - 1 tbsp.
		<p><b>Instructions</b></p> <p>In a bowl add chicken, all the other ingredients except sesame seeds and mix well, let marinate for 2 hrs. at room temperature. Lift one piece at a time, roll in sesame seed so that it is fully covered. Place fish on crusty plate at high rack, put some oil around chicken and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>8-16 Tandoori Chicken</b>	500-600 g	Chicken - 500 g, Garlic paste - 1 tsp., Ginger paste - 1 tsp., Red chili powder - 1 tsp., Coriander, cumin powder - 1 tsp. each, Yogurt - 1 cup, Orange-red colour - 1 pinch, Corn flour - 2 tbsp., Salt to taste, Oil - 2 tbsp., Garnish with onion ring & lemon pieces
		<p><b>Instructions</b></p> <p>In a bowl mix all ingredients except oil. Add chicken &amp; mix well. Let it marinate for 2-3 hrs. in refrigerator. Place chicken on Crusty plate at high rack in microwave, put some oil around and cook. When beep, turn them over and press start. Garnish with onion ring &amp; lemon pieces. Serve hot.</p>
<b>8-17 Tandoori Mutton</b>	500-600 g	Boneless Mutton - 500 g, Garlic paste - 1 tsp., Ginger paste-1 tsp., Red chili powder - 1 tsp., Coriander, cumin powder - 1 tsp. each, Yogurt - 1 cup, Orange-red colour - 1 pinch, Corn flour - 2 tbsp., Salt - to taste, Oil - 2 tbsp., Garnish with onion ring & lemon pieces
		<p><b>Instructions</b></p> <p>In a bowl mix all ingredients except oil. Add mutton &amp; mix well. Let it marinate for 2-3 hrs. in refrigerator. Place mutton on crusty plate at high rack in microwave, put some oil around and cook. When beep, turn them over and press start. Garnish with onion ring &amp; lemon pieces. Serve hot.</p>
<b>8-18 Mutton Tikka</b>	400-450 g	Mutton (cut into pieces) - 400 g, Thick yogurt - ½ cup, Chat Masala - 1 tsp., Ginger-garlic paste - 1 tsp. each, Orange red colour - 1 pinch, Oil - 2 tbsp., Semolina - 2 tbsp., Red chili powder - 1 tsp., Salt as per your taste, Coriander leaves - 2 tbsp.
		<p><b>Instructions</b></p> <p>Marinate mutton with salt, thick yogurt, ginger-garlic paste, orange-red colour, red chili powder, mix it well &amp; keep it in refrigerator for ½ hr. Roll it in semolina. Keep on crusty plate on high rack in microwave, put some oil around and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.</p>

Code/Food	Serving Size	Ingredients
8-19 <b>Fish Tikka Achari</b>	450-500 g	Surmai fillets - 300 g (cut into 2" pieces), Lemon juice - 2 tbsp., Ginger-garlic paste - 1 tsp. each, Turmeric powder - ½ tsp., Kashmiri red chili powder - 2 tsp., Mustard seed powder - 1 tsp., Onion seeds powder - 1 tsp., Fenugreek seed powder - ½ tsp., Black salt - ½ tsp., Mustard oil - 2 tbsp., Yogurt whisked - 1 cup, Butter - 2 tbsp.
		<p><b>Instructions</b></p> <p>Place the fish in a bowl, add salt, lemon juice, ginger-garlic paste, turmeric powder, chili powder, mustard seed powder, fenugreek seed powder, onion seed powder, mix it well &amp; take it refrigerator for 2 hrs. Arrange the fish pieces and brush the oil, put it on crusty plate at high rack in microwave, put some oil around tikkas and cook.</p> <p>When beep turn the pieces, apply little oil and press start. Serve hot.</p>

Code/Food	Serving Size	Ingredients
9-1 <b>Chicken a'la Kiev</b>	550-600 g	Boneless chicken - 500 g, French beans - 18~20 (cut into 1 piece), Carrots - 2 (medium size, cut into 1 piece), Sticky celery - 2 (chopped), Capsicums - 2 (cut into ¼" pieces), Milk - ½ cup, Maida - 2 tbsp., Pepper - 1 tsp., Mustard powder - 1 tsp., Salt - 1 tsp., Grated cheese (Amul) - 4 tbsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl mix chicken, carrots, celery, french beans, 2-3 tbsp. water, cover it and cook. When beep add all ingredients and press start. Add grated cheese. Garnish with parsley or coriander.</p>
9-2 <b>Poulet a'la Burgundy</b>	600-650 g	Boneless chicken-500 g, Oil - 2 tbsp., Garlic - 3~4 flakes (minced), Spring onions - 3~4 (chopped), Celery - 2~3 sticks (chopped), Tej patta (bay leaf) -1, Red wine - ¼ cup, Flour (maida) - 2 ½ tbsp., Ajwain - ½ tsp. (powdered), Pepper powder - 1 tsp., Salt - 1 tsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl mix chicken with oil, garlic, chopped spring onions, bay leaf, celery and cook. When beep in another dish take flour, all ingredients, chicken and cook. Sprinkle spring onion greens on top and serve hot with garlic bread.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-3 Chicken &amp; Mushroom Gratin</b>	500-550 g	Boneless chicken - 200 g (cut into bite size pieces), Mushrooms quartered (cut into 4 pieces each) - 200 g, Oil or butter - 2 tbsp., Maida (flour) - 2 tbsp., Salt - 1 tsp., Pepper - 1 tsp., Rum or sherry (optional) - 1 tsp., Cream - 100 g (½ cup), Water - ½ cup, some chopped celery or coriander leaves for garnishing, grated cheese - 4 tbsp.  <b>Instructions</b> In microwave safe glass dish, add chicken, mushroom and all the ingredients except cheese and cook. When beep, spread grated cheese and put it on high rack and press start. Sprinkle chopped celery or coriander and serve hot.
<b>9-4 Meat Loaf</b>	500-550 g	Keema - 500 g (Meanced meat), Curd - ¾ cup, 2 eggs, Garlic paste - 1 tsp., Ginger paste - 1 tsp., Garam masala powder - 1 tsp., Lemon juice - 2 tbsp., Chopped coriander leaves - 2 tbsp., Salt - 1 tsp., Pepper - 1 tsp.(adjust to taste), Bread slices - 3 pieces (soaked in water, squeezed & crumbled) For sauce : Maida - 1 tsp., Mustard powder - ½ tsp., Worcestershire sauce - 1 tbsp., Tomato sauce - 1 tbsp., Chili sauce - 1 tbsp.  <b>Instructions</b> Mix all ingredients given under loaf. Grease the dish & put keema in it and cook. To the juices, add all ingredients given under sauce. When beep, pour the sauce on a loaf and put it on crusty plate at high rack, and press start. Serve with sauce & decorate with coriander.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-5 Thai Chicken</b>	900 g	For green paste : Green chillies - 6~8, Spring onions - 3 ea (chopped along with the green part), Lemon grass leaves - 4 (optional), Ginger - 2" piece, Coriander leaves - 3 tbsp. For main dish : Boneless chicken - 700~800 g (cut into pieces), Coconut milk - 1½ cups, Salt - 1½ tsp., Jaggery - a tiny piece, Coriander powder - 1 tbsp., Cumin powder - 1 tbsp., Oil - 2 tbsp.  <b>Instructions</b> In grinder prepare green paste. Churn grated one coconut in mixer. In microwave safe glass bowl add chicken, oil and cook. When beep, add salt jaggery and coconut milk. Mix well and press start.
<b>9-6 Chicken Pulao</b>	600-700 g	Basmati rice - 1½ cup, Boneless chicken - 4 pieces (2 legs & 2 thighs or 2 legs & 2 breasts), Onions - 2 (medium size, sliced thinly), Cloves - 4, Cinnamon - 1", Black cardamom - 2, Pure ghee - 3 tbsp., Chopped tomatoes - 2, Salt - 2 tsp., Garam masala - 1 tsp., Red chili powder - 1 tsp., Garlic paste - 1 tsp., Ginger paste - 1 tsp., Water - 2½ cups  <b>Instructions</b> In microwave safe glass bowl add ghee onion, black cardamom and cook. When beep, add rice chicken, tomatoes, salt, garam masala, red chillies, garlic, ginger paste, water. Mix well and press start. Serve hot.
<b>9-7 Keema Pulav</b>	350-400 g	Keema - 200 g, Basmati Rice - 1 cup, Ghee - 4 tbsp., Cloves - 5 laung, Green cardamoms (broken) - 4, Ginger paste - 1 tbsp., Cinnamon - 1" piece, Bay leaf - 1, Onion - 1 (sliced thinly), Red chili powder - 1 tsp., Salt - 1 tsp., Garam masala - 1 tsp.  <b>Instructions</b> In microwave safe glass bowl mix ghee, laung, dalchini, bay leaf, cardmoms, rice, onion and cook. When beep, add keema, rice, water, mix it well and press start. Serve hot.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-8 Mutton Malai</b>	650-700 g	Mutton - 400 g, Ginger Garlic paste - 1 tbsp., Green chilies finely - 3~4 (chopped),, Salt - 1¼ tsp., Magaz paste- 2 tbsp., coriander-for garnishing, Oil- 2 tbsp., Water ½ cup For Gravy : Curd - 1 cup, Ginger Julian -1 tbsp., Salt - 1 tsp., Red chili powder - 1 tsp., Cumin powder - 1 tsp., Cream - 1 cup, Garam masala - 1 tsp.
<b>Instructions</b>		
In a microwave safe bowl add mutton, magaz paste, ginger garlic paste, chilli paste and oil and ¼ cup water and cook. When beep add all other ingredients and cook. Garnish with fresh coriander.		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-10 Chicken with Sweet &amp; Sour Vegetables</b>	400-450 g	Boneless Chicken - 200 g, Pineapple juice - ½ cup, Baby corns (cut into lengthwise) - 3~4, Broccoli/ cauliflower florets - 4~5, Mushrooms - 3~4 (cut into pieces), Slices of pineapple - 2 ea, Small capsicum - 1 ea (cut into pieces), Red chili paste - ½ tsp., Crushed garlic - 1½ tsp., Spring onion white - 2~3 cut into slices, Tomato ketchup - ¼ cup, Vinegar - 3 tbsp., Ajinomoto - ¼ tsp., Sugar - 4 tsp., Soya sauce - 1 tsp., Salt to taste, Stock cube - 1 crushed, Corn flour - 4 tbsp. (mixed in ¼ cup of water), Water - 2 cups
<b>Instructions</b>		
In microwave safe bowl add water, pineapple juice, baby corn, florets & mushrooms and cook. When beep add chicken, all other ingredients, mix it well and press start. Serve hot.		
<b>9-11 Chicken with Sweet &amp; Spicy vegetables</b>	400-450 g	Boneless Chicken breast - 200 g, Pineapple juice - ½ cup, Baby corns (cut into lengthwise) - 3~4, Broccoli/ cauliflower florets - 4~5, Mushrooms - 3~4 (cut into pieces), Slices of pineapple - 2 ea, Small capsicum - 1 ea (cut into pieces), Red chili paste - 1 tbsp., Crushed garlic - 1 ½ tsp., Spring onion white - 2~3 cut into slices, Red bell pepper - 2(sliced), Ajinomoto - ¼ tsp., Sugar - 4 tsp., Soya sauce - 1 tsp., Salt to taste, Stock cube - 1 crushed, Corn flour - 4 tbsp. (mixed in ¼ cup of water), Water - 2 cups
<b>Instructions</b>		
In microwave safe bowl add water, pineapple juice, baby corn, florets & mushrooms and cook. When beep add chicken, all other ingredients, mix it well and press start. Serve hot.		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-12 Chicken in Thai Red Curry</b>	500-550 g	Boneless chicken - 400 g, Kashmiri red chili - 4~5 dry, Onion - ½, Garlic - 8~10 flakes, Chopped ginger - 1 tsp., Lemon grass - 1, Coriander seeds - 1½ tsp., Cumin seeds - 1 tsp., Saboot kali mirch - 6, Soya sauce - ½ tsp., Lemon juice - 1 tbsp., Salt & sugar - each 1 tsp., Baby corns - 4~5, Small carrot - 1 ea, Cauliflower - ½ cup, Mushrooms - 2 ea, Basil leaves - 8~10, Coconut milk - 2 cups
<b>Instructions</b>		Make fine paste of red chili, water. In microwave safe glass bowl add oil, red curry paste, onion, ginger-garlic paste and cook. When beep add coconut milk, all vegetables, all other ingredients with chicken and press start. Add salt, sugar, add basil leaves. Serve hot with steamed rice.
<b>9-13 Chicken Pasta in Tomato Puree</b>	450-500 g	Boneless chicken - 150 g, Macaroni or pasta - 2 cups, Capsicum - 1 ea (cut into pieces), Tomato - 1 medium (cut into strips), Olive oil - 3 tbsp., Crushed garlic - 2 tsp., Tomato puree - 1 cup, Pepper - ½ tsp., Salt - 1¼ tsp., Oregano - ¾ tsp., Water - ½ cup, Cream - ½ cup, Water - 5 cups
<b>Instructions</b>		In microwave safe glass bowl take oil add boneless chicken, macaroni, 4 cups of water and cook. When beep add all other ingredients, water as required and press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-14 Chicken au Gratin</b>	400-450 g	Boneless chicken - 250 g, White sauce - 2 cup, Butter - 2 tbsp., Salt - ¼ tsp., Pepper to taste, Tomato ketchup - 1 tbsp. Vegetables : Chopped French beans - 10~15, Carrots - 2 ea, Cauliflower - ½, Peas - ½ cup, Potato - 1 ea cut into pieces, Bottle gourd - ½ cup, Grated cheese - ¼ cup
<b>Instructions</b>		In microwave safe glass dish add butter, chicken, vegetables, ½ cup of water and cook. When beep mix all other ingredients, mix it well, sprinkle cheese. Take it on high rack, and press start. Serve hot.
<b>9-15 Chicken in Hot Garlic Sauce</b>	500-550 g	Boneless chicken - 250 g, Capsicum - 1 ea (cut into pieces), Oil - 3 tbsp., Garlic - 1 tbsp.(chopped), Dry red chili - 1 ea (cut into thin slices), Red chili paste - 1 tsp., Spring onion - 1 ea, Tomato ketchup - 3 tbsp., Red chili sauce - 1 tbsp., Soya sauce - 2 tsp., Vinegar - 1 tbsp., Pepper - ½ tsp., Sugar - ½ tsp., Corn flour - 4 tbsp. (dissolve in ½ cup of water)
<b>Instructions</b>		In microwave safe glass bowl put chicken, capsicum, oil, chopped ginger-garlic, ½ cup of water and cook. When beep add all other ingredients, ¼ cup of water, cover it and press start.

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-16 Chicken with Tomato Rice</b>	550-600 g	Boneless chicken - 150 g, Soaked rice - 1 cup, Sprouted green gram - ½ cup, Finely chopped carrot - ½ cup, Finely chopped French beans - ½ cup, Oil - 2 tbsp., Peanuts - 3 tbsp., Cumin - ½ tsp., Slices of Onion - 1 small, Tomato puree - 4 tbsp., Tomatoes - 2 ea, Turmeric - 1 pinch, Garlic paste - ½ tsp., Garam Masala - ½ tsp., Salt - 1 tsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, add soaked rice, chicken, onion, sprouted green gram and cook. When beep add all other ingredients, 3 cups of water and press start. Serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>9-18 Chicken Croquettes</b>	500-550 g	Chicken mince - 200 g, Butter - 1 tbsp., Chopped onion - ½, Green chili - 2 ea, Refined flour - 1 tbsp., Bread crumbs - 2 tbsp., Red chili flakes - ¼ tsp., Salt - ½ tsp., Pepper - ¼ tsp., Boiled Potato-2 medium Mayonnaise for serving
		<p><b>Instructions</b></p> <p>In a bowl add all ingredients and give them a desired shape. Grease the crusty plate and place croquettes on it and brush up a little butter, place the crusty plate at high rack, select menu and cook. When beep turn them and press start. Serve hot with mayonnaise.</p>
<b>9-19 Crispy Chicken</b>	450-500 g	<p>Chicken - 250 g, Beat in Egg - 1 ea, Salt - ¼ tsp., Red chili powder - ¼ tsp., Bread crumbs - ½ cup, Oil - 1-2 tbsp.</p> <p>For Marinade : Butter - 2 tbsp., Garlic paste - 2 tsp., Chili powder - 1½ tsp., Cumin seeds powder - 1 tsp., Coriander powder - 2 tsp., Cinnamon - 1 tsp., Salt - ½ tsp.</p>
		<p><b>Instructions</b></p> <p>Marinated chicken with all marinade ingredients &amp; put it in refrigerator for 1 hr. Roll out the marinated chicken in bread crumbs and place them over crusty plate, grease them with a little oil and put the crusty plate on high rack and press start. Serve hot.</p>
<b>9-20 Chicken Sandwiches</b>	3 ea	<p>Boiled Chicken - 100 g, Oil - 1 tbsp., Bread slice - 6 ea, Butter - 1 tbsp., Onion - ½ (cut into slices), Mayonnaise - 5~6 tbsp., Pepper - ½ tsp., Oregano - ¾ tsp., Mustard - 1 tsp.</p>
		<p><b>Instructions</b></p> <p>In a glass bowl mix all ingredients except bread slice. Apply this mixture to one bread slice and put other bread slice on it. Make a sandwich and take it on high rack and cook. When beep turn the side to make it golden in colour &amp; and press start. Serve hot with tomato sauce.</p>

## 0. Indian Famous Variety

Code/Food	Serving Size	Ingredients
0-1 <b>Naan Badami</b>	200-250 g	Refine flour- 200 g, Curd- 2 tbsp., yeast- 1 tsp., sugar- 1 pinch, blanched & sliced almonds- 1 tsp., oil - 1 tsp., luke warm water - enough to make dough, salt as per taste
		<p><b>Instructions</b></p> <p>In a small bowl add yeast, 2 tbsp. luke warm water, sugar and ½ tsp. oil, keep aside for 20 min. After 20 min in a bowl add all the ingredients and yeast except almonds. Make a dough and keep aside for 2 to 3 hours to double its size. Preheat microwave at 200 °C along with crusty plate on low rack. Divide the dough into 6 equal portions. Roll out each ball into oval shape naan and spread blanched almonds. Put it on crusty plate on low rack and cook on combination mode (micro 300w + convection 200 °C) for 4 minutes after beep cook again at convection mode at 200 °C for 5 min. Brush up with oil or ghee and serve hot.</p>

Code/Food	Serving Size	Ingredients
0-2 <b>Button Tetrazini</b>	500-550 g	Button - 250 g, Spaghetti - 100 g, Oil - 2 tbsp., Green capsicum - 1 small sized, Red capsicum - 1 small sized, Yellow capsicum - 1 small sized, Mushrooms - 4-5, Onion - 1 large sized, Garlic - 5-6 cloves, Basil Leaves - 5~6, Tomatoes - 4 medium size, Olive oil - 4 tbsp., Pepper powder - ½ tsp., Salt to taste, Grated Cheese - ½ cup
		<p><b>Instructions</b></p> <p>In microwave safe bowl mix oil, salt, mutton, 1 cup of water, cover it and cook. When beep add chopped capsicum, mushroom, onion, garlic, basil, tomato, pepper powder, salt, grated cheese and press start. Serve hot.</p>

Code/Food	Serving Size	Ingredients
0-3 <b>Button Kurma</b>	800-850 g	Boneless Mutton - 600 g, Cashewnuts - ½, chopped Green chillies - 2~3, Fresh coriander leaves - 1 few sprigs, Yogurt - 1 cup, Ginger-garlic paste - 2 tsp., Red chili powder - 1 tsp., Coriander powder - 2 tsp., Salt to taste, Oil - 2 tbsp., Bay leaf - 1, Cloves - 4~5, Green cardamom - 4~5, Green cardamoms - 4~5, Garam masala powder - 1 tsp., White pepper powder - ¼ tsp., Fresh cream - ½ cup
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl add oil, boneless mutton, green chili, cloves, green cardamom, garam masala, white pepper powder, ginger-garlic paste, 1 cup of water and cook. When beep add all other ingredients, mix it well and press start.</p>
0-4 <b>Button Mirchi</b>	800-900 g	Boneless Mutton - 600 g, Cashewnuts - ½ cup, Green chillies - 2~3, Fresh coriander leaves - 1 few sprigs, Yogurt - 1 cup, Ginger-garlic paste - 2 tps., Red chili powder - 1 tsp., Coriander powder - 2 tsp., Salt to taste, Oil - 2 tbsp., Bay leaf - 1, Cloves - 4~5, Green cardamoms - 4~5, Garam masala powder - 1 tsp., White pepper powder - ¼ tsp., Fresh cream - ½ cup
		<p><b>Instructions</b></p> <p>Make a paste of green chili, coriander and spring onion. In microwave safe glass bowl add oil, boneless mutton, green paste, ½ cup of water and cook. When beep add all other ingredients and press strat.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>0-5 Butter Keema</b>	700-800 g	<p>Keema - 500 g, Lemon juice - 1 tsp., Kashmiri red chilli powder - 1 tsp., Salt to taste</p> <p>For marination : Yogurt - 1 cup, Salt to taste, Ginger paste - 2 tbsp., Garlic paste - 2 tbsp., Lemon juice - 2 tbsp., Garam masala powder - 1 tsp., Mustard oil - 2 tbsp.</p> <p>For gravy : Green chilies - 2, Dried fenugreek leaves - ½ tsp., Butter - 2-3 tbsp., Bay leaves - 2, Pepper corns - 10, Cinnamon - 2" stick, Green cardomums - 5 cloves, Ginger paste - 1 tsp., Garlic paste - 1 tbsp., Tomato puree - 2 cups, Red chili powder - 1 tbsp., Garam masala powder - ½ tsp., Salt to taste, Honey - 2 tbsp., Fresh cream - ½ cup</p>
<b>Instructions</b>		
<p>Marinate kheema with all marination ingredients and take it in refrigerator for 1 hr. In microwave safe glass bowl add marinated kheema, gravy mixture, red chili powder, salt and cook. When beep add lemon juice, ¼ cup of water, mix it well and press start. Serve hot.</p>		
<b>0-6 Mutton &amp; Mushroom in Hot Tomato Sauce</b>	700-750 g	<p>Boneless Mutton - 500 g, Chopped mushrooms - 10~12, Chopped spring onions - 3~4, Chopped garlic - 5 cloves, Red chili (crushed) - 1 tbsp., Pepper corns - 5~6, Chopped tomato - 1 large size, Butter - 2 tbsp., Salt to taste, Tomato - ¾ cup, Honey - 2 tsp., Dried oregano - ¼ tsp.</p>
<b>Instructions</b>		
<p>In microwave safe add butter, mutton, 1 cup of water and cook. When beep add all other ingredients and press start. Serve hot.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>0-7 Bombay Prawn</b>	700-750 g	<p>Prawns - 500 g, Ginger-garlic - each 1 tsp., Cumin seeds - 1 tsp., Red chillies whole - 12~15, Cloves - 7~8, Cinnamon - 2 inch stick, Mustard seeds - 1 tsp., Vinegar - 4 tbsp., Chopped Onions - 2 medium size, Chopped tomato - 4 medium size, Oil - ½ cup, Sugar - 2 tbsp., Salt to taste</p>
<b>Instructions</b>		
<p>In microwave safe glass bowl take oil, chopped onion, chopped tomato, cumin seeds, ginger-garlic paste, cloves, cinnamon, cumin seeds, mustard seeds, chili, prawns and cook. When beep add vinegar, salt, sugar, mix it well and press start. Serve hot.</p>		
<b>0-8 Prawns in Thai Red Curry Sauce</b>	350 g	<p>Prawns - 250 g, Oil - 2 tbsp., Lemon - 1 tsp., Soy sauce - 1 tsp., Grind coconut - 1 cup, Fresh basil leaves - 6-8</p> <p>For red curry paste : Onion - 1 medium size, Garlic - 4 cloves, Red chillies whole - 8-10, Lemon grass stalk - 4" piece, Coriander seeds - 2 tsp., Cumin seeds - 1 tsp., Pepper corns - 6, Salt to taste</p>
<b>Instructions</b>		
<p>In microwave safe glass bowl take oil, ginger garlic, prawns, basil leaves and cook. When beep add coconut, red curry paste. Mix it well and press start. Serve hot.</p>		
<b>0-9 Chicken Vindaloo</b>	650-700 g	<p>Boneless Chicken - 500 g (cut into pieces), Dry red chilies - 6-7, Vinegar - 3 tbsp., Chopped Onion - 2 ea, Garlic &amp; ginger paste - each 1 tsp., Tomato puree - ¼ cup, Potato - 1 ea, Oil - 3 tbsp., Stick cinnamon - 2", Cumin powder - 1 tsp., Turmeric powder - ½ tsp., Salt - 1½ tsp., Water - ½ cup</p>
<b>Instructions</b>		
<p>In microwave safe glass bowl take oil, stick cinnamon, turmeric powder, garlic-ginger paste, chopped onion, chicken and cook. When beep add potato, tomato puree, cumin powder &amp; half cup of water. Mix it well and press start. Serve hot.</p>		

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>0-10 Dum Chicken Kali Mirch</b>	600-650 g	Chicken - 400 g (cut into 8 pieces) Marinade : Thick yogurt - $\frac{1}{2}$ cup, Almonds - 8~10 (ground to powder), Ginger-garlic paste - 1 tbsp., Oil - 1 tbsp., Red chili powder - $\frac{1}{2}$ tsp., Salt - $\frac{3}{4}$ tsp., Garama masala powder - $\frac{1}{2}$ tsp. Other ingredients : Oil - 3 tbsp., Peppercorns - $\frac{1}{2}$ tsp., Onion paste - 2 ea, Coriander powder - 1 tsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, chicken &amp; marinated ingredients. Mix it well &amp; keep it in refrigerator for 1 hr. and cook. When beep mix it well and press start. Serve hot.</p>
<b>0-11 Bengali Fish Curry</b>	400-450 g	Fish - 300 g (cut into 1½" flat pieces), Lemon juice - 1 tbsp., Salt - $\frac{1}{2}$ tsp., Turmeric - $\frac{1}{2}$ tsp., Oil - 4 tbsp., Chili powder - $\frac{1}{4}$ tsp., Chopped coriander - 1 tsp., Water - 1 cup Mustard paste (grind) : Yellow mustard - 4 tsp., Dry red chilies deseed - 2 ea, Finely chopped onion - 1, Salt - $\frac{1}{4}$ tsp., Water to grind - 2-3 tbsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, fish, lemon juice, chili powder, turmeric powder, salt and cook. When beep add mustard paste, one cup of water. Mix it well and press start. Serve hot with rice.</p>
<b>0-12 Chicken Sirka ka Pyaz</b>	600-650 g	Boneless chicken - 500 g (1" pieces), Chopped onion - 3 ea, Vinegar - $\frac{1}{2}$ cup, Black cumin - 1 tsp., Crushed cloves - 4, Cardamom Seeds crushed - 3, Chopped garlic -ginger - 1 tsp., Chopped tomato - 2 ea, Green chili - 1, Chopped mint - $\frac{1}{4}$ cup, Coriander - $\frac{1}{4}$ cup, Salt - 1 tsp., Garam masala - $\frac{1}{2}$ tsp., Red chili powder - $\frac{1}{2}$ tsp., Turemeric powder - $\frac{1}{4}$ tsp., Oil - 3 tsp., Cream -2 tbsp., Water - 1 cup
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take oil, chicken, chopped onion, vinegar, black cumin, crushed cardamom seeds, chopped garlic ginger, green chili and cook. When beep add all other ingredients with water. Mix it well and press start. Serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>0-13 Badami Tangri</b>	550-600 g	Drumsticks - 5 (500 g chicken legs) First marinade : Lemon juice - 2 tbsp., Oil - 1 tbsp., Salt - $\frac{1}{2}$ tsp., Red chili powder - $\frac{1}{2}$ tsp. Second Marinade : Yogurt - $\frac{1}{2}$ cup, Oil - 2 tbsp., Ginger-garlic paste - 2 tbsp., Almonds ground to powder - 8~10, Thick cream - $\frac{1}{4}$ cup, Corn flour - 1 tbsp., Salt - $\frac{3}{4}$ tsp., Chopped coriander - 2 tbsp., Dry fenugreek leaves - 2 tsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take drum stick &amp; add 1st marinade material, mix it well &amp; keep it in refrigerator for 1 hr. After 1 hr. take 2nd marinatde &amp; keep it in refrigerator for 1 hr. Arrange drum stick in metal tray. Apply little oil &amp; place it on crusty plate at high rack, put some oil around, and cook. When beep turn it and press start. Serve hot.</p>
<b>0-14 Mahi Fish Tikka</b>	650-700 g	Surmai - 500 g (cut into pieces), Gram flour - 3 tbsp., Lemon juice - 1 tbsp. First marinade : Vinegar or lemon juice - 2 tbsp., Red chili powder - $\frac{1}{2}$ tsp., Salt - $\frac{1}{4}$ tsp., Second marinade : Yogurt - $\frac{1}{2}$ cup, Carom seeds - $\frac{1}{2}$ tsp., Ginger-garlic paste - 2 tsp., Garam masala - $\frac{1}{2}$ tsp., Salt - 1 tsp., Pepper - $\frac{1}{2}$ tsp., Corn flour - 1 tbsp.
		<p><b>Instructions</b></p> <p>In microwave safe glass bowl take fish &amp; add 1st marinade material, mix it well &amp; keep it in refrigerator for 1 hr. After 1 hr. take 2nd marinade &amp; keep it in refrigerator for 1 hr. Roll out in gram flour. Arrange fish in metal tray. Apply little oil and place it on crusty plate at high rack, put some oil around, and cook. When beep turn it and press start. Serve hot.</p>

<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>	<b>Code/Food</b>	<b>Serving Size</b>	<b>Ingredients</b>
<b>0-15 Chicken Hot &amp; Sour Soup</b>	350-400 g	Chicken - 100 g (cut into 2-3 pieces), Water - 4 cups, Salt as per your taste. Other ingredients : Oil - 1 tbsp., Crushed garlic - $\frac{1}{4}$ tsp., Red chili paste - $\frac{1}{2}$ tsp., Chopped cabbage - 2 tbsp., Grated carrot - 2 tbsp., 1 Chicken soup cubes crushed, Sugar - 1 tsp., Pepper - $\frac{1}{4}$ tsp. Soya sauce - $\frac{1}{2}$ tsp., Tomato ketchup - 1 tbsp., White vinegar - 1 tbsp., Corn flour (dissolve $\frac{1}{4}$ cup of water) - 4 tbsp.	<b>0-18 Mutton Mint Shorba</b>	550-600 g	Boneless Mutton - 300 g (cut into pieces), Mint leaves - 25~30 (rawly chopped), Olive oil - 1 tbsp., Cumin seed powder - 1 tsp., Chopped onion - 1 ea, Chopped garlic - 1 tsp., Red chili flakes - $\frac{1}{4}$ tsp., Cinnamon powder - $\frac{1}{2}$ tsp., Green cardamom - 1 ea, Chopped tomato - 2 ea, Salt & pepper powder as per your taste, Coconut milk - $\frac{1}{2}$ cup, Water - 4 cups
<b>Instructions</b> In microwave safe glass bowl take chicken, water, salt and cook. When beep add all other ingredients and press start. Serve hot.		<b>Instructions</b> In microwave safe glass bowl add boneless mutton, olive oil, tomato, onion and cook. When beep add all other ingredients and press start. Serve hot.			
<b>0-16 Schezwan Prawns</b>	450-500 g	Prawns - 200 g, Red chili paste - 2 tbsp., Tomato sauce - 4 tbsp., Soya sauce - 1 tbsp., Ajinomoto - $\frac{1}{4}$ tsp., Sugar - 2 tsp., Salt as per your taste, Water - 1 cup, Oil - 2 tbsp., Pepper powder - $\frac{1}{4}$ tsp., 1" ginger chopped, Garlic - 5~6 (chopped), Green chili - 1 tsp., Spring onion - 2 tbsp. (chopped), Water - $\frac{1}{2}$ cup, Corn flour - 2 tbsp. (dissolve in 1 cup water), Vinegar - 1 tbsp.	<b>0-19 Chicken in Barley Soup</b>	600-700 g	Chicken pieces - 200 g, Barley - $\frac{1}{2}$ cup, Bay leaf - 1 ea, Crushed peppercorns - 5~6 ea, Chopped onion - 1 ea, Celery stick - 2 tbsp., Butter - 2 tbsp., Salt and pepper powder as per your taste, Corn flour - 1 tbsp. (dissolve in $\frac{1}{2}$ cup of water), Water - 6 cups, Chopped parsley - 1 tbsp. for garnish
<b>Instructions</b> In microwave safe glass bowl take prawns, ginger, garlic, green chili, water and cook. When beep add all other ingredients. Mix it well and press start.		<b>Instructions</b> Soak the barley in 2 cups of water for 2 hrs. In microwave safe deep glass bowl, take barley, chicken, onion and press start. When beep add all other ingredients, mix it well and press start. Serve hot with chopped parsley.			
<b>0-17 Kheema Kofta</b>	450-500 g	Keema - 250 g, Ginger-garlic paste - 1 tsp., Green chilies - 2 (chopped), Garam masala - $\frac{1}{2}$ tsp., Salt - $\frac{3}{4}$ tsp., Bread-crumbs - $\frac{1}{2}$ cup, Fresh coriander leaves - 2 tbsp. (chopped) For Creamy tomato sauce : Tomato puree - 1 cup, Chopped ginger - 1 tbsp., Salt - $\frac{1}{4}$ tsp., Red chili powder - $\frac{1}{4}$ tsp., Cumin powder - 1 tsp., Cream - $\frac{1}{2}$ cup, Orange red colour - 1 pinch	<b>0-20 Chicken in Noodle Soup</b>	550-600 g	Noodles - 200 g, Boneless Chicken - 200 g, Water - 4 cups, Fresh red chilies - 2 ea (sliced), Soya sauce - 2 tbsp., Chopped onion - 1 ea, White pepper powder & salt as per your taste, Fresh basil leaves - 10~12, Chopped Coriander leaves - 2 tbsp., Chopped spring onion - 2 tbsp., Sugar as per your taste, Oil - 2 tbsp.
<b>Instructions</b> In microwave safe glass bowl take kheema, ginger-garlic paste, garam masala, chopped green chilies, salt, make a kofta and cook. When beep add creamy tomato sauce material, kofta and press start. Serve hot with coriander leaves.		<b>Instructions</b> In microwave safe glass bowl add chicken, onion, oil, 1 cup of water and cook. When beep add all other ingredients and press start. Serve hot, garnish with coriander leaves and spring onion.			

## USING THE CURD/DOUGH PROOF FEATURES

The 5 **Curd/Dough Proof** features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the Curd/Dough Proof category by turning the **Multi Function Selector Dial** after press the **Curd/Dough Proof** button.

First, place the food in the centre of the turntable and close the door.

 Curd/Dough Proof	<ol style="list-style-type: none"><li>1. Press the <b>Curd/Dough Proof</b> button.</li></ol>
	<ol style="list-style-type: none"><li>2. Select the Dough Proof or Curd and press the <b>Multi Function Selector Dial</b>. 1) Curd 2) Dough Proof</li></ol>
	<ol style="list-style-type: none"><li>3. Select the type of food that you are cooking by turning the <b>Multi Function Selector Dial</b>. Refer to the table on the following page for a description of the various pre-programmed settings.</li></ol>
 START	<ol style="list-style-type: none"><li>4. Press the <b>START/+30s</b> button.</li></ol>

 Turntable is not operating during curd cooking.

The following table presents how to use the auto programmes for rising yeast dough or curd.

### 1. Curd

Code/Food	Serving Size	Instructions
1-1 Large Glass Bowl	500 g	Distribute 150 g curd into 5 ceramic cups or small glass jars evenly (30 g each). Add 100 ml milk into each cup. use long-life milk (room temperature; 3,5 % fat). Cover each with cling film and set in a circle on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.
1-2 Clay Pots	500 g	Mix 150 g curd with 500 ml long-life milk (room-temperature; 3,5 % fat). Pour evenly into large glass bowl. Cover with cling film and set on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.

### 2. Dough Proof

Code/Food	Serving Size	Instructions
2-1 Pizza Dough	300 - 500 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
2-2 Cake Dough	500 - 800 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
2-3 Bread Dough	600 - 900 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.

## USING THE POWER DEFROST FEATURES

The 5 **Power Defrost** features enable you to defrost meat, poultry, fish, bread, cake and fruit. The defrost time and power level are set automatically. You simply select the programme and the weight.

 Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.

	1. Press the <b>Power Defrost</b> button.
	2. Select the type of food that you are cooking by turning the <b>Multi Function Selector Dial</b> . Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the <b>Multi Function Selector Dial</b> to select the type of food.
	3. Select the size of the serving by turning the <b>Multi Function Selector Dial</b> .
	4. Press the <b>START/+30s</b> button. <b>Result:</b> <ul style="list-style-type: none"> <li>Defrosting begins.</li> <li>The oven beeps through defrosting to remind you to turn the food over.</li> </ul>
	5. Press the <b>START/+30s</b> button again to finish defrosting. <b>Result:</b> When cooking has finished, the oven will beep and flash "0" 4 times. The oven will then beep one time per minute.

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions. Remove all kind of package material before defrosting. Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread, cake and fruit on kitchen paper.

Code/Food	Serving Size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for lamb, pork, steaks, chops, minced meat. Stand for 20-90 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-90 minutes.
3 Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-80 minutes.
4 Bread/Cake	125-1000 g	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 10-60 minutes.
5 Fruit	100-600 g	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits. Stand for 5-20 minutes.

## USING THE ROTI & NAAN FEATURES

The 2 **Roti & Naan** cook features include/provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the Roti & Naan cook category by press the **Roti & Naan** button.

First, place the food in the centre of the turntable and close the door.

 **ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly. **ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.

	1. Press the <b>Roti &amp; Naan</b> button.
	2. Select the category of food by turning the <b>Multi Function Selector Dial</b> .
	3. Press the <b>START/+30s</b> button.

Code/Food	Serving Size	Ingredients
1 Roti	8 pieces	Whole wheat flour - 4 cups, Water as required for dough, Ghee - 50 g, Salt to taste
<b>Instructions</b>		Preheat oven and crusty plate with high rack. In a bowl add flour, salt and ghee. Knead with sufficient water and make smooth dough. Cover and leave for ½ hour. Divide into 8 equal balls, roll out with the help of a rolling pin and make rotis. When beep, apply a little water at one side of roti and place that side down on the crusty plate and cook. Serve hot with butter. Repeat the same process until all the naan has been prepared.
2 Naan	8 pieces	All-purpose flour - 4 cups, Sugar - 1 tbsp., Hot water (but not boiling, just hot tap water) - ¼ cup, Active dry yeast - ¾ tsp., Warm milk - ¾ cup, Melted butter for brushing (may use olive oil), Fresh garlic or other herbs for topping
Preheat oven and crusty plate with high rack. Combine the warm water with the sugar and yeast. Let sit for 10 minutes until foamy. It should smell like bread. In a bowl add the flour, warm milk and yeast mixture. Mix with a wooden spoon until dough starts to come together and then finish mixing the dough with your hands until a smooth but still sticky ball forms. Cover the dough with a damp towel or plastic wrap and let sit in a warm place for 2 to 3 hour. After 2 to 3 hours dough will be double to its size, punch the dough down and divide into eight equal balls. Using a rolling-pin, roll each piece of dough into an oval shape. The dough should be about 6-8 inches long and about ¼-inch thick, but not thinner. Repeat this method with the rest of the dough. When beep, place the dough on the hot crusty plate and cook. Take out cooked naan after 4 min. Serve hot with butter. Repeat the same process until all the naan has been prepared.		

## SPIT-ROASTING

The barbecue spit is useful for grilling, as you do not need to turn the meat over. It can be used for combined microwave and Convection cooking.

- Make sure that the weight of the meat is evenly distributed on the spit and that the spit rotates evenly.






Always use oven gloves when touching the recipients in the oven, as they will be very hot.

	<ol style="list-style-type: none"> <li>Push the roasting spit through the centre of the meat. <b>Example:</b> Push the spit between the backbone and breast of a chicken. Place the spit on its upright on the glass bowl the glass bowl and the glass bowl onto the turntable. To help brown the meat, brush it with and spices oil.</li> </ol>
 Combi	<ol style="list-style-type: none"> <li>Press the <b>Combi</b> button. <b>Result:</b> The following indications are displayed: Cb - 1 (Microwave + Grill)</li> </ol>
	<ol style="list-style-type: none"> <li>Make the display indication Cb-2 by turning the <b>Multi Function Selector Dial</b>, and then press the <b>Multi Function Selector Dial</b>. <b>Result:</b> The following indications are displayed:  (microwave &amp; convection combi mode) 600 W (output power)</li> </ol>
	<ol style="list-style-type: none"> <li>Select the appropriate power level by turning the <b>Multi Function Selector Dial</b> until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the <b>Multi Function Selector Dial</b> to set the power level.           <ul style="list-style-type: none"> <li>If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C )</li> </ul> </li> </ol>

	<ol style="list-style-type: none"> <li>Select the appropriate temperature by turning the <b>Multi Function Selector Dial</b>. (Temperature : 200~40 °C) At that time, press the <b>Multi Function Selector Dial</b> to set the temperature.           <ul style="list-style-type: none"> <li>If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.</li> </ul> </li> </ol>
	<ol style="list-style-type: none"> <li>Set the cooking time by turning the <b>Multi Function Selector Dial</b>.           <ul style="list-style-type: none"> <li>The maximum cooking time is 60 minutes.</li> </ul> </li> </ol>
	<ol style="list-style-type: none"> <li>Press the <b>START/+30s</b> button. <b>Result:</b> <ul style="list-style-type: none"> <li>Combination cooking starts.</li> <li>The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over.</li> <li>When cooking has finished, the oven will beep and flash "0" 4 times. The oven will then beep one time per minute.</li> <li>When the meat has been fully cooked, carefully remove the spit, using oven gloves to protect your hands.</li> </ul> </li> </ol>

## USING THE CRUSTY PLATE

This crusty plate allows you to brown food not only on the top with the grill, but also the bottom of the food turns crispy and brown due to the high temperature of the crusty plate. Several items which you can prepare on the crusty plate can be found in the chart (see next page). The crusty plate can also be used for bacon, eggs, sausages, etc.

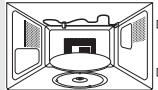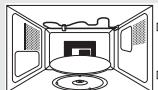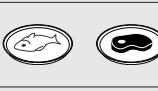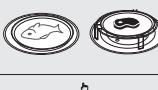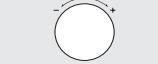	1. Place the crusty plate directly on the turntable and preheat it with highest Microwave-Grill-Combination [600 W + Grill] by following the times and instructions in the chart.
	2. Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely.
	3. Place the food on the crusty plate.
	4. Place the crusty plate on the metal rack (or turntable) in the microwave.
	5. Select the appropriate cooking time and power. (Refer to the table on the side)

-  Always use oven gloves to take out the crusty plate, as will become very hot.
-  Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
-  Do not place any objects on the crusty plate that are not heat-resistant.
-  Never place the crusty plate in the oven without turntable.
-  Clean the crusty plate with warm water and detergent and rinse off with clean water.
-  Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.
-  Please note that the crust plate is not dish washer-safe.

## CONVECTION

The convection mode enables you to cook food in the same way as in a traditional oven. The microwave mode is not used. You can set the temperature, as required, in a range varying from 40 °C to 200 °C. The maximum cooking time is 60 minutes.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and browning, if you use the low rack.

Check that the heating element is in the horizontal position. Open the door and place the recipient on the low rack and set on turntable.

 Convection	1. Press the <b>Convection</b> button. <b>Result:</b> The following indications are displayed:  (convection mode) 180 °C (temperature)
	2. Set the temperature by turning the <b>Multi Function Selector Dial</b> . (Temperature : 40~200 °C, 10 °C interval) <ul style="list-style-type: none"><li>• If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.</li></ul>
	3. Press the <b>Multi Function Selector Dial</b> .
	4. Set the cooking time by turning the <b>Multi Function Selector Dial</b> . (If you want to preheat the oven, select “: 0”)
	5. Press the <b>START/+30s</b> button. <b>Result:</b> Cooking starts: <ul style="list-style-type: none"><li>• When cooking has finished, the oven will beep and flash “0” 4 times. The oven will then beep one time per minute.</li></ul>

## GRILLING

The grill enables you to heat and brown food quickly, without using microwaves.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the high rack.

	1. Open the door and place the food on the rack.
	2. Press the <b>Grill</b> button. <b>Result:</b> The following indications are displayed:  • You cannot set the temperature of the grill.
	3. Set the grilling time by turning the <b>Multi Function Selector Dial</b> . • The maximum grilling time is 60 minutes.
	4. Press the <b>START/+30s</b> button. <b>Result:</b> Grilling starts. • When cooking has finished, the oven will beep and flash "0" 4 times. The oven will then beep one time per minute.

## CHOOSING THE ACCESSORIES

	Traditional convection cooking does require cookware. You should, however, use only cookware that you would use in your normal oven.  Microwave-safe containers are not usually suitable for convection cooking; don't use plastic containers, dishes, paper cups, towels, etc.
--	---

If you wish to select a combined cooking mode (microwave and grill or convection), use only recipients that are microwave-safe and oven-proof.

- For further details on suitable cookware and utensils, refer to the cookware guide on page 65.

## COMBINING MICROWAVES AND GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

- ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.

- ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

You can improve cooking and grilling, if you use the high rack.

Open the door. Place the food on the rack best suited to the type of food to be cooked. Place the rack on the turntable. Close the door.

	1. Press the <b>Combi</b> button. <b>Result:</b> The following indications are displayed: Cb - 1 (Microwave + Grill)
	2. Make the display indicating Cb-1, and then press the <b>Multi Function Selector Dial</b> . <b>Result:</b> The following indications are displayed:  600 W (output power)
	3. Select the appropriate power level by turning the <b>Multi Function Selector Dial</b> until the corresponding output power is displayed (600, 450, 300 W). At that time, press the <b>Multi Function Selector Dial</b> to set the power level. • You cannot set the temperature of the grill. • If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.
	4. Set the cooking time by turning the <b>Multi Function Selector Dial</b> . • The maximum cooking time is 60 minutes.
	5. Press the <b>START/+30s</b> button. <b>Result:</b> • Combination cooking starts. • When cooking has finished, the oven will beep and flash "0" 4 times. The oven will then beep one time per minute.

## COMBINING MICROWAVES AND CONVECTION

Combination cooking uses both microwave energy and convection heating. No preheating is required as the microwave energy is immediately available.

Many foods can be cooked in combination mode, particularly:

- Roast meats and poultry
- Pies and cakes
- Egg and cheese dishes

- ALWAYS** use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.
- ALWAYS** use oven gloves when touching the recipients in the oven, as they will be very hot.  
You can get better cooking and browning, if you use the low rack.

Open the door. Place the food on the turntable or on the low rack which should then be placed on the turntable. Close the door. The heating element must be in the horizontal position.

	<b>1.</b> Press the <b>Combi</b> button. <b>Result:</b> The following indications are displayed: Cb - 1 (Microwave + Grill)
	<b>2.</b> Make the display indicating Cb-2 (Microwave + Convection) by turning the <b>Multi Function Selector Dial</b> , and then press the <b>Multi Function Selector Dial</b> .
	<b>3.</b> Select the appropriate power level by turning the <b>Multi Function Selector Dial</b> until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the <b>Multi Function Selector Dial</b> to set the power level. <ul style="list-style-type: none"><li>• If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default : 600 W )</li></ul>

	<b>4.</b> Select the appropriate temperature by turning the <b>Multi Function Selector Dial</b> (Temperature : 200~40 °C). At that time, press the <b>Multi Function Selector Dial</b> to set the power level. <ul style="list-style-type: none"><li>• If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage. (Default : 180 °C )</li></ul>
	<b>5.</b> Set the cooking time by turning the <b>Multi Function Selector Dial</b> . <ul style="list-style-type: none"><li>• The maximum cooking time is 60 minutes.</li></ul>
	<b>6.</b> Press the <b>START/+30s</b> button. <b>Result:</b> <ul style="list-style-type: none"><li>• Combination cooking starts.</li><li>• The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over.</li><li>• When cooking has finished, the oven will beep and flash "0" 4 times. The oven will then beep one time per minute.</li></ul>

## SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

	<b>1.</b> Press the <b>START/+30s</b> and <b>STOP/ECO</b> button at the same time for one second. <b>Result:</b> The oven does not beep to indicate the end of a function.
	<b>2.</b> To switch the beeper back on, press the <b>START/+30s</b> and <b>STOP/ECO</b> button again at the same time for one second. <b>Result:</b> The oven operates normally.

## USING THE CHILD LOCK FEATURES

Your microwave oven is fitted with a special child lock programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.

	<p>1. Press the <b>Child Lock</b> button for 3 second.  <b>Result:</b></p> <ul style="list-style-type: none"> <li>The oven is locked (no functions can be selected).</li> <li>The display shows "L".</li> </ul>
	<p>2. To unlock the oven, press the <b>Child Lock</b> button for 3 second.  <b>Result:</b> The oven can be used normally.</p>

## USING THE TURNTABLE ON/OFF FEATURES

The **Turntable On/Off** button enables you to use large dishes which fill the whole oven by stopping the turntable from rotating (only manual cooking mode).

The results will be less satisfactory in this case as the cooking is less even.  
We recommend that you turn the dish by hand halfway through the cooking process.

Never operate the turntable without food in the oven.  
**Reason:** This may cause fire or damage to the unit.

	<p>1. Press the <b>Turntable On/Off</b> button.  <b>Result:</b> The turntable will not rotate.</p>
	<p>2. To switch the turntable rotating back on, press the <b>Turntable On/Off</b> button again.  <b>Result:</b> The turntable will rotate.</p>

This Turntable On/Off button is available only during cooking.

## cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
<b>Aluminum foil</b>	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
<b>Crust plate</b>	✓	Do not preheat for more than 8 minutes.
<b>China and earthenware</b>	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
<b>Disposable polyester cardboard dishes</b>	✓	Some frozen foods are packaged in these dishes.
<b>Fast-food packaging</b>		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.

Cookware	Microwave-safe	Comments
<b>Glassware</b>		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
<b>Metal</b>		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
<b>Paper</b>		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
<b>Plastic</b>		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
<b>Wax or grease-proof paper</b>	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓✗ : Use caution

✗ : Unsafe

## cooking guide

### MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

### COOKING

#### Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency.

Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

#### Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

#### Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

#### Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

### Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer.

Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

<b>Food</b>	<b>Portion</b>	<b>Power</b>	<b>Time (min.)</b>
Spinach	150 g	600 W	5-6
<b>Instructions</b>			
Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.			
Broccoli	300 g	600 W	8-9
<b>Instructions</b>			
Add 30 ml (2 tbsp.) cold water. Serve after 2-3 minutes standing.			
Peas	300 g	600 W	7-8
<b>Instructions</b>			
Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.			
Green Beans	300 g	600 W	7½-8½
<b>Instructions</b>			
Add 30 ml (2 tbsp.) cold water. Serve after 2-3 minutes standing.			
Mixed Vegetables (Carrots/Peas/Corn)	300 g	600 W	7-8
<b>Instructions</b>			
Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.			
Mixed Vegetables (Chinese style)	300 g	600 W	7½-8½
<b>Instructions</b>			
Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.			

### Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

**Hint:** Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

<b>Food</b>	<b>Portion</b>	<b>Power</b>	<b>Time (min.)</b>
Broccoli	250 g 500 g	900 W	4½-5 7-8
<b>Instructions</b>			
Prepare even sized florets. Arrange the stems to the centre. Serve after 3 minutes standing.			
Brussels Sprouts	250 g	900 W	6-6½
<b>Instructions</b>			
Add 60-75 ml (5-6 tbsp.) water. Serve after 3 minutes standing.			
Carrots	250 g	900 W	4½-5
<b>Instructions</b>			
Cut carrots into even sized slices. Serve after 3 minutes standing.			
Cauliflower	250 g 500 g	900 W	5-5½ 7½-8½
<b>Instructions</b>			
Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Serve after 3 minutes standing.			
Courgettes	250 g	900 W	4-4½
<b>Instructions</b>			
Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender. Serve after 3 minutes standing.			
Egg Plants	250 g	900 W	3½-4
<b>Instructions</b>			
Cut egg plants into small slices and sprinkle with 1 tbsp. lemon juice. Serve after 3 minutes standing.			

<b>Food</b>	<b>Portion</b>	<b>Power</b>	<b>Time (min.)</b>
<b>Leeks</b>	250 g	900 W	4-4½
	<b>Instructions</b> Cut leeks into thick slices. Serve after 3 minutes standing.		
<b>Mushrooms</b>	125 g	900 W	1½-2
	250 g		2½-3
<b>Onions</b>	<b>Instructions</b> Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Serve after 3 minutes standing.		
	250 g	900 W	5-5½
<b>Pepper</b>	<b>Instructions</b> Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water. Serve after 3 minutes standing.		
	250 g	900 W	4½-5
<b>Potatoes</b>	<b>Instructions</b> Cut pepper into small slices.		
	250 g	900 W	4-5
<b>Turnip Cabbage</b>	500 g		7-8
	<b>Instructions</b> Weigh the peeled potatoes and cut them into similar sized halves or quarters. Serve after 3 minutes standing.		
<b>Turnip Cabbage</b>	250 g	900 W	5½-6
	<b>Instructions</b> Cut turnip cabbage into small cubes. Serve after 3 minutes standing.		

### Cooking Guide for rice and pasta

**Rice:** Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.

After the cooking time is over, stir before standing time and salt or add herbs and butter.

Remark: the rice may not have absorbed all water after the cooking time is finished.

**Pasta:** Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.

Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

<b>Food</b>	<b>Portion</b>	<b>Power</b>	<b>Time (min.)</b>
<b>White Rice (Parboiled)</b>	250 g	900 W	15-16
	375 g		17½-18½
<b>Instructions</b> Add cold water of double quantity. Serve after 5 minutes standing.			
<b>Brown Rice (Parboiled)</b>	250 g	900 W	20-21
	375 g		22-23
<b>Instructions</b> Add cold water of double quantity. Serve after 5 minutes standing.			
<b>Mixed Rice (Rice + Wild rice)</b>	250 g	900 W	16-17
	<b>Instructions</b> Add 500 ml cold water. Serve after 5 minutes standing.		
<b>Mixed Corn (Rice + Grain)</b>	250 g	900 W	17-18
	<b>Instructions</b> Add 400 ml cold water. Serve after 5 minutes standing.		
<b>Pasta</b>	250 g	900 W	10-11
	<b>Instructions</b> Add 1000 ml hot water. Serve after 5 minutes standing.		

## REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.

Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

### Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

### Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.

Check the tables for guidance.

In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).

Stir well or turn food over during reheating for best results. When possible, stir again before serving.

Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food. It is preferable to underestimate cooking time and add extra heating time, if necessary.

### Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.

Always make sure that the reheated food is piping hot throughout.

Allow food to stand for a short time after reheating - to let the temperature even out.

The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.

Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

## REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

## REHEATING BABY FOOD

### BABY FOOD:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

### BABY MILK:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

### REMARK:

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

### Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Portion	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup)	900 W	1-1½
	300 ml (2 cups)		2-2½
	450 ml (3 cups)		3-3½
	600 ml (4 cups)		3½-4
	<b>Instructions</b>		
Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well. Serve after 1-2 minutes standing.			
Soup (Chilled)	250 g	900 W	2½-3
	350 g		3-3½
	450 g		3½-4
	550 g		4½-5
	<b>Instructions</b>		
Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving. Serve after 2-3 minutes standing.			

<b>Food</b>	<b>Portion</b>	<b>Power</b>	<b>Time (min.)</b>
<b>Stew (Chilled)</b>	350 g	600 W	4½-5½
<b>Instructions</b>			
Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving.			
Serve after 2-3 minutes standing.			
<b>Pasta with Sauce (Chilled)</b>	350 g	600 W	3½-4½
<b>Instructions</b>			
Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving.			
Serve after 3 minutes standing.			
<b>Filled Pasta with Sauce (Chilled)</b>	350 g	600 W	4-5
<b>Instructions</b>			
Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 3 minutes standing.			
<b>Plated Meal (Chilled)</b>	350 g 450 g	600 W	4½-5 5½-6½
<b>Instructions</b>			
Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Serve after 3 minutes standing.			
<b>Cheese Fondue Ready-To-Serve (Chilled)</b>	400 g	600 W	6-7
<b>Instructions</b>			
Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving. Serve after 1-2 minutes standing.			

### Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

<b>Food</b>	<b>Portion</b>	<b>Power</b>	<b>Time</b>
<b>Baby Food (Vegetables + Meat)</b>	190 g	600 W	30 sec.
<b>Instructions</b>			
Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.			
<b>Baby Porridge (Grain + Milk + Fruit)</b>	190 g	600 W	20 sec.
<b>Instructions</b>			
Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.			
<b>Baby Milk</b>	100 ml 200 ml	300 W	30-40 sec. 1 min. to 1 min. 10 sec.
<b>Instructions</b>			
Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turntable. Cook uncovered. Before serving, shake well and check the temperature carefully. Serve after 2-3 minutes standing.			

## DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible. Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

**Hint:** Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Food	Portion	Power	Time (min.)
<b>Meat</b>			
Minced Meat	250 g	180 W	6-7
	500 g		8-13
Pork Steaks	250 g	180 W	7-8
<b>Instructions</b>			
Place the meat on turntable. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Serve after 15-30 minutes standing.			

Food	Portion	Power	Time (min.)
<b>Poultry</b>	500 g (2 pcs)	180 W	14-15
	1200 g	180 W	32-34
<b>Instructions</b>			
<b>Fish</b>	200 g	180 W	6-7
	400 g	180 W	11-13
<b>Instructions</b>			
<b>Fruits</b>	300 g	180 W	6-7
	<b>Instructions</b>		
Spread fruit on a flat, round glass dish (with a large diameter). Serve after 5-10 minutes standing.			
<b>Bread</b>	2 pcs	180 W	1-1½
	4 pcs		2½-3
	250 g	180 W	4-4½
<b>Instructions</b>			
Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Serve after 5-20 minutes standing.			

## **GRILL**

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-5 minutes will make the food brown more quickly.

**Cookware for grilling:**

Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

**Food suitable for grilling:**

Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

**Important remark:**

Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

## **MICROWAVE + GRILL**

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model:

600 W + Grill, 450 W + Grill and 300 W + Grill.

**Cookware for cooking with microwave + grill**

Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

**Food suitable for microwave + grill cooking:**

Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

**Important remark:**

Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.

The food must be turned over, if it is to be browned on both sides.

## **Grill Guide for Fresh Food**

Preheat the grill with the grill-function for 2-3 minutes.

Use the power levels and times in this table as guide lines for grilling.

Use oven gloves when taking out.

Fresh food	Portion	Power	1 step (min.)	2 step (min.)
<b>Toast Slices</b>	4 pcs (each 25 g)	Grill only	3-4	2-3
<b>Instructions</b>				
Put toast slices side by side on the high rack.				
<b>Grilled Tomatoes</b>	400 g (2 pcs)	300 W + Grill	5-6	-
<b>Instructions</b>				
Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the high rack. Stand for 2-3 minutes.				
<b>Tomato-Cheese Toast</b>	4 pcs (300 g)	300 W + Grill	4-5	-
<b>Instructions</b>				
Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.				
<b>Toast Hawaii (Ham, Pineapple, Cheese slices)</b>	4 pcs (500 g)	300 W + Grill	5-6	-
<b>Instructions</b>				
Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.				
<b>Baked Potatoes</b>	500 g	600 W + Grill	7-8	-
<b>Instructions</b>				
Cut potatoes into halves. Put them in a circle on the high rack with the cut side to the grill.				
<b>Gratin Potatoes/Vegetables (Chilled)</b>	450 g	450 W + Grill	9-11	-
<b>Instructions</b>				
Put the fresh gratin into a small glass pyrex dish. Put the dish on the high rack. After cooking stand for 2-3 minutes.				

Fresh food	Portion	Power	1 step (min.)	2 step (min.)
Baked Apples	2 apples (ca. 400 g)	300 W + Grill	7-8	-
<b>Instructions</b>				
Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the low rack.				
Chicken Pieces	500 g (2 pcs)	300 W + Grill	8-10	6-8
<b>Instructions</b>				
Brush chicken pieces with oil and spices. Put them in a circle on the high rack. After grilling stand for 2-3 minutes.				
Roast Chicken	1200 g	450 W + Grill	18-19	17
<b>Instructions</b>				
Brush the chicken oil and spices. Put the chicken on the low rack. After grilling stand for 5 minutes.				
Roast Fish	400-500 g	300 W + Grill	5-7	5½-6½
<b>Instructions</b>				
Brush skin of whole fish with oil and add herbs and spices. Put two fishes side by side (head to tail) on the high rack. After grilling stand for 2-3 minutes.				

## CONVECTION

Cooking with convection is the traditional and well known method of cooking food in a traditional oven with hot air.

The heating element and the fan position is at the back-wall, so that the hot air is circulating. This mode is supported by the top heating element.

### Cookware for convection cooking:

All conventional ovenproof cookware, baking tins and sheets – anything you would normally use in a traditional convection oven – can be used.

### Food suitable for convection cooking:

All biscuits, individual scones, rolls and cakes should be made by this mode as well as rich fruit cakes, choux pastry and soufflés.

## MICROWAVE + CONVECTION

This mode combines the microwave energy with the hot air and is therefore reducing the cooking time while giving the food a brown and crispy surface.

Cooking with convection is the traditional and well known method of cooking food in an oven with hot air circulated by a fan on the back-wall.

### Cookware for cooking with microwaves + convection:

Should be able to let the microwaves pass through. Should be ovenproof (like glass, pottery or china without metal trims); similar to the cookware described under Microwave + Grill.

### Food suitable for Microwave + Convection cooking:

All kinds of meats and poultry as well as casseroles and gratin dishes, sponge cakes and light fruit cakes, pies and crumbles, roast vegetables, scones and breads.

## Convection Guide for fresh and frozen food

Preheat the convection with the auto pre-heat function to the desired temperature. Use the power levels and times in this table as guide lines for convection cooking. Use oven gloves when taking out.

Fresh food	Portion	Power	1 step (min.)	2 step (min.)
<b>PIZZA</b> Frozen Pizza (Ready baked)	300 g	1 step 300 W + 200 °C 2 step Grill	11-12	2-3
<b>Instructions</b> Place the pizza on the low rack. After baking stand for 2-3 minutes.				
<b>PASTA</b> Frozen Lasagne	400 g	1 step 450 W + 200 °C 2 step Convt. 200 °C	15-16	5-6
<b>Instructions</b> Put into a suitable sized glass pyrex dish or leave in the original packaging (take care that this is suitable for microwaves and oven heat). Put frozen pasta gratin on the low rack. After cooking stand for 2-3 minutes.				
<b>MEAT</b> Roast Lamb (Medium)	1200-1300 g	600 W + 180 °C	20-23	10-13
<b>Instructions</b> Brush lamb with oil and spice it with pepper, salt and paprika. Put it on the low rack, first with the fat side down. After cooking wrap in aluminium foil and stand for 10-15 minutes.				
Roast Chicken	1000-1100 g	450 W + 200 °C	20-22	20
<b>Instructions</b> Brush chicken with oil and spices. Put chicken first breast side down, second side breast side up on the low rack. Stand for 5 minutes.				

Fresh food	Portion	Power	1 step (min.)	2 step (min.)
<b>BREAD</b> Fresh Bread Rolls	6 pcs (350 g)	100 W + 180 °C	8-10	-
<b>Instructions</b> Put bread rolls in a circle on the low rack. Stand for 2-3 minutes.				
Garlic Bread (Chilled, Prebaked)				
<b>Instructions</b> Put the chilled baguette on baking paper on the low rack. After baking stand for 2-3 minutes.				
<b>CAKE</b> Marble Cake (Fresh Dough)	500 g	Only 180 °C	38-43	-
<b>Instructions</b> Put the fresh dough in a small rectangular black metal baking dish (length 25 cm). Put the cake on the low rack. After baking stand for 5-10 minutes.				
Small Cakes (Fresh Dough)				
<b>Instructions</b> Fill the fresh dough evenly in paper cups and set on baking tray on the low rack. After baking stand for 5 minutes.				
Cookies (Fresh Dough)				
<b>Instructions</b> Put the chilled croissants on baking paper on the low rack.				
Frozen Cake				
<b>Instructions</b> Put the frozen cake directly on the low rack. After defrost and warming stand for 15-20 minutes.				

## TIPS AND TRICKS

### MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid. Heat for 30-40 seconds using 900 W, until butter is melted.

### MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish. Heat for 3-5 minutes, using 450 W until chocolate is melted. Stir once or twice during melting. Use oven gloves while taking out!

### MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish. Heat for 20-30 seconds using 300 W, until honey is melted.

### MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water. Put drained gelatine into a small glass pyrex bowl. Heat for 1 minute using 300 W. Stir after melting.

### COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

### COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well. Cook covered for 10-12 minutes using 900 W. Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

### COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W. Stir several times well during cooking.

### BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate. Stir several times during browning for 3½ to 4½ minutes using 600 W. Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

## troubleshooting and information codes

### TROUBLESHOOTING

If you have any of the problems listed below try the solutions given.

#### This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

#### The oven does not start when you press the START/+30s button.

- Is the door completely closed?

#### The food is not cooked at all.

- Have you set the timer correctly and/or pressed the **START/+30s** button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

#### The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

#### The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

#### The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

#### Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

### **Smoke and bad smell when initial operating.**

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.  
To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.
-  If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.  
Please have the following information ready;
- The model and serial numbers, normally printed on the rear of the oven
  - Your warranty details
  - A clear description of the problem
- Then contact your local dealer or SAMSUNG aftersales service.

### **INFORMATION CODES**

#### **"SE" message indicates.**

- Clean the keys and check if there is water on the surface around key. Turn off the microwave oven and try setting again. If it occurs again, call your local SAMSUNG Customer Care Centre.

#### **"E-12" message indicates.**

- The "E-12" message is Gas Sensor Short. This error may occur because of the high humidity in the cavity when you operate the microwave oven once again shortly after the previous operation of microwave oven for some food is finished. In this case, because there is a possibility that the Gas Sensor is not out of order turn off the microwave oven and try setting again. If this error occurs again, call your local SAMSUNG Customer Care Centre.

#### **"E-24" message indicates.**

- Before the microwave can overheat, the "E-24" message appears on the display. If the "E-24" message appears, press the STOP/ECO key to utilize the initialization mode. After the oven cools, try operating the oven. If the "E-24" message appears again, contact your local Samsung Customer Care Centre.

-  For any codes not listed above, or if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

### **technical specifications**

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

<b>Model</b>	<b>MC28A5147**</b>
<b>Power source</b>	230 V ~ 50 Hz AC
<b>Power consumption</b>	
Maximum power	2900 W
Microwave	1400 W
Grill (heating element)	1500 W
Convection (heating element)	Max. 2100 W
<b>Output power</b>	100 W / 900 W - 6 levels (IEC-705)
<b>Operating frequency</b>	2450 MHz
<b>Dimensions (W x H x D)</b>	
Outside (Include Handle)	517 x 310 x 475.6 mm
Oven cavity	358 x 235.5 x 327 mm
<b>Volume</b>	28 liter
<b>Weight</b>	
Net	17.80 kg approx.

correct disposal of this product (waste electrical & electronic equipment)



**(Applicable in countries with separate collection systems)**

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, and USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or the human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information on safe disposal and recycling visit our website.

[www.samsung.com/in/support](http://www.samsung.com/in/support) or contact our Helpline numbers-

1800 40 SAMSUNG(7267864)

1800 5 SAMSUNG(7267864)

This product is RoHS compliant

memo

memo

memo

memo

---

memo

---

QUESTIONS OR COMMENTS?

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
CHINA	400-810-5858	<a href="http://www.samsung.com/cn/support">www.samsung.com/cn/support</a>
TAIWAN	0800-32-9999 (All Product) 0809-00-5237 (B2B / Dealer)	<a href="http://www.samsung.com/tw/support">www.samsung.com/tw/support</a>
HONG KONG	3698 4698 (All Product) 3698 4688 (B2B )	<a href="http://www.samsung.com/hk/support (Chinese)">www.samsung.com/hk/support (Chinese)</a> <a href="http://www.samsung.com/hk_en/support (English)">www.samsung.com/hk_en/support (English)</a>
MACAU	0800 333	<a href="http://www.samsung.com/hk/support (Chinese)">www.samsung.com/hk/support (Chinese)</a> <a href="http://www.samsung.com/hk_en/support (English)">www.samsung.com/hk_en/support (English)</a>
SINGAPORE	1800 7267864   1800-SAMSUNG (Other)	<a href="http://www.samsung.com/sg/support">www.samsung.com/sg/support</a>
AUSTRALIA	1300 362 603 (Other)	<a href="http://www.samsung.com/au/support">www.samsung.com/au/support</a>
NEW ZEALAND	0800 726 786 (All Product)	<a href="http://www.samsung.com/nz/support">www.samsung.com/nz/support</a>
VIETNAM	By English: Toll free numbers: _ 1800 588 889 (All Product) Hotline: (028)73056888 By Vietnamese: Tổng đài miễn phí cước gọi: _ 1800 588 889 (tất cả sản phẩm) Đường dây nóng: (028)73056888	<a href="http://www.samsung.com/vn/support">www.samsung.com/vn/support</a>
THAILAND	Hotline no : 1282 1800-29-3232 (Toll free for all product)	<a href="http://www.samsung.com/th/support">www.samsung.com/th/support</a>
MYANMAR	+95-1-2399-888	<a href="http://www.samsung.com/mm/support">www.samsung.com/mm/support</a>

COUNTRY / LOCATION	CALL	OR VISIT US ONLINE AT
CAMBODIA	1800-20-3232 (Toll free)	<a href="http://www.samsung.com/th/support">www.samsung.com/th/support</a>
LAOS	+856-214-17333	<a href="http://www.samsung.com/th/support">www.samsung.com/th/support</a>
MALAYSIA	1800-88-9999 (OTH) +603-7713 7420 (Overseas contact)	<a href="http://www.samsung.com/my/support">www.samsung.com/my/support</a>
INDONESIA	021-5699-7777 0800-112-8888 (All Product, Toll Free) 0800-112-7777 (All Product, Toll Free)	<a href="http://www.samsung.com/id/support">www.samsung.com/id/support</a>
PHILIPPINES	All Products : 1-800-10-7267864 [PLDT-Toll Free] 1-800-8-7267864 [Globe-Toll Free] 84222111 [Landline ]	<a href="http://www.samsung.com/ph/support">www.samsung.com/ph/support</a>
JAPAN	0120-363-905	<a href="http://www.galaxymobile.jp/jp/support">www.galaxymobile.jp/jp/support</a>
INDIA	1800 5 SAMSUNG (1800 5 7267864) (Toll-Free) 1800 40 SAMSUNG (1800 40 7267864) (Toll-Free)	<a href="http://www.samsung.com/in/support">www.samsung.com/in/support</a>
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667 (Toll Free for Ncell users)	<a href="http://www.samsung.com/in/support">www.samsung.com/in/support</a>
BANGLADESH	08000-300-300 (Toll free) 09612-300-300	<a href="http://www.samsung.com/bd/support">www.samsung.com/bd/support</a>
SRI LANKA	011 SAMSUNG (011 7267864)	<a href="http://www.samsung.com/in/support">www.samsung.com/in/support</a>



DE68-04362E-00