

# Signals and Systems

Robby McKilliam

October 16, 2013

## Contents

<b>1 Signals and systems</b>	<b>3</b>
1.1 Properties of signals . . . . .	3
1.2 Systems (functions of signals) . . . . .	4
1.3 Some important systems . . . . .	8
1.4 Properties of systems . . . . .	9
1.5 Exercises . . . . .	11
<b>2 Systems modelled by differential equations</b>	<b>13</b>
2.1 Passive circuits . . . . .	15
2.2 Active circuits . . . . .	16
2.3 Masses, springs and dampers . . . . .	23
2.4 Direct current motors . . . . .	25
2.5 Exercises . . . . .	26
<b>3 Linear time-invariant systems</b>	<b>28</b>
3.1 Convolution, regular systems and the delta “function” . . . . .	28
3.2 Properties of convolution . . . . .	32
3.3 Linear combining and composition . . . . .	33
3.4 Eigenfunctions and the transfer function . . . . .	35
3.5 The spectrum . . . . .	37
3.6 Exercises . . . . .	41
<b>4 The Laplace transform</b>	<b>42</b>
4.1 The transfer function and the Laplace transform . . . . .	45
4.2 Solving differential equations . . . . .	48
4.3 First order systems . . . . .	48
4.4 Second order systems . . . . .	51
4.5 Poles, zeros, and stability . . . . .	55
4.6 Exercises . . . . .	63

<b>5</b>	<b>The Fourier transform</b>	<b>67</b>
5.1	Duality and the inverse transform . . . . .	68
5.2	Parseval's identity . . . . .	70
5.3	Ideal filters . . . . .	71
5.4	Butterworth filters . . . . .	72
5.5	Exercises . . . . .	78

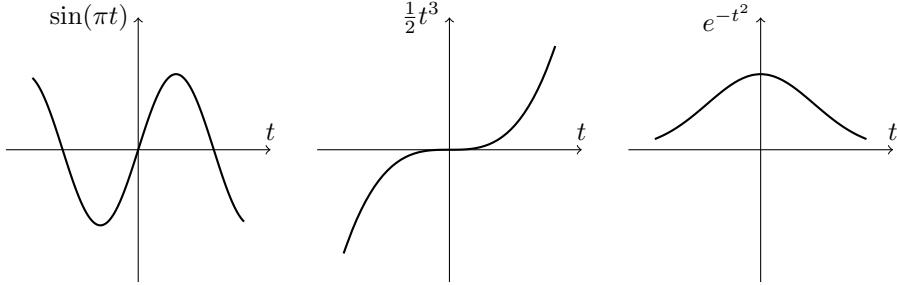


Figure 1: 1-dimensional continuous-time signals

## 1 Signals and systems

A **signal** is a function mapping an input variable to some output variable. For example

$$\sin(\pi t), \quad \frac{1}{2}t^3, \quad e^{-t^2}$$

all represent **signals** with input variable  $t \in \mathbb{R}$ , and they are plotted in Figure 1. If  $x$  is a signal and  $t$  an input variable we write  $x(t)$  for the output variable. Signals can be multidimensional. This page is an example of a 2-dimensional signal, the independent variables are the horizontal and vertical position on the page, and the signal maps this position to a colour, in this case either black or white. A moving image such as seen on your television or computer monitor is an example of a 3-dimensional signal, the three independent variables being vertical and horizontal screen position and time. The signal maps each position and time to a colour on the screen. In this course we focus exclusively on 1-dimensional signals such as those in Figure 1 and we will only consider signals where the output variable is real or complex valued. Many of the results presented here can be extended to deal with multidimensional signals.

### 1.1 Properties of signals

A signal  $x$  is **bounded** if there exists a real number  $M$  such that

$$|x(t)| \leq M \quad \text{for all } t \in \mathbb{R}$$

where  $|\cdot|$  denotes the (complex) magnitude. Both  $\sin(\pi t)$  and  $e^{-t^2}$  are examples of bounded signals because  $|\sin(\pi t)| \leq 1$  and  $|e^{-t^2}| \leq 1$  for all  $t \in \mathbb{R}$ . However,  $\frac{1}{2}t^3$  is not bounded because its magnitude grows indefinitely as  $t$  moves away from the origin.

A signal  $x$  is **periodic** if there exists a real number  $T$  such that

$$x(t) = x(t + kT) \quad \text{for all } k \in \mathbb{Z} \text{ and } t \in \mathbb{R}.$$

The smallest such nonnegative such  $T$  is called the **period**. For example, the signal  $\sin(\pi t)$  is periodic with period  $T = 2$ . Neither  $\frac{1}{2}t^3$  or  $e^{-t^2}$  are periodic.

A signal  $x$  is called **locally integrable** if for all constants  $a$  and  $b$ ,

$$\int_a^b |x(t)| dt$$

exists (evaluates to a finite number). An example of a signal that is not locally integrable is  $x(t) = \frac{1}{t}$  (Exercise 1.2). Two signals  $x$  and  $y$  are equal, i.e.  $x = y$  if  $x(t) = y(t)$  for all  $t \in \mathbb{R}$ .

A signal  $x$  is called **absolutely integrable** if

$$\|x\|_1 = \int_{-\infty}^{\infty} |x(t)| dt \quad (1.1)$$

exists. Here we introduce the notation  $\|x\|_1$  called the  **$\ell_1$ -norm** of  $x$ . For example  $\sin(\pi t)$  and  $\frac{1}{2}t^3$  are not absolutely integrable, but  $e^{-t^2}$  is because [Nicholas and Yates, 1950]

$$\int_{-\infty}^{\infty} |e^{-t^2}| dt = \int_{-\infty}^{\infty} e^{-t^2} dt = \sqrt{\pi}. \quad (1.2)$$

A signal  $x$  is called **square integrable** if

$$\|x\|_2 = \left( \int_{-\infty}^{\infty} |x(t)|^2 dt \right)^{1/2}$$

exists. Square integrable signals are also called **energy signals**, and the value of  $\|x\|_2$  is called the **energy** of  $x$  (it is also called the  **$\ell_2$ -norm** of  $x$ ). For example  $\sin(\pi t)$  and  $\frac{1}{2}t^3$  are not energy signals, but  $e^{-t^2}$  is (Exercise 1.4).

A signal  $x$  is **right sided** if there exists a  $T \in \mathbb{R}$  such that  $x(t) = 0$  for all  $t < T$ . Correspondingly  $x$  is **left sided** if  $x(t) = 0$  for all  $T > t$ . For example, the **step function**

$$u(t) = \begin{cases} 1 & t > 0 \\ 0 & t \leq 0 \end{cases} \quad (1.3)$$

is right-sided. Its reflection in time  $u(-t)$  is left sided (Figure 2). A signal  $x$  is called **finite in time** if it is both left and right sided, that is, if there exists a  $T \in \mathbb{R}$  such that  $x(t) = x(-t) = 0$  for all  $t > T$ . A signal is called **unbounded in time** if it is neither left nor right sided. For example, the continuous time signals  $\sin(\pi t)$  and  $e^{-t^2}$  are unbounded in time, but the **rectangular pulse**

$$\Pi(t) = \begin{cases} 1 & -\frac{1}{2} < t \leq \frac{1}{2} \\ 0 & \text{otherwise} \end{cases} \quad (1.4)$$

is finite in time.

## 1.2 Systems (functions of signals)

A **system** (also known as an **operator** or **functional**) maps a signal to another signal. For example

$$x(t) + 3x(t-1), \quad \int_0^1 x(t-\tau) d\tau, \quad \frac{1}{x(t)}, \quad \frac{d}{dt} x(t)$$

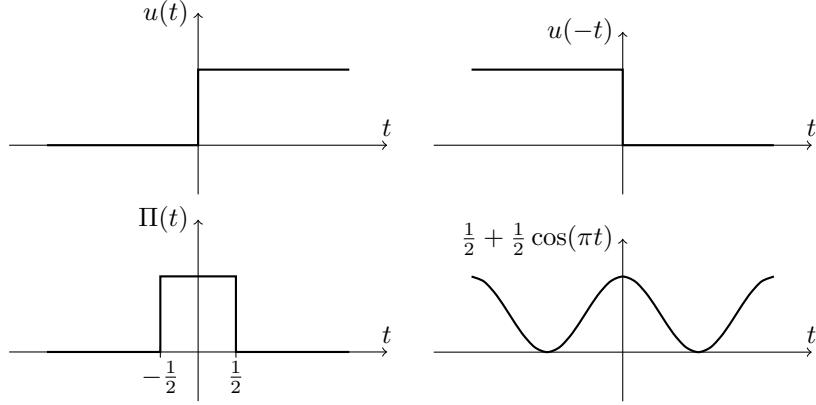


Figure 2: The right sided step function  $u(t)$ , its left sided reflection  $u(-t)$ , the finite in time rectangular pulse  $\Pi(t)$  and the unbounded in time signal  $\frac{1}{2} + \frac{1}{2} \cos(x)$ .

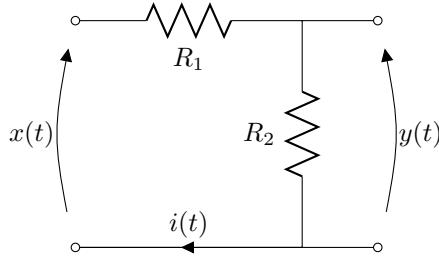


Figure 3: A **voltage divider** circuit.

represent systems, each mapping the signal  $x$  to another signal. Consider the electric circuit in Figure 3 called a **voltage divider**. If the voltage at time  $t$  is  $x(t)$  then, by Ohm's law, the current at time  $t$  satisfies

$$i(t) = \frac{1}{R_1 + R_2} x(t),$$

and the voltage over the resistor  $R_2$  is

$$y(t) = R_2 i(t) = \frac{R_2}{R_1 + R_2} x(t) \quad (1.5)$$

The circuit can be considered as a system mapping the signal  $x$  representing the voltage to the signal  $i = \frac{1}{R_1 + R_2} x$  representing the current, or a system mapping  $x$  to the signal  $y = \frac{R_2}{R_1 + R_2} x$  representing the voltage over resistor  $R_2$ .

We denote systems with capital letters such as  $H$  and  $G$ . A system  $H$  is a function that maps a signal  $x$  to another signal denoted  $H(x)$ . We call  $x$  the **input signal** and  $H(x)$  the **output signal** or the **response** of system  $H$  to signal  $x$ . If we want to include the independent variable  $t$  we will write  $H(x)(t)$

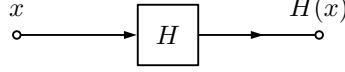


Figure 4: System block diagram with input signal  $x$  and output signal  $H(x)$ .

or  $H(x, t)$  and do not distinguish between these [Curry and Feys, 1968]. It is sometimes useful to depict systems with a block diagram. Figure 4 is a simple block diagram showing the input and output signals of a system  $H$ .

Using this notation the electric circuit in Figure 3 corresponds with the system

$$H(x) = \frac{R_2}{R_1 + R_2} x = y.$$

This system multiplies the input signal  $x$  by  $\frac{R_2}{R_1 + R_2}$ . This brings us to our first practical test.

**Test 1 (Voltage divider)** In this test we construct the voltage divider from Figure 3 on a breadboard with resistors  $R_1 \approx 100\Omega$  and  $R_2 \approx 470\Omega$  with values accurate to within 5%. Using a computer soundcard (an approximation of) the voltage signal

$$x(t) = \sin(2\pi f_1 t) \quad \text{with} \quad f_1 = 100$$

is passed through the circuit. The approximation is generated by sampling  $x(t)$  at rate  $F_s = \frac{1}{T_s} = 44100\text{Hz}$  to generate samples

$$x_n = x(nT_s) \quad n = 0, \dots, 2F_s$$

corresponding to approximately 2 seconds of signal. These samples are passed to the soundcard which starts playback. The voltage over resistor  $R_2$  is recorded (also using the soundcard) that returns a lists of samples  $y_1, \dots, y_L$  taken at rate  $F_s$ . The continuous-time voltage over  $R_2$  can be (approximately) reconstructed from these samples as

$$\tilde{y}(t) = \sum_{\ell=1}^L y_\ell \operatorname{sinc}(F_s t - \ell) \tag{1.6}$$

where

$$\operatorname{sinc}(t) = \frac{\sin(\pi t)}{\pi t} \tag{1.7}$$

is the called the **sinc function** and is plotted in Figure 40. We will justify this reconstruction in Section ???. Simultaneously the (stereo) soundcard is used to record the input voltage  $x(t)$  producing samples  $x_1, \dots, x_L$  taken at rate  $F_s$ . An approximation of the continuous-time input signal is

$$\tilde{x}(t) = \sum_{\ell=1}^L x_\ell \operatorname{sinc}(F_s t - \ell). \tag{1.8}$$

In view of (1.5) we would expect the approximate relationship

$$\tilde{y} \approx \frac{R_2}{R_1 + R_2} \tilde{x} = \frac{42}{57} \tilde{x}$$

A plot of  $\tilde{y}$ ,  $\tilde{x}$  and  $\frac{42}{57} \tilde{x}$  over a 20ms period from 1s to 1.02s is given in Figure 5. The hypothesised output signal  $\frac{42}{57} \tilde{x}$  does not match the observed output signal  $\tilde{y}$ . A primary reason is that the circuitry inside the soundcard itself cannot be ignored. When deriving the equation for the voltage divider we implicitly assumed that current flows through the output of the soundcard without resistance (a short circuit), and that no current flows through the input device of the soundcard (an open circuit). These assumptions are not realistic. Modelling the circuitry in the sound card wont be attempted here. In the next section we will construct circuits that contain external sources of power (active circuits). These are less sensitive to the circuitry inside the soundcard.

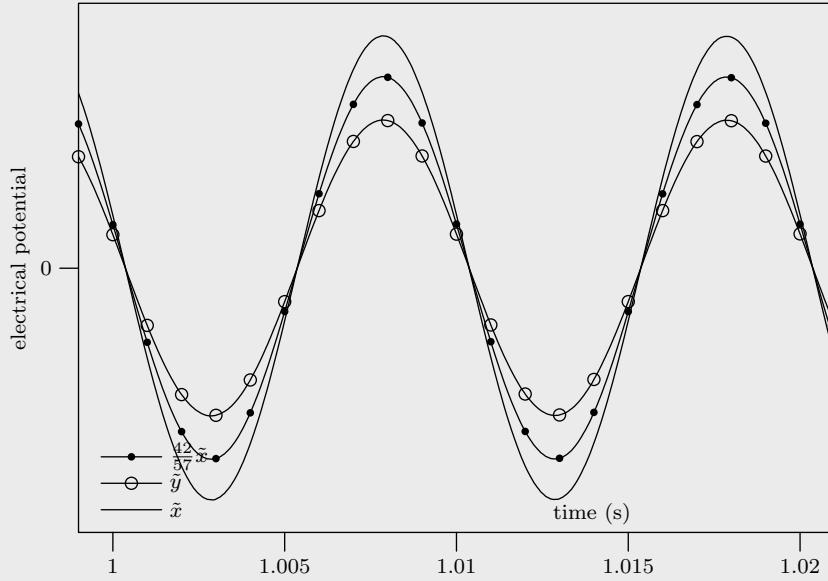


Figure 5: Plot of reconstructed input signal  $\tilde{x}$  (solid line), output signal  $\tilde{y}$  (solid line with circle) and hypothesised output signal  $\frac{42}{57} \tilde{x}$  (solid line with dot) for the voltage divider circuit in Figure 3. The hypothesised signal does not match  $\tilde{y}$ . One reason is that the model does not take account of the circuitry inside the soundcard.

Not all signals can be input to all systems. For example, the system

$$H(x, t) = \frac{1}{x(t)}$$

is not defined at those  $t$  where  $x(t) = 0$  because we cannot divide by zero.

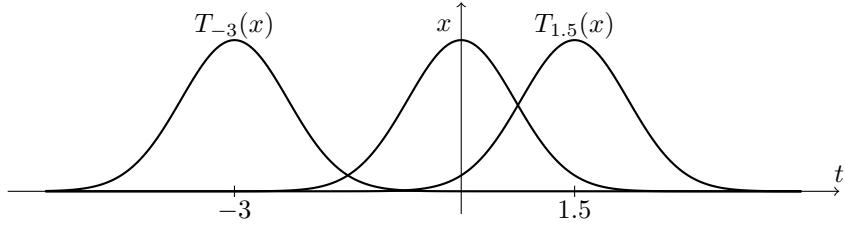


Figure 6: Time-shifter system  $T_{1.5}(x, t) = x(t - 1.5)$  and  $T_{-3}(x, t) = x(t + 3)$  acting on the signal  $x(t) = e^{-t^2}$ .

Another example is the system

$$I_\infty(x, t) = \int_{-\infty}^t x(\tau) d\tau, \quad (1.9)$$

called an **integrator**, that is not defined for those signals where the integral above does not exist (is not finite). For example, the signal  $x(t) = 1$  cannot be input to the integrator since the integral  $\int_{-\infty}^t dt$  does not exist.

Thus, when specifying a system it is necessary to also specify a set of signals that can be input, called a **domain** for the system. For example, a domain for the system  $H(x, t) = \frac{1}{x(t)}$  is the set of signals  $x(t)$  which are not zero for any  $t$ . A domain for the integrator  $I_\infty(x, t)$  is the set of signals for which the integral  $\int_{-\infty}^t x(\tau) d\tau$  exists for all  $t \in \mathbb{R}$ . The domain we use for a given system is usually obvious from the specification of the system itself. For this reason we will not usually state the domain explicitly. We will only do so if there is chance for confusion.

### 1.3 Some important systems

The system

$$T_\tau(x, t) = x(t - \tau)$$

is called the **time-shifter**. This system shifts the input signal along the  $t$  axis ('time' axis) by  $\tau$ . When  $\tau$  is positive  $T_\tau$  delays the input signal by  $\tau$ . The time-shifter will appear so regularly in this course that we use the special notation  $T_\tau$  to represent it. Figure 6 depicts the action of time-shifters  $T_{1.5}$  and  $T_{-3}$  on the signal  $x(t) = e^{-t^2}$ . When  $\tau = 0$  the time-shifter is the **identity system**

$$T_0(x) = x$$

that maps the signal  $x$  to itself.

Another important system is the **time-scaler** that has the form

$$H(x, t) = x(\alpha t)$$

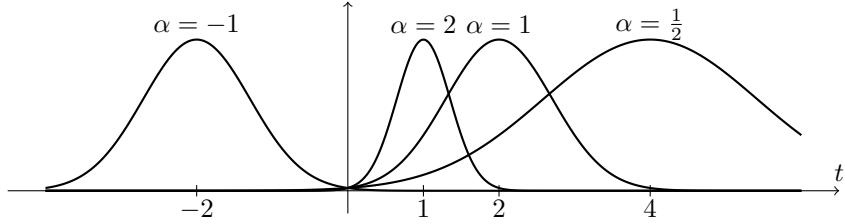


Figure 7: Time-scaler system  $H(x, t) = x(\alpha t)$  for  $\alpha = -1, \frac{1}{2}, 1$  and  $2$  acting on the signal  $x(t) = e^{-(t-2)^2}$ .

for  $\alpha \in \mathbb{R}$ . Figure 7 depicts the action of a time-scaler with a number of values for  $\alpha$ . When  $\alpha = -1$  the time-scaler reflects the input signal in the time axis. When  $\alpha = 1$  the time-scaler is the identity system  $T_0$ .

Another system we regularly encounter is the **differentiator**

$$D(x, t) = \frac{d}{dt}x(t),$$

that returns the derivative of the input signal. We also define a  $k$ th differentiator

$$D^k(x, t) = \frac{d^k}{dt^k}x(t)$$

that returns the  $k$ th derivative of the input signal.

A related system is the **integrator**

$$I_a(x, t) = \int_{-a}^t x(\tau)d\tau.$$

The parameter  $a$  describes the lower bound of the integral. In this course it will often be that  $a = \infty$ . The integrator can only be applied to those signals for which the integral above exists. For example, the integrator  $I_\infty$  can be applied to the signal  $tu(t)$  where  $u(t)$  is the step function (1.3). The output signal is

$$\int_{-\infty}^t \tau u(\tau)d\tau = \begin{cases} \int_0^t \tau d\tau = \frac{t^2}{2} & t > 0 \\ 0 & t \leq 0. \end{cases}$$

However, the integrator cannot be applied to the signal  $x(t) = t$  because  $\int_{-\infty}^t \tau d\tau$  does not exist.

## 1.4 Properties of systems

A system  $H$  is called **memoryless** if the output signal  $H(x)$  at time  $t$  depends only on the input signal  $x$  at time  $t$ . For example  $\frac{1}{x(t)}$  and the identity system  $T_0$  are memoryless, but

$$x(t) + 3x(t-1) \quad \text{and} \quad \int_0^1 x(t-\tau)d\tau$$

are not. A time-shifter system  $T_\tau$  with  $\tau \neq 0$  is not memoryless.

A system  $H$  is **causal** if the output signal  $H(x)$  at time  $t$  depends on the input signal only at times less than or equal to  $t$ . Memoryless systems such as  $\frac{1}{x(t)}$  and  $T_0$  are also causal. Time-shifters  $T_\tau(x, t) = x(t - \tau)$  are causal when  $\tau \geq 0$ , but are not causal when  $\tau < 0$ . The systems

$$x(t) + 3x(t - 1) \quad \text{and} \quad \int_0^1 x(t - \tau) d\tau$$

are causal, but the systems

$$x(t) + 3x(t + 1) \quad \text{and} \quad \int_0^1 x(t + \tau) d\tau$$

are not causal.

A system  $H$  is called **bounded-input-bounded-output (BIBO) stable** or just **stable** if the output signal  $H(x)$  is bounded whenever the input signal  $x$  is bounded. That is,  $H$  is stable if for every positive real number  $M$  there exists a positive real number  $K$  such that for all signals  $x$  satisfying

$$|x(t)| < M \quad \text{for all } t \in \mathbb{R},$$

it also holds that

$$|H(x, t)| < K \quad \text{for all } t \in \mathbb{R}.$$

For example, the system  $x(t) + 3x(t - 1)$  is stable with  $K = 4M$  since if  $|x(t)| < M$  then

$$|x(t) + 3x(t - 1)| \leq |x(t)| + 3|x(t - 1)| < 4M = K.$$

The integrator  $I_a$  for any  $a \in \mathbb{R}$  and differentiator  $D$  are not stable (Exercises 1.5 and 1.6).

A system  $H$  is **linear** if

$$H(ax + by) = aH(x) + bH(y)$$

for all signals  $x$  and  $y$  and all complex numbers  $a$  and  $b$ . That is, a linear system has the property: If the input consists of a weighted sum of signals, then the output consists of the same weighted sum of the responses of the system to those signals. Figure 8 indicates the linearity property using a block diagram. For example, the differentiator is linear because

$$\begin{aligned} D(ax + by, t) &= \frac{d}{dt}(ax(t) + by(t)) \\ &= a \frac{d}{dt}x(t) + b \frac{d}{dt}y(t) \\ &= aD(x, t) + bD(y, t) \end{aligned}$$

whenever both  $x$  and  $y$  are differentiable. However, the system  $H(x, t) = \frac{1}{x(t)}$  is not linear because

$$H(ax + by, t) = \frac{1}{ax(t) + by(t)} \neq \frac{a}{x(t)} + \frac{b}{y(t)} = aH(x, t) + bH(y, t)$$

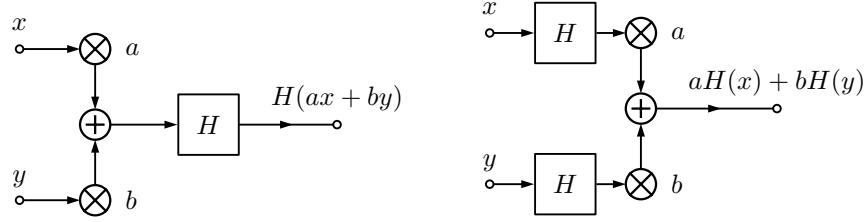


Figure 8: If  $H$  is a linear system the outputs of these two diagrams are the same signal, i.e.  $H(ax + by) = aH(x) + bH(y)$ .




Figure 9: If  $H$  is a time-invariant system the outputs of these two diagrams are the same signal, i.e.  $H(T_\tau(x)) = T_\tau(H(x))$ .

in general.

The property of linearity trivially generalises to more than two signals. For example, if  $x_1, \dots, x_k$  are signals and  $a_1, \dots, a_k$  are complex numbers for some finite  $k$ , then

$$H(a_1x_1 + \dots + a_kx_k) = a_1H(x_1) + \dots + a_kH(x_k).$$

A system  $H$  is **time-invariant** if

$$H(T_\tau(x), t) = H(x, t - \tau)$$

for all signals  $x$  and all time-shifts  $\tau \in \mathbb{R}$ . That is, a system is time-invariant if time-shifting the input signal results in the same time-shift of the output signal. Equivalently,  $H$  is time-invariant if  $H$  commutes with the time-shifter  $T_\tau$ , that is, if

$$H(T_\tau(x)) = T_\tau(H(x))$$

for all  $\tau \in \mathbb{R}$  and all signals  $x$ . Figure 9 represents the property of time-invariance with a block diagram.

## 1.5 Exercises

- 1.1. State whether the step function  $u(t)$  is bounded, periodic, absolutely summable, an energy signal.
- 1.2. Show that the signal  $t^2$  is locally integrable, but that the signal  $\frac{1}{t^2}$  is not.
- 1.3. Plot the signal

$$x(t) = \begin{cases} \frac{1}{t+1} & t > 0 \\ \frac{1}{t-1} & t \leq 0. \end{cases}$$

State whether it is: bounded, locally integrable, absolutely integrable, square integrable.

- 1.4. Compute the energy of the signal  $e^{-\alpha^2 t^2}$  (Hint: use equation (1.2) on page 4 and a change of variables).
- 1.5. Show that the integrator  $I_a$  for any  $a \in \mathbb{R}$  is not stable.
- 1.6. Show that the differentiator system  $D$  is not stable.
- 1.7. Show that the time-shifter  $T_\tau$  is linear and time-invariant, and that the time-scaler  $S_\alpha$  is linear, but not time invariant
- 1.8. Show that the integrator  $I_c$  with  $c$  finite is linear, but not time-invariant.
- 1.9. Show that the integrator  $I_\infty$  is linear and time invariant.
- 1.10. State whether the system  $H(x, t) = x(t) + 1$  is linear, time-invariant, stable.
- 1.11. State whether the system  $H(x, t) = 0$  is linear, time-invariant, stable.
- 1.12. State whether the system  $H(x, t) = 1$  is linear, time-invariant, stable.

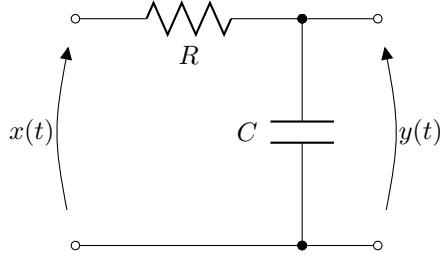


Figure 10: An electrical circuit with resistor and capacitor in series, otherwise known as an **RC circuit**.

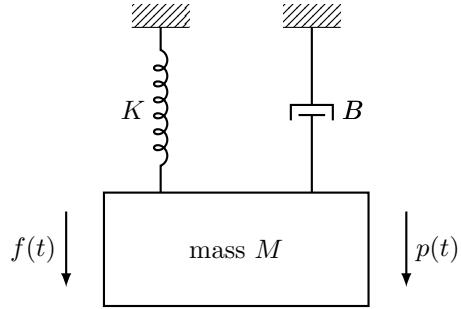


Figure 11: A mechanical mass-spring-damper system

## 2 Systems modelled by differential equations

Systems of significant interest in this course are those where the input signal  $x$  and output signal  $y$  are related by a linear differential equation with constant coefficients, that is, an equation of the form

$$\sum_{\ell=0}^m a_\ell \frac{d^\ell}{dt^\ell} x(t) = \sum_{\ell=0}^k b_\ell \frac{d^\ell}{dt^\ell} y(t)$$

where  $a_0, \dots, a_m$  and  $b_0, \dots, b_k$  are constant real numbers. In what follows we will use the differentiator system  $D(x)$  rather than the notation  $\frac{d}{dt^\ell} x(t)$  to represent differentiation of the signal  $x$ . To represent the  $\ell$ th derivative we write  $D^\ell(x)$ . Using this notation the differential equation above is

$$\sum_{\ell=0}^m a_\ell D^\ell(x) = \sum_{\ell=0}^k b_\ell D^\ell(y). \quad (2.1)$$

Equations of this form can be used to model a large number of electrical, mechanical and other real world devices. For example, consider the resistor and capacitor (RC) circuit in Figure 10. Let the signal  $v_R$  represent the voltage over the resistor and  $i$  the current through both resistor and capacitor. The voltage

signals satisfy

$$x = y + v_R,$$

and the current satisfies both

$$v_R = Ri, \quad \text{and} \quad i = CD(y).$$

Combining these equations,

$$x = y + RCD(y) \tag{2.2}$$

that is in the form of (2.1).

As another example, consider the mass, spring and damper in Figure 11. A force represented by the signal  $f$  is externally applied to the mass, and the position of the mass is represented by the signal  $p$ . The spring exerts force  $-Kp$  that is proportional to the position of the mass, and the damper exerts force  $-BD(p)$  that is proportional to the velocity of the mass. The cumulative force exerted on the mass is

$$f_m = f - Kp - BD(p)$$

and by Newton's law the acceleration of the mass  $D^2(p)$  satisfies

$$MD^2(p) = f_m = f - Kp - BD(p).$$

We obtain the differential equation

$$f = Kp + BD(p) + MD^2(p) \tag{2.3}$$

that is in the form of (2.1) if we put  $x = f$  and  $y = p$ . Given  $p$  we can readily solve for the corresponding force  $f$ . As a concrete example, let the spring constant, damping constant and mass be  $K = B = M = 1$ . If the position satisfies  $p(t) = e^{-t^2}$ , then the corresponding force satisfies

$$f(t) = e^{-t^2}(4t^2 - 2t - 1).$$

Figure 12 depicts these signals.

What happens if a particular force signal  $f$  is applied to the mass? For example, say we apply the force

$$f(t) = \Pi(t - \frac{1}{2}) = \begin{cases} 1 & 0 < t \leq 1 \\ 0 & \text{otherwise.} \end{cases}$$

What is the corresponding position signal  $p$ ? We are not yet ready to answer this question, but will be later (Exercise 4.11).

In both the mechanical mass-spring-damper system in Figure 11 and the electrical RC circuit in Figure 10 we obtain a differential equation relating the input signal  $x$  with the output signal  $y$ . The equations do not specify the output signal  $y$  explicitly in terms of the input signal  $x$ , that is, they do not explicitly define a system  $H$  such  $y = H(x)$ . As they are, the differential equations, do

Figure 12: A solution to the mass spring damper system with  $K = B = M = 1$ . The position is  $p(t) = e^{-t^2}$  with corresponding force  $f(t) = e^{-t^2}(4t^2 - 2t - 1)$ .

not provide as much information about the behaviour of the system as we would like. For example, is the system stable? The **Laplace transform**, described in Section 4, is a useful tool for answering these questions. A key property enabling the Laplace transform is that differential equations of the form (2.1) describe systems that are linear and time-invariant. We further study linear, time-invariant systems in Section 3. The remainder of this section details the construction of differential equations that model various mechanical, electrical, and electro-mechanical systems. We will use the systems constructed here as examples throughout the course.

## 2.1 Passive circuits

Passive electrical circuits require no sources of power other than the input signal itself. For example, the voltage divider in Figure 3 and the RC circuit in Figure 10 are passive circuits. Another common passive electrical circuit is the resistor, capacitor and inductor (RLC) circuit depicted in Figure 13. In this circuit we let the output signal  $y$  be the voltage over the resistor. Let  $v_C$  represent the voltage over the capacitor and  $v_L$  the voltage over the inductor and let  $i$  be the current. We have

$$y = Ri, \quad i = CD(v_C), \quad v_L = LD(i),$$

leading to the following relationships between  $y$ ,  $v_C$  and  $v_L$ ,

$$y = RCD(v_C), \quad Rv_L = LD(y).$$

Kirchhoff's voltage law gives  $x = y + v_C + v_L$  and by differentiating both sides

$$D(x) = D(y) + D(v_C) + D(v_L).$$

Substituting the equations relating  $y$ ,  $v_C$  and  $v_L$  leads to

$$RCD(x) = y + RCD(y) + LCD^2(y). \tag{2.4}$$

We can similarly find equations relating the input voltage with  $v_C$  and  $v_L$ .

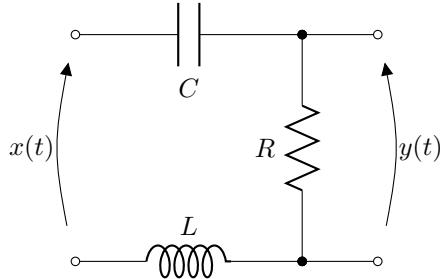


Figure 13: An electrical circuit with resistor, capacitor and inductor in series, otherwise known as an **RLC circuit**.

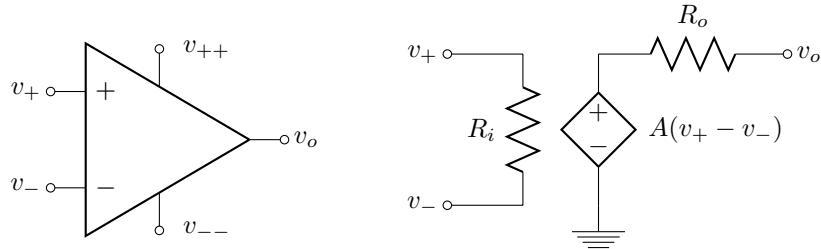


Figure 14: Left: triangular component diagram of an **operational amplifier**. The  $v_{++}$  and  $v_{--}$  connectors indicate where an external voltage source can be connected to the amplifier. These connectors will usually be omitted. Right: model for an operational amplifier including input resistance  $R_i$ , output resistance  $R_o$ , and open loop gain  $A$ . The diamond shaped component is a dependent voltage source. This model is only useful when the operational amplifier is in a negative feedback circuit.

## 2.2 Active circuits

Unlike passive electrical circuits, an **active circuit** requires a source of power external to the input signal. In this course active circuits will be modelled and constructed using **operational amplifiers** as depicted in Figure 14. The left hand side of Figure 14 shows a triangular circuit diagram for an operational amplifier, and the right hand side of Figure 14 shows a circuit that can be used to model the behaviour of the amplifier. The  $v_{++}$  and  $v_{--}$  connectors indicate where an external voltage source can be connected to the amplifier, and will normally not be drawn. The diamond shaped component is a dependent voltage source with voltage  $A(v_+ - v_-)$  that depends on the difference between the voltage at the **non-inverting input**  $v_+$  and the voltage at the **inverting input**  $v_-$ . The dimensionless constant  $A$  is called the **open loop gain**. Most operational amplifiers have large open loop gain  $A$ , large input resistance  $R_i$  and small output resistance  $R_o$ . As we will see, it can be convenient to consider the behaviour as  $A \rightarrow \infty$ ,  $R_i \rightarrow \infty$  and  $R_o \rightarrow 0$ , resulting in an **ideal operational amplifier**.

As an example, an operational amplifier configured as a **multiplier** is de-

picted in Figure 15. This circuit is an example of an operation amplifier configured with **negative feedback**, meaning that the output of the amplifier is connected (in this case by a resistor) to the inverting input. The horizontal wire at the bottom of the plot is considered to be ground (zero volts) and is connected to the negative terminal of the dependent voltage source of the operational amplifier depicted in Figure 14. An equivalent circuit for the multiplier using the model in Figure 14 is shown in Figure 16. Solving this circuit (Exercise 2.1) yields the following relationship between the input voltage signal  $x$  and the output voltage signal  $y$ ,

$$y = \frac{R_i(AR_2 + R_o)}{R_i(R_2 + R_o) + R_1(R_2 + R_i - AR_i + R_o)} x. \quad (2.5)$$

For an ideal operational amplifier we let  $A \rightarrow \infty$ ,  $R_i \rightarrow \infty$  and  $R_o \rightarrow 0$ . In this case terms involving the product  $AR_i$  dominate and we are left with the simpler equation

$$y = -\frac{R_2}{R_1} x. \quad (2.6)$$

Thus, assuming an ideal operational amplifier, the circuit acts as a multiplier with constant  $-\frac{R_2}{R_1}$ .

The equation relating  $x$  and  $y$  is much simpler for the ideal operational amplifier. Fortunately this equation can be obtained directly using the following two rules:

1. the voltage at the inverting and non-inverting inputs are equal,
2. no current flows through the inverting and non-inverting inputs.

These rules are only useful for analysing circuits with negative feedback. Let us now rederive (2.6) using these rules. Since the non-inverting input is connected to ground, the voltage at the inverting input is zero. So, the voltage over resistor  $R_2$  is  $y = R_2 i$ . Since no current flows through the inverting input the current through  $R_1$  is also  $i$  and  $x = -R_1 i$ . Combing these results, the input voltage  $x$  and the output voltage  $y$  are related by

$$y = -\frac{R_2}{R_1} x.$$

In Test 2 the inverting amplifier circuit is constructed and the relationship above is tested using a computer soundcard.

We now consider another circuit consisting of an operational amplifier, two resistors and two capacitors depicted in Figure 17. Assuming an ideal operational amplifier, the voltage at the inverting terminal is zero because the non-inverting terminal is connected to ground. Thus, the voltage over capacitor  $C_2$  and resistor  $R_2$  is equal to  $y$  and, by Kirchoff's current law

$$i = \frac{y}{R_2} + C_2 D(y).$$

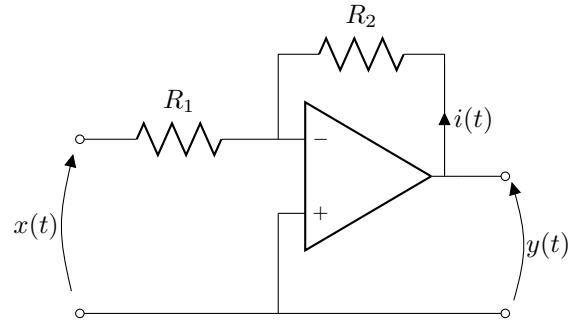


Figure 15: Inverting amplifier

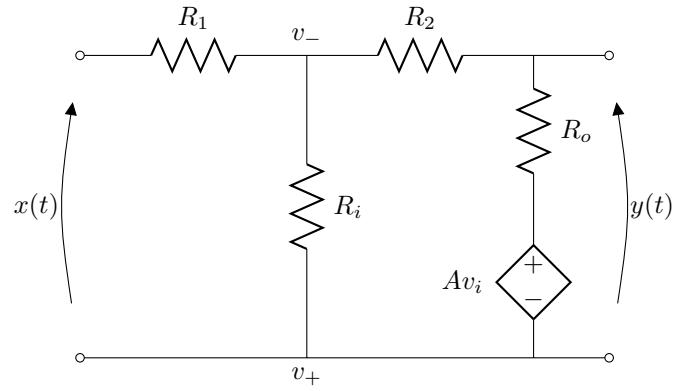


Figure 16: An equivalent circuit for the inverting amplifier from Figure 15 using the model for an operational amplifier in Figure 14. The symbol  $v_i = v_+ - v_-$  is the voltage over resistor  $R_i$ .

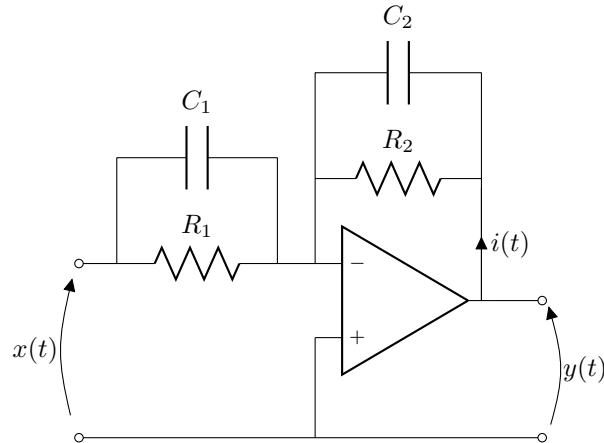


Figure 17: Operational amplifier configured with two capacitors and two resistors.

**Test 2 (Inverting amplifier)** In this test we construct the inverting amplifier circuit from Figure 15 with  $R_2 \approx 22\text{k}\Omega$  and  $R_1 \approx 12\text{k}\Omega$  that are accurate to within 5% of these values. The operational amplifier used is the Texas Instruments LM358P. Using a computer soundcard (an approximation of) the voltage signal

$$x(t) = \frac{1}{3} \sin(2\pi f_1 t) + \frac{1}{3} \sin(2\pi f_2 t)$$

with  $f_1 = 100$  and  $f_2 = 233$  is passed through the circuit. As in previous tests, the soundcard is used to sample the input signal  $x$  and the output signal  $y$ . Approximate reconstructions of the input signal  $\tilde{x}$  and output signal  $\tilde{y}$  are given according to (1.8), and (1.6). According to (2.4) we expect the approximate relationship

$$\tilde{y} \approx -\frac{R_2}{R_1} \tilde{x} = -\frac{11}{6} \tilde{x}.$$

Each of  $\tilde{y}$ ,  $\tilde{x}$  and  $-\frac{11}{6} \tilde{x}$  are plotted in Figure 18.

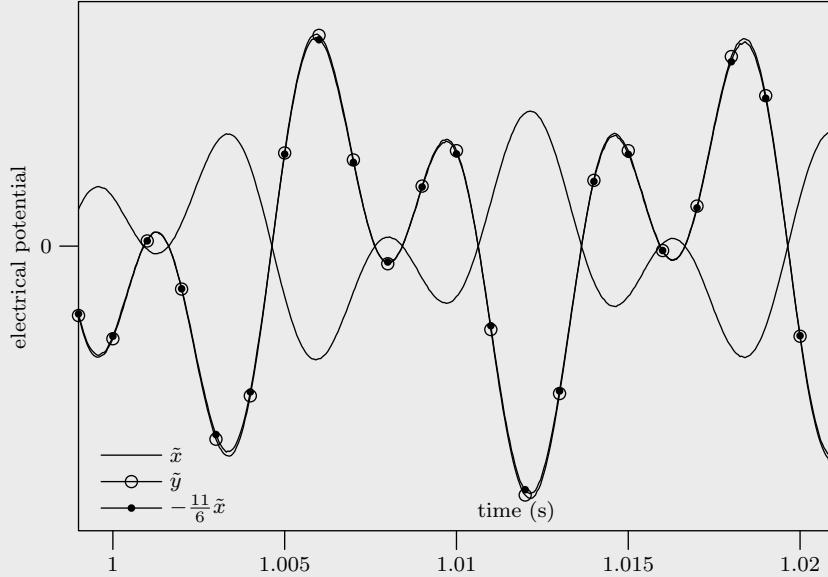


Figure 18: Plot of reconstructed input signal  $\tilde{x}$  (solid line), output signal  $\tilde{y}$  (solid line with circle) and hypothesised output signal  $-\frac{11}{6} \tilde{x}$  (solid line with dot).

Similarly, since no current flows through the inverting terminal,

$$i = -\frac{x}{R_1} - C_1 D(x).$$

Combining these equations yields

$$-\frac{x}{R_1} - C_1 D(x) = \frac{y}{R_2} + C_2 D(y). \quad (2.7)$$

Observe the similarity between this equation and that for the passive RC circuit (2.2) when  $R_1 = R_2$  and  $C_1 = 0$  (an open circuit). In this case

$$x = -y - R_1 C_2 D(y). \quad (2.8)$$

We call this this **active RC circuit**. This circuit is tested in Test 3.

**Test 3 (Active RC circuit)** In this test we construct the circuit from Figure 17 with  $R_1 \approx R_2 \approx 27\text{k}\Omega$  and  $C_2 \approx 10\text{nF}$  accurate to within 5% of these values and  $C_1 = 0$  (an open circuit). The operational amplifier used is a Texas Instruments LM358P. Using a computer soundcard (an approximation of) the voltage signal

$$x(t) = \frac{1}{3} \sin(2\pi f_1 t) + \frac{1}{3} \sin(2\pi f_2 t)$$

with  $f_1 = 500$  and  $f_2 = 1333$  is passed through the circuit. As in previous tests, the soundcard is used to sample the input signal  $x$  and the output signal  $y$  and approximate reconstructions  $\tilde{x}$  and  $\tilde{y}$  are given according to (1.8) and (1.6). According to (2.8) we expect the approximate relationship

$$\tilde{x} \approx -\frac{R_1}{R_2} \tilde{y} - R_1 C D(\tilde{y}) = -\tilde{y} - \frac{27}{10000} D(\tilde{y}).$$

The derivative of the sinc function is

$$D(\text{sinc}, t) = \frac{1}{\pi t^2} (\pi t \cos(\pi t) - \sin(\pi t)), \quad (2.9)$$

and so,

$$D(\tilde{y}) = D \left( \sum_{\ell=1}^L y_\ell \text{sinc}(F_s t - \ell) \right) = F_s \sum_{\ell=1}^L y_\ell D(\text{sinc}, F_s t - \ell). \quad (2.10)$$

Each of  $\tilde{y}$ ,  $\tilde{x}$  and  $-\tilde{y} - \frac{27}{10000} D(\tilde{y})$  are plotted in Figure 18.

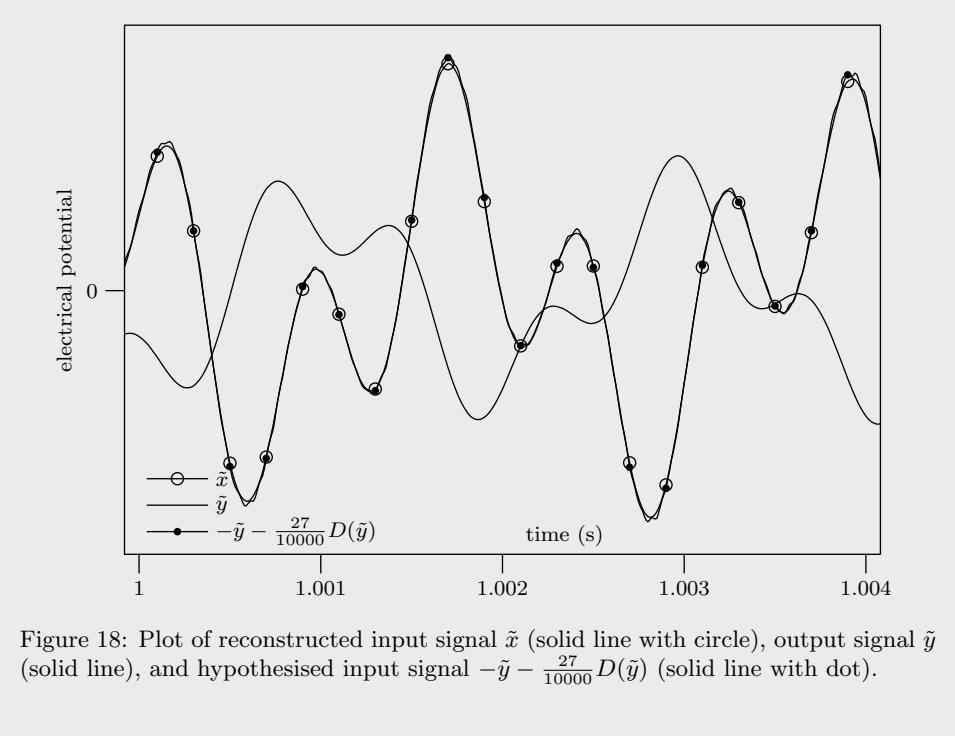


Figure 18: Plot of reconstructed input signal  $\tilde{x}$  (solid line with circle), output signal  $\tilde{y}$  (solid line), and hypothesised input signal  $\tilde{y} - \frac{27}{10000} D(\tilde{y})$  (solid line with dot).

Consider the circuit in Figure 19. Assuming an ideal operational amplifier, the input voltage  $x$  satisfies

$$-i = \frac{x}{R_1} + C_1 D(x).$$

The voltage over the capacitor  $C_2$  is  $y - R_2 i$  and so the current satisfies

$$i = C_2 D(y - R_2 i).$$

Combining these equations gives

$$-\frac{x}{R_1} - C_1 D(x) = C_2 D(y) + \frac{R_2 C_2}{R_1} D(x) + R_2 C_2 C_1 D^2(x),$$

and after rearranging,

$$D(y) = -\frac{1}{R_1 C_1} x - \left( \frac{R_2}{R_1} + \frac{C_1}{C_2} \right) D(x) - R_2 C_1 D^2(x).$$

Put

$$K_i = \frac{1}{R_1 C_2}, \quad K_p = \frac{R_2}{R_1} + \frac{C_1}{C_2}, \quad K_d = R_2 C_1$$

and now

$$D(y) = -K_i x - K_p D(x) - K_d D^2(x). \quad (2.11)$$

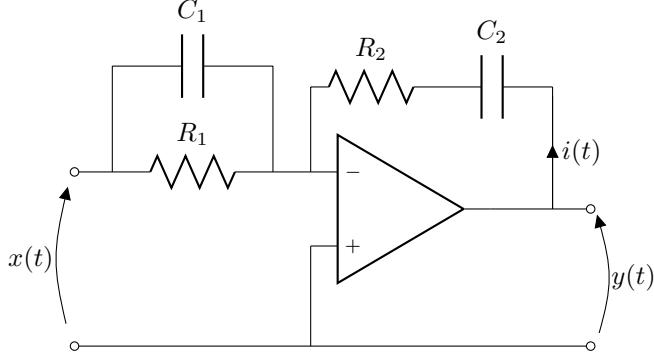


Figure 19: Operational amplifier implementing a **proportional-integral-derivative controller**.

This equation models what is called a **proportional-integral-derivative controller** or **PID controller**. The coefficients  $K_i, K_p$  and  $K_d$  are called the **integral gain**, **proportional gain**, and **derivative gain**.

The final active circuit we consider is called a **Sallen-Key** [Sallen and Key, 1955] and is depicted in Figure 20. Observe that the output of the amplifier is connected directly to the inverting input and is also connected to the noninverting input by a capacitor. This circuit has both negative *and* positive feedback. It is not immediately apparent that we can use the simplifying assumptions for an ideal operational amplifier with negative feedback. However, we will do so, and will find that it works in this case.

Let  $v_{R1}, v_{R2}, v_{C1}$ , and  $v_{C2}$  be the voltages over the components  $R_1, R_2, C_1$ , and  $C_2$ . Kirchoff's voltage law leads to the equations

$$x = v_{R1} + v_{R2} + v_{C2}, \quad y = v_{C1} + v_{R2} + v_{C2}.$$

The voltage at the inverting and noninverting terminals is  $y$ , and so, the voltage over the capacitor  $C_2$  is  $y$ , that is,  $y = v_{C2}$ . Using this, the equations above simplify to

$$x = v_{R1} + v_{R2} + y, \quad v_{C1} = -v_{R2}.$$

The current  $i_2$  through capacitor  $C_2$  satisfies  $i_2 = C_2 D(v_{C2}) = C_2 D(y)$ . Because no current flows into the inverting terminal of the amplifier the current through  $R_2$  is also  $i_2$ , and so  $v_{R2} = R_2 i_2 = R_2 C_2 D(y)$ . Substituting this into the equations above gives

$$x = v_{R1} + R_2 C_2 D(y) + y, \quad v_{C1} = -R_2 C_2 D(y). \quad (2.12)$$

Kirchoff's current law asserts that  $i + i_1 = i_2$ . The current  $i$  through capacitor  $C_1$  satisfies  $i = C_1 D(v_{C1}) = -R_2 C_1 C_2 D^2(y)$  and the current through resistor  $R_1$  satisfies

$$v_{R1} = R_1 i_1 = R_1 (i_2 - i) = R_1 C_2 D(y) + R_1 R_2 C_1 C_2 D^2(y).$$

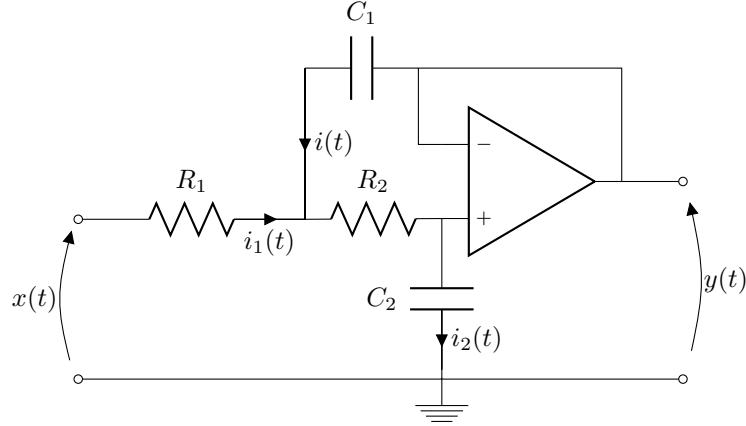


Figure 20: Operational amplifier implementing a **Sallen-Key**.

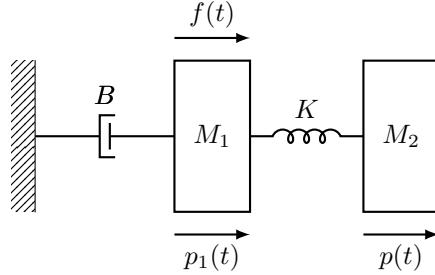


Figure 21: Two masses, a spring and a damper

Substituting this into the equation on the left of (2.12) gives

$$x = y + C_2(R_1 + R_2)D(y) + R_1R_2C_1C_2D^2(y). \quad (2.13)$$

The Sallen-Key will be useful when we consider the design on analogue electrical filters in Section 5.3.

### 2.3 Masses, springs and dampers

A mechanical mass, spring, damper system was described in Section 2 and Figure 11. We now consider another mechanical system involving a different configuration of masses, a spring and a damper depicted in Figure 21. A mass  $M_1$  is connected to a wall by a damper with constant  $B$ , and to another mass  $M_2$  by a spring with constant  $K$ . A force represented by the signal  $f$  is applied to the first mass. We will derive a differential equation relating  $f$  with the position  $p$  of the second mass. We assume that the spring applies no force (is in equilibrium) when masses are distance  $d$  apart. The forces due to the spring

satisfy

$$f_{s1} = -f_{s2} = K(p - p_1 - d)$$

where  $f_{s1}$  and  $f_{s2}$  are signals representing the force due to the spring on mass  $M_1$  and  $M_2$  respectively. It is convenient to define the signal  $g(t) = p_1(t) + d$  so that forces due to spring satisfy the simpler equation

$$f_{s1} = -f_{s2} = K(p - g).$$

The only force applied to  $M_2$  is by the spring and so, by Newton's law, the acceleration of  $M_2$  satisfies

$$M_2 D^2(p) = f_{s2}.$$

Substituting this into the previous equation gives a differential equation relating  $g$  and  $p$ ,

$$Kg = Kp + M_2 D^2(p). \quad (2.14)$$

The force applied by the damper on mass  $M_1$  is given by the signal

$$f_d = -BD(p_1) = -BD(g)$$

where the replacement of  $p_1$  by  $g$  is justified because differentiation will remove the constant  $d$ . The cumulative force on  $M_1$  is given by the signal

$$\begin{aligned} f_1 &= f + f_d + f_{s1} \\ &= f - Kg + Kp - BD(g), \end{aligned} \quad (2.15)$$

and by Newton's law the acceleration of  $M_1$  satisfies

$$M_1 D^2(p_1) = M_1 D^2(g) = f_1.$$

Substituting this into (2.15) and using (2.14) we obtain a fourth order differential equation relating  $p$  and  $f$ ,

$$f = BD(p) + (M_1 + M_2)D^2(p) - \frac{BM_2}{K} D^3(p) + \frac{M_1 M_2}{K} D^4(p). \quad (2.16)$$

Given the position of the second mass  $p$  we can readily solve for the corresponding force  $f$  and position of the first mass  $p$ . For example, if the constants  $B = K = 1$  and  $M_1 = M_2 = \frac{1}{2}$  and  $d = \frac{5}{2}$ , and if the position of the second mass satisfies

$$p(t) = e^{-t^2}$$

then, by application of (2.16) and (2.14),

$$f(t) = e^{-t^2} (1 - 8t - 8t^2 + 4t^3 + 4t^4), \quad \text{and} \quad p_1(t) = 2e^{-t^2} t^2 - \frac{5}{2}.$$

This solution is plotted in Figure 22.

Figure 22: Solution of the system describing two masses with a spring and damper where  $B = K = 1$  and  $M_1 = M_2 = \frac{1}{2}$  and the position of the second mass is  $p(t) = e^{-t^2}$ .

## 2.4 Direct current motors

Direct current (DC) motors convert electrical energy, in the form of a voltage, into rotary kinetic energy [Nise, 2007, page 76]. We derive a differential equation relating the input voltage  $v$  to the angular position of the motor  $\theta$ . Figure 23 depicts the components of a DC motor.

The voltages over the resistor and inductor satisfy

$$v_R = Ri, \quad v_L = LD(i),$$

and the motion of the motor induces a voltage called the back electromotive force (EMF),

$$v_b = K_b D(\theta)$$

that we model as being proportional to the angular velocity of the motor. The input voltage now satisfies

$$v = v_R + v_L + v_b = Ri + LD(i) + K_b D(\theta).$$

The torque  $\tau$  applied by the motor is modelled as being proportional to the current  $i$ ,

$$\tau = K_\tau i.$$

A load with inertia  $J$  is attached to the motor. Two forces are assumed to act on the load, the torque  $\tau$  applied by the current, and a torque  $\tau_d = -BD(\theta)$

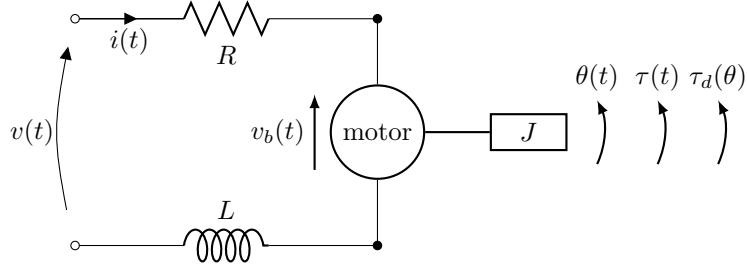


Figure 23: Diagram for a rotary direct current (DC) motor

modelling a damper that acts proportionally against the angular velocity of the motor. By Newton's law, the angular acceleration of the load satisfies

$$JD^2(\theta) = \tau + \tau_d = K_\tau i - BD(\theta).$$

Combining these equations we obtain the 3rd order differential equation

$$v = \left( \frac{RB}{K_\tau} + K_b \right) D(\theta) + \frac{RJ + LB}{K_\tau} D^2(\theta) + \frac{LJ}{K_\tau} D^3(\theta)$$

relating voltage and motor position. In many DC motors the inductance  $L$  is small and can be ignored, leaving the simpler second order equation

$$v = \left( \frac{RB}{K_\tau} + K_b \right) D(\theta) + \frac{RJ}{K_\tau} D^2(\theta). \quad (2.17)$$

Given the position signal  $\theta$  we can find the corresponding voltage signal  $v$ . For example, put the constants  $K_b = K_\tau = B = R = J = 1$  and assume that

$$\theta(t) = 2\pi(1 + \text{erf}(t))$$

where  $\text{erf}(t) = \frac{2}{\sqrt{\pi}} \int_{-\infty}^t e^{-\tau^2} d\tau$  is the **error function**. The corresponding angular velocity  $D(\theta)$  and voltage  $v$  satisfy

$$D(\theta, t) = 4\sqrt{\pi}e^{-t^2}, \quad v(t) = 8\sqrt{\pi}e^{-t^2}(1 - t).$$

These signals are depicted in Figure 24. This voltage signal is sufficient to make the motor perform two revolutions and then come to rest.

## 2.5 Exercises

- 2.1. Analyse the inverting amplifier circuit in Figure 16 to obtain the relationship between input voltage  $x$  and output voltage  $y$  given by (2.5). You may wish to use a symbolic programming language (for example Sage, Mathematica, or Maple).

Figure 24: Voltage and corresponding angle for a DC motor with constants  $K_b = K_\tau = B = R = J = 1$ .

### 3 Linear time-invariant systems

Throughout this section we let  $H$  be a linear time-invariant system.

#### 3.1 Convolution, regular systems and the delta “function”

A large number of linear time-invariant systems can be represented by a signal called the **impulse response**. The impulse response of a system  $H$  is a signal  $h$  such that

$$H(x, t) = \int_{-\infty}^{\infty} h(\tau)x(t - \tau)d\tau,$$

that is, the response of  $H$  to input signal  $x$  can be represented as an integral equation involving  $x$  and the impulse response  $h$ . The integral is called a **convolution** and appears so often that a special notation is used for it

$$h * x = \int_{-\infty}^{\infty} h(\tau)x(t - \tau)d\tau.$$

Those systems that have an impulse response we call **regular systems**<sup>1</sup>. Observe that regular systems are linear because

$$\begin{aligned} H(ax + by) &= h * (ax + by) \\ &= \int_{-\infty}^{\infty} h(\tau)(ax(t - \tau) + by(t - \tau))d\tau \\ &= a \int_{-\infty}^{\infty} h(\tau)x(t - \tau)d\tau + b \int_{-\infty}^{\infty} h(\tau)y(t - \tau)d\tau \\ &= a(h * x) + b(h * y) \\ &= aH(x) + bH(y). \end{aligned} \tag{3.1}$$

The above equations show that convolution commutes with scalar multiplication and distributes with addition, that is

$$h * (ax + by) = a(h * x) + b(h * y).$$

Regular systems are also time-invariant because

$$\begin{aligned} T_{\kappa}(H(x)) &= H(x, t - \kappa) \\ &= \int_{-\infty}^{\infty} h(\tau)x(t - \kappa - \tau)d\tau \\ &= \int_{-\infty}^{\infty} h(\tau)T_{\kappa}(x, t - \tau)d\tau \\ &= H(T_{\kappa}(x)). \end{aligned}$$

---

<sup>1</sup>The name **regular system** is motivated by the term **regular distribution** [Zemanian, 1965]

We can define the impulse response of a regular system  $H$  in the following way. First define the signal

$$p_\gamma(t) = \begin{cases} \gamma, & 0 < t \leq \frac{1}{\gamma} \\ 0, & \text{otherwise} \end{cases}$$

that is a rectangular shaped pulse of height  $\gamma$  and width  $\frac{1}{\gamma}$ . The signal  $p_\gamma$  is plotted in Figure 25 for  $\gamma = \frac{1}{2}, 1, 2, 5$ . As  $\gamma$  increases the pulse gets thinner and higher so as to keep the area under  $p_\gamma$  equal to one. Consider the response of the regular system  $H$  to the signal  $p_\gamma$ ,

$$\begin{aligned} H(p_\gamma) &= h * p_\gamma \\ &= \int_{-\infty}^{\infty} h(\tau)p_\gamma(t - \tau)d\tau \\ &= \gamma \int_0^{1/\gamma} h(\tau)d\tau. \end{aligned}$$

Taking limits as  $\gamma \rightarrow \infty$ ,

$$\lim_{\gamma \rightarrow \infty} H(p_\gamma) = \lim_{\gamma \rightarrow \infty} \gamma \int_0^{1/\gamma} h(\tau)d\tau = h.$$

Thus, the impulse response of a regular system  $H$  is defined as the limit

$$h = \lim_{\gamma \rightarrow \infty} H(p_\gamma).$$

The limit exists when  $H$  is regular. If this limit does not exist, the system is not regular and does not have an impulse response.

As an example, consider the integrator system

$$I_\infty(x, t) = \int_{-\infty}^t x(\tau)d\tau \quad (3.2)$$

described in Section 1.3. This systems response to  $p_\gamma$  is

$$I_\infty(p_\gamma, t) = \int_{-\infty}^t p_\gamma(\tau)d\tau = \begin{cases} 0, & t \leq 0 \\ \gamma t, & 0 < t \leq \frac{1}{\gamma} \\ 1, & t > \frac{1}{\gamma}. \end{cases}$$

The response is plotted in Figure 25. Taking the limit as  $\gamma \rightarrow \infty$  we find that the impulse response of the integrator is the step function

$$u(t) = \lim_{\gamma \rightarrow \infty} H(p_\gamma) = \begin{cases} 0 & t \leq 0 \\ 1 & t > 0. \end{cases} \quad (3.3)$$

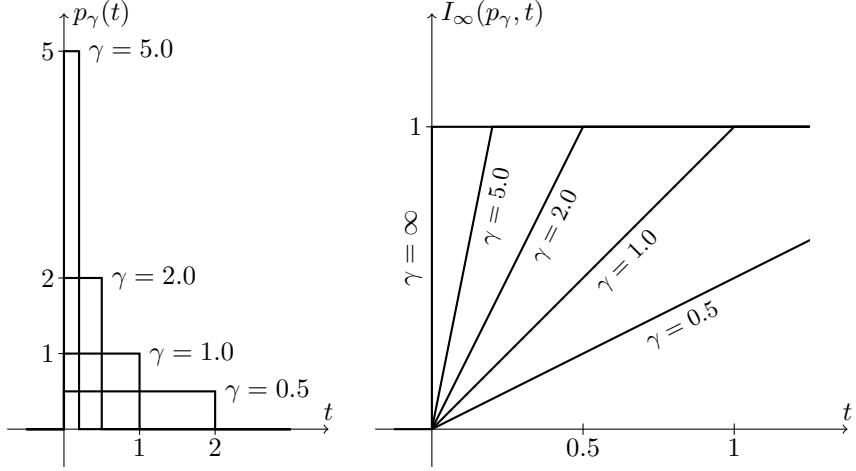


Figure 25: The rectangular shaped pulse  $p_\gamma$  for  $\gamma = 0.5, 1, 2, 5$  and the response of the integrator (3.2) to  $p_\gamma$  for  $\gamma = 0.5, 1, 2, 5, \infty$ .

Some important systems do not have an impulse response. For example, the identity system  $T_0$  does not because

$$\lim_{\gamma \rightarrow \infty} T_0(p_\gamma) = \lim_{\gamma \rightarrow \infty} p_\gamma$$

does not exist. Similarly, all the time shifters  $T_\tau$  do not have impulse responses. However, it is notationally useful to pretend that  $T_0$  *does* have an impulse response and we denote it by the symbol  $\delta$  called the **delta function**. The idea is to assign  $\delta$  the property

$$\int_{-\infty}^{\infty} x(t)\delta(t)dt = x(0)$$

so that convolution of  $x$  and  $\delta$  is

$$\delta * x = \int_{-\infty}^{\infty} \delta(\tau)x(t - \tau)d\tau = x(t) = T_0(x, t).$$

We now treat  $\delta$  as if it were a signal. So  $\delta(t - \tau)$  will represent the impulse response of the time shifter  $T_\tau$  because

$$\begin{aligned} T_\tau(x) &= \delta(t - \tau) * x \\ &= \int_{-\infty}^{\infty} \delta(\kappa - \tau)x(t - \kappa)d\kappa \\ &= \int_{-\infty}^{\infty} \delta(k)x(t - \tau - k)dk \quad (\text{change variable } k = \kappa - \tau) \\ &= x(t - \tau). \end{aligned}$$

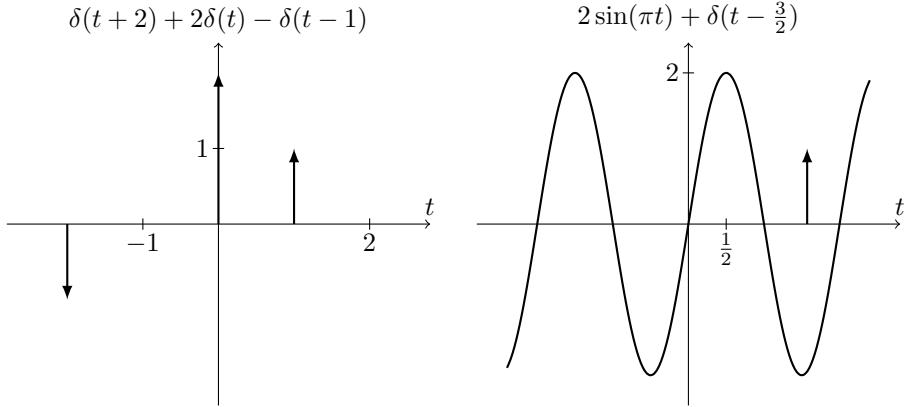


Figure 26: Plot of the signal  $\delta(t+2) + 2\delta(t) - \delta(t-1)$  (left) and the signal  $2 \sin(\pi t) + \delta(t - \frac{3}{2})$  (right).

It is common to plot  $a\delta(t - \tau)$  using an arrow of height  $a$  at  $t = \tau$  as indicated in Figure 26. It is important to realise that  $\delta$  is not actually a signal. It is not a function. However, it can be convenient to treat  $\delta$  as if it were a function. The manipulations in the last set of equations, such as the change of variables, are not formally justified, but they do lead to the desired result  $T_\tau(x) = x(t - \tau)$  in this case. In general, there is no guarantee that mechanical mathematical manipulations involving  $\delta$  will lead to sensible results.

The only other non regular systems that we have use of are differentiators  $D^k$ , and it is convenient to define a similar notation for pretending that these systems have an impulse response. In this case we use the symbol  $\delta^k$  and assign it the property

$$\int_{-\infty}^{\infty} x(t)\delta^k(t)dt = D^k(x, 0),$$

so that convolution of  $x$  and  $\delta$  is

$$\delta^k * x = \int_{-\infty}^{\infty} \delta^k(\tau)x(t - \tau)d\tau = D^k(x, t).$$

As with the delta function the symbol  $\delta^k$  must be treated with care. This notation can be useful, but purely formal manipulations with  $\delta^k$  may not lead to sensible results in general.

The impulse response  $h$  immediately yields some properties of the corresponding system  $H$ . For example, if  $h(t) = 0$  for all  $t < 0$ , then  $H$  is causal because

$$H(x, t) = h * x = \int_{-\infty}^{\infty} h(\tau)x(t - \tau)d\tau = \int_0^{\infty} h(\tau)x(t - \tau)d\tau$$

only depends on values of  $x$  at times less than  $t$ , i.e., only times  $t - \tau$  with  $\tau > 0$ . The system  $H$  is stable if and only if  $h$  is absolutely integrable (Exercise 3.3).

Another important signal is the **step response** of a system that is defined as the response of the system to the step function  $u(t)$ . For example, the step response of the time shifter  $T_\tau$  is the time shifted step function  $T_\tau(u, t) = u(t - \tau)$ . The step response of the integrator  $I_\infty$  is

$$I_\infty(u, t) = \int_{-\infty}^t u(\tau) d\tau = \begin{cases} \int_0^t dt = t & t > 0 \\ 0 & t \leq 0. \end{cases}$$

This signal is often called the **ramp function**. Not all systems have a step response. For example, the system with impulse response  $u(-t)$  does not because the convolution of the step  $u(t)$  and its reflection  $u(-t)$  does not exist. If a system  $H$  has both an impulse response  $h$  and a step response  $H(u)$ , then these two signals are related. To see this, observe that the step response is

$$H(u) = h * u = \int_{-\infty}^{\infty} h(\tau)u(t - \tau) d\tau = \int_{-\infty}^t h(\tau)d\tau = I_\infty(h, t). \quad (3.4)$$

Thus, the step response can be obtained by applying the integrator  $I_\infty$  to the impulse response.

### 3.2 Properties of convolution

The convolution  $x * y$  of two signals  $x$  and  $y$  does not always exist. For example, if  $x = u(t)$  and  $y = u(-t)$ , then

$$x * y = \int_{-\infty}^{\infty} u(\tau)u(t - \tau) d\tau = \int_t^{\infty} d\tau,$$

which is not finite for any  $t$ . On the other hand, if  $x = y = u(t)$ , then

$$x * y = \int_{-\infty}^{\infty} u(\tau)u(t - \tau) d\tau = \begin{cases} \int_0^t dt = t & t > 0 \\ 0 & t \leq 0, \end{cases}$$

which exists for all  $t$ .

We have already shown in (3.1) that convolution commutes with scalar multiplication and is distributive with addition, that is, for signals  $x, y, w$  and complex numbers  $a, b$ ,

$$a(x * w) + b(y * w) = (ax + by) * w.$$

Convolution is commutative, that is,  $x * y = y * x$  whenever these convolutions exist. To see this, write

$$\begin{aligned} x * y &= \int_{-\infty}^{\infty} x(\tau)y(t - \tau) d\tau \\ &= \int_{-\infty}^{\infty} x(t - \kappa)y(\kappa) d\kappa \quad (\text{change variable } \kappa = t - \tau) \\ &= y * x. \end{aligned}$$

Convolution is also associative, that is, for signals  $x, y, z$ ,

$$(x * y) * z = x * (y * z). \quad (\text{see Exercise 3.2})$$

By combining the associative and commutative properties we find that the order in which the convolutions in  $x * y * z$  are performed does not matter, that is

$$x * y * z = y * z * x = z * x * y = y * x * z = x * z * y = z * y * x$$

provided that all the convolutions involved exist. More generally, the order in which any sequence of convolutions is performed does not change the final result.

### 3.3 Linear combining and composition

Let  $H_1$  and  $H_2$  be linear time-invariant systems and let  $H$  be the system

$$H(x) = cH_1(x) + dH_2(x), \quad c, d \in \mathbb{R}$$

formed by a linear combination of  $H_1$  and  $H_2$ . The system  $H$  is linear because for signals  $x, y$  and complex numbers  $a, b$ ,

$$\begin{aligned} H(ax + by) &= cH_1(ax + by) + dH_2(ax + by) \\ &= acH_1(x) + bcH_1(y) + adH_2(x) + bdH_2(y) \quad (\text{linearity } H_1, H_2) \\ &= a(cH_1(x) + dH_2(x)) + b(cH_1(y) + dH_2(y)) \\ &= aH(x) + bH(y). \end{aligned}$$

The system is also time-invariant because

$$\begin{aligned} H(T_\tau(x)) &= cH_1(T_\tau(x)) + dH_2(T_\tau(x)) \\ &= cT_\tau(H_1(x)) + dT_\tau(H_2(x)) \quad (\text{time-invariance } H_1, H_2) \\ &= T_\tau(cH_1(x) + dH_2(x)) \quad (\text{linearity } T_\tau) \\ &= T_\tau(H(x)). \end{aligned}$$

So, we can construct linear time-invariant systems by **linearly combining** (adding and multiplying by constants) other linear time-invariant systems. If  $H_1$  and  $H_2$  are regular systems this linear combining property can be expressed using their impulse responses  $h_1$  and  $h_2$ . We have

$$\begin{aligned} H(x) &= aH_1(x) + bH_2(x) \\ &= ah_1 * x + bh_2 * x \\ &= (ah_1 + bh_2) * x \quad (\text{distributivity of convolution}) \\ &= h * x, \end{aligned}$$

and so,  $H$  is a regular system with impulse response  $h = ah_1 + bh_2$ .

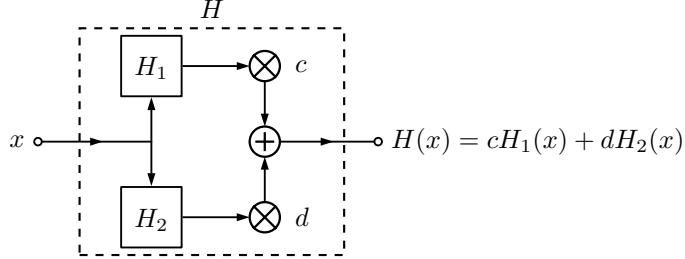


Figure 27: Block diagram depicting the linear combining property of linear time-invariant systems. The system  $cH_1(x) + dH_2(x)$  can be expressed as a single linear time-invariant system  $H(x)$ .

Another way to construct linear time-invariant systems is by **composition**. Let  $H_1$  and  $H_2$  be linear time-invariant systems and let

$$H(x) = H_2(H_1(x)),$$

that is,  $H$  first applies the system  $H_1$  and then applies the system  $H_2$ . The composition  $H_2(H_1(x))$  only applies to those signals  $x$  in the domain of  $H_1$  and such that the signal  $H_1(x)$  is in the domain of  $H_2$ . The system  $H$  is linear because, for signals  $x, y$  and complex numbers  $a, b$ ,

$$\begin{aligned} H(ax + by) &= H_2(H_1(ax + by)) \\ &= H_2(aH_1(x) + bH_1(y)) \quad (\text{linearity } H_1) \\ &= aH_2(H_1(x)) + bH_2(H_1(y)) \quad (\text{linearity } H_2) \\ &= aH(x) + bH(y). \end{aligned}$$

The system is also time-invariant because

$$\begin{aligned} H(T_\tau(x)) &= H_2(H_1(T_\tau(x))) \\ &= H_2(T_\tau(H_1(x))) \quad (\text{time-invariance } H_1) \\ &= T_\tau(H_2(H_1(x))) \quad (\text{time-invariance } H_2) \\ &= T_\tau(H(x)). \end{aligned}$$

If  $H_1$  and  $H_2$  are regular systems the composition property can be expressed using their impulse responses  $h_1$  and  $h_2$ . It follows that

$$\begin{aligned} H(x) &= H_2(H_1(x)) \\ &= h_2 * (h_1 * x) \\ &= (h_2 * h_1) * x \quad (\text{associativity of convolution}) \\ &= h * x, \end{aligned}$$

and so,  $H$  is a regular system with impulse response  $h = h_2 * h_1$ .

A wide variety of linear time-invariant systems can now be constructed by linearly combining and composing simpler systems.

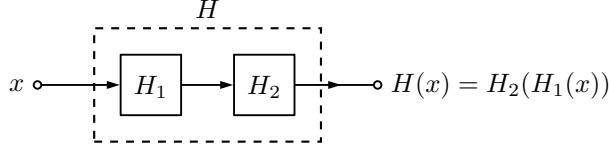


Figure 28: Block diagram depicting the composition property of linear time-invariant systems. The system  $H_2(H_1(x))$  can be expressed as a single linear time-invariant system  $H(x)$ .

### 3.4 Eigenfunctions and the transfer function

Let  $s = \sigma + j\omega \in \mathbb{C}$ . Complex exponential signals of the form

$$e^{st} = e^{\sigma t} e^{j\omega t} = e^{\sigma t} (\cos(\omega t) + j \sin(\omega t))$$

play an important role in the study of linear time-invariant systems. The real and imaginary parts of the signal  $e^{(\sigma+j\pi)t}$  with  $\sigma = -\frac{1}{10}, 0, \frac{1}{10}$  are plotted in Figure 29. The signal is oscillatory when  $\omega \neq 0$ . The signal converges to zero as  $t \rightarrow \infty$  when  $\sigma < 0$  and diverges as  $t \rightarrow \infty$  when  $\sigma > 0$ .

Let  $H$  be a linear time-invariant system and let  $y = H(e^{st})$  be the response of  $H$  to the exponential signal  $e^{st}$ . Consider the response of  $H$  to the time-shifted signal  $e^{s(t+\tau)}$  for  $\tau \in \mathbb{R}$ . By time-invariance

$$H(e^{s(t+\tau)}, t) = H(e^{st}, t + \tau) = y(t + \tau) \quad \text{for all } t, \tau \in \mathbb{R},$$

and by linearity

$$H(e^{s(t+\tau)}, t) = e^{s\tau} H(e^{st}, t) = e^{s\tau} y(t) \quad \text{for all } t, \tau \in \mathbb{R}.$$

Combining these equations we obtain

$$y(t + \tau) = e^{s\tau} y(t) \quad \text{for all } t, \tau \in \mathbb{R}.$$

This equation is satisfied by signals of the form  $y(t) = \lambda e^{st}$  where  $\lambda$  is a complex number. That is, the response of  $H$  to an exponential signal  $e^{st}$  is the same signal  $e^{st}$  multiplied by some constant complex number  $\lambda$ . Due to this property exponential signals are called **eigenfunctions** of linear time-invariant systems. The constant  $\lambda$  does not depend on  $t$ , but it does usually depend on the complex number  $s$  and the system  $H$ . To highlight this dependence on  $H$  and  $s$  we write  $\lambda(H, s)$  or  $\lambda(H)(s)$ . Considered as a function of  $s$ ,  $\lambda(H, s)$  is called the **transfer function** of the system  $H$ . Thus, the transfer function satisfies

$$H(e^{st}) = \lambda(H, s) e^{st}. \tag{3.5}$$

We can use these eigenfunctions to better understand the properties of systems modelled by differential equations, such as those in Section 2. As an example, consider the active electrical circuit from Figure 17. In the case that

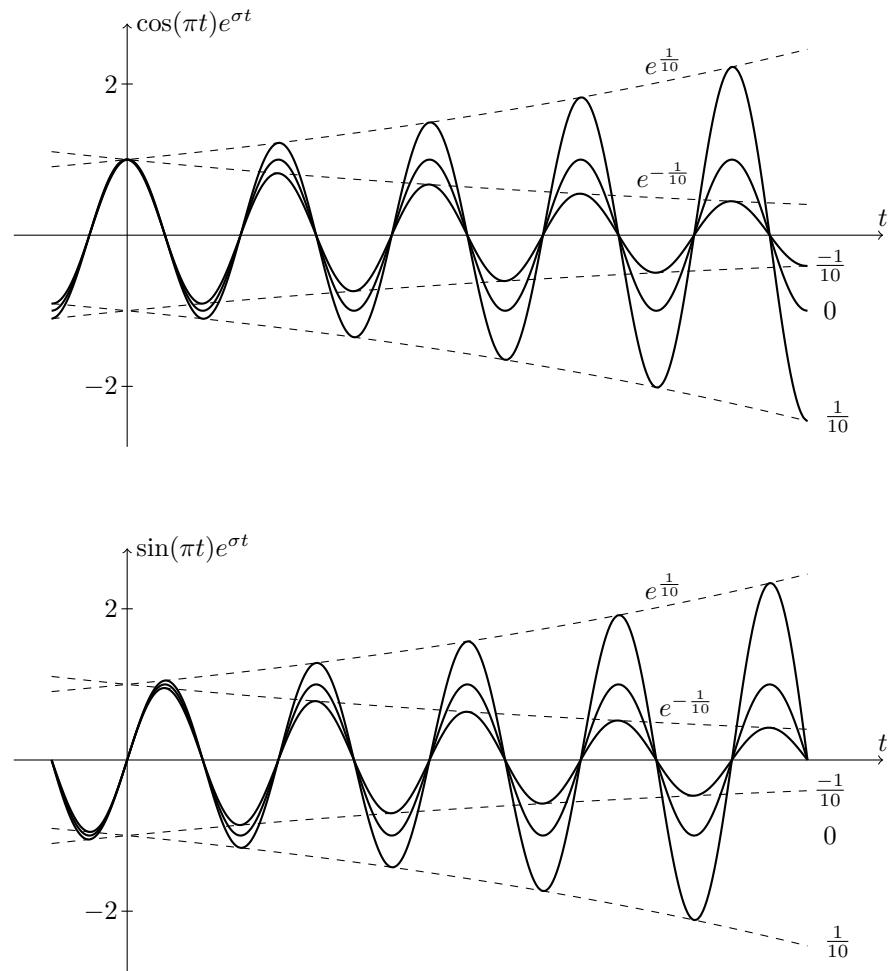


Figure 29: The function  $\cos(\pi t)e^{\sigma t}$  (top) and  $\sin(\pi t)e^{\sigma t}$  (bottom) for  $\sigma = -\frac{1}{10}, 0, \frac{1}{10}$ .

the resistors  $R_1 = R_2$ , and the capacitor  $C_1 = 0$  (an open circuit) the differential equation relating the input voltage  $x$  and output voltage  $y$  is

$$x = -y - R_1 C_2 D(y).$$

We called this the **active RC** circuit. To simplify notation put  $R = R_1$  and  $C = C_2$  so that  $x = -y - RCD(y)$ . Observe what occurs when  $y = ce^{st}$  is a complex exponential signal with  $c \in \mathbb{C}$ . We have

$$x = -ce^{st} - cRCse^{st} = -(1 + RCs)ce^{st} = -(1 + RCs)y,$$

and so,  $x$  is also a complex exponential signal. We immediately obtain the relationship

$$y = -\frac{1}{1 + RCs}x,$$

that holds whenever  $y$  (or equivalently  $x$ ) is of the form  $ce^{st}$  with  $c \in \mathbb{C}$ . Let  $H$  be a system that maps the input voltage  $x$  to the output voltage  $y$ , i.e.,  $H$  is a system that describes the active RC circuit. Putting  $x = e^{st}$  in the equation above, we find that

$$y = H(x) = H(e^{st}) = -\frac{1}{1 + RCs}e^{st},$$

and so, the transfer function of the system  $H$  describing the active RC circuit is

$$\lambda(H, s) = -\frac{1}{1 + RCs}. \quad (3.6)$$

### 3.5 The spectrum

It is often of interest to focus on the transfer function when  $s$  is purely imaginary, that is, when  $s = j\omega$ . In this case the complex exponential signal takes the form

$$e^{j\omega t} = \cos(\omega t) + j \sin(\omega t).$$

This signal is oscillatory when  $\omega \neq 0$  and does not decay or explode as  $|t| \rightarrow \infty$ . The function

$$\Lambda(H, f) = \lambda(H, j2\pi f)$$

is called the **spectrum** of the system  $H$ . It follows from (3.5) that the response of the system to the complex exponential signal  $e^{j2\pi ft}$  satisfies

$$H(e^{j2\pi ft}) = \lambda(H, j2\pi f)e^{j2\pi ft} = \Lambda(H, f)e^{j2\pi ft}, \quad f \in \mathbb{R}.$$

It is of interest to consider the **magnitude spectrum**  $|\Lambda(H, f)|$  and the **phase spectrum**  $\angle \Lambda(H, f)$  separately. The notation  $\angle$  denotes the **argument** (or **phase**) of a complex number. We have,

$$\Lambda(H, f) = |\Lambda(H, f)| e^{j\angle \Lambda(H, f)},$$

and correspondingly,

$$H(e^{j2\pi ft}) = |\Lambda(H, f)| e^{j(2\pi ft + \angle\Lambda(H, f))}.$$

By taking real and imaginary parts we obtain the pair of real valued solutions

$$\begin{aligned} H(\cos(2\pi ft)) &= |\Lambda(H, f)| \cos(2\pi ft + \angle\Lambda(H, f)), \\ H(\sin(2\pi ft)) &= |\Lambda(H, f)| \sin(2\pi ft + \angle\Lambda(H, f)). \end{aligned} \quad (3.7)$$

Consider again the active RC circuit with  $H$  the system mapping the input voltage  $x$  to the output voltage  $y$ . According to (3.6) the spectrum of  $H$  is

$$\Lambda(H, f) = -\frac{1}{1 + 2\pi RCfj}. \quad (3.8)$$

The magnitude and phase spectrum is

$$|\Lambda(H, f)| = (1 + 4\pi^2 R^2 C^2 f^2)^{-\frac{1}{2}}, \quad \angle\Lambda(H, f) = \text{atan}(2\pi RCf) + \pi.$$

The magnitude and phase spectrum are plotted in Figure 30. Observe from the plot of the magnitude spectrum that a low frequency sinusoidal signal, say 100Hz or less, input to the RC circuit results in a sinusoidal output signal with the same frequency and approximately the same amplitude. However, a high frequency sinusoidal signal, say greater than 1000Hz, input to the RC circuit results in a sinusoidal output signal with the same frequency, but small amplitude. For this reason RC circuits are called **low pass filters**.

**Test 4 (Spectrum of the active RC circuit)** We test the hypothesis that the active RC circuit satisfies (3.7). To do this sinusoidal signals at varying frequencies of the form

$$x_k(t) = \sin(2\pi f_k t), \quad f_k = 110 \times 2^{k/2}, \quad k = 0, 1, \dots, 12$$

are input to the active RC circuit constructed as in Test 3 with  $R = R_1 = 27\text{k}\Omega$  and  $C = C_2 = 10\text{nF}$ . In view of (3.7) the expected output signals are of the form

$$y_k(t) = |\Lambda(H, f_k)| \sin(2\pi f_k t + \angle\Lambda(H, f_k)), \quad k = 0, 1, \dots, 12.$$

This equality can also be shown directly using the differential equation for the active RC circuit. For any positive integer  $M$  the energy of the periodic transmitted signal  $x_k$  over any interval of length  $T = M/f_k$  (an interval containing  $M$  periods) is

$$\text{energy}(x_k) = \int_0^T \sin^2(2\pi f_k t) dt = \frac{1}{2} \int_0^T 1 - \cos(4\pi f_k t) dt = \frac{T}{2} = \frac{M}{2f_k}.$$

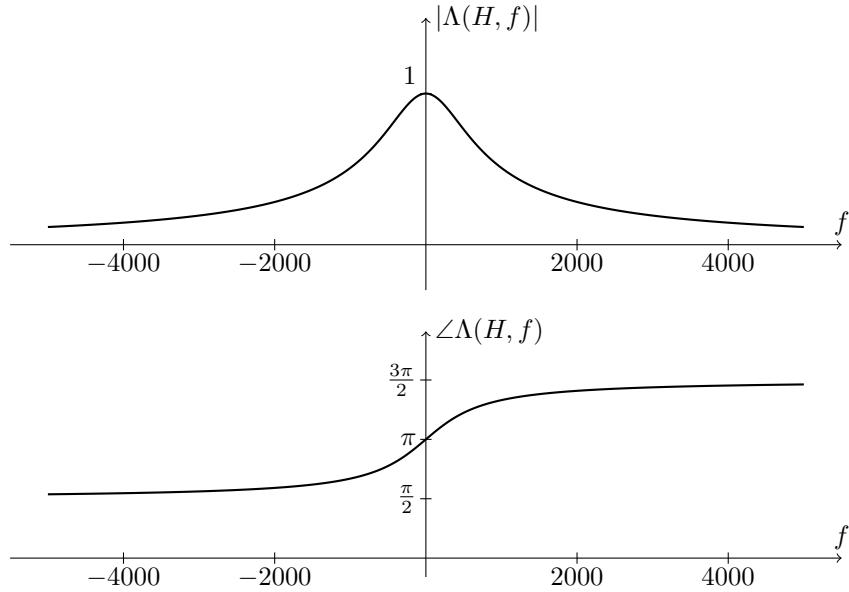


Figure 30: Magnitude spectrum (top) and phase spectrum (bottom) of the active RC circuit with  $R = 27 \times 10^3$  and  $C = 10 \times 10^{-9}$ .

The energy of the output signal  $y_k$  over the same interval is

$$\text{energy}(y_k) = |\Lambda(H, f_k)|^2 \text{energy}(x_k) = \frac{\text{energy}(x_k)}{1 + 4\pi^2 R^2 C^2 f_k^2}. \quad (3.9)$$

We see that the square of the magnitude spectrum relates the energy of the input and output signals. We test this relationship.

Using the soundcard the signals  $x_k$  for each  $k = 0, \dots, 21$  are input to the circuit. Reconstructions of the input signal  $\tilde{x}_k$  and the output signal  $\tilde{y}_k$  are constructed from samples  $x_{k,1}, \dots, x_{k,L}$  and  $y_{k,1}, \dots, y_{k,L}$  in a similar manner to (1.8) and (1.6) where  $L$  is the number of samples obtained by the soundcard.

The energy of the reconstructed input signal  $\tilde{x}_k$  is

$$\begin{aligned}
\|\tilde{x}_k\|_2 &= \int_{-\infty}^{\infty} \left| \sum_{\ell=1}^L x_{k,\ell} \text{sinc}(F_s t - \ell) \right|^2 dt \\
&= \int_{-\infty}^{\infty} \sum_{\ell=1}^L \sum_{m=1}^L x_{k,\ell} x_{k,m} \text{sinc}(F_s t - \ell) \text{sinc}(F_s t - m) dt \\
&= \sum_{\ell=1}^L \sum_{m=1}^L x_{k,\ell} x_{k,m} \int_{-\infty}^{\infty} \text{sinc}(F_s t - \ell) \text{sinc}(F_s t - m) dt \\
&= \frac{1}{F_s} \sum_{\ell=1}^L x_{k,\ell}^2
\end{aligned}$$

where, on the last line we use the fact that sinc and its time shifts by a nonzero integer  $T_m(\text{sinc})$  are **orthogonal** (see Section 5.2). That is,

$$\int_{-\infty}^{\infty} \text{sinc}(t) \text{sinc}(t - m) dt = \begin{cases} 1 & m = 0 \\ 0 & m \neq 0. \end{cases} \quad (3.10)$$

Similarly, the energy of the reconstructed output signal  $\tilde{y}_k$  is

$$\|\tilde{y}_k\|_2 = \frac{1}{F_s} \sum_{\ell=1}^L y_{k,\ell}^2.$$

So, to compute the energy of the reconstructed signals it suffices to sum the squares of the samples and divide by the sample rate  $F_s$ . In view of 3.9, we expect the approximate relationship

$$\frac{\|\tilde{y}_k\|_2}{\|\tilde{x}_k\|_2} \approx |\Lambda(H, f_k)|^2 = \frac{1}{1 + 4\pi^2 R^2 C^2 f_k^2}. \quad (3.11)$$

Each signal  $x_k$  is played for a period of approximately 1 second and approximately  $L \approx F_s = 44100$  samples are obtained. On the soundcard hardware used for this test samples near the beginning and end of playback are distorted. This appears to be an unavoidable feature of the soundcard. To alleviate this we discard the first  $A - 1 = 9999$  samples and use only the  $B = 8820$  samples that follow (corresponding to 200ms of signal). In view of (3.11), we expect the relationship

$$\sqrt{\frac{\sum_{\ell=A}^{A+B} y_{k,\ell}^2}{\sum_{\ell=A}^{A+B} x_{k,\ell}^2}} \approx |\Lambda(H, f)| = \sqrt{\frac{1}{1 + 4\pi^2 R^2 C^2 f_k^2}}.$$

Figure 31 displays a plot of the hypothesised spectrum  $|\Lambda(H, f)|$  (solid line) and also the spectrum measured using the left hand side of the approximate equation

above (dots). The measurements are close to the hypothesised spectrum, but are consistently a small amount larger. The amplifier appears to produce a slightly larger output voltage than expected. This could be due to inaccuracies in the components used, and also due to our assumption of an ideal operational amplifier.

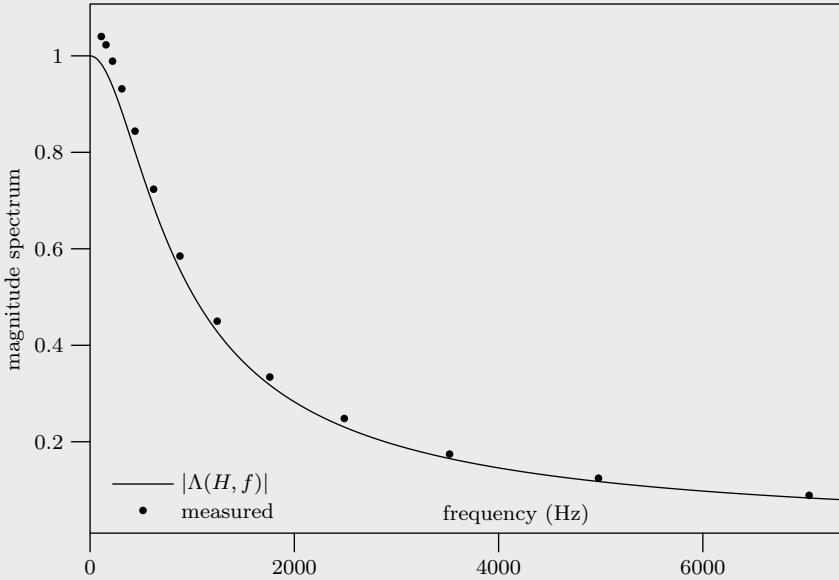


Figure 31: Plot of the hypothesised magnitude spectrum  $|\Lambda(H, f)|$  (solid line) and the measured magnitude spectrum (dots).

### 3.6 Exercises

- 3.1. Show that convolution distributes with addition and commutes with scalar multiplication, that is, show that  $a(x * w) + b(y * w) = (ax + by) * w$ .
- 3.2. Show that convolution is associative. That is, if  $x, y, z$  are signals then  $x * (y * z) = (x * y) * z$ .
- 3.3. Show that a regular system is stable if and only if its impulse response is absolutely integrable.

## 4 The Laplace transform

Let  $x: \mathbb{R} \rightarrow \mathbb{C}$  be a complex valued function of the real line (a signal). The integral

$$\mathcal{L}(x) = \int_{-\infty}^{\infty} x(t)e^{-st}dt, \quad (4.1)$$

when it exists, is called the **Laplace transform** of  $x$ . The Laplace transform is a function of the complex parameter  $s$ , and if we need to indicate this we write  $\mathcal{L}(x)(s)$  or  $\mathcal{L}(x, s)$ . The Laplace transform does not necessarily exist for all values of  $s \in \mathbb{C}$ . Let  $R$  be the set of real numbers such that  $x(t)e^{-\sigma t}$  is absolutely integrable if and only if  $\sigma \in R$ , that is

$$\int_{-\infty}^{\infty} |x(t)| e^{-\sigma t} dt \quad \text{exists if and only if } \sigma \in R.$$

In this case, the Laplace transform  $\mathcal{L}(x, s)$  exists for all  $s$  with real part satisfying  $\operatorname{Re}(s) \in R$  because

$$|\mathcal{L}(x, s)| = \left| \int_{-\infty}^{\infty} x(t)e^{-st} dt \right| \leq \int_{-\infty}^{\infty} |x(t)| e^{-\operatorname{Re}(s)t} dt < \infty.$$

The subset of the complex plane with real part from  $R$  is called the **region of convergence** (ROC) of the signal  $x$ .

For example, the Laplace transform of the right sided signal  $e^{\alpha t}u(t)$  is

$$\begin{aligned} \mathcal{L}(e^{\alpha t}u(t)) &= \int_{-\infty}^{\infty} e^{\alpha t}e^{-st}u(t)dt \\ &= \int_0^{\infty} e^{(\alpha-s)t}dt \\ &= \lim_{t \rightarrow \infty} \frac{e^{(\alpha-s)t}}{\alpha-s} - \frac{1}{\alpha-s}. \end{aligned}$$

The limit exists for all  $s$  with  $\operatorname{Re}(\alpha - s) < 0$ . Thus, the Laplace transform of  $e^{\alpha t}u(t)$  is

$$\mathcal{L}(e^{\alpha t}u(t)) = \frac{1}{s - \alpha} \quad \operatorname{Re}(s) > \operatorname{Re}(\alpha)$$

The region of convergence of  $e^{\alpha t}u(t)$  is the subset of the complex plane with real part greater than  $\operatorname{Re}(\alpha)$ . Figure 32 shows the region of convergence when  $\operatorname{Re}(\alpha) = -2$ . Now consider the left sided signal  $e^{\beta t}u(-t)$  with Laplace transform

$$\mathcal{L}(e^{\beta t}u(-t)) = \lim_{t \rightarrow -\infty} \frac{e^{(\beta-s)t}}{\beta - s} + \frac{1}{\beta - s}.$$

The limit exists only when  $\operatorname{Re}(\beta - s) > 0$ , and so,

$$\mathcal{L}(e^{\beta t}u(-t)) = \frac{1}{\beta - s} \quad \operatorname{Re}(s) < \operatorname{Re}(\beta).$$

The signal  $ae^{\alpha t}u(t) + be^{\beta t}u(-t)$  has Laplace transform

$$\begin{aligned}\mathcal{L}(ae^{\alpha t}u(t) + be^{\beta t}u(-t)) &= \int_{-\infty}^{\infty} (ae^{\alpha t}u(t) + be^{\beta t}u(-t))e^{-st}dt \\ &= a \int_{-\infty}^{\infty} e^{\alpha t}u(t)e^{-st}dt + b \int_{-\infty}^{\infty} e^{\beta t}u(-t)e^{-st}dt \\ &= a\mathcal{L}(e^{\alpha t}u(t)) + b\mathcal{L}(e^{\beta t}u(-t))\end{aligned}$$

that exists only when  $\operatorname{Re}(\alpha) < \operatorname{Re}(s) < \operatorname{Re}(\beta)$ . The corresponding ROC is shown in Figure 32 when  $\operatorname{Re}(\alpha) = -2$  and  $\operatorname{Re}(\beta) = 3$ . In the previous equation we have discovered that the Laplace transform is **linear**, that is, for signals  $x$  and  $y$  and constants  $a$  and  $b$ ,

$$\mathcal{L}(ax + by) = a\mathcal{L}(x) + b\mathcal{L}(y). \quad (4.2)$$

In words: the Laplace transform of a linear combination of signals is the same linear combination of the Laplace transforms of those signals.

In the previous example the Laplace transform does not exist for any  $s$  if  $\operatorname{Re}(\alpha) \geq \operatorname{Re}(\beta)$ , and the region of convergence is correspondingly the empty set. Other signals also have this property. For example, the signal  $x(t) = 1$  does not have a Laplace transform because

$$\mathcal{L}(1) = \int_{\infty}^{\infty} e^{-st}dt = \frac{1}{s} \lim_{t \rightarrow -\infty} e^{-st} - \frac{1}{s} \lim_{t \rightarrow \infty} e^{-st}$$

and the limit as  $t \rightarrow -\infty$  exists only when  $\operatorname{Re}(s) < 0$  while the limit as  $t \rightarrow \infty$  exists only when  $\operatorname{Re}(s) > 0$ .

As a final example, consider the rectangular pulse

$$\Pi(t) = \begin{cases} 1 & -\frac{1}{2} < t \leq \frac{1}{2} \\ 0 & \text{otherwise.} \end{cases}$$

Its Laplace transform is

$$\mathcal{L}(\Pi) = \int_{-\infty}^{\infty} \Pi(t)e^{-st}dt = \int_{-1/2}^{1/2} e^{-st}dt = \frac{e^{s/2} - e^{-s/2}}{s}, \quad (4.3)$$

and this transform exists for all  $s \in \mathbb{C}$ . The region of convergence of the rectangular pulse  $\Pi$  is the entire complex plane. The examples just given exhibit all the possible types of regions of convergence. The region of convergence is either the entire complex plane, a left or right half plane, a vertical strip, or the empty set.

Given the Laplace transform  $\mathcal{L}(x)$  the signal  $x$  can be recovered by the **inverse Laplace transform**

$$x(t) = \mathcal{L}^{-1}(x) = \frac{1}{2\pi j} \lim_{\omega \rightarrow \infty} \int_{\sigma-j\omega}^{\sigma+j\omega} \mathcal{L}(x, s)e^{st}ds,$$

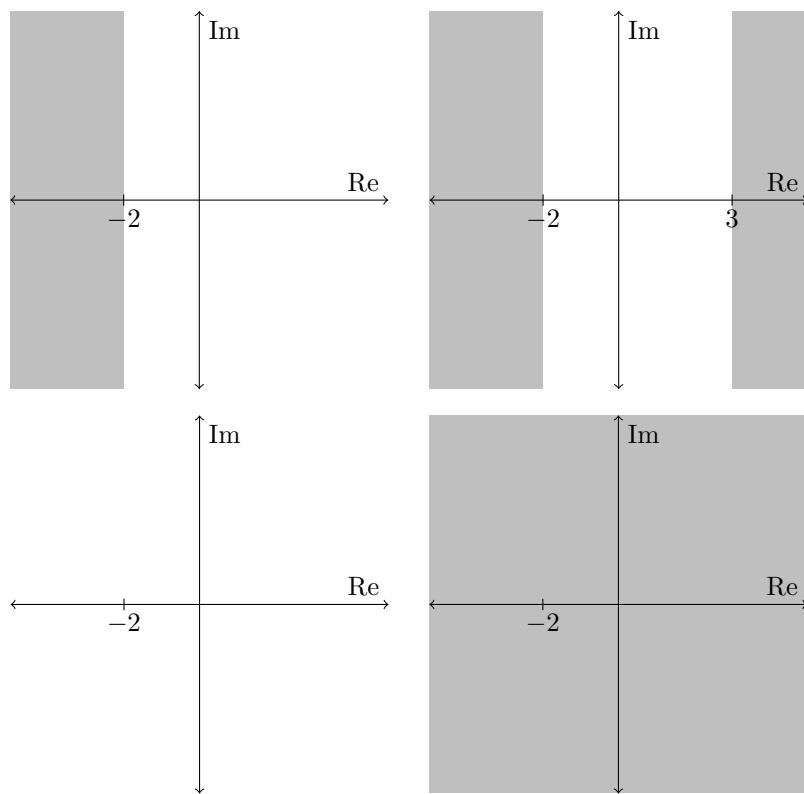


Figure 32: Regions of convergence (unshaded) for the signal  $e^{-2t}u(t)$  (top left), the signal  $e^{-2t}u(t) + e^{3t}u(-t)$  (top right), the rectangular pulse  $\Pi$  (bottom left), and the constant signal  $x(t) = 1$  (bottom right).

where  $\sigma$  is a real number that is inside the region of convergence of  $x$ . Solving the integral above typically requires a special type of integration called **contour integration** that we will not consider here [Stewart and Tall, 2004]. For our purposes, and for many engineering purposes, it suffices to remember only the following Laplace transform pair

$$\mathcal{L}(t^n u(t)) = \frac{n!}{s^{n+1}} \quad \text{Re}(s) > 0, \quad (4.4)$$

where  $n \geq 0$  is an integer (Exercise 4.2). Let  $x(t)$  be a signal with region of convergence  $R$ . The Laplace transforms of the signal  $x(t)$  and the signal  $e^{\alpha t}x(t)$  are related. To see this write

$$\begin{aligned} \mathcal{L}(e^{\alpha t}x(t), s) &= \int_{-\infty}^{\infty} e^{\alpha t}x(t)e^{-st}dt \\ &= \int_{-\infty}^{\infty} x(t)e^{-(s-\alpha)t}dt \\ &= \mathcal{L}(x, s - \alpha) \quad \text{Re}(s - \alpha) \in R. \end{aligned} \quad (4.5)$$

This is called the **frequency shift rule**. Combining the frequency shift rule with (4.4) we obtain the transform pair

$$\mathcal{L}(t^n e^{\alpha t} u(t)) = \mathcal{L}(t^n u(t), s - \alpha) = \frac{n!}{(s - \alpha)^{n+1}} \quad \text{Re}(s) > \text{Re}(\alpha), \quad (4.6)$$

where  $n \geq 0$  is an integer. This is the only Laplace transform pair we require here.

## 4.1 The transfer function and the Laplace transform

Our purpose for introducing the Laplace transform is to study the response of a linear time-invariant system  $H$  to exponential signals of the form  $e^{st}$ . Recall from Section 3.4 that exponential signals are **eigenfunctions** of linear time-invariant systems. That is, for each  $s \in \mathbb{C}$ , the response of  $H$  to  $e^{st}$  is  $\lambda e^{st}$  where  $\lambda \in \mathbb{C}$  is a constant that does not depend on  $t$ , but may depend on  $s$  and the system  $H$ . To highlight this dependence on  $H$  and  $s$  we write  $\lambda(H, s)$  or  $\lambda(H)(s)$ . Considered as a function of  $s$ ,  $\lambda(H, s)$  is called the **transfer function** of the system  $H$ . For a given system  $H$ , we would like to understand how  $\lambda(H, s)$  behaves as  $s$  changes. In what follows we regularly drop the argument “ $(s)$ ” and simply write  $\lambda(H)$  as the transfer function of  $H$ .

Assume that  $H$  is a regular system with impulse response  $h$ . In this case,

$$\begin{aligned} H(e^{st}, t) &= e^{st} \lambda(H, s) = h * e^{st} \\ &= \int_{-\infty}^{\infty} h(\tau) e^{s(t-\tau)} d\tau \\ &= e^{st} \int_{-\infty}^{\infty} h(\tau) e^{-s\tau} d\tau \\ &= e^{st} \mathcal{L}(h, s), \end{aligned}$$

and so,  $\lambda(H) = \mathcal{L}(h)$ . That is, the transfer function of a regular system is precisely the Laplace transform of its impulse response. The region of convergence of the impulse response describes the set of complex exponential signals  $e^{st}$  that can be input to (are in the domain of) the system and we refer to this as the region of convergence of the *system*. In this way, both signals and systems have regions of convergence.

The transfer functions of the time-shifter and differentiator can be obtained by inspection. For the time-shifter

$$T_\tau(e^{st}) = e^{s(t-\tau)} = e^{-s\tau}e^{st} \quad \text{and so} \quad \lambda(T_\tau, s) = e^{-s\tau}. \quad (4.7)$$

The region of convergence is the whole complex plane  $s \in \mathbb{C}$ . For the special case of the identity system  $T_0$  we obtain  $\lambda(T_0, s) = 1$ . For the differentiator

$$D(e^{st}) = \frac{d}{dt}e^{st} = se^{st} \quad \text{and so} \quad \lambda(D, s) = s.$$

The region of convergence is the whole complex plane  $s \in \mathbb{C}$ . More generally, for the  $k$ th differentiator

$$D^k(e^{st}) = \frac{d^k}{dt^k}e^{st} = s^k e^{st} \quad \text{and so} \quad \lambda(D^k, s) = s^k. \quad (4.8)$$

The region of convergence is again the whole complex plane. These results motivate assigning the following Laplace transforms to the delta “function” and its derivatives

$$\mathcal{L}(\delta, s) = 1, \quad \mathcal{L}(\delta^k, s) = s^k.$$

These conventions are common in the engineering literature [Oppenheim et al., 1996].

#### 4.1.1 The transfer function of a linear combination of systems

Let  $H = aH_1 + bH_2$  be a linear combination of systems  $H_1$  and  $H_2$ . Let  $R_1 \subseteq \mathbb{C}$  and  $R_2 \subseteq \mathbb{C}$  be the regions of convergence of  $H_1$  and  $H_2$ . We have,

$$\begin{aligned} H(e^{st}) &= aH_1(e^{st}) + bH_2(e^{st}) \\ &= a\lambda(H_1)e^{st} + b\lambda(H_2)e^{st} & s \in R_1 \cap R_2, \\ &= (a\lambda(H_1) + b\lambda(H_2))e^{st} & s \in R_1 \cap R_2, \\ &= \lambda(H)e^{st} & s \in R_1 \cap R_2, \end{aligned}$$

and so,

$$\lambda(H) = a\lambda(H_1) + b\lambda(H_2) \quad s \in R_1 \cap R_2.$$

That is, the transfer function of a linear combination of systems is the same linear combination of the transfer functions. The region of convergence of the linear combination is the intersection of the regions of convergence of the systems being combined.

#### 4.1.2 The transfer function of a composition of systems

Let  $H$  be the system constructed by composing two systems  $H_1$  and  $H_2$  with regions of convergence  $R_1$  and  $R_2$ , that is,  $H(x) = H_1(H_2(x))$ . The response of  $H$  to the signal  $e^{st}$  is

$$\begin{aligned} H(e^{st}) &= H_1(H_2(e^{st})) \\ &= H_1(\lambda(H_2)e^{st}) && s \in R_2 \\ &= \lambda(H_2)H_1(e^{st}) && s \in R_2 \\ &= \lambda(H_2)\lambda(H_1)e^{st} && s \in R_1 \cap R_2 \\ &= \lambda(H)e^{st} && s \in R_1 \cap R_2, \end{aligned}$$

and so,

$$\lambda(H) = \lambda(H_1)\lambda(H_2) \quad s \in R_1 \cap R_2. \quad (4.9)$$

That is, the transfer function of a composition of linear time invariant systems is the multiplication of the transfer functions of those systems. The region of convergence of the composition is the intersection of the regions of convergence of the systems being composed.

#### 4.1.3 The convolution theorem

We showed in Section 3.3 that if  $H_1$  and  $H_2$  are regular systems with impulse responses  $h_1$  and  $h_2$ , then the impulse of the system  $H(x) = H_1(H_2(x))$  is given by the convolution  $h = h_1 * h_2$ . Because,

$$\lambda(H) = \mathcal{L}(h) \quad \lambda(H_1) = \mathcal{L}(h_1) \quad \lambda(H_2) = \mathcal{L}(h_2),$$

and using (4.9), we obtain,

$$\mathcal{L}(h_1 * h_2) = \mathcal{L}(h) = \lambda(H) = \lambda(H_1)\lambda(H_2) = \mathcal{L}(h_1)\mathcal{L}(h_2), \quad s \in R_1 \cap R_2.$$

Putting  $x = h_1$ ,  $y = h_2$ ,  $R_x = R_1$ , and  $R_y = R_2$  we obtain the **convolution theorem**,

$$\mathcal{L}(x * y) = \mathcal{L}(x)\mathcal{L}(y), \quad s \in R_x \cap R_y. \quad (4.10)$$

In words: the Laplace transform of a convolution of signals is the multiplication of their Laplace transforms.

#### 4.1.4 The Laplace transform of an output signal

Let  $H$  be a regular system with impulse response  $h$  and let  $y = H(x) = h * x$  be the response of  $H$  to input signal  $x$ . Using the convolution theorem, the Laplace transform of the output signal  $y$  is

$$\mathcal{L}(y) = \mathcal{L}(h)\mathcal{L}(x) = \lambda(H)\mathcal{L}(x), \quad s \in R \cap R_x, \quad (4.11)$$

where  $R$  is the region of convergence of the system  $H$  and  $R_x$  is the region of convergence of the input signal  $x$ . Thus, the Laplace transform of the output signal  $y = H(x)$  is the transfer function of the system  $H$  multiplied by the Laplace transform of the input signal  $x$ . This result also holds when  $H$  is a time-shifter or a differentiator (Exercise 4.11).

## 4.2 Solving differential equations

Assume we have a system modelled by a differential equation of the form

$$\sum_{\ell=0}^m a_\ell D^\ell(x) = \sum_{\ell=0}^k b_\ell D^\ell(y), \quad (4.12)$$

where  $x$  and  $y$  are signals. Taking Laplace transforms of both sides of this equation,

$$\begin{aligned} \mathcal{L}\left(\sum_{\ell=0}^m a_\ell D^\ell(x)\right) &= \mathcal{L}\left(\sum_{\ell=0}^k b_\ell D^\ell(y)\right) \\ \sum_{\ell=0}^m a_\ell \mathcal{L}(D^\ell(x)) &= \sum_{\ell=0}^k b_\ell \mathcal{L}(D^\ell(y)) \quad (\text{linearity (4.2)}) \\ \sum_{\ell=0}^m a_\ell \lambda(D^\ell) \mathcal{L}(x) &= \sum_{\ell=0}^k b_\ell \lambda(D^\ell) \mathcal{L}(y) \quad (\text{using (4.11)}) \\ \sum_{\ell=0}^m a_\ell s^\ell \mathcal{L}(x) &= \sum_{\ell=0}^k b_\ell s^\ell \mathcal{L}(y). \quad (\text{since } \lambda(D^\ell) = s^\ell \text{ by (4.8)}) \end{aligned}$$

We have obtained an equation relating the Laplace transforms of  $x$  and  $y$ ,

$$\mathcal{L}(x)(a_0 + a_1 s + \dots + a_m s^m) = \mathcal{L}(y)(b_0 + b_1 s + \dots + b_k s^k).$$

Rearranging this equation we obtain

$$\mathcal{L}(y) = \frac{a_0 + a_1 s + \dots + a_m s^m}{b_0 + b_1 s + \dots + b_k s^k} \mathcal{L}(x).$$

Let  $H$  be a system such that  $y = H(x)$  whenever  $x$  and  $y$  satisfy the differential equation (4.12). According to (4.11) the transfer function of  $H$  is

$$\lambda(H) = \frac{\mathcal{L}(y)}{\mathcal{L}(x)} = \frac{a_0 + a_1 s + \dots + a_m s^m}{b_0 + b_1 s + \dots + b_k s^k}.$$

Properties of  $H$  can be obtained by inspecting this transfer function. For example, the impulse response of  $H$  (if it exists) can be obtained by applying the inverse Laplace transform.

We now apply these results to the differential equations that model the RC electrical circuit from Figure 10 and the mass spring damper from Figure 11. The RC circuit is an example of what is called a **first order system** and the mass, spring, damper is an example of what is called a **second order system**.

## 4.3 First order systems

Recall the passive electrical RC circuit from Figure 10. The differential equation modelling this circuit is (2.1),

$$x = y + RCD(y),$$

where  $x$  is the input voltage signal,  $y$  is the voltage over the capacitor, and  $R$  and  $C$  are the resistance and capacitance. The RC circuit is an example of a **first order system**. Let  $H$  be a system mapping the input voltage signal  $x$  to the output voltage signal  $y$ . We will discover the impulse response of  $H$ . Taking the Laplace transform on both sides of the differential equation gives

$$\mathcal{L}(x) = (1 + RCs)\mathcal{L}(y),$$

and it follows that the transfer function of  $H$  is

$$\lambda(H) = \frac{\mathcal{L}(y)}{\mathcal{L}(x)} = \frac{1}{1 + RCs} = \frac{r}{r + s},$$

where  $r = \frac{1}{RC}$ . The value  $\frac{1}{r} = RC$  is called the **time constant**. The impulse response of  $H$  is given by the inverse of this Laplace transform. There are two signals with Laplace transform  $\frac{r}{r+s}$ : the right sided signal  $re^{-rt}u(t)$  with region of convergence  $\text{Re}(s) > -r$ , and the left sided signal  $-re^{-rt}u(-t)$  with region of convergence  $\text{Re}(s) < -r$ . The RC circuit (and in fact all physically realisable systems) are expected to be causal. For this reason, the left sided signal  $-re^{-rt}u(-t)$  cannot be the impulse response of  $H$ . The impulse response is the right sided signal

$$h(t) = re^{-rt}u(t).$$

Given an input voltage signal  $x$  we can now find the corresponding output signal  $y = H(x)$  by convolving  $x$  with the impulse response  $h$ . That is,

$$y = H(x) = h * x = \int_{-\infty}^{\infty} re^{-r\tau}u(\tau)x(t-\tau)d\tau = r \int_0^{\infty} e^{-r\tau}x(t-\tau)d\tau.$$

If  $r \geq 0$  the impulse response is absolutely summable, that is,

$$\begin{aligned} \|h\|_1 &= \int_{-\infty}^{\infty} |re^{-rt}u(t)| dt \\ &= r \int_0^{\infty} e^{-rt}dt \\ &= r - r \lim_{t \rightarrow \infty} e^{-rt} = r, \end{aligned}$$

and the system is stable (Exercise 3.3). However, if  $r < 0$  the impulse response is not absolutely summable, and the system is not stable. Figure 34 shows the impulse response when  $r = -\frac{1}{5}, -\frac{1}{3}, -\frac{1}{2}, -\frac{1}{2}, 1, 2$ . In a passive electrical RC circuit the resistance  $R$  and capacitance  $C$  are always positive and  $r = \frac{1}{RC}$  is positive. For this reason, passive electrical RC circuits are always stable.

From (3.4), the step response  $H(u)$  is given by applying the integrator  $I_{\infty}$  to the impulse response, that is,

$$H(u) = I_{\infty}(h) = \int_{-\infty}^t \tau e^{-r\tau}u(\tau)d\tau = \tau \int_0^t e^{-r\tau}d\tau = 1 - e^{-rt}. \quad (4.13)$$

This step response is plotted in Figure 34.

**Test 5 (The active RC circuit again)** In this test we repeat the experiment with the active RC circuit from Test 3 with resistors  $R = R_1 = R_2 = 27\text{k}\Omega$  and capacitors  $C = C_2 = 10\text{nF}$ . In Test 3 we applied the differential equation (2.8) to the reconstructed output signal  $\tilde{y}$  and asserted that the resulting signal was close to the reconstructed input signal  $\tilde{x}$ . In this test we instead convolve the input signal  $\tilde{x}$  with the impulse response

$$h = -\frac{1}{RC}e^{-t/RC} = -re^{-rt}, \quad r = \frac{1}{RC} = \frac{100000}{27},$$

and assert that the resulting signal is close to the output signal  $\tilde{y}$ . That is, we test the expected relationship

$$\tilde{y} \approx h * \tilde{x} = - \int_{-\infty}^{\infty} re^{-r\tau} u(\tau) \tilde{x}(t - \tau) d\tau = -r \int_0^{\infty} e^{-r\tau} \tilde{x}(t - \tau) d\tau.$$

From (1.8),

$$\begin{aligned} \tilde{y}(t) &\approx -r \int_0^{\infty} e^{-r\tau} \sum_{\ell=1}^L x_{\ell} \operatorname{sinc}(F_s t - F_s \tau - \ell) d\tau \\ &= -r \sum_{\ell=1}^L x_{\ell} \int_0^{\infty} e^{-r\tau} \operatorname{sinc}(F_s t - F_s \tau - \ell) d\tau \\ &= -r \sum_{\ell=1}^L x_{\ell} f(F_s t - \ell), \end{aligned}$$

where the function

$$f(t) = \int_0^{\infty} e^{-r\tau} \operatorname{sinc}(t - F_s \tau) d\tau.$$

An approximation of  $f(t)$  is made using the trapezoidal sum

$$f(t) \approx \frac{K}{2N} \left( g(0) + g(K) + 2 \sum_{n=1}^{N-1} g(\Delta n) \right),$$

where  $g(\tau) = e^{-r\tau} \operatorname{sinc}(t - F_s \tau)$ , and

$$K = -RC \log(10^{-3}), \quad N = \lceil 10F_s K \rceil, \quad \Delta = K/N.$$

Figure 33 plots the input signal  $\tilde{x}$ , output signal  $\tilde{y}$ , and hypothesised output signal  $h * \tilde{x}$  over a 4ms window.

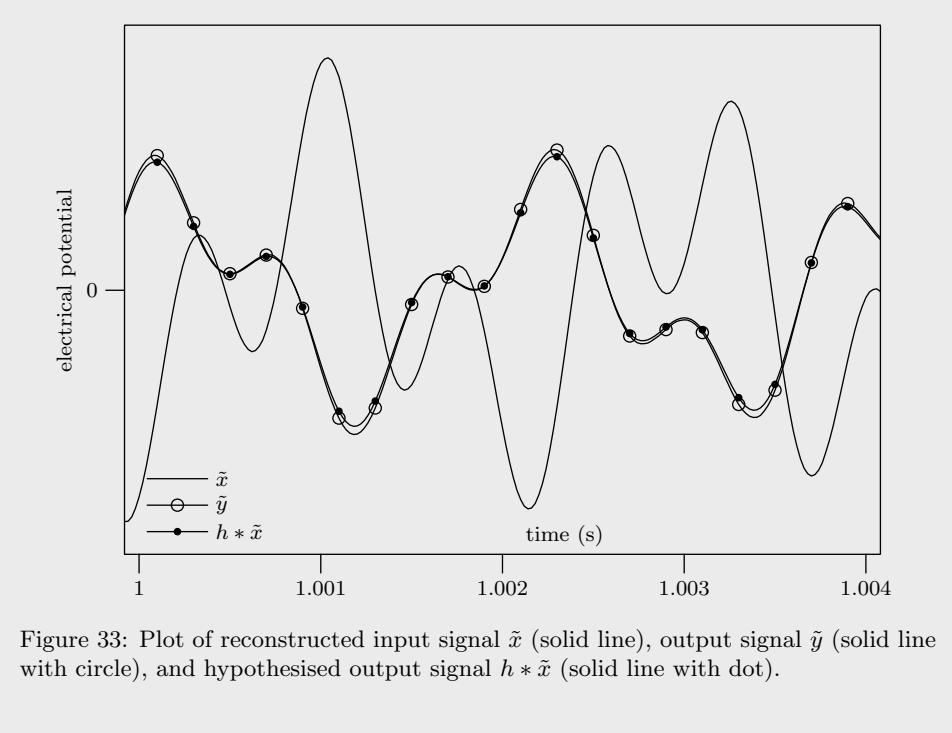


Figure 33: Plot of reconstructed input signal  $\tilde{x}$  (solid line), output signal  $\tilde{y}$  (solid line with circle), and hypothesised output signal  $h * \tilde{x}$  (solid line with dot).

#### 4.4 Second order systems

Consider the mass, spring, damper system from Figure 11 that is described by the equation

$$f = Kp + BD(p) + MD^2(p), \quad (4.14)$$

where  $f$  is the force applied to the mass  $M$  and  $p$  is the position of the mass and  $K$  and  $B$  are the spring and damping coefficients. The mass spring damper is an example of a **second order system**. Another example of a second order system is the Sallen-Key active electrical circuit depicted in Figure 20. In Section 2 we were able to find the force  $f$  corresponding with a given position signal  $p$ . Let  $H$  be a system mapping  $f$  to  $p$ , that is, such that  $p = H(f)$ . We will find the impulse response of  $H$ . Taking Laplace transforms on both sides of the differential equation gives

$$\mathcal{L}(f) = (K + Bs + Ms^2)\mathcal{L}(p).$$

Rearranging gives the transfer function of  $H$ ,

$$\lambda(H) = \frac{\mathcal{L}(p)}{\mathcal{L}(f)} = \frac{1}{K + Bs + Ms^2}.$$

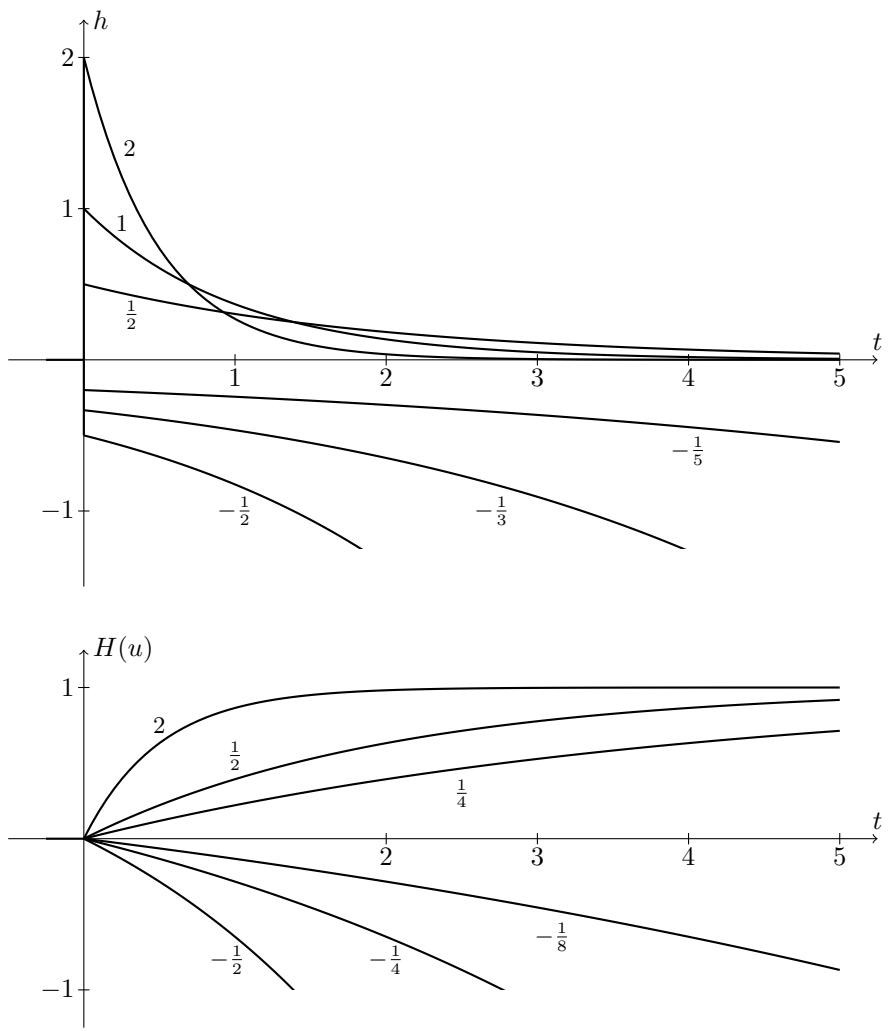


Figure 34: Top: impulse response of a first order system with  $r = -\frac{1}{2}, -\frac{1}{3}, -\frac{1}{5}, \frac{1}{2}, 1, 2$ . Bottom: step response of a first order system with  $r = -\frac{1}{2}, -\frac{1}{4}, -\frac{1}{8}, \frac{1}{4}, \frac{1}{2}, 2$ .

We can invert this Laplace transform to obtain the impulse response. There are three cases to consider, depending on whether the quadratic  $K + Bs + Ms^2$  has two distinct real roots, is irreducible (does not have real roots), or has two identical real roots.

**Case 1: (Distinct real roots)** In this case, the roots are

$$\beta - \alpha, \quad -\beta - \alpha,$$

where

$$\alpha = \frac{B}{2M}, \quad \beta = \frac{\sqrt{B^2 - 4KM}}{2M}$$

and  $B^2 - 4KM > 0$ . By a partial fraction expansion (Exercise 4.7),

$$\begin{aligned} \lambda(H) &= \frac{1}{M(s - \beta + \alpha)(s + \beta + \alpha)} \\ &= \frac{1}{2\beta M} \left( \frac{1}{s - \beta + \alpha} - \frac{1}{s + \beta + \alpha} \right). \end{aligned}$$

From (4.6), we obtain the transform pairs

$$\mathcal{L}(e^{(\beta-\alpha)t} u(t)) = \frac{1}{s - \beta + \alpha}, \quad \mathcal{L}(e^{-(\beta+\alpha)t} u(t)) = \frac{1}{s + \beta + \alpha}.$$

As in Section 4.3, other signals with these Laplace transforms are discarded because they do not lead to an impulse response that is zero for  $t < 0$ . That is, they do not lead to a causal system  $H$ . The impulse response of  $H$  is thus

$$h(t) = \frac{1}{2\beta M} u(t) e^{-\alpha t} (e^{\beta t} - e^{-\beta t}).$$

This is a sum of the impulse response of two first order systems.

**Case 2: (Distinct imaginary roots)** The solution is as in the previous case, but now  $4KM - B^2 > 0$  and  $\beta$  is imaginary. Put  $\theta = \beta/j$  so that

$$e^{\beta t} - e^{-\beta t} = e^{j\theta t} - e^{-j\theta t} = 2j \sin(\theta t).$$

The impulse response of  $H$  is

$$h(t) = \frac{1}{\theta M} u(t) e^{-\alpha t} \sin(\theta t).$$

**Case 3: (Identical roots)** In this case, the two roots are equal to  $-\alpha$  and

$$\lambda(H) = \frac{1}{M(s + \alpha)^2}.$$

From (4.6) we obtain the transform pair

$$\mathcal{L}(te^{-\alpha t}u(t)) = \frac{1}{(s+\alpha)^2},$$

and this is the only signal with this Laplace transform that leads to a causal impulse response. The impulse response of  $H$  is thus

$$h(t) = \frac{1}{M}te^{-\alpha t}u(t).$$

A second order system is called **overdamped** when there are two distinct real roots, **underdamped** when their are two distinct imaginary roots, and **critically damped** when the roots are identical. The different types of impulse responses for are plotted in Figure 35.

With no damping (i.e. damping coefficient  $B = 0$ ) the roots are of the form  $\pm\beta$  and have no real part. In this case, the impulse response is

$$h(t) = \frac{1}{\theta M}u(t)\sin(\theta t),$$

where  $\theta = \beta/j = \sqrt{KM}$  is called the **natural frequency** of the second order system. This impulse response oscillates for all  $t > 0$  without decay or explosion. Two identical roots occur when the damping coefficient  $B = \sqrt{4KM}$ , and this is sometimes called the **critical damping coefficient**.

The impulse response of a second order system is absolutely integrable when  $\alpha = \frac{B}{2M} > 0$ , but not when  $\alpha \leq 0$ . Thus, the system is stable when  $\alpha > 0$  and not stable when  $\alpha \leq 0$ . For the mass spring damper both the mass  $M$  and damping coefficient  $B$  are positive, and so, mass spring dampers are always stable.

From (3.4) the step response  $H(u)$  is given by applying the integrator  $I_\infty$  to the impulse response. There are three cases to consider depending on whether the system is overdamped, underdamped, or critically damped. When the system is overdamped the step response is

$$\begin{aligned} H(u) &= I_\infty(h) = \frac{1}{2\beta M} \int_{-\infty}^t e^{-\alpha\tau} (e^{\beta\tau} - e^{-\beta\tau}) u(\tau) d\tau \\ &= \frac{1}{2\beta M} \int_0^t e^{-\alpha\tau} (e^{\beta\tau} - e^{-\beta\tau}) d\tau \\ &= \frac{1}{2\beta M} u(t) \left( \frac{e^{(\beta-\alpha)t} - 1}{\beta - \alpha} + \frac{e^{-(\beta+\alpha)t} - 1}{\beta + \alpha} \right). \end{aligned}$$

When the system is underdamped the step response is

$$\begin{aligned} H(u) &= I_\infty(h) = \frac{1}{\theta M} \int_0^t e^{-\alpha\tau} \sin(\theta\tau) dt \\ &= u(t) \left( \frac{\theta - e^{-t\alpha} (\theta \cos(t\theta) + \alpha \sin(t\theta))}{M\theta(\alpha^2 + \theta^2)} \right). \end{aligned}$$

When the system is critically damped the step response is

$$\begin{aligned} H(u) = I_\infty(h) &= \frac{1}{\theta M} \int_0^t \frac{1}{M} t e^{-\alpha t} dt \\ &= \frac{1}{M\alpha^2} u(t) (1 - e^{-t\alpha s} (1 + t\alpha)). \end{aligned}$$

These step responses are plotted in Figure 36.

#### 4.5 Poles, zeros, and stability

As discussed in Section 4.2 the transfer function of a system described by a linear differential equation with constant coefficients is of the form

$$\lambda(H) = \frac{\mathcal{L}(y)}{\mathcal{L}(x)} = \frac{a_0 + a_1 s + \dots + a_m s^m}{b_0 + b_1 s + \dots + b_k s^k}.$$

Factorising the polynomials on the numerator and denominator we obtain

$$\lambda(H) = C \frac{(s - \alpha_0)(s - \alpha_1) \cdots (s - \alpha_m)}{(s - \beta_0)(s - \beta_1) \cdots (s - \beta_k)},$$

where  $\alpha_0, \dots, \alpha_m$  are the roots of the numerator polynomial  $a_0 + a_1 s + \dots + a_m s^m$ , and  $\beta_0, \dots, \beta_k$  are the roots of the denominator polynomial  $b_0 + b_1 s + \dots + b_k s^k$ , and  $C = \frac{a_m}{b_m}$ . That such a factorisation is always possible is called the **fundamental theorem of algebra** [Fine and Rosenberger, 1997]. If the numerator and denominator polynomials share one or more roots, then these roots cancel leaving the simpler expression

$$\lambda(H) = C \frac{(s - \alpha_d)(s - \alpha_1) \cdots (s - \alpha_m)}{(s - \beta_d)(s - \beta_1) \cdots (s - \beta_k)}, \quad (4.15)$$

where  $d$  is the number of shared roots, these shared roots being

$$\alpha_0 = \beta_0, \quad \alpha_1 = \beta_1, \quad \dots, \quad \alpha_{d-1} = \beta_{d-1}.$$

The roots from the numerator  $\alpha_d, \dots, \alpha_m$  are called the **zeros** and the roots from the denominator  $\beta_d, \dots, \beta_m$  are called the **poles**. A **pole-zero plot** is constructed by marking the complex plane with a cross at the location of each pole and a circle at the location of each zero. Pole-zero plots for the first order system from Section 4.3, the second order system from Section 4.4, and the system describing the PID controller (2.11) are shown in Figure 37.

It is always possible to apply partial fractions and write (4.15) in the form

$$\lambda(H) = p(s) + \sum_{\ell \in K} \frac{A_\ell}{(s - \beta_\ell)^{r_\ell}},$$

where  $r_\ell$  are positive integers,  $A_\ell$  are constants,  $K$  is a subset of the indices from  $\{d, d+1, \dots, k\}$ , and  $p(s)$  is a polynomial of degree  $m-k$ . If  $k > m$  then

Figure 35: Impulse response of the mass spring damper with  $M = 1$ ,  $K = \frac{\pi^2}{4}$  and damping constant  $B = \frac{\pi}{3}$  (underdamped),  $B = \sqrt{4KM} = \pi$  (critically damped), and  $B = 2\pi$  (overdamped).

Figure 36: Step response of the mass spring damper with  $M = 1$ ,  $K = \frac{\pi^2}{4}$  and damping constant  $B = \frac{\pi}{3}$  (underdamped),  $B = \sqrt{4KM} = \pi$  (critically damped), and  $B = 2\pi$  (overdamped).

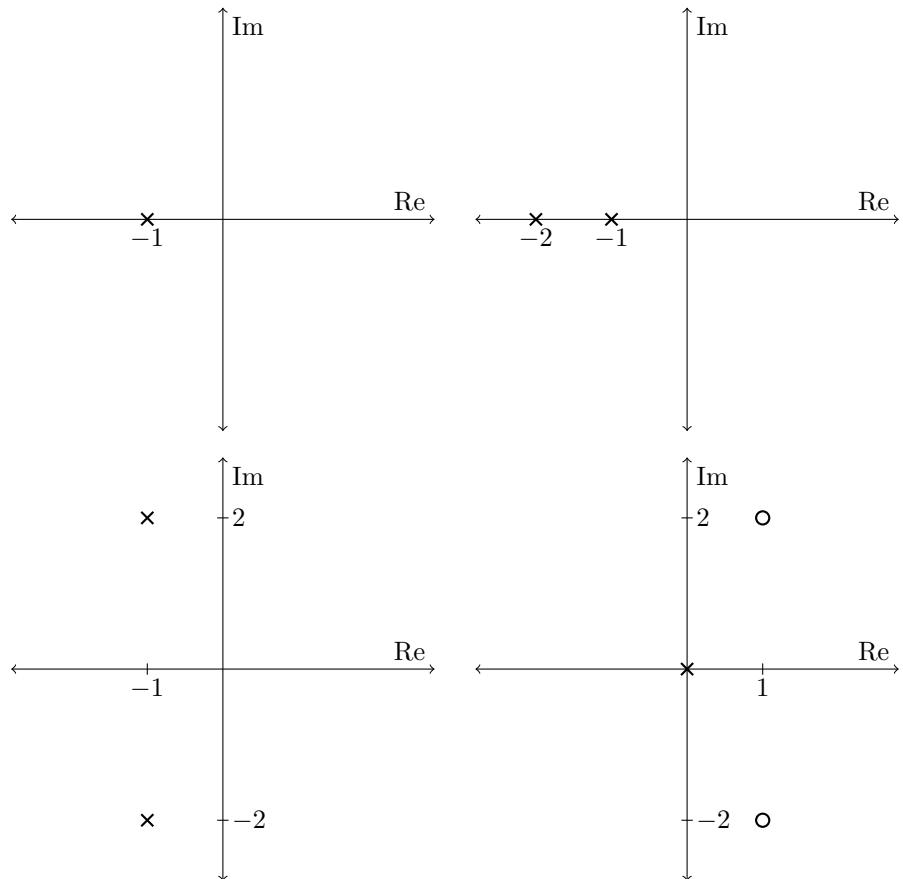


Figure 37: Top left: pole zero plot for the first order system  $x = y + D(y)$ . There is a single pole at  $-1$ . Top right: pole zero plot for the overdamped second order system  $x = 2y + 3D(y) + D^2(y)$  that has two real poles at  $-1$  and  $-2$ . Bottom left: pole zero plot for the underdamped second order system  $x = 5y + 2D(y) + D^2(y)$  that has two imaginary poles at  $-1 + 2j$  and  $-1 - 2j$ . The poles form a conjugate pair. Bottom right: pole zero plot for the equation  $D(y) = 5x - 2D(x) + D^2(x)$  that models a PID controller (2.11). The system has a single pole at the origin and two zeros at  $1 + 2j$  and  $1 - 2j$ .

$p(s) = 0$ . The integer  $r_\ell$  is called the **multiplicity** of the pole  $\beta_\ell$ . We now restrict ourselves to the case when the coefficients of the numerator polynomial  $a_0, \dots, a_m$  and the coefficients of the denominator polynomial  $b_0, \dots, b_k$  are real. In this case, the coefficients of the polynomial  $p(s)$  are real, and the constant  $A_\ell$  is real whenever the corresponding pole  $\beta_\ell$  is real. If the pole  $\beta_\ell$  has nonzero imaginary part there always exists another pole  $\beta_i$  such that  $\beta_\ell = \beta_i^*$ , where  $\beta_i^*$  is the **complex conjugate** of  $\beta_i$ . These poles have the same multiplicity, that is,  $r_\ell = r_i$ , and also the constants  $A_\ell = A_i^*$ . Stated another way: the complex poles occur in **conjugate pairs**.

We see that the transfer function contains the summation of two parts: the polynomial  $p(s)$ , and a sum of terms of the form  $\frac{A}{(s-\beta)^r}$ . Let  $p(s) = \gamma_0 + \gamma_1 s + \dots + \gamma_{k-m} s^{m-k}$ . This polynomial is the transfer function of the nonregular system

$$H_1 = \gamma_0 T_0 + \gamma_1 D + \gamma_2 D^2 + \dots + \gamma_{m-k} D^{m-k}.$$

This system is a linear combination of the identity system  $T_0$  and differentiators of order at most  $m - k$ . From (4.6),

$$\mathcal{L}\left(\frac{A}{r!} t^{r-1} e^{\beta t} u(t)\right) = \frac{A}{(s-\beta)^r} \quad \text{Re}(s) > \text{Re}(\beta),$$

and so, the terms of the form  $\frac{A}{(s-\beta)^r}$  correspond with the transfer function of a regular system with impulse response  $\frac{A}{r!} t^{r-1} e^{\beta t} u(t)$ . Other signals with Laplace transform  $\frac{A}{(s-\beta)^r}$  are discarded because they do not correspond with the impulse response of a causal system. Thus,  $\sum_{\ell \in K} \frac{A_\ell}{(s-\beta_\ell)^{r_\ell}}$  is the transfer function of the regular system  $H_2$  with impulse response

$$h_2(t) = u(t) \sum_{\ell \in K} \frac{A_\ell}{r_\ell!} t^{r_\ell-1} e^{\beta_\ell t}.$$

Let  $K_r = \{\ell \in K ; \text{Im } \beta_\ell = 0\}$  be the indices from  $K$  corresponding with the real poles, and let  $K_i = \{\ell \in K ; \text{Im } \beta_\ell > 0\}$  be the indices corresponding with those poles with positive imaginary part. Because the imaginary poles occur in conjugate pairs the impulse response  $h_2$  can be written as

$$h_2(t) = u(t) \sum_{\ell \in K_r} \frac{A_\ell}{r_\ell!} t^{r_\ell-1} e^{\beta_\ell t} + u(t) \sum_{\ell \in K_i} \frac{t^{r_\ell-1}}{r_\ell!} (A_\ell e^{\beta_\ell t} + A_\ell^* e^{\beta_\ell^* t}).$$

The terms

$$\begin{aligned} A_\ell e^{\beta_\ell t} + A_\ell^* e^{\beta_\ell^* t} &= |A_\ell| e^{\text{Re } \beta_\ell t} (e^{\text{Im } \beta_\ell t + \angle A_\ell} + e^{-\text{Im } \beta_\ell t - \angle A_\ell}) \\ &= 2 |A_\ell| e^{\text{Re } \beta_\ell t} \cos(\text{Im } \beta_\ell t + \angle A_\ell), \end{aligned}$$

and so, the impulse response is

$$h_2(t) = u(t) \sum_{\ell \in K_r} \frac{A_\ell}{r_\ell!} t^{r_\ell-1} e^{\beta_\ell t} + u(t) \sum_{\ell \in K_i} \frac{2 |A_\ell|}{r_\ell!} t^{r_\ell-1} e^{\text{Re } \beta_\ell t} \cos(\text{Im } \beta_\ell t + \angle A_\ell).$$

This expression can be simplified by putting

$$B_\ell = \begin{cases} \frac{A_\ell}{r_\ell!} & \text{Im } \beta_\ell = 0 \\ 2\frac{A_\ell}{r_\ell!} & \text{Im } \beta_\ell > 0 \end{cases}$$

so that

$$h_2(t) = u(t) \sum_{\ell \in K_r \cup K_i} B_\ell t^{r_\ell - 1} e^{\operatorname{Re} \beta_\ell t} \cos(\operatorname{Im} \beta_\ell t + \angle B_\ell). \quad (4.16)$$

Observe that the impulse response is a real valued signal (as expected).

The system  $H$  mapping  $x$  to  $y$  is the sum of the regular system  $H_2$  and nonregular system  $H_1$ , that is,

$$y = H(x) = H_1(x) + H_2(x).$$

Observe that  $H$  is regular only if the system  $H_1 = 0$ , that is, only if  $H_1$  maps all input signals to the signal  $x(t) = 0$  for all  $t \in \mathbb{R}$ . This occurs only when the polynomial  $p(s) = 0$ , that is, only when the number of poles exceeds the number of zeros. The system  $H$  will be stable if both  $H_1$  and  $H_2$  are stable. Because the differentiator  $D^\ell$  is not stable (Exercise 1.6) the system  $H_1$  is stable if and only if the order of the polynomial  $p(s)$  is zero, that is, if  $p(s) = \gamma_0$  is a constant (potentially  $\gamma_0 = 0$ ). In this case  $H_1(x) = \gamma_0 T_0(x)$  is the identity system multiplied by a constant. The polynomial  $p(s)$  is a constant only when the order of the denominator polynomial is greater than or equal to the order of the numerator polynomial, that is, when the number of poles is greater than or equal to the number of zeros. The regular system  $H_2$  is stable if and only if its impulse response  $h_2$  is absolutely integrable. This occurs only when the terms  $e^{\operatorname{Re} \beta_\ell t}$  inside the sum (4.16) are decreasing as  $t \rightarrow \infty$ , that is, only if the real part of the poles  $\operatorname{Re} \beta_\ell$  are negative. Thus, the system  $H_2$  is stable if and only if the real part of the poles are strictly negative.

The stability of the system  $H$  can be immediately determined from its pole-zero plot. The system is stable if and only if:

1. the number of poles is greater than or equal to the number of zeros (there are at least as many crosses on the pole-zero plot as circles),
2. all of the poles (crosses) lie strictly in the left half plane.

The pole-zero plots in Figure 37 all represent stable systems with the exception of the plot on the bottom right (a PID controller). This system has two zeros and only one pole. The single pole is contained on the imaginary axis. It is not strictly in the left half plane.

#### 4.5.1 Two masses, a spring, and a damper

Consider the system involving two masses a spring, and a damper in Figure 21. From (2.16), the equation relating the force applied to the first mass  $f$  and the position of the second mass  $p$  is

$$f = BD(p) + (M_1 + M_2)D^2(p) - \frac{BM_2}{K}D^3(p) + \frac{M_1M_2}{K}D^4(p),$$

where  $B$  is the damping coefficient,  $K$  is the spring constant, and  $M_1$  and  $M_2$  are the masses. Taking Laplace transforms

$$\mathcal{L}(f) = s \left( B + (M_1 + M_2)s - \frac{BM_2}{K}s^2 + \frac{M_1M_2}{K}s^3 \right) \mathcal{L}(p),$$

from which, we obtain the transfer function of a system  $H$  that maps  $f$  to  $p$ ,

$$\lambda(H) = \frac{\mathcal{L}(p)}{\mathcal{L}(f)} = \frac{1}{s \left( B + (M_1 + M_2)s - \frac{BM_2}{K}s^2 + \frac{M_1M_2}{K}s^3 \right)}.$$

The system has no zeros and 4 poles. One of these poles always exists at the origin. The system is not stable because this pole is not strictly in the left half of the complex plane.

Consider the specific case when  $B = K = M_1 = M_2 = 1$ . Factorising the denominator polynomial gives

$$\lambda(H) = \frac{1}{s(s - \beta_1)(s - \beta_2)(s - \beta_2^*)},$$

where

$$\begin{aligned} \beta_1 &= \frac{1}{3} \left( \gamma - \frac{5}{\gamma} - 1 \right) \approx -0.56984, \\ \beta_2 &= \frac{1}{6} \left( \frac{5(1 + j\sqrt{3})}{\gamma} - (1 - j\sqrt{3})\gamma - \frac{1}{2} \right) \approx -0.21508 + 1.30714j, \end{aligned}$$

and  $\gamma = \left( \frac{3\sqrt{69}-11}{2} \right)^{1/3}$ . Applying partial fractions (Exercise 4.8) gives

$$\lambda(H) = \frac{1}{s(s - \beta_1)(s - \beta_2)(s - \beta_2^*)} = \frac{A_0}{s} + \frac{A_1}{s - \beta_1} + \frac{A_2}{s - \beta_2} + \frac{A_2^*}{s - \beta_2^*},$$

where

$$\begin{aligned} A_0 &= -\frac{1}{\beta_1|\beta_2|^2} = 1, & A_1 &= \frac{1}{\beta_1|\beta_1 - \beta_2|^2} \approx -0.956611, \\ A_2 &= \frac{1}{\beta_2(\beta_2 - \beta_1)(\beta_2 - \beta_2^*)} \approx -0.0216944 + 0.212084j. \end{aligned}$$

From (4.16), the impulse response of  $H$  is

$$h(t) = u(t) (A_0 + A_1 e^{\beta_1 t} + 2|A_2| e^{\operatorname{Re} \beta_2 t} \cos(\operatorname{Im} \beta_2 t + \angle A_2)).$$

This impulse response is plotted in Figure 38. Observe that  $h$  is not absolutely integrable and the system is not stable. The impulse response  $h(t)$  does not converge to zero as  $t \rightarrow \infty$ , and correspondingly, the mass  $M_2$  does not come to rest at position zero in Figure 38. In the figure it is assumed that the spring is at equilibrium when the two masses are  $d = 1$  apart. From (2.14), the position of mass  $M_1$  is given by the signal  $p_1 = g - d$  where  $g = h + M_2 D^2(h)$ .

Figure 38: Impulse response of the system with two masses, a spring, and a damper, where  $B = K = M_1 = M_2 = 1$ .

### 4.5.2 Direct current motors

Recall the direct current (DC) motor from Figure 23 described by the differential equation from (2.17),

$$v = \left( \frac{RB}{K_\tau} + K_b \right) D(\theta) + \frac{RJ}{K_\tau} D^2(\theta),$$

where  $v$  is the input voltage signal and  $\theta$  is a signal representing the angle of the motor. The constants  $R, B, K_\tau, K_b$ , and  $J$  are related to components of the motor as described in Section 2.4. To simplify the differential equation put  $a = \frac{RB}{K_\tau} + K_b$  and  $b = \frac{RJ}{K_\tau}$  and the equation becomes

$$v = aD(\theta) + bD^2(\theta).$$

Taking Laplace transforms on both sides of this equation gives the transfer function of a system  $H$  that maps input voltage  $v$  to motor angle  $\theta$ ,

$$\lambda(H) = \frac{1}{s(a + bs)}.$$

This system has no zeros and two poles. One pole at  $-\frac{a}{b}$  and the other at the origin. The system is not stable because the pole at the origin is not strictly in the left half of the complex plane.

Applying partial fractions we find that

$$\lambda(H) = \frac{1}{as} - \frac{1}{a(s - \beta)}, \quad (4.17)$$

where  $\beta = -\frac{a}{b}$ . Using (4.6), the impulse response of  $H$  is

$$h(t) = \frac{1}{a} u(t)(1 - e^{\beta t}). \quad (4.18)$$

Other signals with Laplace transform (4.17) are discarded because they do not lead to a causal system. The step response  $H(u)$  is obtain by applying the integrator system  $I_\infty$  to the impulse response, that is

$$H(u) = I_\infty(h) = \frac{1}{a\beta} u(t)(\beta t + e^{\beta t} - 1).$$

The impulse response and step response are plotted in Figure 39 when  $K_b = \frac{1}{8}$ ,  $K_\tau = 8$  and  $B = R = 1$  and  $J = 2$  so that  $a = \frac{1}{4}$ ,  $b = \frac{1}{4}$  and  $\beta = -1$ .

## 4.6 Exercises

4.1. Sketch the signal

$$x(t) = e^{-2t}u(t) + e^t u(-t)$$

where  $u(t)$  is the step function. Find the Laplace transform of  $x(t)$  and the corresponding region of convergence (ROC). Sketch the region of convergence on the complex plane.

Figure 39: Impulse response (top) and step response (bottom) of a DC motor with constants  $K_b = \frac{1}{4}$ ,  $K_\tau = 8$  and  $B = R = J = 1$ .

- 4.2. Find the Laplace transform of the signal  $t^n u(t)$  where  $n \geq 0$  is an integer.
- 4.3. Show that the Laplace transform of the signal  $t^n u(-t)$  where  $n \geq 0$  is in integer is the same as the Laplace transform of the signal  $t^n u(t)$ , but with a different region of convergence.
- 4.4. Show that equation (4.11) on page 47 holds when the system  $H$  is the differentiator  $D^k$  or the time shifter  $T_\tau$ .
- 4.5. What is the transfer function of the integrator system  $I_\infty$  and what is its region of convergence?
- 4.6. By partial fractions, or otherwise, assert that

$$\frac{as}{s+b} = a - \frac{ab}{s+b}$$

- 4.7. By partial fractions, or otherwise, assert that

$$\frac{s+c}{(s+a)(s+b)} = \frac{a-c}{(a-b)(s+a)} + \frac{c-b}{(a-b)(s+b)}$$

- 4.8. By partial fractions, or otherwise, assert that

$$\frac{1}{s(s-a)(s-b)(s-b^*)} = \frac{A_0}{s} + \frac{A_1}{s-a} + \frac{A_2}{s-b} + \frac{A_2^*}{s-b^*}$$

where  $a, b \in \mathbb{C}$  and  $\operatorname{Re}(b) \neq 0$ , and

$$A_0 = -\frac{1}{a|b|^2}, \quad A_1 = \frac{1}{a|a-b|^2}, \quad A_2 = \frac{1}{b(b-a)(b-b^*)}.$$

You might wish to check your solution using a symbolic programming language (for example Sage, Mathematica, or Maple).

- 4.9. Let

$$\mathcal{L}(y) = \frac{2s+1}{s^2+s-2}$$

be the Laplace transform of a signal  $y$ . By partial fractions, or otherwise, find all possible signals  $y$  and their regions of convergence.

- 4.10. Consider the active electrical circuit from Figure 17 described by the differential equation from (2.7). Derive the transfer function of this system. Find an explicit system  $H$  that maps the input voltage  $x$  to the output voltage  $y$ . State whether this system is stable and/or regular.
- 4.11. Given the mass spring damper system described by (4.14), find the position signal  $p$  given that the force signal

$$f(t) = \Pi\left(t - \frac{1}{2}\right) = \begin{cases} 1 & 0 < t \leq 1 \\ 0 & \text{otherwise} \end{cases}$$

is the rectangular function time shifted by  $\frac{1}{2}$ . Consider three cases:

- (a)  $M = 1$ ,  $K = \frac{\pi^2}{4}$  and  $B = \frac{\pi}{3}$ ,
- (b)  $M = 1$ ,  $K = \frac{\pi^2}{4}$  and  $B = \pi$ ,
- (c)  $M = 1$ ,  $K = \frac{\pi^2}{4}$  and  $B = 2\pi$ ,

Plot the solution in each case, and comment on whether the system is underdamped, overdamped, or critically damped.

## 5 The Fourier transform

The **Fourier transform** of an absolutely integrable signal  $x$  is defined as

$$\mathcal{F}(x) = \int_{-\infty}^{\infty} x(t)e^{-j2\pi ft} dt. \quad (5.1)$$

The Fourier transform is a function of the real number  $f$ , and if we need to indicate this we write  $\mathcal{F}(x)(f)$  or  $\mathcal{F}(x, f)$ . For example, the rectangular pulse  $\Pi(t)$  from (1.4) is absolutely integrable and has Fourier transform

$$\begin{aligned} \mathcal{F}(\Pi) &= \int_{-\infty}^{\infty} \Pi(t)e^{-j2\pi ft} dt \\ &= \int_{-1/2}^{1/2} e^{-j2\pi ft} dt \\ &= \frac{e^{j\pi f} - e^{-j\pi f}}{j2\pi f} \\ &= \frac{\sin(\pi f)}{\pi f} = \text{sinc}(f). \end{aligned} \quad (5.2)$$

The sinc function is plotted in Figure 40.

The Fourier transform is closely related to the Laplace transform because

$$\mathcal{F}(x, f) = \mathcal{L}(x, j2\pi f)$$

for those signals  $x$  with region of convergence containing the imaginary axis, that is, for absolutely integrable  $x$ . The Fourier transform inherits the properties of the Laplace transform that were described in Section 4.1. For example, if  $H$  is a regular system with impulse response  $h$  that has Fourier transform  $\mathcal{F}(h)$ , then the spectrum of  $H$  satisfies

$$\Lambda(H, f) = \mathcal{L}(h, j2\pi f) = \mathcal{F}(h, f).$$

That is, the spectrum of a regular system (if it exists) is given by the Fourier transform of its impulse response. Like the Laplace transform, the Fourier transform obeys the **convolution theorem** (4.10), that is,

$$\mathcal{F}(x * y) = \mathcal{F}(x)\mathcal{F}(y). \quad (5.3)$$

In words: the Fourier transform of a convolution of signals is given by the multiplication of the Fourier transforms of those signals.

It follows from (4.11) that if  $H$  is a regular system with spectrum  $\Lambda(H)$  and if  $x$  is a signal with Fourier transform  $\mathcal{F}(x)$ , then the signal  $y = H(x)$  has Fourier transform

$$\mathcal{F}(y) = \Lambda(H)\mathcal{F}(x).$$

This property also holds for the differentiator system  $D$  and the time shifter system  $T_\tau$  (Exercise 4.11). From (4.7) and (4.8) the spectrum of  $T_\tau$  and  $D$  satisfy

$$\Lambda(T_\tau, f) = e^{-j2\pi f\tau}, \quad \Lambda(D, f) = j2\pi f$$

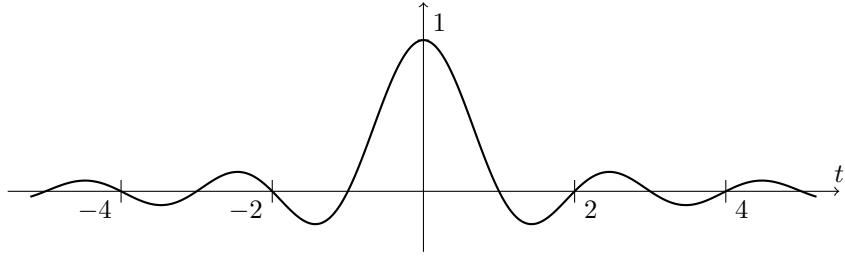


Figure 40: The **sinc function**  $\text{sinc}(t) = \frac{\sin(\pi t)}{\pi t}$ .

from which we obtain the **time shift property**,

$$\mathcal{F}(T_\tau(x)) = \Lambda(T_\tau)\mathcal{F}(x) = e^{-j2\pi f\tau}\mathcal{F}(x),$$

and the **differentiation property**,

$$\mathcal{F}(D(x)) = \Lambda(D)\mathcal{F}(x) = j2\pi f\mathcal{F}(x),$$

of the Fourier transform.

Similarly to the Laplace transform (4.5), the Fourier transform obeys a **frequency shift rule** that relates the transform of a signal  $x(t)$  to that of the signal  $e^{2\pi j\gamma ft}x(t)$  where  $\gamma \in \mathbb{R}$ . From (4.5), the frequency shift rule asserts that

$$\mathcal{F}(e^{2\pi j\gamma t}x(t), f) = \mathcal{F}(x, f - \gamma). \quad (5.4)$$

Since  $\cos(2\pi\gamma t) = \frac{1}{2}e^{2\pi j\gamma t} + \frac{1}{2}e^{-2\pi j\gamma t}$  we also have

$$\mathcal{F}(\cos(2\pi\gamma t)x(t), f) = \frac{1}{2}\mathcal{F}(x, f - \gamma) + \frac{1}{2}\mathcal{F}(x, f + \gamma).$$

This is sometimes called the **modulation property** of the Fourier transform [Papoulis, 1977, page 61]. This property is of particular importance in communications engineering [Proakis, 2007].

## 5.1 Duality and the inverse transform

Given a signal  $x$  we will often denote its Fourier transform by  $\hat{x} = \mathcal{F}(x)$ . Observe that  $\hat{x}$ , like  $x$ , is a function that maps a real number to a complex number. Thus, the Fourier transform  $\hat{x}$  is a **signal** with independent variable representing **frequency**. It is usual to call  $x$  the **time domain** representation of the signal and  $\hat{x}$  the **frequency domain** representation. If  $\hat{x}$  is absolutely integrable, then  $x$  can be recovered using the **inverse Fourier transform**

$$x(t) = \mathcal{F}^{-1}(\hat{x}, t) = \int_{-\infty}^{\infty} \hat{x}(f)e^{j2\pi ft} df. \quad (5.5)$$

For example, let  $\hat{x} = \mathcal{F}(x) = \Pi$  be the rectangular pulse. By working analogous to that from (5.2),

$$x(t) = \int_{-\infty}^{\infty} \Pi(f) e^{j2\pi f t} df = \text{sinc}(-t) = \text{sinc}(t).$$

We are lead to the conclusion that the Fourier transform of  $\text{sinc}(t)$  is the rectangular pulse  $\Pi(f)$ .

The rectangular pulse  $\Pi$  is finite in time and absolutely integrable. The sinc function is not absolutely integrable (Exercise 5.3). Because of this the integral equation that we have used to define the Fourier transform (5.1) cannot be directly applied to the sinc function. The inverse transform provides a method for assigning Fourier transforms to signals even when the formula (5.1) does not apply. Although sinc is not absolutely integrable, it is square integrable (Exercise 5.3). It can be shown that all square integrable signals have a Fourier transform, and that the Fourier transform is itself square integrable. This is called the **Plancherel theorem** [Rudin, 1986, Th. 9.13]. For our purposes it suffices to remember only that the Fourier transform of the sinc function is the rectangular pulse  $\Pi$ .

Let  $x$  be a signal with Fourier transform

$$\hat{x}(f) = \mathcal{F}(x, f) = \int_{-\infty}^{\infty} x(\tau) e^{-j2\pi f \tau} d\tau.$$

Evaluating  $\hat{x}$  at  $-t$  we find that

$$\hat{x}(-t) = \int_{-\infty}^{\infty} x(\tau) e^{j2\pi t \tau} d\tau = \mathcal{F}^{-1}(x, t).$$

That is, if  $\hat{x}$  is the Fourier transform of  $x$ , then  $x$  is the Fourier transform of  $\hat{x}$  reflected in time. Another way to write this is

$$\mathcal{F}(\hat{x}, t) = \mathcal{F}(\mathcal{F}(x), t) = x(-t).$$

Equivalently, if we define

$$R(x, t) = x(-t) \tag{5.6}$$

as the system that reflects its input signal, then

$$\mathcal{F}(\mathcal{F}(x)) = \mathcal{F}^2(x) = R(x),$$

where we use the notation  $\mathcal{F}^2$  to denote application of the Fourier transform twice. This is the called the **duality** property of the Fourier transform. Applying the Fourier transform three times to a signal  $x$  we obtain

$$\mathcal{F}^3(x) = \mathcal{F}(\mathcal{F}(\mathcal{F}(x))) = R(\mathcal{F}(x)) = \mathcal{F}(R(x)). \tag{5.7}$$

It follows that the Fourier transform commutes with the reflection system  $R$ . This is called the **reflection** property of the Fourier transform. Informally

stated: a reflection in the time domain causes a corresponding reflection in the frequency domain.

Let  $\hat{x} = \mathcal{F}(x)$  and  $\hat{y} = \mathcal{F}(y)$  be the Fourier transforms of signals  $x$  and  $y$ . By duality

$$\mathcal{F}(\hat{x}) = \mathcal{F}^2(x) = R(x), \quad \mathcal{F}(\hat{y}) = \mathcal{F}^2(y) = R(y).$$

Because the product  $R(x)R(y) = R(xy)$  we have

$$R(xy) = R(x)R(y) = \mathcal{F}(\hat{x})\mathcal{F}(\hat{y}) = \mathcal{F}(\hat{x} * \hat{y}),$$

where the last inequality follows from the convolution theorem (5.3). Applying the Fourier transform to both sides and using the duality and reflection properties we obtain

$$R(\mathcal{F}(xy)) = R(\hat{x} * \hat{y}).$$

Applying the reflection system  $R$  to both sides and using the fact that  $R^2 = T_0$  is the identity system we obtain

$$\mathcal{F}(xy) = \hat{x} * \hat{y} = \mathcal{F}(x) * \mathcal{F}(y).$$

Thus, the Fourier transform of a product of signals is the product of the Fourier transforms. This is called the **multiplication theorem**. The multiplication theorem often goes by the phrase: “Multiplication in the time domain is convolution in the frequency domain”.

## 5.2 Parseval’s identity

Let  $x$  be a signal with Fourier transform  $\hat{x} = \mathcal{F}(x)$ . The Fourier transform of  $x^*$ , the complex conjugate of  $x$ , satisfies

$$\begin{aligned} \mathcal{F}(x^*, f) &= \int_{-\infty}^{\infty} x(t)^* e^{-j2\pi ft} dt \\ &= \int_{-\infty}^{\infty} (x(t)e^{j2\pi ft})^* dt \\ &= \left( \int_{-\infty}^{\infty} x(t)e^{j2\pi ft} dt \right)^* \\ &= \mathcal{F}(x, -f)^* \\ &= \hat{x}(-f)^*. \end{aligned}$$

It follows that if  $x$  is a real valued signal so that  $x = x^*$ , then  $\hat{x}(f) = \hat{x}(-f)^*$ . That is, the Fourier transform of a real valued signal is **conjugate symmetric**.

The convolution theorem (5.3) asserts that  $\mathcal{F}(x * y) = \mathcal{F}(x)\mathcal{F}(y) = \hat{x}\hat{y}$ . Applying the inverse Fourier transform to both sides of this equation gives<sup>2</sup>

$$(x * y)(t) = \int_{-\infty}^{\infty} x(\tau)y(t - \tau)d\tau = \int_{-\infty}^{\infty} \hat{x}(f)\hat{y}(f)e^{j2\pi ft}df.$$

---

<sup>2</sup>The product of two square integrable function is absolutely integrable [Rudin, 1986, Thm 3.8].

Setting  $t = 0$  we obtain what is often called **Parseval's identity**

$$\int_{-\infty}^{\infty} x(\tau)y(-\tau)d\tau = \int_{-\infty}^{\infty} \hat{x}(f)\hat{y}(f)df.$$

Putting  $y(t) = x(-t)^*$  so that  $\hat{y}(f) = \hat{x}(f)^*$  we obtain the special case

$$\int_{-\infty}^{\infty} |x(\tau)|^2 d\tau = \int_{-\infty}^{\infty} |\hat{x}(f)|^2 df,$$

or equivalently  $\|x\|_2 = \|\hat{x}\|_2$ . In words: the energy of a signal is equal to the energy of its Fourier transform.

In Tests 4 and 6 we made use the fact that sinc and its time shifts by a nonzero integer  $T_m(\text{sinc})$  are **orthogonal**. That is,

$$\int_{-\infty}^{\infty} \text{sinc}(t) \text{sinc}(t - m) dt = \begin{cases} 1 & m = 0 \\ 0 & m \neq 0. \end{cases} \quad (5.8)$$

where  $m \in \mathbb{Z}$ . We now use Parseval's identity to prove this. Applying the frequency shift rule (5.4) to the rectangular pulse  $\Pi$  we have

$$\mathcal{F}(e^{2\pi jmt}\Pi(t), f) = \mathcal{F}(\Pi, f - m) = \text{sinc}(f - m).$$

Putting  $x(t) = e^{2\pi jmt}\Pi(t)$  and  $y(t) = \Pi(t)$  in Parseval's identity gives

$$\begin{aligned} \int_{-\infty}^{\infty} \text{sinc}(f - m) \text{sinc}(f) df &= \int_{-\infty}^{\infty} e^{2\pi jm\tau} \Pi(\tau) \Pi(-\tau) d\tau \\ &= \int_{-1/2}^{1/2} e^{2\pi jm\tau} d\tau \\ &= \frac{e^{\pi jm} - e^{-\pi jm}}{2\pi jm} \\ &= \frac{\sin(\pi m)}{\pi m} = \text{sinc}(m). \end{aligned}$$

The result (5.8) follows because  $\text{sinc}(m)$  is equal to one when  $m = 0$  and equal to zero when  $m$  is any other integer (Figure 40).

### 5.3 Ideal filters

For many engineering purposes it is desirable to construct systems that will pass (have little affect on) a complex exponential signal  $e^{j2\pi ft}$  for certain frequencies  $f$ , but will reject (significantly attenuate) these signals for other frequencies. Such systems are called **filters**. Those frequencies that the filter intends to pass unaffected are said to be in the **pass band** and those frequencies that the filter intends to reject are said to be in the **stop band**.

For example, an **ideal lowpass filter** with **cutoff frequency**  $c$  is the system  $L_c$  with spectrum

$$\Lambda(L_c) = \begin{cases} 1 & -c < f \leq c \\ 0 & \text{otherwise} \end{cases} = \Pi\left(\frac{f}{2c}\right).$$

Applying the inverse Fourier transform to  $\Pi\left(\frac{f}{2c}\right)$  gives

$$\int_{-\infty}^{\infty} \Pi\left(\frac{f}{2c}\right) e^{j2\pi t f} df = \int_{-c}^c e^{j2\pi t f} df = \frac{\sin(2c\pi t)}{\pi t} = 2c \operatorname{sinc}(2ct).$$

We conclude that the ideal lowpass filter  $L_c$  is a regular linear time invariant system with impulse response  $2c \operatorname{sinc}(2ct)$ .

An **ideal highpass filter** with cutoff frequency  $c$  is given by the linear combination  $T_0 - L_c$  where  $T_0$  is the identity system. The spectrum is

$$\Lambda(T_0 + L_c) = \Lambda(T_0) + \Lambda(L_c) = 1 - \Pi\left(\frac{f}{2c}\right) = \begin{cases} 0 & -c < f \leq c \\ 1 & \text{otherwise.} \end{cases}$$

This ideal highpass filter is not regular because the system  $T_0$  is not regular. The system does not have a signal representing an impulse response, however, it is common to represent it by  $\delta(t) - 2c \operatorname{sinc}(2ct)$  using the delta function as described in Section 3.1.

An **ideal bandpass filter** with upper cutoff frequency  $u$  and lower cutoff frequency  $\ell$  is given by the linear combination  $L_u - L_\ell$ . The spectrum is

$$\Lambda(L_u - L_\ell) = \Pi\left(\frac{f}{2u}\right) - \Pi\left(\frac{f}{2\ell}\right) = \begin{cases} 1 & -u < f \leq -\ell \\ 1 & u < f \leq \ell \\ 0 & \text{otherwise.} \end{cases}$$

It follows that the ideal bandpass filter has impulse response  $2u \operatorname{sinc}(2ut) - 2\ell \operatorname{sinc}(2\ell t)$ . The spectrum and impulse response of the ideal lowpass, highpass, and bandpass filters are plotted in Figure 41.

## 5.4 Butterworth filters

The ideal filters described in the previous section are not realisable in practice. One reason for this is that they are not causal because the sinc function is unbounded in time. We now describe a popular practical low-pass filter discovered by Butterworth [1930]. A normalised low pass **Butterworth filter** of order  $m$ , denoted by  $B_m$ , has transfer function

$$\lambda(B_m) = \frac{1}{\prod_{i=1}^m (\frac{s}{2\pi} - \beta_i)} = \frac{(2\pi)^m}{\prod_{i=1}^m (s - 2\pi\beta_i)},$$

where  $\beta_1, \dots, \beta_m$  are the roots of the polynomial  $s^{2m} + (-1)^m$  that lie strictly in the left half of the complex plane (have negative real part). It is convenient

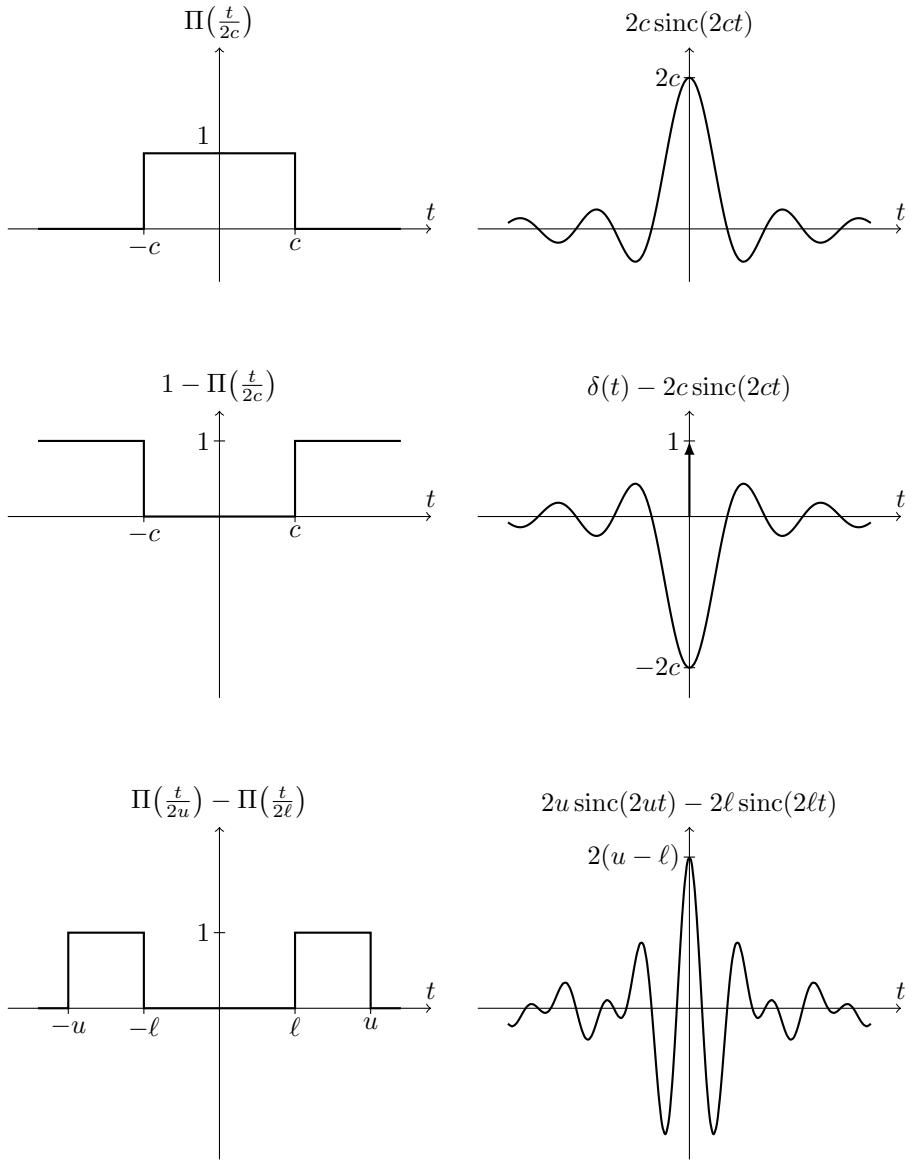


Figure 41: Spectrum and impulse response of the ideal lowpass filter  $L_c$  (top), the ideal highpass filter  $T_0 - L_c$  (middle), and the ideal bandpass filter  $L_u - L_\ell$  (bottom). The ideal highpass filter is not regular and does not have an impulse response. We plot the ‘pretend’ impulse response using the delta function described in Section 3.1.

to precisely define these roots as

$$\beta_k = \begin{cases} \exp\left(j\frac{\pi}{2}(1 + \frac{2k-1}{m})\right), & k = 1, \dots, m \\ \exp\left(j\frac{\pi}{2}(1 - \frac{2k-1}{m})\right), & k = m+1, \dots, 2m \end{cases}$$

or equivalently

$$\beta_k = \begin{cases} j \cos\left(\frac{\pi(2k-1)}{2m}\right) - \sin\left(\frac{\pi(2k-1)}{2m}\right), & k = 1, \dots, m \\ j \cos\left(\frac{\pi(2k-1)}{2m}\right) + \sin\left(\frac{\pi(2k-1)}{2m}\right), & k = m+1, \dots, 2m. \end{cases}$$

The roots are plotted in Figure 42. Observe that the roots  $\beta_{m+1}, \dots, \beta_{2m}$  are given by negating the real parts of  $\beta_1, \dots, \beta_m$ , that is,  $\beta_{m+i} = j(\beta_i/j)^*$ .

The spectrum of  $B_m$  is

$$\Lambda(B_m) = \frac{1}{\prod_{i=1}^m (jf - \beta_i)}.$$

The squared magnitude of the polynomial on the denominator is

$$\begin{aligned} \left| \prod_{i=1}^m (jf - \beta_i) \right|^2 &= \left( \prod_{i=1}^m (jf - \beta_i) \right) \left( \prod_{i=1}^m (jf - \beta_i) \right)^* \\ &= \prod_{i=1}^m (jf - \beta_i)(jf - \beta_i)^* \\ &= \prod_{i=1}^m (jf - \beta_i)j^*(f - (\beta_i/j)^*) \end{aligned}$$

and because  $j^*/j = -1$  we have

$$\begin{aligned} \left| \prod_{i=1}^m (jf - \beta_i) \right|^2 &= (-1)^m \prod_{i=1}^m (jf - \beta_i)(jf - j(\beta_i/j)^*) \\ &= (-1)^m \prod_{i=1}^m (jf - \beta_i)(jf - \beta_{m+i}) \\ &= (-1)^m \prod_{i=1}^{2m} (jf - \beta_i). \end{aligned}$$

Because  $\beta_1, \dots, \beta_{2m}$  are the roots of the polynomial  $s^{2m} + (-1)^m$  we have

$$\left| \prod_{i=1}^m (jf - \beta_i) \right|^2 = (-1)^m ((jf)^{2m} + (-1)^m) = f^{2m} + 1.$$

It follows that the magnitude spectrum of  $B_m$  is

$$|\Lambda(B_m)| = \sqrt{\frac{1}{f^{2m} + 1}}.$$

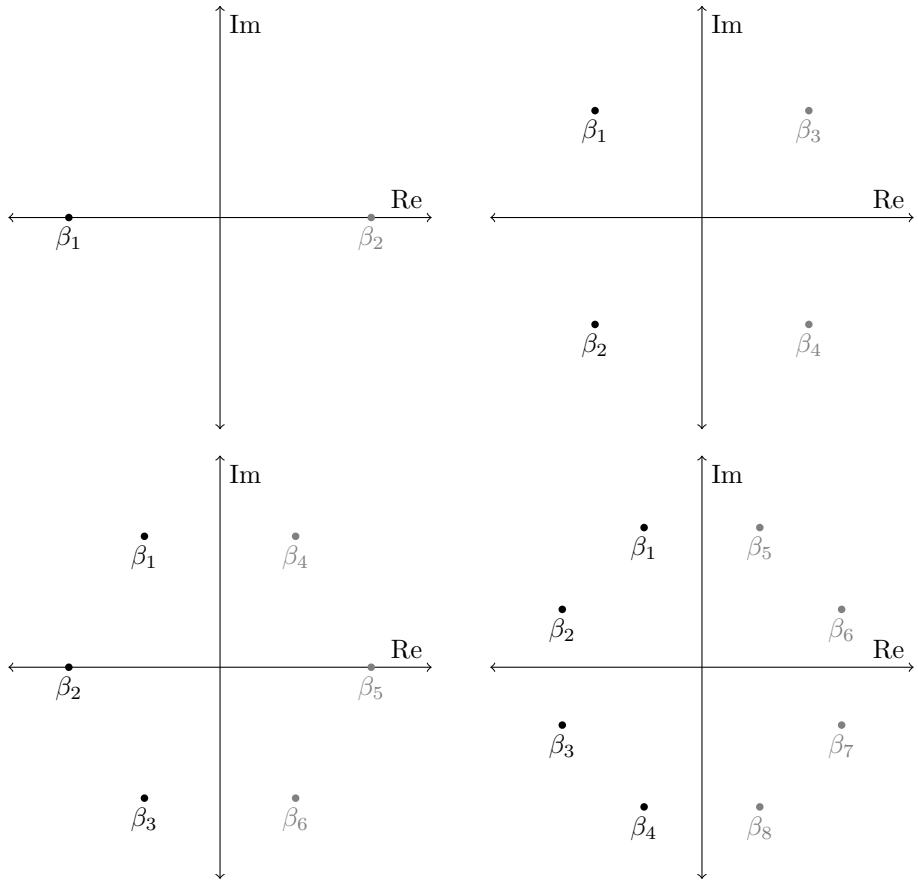


Figure 42: Roots of the polynomial  $s^{2m} + (-1)^m$  for  $m = 1$  (top left),  $m = 2$  (top right),  $m = 3$  (bottom left), and  $m = 4$  (bottom right). All the roots lie on the complex unit circle and have magnitude one. The poles of the normalised Butterworth filter  $B_m$  are those roots from the left half of the complex plane (unshaded).

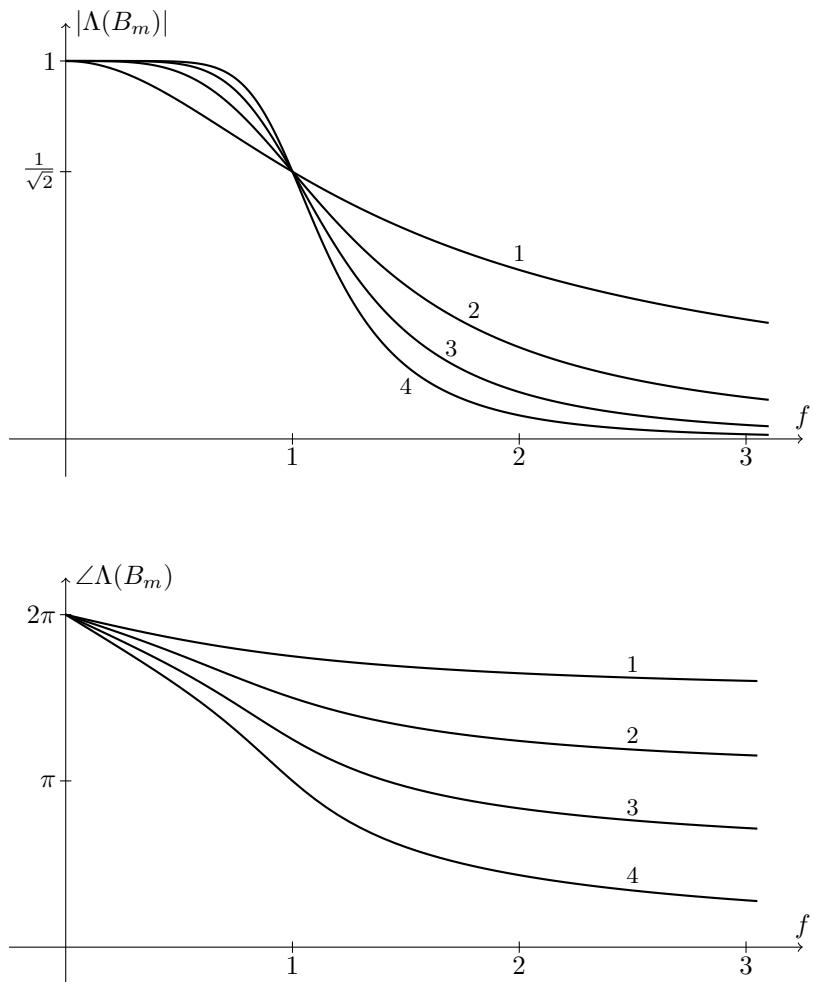


Figure 43: Magnitude spectrum (top) and phase spectrum (bottom) of normalised Butterworth filters  $B_1, B_2, B_3$  and  $B_4$ .

The magnitude and phase spectrum of the filters  $B_1$ ,  $B_2$ ,  $B_3$ , and  $B_4$  are plotted in Figure 43.

The **cutoff frequency** of the lowpass filter  $B_m$  is defined as the positive real number  $c$  such that  $|\Lambda(B_m, f)|^2 < \frac{1}{2}$  for all  $f > c$ . The normalised Butterworth filters have cutoff frequency  $c = 1\text{Hz}$ . A lowpass Butterworth filter of order  $m$  and cutoff frequency  $c$ , denoted  $B_m^c$ , has transfer function

$$\lambda(B_m^c, s) = \lambda(B_m, \frac{s}{c}) = \frac{1}{\prod_{i=1}^m (\frac{s}{2\pi c} - \beta_i)}.$$

The magnitude spectrum satisfies

$$|\Lambda(B_m^c, f)| = |\Lambda(B_m, \frac{f}{c})| = \frac{1}{(\frac{f}{c})^{2m} + 1} = \frac{c^{2m}}{f^{2m} + c^{2m}}. \quad (5.9)$$

A first order Butterworth filter  $B_1^c$  has spectrum

$$\Lambda(B_1^c) = \frac{1}{j\frac{f}{c} + 1} = \frac{c}{jf + c}.$$

Putting  $\frac{1}{c} = 2\pi RC$  we find that this is the same as the spectrum of the RC electrical circuit (Figure 10) or the active RC circuit after negation (3.8). Thus, the RC electrical circuit is a first order Butterworth filter with cutoff frequency  $c = \frac{1}{2\pi RC}$ . In Test 4 we constructed the active RC circuit with  $R \approx 27\text{k}\Omega$  and  $C \approx 10\text{nF}$  and measured its magnitude spectrum. The cutoff frequency was  $c = \frac{5 \times 10^4}{27\pi} \approx 589\text{Hz}$ .

A second order electrical Butterworth filter can be constructed using the Sallen-Key circuit described in Section 2.2 and Figure 20. The input voltage  $x$  and output voltage  $y$  of the Sallen-Key satisfy the differential equation (2.13)

$$x = y + C_2(R_1 + R_2)D(y) + R_1R_2C_1C_2D^2(y).$$

The transfer function is

$$\frac{\mathcal{L}(y)}{\mathcal{L}(x)} = \frac{1}{1 + C_2(R_1 + R_2)s + R_1R_2C_1C_2s^2}.$$

The second order Butterworth filter  $B_2^c$  has transfer function

$$\Lambda(B_2^c) = \frac{1}{(\frac{1}{2\pi c}s - \beta_1)(\frac{1}{2\pi c}s - \beta_2)},$$

where  $\beta_1 = \beta_2^* = e^{j3\pi/4}$ . Expanding the quadratic on the denominator gives

$$\Lambda(B_2^c) = \frac{1}{1 + \frac{1}{\sqrt{2\pi c}}s + \frac{1}{4\pi^2 c^2}s^2}.$$

Choosing the resistors and capacitors of the Sallen-Key to satify

$$C_2(R_1 + R_2) = \frac{1}{\sqrt{2\pi c}}, \quad R_1R_2C_1C_2 = \frac{1}{4\pi^2 c^2}$$

leads to a second order Butterworth filter. A convenient solution is to put  $C_1 = 2C_2$  and  $R_1 = R_2$ . This gives a second order Butterworth filter with cutoff

$$c = \frac{1}{\sqrt{2}\pi C_2(R_1 + R_2)} = \frac{1}{\sqrt{2}\pi C_1 R_1}.$$

In Test 6 we construct a second order Butterworth filter using a Sallen-Key and measure its magnitude spectrum.

Butterworth filters of orders larger than  $m = 2$  can be constructed by concatenating Sallen-Key circuits and RC circuits. If  $m$  is even then  $m/2$  Sallen-Key circuits are required. Each Sallen-Key is used to construct a conjugate pair of poles, that is, the  $k$ th Sallen-Key would have poles  $2\pi c\beta_k$  and  $2\pi c\beta_k^* = 2\pi c\beta_{m-k+1}$ . If  $m$  is odd then  $(m-1)/2$  Sallen-Key circuits and a single RC circuit (or active RC circuit) can be used. The RC circuit is designed to have the real valued pole  $\beta_{(m+1)/2} = 2\pi c$ .

## 5.5 Exercises

5.1. Plot the signal  $e^{-\alpha|t|}$  where  $\alpha > 0$  and find its Fourier transform.

5.2. Plot the signal

$$\Delta(t) = \begin{cases} t+1 & -1 \leq t < 0 \\ 1-t & 0 \leq t < 1 \\ 0 & \text{otherwise} \end{cases}$$

and find its Fourier transform.

5.3. Show that the sinc function is square integrable, but not absolutely integrable.

5.4. Find and plot the impulse response of the normalised lowpass Butterworth filters  $B_1, B_2$  and  $B_3$ .

5.5. Plot the signal

$$t\Pi(t) = \begin{cases} t & -\frac{1}{2} < t \leq \frac{1}{2} \\ 0 & \text{otherwise} \end{cases}$$

and find its Fourier transform.

5.6. Plot the signal  $\Pi(t)(1 + \cos(2\pi t))$  and find its Fourier transform.

### Test 6 (Butterworth filter)

We construct a second order Butterworth filter using the Sallen-Key circuit from Figure 20 with capacitors  $C_2 \approx 100\text{nF}$ ,  $C_1 \approx 2C_2 \approx 200\text{nF}$  and resistors  $R_1 \approx R_2 \approx 1000\Omega$ . The cutoff frequency is

$$c = \frac{1}{\sqrt{2\pi C_1 R_1}} \approx 1125\text{Hz}.$$

Sinusoids of the form

$$\sin(2\pi f_k t), \quad f_k = 110 \times 2^{k/2}, \quad k = 0, 1, \dots, 12$$

are input to the filter using a computer soundcard and the magnitude spectrum is measured using the method described in Test 4. Figure 44 shows the measurements (dots) plotted alongside the hypothesised spectrum

$$|\Lambda(B_2^c)| = \sqrt{\frac{1}{(f/1125)^4 + 1}}.$$

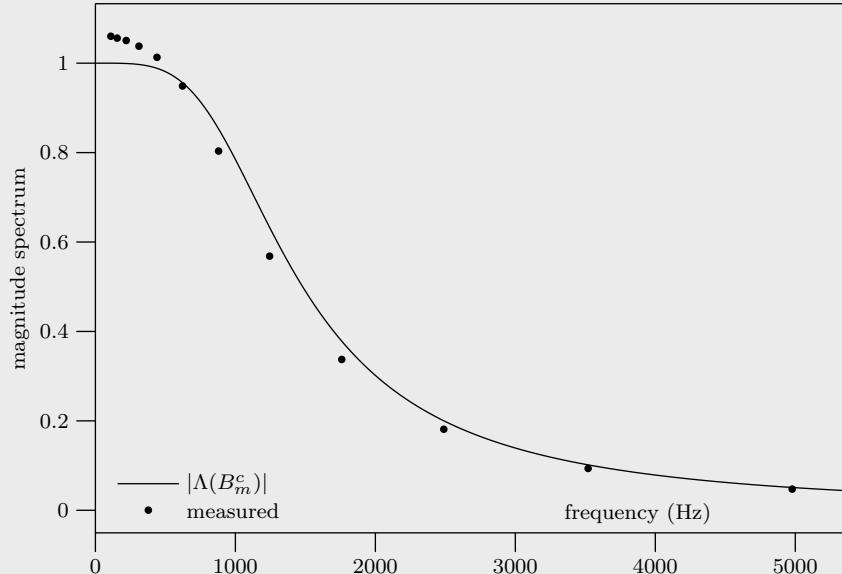


Figure 44: Plot of the hypothesised magnitude spectrum of the second order Butterworth filter  $|\Lambda(B_m^c)|$  (solid line) and of the measured magnitude spectrum of the filter implemented with a Sallen-Key active electrical circuit (dots).

## References

- Butterworth, S. [1930]. On the theory of filter amplifiers. *Experimental Wireless and the Wireless Engineer*, pp. 536–541.
- Curry, H. and Feys, R. [1968]. *Combinatory logic 1*. North-Holland, Amsterdam, Netherlands, 2nd edition.
- Fine, B. and Rosenberger, G. [1997]. *The Fundamental Theorem of Algebra*. Undergraduate Texts in Mathematics. Springer-Verlag, Berlin.
- Nicholas, C. B. and Yates, R. C. [1950]. The Probability Integral. *Amer. Math. Monthly*, 57, 412–413.
- Nise, N. S. [2007]. *Control systems engineering*. Wiley, 5th edition.
- Oppenheim, A. V., Willsky, A. S. and Nawab, S. H. [1996]. *Signals and Systems*. Prentice Hall, 2nd edition.
- Papoulis, A. [1977]. *Signal analysis*. McGraw-Hill.
- Proakis, J. G. [2007]. *Digital communications*. McGraw-Hill, 5th edition.
- Rudin, W. [1986]. *Real and complex analysis*. McGraw-Hill.
- Sallen, R. and Key, E. [1955]. A practical method of designing RC active filters. *Circuit Theory, IRE Transactions on*, 2(1), 74–85.
- Stewart, I. and Tall, D. O. [2004]. *Complex Analysis*. Cambridge University Press.
- Zemanian, A. H. [1965]. *Distribution theory and transform analysis*. Dover books on mathematics. Dover.