Arduino

ez Serial/Parallel IC Library (SIPO8) User Guide

A Virtual Library Supporting the Configuration & Driving of Multiple Serial/Parallel ICs (SIPO ICs)

Author: R D Bentley, Stafford, UK.

Date: April 2021

Version: 1.00

Warranties & Exceptions

This document and its content are in the public domain and may be used without restriction and without warranty.

Change Record

Version	Date	Change
1.00	April 2021	Initial version published

Audience

To fully understand and make good use of this User Guide and the capabilities of the $\langle ez_SIPO8_lib \rangle$ library, the reader should already be familiar with 8bit serial/parallel ICs, such as the $74HC595^1$ IC. Familiarity with wiring these ICs and driving them with suitable Arduino code, for example the standard shiftOut function, provides an excellent basis on which to build and develop sophisticated and innovative solutions through the use of the $\langle ez_SIPO8_lib \rangle$ library.

Crib Sheet

A highly reduced version of the essential parts of this User Guide can be downloaded in crib sheet form from \underline{github} .

•

Throughout this User Guide links to internet resources will be provided where further information may be considered to be helpful. In so doing, there is no intention to promote any supplier or product.

Contents

Warranties & Exceptions	2
Change Record	2
Audience	2
Crib Sheet	2
Introduction	5
Overview	6
Design Objectives	6
SIPO8 Library Design Architecture	6
Basic Design	
Addressability	
Constraints & Limitations	
Using the <ez-sipo8_lib> Library</ez-sipo8_lib>	
Location of the <ez-sipo8_lib> Library</ez-sipo8_lib>	
Steps to Successful Use	
Components and Basic Wiring Scheme for Single SIPO IC/Microcontroller	
Specifications - Configuration Data & Variables	
Reserved Macro Definitions	
SIPO Control Structure (SCS)	
Timer Control Structure (TCS)	
Pin Status Bytes (PSB)	
Other User Accessible Variables/Declarations	
Specifications - SIPO Functions	
SIPO8 Class Constructor Function	
SIPO Array Pool Functions (Absolute Addressing)set all array pins	
invert_all_array_pins	
set_array_pin	
invert array pin	
read array pin	
xfer array	
SIPO Bank Functions (Relative Addressing)	
create_bank	
set bank	
set banks	22
set_banks	22
invert_bank	22
invert_banks	23
invert_banks	23
set_bank_pin	23
invert_bank_pin	24

Arduino

ez Serial/Parallel IC Library (SIPO8) User Guide

read_bank_pin	24
set_bank_SIPO	25
invert_bank_SIPO	26
read_bank_SIPO	27
Other SIPO Functions	28
get_bank_from_pin	
num_pins_in_bank	29
xfer_banks	29
xfer_banks	30
xfer_bank	30
print_pin_statuses	31
print_SIPO_data	33
SIPO8_timer_elapsed	34
SIP08_start_timer	35
SIPO8_stop_timer	36
Private Functions	37
shift_out_bank	
SIPO_lib_exit	37
Corollary	38
Tutorials	38
Example Sketches	39
Sketch Example - Flashing LEDs, Absolute Addressing	
Sketch Example - Strobing LEDs, Relative Addressing	
Sketch Example - Clock Chasing Second LEDs	
Sketch Example - 7 Segment LED Matrix	

Introduction

This User Guide (UG) provides guidance and key technical information to assist in developing Arduino projects incorporating Serial In-Parallel Out ICs (SIPO ICs 2); for example, the ubiquitous and low cost 74HC595 IC, an 8bit device, or any other SIPO IC that operates with the same 3-wire interface (see SIPO8 Library Design Architecture, below).

The library operates in a virtual manner, insofar as physical SIPO output pins are mapped to software structures and updated independently using a wealth of functions/methods, until a physical update is desired/required.

The library provides many functions/methods to manipulate output pins using absolute and relative pin addressing. Physical SIPO ICs are grouped into banks of output pins, single SIPO ICs or in cascaded form. There is no practical limit to the number of SIPO ICs that may be cascaded in a single daisy chain, even beyond eight.

Essential to use of the library and successful implementation will be an understanding of the SIPO8 library design architecture (see below), which provides a powerful an innovative solution to the driving of very many outputs using few microcontroller digital pins.

This UG limits itself to the use and implementation of the SIPO8 library capabilities, it does not cover:

 considerations regarding the connection of SIPO outputs to components other than standard LEDs, e.g. relays or other components - care needs to be applied here in matching the particular SIPOs used to the components they are to connect to, together with power sources.

The internet provides a significant amount of material covering the above and the reader is recommended to do a little research around such issues before undertaking anything but simple projects using LEDs.

However, these matters aside, this UG should make life a good deal easier in designing projects incorporating SIPO ICs, singly or in multiple cascaded groupings. Indeed, to supplement understanding and end user design innovation, a number of tutorials are also provided, each dealing with specific and essential aspects of the design concepts and the library's rich set of capabilities/methods.

page 5

.

The term SIPO will be used throughout this UG to refer either a physical IC or virtual software control structures designed to map the physical characteristics of configured SIPO ICs. The context within which the term is used will make it clear which is referenced.

Overview

Design Objectives

At the outset, a number of key objectives were established for the design of the SIPO8 library, these being a library that provided/supported:

- a design that would maximise the number of physical output pins that could be supported/driven by the standard range of Arduino microcontrollers
- a representation of physical SIPO ICs and their output pins into the virtual, allowing independent programmatic manipulation of outputs
- a logical, flexible and straight forward design one that would allow the end user developer to easily manage/control a large number of outputs discretely, or as a set of outputs; a design architecture that would be modular and granular
- recognition that many common SIPO ICs have a standard hardware interface which could be leveraged and used to good advantage - SIPO IC hardware transparency
- a solution that would be scalable, allowing freedom for the end user to incorporate many SIPO ICs in their project design
- a solution that provides support for many 100s of outputs
- a rich set of functional capabilities to define, control and drive SIPO ICs, individually or in a cascaded arrangement, as individual banks
- the capability to group, through cascading/daisy chaining, any number of SIPO ICs in a single arrangement (bank), even beyond eight ICs in a single cascade
- the capability to define any number of differently sized SIPO banks, single or multiple and cascaded SIPO ICs
- the capability to work with SIPOs of different and mixed bit/pin size, e.g. 8, 16, 32 or 64bit SIPO ICs
- tools for the end user to examine key data during development

The next section provides an overview of the library's design architecture. It is this that provides and meets all of the above design objectives.


SIPO8 Library Design Architecture

Basic Design

The architecture design is based on a generic set of capabilities of a standard 8bit serial/parallel IC (SIPO IC), such as the $\underline{74HC595}$ IC (others are available). In particular, the following SIPO IC characteristics are at the core of the architecture:

- Serial interface 3-wire digital interface for driving data, clock and latch signalling
- 8bit parallel outputs
- Cascade features (linking SIPO ICs together in a daisy chain arrangement to drive more outputs on a <u>single</u> 3-wire serial interface)

Diagrammatically, these characteristics are:



Any SIPO IC with the above characteristics should be suitable for use with this library, even 16, 32 or 64bit SIPO ICs, as these may be simply broken down into basic 8bit SIPO building blocks and configured into banks (see below). That is, you may construct a bank of mixed bit size SIPOs, if required, e.g. $1 \times 8bit + 1 \times 32bit = 2$ SIPOs/40 bits, which will equate to a bank size of 40/8 = 5 standard 8bit SIPOs.

However, the choice of SIPO IC type must be determined by what will be connected to the outputs; <u>it is essential to match the power requirements of both the connected components and SIPOs</u>. These matters are out of scope for this UG, but suitable quidance can be found on the internet.

Although the architecture design is based on a concept of a generic 8bit SIPO IC, this does not mean that it does not provide sophistication and flexibility in supporting many SIPO ICs with many 100s of outputs, or SIPO ICs of other bit sizes. Indeed, at its design limit, the library will support up to 255 8bit SIPO ICs, a total of 2040 output pins, or a combination of other bit sized SIPOs totalling and equivalent to 255 8bit SIPO ICs.

To accomplish such flexibility and scale, the architecture is designed around a hierarchical construct as follows.

- all SIPO output pins collectively form an array.
- the array is subdivided into banks of SIPO ICs.
- ullet a bank of SIPO ICs may contain a single SIPO IC (8bit) or any number cascaded together.

The architecture design therefore looks like:

Level: array	array of outputs									
Level: bank	bank 0 bank 1 bank n									
Level: output pins	0	0 1 2 3 4 5 6 7				8				2

The array is the complete set of connected output pins, configured into one or more banks, with each bank comprising one or more SIPO ICs.

Addressability

During the library's class initiation, the class constructor function will create a <u>virtual</u> array map, or pool, for all output pins, based on the total number of SIPO ICs specified in the initiation process. For example, if the number of SIPO ICs specified is 10, then the bit map array would comprise 80 output pins with absolute addresses from output pin 0 to 79, inclusive. Output pin addresses are always referenced from 0.

However, it is not until the array pool is configured into SIPO banks, and therefore made active, that any of these array output pins will be addressable. Allocating SIPO ICs into banks brings into scope their respective output pins, thereby making them visible (active) and addressable. An efficient implementation will ensure that all array pool outputs are associated to a bank and therefore become active/addressable.

The library provides functions that allow us to address virtual SIPO output pins in two ways:

Absolute Addressability

Absolute addressability occurs at <u>array</u> level only – output pin addresses will range from 0 to the (total number of <u>active</u> output pins) – 1, inclusive. Functions using absolute addressing are: set <u>array pin</u>, read <u>array pin</u>, invert <u>array pin</u>.

Relative Addressability

Relative addressability occurs at $\underline{\text{bank}}$ level only - the output pins associated with a bank will range from 0 to the (total number of outputs pins mapped by a bank) - 1, inclusive.

To illustrate this, lets us consider the follow example:

We have created an array pool of 48 output pins (six SIPO ICs) and assigned these to three banks as follows:

bank 0, 1 x SIPO IC, 8 output pins,

array pool pin addresses: 0 - 7 absolute address range
bank 0 pin address range: 0 - 7 relative address range

bank 1, 2 x SIPO ICs, 16 output pins,

array pool pin addresses: 8 - 23 absolute address range
bank 1 pin address range: 0 - 15 relative address range

bank 2, 3 x SIPO ICs, 24 output pins,

array pool pin addresses: 23 - 47 absolute address range
bank 2 pin address range: 0 - 23 relative address range

... all array pins are assigned uniquely to a bank

Note the difference in addressing ranges – absolute addressing of the array is continuous from pin 0 to the very last pin, whilst relative addressing always starts at bank pin address 0 and continues incrementally to the last pin of the last SIPO IC defined by a bank. Banks therefore 'chop up' the array pool into well defined and unique subsets of SIPO output pins.

The library provides many functions to address any <u>active</u> output pin either at an array pool level or specifically within a bank. The are many functions using relative addressing, for example: <u>set bank pin</u>, read bank pin, invert bank pin, ..., etc.

Finally, and very important to fully appreciate, virtual SIPO output pins may be manipulated (set, inverted, read, tested, etc) using a wide range of functions/methods in isolation <u>without</u> changes being instantly reflected to their physical output pin equivalents. Physical SIPO output pins are <u>only</u> updated to reflect their virtual counterparts when required by using one or more xfer function calls. In this way, the

virtual array pool of output pins may be manipulated/processed independently until such time/point that a physical update is required.

Once you get a handle of the design you will see its power, capabilities and flexibility.

Constraints & Limitations

Nothing in this world is perfect and $\langle ez_SIPO8_lib \rangle$ is not. Whilst it does provide a set of powerful and useful capabilities to aid and assist Arduino project developers involving SIPO ICs, there are several constraints and limitations in its design and use to be aware of:

- the design is predicated on a standard and commonly available 8bit serial-parallel IC, such as the <u>74HC595</u> IC. The smallest word size supported is therefore 8bits, albeit the design allows much larger outputs to be grouped through 'banking' into word lengths as a multiple of 8bits. For example, banks of size 8, 16, 32, 40, 48, 56, 64bits, etc.
- 2. The microcontroller/SIPO IC interface is driven by three digital output pins data, clock and latch signals, controlling the transfer of data between the microcontroller and SIPO ICs
- 3. A maximum of 255 8bit SIPO ICs may be configured, giving a theoretical maximum of 2040 output pins which may be physically arranged into independently size banks. Testing with a Mega 256 suggests that the SIPO8 class may be configured to this maximum value, including the maximum number of timers (255). Lesser microcontrollers will dictate lower maxim ceilings.

Using the <ez-SIPO8_lib> Library

The SIPO8 library is used in a straight forward manner, the essential requirement is to understand its design architecture, including the concept of banking and the differences between absolute and relative addressing. The following sections provide quideance in applying the SIPO8 library to your projects

Location of the <ez-SIPO8_lib> Library

The library files, associated documentations and examples may be downloaded via the Arduino IDE Library Manager, or manually. If downloading manually then the SIPO8 library files should be installed within a directory called 'ez_SIPO8_lib' under the Arduino libraries directory - ...\Arduino\libraries\.

The <ez_SIPO8_lib> directory may comprise five files, three mandatory and two optional:

Mandatory files:

- 1. <u>ez SIPO8 lib.h</u> ... header file
- 2. <u>ez SIPO8 lib.cpp</u> ... C++ functions
- 3. <u>keywords.txt</u> ... keyword file to highlight <ez_SIPO8_lib> assets

Optional files:

- 4. <u>ez_SIPO8_lib_user_quide.pdf</u> ... this document, or file elsewhere if required,
- 5. ez_SIPO8_lib crib sheet.pdf ... an easy reference for key library data/functions,

Steps to Successful Use

Before 'flighting to task', it is recommended to think carefully about what it is you wish to achieve, how SIPO ICs are incorporated into your project and how $<ez_SPIB8_lib>$ can be utilised.

The principal considerations are:

- 1. decide how many SIPO ICs and of what type?
- 2. how SIPO ICs will be arranged into banks, and for each bank, which microcontroller digital pins will be used for each bank (3 digital pins per bank)?
- 3. what will each physical SIPO output pin be connected to, e.g. LED, relay, etc. Do your research if connecting these SIPO output pins to anything other than a LED
- 4. do the physical SIPO ICs need to be powered from an external source? Again, do your research

If you are implementing more than one or two SIPO ICs it may be helpful to make a note of their configurations, as once you start wiring and coding things can get a bit muddled up! The following template may be helpful to fill out at the start of your planning and for you to refer to into the development stage (it is also a useful documentation aid post implementation):

Project	t:							Date:	
U.	User Defined Parameters			create	e_bank	Results			
C	ontrol Pi	ns	Num SIPO	Num SIPO Bank First Last Comments		Comments			
Data	Clock	Latch	ICs in Bank	Num	Pin	Pin	Comments		
								•	
					·				

(add more rows as needed)

Start by filling out the white sections and use the print_SIPO_data function after you have created the banks to complete the central panel (create_bank Results). You will now have a written record of your SIPO configuration.

Example:

Projec	t: LE	LED indicators, with temperature output to pair of single matrix displays Date: 24/04/2021							
U	ser De	ined Para	meters	create	e_bank	Results			
С	ontrol l	ins	Num SIPO	ım SIPO Bank		Last	Comments		
Data	Clock	Latch	ICs in Bank	Num	First Pin	Pin	Comments		
2	3	4	1	0	0	7	Console bank, sensor out	put LED	s, each LED
							tracking different input	sensors	for low/high
							watermark readings. Sei	nsor inpu	ts on
							analogue pins A0-A5.		

Arduino

ez Serial/Parallel IC Library (SIPO8) User Guide

Project	t: L	LED indicators, with temperature output to pair of single matrix displays Date: 24/04/2021								
U	ser De	efine	ed Parai	meters	create	_bank	Results	Commonta		
С	Control Pins Num SIPO		Bank	First	Last	Comments				
5		6	7	2	1	8	23	7 segment LEDs, 2 x bar	nks - 10's	& units for
								temperature respective	ly	

Using the <ez SIPO8 lib> is no different to using any other Arduino library. There are a few things we need to adhere to:

- 1. we need to ensure our sketch references the library
- 2. we need to create an instance of the library class, and
- 3. we need to understand how to correctly use the library's capabilities (e.g. functions and data).

... as follows:

Step 1

To start, we need to declare the <ez SIPO8 lib> library. At the top level of your sketch include the following statements:

```
#include <Arduino.h>
#include <ez SIPO8 lib.h>
```

Step 2

Then, prior to setup (), we need to declare and initiate the SIPO8 class. This will be something like:

```
SIPO8 my SIPOs (number SIPOs, number timers);
```

... where

my SIPOs is the name you wish to give to the class and which will be used whenever you wish to access/use any of the SIPO8 resources (see later).

number SIPOs is the number of 8bit hardware SIPO ICs you wish to size the class instance for. Note that this defines the maximum size of the virtual array output pin pool. It is the maximum number of SIPO output pins you are planning to use, i.e. virtual array output pin pool size = number SIPOs x 8. Note that a value between 0 and 255 is permissible for number SIPOs.

number timers is the number of timers that the class will be configured for. Note that a value between 0 and 255 is permissible.

It recommended that these two class parameters are defined as macro values, thereby allowing them to be used throughout the sketch code, as required, and providing a degree of self documentation.

Examples:

```
1. SIPO8 my SIPOs(15, 4);
```

But a better approach would be:

```
2. #define number_SIPO_ICs 15
  #define number_timers 4
  SIPO8 my SIPOs(number SIPO ICs, number timers);
```

Step 3

Okay, we're off and running? Not quite, before we can plough on and start 'SIPOing' we need to create our banks. We need to allocate the SIPO output pins from the array pool that was created at class initiation to banks. These output pins will <u>not</u> be addressable and therefore active until they are assigned into banks.

We do this using the function create_bank. This function will create a new bank with the specified 3-wire interface of the required number of physical SIPO ICs. Again, use the data you have documented in the above template. Once a bank has been successfully created its associated pins become addressable (absolute and relative) and active. For example, we will create a bank using digital pins 8, 9 and 12 for our data, clock and latch signalling, respectively and of size 6 SIPO ICs:

```
int bank_id;
bank id = my SIPOs.create bank(8,9,12, 6); // 6 SIPO ICs in bank
```

Things to notice:

- the create_bank function call is preceded with the name we have given to the SIPO8 class, in this example 'my_SIPOs'. This is required to access any resource within the class
- the function provides a return value of type int. If the creation is successful, this value is the reference you should use whenever you use any of the library resources where bank reference is a required parameter. How you retain this is very much up to your design, but see the example sketches below which should prove helpful. See Specifications SIPO Bank Functions, create_bank to understand the possible return values/conditions.

The best place to create your banks is in the setup() function, but it can be done anywhere with the application of a little common sense.

Step 4

Now that is done we can start to use and drive our SIPO ICs. But before we do this recall that:

- 1. the output pins of physically connected SIPO ICs are referenced within a virtual pool of output pins
- 2. these virtual output pins are only active and therefore addressable when they belong to a bank

- 3. virtually active output pins can be accessed by absolute addressing or relative addressing, but using different methods
- 4. the status of virtual active pins will be either LOW or HIGH
- 5. physically connected SIPO output pins are <u>not</u> updated to reflect their virtual status unless and until a transfer or 'shift out' process is invoked, using one of the <u>xfer</u> ... functions.

For example:

```
int bank_id = my_SIPOs.create_bank(8,9,12, 1); // 1 SIPO ICs in bank
if (bank_id >= 0) {
    // successfully created bank
    my_SIPOs.set_bank_SIPO(bank_id, 0, 0b01100111);
    // shift out to physical SIPO outputs
    my_SIPOs.xfer_bank(bank_id, MSBFIRST);
}
```

Additionally to note:


If you need to reference any of the library's class resources (except macros definitions) then you must prefix them with the name you have given to the class when you created/initiated it. For example, if we initiated the class with the name 'my SIPOS' then referencing examples would look something like:

```
my_SIPOs.SIPO_banks[bank_id].bank_low_pin
my_SIPOs.SIPO_banks[2].bank_num_SIPOs
my_SIPOs.timers[timer3].timer_status
my_SIPOs.pin_status_bytes[4]
my_SIPOs.num_active_pins
my_SIPOs.num_pin_status_bytes
my_SIPOs.max_timers
etc.
```

See Specifications - Configuration Data & Variables.

Components and Basic Wiring Scheme for Single SIPO IC/Microcontroller

It is worthwhile putting together a basic test harness for use with this UG, the example sketches and the tutorials. The components (swap out the suggested 180 ohm resistors for 220 ohm resistors) and wiring scheme for the basic harness is:

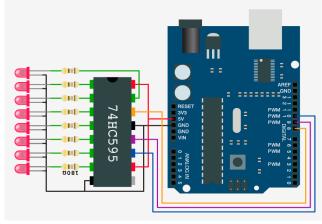

Standard 74HC595/Arduino Wiring Scheme

Specifications - Configuration Data & Variables

Reserved Macro Definitions

Macro Definitions - #define	Values	Significance / Comments
pins_per_SIPO	8	The number of bits/output pins of a virtual/physical SIPO and on which the core design of the library is based.
<pre>create_bank_failure</pre>	-1	The return value from the create_bank function, if a request to create a new bank for the specified number of SIPOs cannot be met, e.g. too few remaining unallocated SIPOs in the unused pool.
pin_read_failure	-1	The return value from the read_array_pin & read_bank_pin functions, if a specified pin is not an active pin.
pin_invert_failure	-1	The return value from the invert_array_pin & invert_bank_pin functions, if a specified pin is not an active pin.
pin_set_failure	-1	The return value from the set_array_pin & set_bank_pin functions, if a specified pin is not an active pin.
bank_not_found	-1	The return value from the get_bank_from_pin, set_bank_SIPO, invert_bank_SIPO & read_bank_SIPO functions, if a specified pin/SIPO does not occupy a defined SIPO bank.
SIPO_not_found	-2	The return value from the set_bank_SIPO, invert_bank_SIPO & read_bank_SIPO functions, if a specified SIPO not in range for given bank.
timer0 timer1 timer2 timer3 timer4 timer5 timer6 timer7	0 1 2 3 4 5 6	Eight predefined macros are provided that may be used for 1 - 8 configured timers. Beyond eight, the end user will either reference timers explicitly, e.g. 9, 10, etc, or by using his/her own declared macros for such purposes.
elapsed	true	Return value of the SIPO8_timer_elapsed function if the defined elapse period has completed for a specified timer.
not_elapsed	!elapsed	Return value of the SIPO8_timer_elapsed function if the defined elapse period for a specified timer has not yet completed for a specified timer.
active	true	Used internally by the SIPO8 timer functions to judge if a specified timer is active.
not_active	!active	Used internally by the SIPO8 timer functions to judge if a specified timer is inactive.

SIPO Control Structure (SCS)

Declarations/Variables	Purpose/definition
struct SIPO_control {	For each bank created maintains a record of:
<pre>uint8_t bank_data_pin;</pre>	Digital pin allocated to the data input line to a SIPO bank
<pre>uint8_t bank_clock_pin;</pre>	Digital pin allocated to the clock input line to a SIPO bank
<pre>uint8_t bank_latch_pin;</pre>	Digital pin allocated to the latch input line to a SIPO bank
<pre>uint8_t bank_num_SIPOs;</pre>	The number of SIPO ICs grouped under a bank
uint16 t bank low pin;	The first output pin number for the bank (absolute pin
differo_c bank_row_pin,	address)
uint16 t bank high pin;	The last output pin number for the bank (absolute pin
differo_t bank_fight_pin,	address)
} *SIPO_banks;	SIPO_banks is the active/working data structure used
	throughout the library for managing and controlling SIPO
	data

Timer Control Structure (TCS)

Declarations/Variables	Purpose/definition
struct timer_control {	For each timer created maintains a record of:
bool timer_status;	current status of a timer - active or not_active
<pre>uint32_t start_time;</pre>	the millis time when a timer is started
} *timers;	timers is the active/working data structure used
, cimers,	throughout the library for managing and controlling timers

Pin Status Bytes (PSB)

Till Status Dytes (100)					
Declarations/Variables	Purpose/definition				
<pre>uint8_t * pin_status_bytes;</pre>	An array sized and created to be the number of 8 bit unsigned bytes required to map the maximum number of SIPOs defined at class initiation. That is, one status byte per required SIPO IC. This structure is the virtual SIPO output pin map and represents the entire SIPO output pin array pool.				
	The pin_status_bytes array is used to record the status (HIGH or LOW) of each physical SIPO output pin.				

Other User Accessible Variables/Declarations

Declarations/Variables	Purpose/definition
uint8 t max SIPOs	The maximum number of SIPO ICs defined at class
unito_t max_siros	initiation by the user code.
	The maximum number of SIPO output pins defined for
	the SIPO pool. Note that this is not the number of
wint16 t man ning	active SIPO output pins, but is the maximum number of
uint16_t max_pins	SIPO output pins available for allocation to SIPO banks
	via calls to the create_bank function.
	<pre>Therefore, max_pins >= num_active_pins.</pre>
	The number of <u>active</u> SIPO output pins allocated from
uint16_t num_active_pins	the SIPO output pin pool. Allocated by the
	create_bank function - see above.
	The number of 8 bit unsigned bytes allocated to map
uint8 t num pin status bytes	the maximum number of SIPO output pins. For
unito_t num_pin_status_bytes	example, if the max number of SIPO output pins is 128,
	then this value will be 128/8 = 16 bytes.
uint8 t num banks	The total number of SIPO banks created by using
ulito_t liuii_baliks	create_bank function.
wint 0 t hank CIPO count	The total number of SIPO ICs in use by defined SIPO
uint8_t bank_SIPO_count	<pre>banks. Note that bank_SIPO_count <= max_SIPOs.</pre>
uint8 t max timers	The number of timers defined at time of class initiation
dinco_t max_timers	by the user code.

The above SIPO8 library variables are simply accessed in standard form, by prefixing the variable with '.class_name', -

<class name attributed by end user code>.<variable>

For example,

```
my_SIPOs.SIPO_banks[bank_id].bank_low_pin
my_SIPOs.SIPO_banks[2].bank_num_SIPOs
my_SIPOs.timers[timer3].timer_status
my_SIPOs.pin_status_bytes[4]
my_SIPOs.num_active_pins
my_SIPOs.num_pin_status_bytes
my_SIPOs.max_timers
etc.
```

See Steps to Successful Use, above.

Specifications - SIPO Functions

SIPO8 Class Constructor Function

Туре	n/a Name SIPO8			
Parameters	(uint8 t Max SIPO ICs, uint8 t Max timers)			
Purpose / functionality	Like all constructor functions its purpose is to establish a suitably configured environment within which the class can be applied and used by end user code. For the SIPO8 library, this involves the creation, from free memory, of all data structures and variables that properly describe and map the user's requirements.			
	The constructor has just two parameters - max_SIPO_ICs & Max_timers:			
	Max_SIPO_ICS parameter allows the SIPO environment to be sized to the maximum number of hardware 8bit SIPO ICs that will connected in some way or other. This parameter is also used to size and create the number of output pin status bytes required to map all pins of all SIPO output pins Max_timers parameter specifies the number of timer data struct(ures) required for the end users needs			
	To note: 1. even though the environment is created to the number of SIPO ICs required, SIPO output pins are not addressable or usable unless and until they are allocated into banks			
	 if the constructor function cannot established the environment, e.g. insufficient free memory to 'malloc', the SIPO_lib_exit function is called with a suitable error message, after which the code will force an exit with the specified reason code. See the function specification for SIPO_lib_exit On successful setup, a number of key SIPO8 library variables are accessible to the end user, see Other User Accessible Variables/Declarations the class constructor will allocate an amount of free memory dependent on the number of SIPO ICs and number of timers specified, as follow: 			
	SIPO control structure 8 x Max_SIPO_ICs, bytes SIPO status bytes 1 x Max_SIPO_ICs, bytes SOPI timers 5 x Max_timers, bytes			
	For example, if we initiated the class as follows:			
	SIPO8 my_SIPOs(12,7); // 12 SIPO ICs, 7 timers			
	The class constructor will attempt to acquire $(12 \times 8) + (12 \times 1) + (7 \times 5) = 143$ bytes of free memory.			
Return values	None			
	Example(s)			
Example 1 SIPO8 my_SIPO	s(12, 7);			
Example 2 #define Max_S #define Max_t SIPO8 my_SI				

SIPO Array Pool Functions (Absolute Addressing)

Туре	int N	Jame	set_all_array_pins	
Parameters	(bool pin_	status		
Purpose / functionality	The function sets every SIPO output pin in the active output pin array to the specified status.			
	To note:			
	1. pin_sta	tus =	LOW or HIGH	
	2. the func	tion is	<pre>equivalent to set_banks(pin_status)</pre>	
Return values	None			
			Example(s)	
Example 1:				
_			IGH); // all outputs to high ; // shift out entire active array of SIPO pins	
Example 2:				
			OW); // all outputs to low; // shift out entire active array of SIPO pins	

Туре	int	Name	invert all array pins		
Parameters	none				
Purpose / functionality	pin array.		equivalent to invert_banks().		
Return values	None				
			Example(s)		
			ns(); // invert all existing pin statuses ; // shift out entire active array of SIPO pins		
Example 2: my SIPOs inv	ert all a	rrav nim	ns(); // invert all existing pin statuses		
			; // shift out entire active array of SIPO pins		

Туре	Name set array pin			
Parameters	(uint16_t pin, bool pin_status)			
Purpose / functionality	The function sets the specified SIPO output pin in the active output pin array to the specified status.			
	To note:			
	1. the pin parameter is an <u>absolute</u> pin address			
	2. pin_status = LOW or HIGH			
Return values	The function will return one of two values:			
	 the pin was successfully set, in which case the return value will be the pin address of the specified pin address parameter the pin could not be set, for example the given pin address is not in the active range of pin addresses. In this case the return value is -1 (macro name of pin_set_failure) 			
	Example(s)			
if (my_SIP	t pin = 17; pin < 93; pin++) { Os.set_array_pin(pin, LOW) == pin_set_failure) { in error			

Type int Name invert_array_pin Parameters (uint16_t pin) Purpose / functionality The function inverts the existing pin status of the specified SIPO our active output pin array. To note: 1. the pin parameter is an absolute pin address 2. pin_status = LOW or HIGH	utput pin in the				
Purpose / functionality The function inverts the existing pin status of the specified SIPO our active output pin array. To note: 1. the pin parameter is an absolute pin address	utput pin in the				
functionality active output pin array. To note: 1. the pin parameter is an <u>absolute</u> pin address	utput pin in the				
functionality active output pin array. To note: 1. the pin parameter is an <u>absolute</u> pin address					
To note: 1. the pin parameter is an <u>absolute</u> pin address					
1. the pin parameter is an <u>absolute</u> pin address					
··					
2. pin_status = LOW or HIGH					
Return values The function will return one of two conditions;	The function will return one of two conditions;				
1. the specified pin was successfully inverted. In this case, the return the updated output pin status value (LOW or HIGH)					
l ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' '	· · · · · · · · · · · · · · · · · · ·				
 the specified output pin could not be inverted, for example the pi is not in the active array. In this instance the return value will be name of pin_invert_failure) 	•				
Example(s)					
for (uint16 t pin = 32; pin < 48; pin++) {					
my SIPOs.invert array pin(pin);					
}					
· · ·					

Arduino ez Serial/Parallel IC Library (SIPO8) User Guide

Туре		Name	read_array_pin		
Parameters	(uint16_t	(uint16_t pin)			
Purpose /	The function	on will re	ad the status of the specified output pin, returning its status or		
functionality	an error if	not in th	e active range of the array.		
	To note:				
	1. the pi	n parame	eter is an <u>absolute</u> pin address		
Return values	The function returns one of two conditions:				
		1. if successful, the function returns the pin's status - LOW or HIGH.			
	2. if unsu	ccessful,	, the function will return -1 (macro name of pin_read_failure)		
			Example(s)		
nin status =	mir SIDOs	read a	rray nin(107). // nin 107 of the array		
_	<pre>pin_status = my_SIPOs.read_array_pin(107); // pin 107 of the array if (pin status == pin read failure) {</pre>				
// read error, pin 107 not in the active range of the array					
•••					
}					
• • •					

Туре	void	Name	xfer array
Parameters	(bool ms	b_or_ls	b)
Purpose / functionality	This function transfers (xfers) / shifts out, from the virtual SIPO output pin array, all of the output pins within the active output pin array, with the direction of shift out determined by the msb_or_lsb parameter. To note: 1. the msb_or_lsb parameter is either LSBFIRST or MSBFIRST, least significant bit or most significant bit, respectively 2. the function is equivalent to xfer_banks()		
Return values	None		
			Example(s)
my_SIPOs.set my_SIPOs.xfe		_	

SIPO Bank Functions (Relative Addressing)

Туре	int Name	create_bank		
Parameters	(uint8_t data_pin, uint8_t clock_pin, uint8_t latch_pin,			
	uint8_t num_SIPC)s)		
Purpose /	This is an essential f	function for creating a bank of SIPO ICs (single or several in		
functionality	cascade form) and a	llocates output pins from the defined global array output pin pool.		
	pins (data, clock and	ruct(ure) stores the given microcontroller 3-wire digital interface latch) used to drive the bank of SIPO ICs. The structure also e, inclusive, addresses of the first and last SIPO output pins bank.		
Return values	The function return	s one of two conditions:		
	should be used v	sful, in which case the return value is the bank address which with any of the library's bank specific functions essful, the return value is -1 (macro name of failure)		

Example(s)

```
#define max SIPOs
#define max_timers 4
#define num banks 3
// initiate the class for max SIPOs/timers required
SIPO8 my_SIPOs(max_SIPOs, max_timers);
// bank pins format - for each bank,
// [][0] = data pin number
// [][1] = clock pin number
// [][2] = latch pin number
// [][3] = number SIPOs in this bank
// [][4] = the bank number allocated for this bank by create bank function
int bank setup data[num banks][5] = {
  4, 3, 2, 2, -1,
  5, 6, 7, 3, -1,
  8, 9, 10, 1, -1
};
void setup() {
 Serial.begin (9600);
  for (uint8 t bank = 0; bank < num_banks; bank++) {</pre>
   bank setup data[bank][4] = my SIPOs.create bank(
                               bank setup data[bank][0], // data pin
                               bank setup data[bank][1], // clock pin
                               bank setup data[bank][2], // latch pin
                               bank setup data[bank][3]);// num SIPOs this bank
    if (bank setup data[bank][4] == create bank failure) {
      my SIPOs.print SIPO data();
      Serial.println(F("failed to create bank"));
      Serial.flush();
      exit(0);
 my SIPOs.print SIPO data();
```

Туре	void	Name	set_bank	
Parameters	(uint8_t	bank,	bool status)	
Purpose / functionality	The function will set <u>every</u> SIPO output pin defined by the bank to the given status.			
	status i	s either 1	LOW or HIGH.	
Return values	None			
	Example(s)			
my_SIPOs.set	_bank (banl	c, HIGH));	

Туре	void	Name	set_banks		
Parameters	(uint8_t	from_ba	ank, uint8_t to_bank, bool status)		
Purpose /	For each b	ank in the	from_bank/to_bank range of banks, the function will set		
functionality	every SIPO	O output p	pin defined by <u>each</u> bank to the given status.		
	status i	status is either LOW or HIGH.			
Return values	None				
	Example(s)				
my_SIPOs.set	_banks(2,	5, LOW));		

Туре	void	Name	set_banks	
Parameters	(bool sta	atus)		
Purpose / functionality	The function will set <u>every</u> SIPO output pin defined by <u>every</u> bank to the given status.			
	Note:			
	1. status is either LOW or HIGH.			
	<pre>2. the function is equivalent to set_all_array_pins(status);</pre>			
Return values	None			
			Example(s)	
my_SIPOs.set	_banks (LOV	v); // s	set all defined bank output pins to low	

Туре	void	Name	invert_bank	
Parameters	(uint8_t	bank)		
Purpose /	The function	on will inv	ert the existing status value of <u>every</u> SIPO output pin defined by	
functionality	the bank.	the bank.		
·				
Return values	None			
Example(s)				
•••				
<pre>my_SIPOs.invert_bank(bank);</pre>				
• • •				

Туре	void	Name	invert_banks		
Parameters	(uint8_t	from_ba	ank, uint8_t to_bank)		
Purpose /	For each b	For each bank in the from bank/to bank range of banks, the function will invert			
functionality	the existing output pin status of <u>every</u> SIPO output pin defined by <u>each</u> bank .				
Return values	None				
	Example(s)				
•••					
my_SIPOs.invert_banks(2, 5);					

Туре	void	Name	invert_banks
Parameters	none		
Purpose / functionality	The function will invert the existing status of every SIPO output pin of every bank. Note: 1. the function is equivalent to invert_all_array_pins();		
Return values	None		
			Example(s)
my_SIPOs.inv	ert_banks	(); //	invert output pins of all defined banks

Parameters	/11in+8 +				
. a. a.,	(ullico_c	bank, u	uint8_t pin, bool status)		
Purpose /	The function will set the specified SIPO output pin in the given bank to the given				
functionality	status.				
	To note:				
	 the pin 	address	parameter is a relative address and <u>not</u> an absolute address.		
		_	ess of the bank, the pin address will range from 0 to (8 x number the bank) – 1.		
	2. the ret	urn value	for a successful update will be the pin's absolute address		
			r LOW or HIGH.		
Return values	The function	on return	s one of two conditions:		
	1. If successful, the function returns the pin's <u>absolute</u> address.				
	2. If unsuccessful, the function will return -1 (macro name of pin set failure).				
	This will occur if the specified pin is out of range for the given bank.				
			Example(s)		
pin_abs_add = if (pin abs a			ank_pin(bank, 33, HIGH); // pin 33 of this bank		
			ot in range of this bank		
,,, 555 F=55	, F-				
}					
• • •					

Туре	int	Name	invert_bank_pin	
Parameters	(uint8_t bank, uint8_t pin)			
Purpose /	The function will invert the existing status of the specified SIPO output pin in the			
functionality	given bank.			
	To note:			
	That is	, regardl	parameter is a relative address and \underline{not} an absolute address. ess of the bank, the pin address will range from 0 to (8 x number the bank) - 1.	
	2. the return value for a successful update will be the pin's absolute.			
Return values	The functi	on returr	ns one of two conditions:	
	1. If succ	cessful, t	he function returns the pin's <u>absolute</u> address.	
			, the function will return -1 (macro name of	
	_	nvert_f ven bank.	ailure). This will occur if the specified pin is out of range for	
			Example(s)	
if (pin_abs_	add == pin	n_inver	<pre>t_bank_pin(bank, 33, HIGH); // pin 33 of this bank t_failure) { t in range of this bank</pre>	
}				

Туре	int	Name	read_bank_pin	
Parameters	(uint8_t bank, uint8_t pin)			
Purpose /	The function will read the existing status of the specified SIPO output pin in the			
functionality	given bank.			
	To note:			
	That is	, regardle	parameter is a relative address and \underline{not} an absolute address. ess of the bank, the pin address will range from 0 to (8 \times number the bank) – 1.	
	2. the return value for a successful update will be the pin's status - LOW or HIGH. This will occur if the specified pin is out of range for the given bank.			
Return values	The function returns one of two conditions:			
	1. If succ	cessful, t	he function returns the pin's status - LOW or HIGH.	
			, the function will return -1 (macro name of pin_read_failure)	
			Example(s)	
if (pin_stat	us == pin_	_read_fa	ank_pin(bank, 33); // pin 33 of this bank ailure){ in range of this bank	
• • •				

Type	int	Name	set bank SIPO		
Type			uint8 t SIPO num, uint8 t SIPO value)		
Parameters /	The specified SIPO within the given bank will be set to the 8bit value provided.				
Purpose / functionality	(ie bank/SIPO = SIPO_value)				
	 To note: the bank number is the bank id returned by the create_bank function when the bank is first created the SIPO_num parameter is a relative value and is the number of the SIPO assigned to the given bank, starting at 0 the SIPO_value parameter is an unsigned 8bit value, representing each of the eight output SIPO pins this function is equivalent to eight set_bank_pin calls which sets a single specified SIPO output pin. It can therefore a more efficient method to use if multiple output pins are to be set 				
Return values	The functi	on returr	ns one of three conditions:		
	 the given bank does not exist, the function will return -1 (macro name of bank_not_found) the given bank does exist, but the given SIPO reference is not in range for the bank, the function will return -2 (macro name of SIPO_not_found) the given bank and bank SIPO do exist, the function will return the address of the status byte (>=0) that is set with the given SIPO_value parameter 				
	<u>I</u>		Example(s)		
Example 1			- 1		
my_SIPOs.set my_SIPOs.xfe	_bank_SIP(r_bank(2, _bank_SIP()(2, 1, MSBFIRS	id, 5,127); // SIPO 5 of current bank		
Example 2 #define num_	<pre>Example 2 #define num_patterns 4</pre>				
<pre>uint8 t bit patterns[num patterns] = { 0b00001111, 0b11110000, 0b10101010, 0b01010101};</pre>					
<pre>// patterns for (uint8_t my_SIPOs.s</pre>	respective pattern = et_bank_Si et_bank_Si	ely = 0; pat IPO(2, p	<pre>IPOs each) with initial and inverse ttern < num_patterns; pattern++) { pattern, bit_patterns[pattern]); pattern, ~bit_patterns[pattern]););</pre>		

Arduino ez Serial/Parallel IC Library (SIPO8) User Guide

Туре	int Name invert_bank_SIPO			
Parameters	(uint8_t bank, uint8_t SIPO_num)			
Purpose / functionality	This function will invert the existing 8bit SIPO output pin values. For example, if the existing values are 0b11110000, this function will set the output pins to 0b00001111, etc. To note: 1. the bank number is the bank id returned by the create_bank function when the bank is first created			
	 the SIPO_num parameter is a relative value and is the number of the SIPO assigned to the given bank, starting at 0 this function is equivalent to <u>eight invert_bank_pin</u> calls which sets a single specified SIPO output pin. It can therefore a more efficient method to use if multiple output pins are to be set 			
Return values	 The function returns one of three conditions: the given bank does not exist, the function will return -1 (macro name of bank_not_found) the given bank does exist but the given SIPO reference is not in range for the bank, the function will return -2 (macro name of SIPO_not_found) the given bank and bank SIPO do exist, the function will return the address of the status byte (>=0) 			
	Example(s)			
<pre>my_SIPOs.inv my_SIPOs.xfe my_SIPOs.inv</pre>	<pre>ert_bank_SIPO(2, 0);</pre>			

T	int Name read bank SIPO				
Туре	14dille				
Parameters	(uint8_t bank, uint8_t SIPO_num)				
Purpose /	This function will read the current status byte of the specified bank/SIPO. The				
functionality	returned value is the full eight bits representing the bank's SIPO pins.				
	 To note: the bank number is the bank id returned by the create_bank function when the bank is first created the SIPO_num parameter is a relative value and is the number of the SIPO assigned to the given bank, starting at 0 this function is equivalent to eight read_bank_pin calls which reads a single specified SIPO output pin. It can therefore a more efficient method to use if multiple output pins are to be set 				
Return values	The function returns one of three conditions:				
	 the given bank does not exist, the function will return -1 (macro name of bank_not_found) the given bank does exist but the given SIPO reference is not in range for the bank, the function will return -2 (macro name of SIPO_not_found) the given bank and bank SIPO do exist, the function will return the 8bit value the SIPO's output pins 				
	Example(s)				
if (status_b // valid r if (status_b my_SIPOs					

Other SIPO Functions

int	Name	get bank from pin		
The function returns the bank number in which the specified pin address resides.				
To note:				
	 The specified pin address is an absolute address. 			
The functi	on return	ns one of two conditions:		
 If successful, the function returns bank number in which the pin resides. If unsuccessful, the function will return -1 (macro name of bank_not_found). In this case the specified pin has not been allocated to a bank (via a create_bank call), albeit it may be defined within the pin array pool. 				
		Example(s)		
<pre>nt(pin); ank = my 9 = bank_not rintln(" - rint(" is</pre>	SIPOs.get_found; - no bar	<pre>my_SIPOs. num_active_pins; pin++) { et bank from pin(pin);) { nk for this pin");</pre>		
	The function To note: 1. The spont The function 1. If success 2. If unsure in this create t pin = 0 and (pin); ank = my see bank_note rintln(" is rintln (bank); rintln (bank)	(uint16_t pin) The function return To note: 1. The specified pi The function return 1. If successful, the content of the		

Tuno	int	Name	num pins in bank				
Туре			num_pins_in_bank				
Parameters	(uint8_t bank)						
Purpose /	The function returns the number of virtual and physical SIPO output pins the given						
functionality	bank maps/controls/owns.						
	To note:	To note:					
		aiven hai	nk is valid, the returned value is the number of output pins that				
		-	, ,				
	The bai	nk maps.	The <u>relative</u> pin range for the given bank is therefore:				
		_					
	0,	., my_S	IPOs.num_bank_pins(bank) - 1				
Return values	The function returns one of two conditions:						
	1. If succ	 If successful, the function returns the number of SIPO output pins that the given bank maps If unsuccessful, the function will return -1 (macro name of bank not found). 					
	_						
	2. 11 unst	1CC6331 UI	, the function will refut he of manie of bank_not_found).				
	Example(s)						
			Example(s)				
int bank id	- mr. CIDO.	a act b	ank from pin(pin);// determine which bank pin is in				
if (bank id							
_	_	_	ing bank - determine how many pins in the bank				
_	_		Os.num pins in bank(bank id);				
			rel pin < num pins; rel pin++) {				
	cess banks pins						
	-100000 Damie plus						
} else {							
	<pre>Serial.print("\nbank not found for pin ");</pre>						
Serial.pr	al.println(pin);						
}							

Туре	void	Name	xfer_banks
Parameters	(uint8_t	from_ba	ank, uint8_t to_bank, bool msb_or_lsb)
Purpose / functionality	This function transfers (xfers) / shifts out, from the virtual SIPO output pin array, all of the output pins associated which each bank in turn, starting with from_bank and progressing to to_bank, with the direction of shift out determined by the msb_or_lsb parameter. To note: 1. the msb_or_lsb parameter is either LSBFIRST or MSBFIRST, least significant bit or most significant bit, respectively		
Return values	None		
			Example(s)
my_SIPOs.xfe	er_banks(0	,2,MSBF	IRST);// transfers banks 0, 1 & 2 to physical SIPOs

Туре	void	Name	xfer_banks		
Parameters	(bool msk	(bool msb_or_lsb)			
Purpose / functionality	This function transfers (xfers) / shifts out, from the virtual SIPO output pin array, all of the output pins associated with <u>all</u> banks, with the direction of shift out determined by the msb_or_lsb parameter. To note: 1. the msb_or_lsb parameter is either LSBFIRST or MSBFIRST, least significant bit or most significant bit, respectively 2. the function is equivalent to xfer_array()				
Return values	None				
	Example(s)				
my_SIPOs.xfe	r_banks(MS	SBFIRST)	;// transfers all banks to the physical SIPOs		

Туре	void Name xfer_bank					
Parameters	(uint8_t bank, bool msb_or_lsb)					
Purpose / functionality	This function transfers (xfers) / shifts out, from the virtual SIPO output pin array, all of the output pins associated with the specified bank, with the direction of shift out determined by the msb_or_lsb parameter. To note:					
	1. the msb_or_lsb parameter is either LSBFIRST or MSBFIRST, least significant bit or most significant bit, respectively					
Return values	None					
	Example(s)					
<pre>my_SIPOs.set bool msb_or_ // extract l uint16_t low uint16_t hig do { for (uint16 my_SIPOs. my_SIPOs. delay(100 my_SIPOs. my_SIPOs. my_SIPOs. }</pre>	<pre>ow and high absolute pin addresses from the bank data _pin = my_SIPOs.SIPO_banks[0].bank_low_pin; h_pin = my_SIPOs.SIPO_banks[0].bank_high_pin; _t pin = low_pin; pin <= high_pin; pin++) { set_array_pin(pin, HIGH);// as we know the pin's absolute address xfer_bank(0, msb_or_lsb);// xfer out the bank pins); set_array_pin(pin, LOW); xfer_bank(0, msb_or_lsb); b = !msb_or_lsb; // invert the direction of pin xfer</pre>					

Γ_	:		· · · · · · · · · · · · · · · · · · ·			
Туре	void Name print_pin_statuses					
Parameters						
Purpose / functionality	This function prints to the serial monitor the status of all output pins active/defined in the array. To note: 1. the output is show bank by bank, showing the status of each pin owned/defined by a bank 2. status bytes are printed, bit by bit, in standard convention starting with the most significant bit (MS)					
		_	etch snippet sets up 104 SIPO pins allocated into four differently			
		sized banks.				
Return values	None					
			Example(s)			
			,			
#define Max_ #define Max_ #define Num_	timers 4					
// initiate SIPO8 my_SIP			x SIPOs/timers required x_timers);			
// // bank_pins // [][0] = d // [][1] = c // [][2] = 1 // [][3] = n // [][4] = t	lata pin nu clock pin r atch pin r number SIPO	umber number number Os in th				
<pre>int bank_setup_data[Num_banks][5] = {</pre>						
4, 3, 2 5, 6, 7						
5, 6, 7, 2, -1, 8, 9, 10, 6, -1,						
11, 12, 13, 4, -1						
<pre>}; void setup()</pre>						
Serial.beg		0; bank	k < Num banks; bank++) {			
			= my_SIPOs.create_bank(
			<pre>bank_setup_data[bank][0], bank_setup_data[bank][1]</pre>			
			<pre>bank_setup_data[bank][1], bank setup data[bank][2],</pre>			
	bank_setup_data[bank][2], bank_setup_data[bank][3]);					
	if (bank setup data[bank][4] == create bank failure) {					
<pre>my_SIPOs.print_SIPO_data(); Serial.println(F("failed to create bank"));</pre>						
<pre>Serial.flush();</pre>						
_	<pre>exit(0);</pre>					
} }						
<pre>my_SIPOs.p randomSeed for (uint8</pre>	l(analogRea _t pin = (ad(A0));); pin <	<pre>< my_SIPOs.num_active_pins; pin++) {</pre>			
<pre>bool pin_status = random(LOW, HIGH + 1); my_SIPOs.set_array_pin(pin, pin_status); }</pre>						
<pre>my_SIPOs.print_pin_statuses(); // display status of all active pins</pre>						

```
void
                     Name
                            print pin statuses
Type
Example output from the above sketch snippet:
SIPO global values:
pins_per_SIPO = 8
max SIPOs
bank SIPO count = 13
num_active_pins = 104
num_pin_status_bytes = 13
next free bank = all SIPOs used
Number timers = 4
Bank data:
bank = 0
 num SIPOs =
                1
 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 7
bank = 1
 num SIPOs =
                 2
              7 clock_pin = 6 data_pin = 8 high_pin = 23
 latch pin =
 low pin =
bank = 2
 num SIPOs =
                 6
             10 clock_pin = 9 data_pin = 24 high_pin = 71
 latch pin =
 low pin =
bank = 3
 num SIPOs =
                 4
                13 clock_pin = 12 data_pin = 11
72 high_pin = 103
 latch pin =
 low pin =
Active pin array, pin statuses:
Bank 0: MS01110001LS
Bank 3: MS00011001000010111010000010001101LS
```

Parameters () Purpose / The function prints to the serial monitor the configuration data defined by the en user setup. This is a very useful function to use during development and debugging, and should removed once the code is robust. Return values None Example(s) The follow SIPO data is shown for a class initiation setup of: #define max SIPOs 7 #define max _timers 4 #define max _siPOs 7 #define max_timers 4 #define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins per SIPO = 8 max_SIPOs = 7 bank_SIPO count = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23 bank = 2	Туре	void	Name pri	nt_SIPO_data			
This is a very useful function to use during development and debugging, and should removed once the code is robust. Return values None Example(s) The follow SIPO data is shown for a class initiation setup of: #define max_SIPOs 7 #define max_timers 4 #define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my_SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank SIPO count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	Parameters	()					
This is a very useful function to use during development and debugging, and should removed once the code is robust. Return values None Example(s)	•	The function prints to the serial monitor the configuration data defined by the end					
removed once the code is robust. Return values Example(s)	functionality	user setup.					
removed once the code is robust. Return values Example(s)		,					
Example(s) The follow SIPO data is shown for a class initiation setup of: #define max_SIPOs 7 #define max_timers 4 #define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my_SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOS = 7 bank_SIPO_count = 7 num_active pins = 56 num_pin_status_bytes = 7 next free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOS = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOS = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23							
The follow SIPO data is shown for a class initiation setup of: #define max_SIPOs 7 #define max_timers 4 #define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my_SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOS = 7 bank_SIPO_count = 7 num_active pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOS = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOS = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	Return values	None					
<pre>#define max_SIPOs 7 #define max_timers 4 #define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my_SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0</pre>				Example(s)			
<pre>#define max_SIPOs 7 #define max_timers 4 #define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my_SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0</pre>	The follow SIP	O data is sh	own for a class	initiation setup of			
<pre>#define num_banks 3 // initiate the class for max SIPOs/timers required SIPO8 my_SIPOs(max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>	-	-					
// initiate the class for max SIPOs/timers required SIPO8 my_SIPOs (max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPOs = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	_	_					
SIPO8 my_SIPOs (max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOS = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOS = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOS = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	#define num_	banks 3					
SIPO8 my_SIPOs (max_SIPOs, max_timers); Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOS = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOS = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOS = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	// initiate	the class	for may STD	Os/timers requ	ired		
Output from a print_SIPO_data call following the above setup: SIPO global values: pins_per_SIPO = 8 max_SIPOS = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOS used Number timers = 4 Bank data: bank = 0 num_SIPOS = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOS = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23					IIeu		
SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	21100 m ₁ _311		100,	010//			
SIPO global values: pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23	Output from a	print_SIPO	_data call follov	ving the above set	up:		
<pre>pins_per_SIPO = 8 max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>	·			-	·		
<pre>max_SIPOs = 7 bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num_SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num_SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>							
<pre>bank_SIPO_count = 7 num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>							
<pre>num_active_pins = 56 num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>		•					
<pre>num_pin_status_bytes = 7 next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>							
<pre>next_free bank = all SIPOs used Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>			= 7				
<pre>Number timers = 4 Bank data: bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>		_					
<pre>bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>	_						
<pre>bank = 0 num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>	- 1						
<pre>num SIPOs = 2 latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>							
<pre>latch_pin = 2 clock_pin = 3 data_pin = 4 low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>		= 2					
<pre>low_pin = 0 high_pin = 15 bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>			clock pin =	3 data pin	=	4	
<pre>bank = 1 num SIPOs = 1 latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>							
<pre>latch_pin = 7 clock_pin = 6 data_pin = 5 low_pin = 16 high_pin = 23</pre>	_						
low_pin = 16 high_pin = 23							
					=	5	
bank = 2		= 16	$high_pin =$	23			
		4					
num SIPOs = 4			alogk nin -	0 doto of	_	0	
<pre>latch_pin = 10 clock_pin = 9 data_pin = 8 low pin = 24 high pin = 55</pre>	_				_	O	

T	int Name STPO8 timer elapsed					
Туре	Traine SIIOS_SIMOI_CIAPSCA					
Parameters	(uint8_t timer, uint32_t elapsed_time)					
Purpose /	This function determines if the specified timer has completed the <code>elapsed_time</code>					
functionality	parameter count.					
	To note:					
	1. the elaspsed_time parameter is the number of milliseconds to elapse					
Return values	The function returns the follow values:					
	1. if the timer is <u>active</u> and <u>has</u> elapsed, the return value is true (macro name of					
	elapsed)					
	2. if the timer is <u>active</u> and has <u>not</u> elapsed, the return value is false (macro					
	name of not elapsed)					
	3. if the timer is <u>not</u> active the function will return a value of false (macro name					
	of not elapsed)					
	Example(s)					
	pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively					
uint8_t pi	pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively $n0 = 0$;					
uint8_t pi uint8_t pi	pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively $n0 = 0$;					
uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S	pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively $n0 = 0$; $n3 = 3$;					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do {</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1);</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) {</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIPOs.S </pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1);</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIP my_SIP my_SIP my_SIP my_SIP my_SIP</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) { Os.invert_array_pin(pin0);</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIP my_SIP my_SIP my_SIP my_SIP my_SIP }</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) { Os.invert_array_pin(pin0); Os.xfer_bank(0, MSBFIRST); Os.SIPO8_start_timer(timer0); }</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIP my_SIP my_SIP my_SIP if (my_S if (my_S)</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) { Os.invert_array_pin(pin0); Os.xfer_bank(0, MSBFIRST); Os.SIPO8_start_timer(timer0); IPOs.SIPO8_timer_elapsed(timer1, 2000) == elapsed) {</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIP my_SIP my_SIP if (my_S my_SIP my_SIP my_SIP my_SIP my_SIP</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) { Os.invert_array_pin(pin0); Os.xfer_bank(0, MSBFIRST); Os.SIPO8_start_timer(timer0); IPOs.SIPO8_timer_elapsed(timer1, 2000) == elapsed) { Os.invert_bank_pin(0, pin3); Os.xfer_bank(0, MSBFIRST);</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIP my_SIP my_SIP if (my_S my_SIP my_SIP my_SIP my_SIP my_SIP</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) { Os.invert_array_pin(pin0); Os.xfer_bank(0, MSBFIRST); Os.SIPO8_start_timer(timer0); IPOs.SIPO8_timer_elapsed(timer1, 2000) == elapsed) { Os.invert_bank_pin(0, pin3); }</pre>					
<pre>uint8_t pi uint8_t pi my_SIPOs.S my_SIPOs.S do { if (my_S my_SIP my_SIP my_SIP if (my_S my_SIP my_SIP my_SIP my_SIP my_SIP</pre>	<pre>pin on pins 0 and 3, half cycle of 1 sec and 2 secs, respectively n0 = 0; n3 = 3; IPO8_start_timer(timer0); IPO8_start_timer(timer1); IPOs.SIPO8_timer_elapsed(timer0, 1000) == elapsed) { Os.invert_array_pin(pin0); Os.xfer_bank(0, MSBFIRST); Os.SIPO8_start_timer(timer0); IPOs.SIPO8_timer_elapsed(timer1, 2000) == elapsed) { Os.invert_bank_pin(0, pin3); Os.xfer_bank(0, MSBFIRST); Os.SIPO8_start_timer(timer1); </pre>					

Туре	void	Name	SIPO8 start timer		
Parameters	(uint8 t				
Purpose / functionality	This function will start an elapsing timer for the given timer parameter. As many timers may be used as defined as class initiation.				
	 To note: the library maintains eight macros that can be used by end user code, these being timer0, timer1,, timer7. For example if we wish to start timer 3, the call would be my_SIPOs.SIPO8_start_timer(timer3) the function marks the specified timer as active and records the millis time as the start of the elapse time count if the timer parameter is not valid, i.e. not in range of the defined number of timers, the call is ignored 				
Return values	None				
Reful II Values	None		Example(s)		
example 1:			example(s)		
// start all	timer = 0	; timer	<pre>c < max_timers; timer++) { (timer);</pre>		
example 2: my_SIPOs.SIP my_SIPOs.SIP	08_start_t	imer(ti	mer4);		
my_SIPOs.SIP	ov_start_t	.ımer(tı	mer/);		

		1			
Туре	void Name SIPO8_stop_timer				
Parameters	(uint8_t timer)				
Purpose /	This function stops an elapsing timer for the given timer parameter.				
functionality					
	To note:				
 the library maintains eight macros that can be used by end user code, the being timer0, timer1,, timer7. For example if we wish to stop 6, the call would be my_SIPOs.SIPO8_stop_timer(timer6) the function marks the specified timer as inactive 					
	3. if the timer parameter is not valid, i.e. not in range of the defined number of timers, the call is ignored.				
Return values					
			Example(s)		
example 1:			·		
 // stop all	timer = 0	O; time:	c < max timers; timer++) { timer);		
example 2:					
my_SIPOs.SIP					
<pre>my_SIPOs.SIP my_SIPOs.SIP</pre>					
	00_500p_0.	LINCL (CII	(CL /) /		

Private Functions

Туре	void	Name	shift out bank						
Parameters		data_pi	n, uint8_t clock_pin, uint8_t status_bits,						
	bool msb	or_lsb)							
Purpose /	The function shifts out (xfers) the given byte value parameter status_bits, to the								
functionality	associated 3-wire SIPO serial interface in the specified direction, determined by the								
	msb or ls	sb param e	eter. Note that this is a <u>private function and is not accessible</u> by						
	end user co	•							
	To note:								
	1. the ms	o or lsk	parameter is either LSBFIRST or MSBFIRST, least significant						
			ficant bit, respectively						
	2	.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Tion of the state						
Return values	Return values None								
			Example(s)						
			; // tell IC data transfer to start						
			< num_SIPOs_this_bank; SIPO++) {						
_	or_lsb == I								
SIPO_st } else {	atus_byte	= SIPO_	_first_status_byte + SIPO;						
	atus hyte	= SIPO	last status byte - SIPO;						
}	acus_bycc	5110_							
uint8 t sta	tus bits =	= pin st	catus bytes[SIPO status byte];						
			ock_pin, status_bits, msb_or_lsb);						
}	_								
digitalWrit	e(latch_pi	in, HIGH	H); // tell IC data transfer is finished						

Туре	void	Name	SIPO lib exit
	(uint8 t		
Parameters Purpose / functionality	This is a property of the construction of the	rivate function r function tures. The is found g your deminsufficient insufficient	iction and is called during the class initiation by the class in if the required memory cannot be acquired for the library's he function is not accessible by end user code. In then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 evelopment and testing. The possible error conditions/text are: I then alert output is directed to the serial monitor, set for 9600 error evelopment and testing. I then alert output is directed to the serial monitor, set for 9600 error evelopment and testing. I then alert output is directed to the serial monitor, set for 9600 error evelopment and testing error evelopment error ev
	rut of memory for setup-timers" remination reason not 0, 1 or 2: nspecified" gram will terminate with a reason exit code.		
Return values	None		
			Example(s)
SIPO_lib_exi	t(1); //	cant map	status bytes

Corollary

As the SIPO8 library developed and grew to fulfil its design objectives, it became clear that it was able to also support new features not foreseen at the outset. One such unforeseen feature is SIPO bank interleaving.

SIPO bank interleaving allows us to define any number of banks (of the same size, i.e. the number of physical SIPOs in a bank) to the <u>same</u> physical 3-wire microcontroller digital interface. In this way we can maintain a number of different SIPO bank output pin configurations for the <u>same physical SIPO bank</u> and xfer each or any of these independently as appropriate for our purposes.

For a simple example of SIPO bank interleaving see <u>Tutorial 5</u>.

Tutorials

In addition to the example sketches provided below, a number of tutorials have been developed to further aid understanding in how the SIPO8 library may be utilised. The tutorials build one on another so that by the end of the full course the reader should be well armed to use the library in depth and with great effect. If you are wish to start at more sedate pace then look at the tutorials before tackling the examples below.

Tutorial	Title	Theme/Topic
Tutorial 1	Setup & Absolute Addressing	Introduces how to set up the library's class and covers absolute addressing of SIPO outputs, using a single SIPO IC
Tutorial 2	Relative Addressing	Introduces relative addressing of SIPO outputs through the construct of SIPO banks, using a single SIPO IC
<u>Tutorial 3</u>	Using Timers	Covers the principles of using the SIPO8 library timer capabilities, again using a single SIPO IC
Tutorial 4	Cascading SIPOs	Guides the reader through creating a two SIPO bank in a cascade. The principles covered then allow SIPO banks of any size to be created through straight forward extension of SIPO ICs but with very little change to the driving software sketch
Tutorial 5	Bank Interleaving	The tutorial looks at the feature of bank interleaving where it is possible to map any number of SIPO banks of the same size to the <u>same</u> 3-wire digital interface, bringing banks 'into play' as required.
<u>Tutorial 6</u>	Q & A	This tutorial provides answers to specific questions concerning "how do I", "how can I", etc.


Example Sketches

The following example sketches help to illustrate some of the basic features of the SIPO8 library. The sketches may be downloaded from github by following the links with each example sketch.

In summary, the example sketches demonstrate use of the library to:

- Flash eight LEDs at independent frequecies using SIPO8 library timers, employing relative output pin addressing within a bank
- Strobe a bank of LEDs, employing absolute output pin addressing
- Chasing LEDs, as might be seen on a clock dial, running around its circumference, with each LED indication the passing of one second
- Drive a 7 segment LED matrix display, highlighting the different shift out directions

Before jumpling straight into the examples, prepare the basic components needed for each example. The components (swap out the suggested 180 ohm resistors for 220 ohm resistors) and wiring scheme for the first three example sketches are:

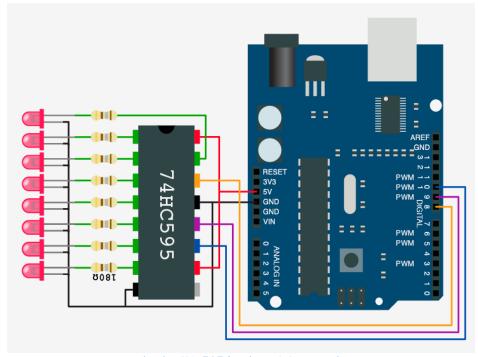

Standard 74HC595/Arduino Wiring Scheme

For the final example, 7 segment LED matrix display, use the same layout as above but remove the LEDs. See the example for pin connections between the 74HC595 and the 7 segment LED matrix.

Sketch Example - Flashing LEDs, Absolute Addressing

In this sketch we demonstrate absolute addressing functions to update the SIPO virtual output pin array, having firstly created a single SIPO bank as per definitions below. Each physical SIPO output pin will have a LED connected and will be associated with its own SIPO8 timer so that it may be flashed with an independent frequency. Further use of the SIPO8 timer features is also made by running the sketch for a predefine period of time.

Note that the following changes may be made as desired:

- 1. The frequency of each of the eight LEDs may be independently varied in the presets of the array 'timer intervals'
- 2. The order in which LEDs are processed may be made by changing the order of the presets in the array 'timer pins'
- 3. The time for which the demonstration runs may be varied by altering the macro definition '#define demo_time' to any period in milliseconds.

Project	: Ske	tch Exan	nple – Flashin	Date:	April 2021				
U:	ser Defi	ned Para	meters	create_bank Results			Comments		
C	ontrol Pi	Pins Num SIPO		Bank First		l and			
Data	Clock	Latch	ICs in Bank	Num	First Pin	Last Pin	Comments		
8	10	9	1	0	0	7	Eight connected LED	s, one to	each SIPO pin
							and each LED will hav	ving its ov	vn timer

Download this example from github.

```
SPIC global values:

pins_per_SPIC = 8

max_SPICs = 1

bank_SPIC_count = 1

num_active_pins = 8

num_pin_status_bytes = 1

next_free bank = all SPICs used

Number timers = 9

Bank data:

bank = 0

num_SPICs = 1

latch_pin = 9 clock_pin = 10 data_pin = 8

low_pin = 0 high_pin = 7
```

```
//
// Flash LEDs -
// This sketch independently flashes eight LEDs each connected to a SIPO o/p pin,
// each at a different frequency, using SIPO8 library timers.
// The demonstration runs for a fixed time before terminating, again this being
// controlled by a SIPO8 library timer.
//
// This example uses absolute array pin addressing.
//
// Ron D Bentley, Stafford, UK
// April 2021
//
// This example and code is in the public domain and
```

```
// may be used without restriction and without warranty.
#include "ez SPIC8 lib.h"
#define Max SPICs 1
#define Max timers 9 // we will create 9 timers, 0-7 for LEDs and 8 for our timing
#define my timer 8 // we will use SPIC8 timer 8 for timing our demonstration
#define number banks
                       1 // demonstration using 1 bank
                   20000 // time in milliseconds flash demonstration to run for
#define demo time
int bank0 id;
// setup pin/LED flash data
uint8_t timer;
uint32 t timer intervals[Max timers] = {
// millisecond elapse timer values for each timer, 0 - 7
300, 400, 500, 600, 700, 800, 900, 1000
};
uint8 t timer pins[Max timers] = {
 // SPIC output pin absolute addresses for timers 0 - 7
 0, 1, 2, 3, 4, 5, 6, 7
};
SPIC8 my SPICs (Max SPICs, Max timers); // initiate the class for max SPICs/timers
void setup() {
  Serial.begin(9600);
  // create a single bank, params are:
// data pin, clock pin, latch pin, number of SPICs this bank
 bank0 id = my_SPICs.create_bank(8, 10, 9, number_banks);
  if (bank0 id == create bank failure) {
    Serial.println(F("\nfailed to create bank"));
    Serial.flush();
    exit(0);
  // print the bank data for confirmation/inspection
 my_SPICs.print_SPIC_data();
void loop() {
  // now lets add in the flashing LED code from Tutorial 3
  // start by setting all SPIC outputs to low (off)
 my_SPICs.set_all_array_pins(LOW);// set all declared virtual output pins LOW/off
 my_SPICs.xfer_array(LSBFIRST); // move virtual pins to real SPIC output pins
 my_SPICs.SPIC8_start_timer(my_timer); // start my timer
  // keep processing until our my_timer has elapsed
  // start all timers
  for (timer = 0; timer < Max timers - 1; timer++) {</pre>
   my_SPICs.SPIC8_start_timer(timer);
  timer = 0; // start checking at first timer
    // check each timer for elapse and, if elapsed, invert the timer's output pin
    // and reset the timer
    if (my SPICs.SPIC8 timer elapsed(timer, timer intervals[timer]) == elapsed) {
     my SPICs.invert array pin(timer pins[timer]); // invert the pin associated
with this timer
     my_SPICs.xfer_array(MSBFIRST);
                                              // update physical SPIC outputs
     my SPICs.SPIC8 start timer(timer);
                                           // reset/restart the current timer
   timer++; // move on to next timer
    if (timer >= Max_timers - 1) timer = 0; // wrap around to beginning
} while (my_SPICs.SPIC8_timer_elapsed(my_timer, demo_time) != elapsed);
 //
  // end of LED flash demonstration - now clear down LEDs to off(LOW)
 my_SPICs.set_all_array_pins(LOW);// set all declared virtual output pins LOW/off
 my SPICs.xfer array(LSBFIRST); // move virtual pin statuses to real SPIC output
pins
 exit(0);
```

Sketch Example - Strobing LEDs, Relative Addressing

In this sketch we demonstrate relative addressing functions to update the SIPO virtual output pin array, having firstly created a single SIPO bank as per definitions below. Each physical SIPO output pin will have a LED connected and the entire bank will be strobed at the given frequency.

Note that the following changes may be made as desired:

1. The frequency of the SIPO bank strobe is determined by the macro '#define strobe_frequency'. This may be varied for different rates of strobing

Project	Sketch Example - Strobing LEDs, Relative Addressing								April 2021
U.	ser Defi	ned Para	meters	create_bank Results					
C	ontrol Pi	trol Pins Num SIPO		Donle	Bank First Num Pin	Last Pin	Commonts		
Data	Clock	Latch	TCs in				Comments		
8	10	9	1	0	0	7	Eight connected LED	s, one per	SIPO pin

Download this example from github.

```
SIPO global values:

pins_per_SIPO = 8

max_SIPOs = 1

bank_SIPO_count = 1

num_active_pins = 8

num_pin_status_bytes = 1

next_free bank = all SIPOs used

Number timers = 0

Bank data:

bank = 0

num_SIPOs = 1

latch_pin = 9 clock_pin = 10 data_pin = 8

low_pin = 0 high_pin = 7
```

```
//
//
    Strobe -
    This sketch strobes a number of LEDs driven by a SIPO IC, 8 output pins
//
    forwards and backwards at a defined frequency.
//
//
    This example uses relative bank addressing.
//
    Ron D Bentley, Stafford, UK
//
    April 2021
//
11
    This example and code is in the public domain and
     may be used without restriction and without warranty.
#include <ez SIPO8 lib.h>
#define Max_SIPOs 1 // 1 x SIPOs - provides 8 output pins
#define Max timers 0 // no timers required, will use delay
#define data pin
#define clock_pin 10
#define latch pin
#define strobe_frequency 50 // milliseconds, delay frequency
```

```
// initiate the class for max SIPOs/timers required
SIPO8 my_SIPOs(Max_SIPOs, Max_timers);
int bank id; // used to keep the SIPO bank id
void setup() {
 Serial.begin(9600);
  // create a bank of 'Max SIPOs' using create bank function:
 bank_id = my_SIPOs.create_bank(data_pin, clock_pin, latch_pin, Max_SIPOs);
 if (bank id == create bank failure) {
   Serial.println(F("\nfailed to create bank, terminated"));
   Serial.flush();
    exit(0);
  // start by setting all SIPO outputs to low (off) in the SIPO bank
 my_SIPOs.set_bank_SIPO(bank_id, 0, 0b00000000); // only 1 SIPO in bank,, index 0
 my_SIPOs.xfer_bank(bank_id, MSBFIRST);
  // print the bank data for confirmation/inspection
my_SIPOs.print_SIPO_data(); }
void loop() {
  //strobe example, strobe bank_id pins forward and back
 bool msb_or_lsb = MSBFIRST; // pick an initial strobe direction
 int pins in bank = my SIPOs.num pins in bank(bank id); // number SIPO output pins
in this bank
  if (pins in bank > 0) {
   do {
     for (uint16_t pin = 0; pin < pins_in_bank; pin++) {</pre>
        my_SIPOs.set_bank_pin(bank_id, pin, HIGH); // set next strobe pin
       my_SIPOs.xfer_bank(bank_id, msb_or_lsb); // update physical SIPO bank
        delay (strobe frequency);
       my_SIPOs.set_bank_pin(bank_id, pin, LOW); // clear next strobe pin
       my_SIPOs.xfer_bank(bank_id, msb_or_lsb); // update physical SIPO bank
     msb or lsb = !msb or lsb; // switch strobe direction
    } while (true);
  } else {
   Serial.println(F("\nbank not found, terminated"));
    Serial.flush();
    exit(0);
```

Sketch Example - Clock Chasing Second LEDs

In this sketch we demonstrate a chasing LED effect to represent the passing of each second on a clock face, with one LED representing one second. Hence the sketch will be designed with eight SIPO ICs, giving a total of 64 output pins, although we will limit the sketch to the first 60 of these. Each LED will be illuminated for each passing second until all 60 have been lit (one minute), after which all LEDs will be extinguished and the cycle restarted.

Although the sketch is initially designed as a clock second chaser, it may be adjusted for the number of LEDs chased (up to 64 without adding more SIPO ICs) and the frequency at which LED illumination occurs. To make these changes vary the macro definitions:

- 1. '#define chase length' set this from 0 64 output pins
- 2. '#define frequency' set this to be the frequency at which LED illumination is to occur

Note that this example uses absolute addressing functions. As an exercise, make changes to use relative addressing functions (see previous sketch example - Strobing LEDs, Relative Addressing).

Project	: Ske	tch Exan	nple – Clock C	Date:	April 2021				
U	User Defined Parameters			create_bank Results					
C	ontrol Pi	rol Pins Num SIPO		Bank First Last		Comments			
Data	Clock	Latch	ICs in Bank	Num	Pin	Pin	Confinents		
8	10	9	8	0	0	63	Eight SIPO ICs in a	single ban	k with LEDs
							connected to first 60	O output p	oins. Timing
							driven by SIPO8 tim	er0.	
				·					

Download this example from github.

```
SIPO global values:

pins_per_SIPO = 8

max_SIPOs = 8

bank_SIPO_count = 8

num_active_pins = 64

num_pin_status_bytes = 8

next_free bank = all SIPOs used

Number timers = 1

Bank data:

bank = 0

num_SIPOs = 8

latch_pin = 9 clock_pin = 10 data_pin = 8

low_pin = 0 high_pin = 63
```


```
//
11
     Chasing LEDs -
11
     This sketch illuminates a defined sequential array of LEDs connected to
11
     SIPO output pins, at a specified frequency (milliseconds).
     At the end of the LED sequence, the LEDs are reset and the
//
     cycle repeated.
//
11
     The sketch can be configured for a SIPO array of any length, but this
//
     example is configured to demonstrate the chasing LEDs of a clock dial.
//
     In this instance the SIPO array length will be 64 output pins (8 x SIPOs)
//
     but only the first 60 outputs will be used (0-59 seconds). The frequency
//
     will be set to 1 second (1000 millisecs).
     This example uses absolute addressing of the defined SIPO array.
//
//
     Ron D Bentley, Stafford, UK
//
     April 2021
11
11
     This example and code is in the public domain and
11
     may be used without restriction and without warranty.
//
#include <ez SIPO8 lib.h>
#define Max SIPOs 8 // 8 x SIPOs - provides 64 output pins
#define Max timers 1 // used to count 1 second elapsing 'beats'
#define data pin
#define clock_pin 10
#define latch_pin
#define chase_length 60 // chasing seconds on a clock
                     1000 // milli seconds - 1 second frequency
#define frequency
// initiate the class for max SIPOs/timers required
SIPO8 my SIPOs (Max SIPOs, Max timers);
int my LEDs; // used to keep the SIPO bank id
void setup() {
  Serial.begin (9600);
  // create a bank of 'Max SIPOs' using create bank function:
  my_LEDs = my_SIPOs.create_bank(data_pin, clock_pin, latch_pin, Max_SIPOs);
  if (my LEDs == create bank failure) {
    Serial.println(F("\nfailed to create bank"));
    Serial.flush();
    exit(0);
  // start by setting all SIPO outputs to low (off)
  my SIPOs.set all array pins(LOW);
  my SIPOs.xfer array(MSBFIRST);
  // print the bank data for confirmation/inspection
  my SIPOs.print SIPO data();
void loop() {
  uint8 t next pin = 0;
  my SIPOs. SIPO8 start timer(timer0); // kick off the timer
    if (my SIPOs.SIPO8 timer elapsed(timer0, frequency) == elapsed) {
      // 1 second time elapsed, so update next pin in the array
      my_SIPOs.SIPO8_start_timer(timer0); // restart 1 second count for next cycle
      if (next_pin == chase_length) {
                                         // wrap around
        my_SIPOs.set_all_array_pins(LOW); // clear all pins
        next pin = 0;
      } else {
        my SIPOs.set array pin(next pin, HIGH); // set absolute next pin pin status
      my SIPOs.xfer array(MSBFIRST); // update physical SIPOs
  } while (true);
```

Sketch Example - 7 Segment LED Matrix

We finish our example sketches with a look at connecting and driving a 7 segment LED matrix display, common cathode, from a single SIPO IC (74HC595). As a twist, and for your future reference and use, the example drives a 7 segment LED matrix in two directions, MSBFIRST and LSBFIRST. This requires \underline{two} different character bit patterns definitions, defining each of the 17 characters that the display will support (0 to hex F, plus DP ".").

The character bit patterns are stored as unsigned byte arrays, one representing the MSBFIRST character patterns and the other the LSBFIRST character patterns.

The pin outs for the SIPO IC (74HC595) and the 7 segment LED matrix are:

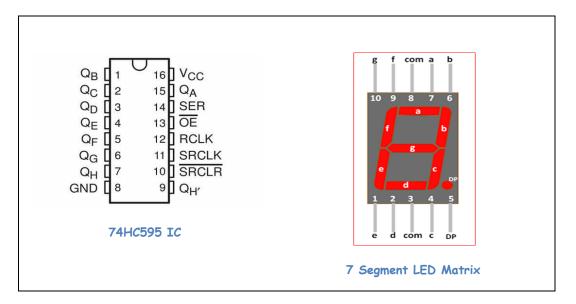

This example uses the same basic components/wiring scheme as for the previous examples except that the LEDs are removed and connection made to the 7 segment LED matrix as per table below. Note that each pin of the matrix connects to a corresponding pin of the 74HC595 IC, but after each of the 220 ohm resistors. Position the 7 segment LED matrix conveniently on your breadboard to aid wiring.

The pin to pin connections are:

Project	: Ske	Date: April 2021					
User Defined Parameters				create_bank Results			
Data	ontrol Pi Clock	ns Latch	Num SIPO ICs in Bank	Bank Num	First Pin	Last Pin	Comments
8	10	9	1	0	0	7	Pin mappings 74HC595

Download this example from github.

```
SIPO global values:
pins per SIPO
max SIPOs
bank_SIPO_count = 1
num_active_pins = 8
num_pin_status_bytes = 1
next free bank = all SIPOs used
Number timers = 0
Bank data:
bank = 0
 num SIPOs = 1
               clock pin = 10 data pin =
 latch pin = 9
low_pin = 0 high_pin =
    7 Segment LED Matrix -
    Sketch uses a single SIPO IC to map the 7 segment matrix and creates
```

```
11
//
     a single bank comprising one SIPO IC.
//
     This sketch drives a single 7 segment LED matrix, displaying digits
//
     from 0 to hex F, in two repeating cycles:
//
     1. cycle 1 - shifting out the most significant bit first (MSBFIRST), with each
        character appended with the DP character ".", eg "3."
//
//
//
//
//
//
     2. cycle 2 - shifting out the least significant bit first (LSBFIRST), without
        the DP character appended.
     The sketch offers two methods for updating a 7 Segment LED Matrix, choice
     is a simple matter a preference/familiarity.
     This example uses relative bank addressing.
     Ron D Bentley, Stafford, UK
     April 2021
//
//
     This example and code is in the public domain and
     may be used without restriction and without warranty.
```

```
#include <ez SIPO8 lib.h>
#define max_SIPOs 1 // one 1 SIPO for this example
#define max timers 0 // no timers required
// initiate the class for max SIPOs/timers required
SIPO8 my SIPOs (max SIPOs, max timers);
int my matrix7; // used to keep the SIPO bank id
#define num digits
                    16
uint8 t LSB matrix chars[num digits] = {
 252, 96, 218, 242, 102, 182, 190, 224, 254, 246, 238, 62, 156, 122, 158, 142
#define LSB DP char 0b00000001 // "." value for LSBFIRST shiftout
uint8_t MSB_matrix_chars[num_digits] = {
 63, 6, 91, 79, 102, 109, 125, 7, 127, 111, 119, 124, 57, 94, 121, 113
};
#define MSB DP char 0b10000000 // "." value for MSBFIRST shiftout
void setup() {
 Serial.begin (9600);
  // create a bank of 1 SIPO using create_bank function:
  // data pin, clock pin, latch pin, number of SIPO this bank
my_matrix7 = my_SIPOs.create_bank(8, 10, 9, 1); // data pin, clock pin, latch
pin, number of SIPO this bank
 if (my_matrix7 == create bank failure) {
    Serial.println(F("\nfailed to create bank"));
    Serial.flush();
   exit(0);
  \ensuremath{//} print the bank data for confirmation/inspection
 my SIPOs.print SIPO data();
void loop() {
  // keep running through the digits 0 to hex F, as defined by the
  // bit patterns in the preset array MSB /LSB matrix chars
  do {
    // cycle 1 - MSBFIRST, with appended DP character "."
   my SIPOs.set bank SIPO(my matrix7, 0, 0b00000000); // reset all LEDs in the
matrix to off/LOW
   my_SIPOs.xfer_bank(my_matrix7, MSBFIRST);
    delay(50);
    for (uint8_t digit = 0; digit < num_digits; digit++) {</pre>
     my_SIPOs.set_bank_SIPO(my_matrix7, 0, MSB_matrix_chars[digit] + MSB_DP_char);
// append "."
     my_SIPOs.xfer_bank(my_matrix7, MSBFIRST);
      delay(500);
    // cycle 2 - LSBFIRST, no appended DP character
   my SIPOs.set bank SIPO(my matrix7, 0, 0b00000000); // reset all LEDs in the
matrix to off/LOW
   my SIPOs.xfer bank(my matrix7, LSBFIRST);
    delay(50);
    for (uint8_t digit = 0; digit < num_digits; digit++) {</pre>
     // if DP char "." required to be appended to a char, then add 'LSB_DP_char'
      // to the 'LSB matrix chars[digit]' parameter
      my_SIPOs.set_bank_SIPO(my_matrix7, 0, LSB_matrix_chars[digit]);
      my_SIPOs.xfer_bank(my_matrix7, LSBFIRST);
      delay(500);
  } while (true);
```