
Arduino/ESP 32 Microcontrollers

ez_switch_lib - Switch Library User Guide

A Library Supporting the Reading of Multiple
Mixed-type Simple Switches & Circuits
with Arduino & ESP 32 Microcontrollers

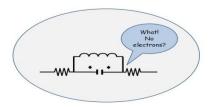

Author: R D Bentley, Stafford, UK.

Version 3.00

Warranties & Exceptions

This document and its content are in the public domain and may be used without restriction and without warranty.

Change Record

Doc Ref / Version	Date	Change
1.02	March 2021	Initial version published
1.03	March 2021	Addition of new library variable (last switched id),
		plus example of its use in sketch with multiple buttons
		all linked to a single interrupt handler.
1.04	July 2021	Correction to Corollary ISR example.
3.00	Sept 2022	Addition of new library functions –
		<pre>reset_switch, reset_switches,</pre>
		button_is_pressed (overloaded function).

ARDUINO/ESP 32 - Switch Library User Guide

Contents

Warranties & Exceptions	2
Change Record	2
Introduction	4
Overview	4
Design Objectives	5
Constraints & Limitations	5
Switch Types Supported	6
Common Switch Wiring Schemes	
Using the <ez lib="" switch=""> Library</ez>	
To Know	
Accessing the <ez lib="" switch=""> Library</ez>	
Steps to Successful Use	
Specifications	
Specifications – Switch Control Structure (SCS)	
Specifications - Reserved Macro Definitions and Other Declarations	
Other Declarations	
Specifications - Switch Control Functions	
add switch	
link switch to output	
num_free_switch_slots	
read switch	
read_button_switch	.19
read_toggle_switch	.19
reset_switch	. 20
reset_switches	.20
button_is_pressed	.21
button_is_pressed	
print_switch	. 23
print_switches	. 24
set_debounce	
Example Sketches	
Example 1.1 - Turning LED On/Off With a Button Switch, Directly Coded	26
Example 1.2 - Turning LED On/Off With a Button Switch, Indirectly Coded	28
Example 2.1 - Turning LED On/Off With a Toggle Switch, Directly Coded	
Example 2.2 - Turning LED On/Off With a Toggle Switch, Indirectly Coded	32
Example 3.1 - Turning Multiple LEDs On/Off With Multiple Button & Toggle Switches, Directly	
Coded	34
Example 3.2 - Turning Multiple LEDs On/Off With Multiple Button & Toggle Switches, Indirectly Coded	27
Example 4 – Processing More Button & Toggle Switches	
Example 5 – Using the Libraries Switch Structure Variables	
Corollary	
Switch Mismatching	
Buttons as a Toggles	
Many Switches, One Interrupt Service Routine (ISR)	
to the second contract contract to the second contract to th	

Introduction

Implementing switches, of any type, can be troublesome as not all switches are equal! Some are 'fleeting' or momentary, like button switches, and some are simply either on or off until they are 'flipped' at their next actuation. Button switches are fairly standard in their design, but toggle type switches are many varied – simple toggle, slide, tilt, rotary, etc. If you are incorporating switches into your projects then issues such as switch design, transition 'noise' and wiring schemes will all come into play at some point in a project's design.

The good news is that both types of switch can be brought to heel by the $<ez_switch_lib>$ library which provides a simple to use, no frills, software solution for connecting a mix of switch types wired in a variety of circuit schemes. The end result is that, by using the $<ez_switch_lib>$, the only components required are switches, connecting wires and, if wished, 10k ohm pull down resistors. However, even the 10k ohm resistors can be left out by choice of the right circuit (see below, Common Switch Wiring Schemes).

This User Guide (UG) describes the <ez_switch_lib> library for Arduino and ESP 32 microcontrollers, detailing the functions and definitions available to the end user for implementing switches of either style and in a choice of wiring schemes - any number of switches of any style and of varying common wiring designs may be configured, the only limitation being the number of digital pins available.

However, before continuing, if you would like to understand a little about the issues associated with switches have a look at the tutorial <u>Understanding & Using Button Switches</u>. Although it is centred on the simple button switch, the basics are also common to toggle switches.

Overview

This UG provides information and guidance that will prove helpful in understanding the capabilities of the switch library, <ez_switch_lib>, in designing and implementing projects using switches, single or multiple of varying types.

The UG gives information and explanations of:

•	Design objectives	what was sought.
•	Constraints & limitations	it is vitally important to understand any constraints and limitations that the library imposes/suffers, as these may play a part in the way in which you utilise the library.
•	Types of switch supported	there are many types of switch available. Those suitable for use with the library are highlighted.
•	Common wiring schemes	again there are many ways in which a switch may be wired. The library has been designed to support the two of the most common wiring schemes to be used for any switch type. The approach is to minimise any additional hardware components used.
•	Using the library	describes how the library should be (can be) incorporated into your projects.

Declarations &

provides a list of all of the library's switch macro definitions and

ARDUINO/ESP 32 - Switch Library User Guide

definitions control struct(ure) available to the end user to incorporate into their sketches.
 Function specifications each of the library's functions is detailed with an example in its use. Any specific points of note are also provided.
 Example sketches are provided, building from single button and toggle switches to multiple switch types using both circuit schemes and using different programming techniques to declare and use switch data.

An accompanying Crib Sheet is also available and, hopefully, it and this UG will become a 'one-stop-shop' to help the end user supplement understanding in the application of switches and the library's capabilities.

Design Objectives

At the outset a number of key objectives were established for the design of the switch library, these being a library that provided/supported:

- a simple, logical and straight forward design
- ease of end user project switch configuration, irrespective of type and number of switches or how connected (wired)
- different switch types the ubiquitous button switch and a variety of different types of toggle switch
- support for common wiring schemes simply connected with or without a 10k ohm pull down resistor
- mixed switch/circuit implementations support for a mix of switch types and wiring schemes
- software auto-debounce of noisy switch transitions removing from end user design consideration issues relating to noisy switch transition by incorporating transparent debounce features
- one switch read function irrespective of switch type or wiring scheme providing a simple to use function to read any and all switches
- allowing the optional linking of switches to a digital output such that auto-switching of the output can occur without end user programmatic coding
- developing a user guide that is informative and such that it is easy to 'dip' into.

Constraints & Limitations

Nothing in this world is perfect and <ez_switch_lib> is far from that. Whilst it does provide a set of useful capabilities to aid and assist Arduino project developers involving switches, there are several constraints and limitations in its design and use to be aware of:

- 1. Every switch to be configured requires its own digital pin. Whilst this is not an issue for say, a mega 2560 microcontroller, lesser boards are more constraining in the number of digital pins they support. Certainly for UNO microcontrollers and better, there should not be a practical issue in mapping switches to digital pins for most switch hungry projects.
- 2. Development of the library was limited to six switches (see ez_switch_lib Example 4)

- two x button switches wired with a 10k ohm pull down resistor
- one x button switches wired without a 10k ohm pull down resistor
- two x toggle switches wired without a 10k ohm pull down resistor
- one x toggle switches wired with a 10k ohm pull down resistor

but, there is no reason to believe that more could not be configured within the limits of the chosen microcontroller.

- 3. For every switch configured, 12 bytes of free memory will be allocated at run time when the <ez_switch_lib> class is initiated. This memory requirement is in addition to the size of the compiled sketch.
- 4. The period of time defined for switch noise debounce is global and applicable to all switches, irrespective of type. It is preset 'out of the box' (OOTB) to 10 milliseconds but it may be programmatically adjusted by the end user code, as required (see function set debounce, below).
- 5. The library supports two simple and commonly seen switch wiring schemes (see Common Switch Wiring Schemes), these being without the use of any hardware components other than, optionally, 10k ohm resistors. Even these can be dispensed with! Having said that, the library should also support (but not tested) switches connected with hardware debounce circuits. If this is the case then set the software debounce period to 0 milliseconds (see function set debounce, below).
- 6. For switches to be responsive in something like real-time, they need to be tested frequently and, for button switches particularly, processed when a switch cycle is detected. However, toggle switches may have their current status examined at any point and any time. A software design based on a switch polling loop should be an ideal harness to ensure continuous switch testing and processing.

Switch Types Supported

There are so, so many switches available, many for specific purposes but most of a general nature and suitable for the majority of needs.

The switch library was developed to support two types of common and general use switches – button, or momentary switches, and toggle switches. Of course this latter type of switch, toggle, itself comes in all kinds of designs, for example, simple single lever, pop-on pop-off, rotary, slide, tilt, etc.



Examples of common types of switch


The principal distinction between button (momentary) and toggle type switches is that button switches have a switch cycle of OFF-ON-OFF which signifies switch activation, whereas toggle switches go through either OFF-ON or ON-OFF representing two distinct and separate switch transitions. The status of toggle switches therefore persists after being

physically switched – they stay ON or OFF. <ez_switch_lib> automatically handles these physical characteristics.


Common Switch Wiring Schemes

If you now appreciate the differences between switch types, it is necessary to understand how they should be connected to the microcontroller and the differences between commonly seen switch wiring schemes <u>without</u> hardware debounce.

For Arduino AND ESP 32 microcontrollers:

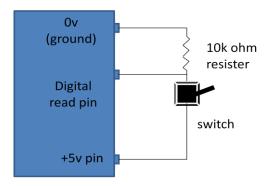


Arduino Microcontroller

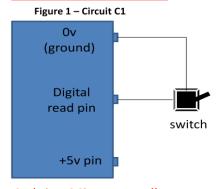

Arduino Microcontroller

Figure 2 – Circuit C2

And for ESP2 microcontrollers only:

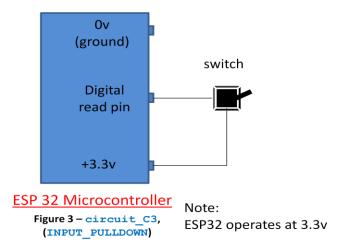

<u>All</u> circuit styles can be used for <u>either</u> type of switch, but the key to configuring correctly lies in the way they are software configured via the <u>pinMode</u> function, as follows.

A Library Supporting the Reading of Multiple, Mixed-type Simple Switches & Circuits

- circuit_C1 (Arduino AND ESP 32) the pinMode setting for initialising circuit_C1 is pinMode (<pin>, INPUT). This has the effect of setting the digital pin <pin> to 0v, representing 'off'. The 10k ohm pull down resistor is essential and ensures that the pin stays at 0v until switched, otherwise the input pin will be susceptible to spurious firing from extraneous fields. When the switch is actuated the input rises to +5v which will be detected as the switch transitioning to 'on'.
- circuit_C2 (Arduino AND ESP 32) the pinMode setting is pinMode (<pin>, INPUT_PULLUP). This brings into play an internal microcontroller pull up resistor resulting in the digital pin floating at 5v, representing 'off'. No external resistor is required and when the switch is actuated the pin will be brought to 0v which will be detected as the switch transitioning to 'on'.
- circuit_C3 (ESP 32 only)- the pinMode setting is pinMode (<pin>, INPUT_PULLDOWN). This brings into play an internal microcontroller pull down resistor resulting in the digital pin being at 0v, representing 'off'. Like circuit_C1, when the switch is actuated the input rises to +5v which will be detected as the switch transitioning to 'on'. Note that if circuit_C3 is referenced in a sketch and compiled for an Arduino microcontroller then this will be converted to circuit C1 (i.e. INPUT).

Using the <ez_switch_lib> Library

To Know...

The switch reading functions of the library <ez_switch_lib> are functions that read the microcontroller's digital pins as inputs. At the heart of these functions lies the use of the general digitalRead function. So, if that is the case, why do we need other functions to read digital pins?

Well, there are several reasons:

- not all switches are the same, there is a difference between how button and toggle switches behave
- when switches transition to on/off, off/on (toggle switches) or off/on/off (button switches) they do so in a small finite time during which they will often generate 'noise' which can be read as a spurious signal and confuse the calling code logic
- switches may be wired in different ways which can reverse the logical understanding what the meaning of 'on' and 'off' depending on the wiring scheme, a LOW signal can mean 'on' and a HIGH signal 'off' and vice versa.

In short, and as previously stated, switches can be troublesome for the uninitiated! The <ez_switch_lib> library switch read functions deal with all of the above issues, so we can concentrate purely on what we want switches to do for us.

A Library Supporting the Reading of Multiple, Mixed-type Simple Switches & Circuits

There are three <ez switch lib> library functions we can use to read a switch, once it is declared to the library class. These are:

- read button switch
- read toggle switch
- read switch

All have the same single parameter (switch id) and return values (see Specifications - Switch Control Functions) but behave in different ways.

The first two functions are obvious in their purpose – they allow us to read (test) a button switch and toggle switch respectively. However, the third function, read switch, is 'agnostic' and may be used without regard to what type of switch is connected. It should be the principal read function in use in your sketch as it will manage switch type itself. This function also has other capabilities involving linked outputs (see later).

All of these functions return a value of switched or !switched (not switched), a little like the digitalRead return values of HIGH and LOW.

However, the <ez switch lib> library functions provide additional information that is useful to the programmer:

For button switches, the programmer can access a library variable that will indicate if a button switch is in transition (off-on-off cycle active and pending completion). The library variable is <class name>.switches[switch id].switch pending, where <class name> is the name you have given to the library's Switches class when you declared/initiated it. The permissible values of this variable are either true or false. For example:

```
my switches.read switch(button id); // test switch
if (my switches.switches[button id].switch pending == true) {
  // switch is in transition, so take it as on until not pending...
```

Alternatively, with version 3.00, we also have a supplemental and specific function for testing switch transition (button switches ONLY) - button is pressed. See the description of this function below and how it may be used.

For toggle switches, we also have access to the same switch pending, switch in transition, variable as above, but also an additional one. Recall that toggle switches are either one state (on/off) or the other until they are actuated (flipped). We therefore need to be able to test what the current/now setting of a toggle switch may be, that is, its current status. We may similarly do this as follows:

```
my switches.read switch(toggle id); // test switch
if (my switches.switches[toggle id].switch status == on) {
  // switch is currently on...
```

The permissible values of this variable are on or !on (off).

ARDUINO/ESP 32 - Switch Library User Guide

See Example 5 which shows a sketch employing the above to implement a routine to increment hours and minutes of an external clock/timer, working both in single-shot and continuous advance modes.

Finally, the two <code><ez_switch_lib></code> library functions - <code>read_button_switch</code> and <code>read_toggle_switch</code>, will operate in the same way as <code>read_switch</code> but specifically for each type of switch only. In addition, if you use these two read functions and your switches have linked outputs then these outputs will <code>not</code> be processed. Only the <code>read_switch</code> function will process any linked switch output (see Specifications - Switch Control Functions).

Hopefully, you are now better informed to make good use of the <ez_switch_lib> library and its data structures and functions, all of which are documented below – see Specifications and Example Sketches.

Accessing the <ez_switch_lib> Library

The ez_switch_lib library (plus all of its documentation) is available as a download via the Arduino IDE Library Manager. Select Tools/Manage Libraries and the specify "ez_switch_lib" in the dialogue box to download the latest version.

Steps to Successful Use

Before 'flighting to task', it is recommended to think carefully about what it is you wish to achieve, how switches are incorporated into your project and how <ez_switch_lib> can be utilised.

The principal considerations are:

- 1. Which microcontroller will be used?
- 2. Decide how many switches and of what type these will be.
- 3. For each switch decide
 - a. which digital pin will be used?
 - b. how will the switch be wired, circuit C1, circuit C2 or circuit C3
 - c. do we wish to create a link from the switch to a digital output pin and, if so, what state should the output pin be initialised to at creation time?
- 4. What will happen when each switch is activated? This step is beyond this UG and is the purpose of your project.

If you are implementing many switches then it may be helpful to make a note of their configurations as once you start wiring and coding things can get a bit muddled up! The following template may be helpful to fill out at the start of your planning and for you to refer to into the development stage (it is also a useful documentation aid post implementation):

Proje	ct Name:						MCU:	Date:
	Switch Configs					ked Out	puts	
Pin	Switch Type Circuit Type		Pin Initia		Value	Notes		
FIII	Button	Toggle	C1	C2	FIII	LOW	HIGH	

(add more rows as needed)

A Library Supporting the Reading of Multiple, Mixed-type Simple Switches & Circuits

For example, Example 4, below, configures the following switches, pins, circuits and links:

Proje	Project Name: LEDs & Relays MCU:							Arduino l	JNO	Date:	4 March 2021
Switch Configs Linked Outputs											
Pin	Switch Type		Circuit	Туре	pe Pin Init		l Value			Notes	
FIII	Button	Toggle	C1	C2	ГШ	LOW	HIGH				
2		Χ	Χ		8		X	Relay 1	- no sw	itching co	ding
3		Χ		Х	9	Х		Led 1 - no switching coding			ding
4		Χ	Χ					Led 3 - needs switching coding			
5	Х			Х				Produces switch status report to serial			
								monitor			
6	Х		Χ		10		Х	Relay 2	- no sw	itching co	ding
7	Χ			Χ	11	X		Led 2	- no sw	itching co	ding

Having got to grips with what switches, pins and circuit schemes your project will be designed around it is necessary to understand how <ez_switch_lib> can be used. As with all libraries there are a number of points to consider:

- 1. We need to ensure our sketch references the library
- 2. We need to create an instance of the library class, and
- 3. We need to understand how to correctly use the library's capabilities (e.g. functions and data).

There are a number of steps to be followed –

Step 1

To start, we need to declare the <ez_switch_lib> library. At the top level of your sketch include the following statements:

```
#include <Arduino.h>
#include <ez_switch_lib.h>
```

Step 2

Then, prior to <code>setup()</code>, declare how many switches your sketch will be configured for (e.g. <code>#define num_switches 6</code>, or <code>byte num_switches = 6</code>; etc) together with your switch configuration data (as per the above template?). How you wish to declare this data is very much up to your personal preference. The example sketches, below, show several approaches that you may find instructive.

Step 3

Again, <u>prior</u> to your sketch setup() function and after your switch data declarations, add the following class instantiation statement:

```
Switches my_switches(num_switches);
```

Where 'my_switches' is the name you wish to use for the class you have initiated – this can be anything, but 'my switches' is a pretty good name.

Step 4

Okay, we're off and running? Not quite, before we can plough on and start reading switches we need to declare them to the library along with their attributes. We do this by using the function add.switch. This function will add a specified switch to the library's table of active

switches such that when it is read (tested) by the read function(s) it will know how it is to be handled. Therefore for <u>each</u> switch you wish to configure you will need to add it to the library's active switch table; for this we use the <u>add.switch</u> function:

A Library Supporting the Reading of Multiple, Mixed-type Simple Switches & Circuits

```
byte switch_id;
switch_id = my_switches.add.switch(button_switch,4,circuit_C2);
```

Things to notice:

- the add.switch function call is preceded with the name we have given to the Switches class, in this example 'my_switches'. This is required to access any resource within the class
- 'button_switch' and 'circuit_C2' are reserved keywords and are highlighted in blue. They each define the switch and circuit type, respectively. There are a number of reserved words you may use throughout your sketch, see Specifications - Reserved Macro Definitions and Switch Control Functions add.switch to understand the possible parameters and return values/conditions
- the function provides a return value. If the addition is successful, this value is the
 reference you should use whenever you use any of the library resources where switch
 reference is a required parameter. How you retain this is very much up to your design,
 but see the example sketches below which should prove helpful. See Specifications Switch Control Functions add.switch to understand the possible return
 values/conditions.

The best place to add/create your switches is in the setup () function, but it can be done anywhere so long as it is only done once and is in scope of the library class statement.

Step 5

Now that is done we can start to read the switches.

The simplest way to read a switch is to use the function read_switch. This function is agnostic to switch type and has a single parameter - the id of the switch we wish to read. It will return either 'switched' or '!switched' (again reserved library macros), the meaning being obvious. For example:

```
if(my_switches.read_switch(switch_id) == switched)
{
...do something;
}
```

There are other resources available from the library and these are described below.

Example - to recap the steps (five) in order of application/use are:

Step	Example
1	#include <arduino.h></arduino.h>
	#include <ez lib.h="" switch=""></ez>
	// plus any other libraries
2	#define num_switches 1 // number of switches to be added, 1 in this example
	// define your switch data
	<pre>byte switch_id;</pre>
	<pre>byte button_pin = 4;</pre>
	····

```
Step
      Example
 3
       // create switch class instance
      Switches my switches (num switches);
      void setup(){
 4
         // declare your switches to the library, for example:
        switch_id = my_switches.add.switch(button_switch, button_pin,circuit_C2);
         // validate return value...
      void loop() {
 5
      do{
         if (my switches.read switch(switch id) == switched)
         {...do something;
         } while (true);
```

Additionally to note:

If you need to reference any of the library's class resources (<u>except macros definitions</u>) then you must prefix them with the name you have given to the class when you created/initiated it. For example, if we initiated the class with the name 'my_switches' then:

```
my_switches.switches[switch_id].switch_type
my_switches.switches[2].switch_status
my_switches.switches[toggle_id3].switch_pending
my_switches.add_switch(button_switch,12,circuit_C2)
my_switches.num_free_switch_slots()
my_switches.set_debounce(25)
my_switches.read_switch(my_switch_data[sw])
switch_id = my_switches.last_switched_id
etc.
```

Specifications

Specifications – Switch Control Structure (SCS)

At the heart of the <ez_switch_lib> library lies a struct(ure) 'table' - the switch control structure (SCS), that is used to hold the data attributes for all declared/defined switches.

At initiation of the class, the SCS is created from free memory using a malloc call of sufficient size to match the number of switches the class is being defined for. Thereafter, it may be populated with switches by use of the add_switch function (see below) up to the maximum number of switches declared for the class.

The SCS has the following construction and layout:

Members of the SCS may be directly accessed from the end user sketch, as required, see above. Of particular interest will be:

For button and toggle switches -

```
my_switches.switches[switch_id].switch_pending
```

and for toggle switches only -

```
my_switches.switches[2].switch_status
```

Specifications - Reserved Macro Definitions and Other Declarations

The table below documents the library's reserved macro definitions. <u>These are available for use by a sketch</u> simply by referencing their name (column 1 and no prefix required), see example sketches. When used they will be coloured in red to show that they are reserved words.

Macro Definitions #define	Values	Significance / Comments
button_switch	1	differentiates switch type, this being of type 'button'
toggle_switch	2	differentiates switch type, this being of type 'toggle'
circuit_C1'	INPUT	switch circuit should be configured with an external pull down 10k ohm resistor
circuit_C2	INPUT_PULLUP	switch circuit should be configured without an

Macro Definitions #define	Values	Significance / Comments
		external pull down resistor. Instead the MCU
		internal pull-up resistor enabled
circuit_C3	INPUT_PULLDOWN	switch circuit should be configured with internal MCU pull down resistor enabled. NOTE: not applicable for Arduino MCUs, but ESP 32 MCUs. If selected with an Arduino MCU then the circuit type will default to circuit C1 (INPUT).
switched	true	A value returned by read_switch,
		read_button_switch &
		read_toggle_switch functions.
		Signifies switch has been pressed and switch
		cycle complete, otherwise !switched
on	true	used for toggle switch status. Off is !on
not_used	true	'not used' indicator – marks if a field in the switch
		control structure is used or not
bad_params	-2	A value returned by add_switch function -
		invalid parameters
add_failure	-1	A value returned by add_switch function - could
		not insert a given switch, i.e. no slots left
link_success	0	A value returned by link_switch_to_output
		function - output pin successfully linked to a switch
link_failure	-1	A value returned by link_switch_to_output
		function - output pin could not be linked to a
		switch
none_switched	255	last_switched_id variable initialised to this
		value until first switch is actuated

Other Declarations

The library supports a useful variable, accessible to the end user developer, that records the id of the switch that has last been actuated, i.e. switched. This variable is declared and initialised as follows:

```
byte last_switched_id = none_switched;
```

And may be referenced as follows (example):

```
my switches.last switched id
```

See the example of its use in the Corollary section below.

Specifications - Switch Control Functions

Type	int Name add switch							
Parameters	byte sw type, byte sw pin, byte circ type							
Farameters	byte sw_type, byte sw_pin, byte citc_type							
	parameter choices are:							
	parameter enoices are.							
	is oither 'button guitab' or 'taggle guitab'							
	sw_type - is either 'button_switch' or 'toggle_switch',							
	sw_pin - is the digital pin assigned to the switch,							
	<pre>circ_type - is either 'circuit_C1/INPUT',</pre>							
	'circuit_C2/INPUT_PULLUP' or, 'circuit_C3/PULLDOWN							
	(ESP 32 only)							
Purpose /	This function will add (create) the specified switch (parameters) to the switch							
functionality	control structure, if possible.							
	There are three possible outcomes from an add_switch call:							
	1. Successful addition of switch. In this case the return value is >= 0 and							
	represents the physical slot (location 'switch_id/token') of the switch in the							
	switch control structure. This should be retained by the calling code/design.							
	2. No further slots available in the switch control structure, all are used.							
	3. The supplied parameters are 'bad'.							
	The results of an add switch call are as below.							
Return values	Return values are:							
	>= 0 success, switch added to switch control struct(ure) - the switch control							
	structure entry number is returned (switch_id/token) for the switch added							
	-1 add_failure - no slots available in the switch control structure,							
	-2 bad params - given parameter(s) for switch are not valid.							
Example								
void create my s	zwitches() {							
	0; sw < num switches; sw++) {							
int switch i	Ld =							
my_switche	es.add_switch(my_switch_data[sw][0], // switch type							
	<pre>my_switch_data[sw][1], // digital pin number my_switch_data[sw][2]):// circuit_type</pre>							
if (switch i	<pre>my_switch_data[sw][2]);// circuit type if (switch id < 0)</pre>							
· —	d < 0							
	1d < 0) is a data compatibility mismatch (-2),							
// or no r	is a data compatibility mismatch (-2) , coom left to add switch (-1) .							
// or no r Serial. pri	is a data compatibility mismatch (-2), coom left to add switch (-1). Int("Failure to add a switch:\nswitch entry:");							
// or no r Serial.pri Serial.pri	is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id);							
<pre>// or no r Serial.pri Serial.pri Serial.pri</pre>	is a data compatibility mismatch (-2), coom left to add switch (-1). Int("Failure to add a switch:\nswitch entry:");							
<pre>// or no r Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri</pre>	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", ");</pre>							
<pre>// or no r Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri</pre>	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]);</pre>							
// or no r Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]); int(my_switch_data[sw][1]); int(", ");</pre>							
// or no r Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]);</pre>							
// or no reservation of serial.pri serial.flu	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]); int(my_switch_data[sw][1]); int(", "); intln(my_switch_data[sw][2]); intln("!! PROGRAMME TERMINATED !!");</pre>							
<pre>// or no r Serial.pri Serial.flu exit(1);</pre>	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]); int(my_switch_data[sw][1]); int(", "); intln(my_switch_data[sw][2]); intln("!! PROGRAMME TERMINATED !!");</pre>							
<pre>// or no r Serial.pri Serial.flu exit(1); } else {</pre>	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]); int(", "); int(my_switch_data[sw][2]); intln(my_switch_data[sw][2]); intln("!! PROGRAMME TERMINATED !!"); ish();</pre>							
<pre>// or no r Serial.pri Serial.flu exit(1); } else { // 'switch</pre>	<pre>is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]); int(", "); intln(my_switch_data[sw][2]); intln("!! PROGRAMME TERMINATED !!"); ish(); in_id' is the switch control slot entry for this switch (sw),</pre>							
<pre>// or no r Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.flu exit(1); } else { // 'switch // so we co // in the</pre>	Is a data compatibility mismatch (-2), coom left to add switch (-1). Int("Failure to add a switch:\nswitch entry:"); Int(switch_id); Int(", data line = "); Int(my_switch_data[sw][0]); Int(", "); Int(my_switch_data[sw][1]); Int(", "); Intln(my_switch_data[sw][2]); Intln("!! PROGRAMME TERMINATED !!"); Ish(); Ind' is the switch control slot entry for this switch (sw), can use this, if required, to know where our switches are control structure by keeping a note of them against their							
<pre>// or no r Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.pri Serial.flu exit(1); } else { // 'switch // so we of // in the // my_switch</pre>	is a data compatibility mismatch (-2), coom left to add switch (-1). int("Failure to add a switch:\nswitch entry:"); int(switch_id); int(", data line = "); int(my_switch_data[sw][0]); int(", "); int(my_switch_data[sw][1]); int(my_switch_data[sw][2]); intln(my_switch_data[sw][2]); intln("!! PROGRAMME TERMINATED !!"); ish(); ind' is the switch control slot entry for this switch (sw), can use this, if required, to know where our switches are control structure by keeping a note of them against their ich_data config settings.							
<pre>// or no r Serial.pri Serial.flu exit(1); } else { // 'switch // so we co // in the // my_switch</pre>	Is a data compatibility mismatch (-2), coom left to add switch (-1). Int("Failure to add a switch:\nswitch entry:"); Int(switch_id); Int(", data line = "); Int(my_switch_data[sw][0]); Int(", "); Int(my_switch_data[sw][1]); Int(", "); Intln(my_switch_data[sw][2]); Intln("!! PROGRAMME TERMINATED !!"); Ish(); Ind' is the switch control slot entry for this switch (sw), can use this, if required, to know where our switches are control structure by keeping a note of them against their							

} // End create_my_switches

where 'my_switches' is the name of your class for the switches. For example: link_result = my_switches.link_switch_to_output switch_id, 0,	ı						
This function will link the given digital pin (output_pin_created/defined switch (switch_id) and initialise it accord parameter, as follows: pinMode (output_pin, Horl), where Horl is either Once linked, the output pin will be flipped between Low/each time the associated switch is read (tested) by the and found to have been actuated (switched). Note that: 1. This feature allows simple digital output pin switching requirement for end user coding. 2. The output can be initialised at either Low or HIGH is 3. Automatic output pin flipping only occurs via use of the function only. If switches have a linked output and the without automatic output pin flipping then use read read_toggle_switch, instead. These two function associated switch output levels. 4. Redefining a linked switch output - existing defined so can be redefined, as required, by further calls to the sea on the redefined, as required to the hold of the h							
can be redefined, as required, by further calls to the **Removing a linked switch output** - if a switch has a liand it is necessary to remove it then this can be don link_switch_to_output with an output pin value of 0 be set according to the HorL parameter. For exam link_result = my_switches.link_switch_to_output	to an already ng to the specified LOW OF HIGH LIGH OF HIGH/LOW ead_switch function without any vel. ne read_switch ey need to be read button_switch / ns will not 'flip'						
However, if the output level is to remain unaltered the parameter to 'my_switches.switches[switch_id].switch_where 'my_switches' is the name of your class for the switches. For example: link_result = my_switches.link_switch_to_output switch_id, 0,	switch link function. Need output defined by a call to The output level will le:						
<pre>parameter to 'my_switches.switches[switch_id].switch_ where 'my_switches' is the name of your class for the For example: link_result = my_switches.link_switch_to_output</pre>	n set the HorL						
where 'my_switches' is the name of your class for the switches. For example: link_result = my_switches.link_switch_to_output	· · · · · · · · · · · · · · · · · · ·						
For example: link_result = my_switches.link_switch_to_output	where 'my switches' is the name of your class for the Switches class.						
switch_id, 0,							
· · · · · · · · · · · · · · · · · · ·	(
my_switches.switches[switch_ switch_out_pin_st	id]. atus);//don't change						
Return values 0, link_success - linking was successful -1, link_failure - linking failed, switch_id not in ra	nge of defined						
Example							
<pre>Example 1: // Link/associate this switch to the in-built led (normally pin 1: // with the switch we have just installed/created so that every // time the switch is actuated the built in LED will be automatica // flipped. Start with LED at LOW setting. int link_result = my_switches.link_switch_to_output(</pre>							

```
add switch
Type
                 int
                         Name
                      LED BUILTIN,
                      LOW);
  if (link_result == link_failure ) {
    // linking failed, invalid switch id
    Serial.begin(9600);
    Serial.println(F("Failure to link an output to a switch"));
    Serial.println(F("!!PROGRAM TERMINATED!!"));
    Serial.flush();
    exit(2);
Example 2:
  // Link/associate this switch to the relay output pin
  // with the switch we have just installed/created so that every
  // time the switch is actuated the relay will be automatically
  // flipped. Start with relay at HIGH setting.
  int link_result = my_switches.link_switch_to_output(
                      switch id,
                      relay 1,
                      HIGH);
  if (link result == link failure ) {
    // linking failed, invalid switch id
    Serial.begin(9600);
    Serial.println(F("Failure to link an output to a switch"));
    Serial.println(F("!!PROGRAM TERMINATED!!"));
    Serial.flush();
    exit(2);
  }
```

Туре	int	Name	num_free	_switch_slots			
Parameters	none						
Purpose /	Returns	the num	ber of free s	slots available in the switch control structure.			
functionality							
Return values	0 - max	0 - maximum number of switches defined					
Example							
<pre>Serial.print("\nNumber of free switch slots in the SCS = "); Serial.println(my_switches.num_free_switch_slots());</pre>							

Туре	bool Name read_switch						
Parameters	byte switch_id						
Purpose / functionality	Function will read the given switch returning a result as below.						
	Note that:						
	1. The switch_id parameter is the switch entry number in the switch control structure of the switch to be read. This is the returned value from the add switch function call.						
	2. If an invalid switch_id is given the read function exits with a return value of !switched.						
	3. If a switch has a linked output pin associated with it then this function will 'flip' the current output pin level, i.e. from LOW to HIGH, or from HIGH to LOW.						
	See add_switch and link_switch_to_pin for further information.						
Return values	switched or !switched						
	Example						

```
bool
                         Name | read_switch
Type
Example 1:
  // the switch does not have and output pin linked to it, so we
  \ensuremath{//} need to handle the flipping of the LED
   if (my_switches.read_switch(switch_id) == switched) {
     led_level = HIGH - led_level; // flip between HIGH and LOW each cycle
     digitalWrite(LED_BUILTIN, led_level);
  } while (true);
Example 2:
  // the switch has been defined with a linked/associated output pin
  // connected to a LED.
  // We therefore have nothing to do but keep reading the switch and the
 // LED will be automatically flipped for us.
 do {
   my_switches.read_switch(switch_id);
 } while (true);
```

Туре	bool Name read_button_switch					
Parameters	byte switch_id					
Purpose / functionality	This is used by the <pre>read_switch</pre> function and deals specifically with reading momentary button style switches. The function can be used by end user code, but note: 1. Remember that the <pre>switch_id</pre> parameter is the switch entry number in the switch control structure of the switch to be read. 2. If the switch has a linked/associated output pin then it will <pre>not</pre> be processed.					
Return values	switched or !switched					
	Example					
<pre>if (my_switches.read_button_switch(switch_id) == switched) { // button switch pressed }</pre>						

Туре	bool Name read_toggle_switch				
Parameters	byte switch id				
Purpose / functionality	This is used by the <pre>read_switch</pre> function and deals specifically with reading toggle style switches. The function can be used by end user code, but note: 1. Remember that the <pre>switch_id</pre> parameter is the switch entry number in the switch control structure of the switch to be read. 2. If the switch has a linked/associated output pin then it will <pre>not</pre> be processed.				
Return values	switched or !switched				
	Example				
<pre>if (my_switches.read_toggle_switch(switch_id) == switched) { // toggle switch switched }</pre>					

Type	void Name reset_switch					
Parameters	unit8 t switch id					
Purpose /	This function will reset the given switch to a inactive state, i.e. not in transition.					
functionality	If the given switch is not in transition then it will have no material effect.					
	It is a useful function if, for example, code returns to an active state following deep sleep, or from interrupts. Of course, its use depends entire on the design					
	of a sketch or application.					
Return values	None					
	Example					
// // Interrupt handler for the deep sleep interrupt pin.						
<pre>void rise_and_shine()</pre>						
{ // Remove the interrupt handler to prevent any spurious interrupts, // the handler will be re-established when ready for sleep detachInterrupt(digitalPinToInterrupt(wake_up_switch)); // reset the options switch which may have been pending at time deep sleep time out my_switches.reset_switch(options_switch_id); }						

T	1. Name and positive					
Туре	void Name reset_switches					
Parameters	unit8_t switch_id					
Purpose /	This function will reset ALL declared switches to a inactive state, i.e. not in					
functionality	transition. If any switch is not in transition then it will have no material effect.					
	It is a useful function if, for example, code returns to an active state following					
	deep sleep, or from interrupts. Of course, its use depends entire on the design					
	of a sketch or application.					
Return values	None					
	Example					
	·					
//						
	dler for the deep sleep interrupt pin.					
<pre>void rise and shine()</pre>						
{						
// Remove the	// Remove the interrupt handler to prevent any spurious interrupts,					
// the handler will be re-established when ready for sleep						
<pre>detachInterrupt(digitalPinToInterrupt(wake_up_switch));</pre>						
// reset any switches that may have been pending/in transition at time of a manual						
deep sleep request						
<pre>my_switches.reset_switches();</pre>						
}						

Туре	bool Name button_is_pressed							
Parameters	unit8_t switch_id							
Purpose / functionality	Note: this function is only relevant for button switches, i.e. momentary switches. It is <u>not</u> relevant for use with toggle switches. This function will return one of two conditions — true or false. If the specified button switch is in transition (i.e. it is being pressed and not yet fully switched) then the value returned will be true, otherwise the value return will be false.							
	 Note: The function is <u>ONLY</u> relevant for switches that are declared as type BUTTON If used with a none button switch the function will return <u>false</u> If the button switch has a linked output pin defined then this function <u>WILL NOT</u> automatically switch (toggle) the linked output. If this is required use the overloaded variant of this function with a second parameter of <u>true</u> This function is equivalent to its overload variant with the following parameters: <u>button_is_pressed(sw_id, false);</u> 							
Return values	true - the specified switch is in transition, i.e. being pressed false - the specified switch is NOT in transition, i.e. it is quiescent and NOT being pressed							
	Example							

Example 1:

This example will read the specified switch continually and will action the code under the scope of the while statement whenever the switch is pressed. Note that when the switch is released it will have a status of 'not pending' or 'not in transition'. This is an important point to understand as this is not always the case with compounded if/while logic – see example 2 below.

```
void loop() {
  int count;
  do {
    count = 0; //reset for new cycle
    while (my_switches.button_is_pressed(sw_1_id))
    {
        // whilst the switch is being pressed perform tasks
        count++;
        Serial.print("count = ");
        Serial.println(count);
        Serial.flush();
        delay(500); // wait for ½ second before retesting the switch
     }
     while (true);
}
```

Example 2:

This example will read two specified switches continually and will action the code under the scope of the while statement whenever BOTH switches are pressed. To note is that one of the two button test functions will be the cause of terminating the while logic conditions, i.e. one switch will be released before the other and b so detected. In this case we have the scenario that one switch will have a status of not in transition and the other still in transition. This may cause some issues with further code and, to remedy this, the following example includes two statements outside of the while loop to force a reset of each of the two switches. This same logic will apply if more than two switches appear as a part of compounded conditional logic.

Туре	bool Name button_is_pressed								
Parameters	<pre>unit8_t switch_id, bool process_link</pre>								
Purpose / functionality	Note: this function is only relevant for button switches, i.e. momentary switches. It is <u>not</u> relevant for use with toggle switches.								
	This function may be used if the specified button switch has a linked output which is required to be automatically switched (i.e. toggled) upon completion of the switching cycle (i.e. the button switch has been released. The function will return one of two conditions — true or false. If the specified button switch is in transition (i.e. it is being pressed and not yet fully switched) then the value returned will be true, otherwise the value return will be false.								
	 Note: The function is <u>ONLY</u> relevant for switches that are declared as type BUTTON 								
	If used with a none button switch the function will return false and any linked output switching ignored								
	 Any linked output may be automatically switched if a request to do so is provided via the second parameter – i.e. by specifying 'process_link' as true. If the second parameter is specified as false then any linked output <u>WILL NOT</u> be automatically switched 								
	WARNING – if this function is used in a compounded logic test then switches with linked outputs may NOT be automatically switched (i.e. toggled). Consider the following two switches, each of which has a linked output:								
	<pre>while (my_switches.button_is_pressed(sw_1_id, true) &&</pre>								
	<pre>my_switches.reset_switches();//reset all switches to inactive</pre>								
	Processing of the while loop continues as long as <u>both</u> switches are simultaneous being pressed. But, at some point, one or other switch will be detected as being released and its linked output will be automatically processed. However, the other switch will not have had the benefit of being allowed to complete its switching cycle even though it has been								

Туре	bool Name button_is_pressed							
	released because of the compounded logic test under the while statement. Its linked output will <u>not</u> therefore be automatically switched. So do be aware of the use of this function in compounded constructs.							
Return values	 true - the specified switch is in transition, i.e. being pressed false - the specified switch is NOT in transition, i.e. it is quiescent and NOT being pressed 							
	Example							
Example 1:	acces switch 1 with linked output							
	ocess switch 1, with linked output s pressed(sw 1 id, true)){							
	is being pressed so process.							
	d output (LED) will be automatically							
// toggled o	n button release							
• • •								
}								
Example 2:								
// test and pr	ocess switch 1, which has a linked							
// output, but we do not want it to be automatically								
// processed on switch release								
	<pre>le(button_is_pressed(sw_1_id, false)) { / resit ab. 1 is beside a residue a residue a residue.</pre>							
// switch 1	is being pressed so process.							
}								
	ernative to Example 2:							
// test and product, but // processed or while (button_i	ocess switch 1, which has a linked we do not want it to be automatically n switch release s_pressed(sw_1_id)){ is being pressed so process.							
}								

Туре	void	Name	print_switch					
Parameters	byte s	byte switch id						
Purpose / functionality	The function prints the switch parameters of the switch defined at slot switch_id in the switch control structure to the serial monitor. It can be helpful in the debugging phase and removed thereafter.							
Return values	none							
	Example							
-								

```
my_switches.print_switch(3);

Example output a toggle switch, configured as circuit_C1 and occupying entry 3
(switch_id = 3)in the switch control structure:

sw_id: = 3
sw_type = TOGGLE SWITCH sw_pin = 5 circ_type = INPUT/circuit_C1/0
on_value = HIGH sw_status = OFF pending = NO db_start = 0 msecs
Linked output pin = 8 linked pin status = LOW
```

Type	void Name print_switches							
Parameters	none							
Purpose /	The function prints the switch parameters of ALL switches held in the switch							
functionality	control structure to the serial monitor.							
	It can be helpful in the debugging phase and removed thereafter.							
Return values	none							
	Example							
my_switches.prin	t_switches();							
	for 6 defined switches - 3 x button & 3 x toggle, configured as either cruit_C2 and with two switches with linked outputs:							
sw_id: = 0 sw type = BUTTON	Declared & configured switches: sw_id: = 0 sw_type = BUTTON SWITCH sw_pin = 2 circ_type = INPUT_PULLUP/circuit_C2/2 sw_sw_tatus = n/a pending = NO db_start = 0 msecs Linked output pin = 13 linked pin status = HIGH							
sw_id: = 1 sw_type = BUTTON on_value = LOW *** No linked out	SWITCH sw_pin = 3 circ_type = INPUT_PULLUP/circuit_C2/2 sw_status = n/a pending = NO db_start = 0 msecs							
<pre>sw_id: = 2 sw_type = BUTTON on_value = HIGH *** No linked out</pre>	SWITCH sw_pin = 4 circ_type = INPUT/circuit_C1/0 sw_status = n/a pending = NO db_start = 0 msecs							
on_value = HIGH	C SWITCH sw_pin = 5							
<pre>sw_id: = 4 sw_type = TOGGLE on_value = LOW *** No linked out</pre>	SWITCH sw_pin = 6							
	C SWITCH sw_pin = 7							

Туре	void Name set debounce					
Parameters	int pe	eriod				
Purpose / functionality	The function may be used to set the debounce period, in milliseconds, for switch reading functions. Note that: 1. the debounce value is set to 10 milliseconds, by default 2. the debounce setting is global and applies to ALL defined switches 3. the parameter value must be >= 0. Negative values are ignored.					
Return values	none					
Example						
<pre>my_switches.set_debounce(20); // set debounce for 20 msecs</pre>						

Example Sketches

What follows are a number of examples in the use of the <ez_switch_lib> library. These are provided to aid understanding in how the <ez_switch_lib> can be applied to your projects.

Each example sketch may be copied and pasted directly into the Arduino IDE from the github links provided for each example sketch, compiled and uploaded without any further coding – just ensure that you have downloaded the <ez_switch_lib> library files first.

Any additional components beyond an Arduino microcontroller, connecting wires and a breadboard are indicated for each sketch.

The example sketches are:

- 1. Example 1.1 turning on and off the in-built LED of the Arduino microcontroller (normally on pin 13) using a <u>button</u> switch using direct coding.
- 2. Example 1.2 as for example 1.1 but using the function link_switch_to_output to flip the in-built LED using indirect coding.
- 3. Example 2,1 turning on and off the in-built LED of the Arduino microcontroller (normally on pin 13) using a <u>toggle</u> switch using direct coding.
- 4. Example 2.2 as for example 2.1 but using the function link_switch_to_output to flip the in-built LED using indirect coding.
- 5. Example 3.1 four switches, two button and two toggle, wired in different schemes, with each switch turning on and off an associated LED using direct coding.
- 6. Example 3.2 as for example 3.1 but using the function link_switch_to_output to flip each of the associated LEDs using indirect coding.
- 7. Example 4 six switches, three button and three toggle, wired in different schemes, with each switch being processed by its own switch-case statement. The sketch incorporates a mix of direct coding and use of the function link_switch_to_output to control the effects of the switches, using the serial monitor, LEDs and relays.
- 8. Example 5 one toggle switch and two button switches used to provide time adjustment capability for hours and minutes (24 hour clock). This example demonstrates the use of the library's internal switch control struct(ure) variables and settings directly to achieve the required functionality.

All of the sketches can be accessed from github - follow the specific github link with each example. Alternatively, the main <ez_switch_lib> github page with the <ez_switch_lib> files (.h, .cpp, .txt and .pdf files) can be found at this link.

Example 1.1 - Turning LED On/Off With a Button Switch, Directly Coded

This example sketch uses a button switch and will turn the Arduino in-built led on and off with each press. The switch is wired for circuit_C1.

Note that a led state change will only occur when the button switch is released, that is after the completion of the switching cycle.

The switch mappings and outputs are:

	Project N	lame: E	Example 1.1 – button switch, no linking					Date:	4 March 2021	
	Switch Configs			Linked Outputs						
Pin	Switch	п Туре	Circuit Type		Pin	Initial	Value Notes		otes	
FIII	Button	Toggle	C1	C2	FIII	LOW	HIGH			
2			_					No linked output, but	ton will fl	ip in-built LED
	^		^					by direct coding		

Components required	Circuit schemes
1 x button switch	_circuit_C1
	Ov (ground) 10k ohm resister Digital read pin switch
	Arduino Microcontroller Figure 1 – Circuit C1

The sketch can be also accessed from github, here.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez_switch_lib library
  Example 1.1
  Reading single button switch to turn built in led on/off.
  When the button switch is actuated, the in-built led
  (LED BUILTIN), will be flipped ON/OFF etc by using suitable
  coding in the sketch's main loop.
  This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h> // ez switch lib .h & .cpp files are stored under
...\Arduino\libraries\ez switch lib\
int switch id;
bool led level = LOW; // start with led off
#define num switches 1 // only a single switch in this sketch example
// Declare/define the switch instance of given size
Switches my switches (num switches);
void setup() {
 // Attach a button switch to digital pin 2, with
 // an external pull down resistor, circuit C1,
 // and store the switch's id for later use.
 switch_id = my_switches.add_switch(
              button switch,
```

```
circuit C1);
  // validate the return
  if (switch_id < 0) {</pre>
   // Error returned - there is a data compatibility mismatch (-2, bad params),
    // or no room left to add switch (-1, add failure).
    Serial.begin(9600);
    Serial.println(F("Failure to add a switch"));
    if (switch id == add failure) {
      Serial.println(F("add switch - no room to create given switch"));
    } else {
     // Can only be that data for switch is invalid
     Serial.println(F("add switch - one or more parameters is/are invalid"));
    Serial.println(F("!!PROGRAM TERMINATED!!"));
   Serial.flush();
   exit(1);
 // Initialise built in led and turn to off
 pinMode(LED_BUILTIN, OUTPUT);
 digitalWrite(LED BUILTIN, LOW);
void loop() {
 // Keep reading the switch we have created and toggle the built in
  // led on/off for each press.
 do {
    if (my switches.read switch(switch id) == switched) {
     // Flip between HIGH and LOW each cycle
     led_level = HIGH - led_level;
     digitalWrite(LED BUILTIN, led level);
  } while (true);
```

Example 1.2 - Turning LED On/Off With a Button Switch, Indirectly Coded

This example sketch uses a button switch to turn the Arduino in-built led on and off with each press, indirectly, by using the link_switch_to_output function. Compare this sketch with example 1.1 sketch and note the differences – the button switch is linked to an output pin and no code exists in the sketch to flip the output pin (in-built LED). The switch is wired for circuit C1.

Note that a led state change will only occur when the button switch is released, that is after the completion of the switching cycle.

The switch mappings and outputs are:

F	Project Na	ame: Ex	cample	1.2 – b	g	Date:	4 March 2021			
Switch Configs Linked Outputs										
Pin	Switch	h Type	Circuit	Туре	Pin	Initial Value			Notes	
FIII	Button	Toggle	C1	C2	FIII	LOW	HIGH			
2	Y		Y		13	Y		LED_BUILTIN -	no direct	coding needed
_	_ ^		^		13	3 ^		to flip the LED		

Components required	Circuit schemes
1 x button switch	circuit_C1
	Ov (ground) 10k ohm resister Digital read pin switch
	+5v pin Arduino Microcontroller Figure 1 - Circuit C1

The sketch can be accessed from github here.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez switch lib library
  Example 1.2
  Reading single button switch to turn built in led on/off, but
  in this example we shall link the switch to an output pin
  (LED BUILTIN) using a ez switch lib function, so that when
  actuated, the output pin will be automatically flipped
  HIGH-LOW etc each time the button switch is pressed WITHOUT
  any further coding.
  This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez_switch_lib.h> // ez_switch_lib .h & .cpp files are stored under
...\Arduino\landlibraries\ez_switch_lib\
int switch id;
#define num switches 1 // only a single switch in this sketch example
// Declare/define the switch instance of given size
Switches my switches (num switches);
void setup() {
 // Attach a button switch to digital pin 2, with
  // an external pull down resistor, circuit C1,
```

```
// and store the switch's id for later use.
 switch_id = my_switches.add_switch(
                button switch,
                2,
                circuit C1);
  // validate the return
 if (switch_id < 0) {</pre>
    // Error returned - there is a data compatibilty mismatch (-2, bad_params),
    // or no room left to add switch (-1, add failure).
    Serial.begin(9600);
    Serial.println(F("Failure to add a switch"));
    if (switch id == add failure) {
     Serial.println(F("add switch - no room to create given switch"));
    } else {
     // can only be that data for switch is invalid
     Serial.println(F("add switch - one or more parameters is/are invalid"));
   Serial.println(F("!PROGRAM TERMINATED!!"));
   Serial.flush();
   exit(1);
  // Link/associate this switch to the in-built led (normally pin 13)
  // with the switch we have just installed/created so that every
  // time the switch is actuated the built in LED will be automatically
  // flipped. Start with LED at low setting.
 int link result = my switches.link switch to output(
                      switch_id,
                      LED BUILTIN,
                      LOW);
 if (link result == link failure ) {
    // linking failed, invalid switch id
    Serial.begin(9600);
    Serial.println(F("Failure to link an output to a switch"));
    Serial.println(F("!!PROGRAM TERMINATED!!"));
    Serial.flush();
    exit(2);
  }
}
void loop() {
    // just keep reading, LED BUILTIN will automatically be flipped for us
    // so we dont need to do anything else
   my switches.read switch (switch id);
  while (true);
```

Example 2.1 - Turning LED On/Off With a Toggle Switch, Directly Coded

This example sketch uses a toggle switch and will turn the Arduino in-built led on and off with each actuation. The sketch is essentially the same as example 1.1, the difference being that a toggle switch type is declared instead of a button type. The switch is wired for circuit C1.

Note that a led state change occurs at each position of the toggle switch.

The switch mappings and outputs are:

F	Project Na	ame: Ex	ample	2.1 – to	oggle s	witch, n	o linkin	g	Date:	4 March 2021
	Switch Configs Linked Outputs									
Pin	Switc	h Type	Circuit	t Type	Pin	Initial Value		Notes		
PIII	Button	Toggle	C1	C2		LOW	HIGH			
2		>	~					No linked output, t	oggle will	flip in-built LED
		^	^					by direct coding		•

Components required	Circuit schemes
1 x toggle switch	_circuit_C1
	(ground) 10k ohm resister
	Digital read pin switch
	+5v pin]-
	Arduino Microcontroller Figure 1 – Circuit C1

The sketch can be accessed from github here.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez switch lib library
  Example 2.1
  Reading single toggle switch to turn built in led on/off.
  When the toggle switch is activated, the in-built led
  (LED_BUILTIN), will be flipped ON/OFF etc by using suitable
  coding in the sketch's main loop.
  This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h> // ez switch lib .h & .cpp files are stored under
...\Arduino\libraries\ez switch lib\
int switch id;
bool led level = LOW;
#define num switches 1 // only a single switch in this sketch example
// Declare/define the switch instance of given size
Switches my switches (num switches);
void setup() {
 // Attach a toggle switch to digital pin 2, with
 // an external pull down resistor, circuit_C1,
 // and store the switch's id for later use.
 switch id = my switches.add switch(
              toggle switch,
```

```
circuit C1);
  // Validate the return
 if (switch id < 0) {
    // Error returned - there is a data compatibilty mismatch (-2, bad params),
    // or no room left to add switch (-1, add failure).
    Serial.begin(9600);
    Serial.println(F("Failure to add a switch"));
   if (switch id == add failure) {
     Serial.println(F("add switch - no room to create given switch"));
    } else {
     // Can only be that data for switch is invalid
      Serial.println(F("add switch - one or more parameters is/are invalid"));
   Serial.println(F("!!PROGRAM TERMINATED!!"));
   Serial.flush();
   exit(1);
  // Initialise built in led and turn to off
 pinMode(LED BUILTIN, OUTPUT);
 digitalWrite(LED BUILTIN, LOW);
void loop() {
 // keep reading the switch we have created and toggle the built in
 // led on/off for each press.
 do {
    if (my_switches.read_switch(switch_id) == switched) {
      // flip between HIGH and LOW each cycle
     led_level = HIGH - led_level;
     digitalWrite(LED BUILTIN, led level);
  } while (true);
```

Example 2.2 - Turning LED On/Off With a Toggle Switch, Indirectly Coded

This example sketch uses a toggle switch to turn the Arduino in-built led on and off, indirectly, by using the link_switch_to_output function. It is essentially the same sketch as in example 2.1, above. Compare this sketch with example 2.1 sketch and note the differences – the toggle switch is linked to an output pin and no code exists in the sketch to flip the output pin (in-built LED).

Note that a led state change occurs at <u>each</u> position of the toggle switch.

The switch mappings and outputs are:

F	Project Na	ame: Ex	ample 2	2.2 – to	Date: 4 March 2021				
Switch Configs						ked Out	puts		
Pin	Switch	n Type	Circuit	t Type	Pin	Initial Value		Notes	
FIII	Button	Toggle	C1	C2		LOW	HIGH		
2		Х	Х		13		Х	LED_BUILTIN – <u>no</u> direct coding needed to flip the LED	

Components required	Circuit schemes
1 x toggle switch	circuit_C1
	Ov (ground) 10k ohm resister
	read pin switch
	+5v pin
	Arduino Microcontroller Figure 1 – Circuit C1

The sketch can be accessed from github here.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez switch lib library
  Example 2.2
  Reading single toggle switch to turn built in led on/off.
  Toggle switch is associated with an output pin (LED BUILTIN)
  using a ez switch lib function, so that when activated, the
  output pin will be automatically flipped, HIGH-LOW etc each
  time the toggle switch is actuated WITHOUT any further coding.
  This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h> // ez switch lib .h & .cpp files are stored under
...\Arduino\libraries\ez switch lib\
int switch id;
#define num switches 1 // only a single switch in this sketch example
// Declare/define the switch instance of given size
Switches my_switches(num_switches);
void setup() {
 // Attach a toggle switch to digital pin 2, with
 // an external pull down resistor, circuit C1,
 // and store the switch's id for later use.
```

```
switch_id = my_switches.add_switch(
                toggle_switch,
                2,
                circuit C1);
  // Validate the return
  if (switch id < 0) {
    // Error returned - there is a data compatibilty mismatch (-2, bad params),
    // or no room left to add switch (-1, add failure).
    Serial.begin(9600);
    Serial.println(F("Failure to add a switch"));
    if (switch id == add failure) {
     Serial.println(F("add switch - no room to create given switch"));
    } else {
      // Can only be that data for switch is invalid
     Serial.println(F("add_switch - one or more parameters is/are invalid"));
    Serial.println(F("!!PROGRAM TERMINATED!!"));
   Serial.flush();
   exit(1);
  // Link/associate the LED BUILT digital pin (normally pin 13)
  // with the switch we have just installed/created
  // so that every time the switch is activated the built in
  // LED will be automatically be flipped. Start with LED at HIGH setting.
 int link result = my switches.link switch to output(
                      switch id,
                      LED BUILTIN,
                      HIGH);
 if (link result == link failure) {
    // Linking failed, invalid switch id
    Serial.begin(9600);
    Serial.println(F("Failure to link an output to a switch"));
    Serial.println(F("!!PROGRAM TERMINATED!!"));
    Serial.flush();
    exit(2);
  }
}
void loop() {
 do {
    if (my switches.read switch(switch id) == switched) {
     // just keep reading, LED BUILTIN will automatically be flipped for us
      // so we dont need to do anything else
  } while (true);
```

Example 3.1 - Turning Multiple LEDs On/Off With Multiple Button & Toggle Switches, Directly Coded

In this example we build on previous examples and see how we can implement and manage a number of button and toggle switches with ease by defining our switch and associated switching output (LED) parameters in an orderly way – we shall use a struct(ure) data type to keep everything we need together.

For the purposes of this example we shall connect two button and two toggle switches, each connected with each type of circuit.

The switch mappings and outputs are:

F	Project Name: 3.1 mixed switches, no linking Date: 4 March 2021								
	Switch Configs Linked Outputs								
Pin	Switch	Туре	oe Circuit Type		Pin Initial		Value	Notes	
FIII	Button	Toggle	C1	C2	FIN	LOW	HIGH		
2	X		Х					No linked output, button will flip in-built	
	^		^					LED by direct coding	
3	X X		Х			No linked output, button will flip in-built			
3	^			^				LED by direct coding	
4		V	V					No linked output, toggle will flip in-built	
4		Х	Х					LED by direct coding	
_		V		V				No linked output, toggle will flip in-built	
5		Х		X				LED by direct coding	

Components required	Circuit schemes
1 x button switch	circuit C1 (ground) Digital read pin Arduino Microcontroller Figure 1 - Circuit C1
1 x button switch	CIRCUIT_C2 Ov (ground) Digital read pin switch +5v pin Arduino Microcontroller Flure 2 - Circuit C2
1 x toggle switch	CIRCUIT C1 Ov (ground) 10k ohm resister Digital read pin switch +5v pin Arduino Microcontroller Figure 1 - Circuit C1
1 x toggle switch	CITCUIT_C2 Ov (ground) Digital read pin switch +5v pin Arduino Microcontroller Figure 2 - Circuit C2
2 x 10k ohm resistors	1 each for each circuit C1
4 x LEDs	Standard wiring scheme for
4 x 220 ohm resistors	connected LED

Components required	Circuit schemes
	220 ohm
	digital
	pin ≡ GND

The sketch can be accessed from github <u>here</u>.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez switch lib library
  Example 3.1
  Reading multiple button & toggle switches wired with
  different circuit types with each switch turning associated
  leds on/off.
  This example uses a struct (ure) data type to define the
  switch and led data.
   This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h> // ez switch lib .h & .cpp files are stored under
...\Arduino\lararies\ez switch lib\
#define not configured
                         255 // used to indicate if a switch control data entry
has be configured
#define num switches 4
// We will use a struct(ure) data type to keep our switch/LED
// data tidy and readily accessible
struct switch control {
                         // struct member meanings:
                           // type of switch connected
 byte sw_type;
 byte sw_pin;
                           // digital input pin assigned to the switch
 byte sw_circuit_type;
byte sw_id;
                           // the type of circuit wired to the switch
// holds the switch id given by the add.switch function
for this switch
 byte sw led pin;
                           // digital pin connecting the LED for this switch
 bool sw led status;
                           // current status LOW/HIGH of the LED connected to this
switch
                           // 'btl' = buttons, toggles & LEDs
} btl[num switches] = {
  //..... switch data.... <led data, initial setting level>
 button_switch, 2, circuit_C1, not_configured, 8, HIGH,
 button_switch, 3, circuit_C2, not_configured, 9,
 toggle_switch, 4, circuit_C1, not_configured, 10, HIGH,
toggle_switch, 5, circuit_C2, not_configured, 11, LOW
// Declare/define the switch instance of given size
Switches my switches (num switches);
void setup() {
  // Attach each switch to its defined digital pin/circuit type
  // and store the switch's id back in its struct entry for later use.
 for (byte sw = 0; sw < num_switches; sw++) {</pre>
   int switch_id = my_switches.add_switch(
                      btl[sw].sw type,
                      btl[sw].sw pin,
                      btl[sw].sw_circuit_type);
    // Validate the return
```

```
if (switch id < 0) {
      // Error returned - there is a data compatibility mismatch (-2, bad_params),
// or no room left to add switch (-1, add_failure).
      Serial.begin(9600);
      Serial.println(F("Failure to add a switch"));
      if (switch id == add failure) {
        Serial.println(F("add switch - no room to create given switch"));
      } else {
        // Can only be that data for switch is invalid
        Serial.println(F("add switch - one or more parameters is/are invalid"));
      Serial.println(F("!!PROGRAM TERMINATED!!"));
      Serial.flush();
      exit(1);
    btl[sw].sw id = switch id; // store given switch id for this sw for use later
    // Now initialise the switch's associated LED and turn on/off according to
preset
    pinMode(btl[sw].sw_led_pin, OUTPUT);
    digitalWrite(btl[sw].sw led pin, btl[sw].sw led status);
}
void loop() {
  // Keep reading the switches we have created and flip their
  // associated LEDs on/off
 do {
    for (byte sw = 0; sw < num_switches; sw++) {</pre>
      if (my switches.read switch(btl[sw].sw id) == switched) {
        // Flip between HIGH and LOW each cycle
        btl[sw].sw led status = HIGH - btl[sw].sw led status;
        digitalWrite(btl[sw].sw led pin, btl[sw].sw led status);
      }
  } while (true);
```

Example 3.2 - Turning Multiple LEDs On/Off With Multiple Button & Toggle Switches, Indirectly Coded

In this example we build on the previous example 3.1 and see how we can implement and manage a number of button and toggle switches <u>without</u> direct coding for the outputs. In the example sketch we remove the direct coding that deals with the switching of the LED outputs and, instead, we use the function <u>link_switch_to_output</u> to associate each switch to an LED output pin. It is essentially the same sketch as in example 3.1, above. Compare this sketch with example 3.1 sketch and note the differences.

For the purposes of this example we shall connect two button and two toggle switches, each connected with each type of circuit.

The switch mappings and outputs are:

F	Project Name: 3.2 mixed switches, with linking									4 March 2021
	Swi	tch Confi	gs		Lin	puts				
Pin	Switch Type			Circuit Type		Pin Initial Value		Notes		
FIII	Button	Toggle	C1	C2	ГШ	LOW	HIGH			
2	Х		Х		8		Х	LED to flip – <u>no</u> direct coding needed to flip the LED		
3	Х			Х	9	Х		LED to flip – <u>no</u> direct coding needed to flip the LED		
4		Х	Х		10		Х	LED to flip – <u>no</u> direct coding needed to flip the LED		
5		Х		Х	11	Х		LED to flip – <u>no</u> dire the LED	ct coding	needed to flip

Companyanta na muina d	Cinavit askanas
Components required	Circuit schemes
1 x button switch	circuit_C1
	(ground) 10k ohm
	Digital
	read pin
	switch
	+5v pin Arduino Microcontroller
	Figure 1 – Circuit C1
1 x button switch	circuit_C2
	Ov (ground)
	Digital
	read pin switch
	+5v pin
	Arduino Microcontroller
1 x toggle switch	Figure 2 - Circuit C2 Circuit C1
1 x toggie switch	0v
	(ground) 10k ohm
	Digital read pin
	switch
	+5v pin
	Arduino Microcontroller Figure 1 – Gircuit C1
1 x toggle switch	circuit C2
1 X toggio ownon	Ov 1
	(ground)
	Digital read pin
	switch
	+5v pin
	Arduino Microcontroller Figure 2 – Circuit C2
2 x 10k ohm resistors	1 each for each circuit_C1
4 x LEDs	Standard wiring scheme for
4 x 220 ohm resistors	connected LED

Components required	Circuit schemes
	220 ohm
	digital
	pin ≡ GND

The sketch can be accessed from github here.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez switch lib library
  Example 3.2
  Reading multiple button & toggle switches wired with
  different circuit types with each switch linked to an
  output pin using a ez_switch_lib function, so that when
  activated, the associated switch output pin will be
  automatically flipped, HIGH-LOW etc each time the switch
  is actuated WITHOUT any further coding.
  To demonstrate, the switch associated outputs are connected
  to leds.
   This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h> // ez switch lib.h & .cpp files are stored under
...\Arduino\libraries\ez switch lib\
#define not configured
                        255 // used to indicate if a switch control data entry
has be configured
#define num switches 4
// We will use a struct(ure) data type to keep our switch/LED
// data tidy and readily accessible
struct switch control {
                           // struct member meanings:
                           // type of switch connected
 byte sw type;
 byte sw pin;
                          // digital input pin assigned to the switch
 byte sw_circuit_type; // the type of circuit wired to the switch
 byte sw id;
                           // holds the switch id given by the add.switch function
for this switch
 byte sw_output_pin;
                           // digital pin to associate switch to
 bool sw_output_level;
                           // define the status level of the defined output pin on
set up
} btl[num switches] = {
                           // 'btl' = buttons, toggles & LEDs
 //..... switch data..... < <pre>coutput pin initial setting
 button_switch, 2, circuit_C1, not_configured,
                                               8, HIGH,
 button_switch, 3, circuit_C2, not_configured, 9, LOW, toggle_switch, 4, circuit_C1, not_configured, 10, HIGH, toggle_switch, 5, circuit_C2, not_configured, 11, LOW
};
// Declare/define the switch instance of given size
Switches my_switches(num_switches);
void setup() {
 // Attach each switches to its defined digital pin/circuit type
  // and store the switch's id back in its struct entry for later use.
 for (byte sw = 0; sw < num_switches; sw++) {</pre>
```

```
int switch_id = my_switches.add_switch(
                       btl[sw].sw_type,
                       btl[sw].sw pin,
                       btl[sw].sw circuit type);
    // Validate the return
    if (switch id < 0) {
      // Error returned - there is a data compatibility mismatch (-2, bad params),
      // or no room left to add switch (-1, add_failure).
      Serial.begin (9600);
     Serial.println(F("Failure to add a switch"));
      if (switch id == add failure) {
       Serial.println(F("add switch - no room to create given switch"));
      } else {
        // Can only be that data for switch is invalid
        Serial.println(F("add_switch - one or more parameters is/are invalid"));
     Serial.println(F("!!PROGRAM TERMINATED!!"));
     Serial.flush();
      exit(1);
   btl[sw].sw id = switch id; // store given switch id for this sw for use later
    // Now associate the defined out for this switch so that every time the switch
    // is activated the associated output will be automatically be flipped.
    // set the output level to whatever is defined in the initialisation data.
    int link result = my switches.link switch to output(
                        switch id,
                        btl[sw].sw_output_pin,
                        btl[sw].sw_output_level);
    if (link result == link failure) {
      // Linking failed, invalid switch id
     Serial.begin (9600);
     Serial.println(F("Failure to link an output to a switch"));
     Serial.println(F("!!PROGRAM TERMINATED!!"));
      Serial.flush();
      exit(2);
  }
}
void loop() {
 do {
    for (byte sw = 0; sw < num switches; sw++) {</pre>
      if (my switches.read switch(btl[sw].sw id) == switched) {
       // Just keep reading, the read function will automatically
       // flip the associated switch output pins for us so we
        // dont need to do anything else
  } while (true);
```

Example 4 – Processing More Button & Toggle Switches

In this example we shall build on the previous examples by implementing six switches – three button and three toggle, to show how we are able to keep adding switches of different wiring schemes. This time we shall incorporate outputs to the serial monitor, LEDs and relays, as follows:

The sketch is configured for 6 switches, 3 x toggle and 3 x button with switches performing the following actions:

- toggle 1 switches a relay, without direct coding, using output linking
- toggle 2 switches a led, without direct coding, using output linking
- toggle 3 also switches a led by direct coding, i.e. not via switch linking
- button 1 produces a switch report using a <ez switch lib> function
- button 2 switches a relay, without direct coding, using output linking
- button 3 switches a led, without direct coding, using output linking

The mappings for switches and outputs are:

	Project N	ame: E	xample	4 - LE	Date: 4 March 2021					
Switch Configs Linked Outputs										
Pin	Switch Type Circuit Type					Initial	Value	Notes		
1 111	Button	Toggle	C1	C2		LOW	HIGH			
2		Х	Х		8		Χ	Relay 1 - no switching coding		
3		Х		Х	9	Х		Led 1 - no switching coding		
4		Χ	Χ					Led 3 - needs switching coding		
5	X			X				Output switch report to serial monitor		
6	X		Х		10		Χ	Relay 2 - no switching coding		
7	Х			Х	11	Х		Led 2 - no switching coding		

The switches are polled in succession and processing occurs via a switch-case set of control statements.

We shall also see how we are able to refer to the status of toggle switches outside of them being read by the read_switch function and show their status by using a button switch.

To note is that in this example we use a multidimensional array to hold our switch data, rather than a struct(ure) as in example 3.1/3.2 – you decide with approach is best. You will also see that a switch-case series of statements are used to process the switches once triggered.

Make sure to open the serial monitor once the sketch is compiled and uploaded and set to 9600 baud and note the switch circuit schemes are changed from previous set ups, just to further mix things up!

Components required	Circuit schemes
2 x button switch	circuit_C2
	Engital read pin abuse Action Microcontroller fagers & cleant & &
1 x button switch	circuit_C1
	Generated 100 orders resolution resolution resolution resolution resolution resolution resolution for the part of
2 x toggle switch	circuit_C1
	General 100 Author Productor Product
1 x toggle switch	circuit_C2
	Digital resid in evitch which same a second
3 x 10k ohm resistors	1 each for each
	circuit C1
3 x LEDs	Standard wiring scheme
3 x 220 ohm resistors	for connected LED
	220 ohm
	011111
	digital
	pin ≡ GND
2 x 5v relays	
Serial monitor	9600 baud

The sketch can be accessed from github here.

```
Ron D Bentley, Stafford, UK
  Mar 2021.
  Example of use of the ez_switch_lib library
  Example 4
  Reading multiple switches (6) of different types and of mixed wiring
  schemes. Additionally, some switches are linked to a digital
  output such that when they are actuated the linked output level
  is flipped (HIGH->LOW, or LOW->HIGH) automatically without the
  need for any end user coding.
  Switch data in this example is preset in a two dimension array
  and may be varied as appropriate.
  The sketch is configured for 6 switches, 3 toggle and 3 button
  with switches performing the following actions:
  toggle 1 switches a relay, without direct coding, using output linking
  toggle 2 switches a led, without direct coding, using output linking
  toggle 3 also switches a led, but not via switch linking
  button 1 produces a switch report using a ez_switch_lib function
  button 2 switches a relay, without direct coding, using output linking
  button 3 switches a led, without direct coding, using output linking
  The switches are polled in succession and processing occurs
  via a switch-case set of control statements.
  This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h> // ez switch lib .h & .cpp files are stored under
```

```
...\Arduino\libraries\ez switch lib\
// Declare/define specific 'my data' for 'my project'
#define num switches 6
// Switch to Pin Macro Definition List:
#define my_toggle_pin_1 2 // digital pin number
#define my toggle pin 2 3 // etc
#define my toggle pin 3 4
#define my button pin 1 5
#define my_button_pin_2 6
#define my_button_pin_3 7
// Digital output pins for linking to switches:
#define relay_1 8 // output pin for relay 1
#define relay_2 9 // output pin for relay 2
#define led_1 10 // output pin for led 1
#define led_2 11 // output pin for led 2
#define led_3 12 // output pin for led 3
#define not configured 255 // used to indicate if the my switch data switch output
pin is to be configured
// Establish type of switch, assigned digital pin and circuit type
\ensuremath{//} for each switch we are connecting. Until we present each
// switch entry to the add.switch function it will not be
// recorded as configured, hence the use of the final column.
// Array row definitions are:
// [sw][0] = switch type, button or toggle
// [sw][1] = digital input pin for the switch
// [sw][2] = how the switch is wired/connected
// [sw][3] = this stores the switch_id returned from add.switch function
             to be used in all calls to the library's functions where
             switches are referenced
// [sw][4] = the digital output pin linked to this switch, if defined
// [sw][5] = the level the output pin is to be set to at initialisation (linking),
              if a linked output is configured - must be LOW or HIGH
//
//
// Note that:
// 'on', 'switched', 'button_switch', 'toggle switch', 'circuit C1'
// and 'circuit C2' are reserved library defined macros.
byte my_switch_data[num_switches][6] =
  // <.....> <.output pin data.>
 toggle_switch, my_toggle_pin_1, circuit_C1, 0, relay_1, HIGH,// linked to relay_1 toggle_switch, my_toggle_pin_2, circuit_C2, 0, led_1, LOW,// linked to led_1 toggle_switch, my_toggle_pin_3, circuit_C1, 0, not_configured, 0,// not linked,
flip led 3 by direct code
 button switch, my button pin 1, circuit C2, 0, not configured, 0,// not linked,
produces switch report
 button_switch, my_button_pin_2, circuit_C1, 0, relay_2, HIGH,// linked to relay_2
 button_switch, my_button_pin_3, circuit_C2, 0, led_2, LOW // linked to led_2
// Declare/define the switch instance of given size
Switches my switches (num switches);
// Set up connected switches as per 'my switch data' configs
void setup()
  Serial.begin(9600);
```

```
// Create/install the defined switches...
 create_my_switches();
  // Set debounce for 20 msecs
 my switches.set debounce(20);
  // initialise the output pin for led 3, as we will deal with
 // flipping this led by direct coding
 pinMode(led 3, OUTPUT);
 digitalWrite(led 3, LOW);
void loop()
 do {
    // Poll all switches - examine each connected switch in turn and, if switched,
    // process its associated purpose.
    for (int sw = 0; sw < num_switches; sw++) {</pre>
     byte switch id = my switch data[sw][3]; // extract the switch id for this
      if (my_switches.read_switch(switch_id) == switched) {
       // This switch ('switch id') has been pressed, so process via its switch-
case code
       if (my switches.switches[switch id].switch type == button switch) {
          Serial.print(F("\nbutton switch on digital pin "));
        } else {
         Serial.print(F("\ntoggle switch on digital pin "));
       byte my_switch_pin = my_switches.switches[switch_id].switch_pin;
        Serial.print(my_switch_pin);
        Serial.println(F(" triggered"));
        // Move to switch's associated code section
        switch (my switch pin)
          case my toggle pin 1:
            // toggle switch 1 triggers a relay (1) which is a linked output
            // so nothing to do here to process the relay
            Serial.print(F("relay 1 switched"));
            break;
          case my toggle pin 2:
            // toggle switch 2 flips a led (1) which is a linked output
            // so nothing to do here to process the relay
            Serial.print(F("led 1 switched"));
          case my_toggle_pin_3:
            // direct coding to flip led_3 following switch actuation (toggle 3)
            static bool led 3 status = LOW; // static because we need to retain
current state between switching
           led 3 status = HIGH - led_3_status; // flip led status
            digitalWrite(led 3, led 3 status);
            Serial.print(F("led 3 switched "));
            break;
          case my button pin 1:
            // button switch 1 used to reveal the current status of the switch
control structure
            // members, number of free switch control slots and the on/off status
of all
            // all toggle switches as their status is maintained
            my_switches.print_switches(); // confirm we are set up correctly
            // Report number of free switch slots remaining
            Serial.print(F("\nNumber of free switch slots remaining = "));
            Serial.println(my_switches.num_free_switch_slots());
            // Report on the current status of the toggle switches
            print toggle status();
            Serial.flush();
           break;
          case my button pin 2:
            // button switch 2 triggers a relay (2) which is a linked output
            // so nothing to do here to process the relay
            Serial.print(F("relay 2 switched"));
            break;
```

```
case my button pin 3:
            // button switch 3 flips a led (2) which is a linked output
            // so nothing to do here to process the relay
            Serial.print(F("led 2 switched"));
            break;
          default:
            // Spurious switch index! Should never arise as this is controlled
            // by the for loop within defined upper bound
            break:
        Serial.flush(); // flush out the output buffer
     }
   }
 while (true);
// Print the current status/setting of each toggle switch configured.
// We scan down my switch data to pick out toggle switches and if they are
// configured access their status.
void print toggle status() {
  Serial.println(F("\nToggle switches setting: "));
  for (byte sw = 0; sw < num switches; sw++) {</pre>
    if (my switch data[sw][0] == toggle switch) {
     Serial.print(F("toggle switch on digital pin "));
     Serial.print(my_switch_data[sw][1]);
      Serial.print(F(" is "));
     byte switch_id = my_switch_data[sw][3]; // this is the position in the switch
control struct for this switch
     if (my switches.switches[switch id].switch status == on) {
       Serial.println(F("ON"));
      } else {
        Serial.println(F("OFF"));
    }
  }
}
// Create a switch entry for each wired up switch, in accordance
// with 'my' declared switch data.
// add switch params are - switch type, digital pin number and circuit type.
// Return values from add switch are:
     >= 0 the switch control structure entry number ('switch id') for the switch
added,
        -1 no slots available in the switch control structure,
        -2 given parameter(s) for switch are not valid.
void create my switches() {
  for (int sw = 0; sw < num switches; sw++) {</pre>
    int switch id =
     my switches.add switch(
       my_switch_data[sw][0], // switch type
        my_switch_data[sw][1], // digital pin number
       my_switch_data[sw][2]);// circuit type
    if (switch id < 0)
    { // There is a data compatibilty mismatch (-2, bad params),
      // or no room left to add switch (-1, add_failure).
      Serial.print(F("Failure to add a switch:\nSwitch entry:"));
      Serial.print(sw);
     Serial.print(F(", data line = "));
     Serial.print(my switch data[sw][0]);
      Serial.print(F(", "));
     Serial.print(my_switch_data[sw][1]);
      Serial.print(F(", "));
      Serial.println(my switch data[sw][2]);
      Serial.println(F("!!PROGRAM TERMINATED!!"));
      Serial.flush();
```

```
exit(1);
 } else {
   // 'switch id' is the switch control slot entry for this switch (sw),
   // so we can use this to know where our switches are
   // in the control structure by keeping a note of them in their
   // my switch data config settings.
   my_switch_data[sw][3] = switch_id;
   // Now deal with any linked output requirement
   if (my_switch_data[sw][4] != not_configured) {
     // there is an output defined for this switch, so link it
     int link result =
      my_switches.link_switch_to_output(
        my_switch_data[sw][5]); // initial level, HIGH or LOW
     if (link result == link failure ) {
       // linking failed, invalid switch id
       Serial.println(F("Failure to link an output to a switch"));
       Serial.println(F("!!PROGRAM TERMINATED!!"));
      Serial.flush();
       exit(2);
   }
// End create my switches
```

Example 5 – Using the Libraries Switch Structure Variables

In this final example we see how we can extend the use of switches by accessing their internal control data and develop a sketch that will allow the hours and minutes of an external timer display to be altered independently of each other.

In this sketch we use one toggle switch to 'activate' the time change cycle, with a linked output to a LED that will automatically illuminate/extinguish on toggle switching, and two button switches, each allowing hours and minutes to be advanced independently.

The code will also allow the button switches to operate in one of two modes – 'single-shot' with each rapid button push advancing the time by +1 (hour or minute) or continuous advance by keeping the button switch pressed.

The external time display is simulated by the sketch with confirmation of <hour:minute> being written to the serial monitor.

The mappings for switches and outputs are:

	Project N	ame: E	xample	e 4 – Ti	Date: 4 March 2021					
	Swi	tch Confi	igs							
Pin	Switch	n Type	Circui	t Type	Pin	Initial	Value	Notes		
Pin	Button	Toggle	C1	C2		LOW	HIGH			
10				~	2	Х		Brings adjust code active, LED on when		
10		^		^		^		active		
11	Х			Х				Hour adjust button		
12	Х			Х				Minute adjust button		

Components required	Circuit schemes
1 x toggle switch	circuit C2 (ground) Digital read pin switch +5v pin Arduino Microcontroller Figure 2 - Circuit C2
2 x button switch	circuit C2 Ov (ground) Digital read pin switch +5v pin Arduino Microcontroller Figure 2 - Circuit C2
1 x LEDs	Standard wiring scheme for
1 x 220 ohm resistors	connected LED 220 ohm digital pin GND

The sketch can be accessed from github here.

```
Ron D Bentley, Stafford, UK
  Mar 2021
  Example of use of the ez switch lib library
  Example 5 - time adjustment sketch
  This example shows the use of button and toggle switches to
  adjust an external time display.
  To implement this successfully we need to use button switches
  to adjust hours and minutes individually. We implement this as
  follows:
  Toggle switch - when on, this will activate the time
  adjustment process bringing the two button switches active.
  When active,
     1 button switch will advance the hours
     1 button switch will advance minutes.
  In this implementation, we wish to advance the times as follows:
     a. if a button is pressed and released immediately, then
        the hour/minute will be advanced by 1, respectively, for
        each press/release
     b. if a button is pressed and kept pressed, then the hour/minute
        will be continually advanced, respectively, automatically
        until it is released.
  To accomplish a) and b) we use the standard read_switch function
  for the button switches, but we examine their transition
  status, as we are not interested in a return of 'switched' or not.
  This is an internal flag that is set to true when a button
  switch is pressed until the time it is released. The specific
  switch flag is 'switches[switch_id].switch_pending'.
  This is true when in transition (pending), false otherwise.
  By using this flag we are able to utilise the button switches
  in either single 'shot mode' or continuous mode for time advancement.
  This is an additional feature of the capabilities of the
  ez switch lib library, and is one that can be used in many
  similar applications.
  As a final feature, the design links the timer adjust toggle switch
  to a LED such that the LED is illuminated when the timer adjust
  mode is active, i.e. the toggle switch actuated. This linking is
  configured using the ez_switch_lib function 'link_switch_to_output'.
  This example and code is in the public domain and
  may be used without restriction and without warranty.
#include <Arduino.h>
#include <ez switch lib.h>
                             2 // LED illuminated when adjust switch on
#define adjust led
                            10 // a physical button switch, masquerading as a
#define hour adjust switch
toggle switch
                             11 // physical button switch, masquerading as a
#define min_adjust_switch
toggle switch
#define adjust switch
                             12 // actual toggle switch
int hour id, min id, adjust id; // used to record switch ids when declared to
ez_switch lib
int hour
            = 0; // initial hour setting
            = 0; // initial minute setting
int min
int now_time = 0; // to decide if there has been a time adjustment change
int prev time = 0; // ditto
#define sensitivity 250 // msecs - used to provide a short delay between switch
```

```
reading during adjustments
Switches my switches (3); // only 3 switches to be declared
void setup() {
 Serial.begin(9600);
                       // we will use the serial monitor to demonstrate
adjustment process
 // declare the switches we wish to use
 adjust id = my switches.add switch(toggle switch, adjust switch, circuit C2);
 // link adjust switch to LED for auto flipping to show switch is on/off
 my switches.link switch to output (adjust id, adjust led, LOW);
 hour_id = my_switches.add_switch(button_switch, hour_adjust_switch, circuit_C2);
 min id = my switches.add switch (button switch, min adjust switch,
void loop() {
 // keep polling the adjust switch and action if on
 do {
   my_switches.read_switch(adjust_id); // establish switch status
   if (my switches.switches[adjust id].switch status == on) {
     adjust time(); // adjust switch is on so process any time adjustments
  } while (true);
}
// Adjust the hours and minutes settings whilst
// the time adjust switch is on
void adjust time() {
    // While the time adjust switch is set,
   // adjust time according to hour/min switches
   my switches.read switch (hour id);
   if (my_switches.switches[hour_id].switch_pending == true) {// Condition A<sup>1</sup>
     // hour switch is pressed and in transition
     hour = (hour + 1) % 24;
     now time = hour * 60 + min; // minutes since 00:00 hours
   my switches.read switch(min id);
   if (my switches.switches[min id].switch pending == true) {// Condition B2
     // minute switch is pressed and in transition
     min = (min + 1) % 60;
     now time = hour * 60 + min; // minutes since 00:00 hours
   if (now_time != prev_time) {
     // Either hour button or minute button, or both,
     // have been pressed, so update any external display
     // here with hours/mins.
     // In the absence of an external display, we use the
     // serial monitor to show te adjustments
     if (hour < 10) {
       Serial.print("0"); // leading 0
     Serial.print(hour);
     Serial.print(":");
     if (min < 10) {
       Serial.print("0"); // leading 0
     Serial.println(min);
     prev time = now time;
     delay(sensitivity); // wait a short time between switch presses
```

```
With version 3.00 of the ez_switch_lib library we have an alternative means of applying the conditional tests at A and B above:

Instead of:

if (my switches.switches[hour id].switch pending == true) {
```

we can use if (my_switches.switch_is_pressed(hour_id)) {

and, instead of: if (my_switches.switches[min_id].switch_pending == true) {

we can use if (my_switches.switch_is_pressed(min_id)) {

ibid.

ARDUINO/ESP 32 - Switch Library User Guide

```
}
    my_switches.read_switch(adjust_id); // establish current adjust switch status
} while (my_switches.switches[adjust_id].switch_status == on ); // keep going
until deselected
}
```

Corollary

The <switch_lib> library's functions allow switches of different types, wired in different wiring schemes to be simply read. At their native level they return if a switch has 'switched' or '!switched'. This simple binary result is okay for many applications and uses, however, there are occasions when a little more sophistication and flexibility may be needed. Example 5, above, illustrates how it is possible to make use the library's switch data struct(ure) elements to design advantage; but there are other possibilities!

This section of the User Guide explores some of the deeper <ez_switch_lib> capabilities available to the end user developer.

Switch Mismatching

We add switches into the library's active switch control structure using the add_switch function. This allows us to specify a switch type (button_switch or toggle_switch), the digital pin associated with the switch and how the switch is wired (circuit_C1 or circuit_C2). Ordinarily, we will correctly match the physical switch with the switch type we declare using add_switch.

However, if we mismatch the physical switch type with the declared switch type we can use this to our advantage.

Recap the normal operation of both type of switches:

- button switch it is considered to have been switched when it goes through the cycle OFF-ON-OFF. That is, if we press and release the switch we will read one switching event. At rest it will be OFF
- toggle switch it is considered to have been switched when it goes through either OFF-ON or ON-OFF. That is, if we flip the switch up and down we will read two switching events. At rest it will be either OFF or ON.

Buttons as a Toggles

Let's look at using a button switch masquerading as a toggle switch. That is, we physically connect a button switch but declare it using the add_switch function as a toggle switch. What is the result?

The switch is initially OFF. We now press it and release it. As far as the library is concerned this is a toggle switch that has just been flipped up and down (i.e. switched to ON and then to OFF). We therefore get <u>two switched</u> events, one for the ON event and one for the OFF event. No surprises there.

So, how can this be useful? Well, have a look at the 'Buttons & Lights' game on github (<u>link</u>). This game uses four button switches each associated/linked to a different coloured LED. The objective of the game is to re-enter a random sequence of lights in the correct order using the button switches.

What we want to achieve is for each button press to illuminate a linked LED for the duration of the press only (i.e. for the LED to be turned on when the button is pressed and turned off when released) and for that button guess to be recorded only <u>after</u> the button's release.

We achieve the game's central requirement by:

- 1. using simple button switches
- 2. declaring the button switches as toggle switches using the add_switch function. That is, the button switches will be masquerading as toggle switches to our advantage
- 3. linking each switch to an output pin which has a different coloured LED wired in

The key part of the game, after the switches and associated linkages are made in setup() is:

```
1. for (int sw = 0; sw < num switches; sw++) {</pre>
2. byte sw id = pseudo toggles[sw][2]; // switch id given by add switch
3. bool sw status = my switches.read switch(sw id);
4. if (sw status == switched &&
    my switches.switches[sw id].switch status == !on)
5.
6.
    // this switch was pressed on and now switched to off and the
7.
8.
    // linked output will have been set to LOW (i.e. LED is off),
    // so record it - add to guess list
    guesses[0]++;
10.
11.
      guesses[guesses[0]] = sw; // record this switch's index
    }
12.
13. }
```

Line 3 reads the status of the current switch under consideration. Because we have linked our switches to outputs wired with LEDs, these LEDs will automatically turn to on/off when the button switches are pressed/released, respectively, thereby providing a visual confirmation of switch selection – just as we require, but note that we have not explicitly coded this.

Lines 4 and 5 test if the switch has been switched, but <u>also</u> that the switch has gone from on to off (!on). This is the condition we need to register a single user guess following a complete button press/release cycle. Waiting for the !on condition ensures that the switch's linked out LED is turned to off after button switch release. If we tested for just on, the LED would not be extinguished.

We can only do this because the switch is declared as a toggle switch and its status is therefore always maintained by the library in the switch control struct(ure) whenever actuated - switches [sw id].switch status.

We could not have used button switches declared as button switches to readily achieve the above without a degree of additional direct coding, or similarly toggle switches. What the above example demonstrates is that $\langle ez_switch_lib \rangle$ can provide a deeper degree of flexibility and capabilities to the developer.

A Library Supporting the Reading of Multiple, Mixed-type Simple Switches & Circuits

Many Switches, One Interrupt Service Routine (ISR)

The ability to link a digital output pin to a switch so that it will be automatically flipped on switch actuation can be a useful feature to the end user developer. By way of an academic exercise the sketch below was developed to explore the use of this feature to link multiple switches (of different types and wiring schemes) to a single interrupt service routine or ISR.

Recall that the linking of a switch to an output pin³ for automatic switching/flipping only occurs via use of the switch read function read switch. The other two switch reading functions, read button switch and read toggle switch, will not process any linked outputs. This feature provides a degree of flexibility in that there may be circumstances when a switch needs to be read without affecting any linked output.

The sketch does not include very much code but it is extensively documented and the reader should be well versed at this point with the approach adopted. The switch mappings and outputs for this sketch are:

F	Project Name: Corollary – Multiple Switches, One ISR								te: 29 March 2021	
	Switch Configs Linked Outputs									
Pin	Switch Type Circu			Туре	Pin	Initial Value		Notes		
FIII	Button	Toggle	C1	C2	FIII	LOW	HIGH	1		
2								Interrupt pin, not physical connected		
3	Х		Χ		2	Х		1 st button switch		
4	Х		Χ		2	Х		2 nd button swich		
5		Х	Χ		2	Х		1 st toggle switch		
6		Χ		Χ	2	Χ		2 nd toggle swich		

The sketch may be accessed from github <u>here</u>.

```
// Ron Bentley, Stafford UK
// March 2021
11
// This example and code is in the public domain and may be used without
// restriction and without warranty.
Example sketch - Multiple switches handled by a single interrupt
         //
// This sketch demonstrates how the ez_switch_lib may be used to handle multiple
// switches (button & toggle switches in this example) with a single interrupt
routine.
// The use of the ez_switch_lib library for switches provides:
//
   * switch type independence
    * switch circuit type independence
   * automatic multiple switch debounce handling
//
   * parallel switching capabilities, and
//
   * automatic interrupt handling for all switches
//
// The sketch is designed such that when a toggle switch is switched to the 'on'
// position, or a button switch is pressed AND released a linked output connected
// to a common interrupt pin will cause the associated interrupt handler to be
// fired to process the switch 'on' event.
// NB, and to recap:
// 1. a toggle switch will fire the interrupt when set to 'on'. Setting it back
//
       off does not fire the interrupt
   2. a button switch will ONLY fire the interrupt when pressed 'on' AND
//
11
       then released
//
     to off. The interrupt fires on completion of the button switch cycle.
```

We use the function link switch to output to achieve this capability.

```
//
// Note that:
// 1. error checking on switch set ups has been removed post development.
//
    2. the serial monitor is used to confirm the correct operation of the sketch.
// The sketch will use digital pin 2 as the common interrupt pin and
// pins 3, 4, 5 and 6 as the switch pins.
// For an understanding of the capabilities of the 'ez_switch_lib' library see
// the USER GUIDE:
// https://github.com/ronbentley1/ez switch lib-Arduino-
Library/blob/main/ez_switch_lib_user_guide%2C%20v1.02.pdf
#include <ez switch lib.h>
       interrupt pin = 2; // external interrupt pin
#define num switches
// 'my_switches' layout.
// one row of data for each switch to be configured, as follows:
// [][0] = switch type
// [][1] = digital pin connected to switch
// [][2] = the switch_id provided by the add_switch function for the
          switch declared
// [][3] = the circuit type connecting the switch, here all switches
//
          will have 10k ohm pull down resistors wired
byte my switches[num switches][4]
 button_switch, 3, 0, circuit_C1,
 button_switch, 4, 0, circuit_C1,
 toggle_switch, 5, 0, circuit_C1,
  toggle switch, 6, 0, circuit C1
};
// Create the 'Switches' instance (ms) for the given number of switches
Switches ms (num switches);
void setup() {
  // Add all switches to library switch control structure
  // and link all to same interrupt pin as a linked output
  for (byte sw = 0; sw < num_switches; sw++) {</pre>
   my_switches[sw][2] = ms.add_switch(
                        my_switches[sw][0], // switch type
my_switches[sw][1], // digital pin switch is wired to
my_switches[sw][3]); // type of circuit switch is wired as
    ms.link switch to output(
    my_switches[sw][2], // switch id
     interrupt pin,
                        // digital pin to link to for interrupt
     LOW);// start with interrupt pin LOW, as interrupt will be triggered on RISING
  // Now establish the common interrupt service routine (ISR) that
  // will be used for all declared switches
  attachInterrupt(
    digitalPinToInterrupt(interrupt pin),
    switch_ISR, // name of the sketch's ISR function to handle switch interrupts
              // trigger on a rising pin value
    RISING);
  Serial.begin(115200);
} // end of setup function
void loop() {
 // Keep testing switch, and let the interrupt handler do its thing
  // once a switch is switched to 'on'
  for (byte sw = 0; sw < num switches; sw++) {
   ms.read_switch(my_switches[sw][2]); // my_switches[sw][2] is the switch id
                                        // for switch sw
  }
}
```

ARDUINO/ESP 32 - Switch Library User Guide

```
// ISR for handling interrupt triggers arising from associated switches
// when they transition to on. The routine knows which switch has generated
// the interrupt because the ez switch lib switch read functions record the
// actuated switch in the library variable 'last switched id'.
//
// The routine does nothing more than demonstrate the effectiveness of the
// use of a single ISR handling multiple switches by using the serial monitor
// to confirm correct operation.
void switch ISR()
 // Reset the interrupt pin to LOW, so that any other switch will fire the
 // interrupt whist one or more switches in transition stage
 byte switch_id = ms.last_switched_id; // switch id of switch currently
                                    // switched to on
 digitalWrite(ms.switches[switch_id].switch_out_pin, LOW);
 // For button switches only, reset the linked output pin status to LOW so that
 // it will trigger the interrupt at every press/release cycle.
 if (ms.switches[switch_id].switch_type == button_switch) {
   ms.switches[switch id].switch out pin status = LOW;
 Serial.print("** Interrupt triggered for switch id ");
 Serial.println(switch_id); // 'this_switch_id' is the id of the triggering switch
 Serial.flush();
} // end of switch ISR
```

There are other options to be explored.....enjoy!