Introduction to the RISC-V ISA

Rishiyur S. Nikhil December, 2022



Disclaimer: any errors/opinions herein should be attributed only to the author and not to RISC-V International or to Bluespec, Inc.

Contents

- RISC-V: general information
- RISC-V ISA's modular organization
 - I(nteger) + optional extensions M, A, F, D, C, ...
 - Unprivileged and Privileged
- Unprivileged ISA overview (I, M, A, F, D, C)
- Memory and I/O
- Privileged ISA
 - CSRs (Control and Status registers)
 - Exceptions (traps and interrupts)
 - Supervisor privilege level and Virtual Memory
- Common artefacts attached to cores:
 - CLIC: software interrupts, real-time timer, timer interrupts
 - PLIC: Platform-Level Interrupt controller
 - Debug Module
- Comments on software for RISC-V

Primary References

Unprivileged and Privileged ISAs:

- The RISC-V Instruction Set Manual; Volume I: Unprivileged ISA, Document Version 20191213, Andrew Waterman and Krste Asanović (editors), December 13, 2019, 238 pp.
- The RISC-V Instruction Set Manual; Volume II: Privileged Architecture, Document Version 20211203, Andrew Waterman, Krste Asanović1 and John Hauser (editors) December 4, 2021, 155 pp.

PDFs for all RISC-V specs can be found at:

https://riscv.org/technical/specifications/

Note: ARM's 64-bit architecture (ARM v8-A) spec is over 6000 pages long.

"RISC-V", per se, is *only* an ISA (Instruction Set Architecture)

- Only a specification, a document, describing:
 - "Architecturally-visible" state: registers (PC, integer, PC, floating point, CSRs)
 - Repertoire of instructions, and binary representation of each one
 - Semantics (meaning) of each instruction: how it accesses/changes architecturally visible state

i.e., it's the abstract view of the machine targeted by general-purpose compilers.

- Not an actual CPU, processor, chip, core, ...
- Not within the purview of the ISA: micro-architectural choices in particular implementations, such as pipeline structure, instruction pre-fetch, branch-prediction and other speculation, bypassing, superscalarity, out-of-order execution, multithreading, caches, MHz, CPI, energy consumption, etc.


There can be a variety of implementations varying widely on these dimensions, from IoT microcontrollers to server-class cores to supercomputing cores.

RISC-V is an *Open* ISA, unlike other ISAs

- There are many well-known, mature ISAs—x86, ARMv8, Power, Sparc, ...—but they are all *proprietary*, requiring licenses and fees if you want to implement them.
- RISC-V does not require any license fee to implement.¹
 - This is central to all the current commercial interest in RISC-V.
 - This is central to *architecture researchers* who wish to innovate on state-of-the-art implementations, and indeed was the original motivation behind the creation of RISC-V by a team at Univ. of California, Berkeley.
- RISC-V seems well on its way to becoming one of the three dominant ISAs (along with x86 and ARM).

¹ The name "RISC-V" is owned by RISC-V International, and you need their permission to use the name in commercial naming of products.

The RISC-V ISA has a *Modular* Organization

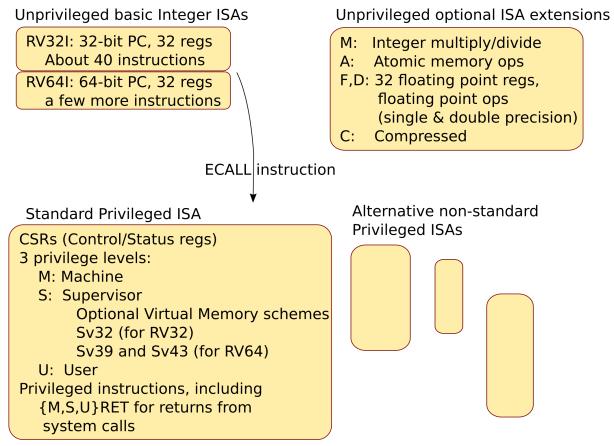

PDFs for all RISC-V specs can be found at: https://riscv.org/technical/specifications/

- Many other standard extensions exist: vector, crypto, bit-manipulation, ...
- Implementors can choose according to target, from small IoT/Embedded (e.g., RV32IC "bare-metal") to server-class/HPC (e.g., RV64IMAFDC with vector, crypto, bit-manipulation and standard Privileged ISA)

• HW facilities allow SW to discover the configuration on which it is running.

Instruction formats

PDFs for RISC-V specs can be found at: https://riscv.org/technical/specifications/

- All instructions are 32-bits wide, for both RV32 and RV64.
- There are very few instruction formats (simplifies hardware-decoder in CPU pipelines).

130											Volume	: RI	SC-V U	npriv	ileged	ISA V20191213
	31	2	27	26	25	24		20	19	15	14 12	11	7	6	0	
		func	ct7				rs2		rs	1	funct3	1	rd	op	code	R-type
			in	nm[11:()]			rs	1	funct3	1	rd	op	code	I-type
		imm[11:5	5]			rs2		rs	1	funct3	imn	n[4:0]	op	code	S-type
		imm[12]	2 10	:5]			rs2		rs	1	funct3	imm[4:1 11]	op	code	B-type
	imm[31:12]				,			1	rd	op	code	U-type				
				-	imn	n[20]	10:1	11 19	9:12]			1	rd	op	code	J-type

- In the optional "C" extension ("compressed"), instructions are 16-bits wide, for small-footprint systems (IoT/Embedded/Edge).
- Each 16-bit C instruction expands to a standard 32-bit RV32/64 instruction; so only needs hardware at the front-end of the CPU pipeline (16-bit fetch and expansion).

Base Unpriviliged Integer ISA (with 32 32-bit or 64-bit registers)

PDFs for RISC-V specs can be found at: https://riscv.org/technical/specifications/

130 Volume I: RISC-V Unprivileged ISA V20191213

31 27 26 25	24 20	19 15	14 12	11 7	6 0	
funct7	rs2	rs1	funct3	rd	opcode	R-type
imm[11:	0]	rs1	funct3	rd	opcode	I-type
imm[11:5]	rs2	rs1	funct3	imm[4:0]	opcode	S-type
imm[12 10:5]	rs2	rs1	funct3	imm[4:1 11]	opcode	B-type
	imm[31:12]	rd	opcode	U-type		
imi	n[20 10:1 11 19]	rd	opcode	J-type		

	[]				-F	J
	RV32I	Base Instri	iction S	et		
	imm[31:12]			rd	0110111	LUI
	imm[31:12]			rd	0010111	AUIPC
im	m[20 10:1 11 1		rd	1101111	JAL	
imm[11:	0	rs1	000	rd	1100111	JALR
imm[12 10:5]	rs2	rs1	000	imm[4:1 11]	1100011	BEQ
imm[12 10:5]	rs2	rs1	001	imm[4:1 11]	1100011	BNE
imm[12 10:5]	rs2	rs1	100	imm[4:1 11]	1100011	BLT
imm[12 10:5]	rs2	rs1	101	imm[4:1 11]	1100011	BGE
imm[12 10:5]	rs2	rs1	110	imm[4:1 11]	1100011	BLTU
imm[12]10:5]	rs2	rs1	111	imm[4:1 11]	1100011	BGEU
imm[11:	0]	rs1	000	rd	0000011	LB
imm[11:	0]	rs1	001	$_{\mathrm{rd}}$	0000011	LH
imm[11:	0]	rs1	010	$_{\mathrm{rd}}$	0000011	LW
imm[11:	0	rs1	100	rd	0000011	LBU
imm[11:	0]	rs1	101	rd	0000011	LHU
imm[11:5]	rs2	rs1	000	imm[4:0]	0100011	SB
imm[11:5]	rs2	rs1	001	imm[4:0]	0100011	SH
imm[11:5]	rs2	rs1	010	imm[4:0]	0100011	SW
imm[11:	0]	rs1	000	rd	0010011	ADDI
imm[11:	0]	rs1	010	rd	0010011	SLTI
imm[11:	0]	rs1	011	rd	0010011	SLTIU
imm[11:	0]	rs1	100	rd	0010011	XORI
imm[11:	0]	rs1	110	rd	0010011	ORI
imm[11:	0]	rs1	111	rd	0010011	ANDI
0000000	shamt	rs1	001	rd	0010011	SLLI
0000000	shamt	rs1	101	rd	0010011	SRLI
0100000	shamt	rs1	101	rd	0010011	SRAI
0000000	rs2	rs1	000	rd	0110011	ADD
0100000	rs2	rs1	000	$_{\mathrm{rd}}$	0110011	SUB
0000000	rs2	rs1	001	rd	0110011	SLL
0000000	rs2	rs1	010	rd	0110011	SLT
0000000	rs2	rs1	011	rd	0110011	SLTU
0000000	rs2	rs1	100	rd	0110011	XOR
0000000	rs2	rs1	101	rd	0110011	SRL
0100000	rs2	rs1	101	rd	0110011	SRA
0000000	rs2	rs1	110	rd	0110011	OR
0000000	rs2	rs1	111	rd	0110011	AND
fm pre		rs1	000	rd	0001111	FENCE
000000000		00000	000	00000	1110011	ECALL
000000000	0001	00000	000	00000	1110011	EBREAR

- RV32I ISA (Unprivileged, 32 x 32-bit registers, integer only) has a mere 40 instructions (left)
- RV64I ISA (32 x 64-bit registers) adds 15 more instructions (below)

$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$												
imm[11:	imm[11:0]			$^{\mathrm{rd}}$	0000011	LWU						
imm[11:	[0]	rs1	011	$^{\mathrm{rd}}$	0000011	LD						
imm[11:5]	rs2	rs1	011	imm[4:0]	0100011	SD						
000000	shamt	rs1	001	rd	0010011	SLLI						
000000	$_{\mathrm{shamt}}$	rs1	101	$^{\mathrm{rd}}$	0010011	SRLI						
010000	shamt	rs1	101	rd	0010011	SRAI						
imm[11:	[0]	rs1	000	rd	0011011	ADDIW						
0000000	shamt	rs1	001	rd	0011011	SLLIW						
0000000	shamt	rs1	101	rd	0011011	SRLIW						
0100000	shamt	rs1	101	rd	0011011	SRAIW						
0000000	rs2	rs1	000	rd	0111011	ADDW						
0100000	rs2	rs1	000	rd	0111011	SUBW						
0000000	rs2	rs1	001	rd	0111011	SLLW						
0000000	rs2	rs1	101	$^{\mathrm{rd}}$	0111011	SRLW						
0100000	rs2	rs1	101	rd	0111011	SRAW						

- AUIPC (Add Upper Immediate to PC): enables position-independent code.
- Pure "Load-Store" ISA, *i.e.*, complete separation of memory access instructions from all other instructions (Lx, Sx).
- All I/O is via memory-mapped registers; no separate instructions.
- ECALL: "call-out" to Privileged ISA. Details are part of Privileged Spec.
- EBREAK: "call-out" to debugging environment (unspecified).

Possibly the cleanest, most orthogonal, industrial-strength ISA ever.

"M" extension: Integer Multiply and Divide instructions

	RV32M Standard Extension												
0000001	rs2	rs1	000	$^{\mathrm{rd}}$	0110011	MUL							
0000001	rs2	rs1	001	$^{\mathrm{rd}}$	0110011	MULH							
0000001	rs2	rs1	010	$^{\mathrm{rd}}$	0110011	MULHSU							
0000001	rs2	rs1	011	$^{\mathrm{rd}}$	0110011	MULHU							
0000001	rs2	rs1	100	$^{\mathrm{rd}}$	0110011	DIV							
0000001	rs2	rs1	101	$^{\mathrm{rd}}$	0110011	DIVU							
0000001	rs2	rs1	110	$^{\mathrm{rd}}$	0110011	REM							
0000001	rs2	rs1	111	$^{\mathrm{rd}}$	0110011	REMU							
RV64M	Standard Ex	ctension (in	additio	n to RV32N	м)								
0000001	rs2	rs1	000	$^{\mathrm{rd}}$	0111011	MULW							
0000001	rs2	rs1	100	$^{\mathrm{rd}}$	0111011	DIVW							
0000001	rs2	rs1	101	$^{\mathrm{rd}}$	0111011	DIVUW							
0000001	rs2	rs1	110	$_{\mathrm{rd}}$	0111011	REMW							
0000001	rs2	rs1	111	$^{\mathrm{rd}}$	0111011	REMUW							

- S: signed; U: Unsigned: enables signed and unsigned multiplications.
- H: upper half of double-width data: enables 64-bit multiplications on RV32, 128-bit multiplications on RV64.

• W: enables 32-bit multiplications on RV64.

"A" extension: Atomic memory operations

	RV32A Standard Extension													
00010	aq	rl	00000	rs1	010	$_{\mathrm{rd}}$	0101111	LR.W						
00011	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	SC.W						
00001	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOSWAP.W						
00000	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOADD.W						
00100	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOXOR.W						
01100	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOAND.W						
01000	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOOR.W						
10000	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOMIN.W						
10100	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOMAX.W						
11000	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOMINU.W						
11100	aq	rl	rs2	rs1	010	$^{\mathrm{rd}}$	0101111	AMOMAXU.W						
								_						
	DVC	1 1 6	tondond Fut	tonsion (in	- d d:4:	40 DV22 A	`	_						
	1	_	Standard Ext	,			,	libb						
00010	aq	rl	00000	rs1	011	rd	0101111	LR.D						
00010 00011	aq aq	rl rl	00000 rs2	rs1 rs1	011 011	rd rd	0101111 0101111	SC.D						
00010 00011 00001	aq aq aq	rl rl rl	00000 rs2 rs2	rs1 rs1 rs1	011 011 011	rd rd rd	0101111 0101111 0101111	SC.D AMOSWAP.D						
00010 00011 00001 00000	aq aq aq aq	rl rl rl	00000 rs2 rs2 rs2	rs1 rs1 rs1 rs1	011 011 011 011	rd rd rd rd	0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D						
00010 00011 00001 00000 00100	aq aq aq aq aq	rl rl rl rl	00000 rs2 rs2 rs2 rs2	rs1 rs1 rs1 rs1 rs1	011 011 011 011 011	rd rd rd rd rd	0101111 0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D AMOXOR.D						
00010 00011 00001 00000 00100 01100	aq aq aq aq	rl rl rl rl rl	00000 rs2 rs2 rs2 rs2 rs2 rs2	rs1 rs1 rs1 rs1 rs1 rs1	011 011 011 011 011 011	rd rd rd rd rd rd	0101111 0101111 0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D AMOXOR.D AMOAND.D						
00010 00011 00001 00000 00100 01100 01000	aq aq aq aq aq	rl rl rl rl rl rl rl rl rl	00000 rs2 rs2 rs2 rs2 rs2 rs2 rs2 rs2	rs1 rs1 rs1 rs1 rs1 rs1 rs1	011 011 011 011 011 011 011	rd rd rd rd rd rd rd	0101111 0101111 0101111 0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D AMOXOR.D AMOAND.D AMOOR.D						
00010 00011 00001 00000 00100 01100 01000 10000	aq aq aq aq aq aq	rl	00000 rs2 rs2 rs2 rs2 rs2 rs2 rs2 rs2 rs2	rs1 rs1 rs1 rs1 rs1 rs1 rs1	011 011 011 011 011 011 011	rd	0101111 0101111 0101111 0101111 0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D AMOXOR.D AMOAND.D AMOOR.D AMOMIN.D						
00010 00011 00001 00000 00100 01100 01000 10000	aq aq aq aq aq aq	rl rl rl rl rl rl rl rl rl	00000 rs2	rs1 rs1 rs1 rs1 rs1 rs1 rs1	011 011 011 011 011 011 011 011	rd rd rd rd rd rd rd	0101111 0101111 0101111 0101111 0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D AMOXOR.D AMOAND.D AMOOR.D AMOOR.D AMOMIN.D AMOMAX.D						
00010 00011 00001 00000 00100 01100 01000 10000	aq aq aq aq aq aq aq	rl	00000 rs2 rs2 rs2 rs2 rs2 rs2 rs2 rs2 rs2	rs1 rs1 rs1 rs1 rs1 rs1 rs1	011 011 011 011 011 011 011	rd	0101111 0101111 0101111 0101111 0101111 0101111 0101111 0101111	SC.D AMOSWAP.D AMOADD.D AMOXOR.D AMOAND.D AMOOR.D AMOMIN.D						


• LR/SC: "Load Reserved/Store Conditional" on a memory location

 \bullet AMOxxx: atomic read-modify-writes on a memory location

 \bullet W ops operate on aligned 32-bit words

• D ops operate on aligned 64-bit words

AMO instructions (Atomic Memory Ops)

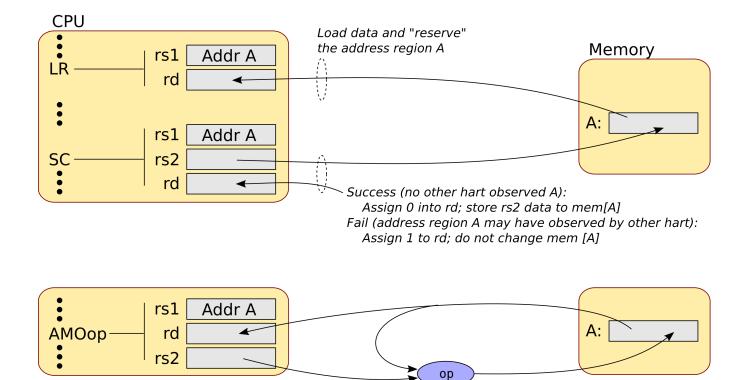

- LR/SC: Typically in a loop, until success
- LR/SC: Many nuances on "address region", "observed by another hart", number and type of instructions between the LR and SC, ...

^{* &}quot;hart" = "hardware thread", a single hardware thread, based on a single instruction-fetch unit

"F" extension: IEEE Single-precision Floating Point

State: 32 x 32-bit floating-point registers, plus these CSRs (Control/Status Regs)

Number	umber Privilege Name Description							
	Floating-Point Control and Status Registers							
0x001	Read/write	fflags	Floating-Point Accrued Exceptions.					
0x002	Read/write	frm	Floating-Point Dynamic Rounding Mode.					
0x003	Read/write	fcsr	Floating-Point Control and Status Register (frm + fflags).					

Instructions:

	RV32F Standard Extension												
	imm[11:0]		rs1	010	$_{\mathrm{rd}}$	0000111	FLW						
imm[11	:5]	rs2	rs1	010	imm[4:0]	0100111	FSW						
rs3	00	rs2	rs1	$_{ m rm}$	rd	1000011	FMADD.S						
rs3	00	rs2	rs1	$_{ m rm}$	rd	1000111	FMSUB.S						
rs3	00	rs2	rs1	$_{ m rm}$	rd	1001011	FNMSUB.S						
rs3	00	rs2	rs1	$_{ m rm}$	rd	1001111	FNMADD.S						
000000	00	rs2	rs1	$_{ m rm}$	rd	1010011	FADD.S						
000010	00	rs2	rs1	$_{ m rm}$	rd	1010011	FSUB.S						
000100	00	rs2	rs1	$_{ m rm}$	rd	1010011	FMUL.S						
000110	0001100		rs1	$_{ m rm}$	rd	1010011	FDIV.S						
010110	0101100		rs1	$_{ m rm}$	$_{ m rd}$	1010011	FSQRT.S						
001000)U	ren	re1	nnn	rd	1010011	FSCNIS						

(... more ... please consult spec)

RV64F	RV64F Standard Extension (in addition to RV32F)											
1100000	00010	rs1	rm	rd	1010011	FCVT.L.S						
1100000	00011	rs1	$_{ m rm}$	$^{\mathrm{rd}}$	1010011	FCVT.LU.S						
1101000	00010	rs1	$_{ m rm}$	$_{\mathrm{rd}}$	1010011	FCVT.S.L						
1101000	00011	rs1	rm	rd	1010011	FCVT.S.LU						
	•	•				-						

"D" extension: IEEE Double-precision Floating Point

32 x 64-bit floating-point registers, plus these CSRs (Control/Status Regs)

Number	Privilege	Name	Description					
	Floating-Point Control and Status Registers							
0x001	Read/write	fflags	Floating-Point Accrued Exceptions.					
0x002	, , , , , , , , , , , , , , , , , , , ,							
0x003	Read/write	fcsr	Floating-Point Control and Status Register (frm + fflags).					

Instructions:

	RV32D Standard Extension													
	imm[11:0		rs1	011	rd	0000111	FLD							
imm[11	l:5]	rs2	rs1	011	imm[4:0]	0100111	FSD							
rs3	01	rs2	rs1	$_{ m rm}$	rd	1000011	FMADD.D							
rs3	01	rs2	rs1	rm	rd	1000111	FMSUB.D							
rs3	01	rs2	rs1	$_{ m rm}$	rd	1001011	FNMSUB.D							
rs3	01	rs2	rs1	$_{ m rm}$	rd	1001111	FNMADD.D							
000000	01	rs2	rs1	rm	rd	1010011	FADD.D							
000010	01	rs2	rs1	rm	rd	1010011	FSUB.D							
000100	0001001		rs1	$_{ m rm}$	rd	1010011	FMUL.D							
000110	0001101		rs1	$_{ m rm}$	rd	1010011	FDIV.D							
010110	0101101		rs1	$_{ m rm}$	rd	1010011	FSQRT.D							
001000	N1	ren	re1	nnn	rd	1010011	FSCNID							

(... more ... please consult spec)

RV64D Standard Extension (in addition to RV32D)											
1100001	00010	rs1	rm	rd	1010011	FCVT.L.D					
1100001	00011	rs1	rm	rd	1010011	FCVT.LU.D					
1110001	00000	rs1	000	rd	1010011	FMV.X.D					
1101001	00010	rs1	rm	rd	1010011	FCVT.D.L					
1101001	00011	rs1	rm	$^{\mathrm{rd}}$	1010011	FCVT.D.LU					
1111001	00000	rs1	000	$_{\mathrm{rd}}$	1010011	FMV.D.X					

"C" extension: Compressed Instructions for smaller footprint

000	nzuin	nm[5:4 9:6	[2 3]	rd'	00	C.ADDI4SPN (RES, nzuimm=
001	uimm[5:3]	rs1′	uimm[7:6]	rd'	00	C.FLD (RV32/64)
001	uimm[5:4 8]	rs1′	uimm[7:6]	rd'	00	C.LQ (RV128)
010	uimm[5:3]	rs1′	uimm[2 6]	rd'	00	C.LW
011	uimm[5:3]	rs1′	uimm[2 6]	rd'	00	C.FLW (RV32)
011	uimm[5:3]	rs1 ′	uimm[7:6]	rd'	00	C.LD (RV64/128)
100			_		00	Reserved
101	uimm[5:3]	rs1′	uimm[7:6]	rs2′	00	C.FSD (RV32/64)
101	uimm[5:4 8]	rs1′	uimm[7:6]	rs2′	00	C.SQ (RV128)
110	uimm[5:3]	rs1′	uimm[2 6]	rs2′	00	C.SW
111	uimm[5:3]	rs1′	uimm[2 6]	rs2′	00	C.FSW (RV32)
111	uimm[5:3]	rs1 ′	uimm[7:6]	rs2′	00	C.SD (RV64/128)
				I		,

(... more ... please consult spec)

- "C" instructions are 16-bits wide, can be packed two-to-a-32b-word.
- Not standalone; are mixed with standard 32-bit instructions.
- 3-bit register fields refer to the 8 "most popular" registers.
- Each 16-bit C instruction expands to a standard 32-bit RV32/64 instruction; so only needs hardware at the front-end of the CPU pipeline (16-bit fetch and expansion).

• Include M, F, D instructions.

Notes on Memory and I/O

- Pure "Load-Store" ISA (with register base-address + index), *i.e.*, total separation of memory instructions vs. non-memory instructions.
- Flat memory space (address-width depends on RV32 or RV64, and Virtual Memory Scheme).
- All I/O through memory-mapped device registers; no separate I/O instructions.
- Optional PMP CSRs (Physical Memory Protection) can impose base-and-bounds regions on memory with access permissions. This provides lightweight sandboxing without the overheads of full Virtual Memory (MMUs, page tables, address translation, ...).
- FENCE, FENCE.I, and SFENCE.VMA instructions for implementations that need to synchronize multicores, I-Caches and D-Caches, and MMUs with Caches.
- For multicores, RISC-V has an ARM-like "Weak Memory Model", enabling more reordering of memory traffic for higher performance. Also has a a TSO option, which is a stricter memory model (like x86).

Standard Privileged ISA

Note: The separation between Unprivileged and Privileged ISAs is very clean. A CPU implementation can easily implement a non-standard Privileged ISA with the standard Unprivileged ISA, if desired.

Privilege Levels: enables clean *virtualization* (hypervisors, Xen, VMWare, ...)

Level	Code	Name	Comment
3	11	M (Machine)	Highest privilege; firmware, boot loaders,
2	10	Reserved	
1	01	S (Supervisor)	Operating systems (like Linux)
0	00	U (User/Application)	Applications

Implementations do not have to implement all privilege levels (implementation cost tradeoff):


Implemented Levels	Intended Usage
M	Simple embedded systems ("bare metal")
M,U	Secure embedded systems
M,S,U	Full OS + apps

Intro to RISC-V ISA

Standard Privileged ISA: CSRs (Control and Status Registers

- CSRs: additional set of registers in the CPU, identified by 12-bit CSR number.
- Up to 4096 possible CSRs, but most are optional; only a small handful are essential in an implementation.
- CSRs can be accessed programmatically with the CSR instructions shown below, each of which atomically swaps the contents of a CSR with standard integer registers, with some variations and nuances.
- CSR instructions can be used at all privilege levels, but the upper 4 bits of a CSR's number specifies which privilege levels can access that particular CSR, and with which ops (read, read/write).
- Some CSRs are "shadows" of other CSRs: only some bits visible, or read-only vs. read-write (e.g., cycle is a shadow of mcycle).

31	20 19 1	5 14 12 1	11	7 6 0
csr	rs1	funct3	$^{\mathrm{rd}}$	opcode
12	5	3	5	7
source/dest	source	CSRRW	dest	SYSTEM
source/dest	source	CSRRS	dest	SYSTEM
source/dest	source	CSRRC	dest	SYSTEM
source/dest	$\operatorname{uimm}[4:0]$	CSRRWI	dest	SYSTEM
source/dest	uimm[4:0]	CSRRSI	dest	SYSTEM
source/dest	uimm[4:0]	CSRRCI	dest	SYSTEM

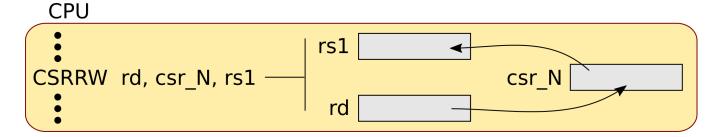

CSRs accessible from User level

Number	Privilege	Name	Description	
Unprivileged Floating-Point CSRs				
0x001	URW	fflags Floating-Point Accrued Exceptions.		
0x002	URW	frm	Floating-Point Dynamic Rounding Mode.	
0x003	URW	fcsr	Floating-Point Control and Status Register (frm + fflags).	
		Unj	privileged Counter/Timers	
0xC00	URO	cycle	Cycle counter for RDCYCLE instruction.	
0xC01	URO	time	Timer for RDTIME instruction.	
0xC02	URO	instret	Instructions-retired counter for RDINSTRET instruction.	
0xC03	URO	hpmcounter3	Performance-monitoring counter.	
0xC04	URO	hpmcounter4	Performance-monitoring counter.	
		:		
0xC1F	URO	hpmcounter31	Performance-monitoring counter.	
0xC80	URO	cycleh	Upper 32 bits of cycle, RV32 only.	
0xC81	URO	timeh	Upper 32 bits of time, RV32 only.	
0xC82	URO	instreth	Upper 32 bits of instret, RV32 only.	
0xC83	URO	hpmcounter3h	Upper 32 bits of hpmcounter3, RV32 only.	
0xC84	URO	hpmcounter4h	Upper 32 bits of hpmcounter4, RV32 only.	
		:		
0xC9F	URO	hpmcounter31h	Upper 32 bits of hpmcounter31, RV32 only.	

Table 2.2: Currently allocated RISC-V unprivileged CSR addresses.

- CSRs for floating point
- CSRs for timing: real-time, cycle, instruction count
- CSRs for other performance counters (implementation-defined)

CSRs accessible from Supervisor level

Number	Privilege	Name	Description	
Supervisor Trap Setup				
0x100	SRW	sstatus Supervisor status register.		
0x104	SRW	sie	Supervisor interrupt-enable register.	
0x105	SRW	stvec	Supervisor trap handler base address.	
0x106	SRW	scounteren	Supervisor counter enable.	
		Super	visor Configuration	
0x10A	SRW	senvcfg	Supervisor environment configuration register.	
		Superv	risor Trap Handling	
0x140	SRW	sscratch Scratch register for supervisor trap handlers.		
0x141	SRW	sepc	Supervisor exception program counter.	
0x142	SRW	scause	Supervisor trap cause.	
0x143	SRW	stval	Supervisor bad address or instruction.	
0x144	SRW	sip	Supervisor interrupt pending.	
Supervisor Protection and Translation				
0x180	SRW	satp	Supervisor address translation and protection.	
	Debug/Trace Registers			
0x5A8 SRW scontext Supervisor-mode context register.		Supervisor-mode context register.		

Table 2.3: Currently allocated RISC-V supervisor-level CSR addresses.

- CSRs for handling exceptions (traps and interrupts) at Supervisor level (see later slides)
- satp: for Virtual memory (see later slides)


CSRs accessible from Machine level

Number	Privilege	Name	Description	
Machine Information Registers				
0xF11	MRO	mvendorid	Vendor ID.	
0xF12	MRO	marchid	Architecture ID.	
0xF13	MRO	mimpid	Implementation ID.	
0xF14	MRO	mhartid	Hardware thread ID.	
0xF15	MRO	mconfigptr	Pointer to configuration data structure.	
			Machine Trap Setup	
0x300	MRW	mstatus	Machine status register.	
0x301	MRW	misa	ISA and extensions	
0x302	MRW	medeleg	Machine exception delegation register.	
0x303	MRW	mideleg	Machine interrupt delegation register.	
0x304	MRW	mie	Machine interrupt-enable register.	
0x305	MRW	mtvec	Machine trap-handler base address.	
0x306	MRW	mcounteren	Machine counter enable.	
0x310	MRW	mstatush	Additional machine status register, RV32 only.	
Machine Trap Handling				
0x340	MRW	mscratch	Scratch register for machine trap handlers.	
0x341	MRW	mepc	Machine exception program counter.	
0x342	MRW	mcause	Machine trap cause.	
0x343	MRW	mtval	Machine bad address or instruction.	
0x344	MRW	mip	Machine interrupt pending.	
0x34A	MRW	mtinst	Machine trap instruction (transformed).	
0x34B	MRW	mtval2	Machine bad guest physical address.	

(... more ... please consult spec)

- CSRs for configuration discovery from software
- CSRs for handling exceptions (traps and interrupts) at Machine level (see later slides)

Exceptions (Traps and Interrupts)

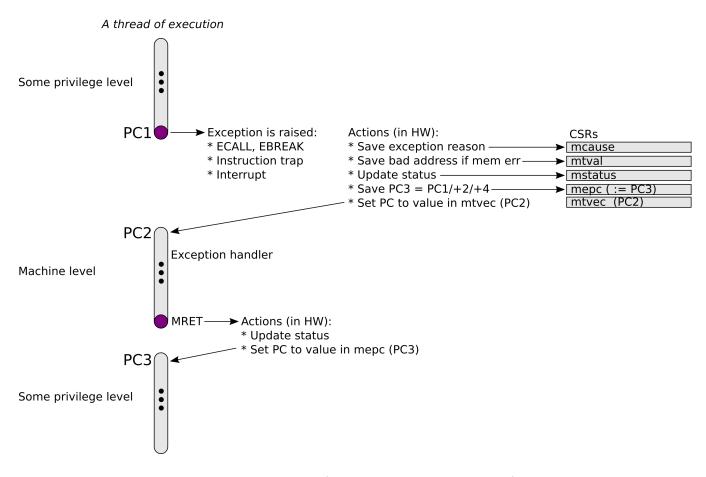

- mtvec has been pre-loaded before this scenario (by boot-loader, OS, ...)
- Saved PC1/+2/+4 depends on whether the instruction needs to be retried, and if it is a compressed instruction.
- Exception handler can change mtvec to some other PC3, e.g., to resume a different thread after the exception.
- Any other "arguments" and "results" are passed in registers, according to an ABI/calling convention.

• Can be recursive, *i.e.*, exception handler may itself encounter trap/interrupt.

CSR MStatus

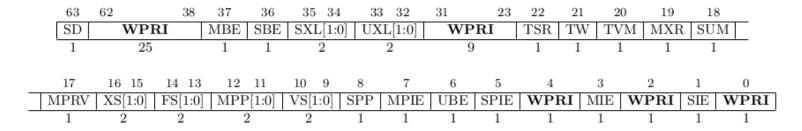


Figure 3.7: Machine-mode status register (mstatus) for RV64.

- mstatus is quite central and critical, and manipulation of its bits involves some complexity and subtlety; we recommend reading the spec very closely and carefully.
- Various bits represent a 2-level "stack" (indexed by privilege level) that are conceptually pushed on exception entry and popped on returns from exceptions (see "update status" on previous slide). These include interrupt enable bits (MIE/MPIE, SIE/SPIE), previous privilege level (MPP, SPP).
- The RV32 version of mstatus omits some of the bits.
- There is also an sstatus CSR at Supervisor level, which is similar to, but only a subset of mstatus.
- Exceptions can be delivered at Machine-level and Supervisor-level privileges.
- Exceptions delivered at Machine-level/Supervisor-level can be delegated to Supervisor-level/User-level (see medeleg and mideleg CSRs).

CSR MCause

Interrupt	Exception Code	Description
1	0	Reserved
1	1	Supervisor software interrupt
1	2	Reserved
1	3	Machine software interrupt
1	4	Reserved
1	5	Supervisor timer interrupt
1	6	Reserved
1	7	Machine timer interrupt
1	8	Reserved
1	9	Supervisor external interrupt
1	10	Reserved
1	11	Machine external interrupt
1	12-15	Reserved
1	≥16	Designated for platform use
0	0	Instruction address misaligned
0	1	Instruction access fault
0	2	Illegal instruction
0	3	Breakpoint
0	4	Load address misaligned
0	5	Load access fault
0	6	Store/AMO address misaligned
0	7	Store/AMO access fault
0	8	Environment call from U-mode
0	9	Environment call from S-mode
0	10	Reserved
0	11	Environment call from M-mode
0	12	Instruction page fault
0	13	Load page fault
0	14	Reserved
0	15	Store/AMO page fault
0	16-23	Reserved
0	24-31	Designated for custom use
0	32-47	Reserved
0	48-63	Designated for custom use
0	≥64	Reserved

• Exception-handler code uses mcause to discover what kind of event caused this exception, using which it can branch to event-type-specific handlers.

CSRs MIP and MIE

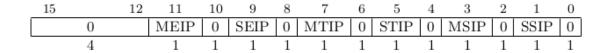


Figure 3.14: Standard portion (bits 15:0) of mip.


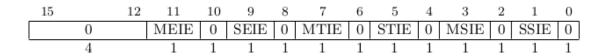


Figure 3.15: Standard portion (bits 15:0) of mie.

- Interrupts arrive at a RISC-C hart only via the mip CSR.
- Both are full-width registers (32b in RV32, 64b in RV64) but only the bottom 16 bits have standard definitions.
- mip: Machine-level register for Interrupts-pending (there is also an sip for Supervisor level). The bits can be set by various sources of interrupts outside the CPU (see other slides on CLIC and PLIC for examples).
- Sources can be external devices ("E"), timers ("T") and inter-processor software interrupts ("S").
- mie: Machine-level register for Interrupts-enabled (there is also an sie for Supervisor level). The CPU can mask-out specific source of interrupts by writing 0 to the corresponding bit.

Virtual Memory Page Table for Sv39 using CSR satp

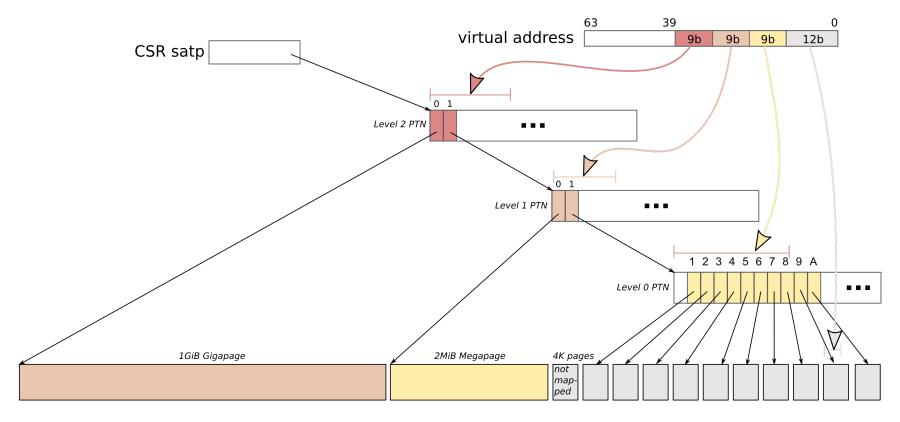

- When running in VM mode (indicated by mstatus bits, privilege level, etc.), the PC, and addresses in LD/ST instructions are VAs (Virtual Addresses).
- CSR satp contains a pointer to a 3-level tree. Each node in the tree is a *PTN* (Page Table Node), an aligned 4KiB block containing 512 *PTEs* (Page Table Entries, each 64b). Bits in the PTE indicate whether it is invalid, a leaf (pointing to a data page), or a pointer to the next-level node.
- Leaves at level 2 point at 1GiB naturally aligned "gigapages"; leaves at level 1 point at 2MiB naturally aligned "megapages"; leaves at level 0 point at 4KiB naturally aligned "pages";
- Sv39 addresses have 39 bits. 9-bit fields are used to index a PTE in a PTN, and the 12 LSBs to index a byte in a page.
- If a VA→PA translation fails (encounter invalid PTE, protection failure, ...) it raises a page fault exception or an access fault exception, which is handled in the usual way (see "Exceptions" slide earlier).

Standard Virtual Memory Schemes

- The Privileged ISA for RV32 defines one standard Virtual Memory scheme: Sv32.
- The Privileged ISA for RV64 defines three standard Virtual Memory scheme: Sv39, Sv48 and Sv57.
- It is a choice for an implementation as to how VA \rightarrow PA translation is implemented: in hardware or firmware or trap-handlers, whether it uses accelerators like TLBs (Translation Look-aside Buffers) etc. The SFENCE.VMA instruction is available to synchronize updates to address-translation hardware.

TODO

These slides are still to be created (in progress)

- Common artefacts attached to cores:
 - CLIC: software interrupts, real-time timer, timer interrupts
 - PLIC: Platform-Level Interrupt controller
 - Debug Module

Comments on software for RISC-V