VAST As-Built Report



Customer Deployment Documentation

Cluster: selab-var-202 PSNT: selab-var-202

Release: release-5.3.2-sp6-1980891 **Management IP:** 10.143.11.202

CBox Hardware: supermicro_gen5_cbox, two dual-port NICs

CBox Quantity: 2

DBox Hardware: ceres_v2

DBox Quantity: 1

Switch Hardware: MSN3700-VS2FC

Switch Quantity: 2

Table of Contents

- 1. Executive Summary
- 2. Cluster Information
- 3. Hardware Inventory
- 4. Network Configuration
- 5. Logical Configuration
- 6. Security & Authentication
- 7. Data Protection
- 8. Enhanced Features
- 9. Appendix

Executive Summary

This VAST As-Built Report provides a comprehensive technical documentation of the deployed VAST Data cluster infrastructure, configuration, and operational status. The report serves as a critical reference for system administrators, storage engineers, and technical stakeholders to understand the current state of the cluster deployment, validate configuration compliance, and support ongoing operations and troubleshooting. The Executive Summary consolidates key operational metrics, hardware inventory, and cluster health indicators into high-level overview tables that enable rapid assessment of cluster status and capacity utilization.

Cluster Overview

Description	Value	
ID	1	
Name	selab-var-202	
Management VIP	10.143.11.202	
URL	https://10.143.11.202/api/v7/clusters/1	
Build	release-5.3.2-sp6-1980891	
PSNT	selab-var-202	
GUID	c25e594c-cc58-5c4c-abe8-72e8a29873f9	
Uptime	12 days, 15:38:54.751788	
Online Since	2025-10-07T23:05:33.766226Z	
Deployed	2025-08-07T17:27:50.188871Z	

Hardware Overview

Description	Value	
CBoxes	2	
CNodes	2	
DBoxes	1	
DNodes	2	
Switches	2	
Leaf	2	
Spine	0	

Cluster Information

The Cluster Information section provides detailed operational status and configuration parameters for the VAST Data cluster. This section captures essential cluster metadata including cluster identification, operational state, management network configuration, and feature flags that define the cluster's capabilities and current operational mode. The information presented here is critical for understanding the cluster's current operational status, validating proper configuration, and supporting troubleshooting activities. This data is collected directly from the cluster's management API and represents the real-time operational state of the system.

Cluster Name: selab-var-202

Function	Status	
State	ONLINE	
SSD RAID State	HEALTHY	
NVRAM RAID State	HEALTHY	
Memory RAID State	HEALTHY	
Leader State	UP	
Leader CNode	cnode-3-5	
Management CNode	cnode-3-5	
Management Inner VIP	172.16.4.202	
Management Inner VIP CNode	cnode-3-5	
Enabled	Yes	
Similarity Enabled	No	
Deduplication Active	Unknown	
Write-Back RAID Enabled	Yes	
Write-Back RAID Layout	DATA_6_PARITY_2	
DBox HA Support	No	
Rack Level Resiliency	No	
Metrics Disabled	No	

Hardware Summary

The Hardware Summary section provides comprehensive inventory and operational status of all physical hardware components within the VAST Data cluster. This section includes detailed information about storage capacity utilization, compute nodes (CNodes), data nodes (DNodes), and their respective hardware specifications, operational status, and physical rack positioning. The capacity metrics show both logical and physical storage utilization, enabling capacity planning and performance optimization. Hardware inventory data is essential for understanding cluster scale, identifying hardware failures, planning maintenance windows, and ensuring proper rack organization for optimal cooling and cable management.


Storage Capacity

Metric	Value	
Usable Capacity	223 TB	
Free Usable Capacity	89 TB	
Data Reduction Ratio (DRR)	1.3:1	
Physical Space	282 TB	
Physical Space In Use	169 TB	
Free Physical Space	113 TB	
Physical Space In Use %	60%	
Logical Space	298 TB	
Logical Space In Use	179 TB	
Free Logical Space	119 TB	
Logical Space In Use %	60%	

Hardware Inventory

ID	Model	Name/Serial Number	Status	Position
CB-1	supermicro_gen5_cbox, two dual-port NICs	cbox-S929986X4A20495	ACTIVE	U24
CB-2	supermicro_gen5_cbox, two dual-port NICs	cbox-S929986X5306345	ACTIVE	U23
DB-1	ceres_v2	dbox-515-25032600200191	ACTIVE	U18
SW-1	MSN3700-VS2FC	MT2450J01JQ7	OK	U21
SW-2	MSN3700-VS2FC	MT2450J01JPY	OK	U20

Physical Rack Layout

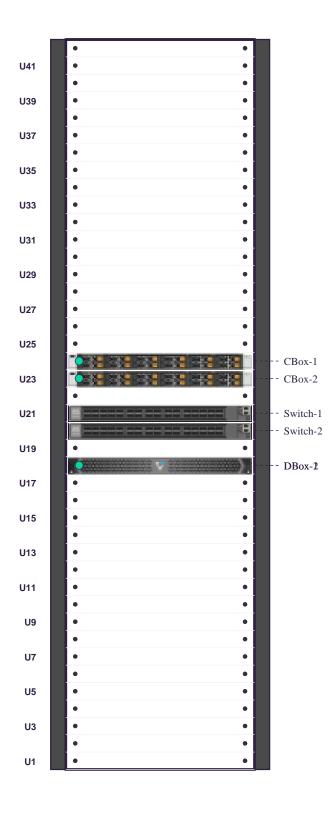

Network Configuration

The Network Configuration section provides comprehensive documentation of all network-related settings and connectivity parameters for the VAST Data cluster. This section includes cluster-wide network configuration, individual node network settings for both compute nodes (CNodes) and data nodes (DNodes), and network service configurations such as DNS and NTP. The network configuration data is essential for understanding cluster connectivity, troubleshooting network issues, validating network security settings, and ensuring proper network segmentation. This information supports network administrators in maintaining optimal network performance and security posture for the storage infrastructure.

Network Configuration

Setting	Value	
Management VIPs	10.143.11.202	
External Gateways	10.143.254.254	
DNS Servers	10.140.3.248	
NTP Servers	10.140.0.17	
External Netmask	255.255.0.0	
Auto Ports Ext Interface	outband	
Ethernet MTU	9000	
InfiniBand MTU	65520	
IPMI Gateway	10.143.254.254	
IPMI Netmask	255.255.0.0	
B2B IPMI	False	

CNode Network Configuration

ID	Hostname	Mgmt IP	IPMI IP	VAST OS	VMS Host
1	se-az-arrow-cb2-cn-1	10.143.11.61	10.143.11.62	12.14.19-1809895	False
2	se-az-arrow-cb2-cn-2	10.143.11.63	10.143.11.64	12.14.19-1809895	True

DNode Network Configuration

ID	Hostname	Mgmt IP	IPMI IP	VAST OS	Position
3	se-az-arrow-db2-dn-1	10.143.11.21	10.143.11.22	12.14.19-1809895	right
4	se-az-arrow-db2-dn-2	10.143.11.23	10.143.11.24	12.14.19-1809895	left

Switch Configuration

The Switch Configuration section provides detailed information about the network switches that form the fabric interconnecting the VAST cluster nodes. This section documents switch hardware specifications, port configurations, operational status, and connectivity details. Understanding the switch topology is critical for network troubleshooting, capacity planning, and validating proper network segmentation. The port-level details enable network administrators to trace physical connectivity, identify unused ports, and plan for cluster expansion.

Switch 1 Details

se-var-1-1 Configuration

Description	Value	
Hostname	se-var-1-1	
Model	MSN3700-VS2FC	
Serial Number	MT2450J01JQ7	
Firmware Version	5.13.1.1001	
Management IP	10.143.11.153	
Switch Type	Cumulus Linux	
State	OK	
Configuration Status	Configured	
Role	switch	
Total Ports	32	
Active Ports	32	
Port MTU	9216	

se-var-1-1 Port Speed Configuration

Speed	Port Count
200G	18
100G	4
Unconfigured	10

se-var-1-1 Port Summary

Port Qty	State	Speed	MTU
18	UP	200G	9216
4	UP	100G	9216

Port Qty	State	Speed	MTU
10	UP	Unconfigured	9216

Switch 2 Details

se-var-1-2 Configuration

Description	Value	
Hostname	se-var-1-2	
Model	MSN3700-VS2FC	
Serial Number	MT2450J01JPY	
Firmware Version	5.13.1.1001	
Management IP	10.143.11.154	
Switch Type	Cumulus Linux	
State	ОК	
Configuration Status	Not Configured	
Role	Not Assigned	
Total Ports	32	
Active Ports	32	
Port MTU	9216	

se-var-1-2 Port Speed Configuration

Speed	Port Count
200G	18
100G	4
Unconfigured	10


se-var-1-2 Port Summary

Port Qty	State	Speed	MTU
18	UP	200G	9216
4	UP	100G	9216
10	UP	Unconfigured	9216

Logical Network Diagram

The Logical Network Diagram provides a visual representation of the cluster's network topology, illustrating the connectivity between compute nodes (CBoxes), data nodes (DBoxes), network switches, and the customer network. This diagram shows the redundant network paths, switch interconnections, and how data flows through the storage infrastructure. Understanding the logical network topology is essential for network planning, troubleshooting connectivity issues, validating redundancy configurations, and ensuring optimal network performance across the storage cluster.

Placeholder

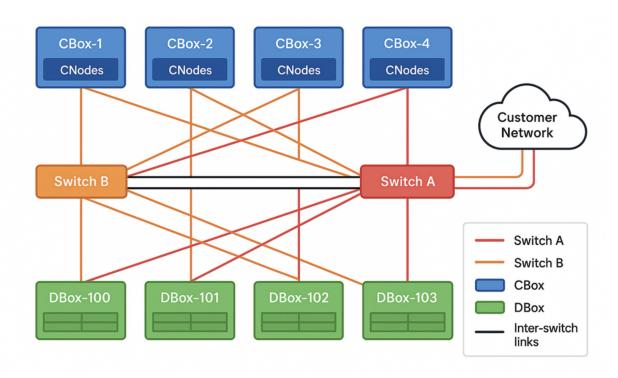

Logical Configuration

The Logical Configuration section documents the logical organization and data protection policies configured within the VAST Data cluster. This section provides visibility into tenant configurations, data views, access policies, VIP pools, and data protection settings including snapshot programs and protection policies. Understanding the logical configuration is crucial for data governance, access control validation, backup and recovery planning, and ensuring compliance with organizational data protection requirements. This information enables administrators to verify proper data isolation, validate backup schedules, and ensure that data protection policies align with business continuity objectives.

Resource	Value	
Tenants	16 tenants configured	
Views	234 views configured	
View Policies	78 policies configured	
VIP Pools	VIP Pools 14 pools configured	
Data Protection Policies	7 policies configured	

Security & Authentication

The Security & Authentication section provides comprehensive documentation of all security-related configurations and authentication mechanisms implemented within the VAST Data cluster. This section covers authentication services including Active Directory, LDAP, and NIS integration, as well as security features such as data encryption settings, external key management (EKM) configuration, and security policy enforcement. Understanding the security configuration is essential for compliance auditing, security posture assessment, access control validation, and ensuring that the storage infrastructure meets organizational security requirements and industry best practices. This information supports security administrators in maintaining a robust security framework for the storage environment.

Туре	Description	Function	Value
Authentication	Active Directory	Enabled	True
Authentication	Active Directory	Domain	Unknown
Security	Encryption	Enabled	False
Security	Encryption	Туре	INTERNAL
Security	Encryption	S3 AES Ciphers Only	Not Configured
Security	EKM	Servers	Not Configured
Security	EKM	Address	Not Configured
Security	EKM	Port	5696
Security	EKM	Auth Domain	Not Configured
Security	Secondary EKM	Address	Not Configured
Security	Secondary EKM	Port	5696