VAST As-Built Report



Customer Deployment Documentation

Cluster: selab-var-204
PSNT: selab-var-204

Release: release-5.3.1-sp3-1898015 **Management IP:** 10.143.11.204

CBox Hardware: supermicro_gen5_cbox, two dual-port NICs

CBox Quantity: 3

DBox Hardware: ceres_v2

DBox Quantity: 1

Switch Hardware: MSN3700-VS2FC

Switch Quantity: 2

Table of Contents

Executive Summary	3
Cluster Overview	
Hardware Overview	
Cluster Information	4
Cluster Details	
Operational Status	
Feature Configuration	
Hardware Summary	5
Storage Capacity	
CBox Inventory	
DBox Inventory	
Physical Rack Layout	6
Network Configuration	7
Cluster Network	
CNode Network	
DNode Network	
Switch Configuration	8
Switch Details	
Port Summary	
Port Mapping	10
Device Mapping	
Logical Network Diagram	11
Logical Configuration	12
Tenants & Views	
Protection Policies	
Security & Authentication	13
Encryption Configuration	
Authentication Services	

Executive Summary

This VAST As-Built Report provides a comprehensive technical documentation of the deployed VAST Data cluster infrastructure, configuration, and operational status. The report serves as a critical reference for system administrators, storage engineers, and technical stakeholders to understand the current state of the cluster deployment, validate configuration compliance, and support ongoing operations and troubleshooting. The Executive Summary consolidates key operational metrics, hardware inventory, and cluster health indicators into high-level overview tables that enable rapid assessment of cluster status and capacity utilization.

Cluster Overview

Description	Value
ID	1
Name	selab-var-204
Management VIP	10.143.11.204
URL	https://10.143.11.204/api/v7/clusters/1
Build	release-5.3.1-sp3-1898015
PSNT	selab-var-204
GUID	127db70c-0197-5f4f-8af8-44bead61cda2
Uptime	15 days, 16:02:38.632268
Online Since	2025-10-08T01:02:57.509200Z
Deployed	2025-08-07T18:57:44.259621Z

Hardware Overview

Description	Value
CBoxes	3
CNodes	3
DBoxes	1
DNodes	2
Switches	2
Leaf	2
Spine	0

Cluster Information

The Cluster Information section provides detailed operational status and configuration parameters for the VAST Data cluster. This section captures essential cluster metadata including cluster identification, operational state, management network configuration, and feature flags that define the cluster's capabilities and current operational mode. The information presented here is critical for understanding the cluster's current operational status, validating proper configuration, and supporting troubleshooting activities. This data is collected directly from the cluster's management API and represents the real-time operational state of the system.

Cluster Name: selab-var-204

Function	Status
State	ONLINE
SSD RAID State	HEALTHY
NVRAM RAID State	HEALTHY
Memory RAID State	HEALTHY
Leader State	UP
Leader CNode	cnode-3-11
Management CNode	cnode-3-11
Management Inner VIP	172.16.4.204
Management Inner VIP CNode	cnode-3-11
Enabled	Yes
Similarity Enabled	No
Deduplication Active	Unknown
Write-Back RAID Enabled	Yes
Write-Back RAID Layout	DATA_6_PARITY_2
DBox HA Support	No
Rack Level Resiliency	No
Metrics Disabled	No

Hardware Summary

The Hardware Summary section provides comprehensive inventory and operational status of all physical hardware components within the VAST Data cluster. This section includes detailed information about storage capacity utilization, compute nodes (CNodes), data nodes (DNodes), and their respective hardware specifications, operational status, and physical rack positioning. The capacity metrics show both logical and physical storage utilization, enabling capacity planning and performance optimization. Hardware inventory data is essential for understanding cluster scale, identifying hardware failures, planning maintenance windows, and ensuring proper rack organization for optimal cooling and cable management.


Storage Capacity

Metric	Value
Usable Capacity	245 TB
Free Usable Capacity	53 TB
Data Reduction Ratio (DRR)	1.5:1
Physical Space	310 TB
Physical Space In Use	243 TB
Free Physical Space	67 TB
Physical Space In Use %	78%
Logical Space	375 TB
Logical Space In Use	298 TB
Free Logical Space	81 TB
Logical Space In Use %	79%

Hardware Inventory

ID	Model	Name/Serial Number	Status	Position
CB-1	supermicro_gen5_cbox, two dual-port NICs	cbox-S929986X5306437	ACTIVE	U23
CB-3	supermicro_gen5_cbox, two dual-port NICs	cbox-S929986X5306720	ACTIVE	U24
CB-4	supermicro_gen5_cbox, two dual-port NICs	cbox-S929986X5306758	ACTIVE	U25
DB-1	ceres_v2	dbox-515-25042300200055	ACTIVE	U18
SW-1	MSN3700-VS2FC	MT2450J01JQ7	OK	U20
SW-2	MSN3700-VS2FC	MT2450J01JPY	OK	U21

Physical Rack Layout

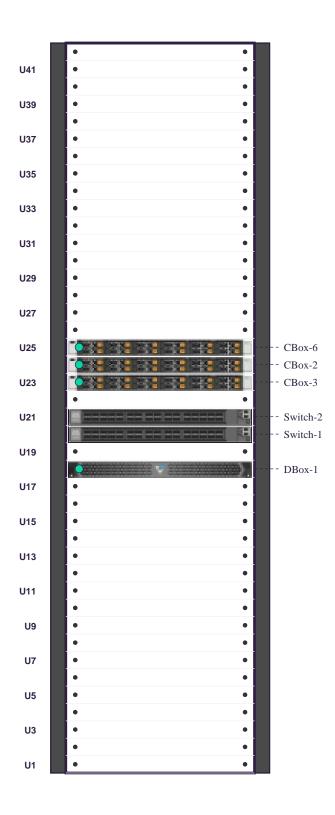

Network Configuration

The Network Configuration section provides comprehensive documentation of all network-related settings and connectivity parameters for the VAST Data cluster. This section includes cluster-wide network configuration, individual node network settings for both compute nodes (CNodes) and data nodes (DNodes), and network service configurations such as DNS and NTP. The network configuration data is essential for understanding cluster connectivity, troubleshooting network issues, validating network security settings, and ensuring proper network segmentation. This information supports network administrators in maintaining optimal network performance and security posture for the storage infrastructure.

Network Configuration

Setting	Value
Management VIPs	10.143.11.204
External Gateways	10.143.254.254
DNS Servers	10.140.3.248
NTP Servers	10.140.0.17
External Netmask	255.255.0.0
Auto Ports Ext Interface	outband
Ethernet MTU	9000
InfiniBand MTU	65520
IPMI Gateway	10.143.254.254
IPMI Netmask	255.255.0.0
B2B IPMI	False

CNode Network Configuration

ID	Hostname	Mgmt IP	IPMI IP	VAST OS	VMS Host
8	se-az-arrow-cb4-cn-1	10.143.11.81	10.143.11.82	12.14.19-1809895	False
2	se-az-arrow-cb4-cn-2	10.143.11.83	10.143.11.84	12.14.15-1791040	True
1	se-az-arrow-cb4-cn-3	10.143.11.85	10.143.11.86	12.12.15-1440723	False

DNode Network Configuration

ID	Hostname	Mgmt IP	IPMI IP	VAST OS	Position
4	se-az-arrow-db4-dn-1	10.143.11.41	10.143.11.42	12.14.15-1791040	right
5	se-az-arrow-db4-dn-2	10.143.11.43	10.143.11.44	12.14.15-1791040	left

Switch Configuration

The Switch Configuration section provides detailed information about the network switches that form the fabric interconnecting the VAST cluster nodes. This section documents switch hardware specifications, port configurations, operational status, and connectivity details. Understanding the switch topology is critical for network troubleshooting, capacity planning, and validating proper network segmentation. The port-level details enable network administrators to trace physical connectivity, identify unused ports, and plan for cluster expansion.

Switch 1 Details

se-var-1-1 Configuration

Description	Value
Hostname	se-var-1-1
Model	MSN3700-VS2FC
Serial Number	MT2450J01JQ7
Firmware Version	5.13.1.1001
Management IP	10.143.11.153
Switch Type	Cumulus Linux
State	OK
Configuration Status	Configured
Role	switch
Total Ports	32
Active Ports	32
Port MTU	9216

se-var-1-1 Port Summary

Port Count	Speed	Port Numbers
18	200G	swp1, swp2, swp5, swp6, swp9, swp10, swp13, swp14, swp17, swp18, swp19, swp20, swp21, swp23, swp24, swp26, swp27, swp28
4	100G	swp29, swp30, swp31, swp32
10	Unconfigured	swp3, swp4, swp7, swp8, swp11, swp12, swp15, swp16, swp22, swp25

Switch 2 Details

se-var-1-2 Configuration

Description	Value
Hostname	se-var-1-2
Model	MSN3700-VS2FC
Serial Number	MT2450J01JPY
Firmware Version	5.13.1.1001
Management IP	10.143.11.154
Switch Type	Cumulus Linux
State	OK
Configuration Status	Configured
Role	switch
Total Ports	32
Active Ports	32
Port MTU	9216

se-var-1-2 Port Summary

Port Count	Speed	Port Numbers	
18	200G	swp1, swp2, swp5, swp6, swp9, swp10, swp13, swp14, swp17, swp18, swp19, swp20, swp21, swp23, swp24, swp26, swp27, swp28	
4	100G	swp29, swp30, swp31, swp32	
10	Unconfigured	swp3, swp4, swp7, swp8, swp11, swp12, swp15, swp16, swp22, swp25	

Port Mapping

The Port Mapping section provides detailed connectivity information showing which switch ports connect to which cluster nodes. This information is critical for troubleshooting network issues, validating cabling, and planning maintenance activities. The mapping uses standardized designations to clearly identify each connection point on both the switch side and node side.

Switch 1 Port-to-Device Mapping

Switch Port	Node Connection	Network	Speed	Notes
SWA-P13	DB1-DN2-R	А	200G	Primary
SWA-P13	DB1-DN2-L	В	200G	Primary
SWA-P14	DB1-DN1-R	А	200G	Primary
SWA-P14	DB1-DN1-L	В	200G	Primary
SWA-P26	CB1-CN1-R	А	200G	Primary
SWA-P27	CB2-CN2-R	А	200G	Primary
SWA-P28	CB3-CN3-R	А	200G	Primary
SWA-P29	SWB-P29	A/B	100G	IPL/MLAG
SWA-P30	SWB-P30	A/B	100G	IPL/MLAG
SWA-P31	SWB-P31	A/B	100G	IPL/MLAG
SWA-P32	SWB-P32	A/B	100G	IPL/MLAG


Switch 2 Port-to-Device Mapping

Switch Port	Node Connection	Network	Speed	Notes
SWB-P26	CB1-CN1-L	В	200G	Primary
SWB-P27	CB2-CN2-L	В	200G	Primary
SWB-P28	CB3-CN3-L	В	200G	Primary
SWB-P29	SWA-P29	A/B	100G	IPL/MLAG
SWB-P30	SWA-P30	A/B	100G	IPL/MLAG
SWB-P31	SWA-P31	A/B	100G	IPL/MLAG
SWB-P32	SWA-P32	A/B	100G	IPL/MLAG

Logical Network Diagram

The Logical Network Diagram provides a visual representation of the cluster's network topology, illustrating the connectivity between compute nodes (CBoxes), data nodes (DBoxes), network switches, and the customer network. This diagram shows the redundant network paths, switch interconnections, and how data flows through the storage infrastructure. Understanding the logical network topology is essential for network planning, troubleshooting connectivity issues, validating redundancy configurations, and ensuring optimal network performance across the storage cluster.

■ Green = Switch A connections | ■ Blue = Switch B connections | ■ Purple = IPL/MLAG connections

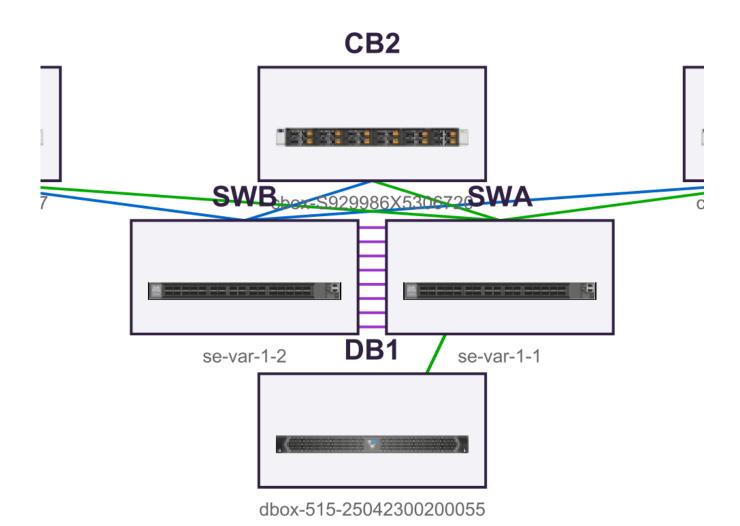

Logical Configuration

The Logical Configuration section documents the logical organization and data protection policies configured within the VAST Data cluster. This section provides visibility into tenant configurations, data views, access policies, VIP pools, and data protection settings including snapshot programs and protection policies. Understanding the logical configuration is crucial for data governance, access control validation, backup and recovery planning, and ensuring compliance with organizational data protection requirements. This information enables administrators to verify proper data isolation, validate backup schedules, and ensure that data protection policies align with business continuity objectives.

Resource	Value	
Tenants	28 tenants configured	
Views	344 views configured	
View Policies	137 policies configured	
VIP Pools	43 pools configured	
Data Protection Policies	27 policies configured	

Security & Authentication

The Security & Authentication section provides comprehensive documentation of all security-related configurations and authentication mechanisms implemented within the VAST Data cluster. This section covers authentication services including Active Directory, LDAP, and NIS integration, as well as security features such as data encryption settings, external key management (EKM) configuration, and security policy enforcement. Understanding the security configuration is essential for compliance auditing, security posture assessment, access control validation, and ensuring that the storage infrastructure meets organizational security requirements and industry best practices. This information supports security administrators in maintaining a robust security framework for the storage environment.

Туре	Description	Function	Value
Authentication	Active Directory	Enabled	True
Authentication	Active Directory	Domain	Unknown
Security	Encryption	Enabled	False
Security	Encryption	Туре	INTERNAL
Security	Encryption	S3 AES Ciphers Only	Not Configured
Security	EKM	Servers	Not Configured
Security	EKM	Address	Not Configured
Security	EKM	Port	5696
Security	EKM	Auth Domain	Not Configured
Security	Secondary EKM	Address	Not Configured
Security	Secondary EKM	Port	5696