Documentation


ContaminationFlow on Linux and Windows

Hoai My Van

Contents

1.	Gen	eral St	ructure	1		
2.	ContaminationFlow Linux					
	2.1.	Call of	f Application from Command line	3		
		2.1.1.		3		
		2.1.2.	Application with custom parameters	3		
	2.2.		cation	4		
			General Changes	4		
			Communication	4		
		2.2.3.	New Quantities	5		
		2.2.4.	Iterative algorithm	6		
3.	ContaminationFlow Windows					
	3.1.	Graph	ical User Interface	8		
			cation	8		
			Communication	8		
		3.2.2.		9		
		3.2.3.	Iterative algorithm	9		
A.	Forr	nulas f	or new Quantities	10		
В.	Ove	rview (of new Classes and Functions	12		
	B.1.	New (Classes	12		
	B.2.	New I	Functions	13		
		B.2.1.	molflowlinux_main.cpp	13		
		B.2.2.	SimulationLinux.cpp	14		
		B.2.3.		15		
		B.2.4.	UpdateSubProcess.cpp	15		
		B.2.5.	UpdateMainProcess.cpp	16		
		B.2.6.	Iteration.cpp	16		

1. General Structure

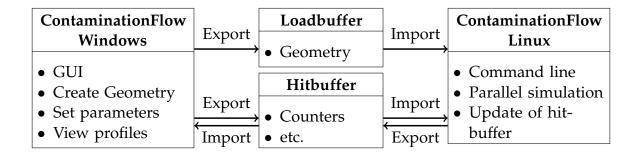


General structure for ContaminationFlow simulation

- Code adapted from Molflow
- ContaminationFlow Windows primary used to create Geometry and to view simulation results through the GUI
- ContaminationFlow Linux primary used for simulation and calculation of counters, profiles, etc.
- Loadbuffer contains information of geometry
- Hitbuffer contains information such as hit counters, profiles, etc.
- Import and export of buffer files for communication between ContaminationFlow Windows and ContaminationFlow Linux
- Export of simulationHistory for ContaminationFlow Linux

2. ContaminationFlow Linux

- Parallel simulation on several sub processes
- Processing and control of data in main process
- Update and accumulation of hit counters and other information such as profiles
- SimulationHistory, final hitbuffer and used parameters exported to results folder

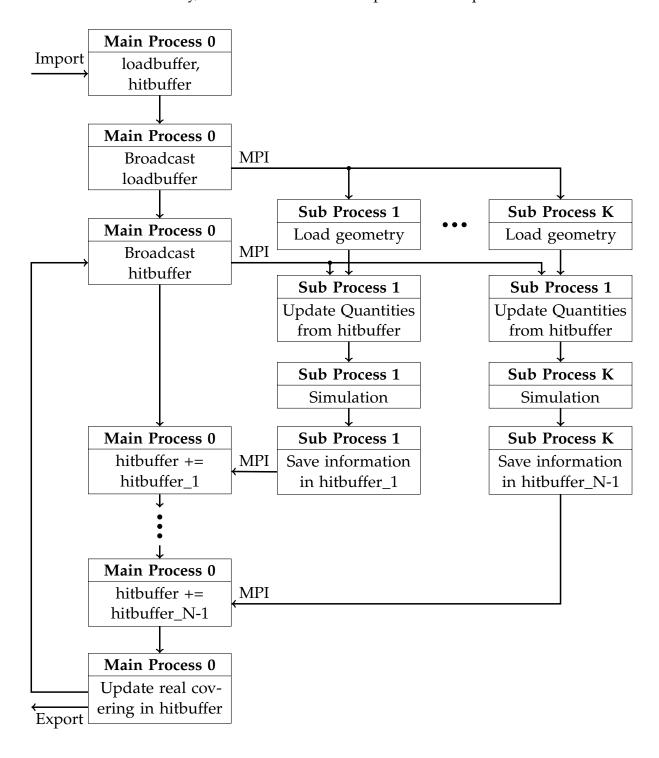

2.1. Call of Application from Command line

2.1.1. Application with standard parameters

Call Molflow Linux application with standard parameters in the command line:

```
$ module load mpi
$ mpirun -n N MolflowLinux loadbuffer hitbuffer resultbuffer
simulationtime unit
```

with the following parameters:

- n: desired number of worker processes; simulation on K=N-1 worker processes
- MolflowLinux: path to application, e.g. ~/MolflowLinux/Debug/MolflowLinux
- loadbuffer: path to loadbuffer file, that contains geometry, e.g. ~/loadbuffer
- hitbuffer: path to hitbuffer file, that contains counters, etc., e.g. ~/hitbuffer
- resultbuffer: path to resultbuffer file, where the final hitbuffer is exported to,
 e.g. ~/resultbuffer
- simulation time; e.g. 2.5
- unit (optional): simulation time unit, e.g. min; default: s

2.1.2. Application with custom parameters

Call Molflow Linux application with custom parameters in the command line:

```
$ module load mpi
$ mpirun -n N MolflowLinux inputfile
```

with the input file defining the following parameters:

- n: desired number of worker processes; simulation on K=N-1 worker processes
- MolflowLinux: path to application, e.g. ~/MolflowLinux/Debug/MolflowLinux
- loadbufferPath: path to loadbuffer file, that contains geometry, e.g. ~/loadbuffer
- hitbufferPath: path to hitbuffer file, that contains counters, etc., e.g. ~/hitbuffer
- resultbufferPath: path to resultbuffer file, where the final hitbuffer is exported to, e.g. ~/resultbuffer
- simulationTime (optional): simulation time per iteration step; default: 10.0
- unit (optional): simulation time unit; default: s
- maxTime (optional): maximum simulation time; default: 10.0
- maxUnit (optional): maximum simulation time unit; default: y
- iterationNumber(optional): number of iteration with legth of simulationTime * unit; default: 43200
- E_{de} , energy used for calculation of desorption; default: 1E-21
- *d* , power for base of coverage used for calculation of desorption; default: 1

2.2. Application

2.2.1. General Changes

Replacement/removal of Windows libraries/functions

- Databuff struct with import/export instead of using Dataports
- Replacements of libraries, e.g. #include <time.h> with #include <sys/time.h>

Removal of functions used in AC_MODE

- Only MC_MODE used
- Removal of AC_MODE cases and functions

New class ProblemDef

- Defines parameters used for simulation
- Possible adaptation of paramaters through input file or command line arguments
- Conducts some intern conversions
- Creates result folder for each simulation

2.2.2. Communication

Import and export of buffer files

• New Databuff struct

```
typedef unsigned char BYTE;
typedef struct {
  signed int size;
  BYTE *buff;
} Databuff;
```

- New functions $importBuff(\cdot)$ and $exportBuff(\cdot)$ for import of buffer files and export of Databuff struct
- New functions checkReadable(·) and checkWriteable(·) to check if file is readable or writeable

Communication between worker processes via MPI

- Main process 0 sends Databuff struct containing loadbuffer and Databuff struct containing hitbuffer to sub processes using MPI_Bcast(·)
- Sub processes send updated Databuff struct containing hitbuffer to main process
 0 using MPI_Send(·) and MPI_Recv(·)

2.2.3. New Quantities

New counter covering

- Number of carbon equivalent particles on facet
- Added covering counter to hitbuffer
- Extracted from hitbuffer from Simulationcalc.cpp file in getCovering(·)
- Covering increases with adsorption, decreases with desorption

Coverage

- Number of carbon equivalent particles per monolayer on facet
- Calculated from covering, gas mass and facet area
- Coverage computed from Simulationcalc.cpp file in calcCoverage(·)

Sticking factor

- Ratio adsorbed particles to impinging particles
- Set to 1

Desorption [1/s]

- Calculated from covering and temperature
- Desorption computed from Simulationcalc.cpp file in calcDesorption(·)

Desorption Rate [Pa m³/s]

- Calculated from desorption, gas mass and facet area
- Desorption rate computed from Simulationcalc.cpp file in calcDesorptionRate(·)
- Used to determine starting point for new particle
- Updated and fixed before each interation

Outgassing Rate

- Calculated from sHandle values: facet outgassing and temerature
- Outgassing rate computed from Worker.cpp file in CalcTotalOutgassingWorker()

K_{real/virtual}

- Number of real particles represented by test particles
- Calculated from desorption rate, outgassing rate and number of desorbed molecules
- $K_{real/virtual}$ computed from Simulationcalc.cpp file in GetMoleculesPerTP(\cdot)

2.2.4. Iterative algorithm

General Pipeline

- Initialize MPI to have desired number of processes (minimum 2)
- Send loadbuffer from main process 0 to sub processes using MPI and create sHandle and load geometry using InitSimulation() and LoadSimulation() in all processes
- Start iteration: iterationNumber steps of length simulationTime * unit:
 - Send hitbuffer from main process to subprocess using MPI
 - Update desorption rate in sub processes using UpdateDesorptionRate(·) from UpdateSubProcess.cpp
 - Simulate for SimulationTime * unit using SimulationRun()
 - Update hitbuffer of sub processes from sHandle using UpdateSubHits(·) from UpdateSubProcess.cpp
 - Update Main process:
 - Send hitbuffer from sub process to main process using MPI
 - Update hitbuffer of main process from sub process in UpdateMainHits(·) from UpdateMainProcess.cpp
 - ullet Calculate real covering in main process using $K_{real/virtual}$ and simulated time step in UpdateCovering(\cdot) from UpdateMainProcess.cpp, save in SimulationHistory
 - Update real covering in hitbuffer of main process in UpdateCoveringphys(·) from UpdateMainProcess.cpp
- Export final results (hitbuffer and simulationHistory) to results folder

New class to store Simulation History

SimulationHistory class

```
class SimulationHistory {
public:
    SimulationHistory();
    SimulationHistory(Databuff *hitbuffer);
    HistoryList<llong> coveringList;
    double flightTime;
    int nParticles;
    int currentStep;

    void appendList(Databuff *hitbuffer, double time);
    void print();
    void write(std::string path);
};
```

```
template <typename T> class HistoryList {
public:
    HistoryList();
    std::vector<std::pair<double,std::vector<T> > >
pointintime_list;
    std::vector<T> currentList;
};
```

- In SimulationLinux.h and SimulationLinux.cpp file
- SimulationHistory updated after each iterarion in UpdateCovering(·) from UpdateMainProcess.cpp file
- Currently recorded quantities: covering for all facets
- Time given in simulated time (accumulated time steps) rather than computed time

Set covering threshold

- Set lower threshhold for covering for each facet to prevent covering getting negative
- Stop simulation once threshold is reached
- Threshold set in setCoveringThreshold(·) from Iteration.cpp file

Estimation of time step T_{min}

- Determines minimum timestep for simulation, average time between outgassing/desorption and adsorption
- T_{min} computed in Iteration.cpp file in estimateAverageFlightTime() using simulationHistory: flightTime/nParticles

Calculate Step Size

• Uses SimulationHistory::currentStep to calculate logarithmic step size

Managing of time step T_{min}

- Chooses larger value between estimateAverageFlightTime() and getStepSize()
- Checks whether current time step would cause covering to get negative
- Adapts time step if needed
- Increments SimulationHistory::currentStep if getStepSize() chosen and not decreased
- Management in UpdateMainProcess.cpp file in manageTimeStep(·)

3. ContaminationFlow Windows

- Create Geometry and set parameters such as pumping speed or sticking
- Evaluate profiles such as pressure profile
- Simulation also possible for testing, but mostly done on Linux

3.1. Graphical User Interface

Add screenshot of GUI

New GUI elements

- "Particles out" renamed to Contamination level
 - Text field for covering
 - Text field for coverage
- Window for CoveringHistory (reworked to SimulationHistory in Contamination-Flow Linux)
- PressureEvolution window expanded
 - Added list that contains information of graph
 - Option to show only selected facets or all
 - List exportable

3.2. Application

3.2.1. Communication

Import and export of buffer files via GUI

• New Databuff struct

```
typedef unsigned char BYTE;
typedef struct
  signed int size;
  BYTE *buff;
Databuff;
```

- New functions importBuff(·) and exportBuff(·) for import and export of buffer files/Databuff struct
- New options in file menu: Export buffer and Import buffer

3.2.2. New Quantities

New counter covering

- Covering computed in SimulationMC.cpp file in updatecovering(·)
- Added covering counter to hitbuffer
- Added covering to GUI, can be defined through textfield

Removal of irrelevant quantities

- Sticking factor and pumping speed removed from GUI
- calcSticking() and calcFlow() in Molflow.cpp file not used anymore
- Flow not needed for iterative Algorithm

3.2.3. Iterative algorithm

New class to store covering for all facets at any time

- In HistoryWin.cpp and HistoryWin.h file
- std::vector< std::pair< double,std::vector<double> > > pointintime_list to store points in time and respective covering for all facets
- New GUI option to add and remove entries for pointintime_list
- New GUI option to export or import a complete list

A. Formulas for new Quantities

Constants

carbondiameter =
$$2 \cdot 76E - 12$$

 $K_b = 1.38E - 23$ (A.1)
 $h = 6.626E - 34$

Number of carbon equivalent particles of one monolayer

$$N_{mono} = \frac{\text{Area of Facet } [\text{m}^2]}{carbondiameter^2}$$
 (A.2)

Carbon equivalent relative mass factor

$$\Delta N_{surf} = \frac{\text{carbon equivalent gas mass}}{12.011} \tag{A.3}$$

Covering θ^*

$$\theta^* = N_{\text{particles on facet}}$$
 (A.4)

Coverage θ

$$\theta = \frac{\theta^*}{N_{mono}/\Delta N_{surf}} \tag{A.5}$$

Desorption rate *des*

$$\tau = \frac{h}{K_b T}$$

$$des = \begin{cases} \frac{1}{\tau} \theta^d \exp(-\frac{E_{de}}{K_b T}) \cdot \frac{N_{mono}}{\Delta N_{surf}} \cdot K_b T, & \text{if } \theta^* \ge 100\\ 0, & \text{otherwise} \end{cases}$$
(A.6)

Outgassing rate out

$$out = \frac{\text{Facet outgassing}}{K_h T} \tag{A.7}$$

K_{real/virtual}

$$K_{\text{real/virtual}} = \frac{\sum\limits_{\text{facets}} (out + \frac{des}{K_bT})}{\text{number of total desorbed molecules}}$$
(A.8)

Average Flight Time T_{avg}

$$T_{avg} = \frac{\text{Total flight time}}{\text{Total number of particles}}$$
 (A.9)

Step Size T_{step}

$$T_{step} = \exp\left(\text{current Step} \cdot \ln(\text{max. simulation time})/\text{max. # of steps})\right)$$
 (A.10)

Simulated Time step time_step

$$time_step = \begin{cases} T_{avg}, & \text{if } T_{avg} \ge T_{step} \\ T_{step}, & \text{otherwise} \end{cases}$$
 (A.11)

B. Overview of new Classes and Functions

B.1. New Classes

SimulationHistory		
coveringList	of class HistoryList, stores covering history	
numFacet	number of Facets	
nbDesorbed_old	number of total desorbed molecules of previous iteration ⇒ To calculate difference between consecutive iterations	
flightTime	number of Facets	
nParticles	Simulated flight time, to calculate average flight time	
numFacet	Simulated particles, to calculate average flight time	
lastTime	Total simulated time	
currentStep	step of logarithmic time step calculation in <pre>getStepSize()</pre>	
updateHistory()	Reset and update from hitbuffer	
appendList()	Updates coveringList from hitbuffer	
print()	Print to terminal	
write()	Write to file	

HistoryList		
pointintime_list	list containing history of time steps and respective facet values	
currentList	list containing facet values at current step	
reset()	Resets lists	
initCurrent()	Initializes size of lists	
print()	Print to terminal	
write()	Write to file	
read()	Read from file	
empty()	Checks if pointintime_list is empty	
setCurrentList()	Set value of desired facet in currentList	
getCurrent()	Get value of desired facet from currentList, or Get all facet values from last entry in pointintime_list	

ProblemDef		
resultpath	Path of result folder	
loadbufferPath	Path of loadbuffer file	
hitbufferPath	Path of hitbuffer file	
simulationTime, unit ⇒simulationTimeMS	Computation time of each iteration in milliseconds	
maxTime, maxUnit ⇒maxTimeS	Maximal total simulated time in seconds	
iterationNumber	Number of iterations	
E_de, d	Parameters to calculate desorption rate, see equation A.6	
readArg()	Initialization from command line arguments	
readInputfile()	Initialization from input file	
printInputfile()	Print to terminal	
writeInputfile()	Write to file	

B.2. New Functions

B.2.1. molflowlinux_main.cpp

Preprocessing		
parametercheck()	Checks input parameters from command line or input file	
importBuff()	Import load- and hitbuffer to main process	
MPI_Bcast()	Send loadbuffer to sub processes	
LoadSimulation()	Load geometry from loadbuffer	
initCoveringThresh()	Initialize covering threshold	
simHistory=SimulationHistory()	Initialize simulation history	

Simulation Loop		
initbufftozero()	Reset hitbuffer except covering	
MPI_Bcast()	Send hitbuffer to sub processes	
setCoveringThreshold()	Sets covering threshold for each facet	
simulateSub()	Simulation on sub processes	
MPI_Send(), MPI_Recv	Send sub hitbuffer, simHistory→flighttime and simHistory→nbParticles to main process	
UpdateMCMainHits()	Add simulation results from sub hitbuffer to main hitbuffer	
UpdateCovering()	Calculate and save new covering to simHistory	
UpdateCoveringphys()	Saves current covering to hitbuffer	
End simulation if maximum iteration number or simulation time is reached		

Postprocessing		
exportBuff()	Export final hitbuffer	
simHistory→write()	Export simulation history	

B.2.2. SimulationLinux.cpp

simulateSub()		
Input	t hitbuffer, rank, simutime	
Output	eos: indicates whether the simulation was ended early facetNum: facets that have reached their covering threshold	
Pipeline	Update sticking and desorption rate from hitbuffer Simulate until simutime or covering threshold reached ⇒ Avoid covering getting negative Update hitbuffer from simulation	

B.2.3. Calculations in SimulationCalc.cpp etc.

SimulationCalc.cpp		
getCovering()	Get covering from hitbuffer	
getnbDesorbed()	Get number of total desorbed molecules from hitbuffer	
calcNmono()	see equation A.2	
calcdNsurf()	see equation A.3	
calcCoverage()	see equation A.5	
calcStickingnew()	sets sticking coefficient to 1	
calcDesorption(), calcDesorptionRate()	see equation A.6	
GetMoleculesPerTP()	see equation A.8	
calctotalDesorption	<pre>calculates desorption for startFromSource()</pre>	
calcPressure(), calcParticleDensity()	has to be verified	

worker.cpp		
CalaTatalOutagesingWorker()	see equation A.7, calculates desorption	
CalcTotalOutgassingWorker()	for startFromSource()	

SimulationLinux.cpp	
covertunit()	Converts simutime*unit to milliseconds

B.2.4. UpdateSubProcess.cpp

Update sHandle paramters from hitbuffer		
UpdateSticking()	Updates sticking	
UpdateDesorptionRate()	Updates desorption rate	

Update hitbuffer		
initbufftozero()	Sets hitbuffer except covering to zero	
UpdateMCSubHits()	Saves simulation results from sHandle into hitbuffer	

B.2.5. UpdateMainProcess.cpp

Update main hitbuffer from sub hitbuffer		
UpdateMCMainHits()	Add simulation results from sub hitbuffer to main hitbuffer	

Update real covering in hitbuffer		
getStepSize()	Calculates step size for current step, see equation A.10	
manageTimeStep()	Chooses time_step, see equation A.11 Adapts time_step if covering would get negative	
UpdateCovering()	Uses time_step and Krealvirt to calculate new covering Saved to simHistory→coveringList	
UpdateCoveringphys()	Saves current real covering to hitbuffer	

B.2.6. Iteration.cpp

Calculation of time_step		
estimateAverageFlightTime()	Average flight time, see equation A.9	
estimateTmin_RudiTest()	Average path length/average velocity	

Set Covering Threshold to avoid negative covering		
initCoveringThresh()	Initializes size of covering threshold vector	
setCoveringThreshold()	Sets covering threshold for each facet	