

Domoticz MicroPython Projects

Explore | Build | Share | Reference

Robert W.B. Linn

08.01.2024

DISCLAIMER

THIS DOCUMENT IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THE DESCRIBED PROJECTS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Table of Contents

| | |
|-------------------------------------|----|
| Table of Contents | 1 |
| Introduction..... | 9 |
| Purpose..... | 9 |
| Prerequisites | 9 |
| Remarks | 9 |
| Credits..... | 9 |
| Licence..... | 10 |
| Concept | 11 |
| Components | 13 |
| MicroPython..... | 13 |
| Development Tools..... | 13 |
| Configuration Script | 14 |
| External Libraries | 17 |
| Web Server..... | 18 |
| Class Server..... | 18 |
| Pseudo Code..... | 19 |
| MicroPython Script..... | 22 |
| Pico W Projects | 28 |
| LED Control..... | 28 |
| Description | 28 |
| Solution | 28 |
| Block Diagram..... | 28 |
| Wiring | 29 |
| Circuit Diagram | 29 |
| Domoticz Setup | 29 |
| Domoticz Switch Device Action | 30 |
| Domoticz Switch State Change | 34 |
| Domoticz Dimmer State Change | 37 |
| Button Control..... | 42 |
| Description | 42 |
| Solutions..... | 42 |
| Block Diagram..... | 43 |
| Wiring | 43 |
| Circuit Diagram | 43 |
| Domoticz Setup | 43 |

| | |
|---|----|
| Domoticz Device Update | 44 |
| Domoticz Custom Event | 47 |
| Button Control MQTT Auto Discovery..... | 50 |
| Description | 50 |
| Solution | 50 |
| Block Diagram..... | 51 |
| MQTT Auto Discovery Topics & Payload | 51 |
| Domoticz..... | 52 |
| Web Server..... | 54 |
| DHT22 Temperature & Humidity..... | 57 |
| Description | 57 |
| Solutions..... | 57 |
| Wiring | 58 |
| Circuit Diagram..... | 58 |
| Domoticz Device Update | 59 |
| Domoticz Custom Event | 63 |
| DHT22 Temperature & Humidity MQTT Auto Discovery..... | 67 |
| Description | 67 |
| Solution | 67 |
| Block Diagram..... | 68 |
| MQTT Auto Discovery Topics & Payload | 68 |
| Domoticz..... | 69 |
| Web Server..... | 71 |
| LCD 20x4 I2C LED Control..... | 75 |
| Description | 75 |
| Solution | 75 |
| Block Diagram..... | 76 |
| Wiring | 77 |
| Circuit Diagram..... | 77 |
| Domoticz Setup | 78 |
| Web Server..... | 80 |
| LCD 20x4 I2C Motherboard Info..... | 83 |
| Description | 83 |
| Solution | 83 |
| Block Diagram..... | 84 |
| Wiring | 84 |
| Circuit Diagram | 84 |

| | |
|--|-----|
| Domoticz Setup | 84 |
| Web Server..... | 88 |
| LCD 20x4 I2C Text Input..... | 92 |
| Description | 92 |
| Solution | 92 |
| Block Diagram..... | 93 |
| Domoticz | 93 |
| Web Server..... | 95 |
| Enhancements..... | 98 |
| TM1637 4-digit 7-segment LED Display | 99 |
| Description | 99 |
| Solution | 99 |
| Block Diagram..... | 99 |
| Wiring | 100 |
| Circuit Diagram..... | 100 |
| Domoticz Setup | 100 |
| Web Server..... | 103 |
| Servo Motor | 106 |
| Description | 106 |
| Solution | 106 |
| Block Diagram..... | 106 |
| Wiring | 107 |
| Circuit Diagram..... | 107 |
| Domoticz Setup | 108 |
| Web Server..... | 111 |
| Enhancement Ideas | 115 |
| RFID Reader | 116 |
| Description | 116 |
| Solution | 116 |
| Block Diagram..... | 116 |
| Wiring | 117 |
| Circuit Diagram..... | 117 |
| Domoticz Setup | 118 |
| Web Server..... | 118 |
| Enhancement Ideas | 123 |
| TM1638 LED&KEY | 127 |
| Description | 127 |

| | |
|-------------------------------------|-----|
| Solution | 127 |
| Block Diagram..... | 127 |
| Wiring | 128 |
| Circuit Diagram | 128 |
| Domoticz Setup | 128 |
| Web Server..... | 128 |
| Projects..... | 129 |
| OLED 0,96" I2C Display..... | 139 |
| Description | 139 |
| Solution | 139 |
| Block Diagram..... | 139 |
| Wiring | 140 |
| Circuit Diagram | 140 |
| Domoticz Setup | 140 |
| Web Server..... | 145 |
| Enhancement Ideas | 149 |
| PIR Motion Sensor | 156 |
| Description | 156 |
| Solution | 156 |
| Block Diagram..... | 156 |
| Wiring | 157 |
| Circuit Diagram | 157 |
| Domoticz Setup | 157 |
| Web Server..... | 159 |
| BMP280 Temperature + Barometer..... | 161 |
| Description | 161 |
| Solution | 161 |
| Block Diagram..... | 161 |
| Wiring | 162 |
| Circuit Diagram | 162 |
| Domoticz Setup | 162 |
| Web Server..... | 164 |
| Potentiometer Dimmer..... | 167 |
| Description | 167 |
| Solution | 167 |
| Block Diagram..... | 167 |
| Wiring | 168 |

| | |
|--|-----|
| Circuit Diagram | 168 |
| Domoticz Setup | 168 |
| Web Server | 169 |
| DS18B20 Temperature (Push) | 172 |
| Description | 172 |
| Solution | 172 |
| Block Diagram..... | 172 |
| Wiring | 173 |
| Circuit Diagram | 173 |
| Domoticz Setup | 173 |
| Web Server..... | 176 |
| DS18B20 Temperature (Pull)..... | 179 |
| Description | 179 |
| Solution | 179 |
| Wiring | 179 |
| Circuit Diagram | 179 |
| Web Server..... | 180 |
| Node-RED Client | 184 |
| Domoticz Client..... | 186 |
| Stepper Motor Selector Switch Angle Move | 189 |
| Description | 189 |
| Solution | 189 |
| Block Diagram..... | 189 |
| Wiring | 190 |
| Circuit Diagram | 190 |
| Domoticz Setup | 191 |
| Web Server..... | 193 |
| Enhancement Ideas | 199 |
| Stepper Motor Blind Simulation | 200 |
| Description | 200 |
| Solution | 200 |
| Block Diagram..... | 200 |
| Domoticz Setup | 201 |
| Web Server..... | 202 |
| Stepper Motor Timer Run Stop | 203 |
| Description | 203 |
| Solution | 203 |

| | |
|---|-----|
| Block Diagram..... | 204 |
| Domoticz Setup | 204 |
| Web Server..... | 205 |
| Distance Sensor | 209 |
| Description | 209 |
| Solution | 209 |
| Block Diagram..... | 209 |
| Wiring | 210 |
| Circuit Diagram..... | 210 |
| Domoticz Setup | 211 |
| Web Server..... | 212 |
| Distance Sensor MQTT Auto Discovery..... | 214 |
| Description | 214 |
| Solution | 214 |
| Block Diagram..... | 215 |
| MQTT Auto Discovery Topics & Payload | 215 |
| Domoticz..... | 216 |
| Web Server..... | 217 |
| IKEA VINDRIKTNING Air Quality Sensor..... | 220 |
| Description | 220 |
| Solution | 220 |
| Block Diagram..... | 221 |
| Wiring | 221 |
| Circuit Diagram..... | 221 |
| Domoticz Setup | 222 |
| Web Server..... | 222 |
| Enhancements..... | 226 |
| Bluetooth Low Energy Sensor MQTT Auto Discovery | 236 |
| Description | 236 |
| Solution | 236 |
| Block Diagram..... | 237 |
| Components..... | 237 |
| Wiring | 237 |
| Circuit Diagram..... | 238 |
| Domoticz Setup | 238 |
| MQTT Auto Discovery Configuration | 238 |
| BLE Advertised Data Format..... | 240 |

| | |
|---|-----|
| BLE Device Environment Sensor..... | 241 |
| OpenMQTTGateway | 244 |
| Node-RED | 247 |
| Enhancements..... | 249 |
| Bluetooth Low Energy Actuator MQTT Auto Discovery | 250 |
| Description | 250 |
| Solution | 250 |
| Block Diagram..... | 251 |
| Components..... | 251 |
| Wiring | 252 |
| Circuit Diagram | 252 |
| Domoticz Setup | 252 |
| MQTT Auto Discovery..... | 254 |
| BLE Device Actuator..... | 257 |
| OpenMQTTGateway | 260 |
| Node-RED | 262 |
| ESP8266 Projects | 265 |
| Introduction | 265 |
| Setup | 265 |
| LED Blink | 266 |
| Description | 266 |
| Solution | 266 |
| Wiring | 266 |
| Circuit Diagram | 266 |
| MicroPython Script..... | 266 |
| LED Remote Control | 268 |
| Description | 268 |
| Solution | 268 |
| Wiring | 268 |
| Circuit Diagram | 268 |
| Web Server..... | 269 |
| Domoticz Setup | 278 |
| Appendix..... | 280 |
| MQTT Auto Discovery..... | 280 |
| Description | 280 |
| Domoticz Setup | 280 |
| MQTT Hints | 282 |

| | |
|------------------------------------|-----|
| MQTT Auto Discovery Hints..... | 284 |
| Example Devices | 285 |
| MicroPython Development Hints..... | 288 |
| Abbreviations | 289 |

Introduction

Purpose

To explore how to use the MicroPython programming language running on embedded hardware interfacing with the Domoticz Home Automation System.

★ The core of the projects uses the Raspberry Pi Pico W microcontroller, with components like actuators & sensors.

The microcontroller is acting as a web server or MQTT Auto Discovery client communicating with the Domoticz Home Automation System.

The intention is to provide some practical guidance, inspire ideas .. but not to explain Domoticz nor programming languages.

Prerequisites

It is expected to have basic knowledge of

- Domoticz Home Automation System.
- Domoticz Automation Event system dzVents.
- Programming languages Python, MicroPython, Lua.
- Raspberry Pi Pico / Pico W and ESP microcontrollers.
- Thonny Integrated Development Environment.
- JavaScript Object Notation (JSON).
- Message Queuing Telemetry Transport MQTT and MQTT Auto Discovery.
- Bluetooth and Bluetooth Low Energy (BLE).
- Node-RED Low-code programming for event-driven applications.

Remarks

- This is a working document = conceptual changes & new idea's whilst progressing.
- There might be better solutions = changes depend on the author's learning curve.
- To-Do actions are tagged with [TODO] and captured in the file TODO.md.
- Hard- and Software versions are subject to change.
- Circuits are created with [Fritzing](#).
- Sources are included. Get the latest sources from GitHub repository folder src.
- Before you start building a project, make sure that the microcontroller is unplugged from the electricity supply. It is dangerous to work on it if it is connected.

Credits


THANKS to the developers of the Raspberry Pi & ESP microcontroller, Domoticz Home Automation System, MicroPython language/libraries/tools and to all sharing related information. Without these, it would not be possible to write this document.

Licence

GNU GENERAL PUBLIC LICENSE v3.0.

The information shared for personal use only - use at your own risk (see LICENSE).

Concept

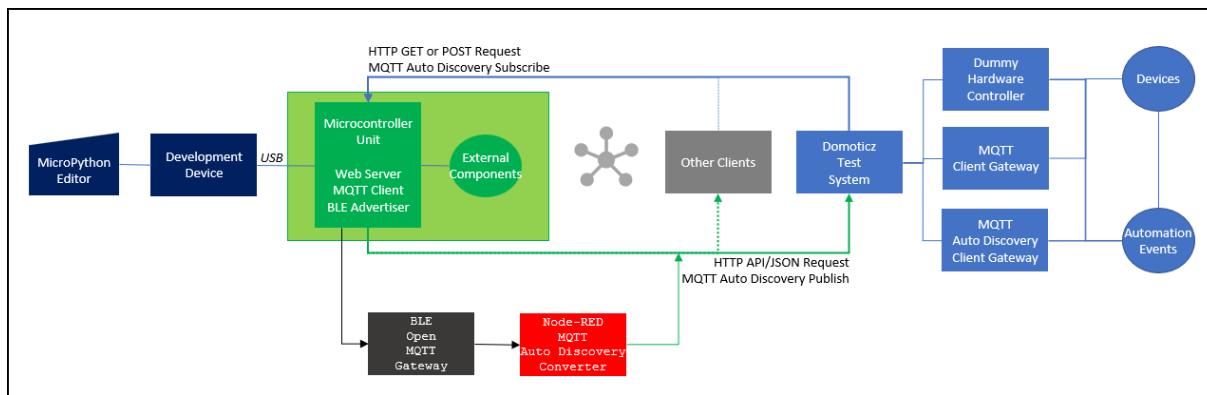

The block diagram starts at the left with the MicroPython editor (Thonny) running on the development device (Notebook with Windows 11).

Connected to the development device is a Microcontroller Unit (MCU) with external components (actuators & sensors).

For the Pico W projects, the Pico Breadboard Kit or the Pico IO Shield is used. These are a rather handy boards, not only for experimenting but also for building prototypes.

The MCU communicates with the Domoticz Test System via HTTP, Bluetooth Low Energy (BLE) or MQTT.

The MCU acts as a

- Web Server by sending HTTP GET/POST requests to connected clients or receiving HTTP GET/POST requests from connected clients,
- MQTT Auto Discovery Client by publishing device configuration or state messages and subscribing to state messages,
- Bluetooth Low Energy (BLE) advertiser by sending messages to an OpenMQTTGateway, which publishes MQTT messages being converted by Node-RED flow to Domoticz MQTT Auto Discovery Message.

The connected clients can be any client (like a Web Browser, Node-RED or Application), but for this book the client is a dedicated Domoticz Test System running on a Raspberry Pi 4B 4GB with Raspberry Pi OS version 12 (bookworm).

The Domoticz hardware and related devices are added, either manually via the “Dummy Hardware Controller” or automatic via the “MQTT Auto Discovery Client Gateway with LAN interface” depending on the requirements of the project as described in this book.

Note

Whilst starting to write this book, most of the devices are virtual sensors assigned to the Dummy Hardware Controller, but also gradually start to use the (new) MQTT Auto Discovery feature.

The Automation events are developed in [dzVents](#) (Domoticz Easy Events).

Event scripting with dzVents is well integrated in Domoticz and good documentation with many examples is available.

The Domoticz editor (GUI > Setup > More Options > Events) is used to develop and test the scripts (My Automation Scripts).

In addition, Node-RED and MQTT broker mosquitto (with clients mosquito_pub and mosquito_sub) are running on the Raspberry Pi.

The software is regularly updated to stay at the latest versions – for Domoticz the release channel Beta 2024.1 (build 15797 or higher) is set (at the time of writing).

Components

- 1x Raspberry Pi 4B Domoticz Test System (running latest Domoticz BETA version).
- 1x Raspberry Pi Pico W 2022.
- 1x Pico Breadboard Kit GeeekPi with LEDs (4 named LED1-4), Pushbuttons (4 named Button K1 - K4), Buzzer (not used for now).
Hint: If the buzzer is making unexpected noise, connect Pin BEEP to ground.
- 1x Pico IO Shield KEYESTUDIO KS3017.
- 1x ESP32-WROOM-32 (OpenMQTTGateway).
- 1x DHT22 Temperature & Humidity sensor.
- 1x LCD 20x4 LCD display (I2C) 20 columns & 4 rows.
- 1x TM1637 4-digit 7-segment LED display (I2C).
- 1x Servo Motor Tower Pro Micro Servo 9g SG90.
- 1x RFID-RC522 Reader for MIFARE RFID Cards and Tokens.
- 1x TM1638 LED&KEY 8x 7-segment decimal LED component with 8x individual LEDs and 8x push buttons.
- 1x PIR Motion Sensor.
- 1x Potentiometer.
- 2x DS18B20 1-wire digital thermometers.
- 1x 28BYJ-48 Stepper Motor with ULN2003 motor driver.
- 1x IKEA VINDRIKTNING Air Quality sensor.

MicroPython

The MCU program code (scripts) is developed in [MicroPython](#).

As most projects use the Raspberry Pi Pico W, recommend reading [Get Started with MicroPython on Raspberry Pi Pico](#) and to explore the [MicroPython examples](#).

Please note, that the author is new to MicroPython. Whilst evolving, solutions can change.


Development Tools

[Thonny](#) is used mostly on a Windows 11 notebook to develop the MicroPython scripts running on the MCU.

The MCU is connected to COM11 and uses the latest MicroPython [firmware](#) (nightly builds). The Thonny view files option is active to list the files structure on the development device and the MCU.

Example Thonny IDE Views Files, Editor & Log.

The MicroPython script `ds18b20.py` is running on a Pico W, which updates in regular intervals the temperature of the Domoticz temperature device via HTTP API/JSON request.

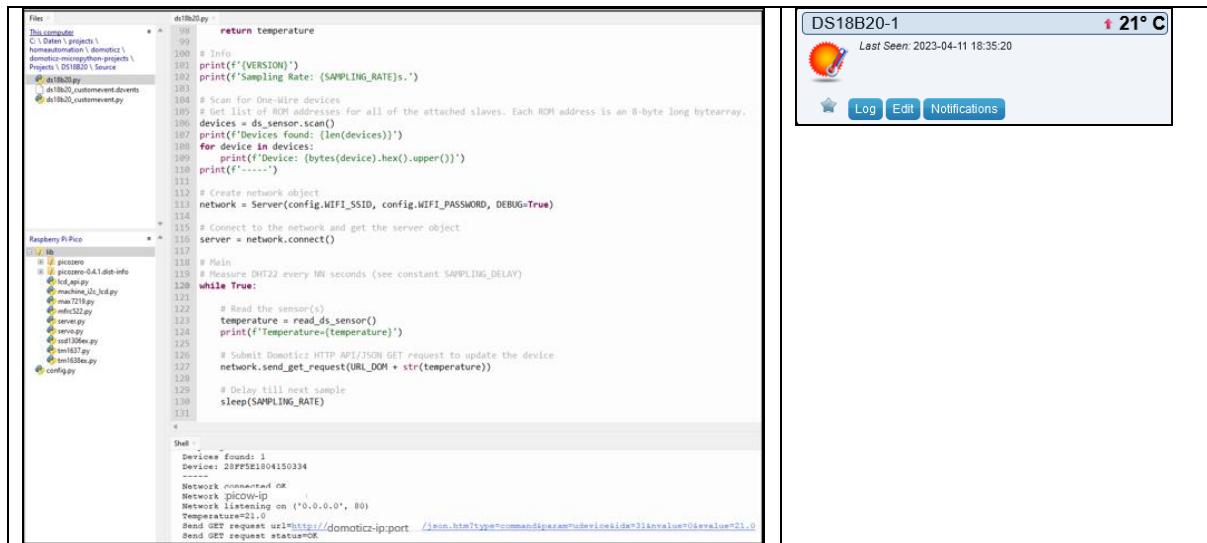

The screenshot shows the Thonny IDE interface. On the left, the project tree shows a folder structure with files like `ds18b20.py`, `domoticz.py`, and `config.py`. The right pane contains the code for `ds18b20.py`:

```

File: ds18b20.py
This computer: C:\Daten\1_projects\HomeAutomation\domoticz\Projects\DS18B20\Sources
ds18b20.py
domoticz.py
domoticz.event.events.py
domoticz.customevents.py
Raspberry Pi-Pico: lib
  - processes
    - picoservo-0.4.1.dist-info
      - __init__.py
      - picoservo-0.4.1.dist-info
        - __init__.py
        - _io.py
        - _io_c.py
        - machine_I2C_I2C.py
        - machine_I2S_I2S.py
        - mifl322.py
        - mifl322_I2S.py
        - server.py
        - ssd1606.py
        - ssd1606_I2C.py
        - tm1637.py
        - tm1638ex.py
      config.py

```

The code itself is as follows:

```

1 #!/usr/bin/python
2
3 # Return the temperature from the DS18B20 sensor
4
5 def read_temperature():
6     # Info
7     print("Version: " + str(VERSION))
8     print("Sampling Rate: " + str(SAMPLING_RATE) + "s")
9
10    # Get list of ROM addresses for all of the attached slaves. Each ROM address is an 8-byte long bytearray.
11    devices = ds_sensor.scan()
12    print("Devices found: " + str(len(devices)))
13
14    for device in devices:
15        print("Device: " + bytes(device).hex().upper())
16    print("----")
17
18    # Create network object
19    network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)
20
21    # Connect to the network and get the server object
22    server = network.connect()
23
24    # Main
25    while True:
26        # Read the sensor(s)
27        temperature = read_ds_sensor()
28        print("Temperature: " + str(temperature))
29
30        # Submit Domoticz HTTP API/JSON GET request to update the device
31        network.send_get_request(URL_DOM + str(temperature))
32
33        # Delay till next sample
34        sleep(SAMPLING_RATE)
35
36
37
38 Shell
39 Services Found: 1
40 Device: 28FF521B04150334
41 Network connected OK
42 Network PICOV-IP
43 Network listening on ("0.0.0.0", 80)
44 Temperature=21.0
45 Send GET request url=http://domoticz-ip:port /json.htm?type=command&param=udevice&sid=31&value=21.0
46 Send GET request status=OK

```


Configuration Script

A MicroPython configuration script `config.py` is used by **all projects** shared.


The MicroPython configuration script is stored on the development device in folder Config and is uploaded to the main folder of the MCU.

⚠ The `config.py` must be installed on the MCU else the projects running from the development device will fail.

Folder Structure Development Device and Pico W - Config
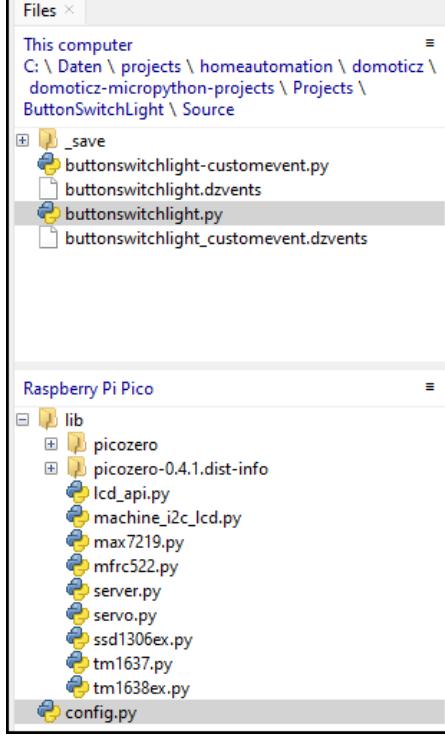
| | |
|---|---|
|  <p>The screenshot shows two project structures in the Thonny IDE:</p> <ul style="list-style-type: none"> This computer: Contains a folder named <code>buttonswitchlight</code> with subfolders <code>_save</code>, <code>buttonswitchlight-customevent.py</code>, <code>buttonswitchlight.dzvents</code>, and <code>buttonswitchlight.py</code>. Raspberry Pi Pico: Contains a <code>lib</code> folder with various <code>picozero</code> library files like <code>lcd_api.py</code>, <code>machine_i2c_lcd.py</code>, etc., and a <code>config.py</code> file. | <p>Folder structure on the development device and the Pico W.</p> <p>Go to Thonny > View > Files.</p> <p>The <code>config.py</code> is stored in the dedicated folder <code>Config</code> on the development device and then uploaded to the Pico W.</p> <p>Upload a file to the Pico W by selecting the file, right click, select “Upload to /”.</p> <p>If changes to the Pico W <code>config.py</code> file are made, ensure to download to the development device.</p> <p>Download a file from the Pico W by selecting the file, right click, select “Download to...”.</p> |
|---|---|

Folder Structure Development Device and Pico W – Project LEDControl
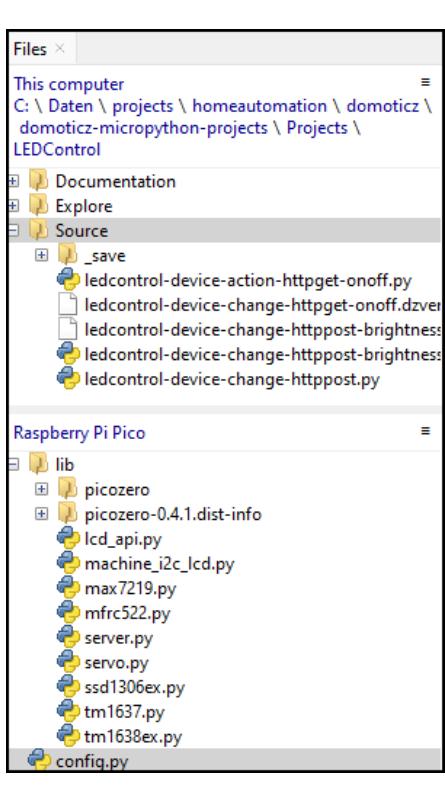
| | |
|---|---|
|  <p>The screenshot shows two project structures in the Thonny IDE:</p> <ul style="list-style-type: none"> This computer: Contains a folder named <code>LEDControl</code> with subfolders <code>Documentation</code>, <code>Explore</code>, and <code>Source</code>. The <code>Source</code> folder contains a <code>_save</code> folder with files <code>ledcontrol-device-action-httpget-onoff.py</code>, <code>ledcontrol-device-change-httpget-onoff.dzvent</code>, <code>ledcontrol-device-change-httppost-brightness.py</code>, <code>ledcontrol-device-change-httppost-brightness.dzvent</code>, and <code>ledcontrol-device-change-httppost.py</code>. Raspberry Pi Pico: Contains a <code>lib</code> folder with various <code>picozero</code> library files like <code>lcd_api.py</code>, <code>machine_i2c_lcd.py</code>, etc., and a <code>config.py</code> file. | <p>Folder structure on the development device and the Pico W. Go to Thonny > View > Files.</p> <p>This computer</p> <p>The folder structure of the projects on the development device.</p> <p>The projects are running from the development device. The picture shows the files for the project LEDControl.</p> <p>Raspberry Pi Pico</p> <p>The folder structure with the <code>config.py</code> file and additional libraries.</p> <p>Whilst building the projects, no <code>main.py</code> is used (this to avoid autostart).</p> |
|---|---|

Source Code Configuration Script – config.py

```
"""
File:config.py
Date:202303124
Author: Robert W.B. Linn

:description
Constants for the MCU Web Server.
Specific constants for the Pico Breadboard Kit.

Import the configuration file: import config.py
Access configuration item: config.PIN_LED1
"""

# Import the const package
from micropython import const

# Network
WIFI_SSID      = const('SSID')
WIFI_PASSWORD  = const('password')

# Domoticz IP + Port
DOMOTICZ_IP    = const('domoticz-ip:port')

# Pico W onboard LED
PIN_LED_ONBOARD = const('LED')

# Pico Breadboard Kit LEDs connected to GPnn (Pin #nn)
PIN_LED1      = const(16)      #Pin 21
PIN_LED2      = const(17)      #Pin 22
PIN_LED3      = const(18)      #Pin 24
PIN_LED4      = const(19)      #Pin 25

# Pico Breadboard Kit Buttons connected to GPnn (Pin #nn)
PIN_BUTTON_K1 = const(20)     #Pin 26



# Domoticz
# HTTP response JSON keys
KEY_STATE = const('status')
KEY_TITLE = const('title')
KEY_MESSAGE = const('message')

# Messages used for HTTP response
STATE_ERR   = const('ERROR')
STATE_OK    = const('OK')
MESSAGE_EMPTY = const('')
MESSAGE_UNKNOWN = const('Unknown')
MESSAGE_CMD_UNKNOWN = const('Unknown command.')
MESSAGE_ON   = const('On')
MESSAGE_OFF  = const('Off')
```

[TODO] Optimize RAM usage for constants (see [MicroPython for Microcontrollers](#)).

External Libraries

Several external MicroPython libraries are used and stored on the development device and the Pico W.
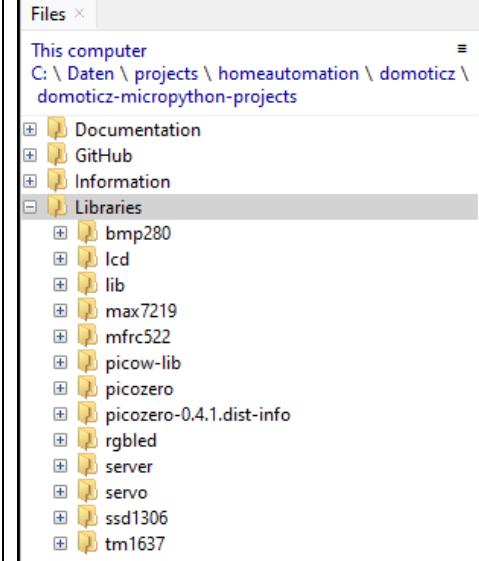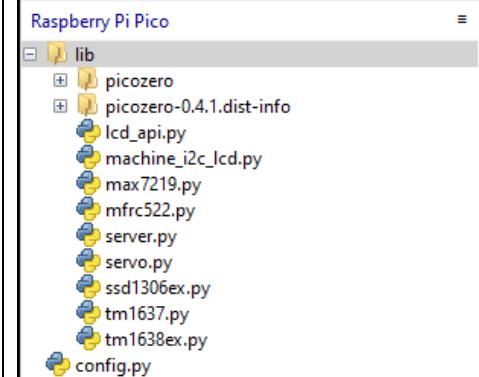
| | |
|---|--|
|   | <p>On the development device the MicroPython libraries are stored in the folder <i>Libraries</i>.</p> <p>The content of this folder is uploaded to the Pico W folder <i>lib</i>.</p> <p>If changes made to the libraries on the Pico W, then download the updated library files to the development device folder <i>Libraries</i>.</p> <p>The folder structure on the left shows the additional libraries for using the LCD 20x4 I2C, web server, controlling a servo motor, TM1637 7-segment display.</p> <p>In addition, starting to use the <i>picozero</i> library (BETA).</p> <p>It is mandatory to store the additional library files on the Pico W else the projects will fail to run.</p> <p><i>Note</i></p> <p>There are more libraries used than shown on the screenshots at the left. Also newer versions in place.</p> |
|---|--|

Picozero Library

The [picozero](#) library is used in some of the projects. It is easy to use for external components.

Credits


Thanks to the developers of the open-source libraries used in several projects.

Web Server

The projects use, in most cases, a web server (server.py) running on the MCU developed with MicroPython.

The communication between

- The MCU Web Server and Domoticz uses [Domoticz HTTP API/JSON](#) requests,
- Domoticz and the MCU Web Server uses HTTP GET or POST requests.

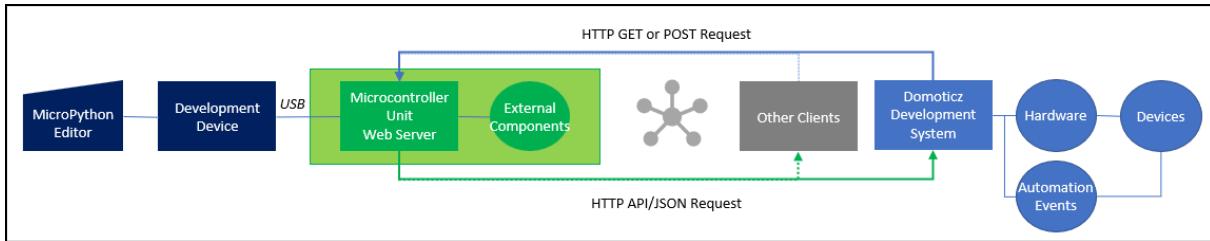

Class Server

The MCU Web Server makes use of an own developed MicroPython Class Server (server.py) to handle HTTP GET or POST requests.

This class is the core of the web server and makes it easier to create the projects.

- Create a server objected called network,
- Connect to the network,
- Get network client connection,
- Handle the GET or POST request,
- Send response back to the client.

The client in this book is by default Domoticz, but can be any other as well (curl, Node-RED, applications).

Example

Code Snippet to control LED1 of the Pico Breadboard Kit via HTTP command:

```
http://picow-ip/led1/on or off or state
```

```
def HandleRequest(cmd):
    if cmd == CMD_LED_ON:
        led1.on()
        response[config.KEY_MESSAGE] = config.MESSAGE_ON
        response[config.KEY_STATE] = config.STATE_OK
    elif cmd == CMD_LED_OFF:
        led1.off()
        response[config.KEY_MESSAGE] = config.MESSAGE_OFF
        response[config.KEY_STATE] = config.STATE_OK
    elif cmd == CMD_LED_STATE:
        if led1.value() == 1:
            response[config.KEY_MESSAGE] = config.MESSAGE_ON
        else:
            response[config.KEY_MESSAGE] = config.MESSAGE_OFF
```

```

        response[config.KEY_STATE] = config.STATE_OK
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
    return response

network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
server = network.Connect()
while True:
    try:
        cl, request = network.GetClientConnection(server)
        response = {}
        cmd, status = network.ParseGETRequest(request)
        response[config.KEY_TITLE] = cmd
        if status == 1:
            response = HandleRequest(cmd)
        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
        network.SendResponse(cl, response, True)
    except OSError as e:
        cl.close()
        print('[ERROR] Network Connection closed')

```

Pseudo Code

The steps performed when starting the web server and listening for client requests.

1. Import config.py (stored on the MCU) to get the network parameter,
2. Connect to the Network & turn MCU onboard LED (as status indicator) on,
3. If the network connection fails, the MCU onboard LED is off. Check the Thonny log,
4. Listen to incoming client connections submitted HTTP GET or POST requests,
5. Accept the client connection,
6. Get the data from the HTTP request,
7. Parse the data from the GET or POST request,
8. Take any action accordingly,
9. Sent HTTP response, aligning with the Domoticz HTTP API/JSON response, to the client. Example:
 {"status": "OK", "title": "/led1/on", "message": "On"}
 status: OK or ERROR
 title: Command
 message: OK or error message

[TODO] Check out the new Raspberry Pi Debug Probe Device.

HTTP GET / POST Request Examples

Two HTTP request examples handled by the MCU Web Server.

The GET request URL contains the command to be executed by the MicroPython script.

The POST request URL contains post-data as JSON object parsed by the MicroPython script.

HTTP GET request to set LED1 state on (Project LEDControl)

The command is sent for example from the direct On action of a Domoticz Switch Type On/Off.

```
HTTP Command: http://picow-ip/led1/on
```

```
HTTP Response: {"status": "OK", "title": "/led1/on", "message": "On"}
```

HTTP POST request to set text on a LCD2004 I2C display (Project LCDLEDControl)

The last line of the received data contains the post-data (JSON object) sent by the Domoticz Automation Events dzVents openURL function.

The JSON object has several key:value pairs for selected Domoticz motherboard devices (Domoticz runs on a Raspberry Pi).

For each of the displayed items, the position col:row and text are defined. This is done by the Domoticz event, which enables flexibility in positioning items on the display. There is no need to change the MicroPython script for the MCU web server.

```
POST / HTTP/1.1
Host: picow-ip
User-Agent: Mozilla/5.0 (Windows NT 10.0; WOW64) AppleWebKit/603.36 (KHTML, like Gecko) Chrome/53.0.34736.0 Safari/603.38
Accept: /*
Accept-Encoding: deflate, gzip, br
Content-Type: application/json
Content-Length: 193

{"cpuusage": {"col": 6, "row": 3, "text": "C:0.54"}, "internaltemperature": {"col": 0, "row": 3, "text": "T:40"}, "memoryusage": {"col": 14, "row": 3, "text": "M:21"}, "timestamp": {"col": 15, "row": 1, "text": "18:45"}}
```

```
HTTP Response: {"status": "OK", "title": "Set LCD", "message": ""}
```

Domoticz Automation Event dzVents Snippet

```
local function getMotherboardData(domoticz)
    local data = {}
    data['timestamp'] = setText(1, 15, string.sub(domoticz.time.rawTime, 1, 5))
    data['internaltemperature'] = setSensor(3, 0, 'T:', round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 0))
    data['cpuusage'] = setSensor(3, 6, 'C:', round(domoticz.devices(IDX_CPUUSAGE).percentage, 2))
    data['memoryusage'] = setSensor(3, 14, 'M:', round(domoticz.devices(IDX_MEMORYUSAGE).percentage, 0))
    return data
end

if (item.isTimer) then
    domoticz.openURL({
        url = URL_SERVER, method = 'POST', headers = { ['Content-Type'] =
        'application/json' },
        body = json.encode(data)
    })
end
```

```
    postData = getMotherboardData(domoticz), callback = RES_HTTP })
end
```

MicroPython Script

This is a stripped down MicroPython script example of a MCU Web Server class Server.

```
"""
File:server.py
Date:20230425
Author: Robert W.B. Linn
"""

import network
import urequests
import socket
import time
from machine import Pin
import json

class Server:
    # Constants
    NAME = 'Server'
    VERSION = 'v20230425'

    CRLF = chr(13) + chr(10)
    SPACE = chr(32)

    # Domoticz
    # HTTP response JSON keys
    KEY_STATE= 'status'
    KEY_TITLE= 'title'
    KEY_MESSAGE = 'message'

    # Messages used for HTTP response
    STATE_OK      = 'OK'
    STATE_ERR     = 'ERROR'
    MESSAGE_EMPTY = ''
    MESSAGE_UNKNOWN = 'Unknown'
    MESSAGE_CMD_UNKNOWN = 'Unknown command.'
    MESSAGE_ON     = 'On'
    MESSAGE_OFF    = 'Off'

    def __init__(self, wifi_ssid, wifi_password, STATUS_PIN="LED", DEBUG=True):
        """
        Init the network with defaults.

        :param string wifi_ssid
            SSID of the network to connect

        :param string wifi_password
            Passord of the network to connect

        :param string | int STATUS_PIN
            Pin number of the LED indicating network status connected

        :param bool DEBUG
            Flag to set the log for debugging purposes
        """
        self.debug = DEBUG
        self.wifi_ssid = wifi_ssid
        self.wifi_password = wifi_password

        # Create the onboard LED object to indicate controller is up and network
        # connected
        self.ledstatus = Pin(STATUS_PIN, Pin.OUT)
        self.ledstatus.off()
```

```
def log(self, msg):
    """
    Log to the console if debug flag is true.

    :param string msg
        Message to print
    """
    if self.debug:
        print(msg)

def connect(self):
    """
    Connect to the network using the class SSID and password.
    If connected start listening for incoming connections.

    :param None
    :return object server
        Server object.

    :example
        # Create network object
        network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
        # Connect to the network and get the server object
        server = network.connect()
    """
    try:
        wlan = network.WLAN(network.STA_IF)
        wlan.active(True)
        wlan.connect(self.wifi_ssid, self.wifi_password)

        # Network connection
        self.log(f'Network waiting for connection...')
        max_wait = 10
        while max_wait > 0:
            if wlan.status() < 0 or wlan.status() >= 3:
                break
            max_wait -= 1
            time.sleep(1)

        if wlan.status() != 3:
            self.ledstatus.off()
            raise RuntimeError('[ERROR] Network connection failed!')
        else:
            self.ledstatus.on()
            self.log(f'Network connected OK')
            status = wlan.ifconfig()
            self.log(f'Network IP ' + status[0] )

        # Network Get address
        addr = socket.getaddrinfo('0.0.0.0', 80)[0][-1]

        # Network Create the server socket
        server = socket.socket()

        # Option to reuse addr to avoid error EADDRINUSE
        server.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)

        # Bind the address befor starting to listen for icoming client
        # connections
        server.bind(addr)
        server.listen(1)
        self.log(f'Network listening on {addr}')
        # self.log(server)
        return server
    except OSError as e:
        self.ledstatus.off()
        cl.close()
```

```

        raise RuntimeError('[ERROR] Network connection closed')

def connect2(self):
    """
    Connect to the network using the class SSID and password.

    :param None

    :example
        # Create network object
        network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
    """
    try:
        wlan = network.WLAN(network.STA_IF)
        wlan.active(True)
        wlan.connect(self.wifi_ssid, self.wifi_password)

        # Network connection
        self.log(f'Network waiting for connection...')
        max_wait = 10
        while max_wait > 0:
            if wlan.status() < 0 or wlan.status() >= 3:
                break
            max_wait -= 1
            time.sleep(1)

        if wlan.status() != 3:
            self.ledstatus.off()
            raise RuntimeError('[ERROR] Network connection failed!')
        else:
            self.ledstatus.on()
            self.log(f'Network connected OK')
            status = wlan.ifconfig()
            self.log(f'Network IP ' + status[0] )

    except OSError as e:
        self.ledstatus.off()
        cl.close()
        raise RuntimeError('[ERROR] Network connection closed')

def parse_get_request(self, request):
    """
    Parse the command from the HTTP GET Request.
    The first line of the request contains the command.
    The first line is split and the 2nd item holds the command + data.
    Example first line with the command:
    GET /led1/on HTTP/1.1
    The command is /led1/on.

    :param string request
        HTTP GET request

    :return string command
        Command, i.e. /led1/on

    :return int status
        0 = Error, 1 = OK

    :example
        # Parse the get data. In case of error, the status is 0.
        cmd, status = network.parse_get_request(request)
    """
    status = 0
    cmd = self.MESSAGE_CMD_UNKNOWN

    # Split the decoded request string into a list
    data = str(request.decode()).split(self.CRLF)

    # Check if there is data to get the first item

```

```

    if (len(data) > 0):
        # print(data[0])
        # Split the first item which is the command string into a list with 3
items
        cmd = data[0].split(self.SPACE)
        # Check length and get the 2nd item, i.e. /led1/on
        if len(cmds) == 3:
            cmd = cmd[1]
            status = 1
        else:
            print(f'[ERROR] HTTP GET number of command items invalid. Expect 3,
got {len(cmds)}.')
        else:
            print(f'[ERROR] HTTP GET request not valid.')
            self.log(f'HTTP Command={cmd}')

        # Return the command, i.e. /led1/on etc.
        return cmd, status

def parse_post_request(self, request):
    """
    Parse the command from the HTTP POST Request.
    The last line of the HTTP request contains the command + data.
    The HTTP request is decoded and split as a string list.
    The last line is a JSON object with key:value pair(s).

    :param string request
        HTTP request

    :return string command
        Command as JSON key:value pair(s), i.e. {"led":1}

    :return int status
        0 = Error, 1 = OK

    :example
        # Parse the post data. In case of error, the status is 0.
        data, status = network.parse_get_request(request)
    """
    status = 0
    cmd = self.MESSAGE_CMD_UNKNOWN

    # Split the decoded request string into a list
    data = str(request.decode()).split(self.CRLF)

    # Check if there is data to get the last item
    # At least 8 items
    if (len(data) > 7):
        # JSON parse the last list item holding the command as JSON string
        # Convert the string to a JSON object
        try:
            cmd = json.loads(data[len(data) - 1])
            status = 1
        except ValueError:
            # In case the JSON data can not be parsed
            cmd = data[len(data) - 1]
            print('[ERROR] HTTP POST request not valid (ValueError).')
    else:
        print(f'[ERROR] HTTP POST request not valid (Not enough items, must be
8 or more.')
        self.log(f'HTTP Command={cmd}')

    # Return the command as JSON object, i.e. HTTP Command: {'state': 'on'}
    return cmd, status

def get_client_connection(self, server):
    """
    Get the client connection.

```

```

:param object server
    Server object which is listening

:return object cl

:return string data
    The requested data format depends on the request

:example
    cl, request = network.get_client_connection(server)
"""
# Get client connection
cl, addr = server.accept()
self.log(f'Network client connected from {addr[0]}')

# Get the request data used to extract the command
request = cl.recv(1024)
# Return cl and the request data
return cl, request

def send_response(self, cl, response, close):
"""
Send the response to the client, i.e. Domoticz, curl etc. as JSON object.

:param object cl

:param JSON response

:param bool close
"""
self.log(f'HTTP Response={json.dumps(response)}')

# Important to have a blank line prior JSON response string
# Note the use of json.dumps for the response
cl.send('HTTP/1.1 200 OK'+self.CRLF+'content-type:
application/json'+self.CRLF+self.CRLF+json.dumps(response))

# If flag close is set, ensure to close the connection
if close == True:
    cl.close()
    self.log(f'Network connection closed')

def send_get_request(self, url):
"""
Network submit http get request to the domoticz server.

:param string url
    URL of the HTTP request

:return int status
    0 = Error, 1 = OK

:return string content
    HTTP response content sent by Domoticz engine

:example
    Update the Domoticz temp+hum device with IDX 15
    http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=15&nvalue=0&svalue=16;55;1
"""
status = 0
content = ''
self.log(f'Send GET request url={url}')
try:
    # URL encode space
    url = url.replace(' ', '%20')
    r = urequests.get(url)
    j = json.loads(r.content)
    content = j

```

```
        self.log(f'Send GET request status={j['status']}')
        r.close()
        status = 1
    except OSError as e:
        # print(f'[ERROR] Sending data {e}')
        raise Exception(f'[ERROR] Sending data {e}')
    except ValueError as e:
        # print(f'[ERROR] {e}, {r.content.decode()}')
        raise Exception(f'[ERROR] {e}, {r.content.decode()}')
    return status, content

def send_post_request(self, url, postdata):
    """
    Network submit http post request to the domoticz server.

    :param string url
        URL of the HTTP request

    :param string postdata
        postdata as JSON object

    :return int status
        0 = Error, 1 = OK

    :example
        Trigger the Domoticz custom event named DHT22 with data JSON object
        http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DHT22&data={"h": 58, "t": 16,
"s": 0}
    """
    status = 0
    self.log(f'Send POST request url={url}, postdata={postdata}')
    try:
        r = urequests.post(url, data=json.dumps(postdata))
        j = json.loads(r.content)
        self.log(f'Send POST request status={j['status']}')
        r.close()
        status = 1
    except OSError as e:
        print(f'[ERROR] Sending data {e}')
        # raise Exception('Network Connection failed.')
    return status
```

Pico W Projects

LED Control

Description

This project switches, triggered by a Domoticz Switch Device, an LED connected to the Pico W (running as a web server).

Ideas for Use


- Alarm indicators
- Status indicator

Solution

Various solutions are developed:

1. Domoticz Switch Action triggers HTTP GET request to the Pico W web server to set the state of the LED to on or off,
 2. Domoticz Switch State Change is handled by an Domoticz Automation Event dzVents which triggers HTTP POST request to the Pico W web server to set the state of the LED to on or off,
 3. Domoticz Switch, configured as Dimmer, State Change is handled by an Domoticz Automation Event dzVents which triggers HTTP POST request to the Pico W web server to set the brightness of the LED between 0-100%.
- This solution also accepts other commands: on, off, toggle, blink, pulse.


Block Diagram

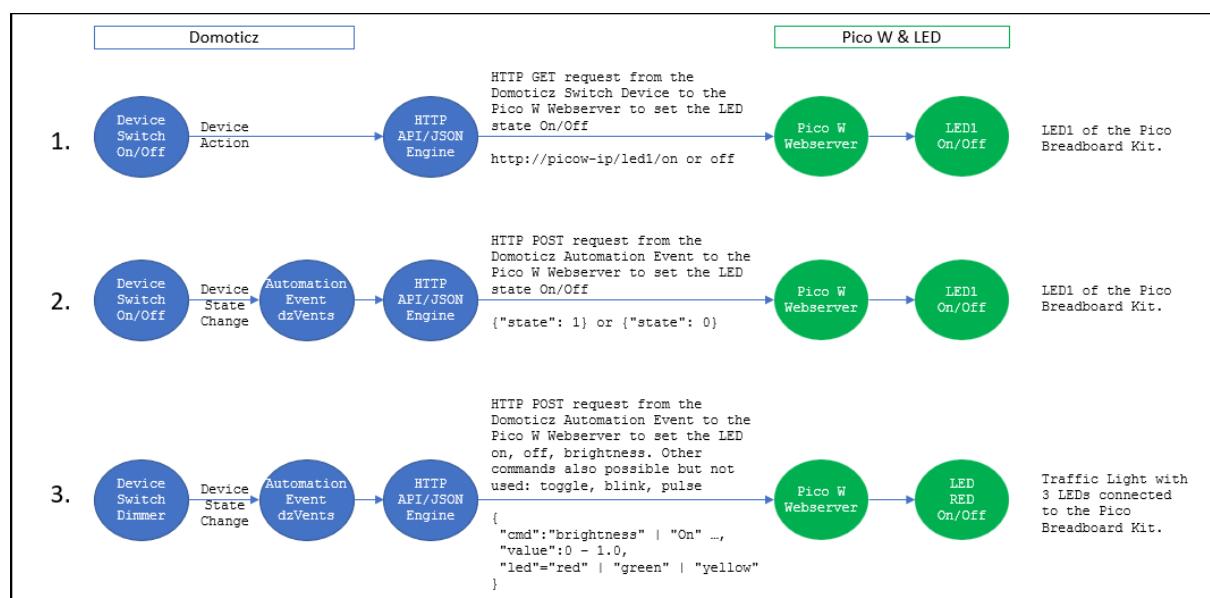

Wiring

| LED1 | Pico W |
|----------------------|-----------------------------|
| + (Anode) | GP16 (Pin #21) |
| GND (Cathode) | GND (Pin #38) |
| Traffic Light | |
| LED RED | GP2 (Pin #4) , GND (Pin #3) |
| LED YELLOW | GP3 (Pin #5) , GND (Pin #3) |
| LED GREEN | GP4 (Pin #6) , GND (Pin #3) |

Circuit Diagram

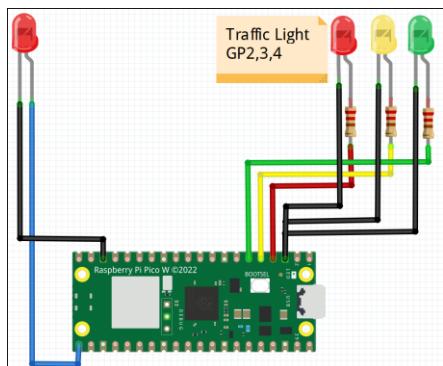

Domoticz Setup

Devices

Create a virtual sensor, hardware dummy, named LED1 Control from sensor type Switch/Light.

After creating the device, the Domoticz devices list shows the entry:


```
Idx=16, Hardware=VirtualSensors, ID=00014060, Unit=1, Name=LED1 Control,
Type=Light/Switch, SubType=Switch, Data=On
```

Domoticz Switch Device Action Solution

Set LED1 state On/Off via a Domoticz switch device On/Off Action containing the URL for the HTTP GET request with the command /led1/on or off to the Pico W (running as a web server).

The picture shows the flow of actions from creating a switch device (virtual sensors hardware), edit the switch device On / Off actions (http://picow-ip/led1/on or off) and examples switching LED1 off and on via the device widget logged by Thonny running the Pico W web server.

Block Diagram

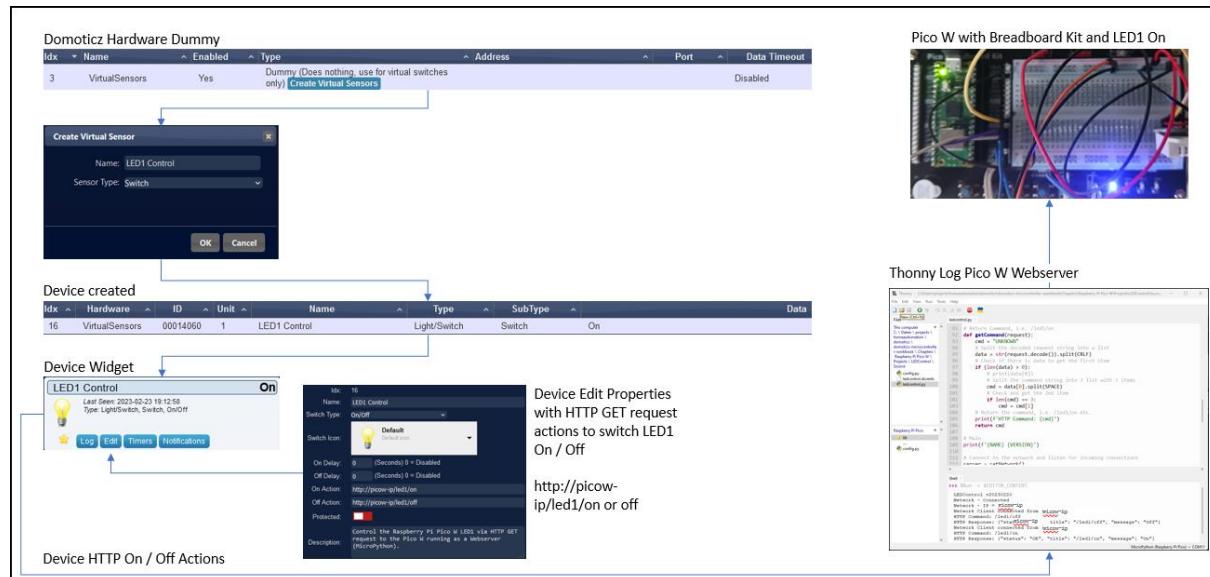

Domoticz Log

```
2023-02-24 10:55:04.790 VirtualSensors: Light/Switch (LED1 Control)
2023-02-24 10:55:04.784 Status: User: admin initiated a switch command (16/LED1 Control/On)
2023-02-24 10:55:07.408 VirtualSensors: Light/Switch (LED1 Control)
2023-02-24 10:55:07.402 Status: User: admin initiated a switch command (16/LED1 Control/Off)
```

Example Log Error – wrong Pico W web server URL for On Action.

```
2023-02-24 10:56:20.321 Error: Error opening url: http://picow-ip/led1/on
```

MicroPython Script

```
"""
File: ledcontrol-device-action-httpget-onoff.py
Date: 20230409
Author: Robert W.B. Linn

PicoW RESTful web server listening to control an LED via Domoticz Switch.
Commands are set via HTTP GET request with HTTP response JSON object.

:commands
LED ON:
HTTP Request:http://picow-ip/led1/on
HTTP response: {"status": "OK", "title": "/led1/on", "message": "On"}

LED OFF:
HTTP Request:http://picow-ip/led1/off
HTTP response: {"status": "OK", "title": "/led1/off", "message": "Off"}

LED STATE:
HTTP Request:http://picow-ip/led1/state
HTTP response: {"status": "OK", "title": "/led1/state", "message": "On"}

In case of an error:
HTTP response: {"status": "ERROR", "title": "/led1/x", "message": "Unknown
command."}

Example using curl to turn LED1 on:
curl -v http://picow-ip/led1/on

:log
ledcontrol-device-action-httpget-onoff v20230409
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command=/led1/on
HTTP Response={"title": "/led1/on", "message": "On", "status": "OK"}
Network connection closed
Network client connected from client-ip
HTTP Command=/led1/off
HTTP Response={"title": "/led1/off", "message": "Off", "status": "OK"}
Network connection closed
Network client connected from client-ip
HTTP Command=/led1/state
HTTP Response={"title": "/led1/state", "message": "Off", "status": "OK"}
Network connection closed
"""

# Libraries
import network
import socket
import time
from machine import Pin
import json
# Import server class from server.py
from server import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'ledcontrol-device-action-httpget-onoff'
VERSION = 'v20230409'

# URL params to switch LED1 on or off or request state
# http://pico-ip/command
CMD_LED_ON = '/led1/on'
CMD_LED_OFF = '/led1/off'
```

```
CMD_LED_STATE= '/led1/state'

# Create the LED1 object using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
# Turn the LED off
led1.value(0)

"""
Handle the request containing the command.
The LED is turned on/off or the state is requested.
The response JSON object is updated.

:param string cmd
    Command to set the LED1 state on/off or get the state.

:return JSON object response
"""

def handle_request(cmd):
    # Turn the LED on
    if cmd == CMD_LED_ON:
        led1.on()
        response[config.KEY_MESSAGE] = config.MESSAGE_ON
        response[config.KEY_STATE] = config.STATE_OK
    # Turn the LED off
    elif cmd == CMD_LED_OFF:
        led1.off()
        response[config.KEY_MESSAGE] = config.MESSAGE_OFF
        response[config.KEY_STATE] = config.STATE_OK
    # Get the LED state
    elif cmd == CMD_LED_STATE:
        if led1.value() == 1:
            response[config.KEY_MESSAGE] = config.MESSAGE_ON
        else:
            response[config.KEY_MESSAGE] = config.MESSAGE_OFF
            response[config.KEY_STATE] = config.STATE_OK
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
    return response

# Main
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Create the HTTP response JSON object
        response = {}

        # Parse the get data. In case of error, the status is 0.
        cmd, status = network.parse_get_request(request)

        # Assign the command to the response KEY_TITLE
        response[config.KEY_TITLE] = cmd

        # If the status is 1, handle the command
        if status == 1:
            response = handle_request(cmd)
        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
```

```
# Send response to the client and close the connection
network.send_response(cl, response, True)

except OSError as e:
    network.ledstatus.off()
    cl.close()
    print('[ERROR] Network Connection closed')
```


Domoticz Switch State Change Solution

Set LED1 state On/Off via an Domoticz Automation Event dzVents listening to the Domoticz Switch device state change. The event

1. submits the URL for the HTTP GET request via the function openURL to the Pico W running as a web server,
2. handles the Pico W web server response.

The Domoticz configuration is as described for the previous solution, except that there are no Switch device On/Off actions defined but an Automation Event dzVents is used.

Block Diagram

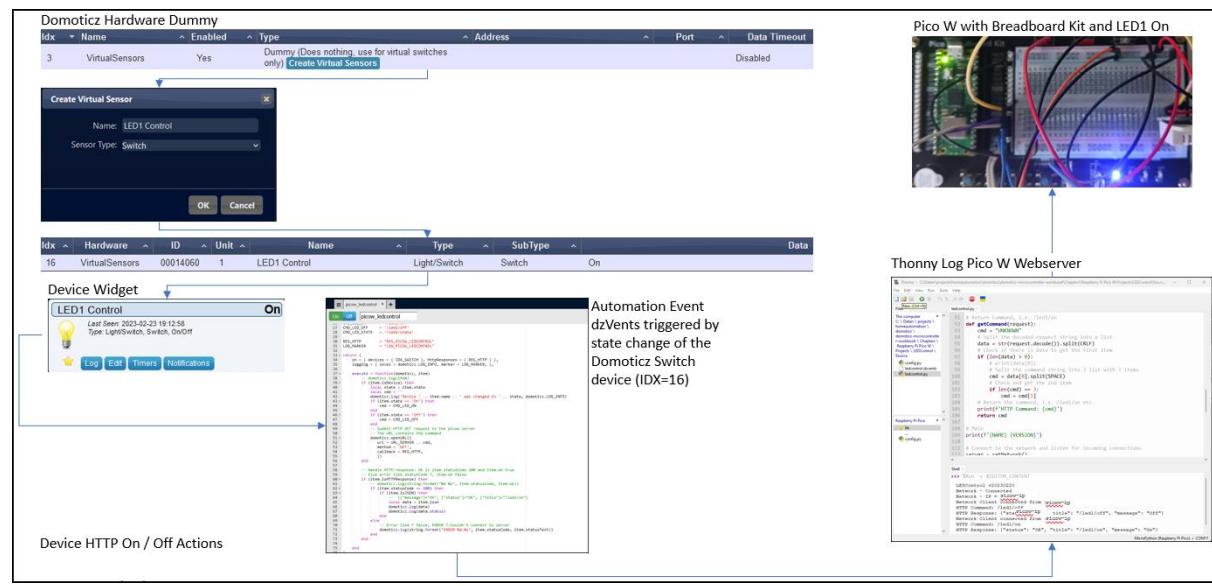

MicroPython Script

The same script is used as for the previous project:
ledcontrol-device-action-httpget-onoff.py

Automation Script

```
-- ledcontrol-device-change-httpget-onoff.dzvents
-- Domoticz IDX of the switch triggering Pico W LED on/off
local IDX_SWITCH = 16

local URL_SERVER      = "picow-ip"
local CMD_LED_ON      = '/led1/on'
local CMD_LED_OFF     = '/led1/off'
local CMD_LED_STATE   = '/led1/state'

local EXPERIMENT      = "LEDCONTROL-DEVICE-CHANGE"
local RES_HTTP         = "RES_" .. EXPERIMENT
local LOG_MARKER       = "LOG_" .. EXPERIMENT

return {
    on = { devices = { IDX_SWITCH }, httpResponses = { RES_HTTP } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER, },
    execute = function(domoticz, item)
        if (item.isDevice) then
            local state = item.state
            local cmd = ''
            domoticz.log('Device ' .. item.name .. ' was changed to ' .. state,
domoticz.LOG_INFO)
            if (item.state == 'On') then
                cmd = CMD_LED_ON
            end
            if (item.state == 'Off') then
                cmd = CMD_LED_OFF
            end
            -- Submit HTTP GET request to the picow server
            -- The URL contains the command
            domoticz.openURL({
                url = URL_SERVER .. cmd,
                method = 'GET',
                callback = RES_HTTP,
            })
        end
        -- Handle HTTP response: OK is item statusCode 200 and item.ok true
        -- Else error like statusCode 7, item.ok false
        if (item.isHTTPResponse) then
            -- domoticz.log(string.format("%d %s", item.statusCode, item.ok))
            if (item.statusCode == 200) then
                if (item.isJSON) then
                    -- {[{"message"]="On", ["status"]="OK", ["title"]="/led1/on"}]
                    local data = item.json
                    domoticz.log(data)
                    domoticz.log(data.status)
                end
            else
                -- Error like 7 false; ERROR 7:Couldn't connect to server
                domoticz.log(string.format("ERROR %d:%s", item.statusCode,
item.statusText))
            end
        end
    end
}
```

Domoticz Log

```

2023-02-24 11:04:05.512 VirtualSensors: Light/Switch (LED1 Control)
2023-02-24 11:04:05.506 Status: User: admin initiated a switch command (16/LED1
Control/On)
2023-02-24 11:04:05.606 Status: dzVents: Info: Handling events for: "LED1 Control",
value: "On"
2023-02-24 11:04:05.606 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Start internal script: picow_ledcontrol: Device: "LED1 Control (VirtualSensors)", 
Index: 16
2023-02-24 11:04:05.606 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: Device
LED1 Control was changed to On
2023-02-24 11:04:05.606 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Finished picow_ledcontrol
2023-02-24 11:04:05.606 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-02-24 11:04:05.693 Status: dzVents: Info: Handling httpResponse-events for:
"RES_LEDCONTROL-DEVICE-CHANGE"
2023-02-24 11:04:05.693 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Start internal script: picow_ledcontrol: HTTPResponse: "RES_PICOW_LEDCONTROL"
2023-02-24 11:04:05.694 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE:
{["message"]="On", ["title"]="/led1/on", ["status"]="OK"}
2023-02-24 11:04:05.694 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: OK
2023-02-24 11:04:05.694 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Finished picow_ledcontrol

```

Example Log Error

Wrong Pico W web server URL for On Action.

```

2023-02-24 11:05:18.130 VirtualSensors: Light/Switch (LED1 Control)
2023-02-24 11:05:18.124 Status: User: admin initiated a switch command (16/LED1
Control/Off)
2023-02-24 11:05:18.214 Status: dzVents: Info: Handling events for: "LED1 Control",
value: "Off"
2023-02-24 11:05:18.215 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Start internal script: picow_ledcontrol: Device: "LED1 Control (VirtualSensors)", 
Index: 16
2023-02-24 11:05:18.215 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: Device
LED1 Control was changed to Off
2023-02-24 11:05:18.215 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Finished picow_ledcontrol
2023-02-24 11:05:18.215 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-02-24 11:05:21.440 Status: dzVents: Info: Handling httpResponse-events for:
"RES_LEDCONTROL-DEVICE-CHANGE"
2023-02-24 11:05:21.440 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Start internal script: picow_ledcontrol: HTTPResponse: "RES_PICOW_LEDCONTROL"
2023-02-24 11:05:21.440 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: ERROR
7:Couldn't connect to server
2023-02-24 11:05:21.440 Status: dzVents: Info: LEDCONTROL-DEVICE-CHANGE: -----
Finished picow_ledcontrol
2023-02-24 11:05:21.361 Error: Error opening url: http://picow-ip/led1/off
2023-02-24 11:05:21.440 Error: dzVents: Error: (3.1.8) LEDCONTROL-DEVICE-CHANGE:
HTTP/1.1 response: 7 ==> Couldn't connect to server

```

Domoticz Dimmer State Change

Solution

Set the brightness of an RED LED (from a Traffic Light) via a Domoticz dimmer.
A Domoticz Automation Event dzVents listens to the state change of the Domoticz dimmer.
If the state is changed, the dimmer level 0-100 is converted to a brightness value 0-1.0.
The event submits a HTTP POST request to the Pico W web server, which sets the brightness
of the RED LED.
The post data submitted by the Domoticz automation event dzVents.:

```
{ ["cmd"] = "brightness", ["value"] = 0 - 1.0, ["led"] = "red" }
```

The Pico W web server sends response back:

```
{
  "status": "OK", "title": {"led": "red", "value": 0.18, "cmd": "brightness"}, 
  "message": "brightness"
}
```




This solution makes use of the MicroPython [picozero](#) package to control the LED.

Domoticz Dimmer to set the RED LED
Brightness 0-100% converted to 0-1.0.



Pico W with Traffic Light LEDs connected.
RED LED brightness 0-1.0 controlled.

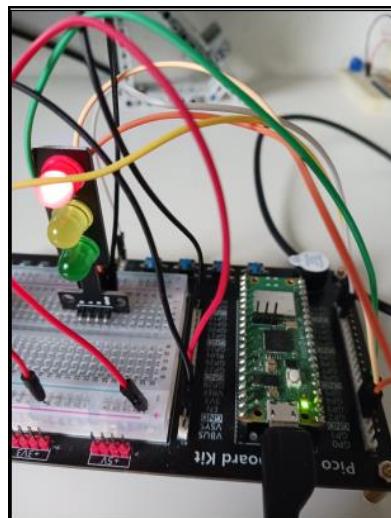

Automation Script

```
-- ledcontrol-device-change-http-post-brightness.dzvents
-- Remote control, via Domoticz switch dimmer, the state of a RED LED connected the
Pico W.
-- Action triggered by the switch running function openURL with POST request:
-- http://picow-ip with postdata: {"cmd":"brightness", "value":0.39,
["led"]="red"
-- 20230325 rwbl

-- Domoticz IDX of the dimmer triggering Pico W LED
local IDX_SWITCH = 1

local URL_SERVER = 'http://picow-ip'
local EXPERIMENT = 'LEDBRIGHTNESS'
local RES_HTTP = 'RES_' .. EXPERIMENT
local LOG_MARKER = 'LOG_' .. EXPERIMENT

return {
    on = { devices = { IDX_SWITCH }, httpResponses = { RES_HTTP } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER, },
    execute = function(domoticz, item)
        if (item.isDevice) then
            -- Create the postdata table
            local postdata = {}
            postdata['led'] = 'red'
            postdata['cmd'] = 'brightness'
            local brightness = item.level
            if brightness > 0 then brightness = brightness / 100 end
            if item.state == 'Off' then brightness = 0 end
            postdata['value'] = brightness
            domoticz.log('Device ' .. item.name .. ' brightness changed.')
            domoticz.log(postdata)
            -- Submit HTTP POST request to the picow server
            domoticz.openURL({
                url = URL_SERVER, method = 'POST',
                postData = postdata, callback = RES_HTTP })
        end

        -- Handle HTTP response: OK is item.statusCode 200 and item.ok true
        -- Else error like statusCode 7, item.ok false
        if (item.isHTTPResponse) then
            -- domoticz.log(string.format("%d %s", item.statusCode, item.ok))
            if (item.statusCode == 200) then
                if (item.isJSON) then
                    -- {"message":"On", "status":"OK", "title":"/led1/on"}
                    local data = item.json
                    domoticz.log(data)
                    -- domoticz.log(data.status)
                end
            else
                -- Error like 7 false; ERROR 7:Couldn't connect to server
                domoticz.log(string.format("ERROR %d:%s", item.statusCode,
item.statusText))
            end
        end
    end
}
```

MicroPython Script

```
"""
ledcontrol-device-change-httppost-brightness.py
20230409 rwbl

Pico W RESTful web server listening to set the state of an LED via Domoticz Dimmer
Switch.
The states are on, off, toggle, blink, pulse, brightness.

Commands set via HTTP GET request with HTTP response JSON object.
This script handles setting the led using the library picozero.
The picozero LED class functions can be set via the POST request.
Reference: https://picozero.readthedocs.io/en/latest/recipes.html#leds

:commands
LED ON:
curl -v -H "Content-Type: application/json" -d
"{"led": "red", "cmd": "on", "value": 0}" http://picow-ip {"status": "OK",
"title": {"led": "red", "value": 0, "cmd": "on"}, "message": "on"}

LED OFF:
curl -v -H "Content-Type: application/json" -d
"{"led": "red", "cmd": "off", "value": 0}" http://picow-ip {"status": "OK",
"title": {"led": "red", "value": 0, "cmd": "off"}, "message": "off"}

:note
When using curl ensure to escape the " to \" in the JSON object.

:log
ledcontrol-device-change-httppost-brightness v20230409
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command={'led': 'yellow', 'value': 0, 'cmd': 'on'}
HTTP Response={"status": "OK", "title": {"led": "yellow", "value": 0, "cmd": "on"}, "message": "on"}
Network connection closed
Network client connected from client-ip
HTTP Command={'led': 'yellow', 'value': 0.1, 'cmd': 'brightness'}
HTTP Response={"status": "OK", "title": {"led": "yellow", "value": 0.1, "cmd": "brightness"}, "message": "brightness"}
Network connection closed
Network client connected from client-ip
HTTP Command={'led': 'yellow', 'value': 0, 'cmd': 'off'}
HTTP Response={"status": "OK", "title": {"led": "yellow", "value": 0, "cmd": "off"}, "message": "off"}
Network connection closed
"""

# Libraries
from machine import Pin
import json
# Picozero - note: beta version
import picozero
from picozero import LED
# Import network class
from server import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'ledcontrol-device-change-httppost-brightness'
VERSION = 'v20230409'

# Create the 3 LED objects GP2,3,4
led_red = LED(2)
```

```

led_red.off()
led_yellow = LED(3)
led_yellow.off()
led_green = LED(4)
led_green.off()

"""
Control an LED.

:param object led
    LED object created via led = LED(GPIO pin number)

:param string cmd
    LED command, like on, off, toggle, blink, pulse, brightness

:param int|float|string value
    Value for the command, like for brightness a float between 0-1
"""

def set_led(led,cmd,value):
    # Set the command
    if cmd == 'on':
        led.on()
    elif cmd == 'off':
        led.off()
    elif cmd == 'toggle':
        led.toggle()
    elif cmd == 'blink':
        led.blink()
    elif cmd == 'pulse':
        led.pulse()
    elif cmd == 'brightness':
        if 0 <= value <= 1:
            led.brightness = value
        else:
            print(f'[ERROR] Command {cmd} value {value} out of range 0-1.')
    else:
        printf('[ERROR] Command {cmd} unknown.')

"""

Handle the request containing the command as JSON object.
The LED is turned on or off depending on JSON key state {"state":0 or 1}
The response JSON object is updated.
Reference: https://picozero.readthedocs.io/en/latest/recipes.html#leds

:param string data
    JSON object with key:value pair to set the LED
    led:red|green|yellow, cmd:on|off|blink<pulse|brightness, value:NNN

:return JSON object response
"""

def handle_request(data):
    # Get the JSON key:
    led = data['led'].lower()
    cmd = data['cmd']
    value = data['value']

    if led == 'red':
        set_led(led_red,cmd,value)
    elif led == 'green':
        set_led(led_green,cmd,value)
    elif led == 'yellow':
        set_led(led_yellow,cmd,value)
    else:
        printf('[ERROR] LED {led} unknown.')

    # Response is OK
    response[config.KEY_STATE] = config.STATE_OK
    response[config.KEY_MESSAGE] = cmd
    return response

```

```
# Main
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Create the HTTP response JSON object
        response = {}

        # Parse the post data. In case of error, the status is 0.
        data, status = network.parse_post_request(request)

        # Assign the postdata to the response KEY_TITLE
        response[config.KEY_TITLE] = data

        # If status is 1, then the post response is properly parsed, lets change
        # the led state.
        if status == 1:
            response = handle_request(data)
        else:
            # Error with unknown command
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

        # Send response to the client and close the connection
        network.send_response(cl, response, True)

    except OSError as e:
        network.ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')
```

Button Control

Description

This project turns a Domoticz Switch (IDX=16) On/Off by pressing the Pico Breadboard Kit Button K4.

If the Domoticz switch state is On, the Pico Breadboard Kit LED1 is On else Off.

The Domoticz switch device state is changed by using HTTP API/JSON GET or POST request to the Domoticz server.

Ideas for Use

- Control a switch On/Off,
- Remote control, like turning a thermostat setpoint On/Off or switch a blind up/down.

Solutions

The Pico W is built in a Pico Breadboard Kit. A RESTful web server runs on the Pico W. If the web server network connection is successful, the Pico W onboard LED is On else Off indicating an error.

If the pushbutton K4 (of the Pico Breadboard Kit) is pressed, the Domoticz switch state with IDX NN is set to On or Off via HTTP API/JSON request to Domoticz.

Two solutions worked out:

HTTP API/JSON GET Request with Parameter switchlight

```
http://domoticz-
ip:port/json.htm?type=command&param=switchlight&idx=NN&switchcmd=<On|Off|Toggle|Stop>
```


Note

The switch commands On and Off are used.

HTTP API/JSON GET Request with Parameter customevent

```
http://domoticz-
ip:8080/json.htm?type=command&param=customevent&event=switchlight&data={"idx":NN,"state":"On" or "Off"}
```


Block Diagram

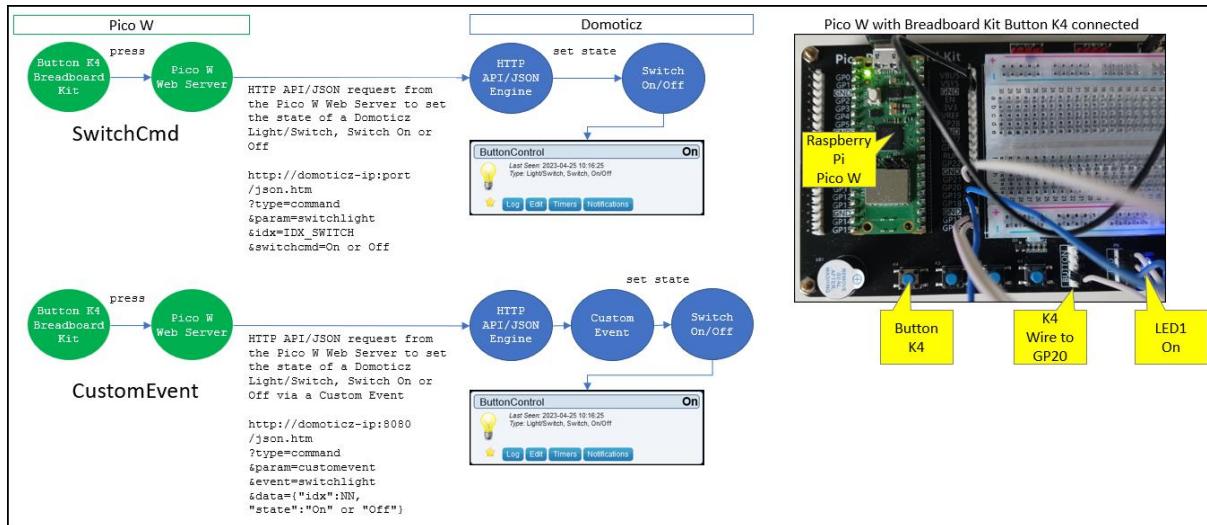

Wiring

| Pico Breadboard Kit | Pico W |
|---------------------|-------------------------------|
| Button K4 | GP20 (Pin #26), GND (Pin #38) |
| LED RED | GP16 (Pin #21), GND (Pin #3) |

Circuit Diagram

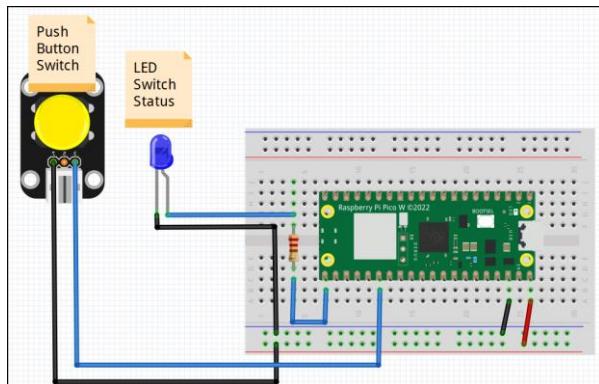

Domoticz Setup

Devices

Create a virtual sensor, using the hardware controller “dummy”, named “ButtonControl” from sensor type Switch/Light.

After creating the device, the Domoticz devices list shows the entry:

```
Idx=16, Hardware=VirtualSensors, ID=00014060, Unit=1, Name=ButtonControl,
Type=Light/Switch, SubType=Switch, Data=On
```

Domoticz Device Update

MicroPython Script

```
"""
File:    buttoncontrol.py
Date:    20230418
Author:  Robert W.B. Linn

:description
Turn Domoticz Switch (IDX=16) On/Off by pressing Pico Breadboard Kit Button K4.
If the switch state is On, the Pico Breadboard Kit LED1 is On else Off.
The Domoticz switch device state is changed by using HTTP API/JSON GET request to
the Domoticz server.
http://domoticz-ip:port/json.htm?type=command&param=switchlight&idx=16&switchcmd=On
or Off

:notes
This script handles button press using the library picozero.
Configuration is stored in config.py - Ensure to upload to the picow.
The button K4 of the Pico Breadboard Kit is used.
Press the button short set the switch state On or Off.
When keeping the button down the switch state will change On/Off constantly.
Instead of using the global switch_status could use the state of LED1 to determine
if the light is on or off.

:log
ButtonControl v20230410
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Button K4 pressed - setstatus=On
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=switchlight&idx=16&switchcmd=On
Send GET request status=OK

:wiring
Pico Breadboard Kit Button = Pico W
K4 = GP20 (Pin #26) # Pushbutton
LED1 = GP16 (Pin #21)      # LED switch state
The Pico W onboard LED is also used      to indicate the network connection state.
"""

from machine import Pin, Timer
from utime import sleep
# picozero - BETA version
from picozero import Button
# Network class to communicate with Domoticz or other clients
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
NAME = 'ButtonControl'
VERSION = 'v20230410'

# Breadboard Kit LED1 object using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

# LED object indicating the state of the K4 button On/Off
ledbuttonstatus = Pin(config.PIN_LED1, Pin.OUT)
ledbuttonstatus.value(0)

# Button K4 pin
BUTTON_PINNR = 20
# Button K4 object
```

```
btn = Button(BUTTON_PINNR)
# Status of the switch On or Off
switch_status = "Off"

# Domoticz IDX of the switch device
IDX_SWITCH = 16

# URL Domoticz
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# http://domoticz-
ip:port/json.htm?type=command&param=switchlight&idx=99&switchcmd=<On|Off|Toggle|Stop>
# OK: {"status": "OK", "title": "SwitchLight"}
# ERROR: {"message": "Error sending switch command, check device/hardware (idx=nnn) !", "status": "ERROR", "title": "SwitchLight"}
URL_DOM_SWITCH =
"http://" + config.DOMOTICZ_IP + "/json.htm?type=command&param=switchlight&idx=" +
str(IDX_SWITCH) + "&switchcmd="

"""
Handle Button Pressed.
The global switch_status is used but could also use the LED1 state.
"""
def set_domoticz_switch():
    global switch_status
    if switch_status == "Off":
        switch_status = "On"
        ledbuttonstatus.value(1)
    else:
        switch_status = "Off"
        ledbuttonstatus.value(0)
    print(f'Button K4 pressed - setstatus={switch_status}')
    # Submit HTTP API/JSON request to Domoticz to set switch status
    status = network.send_get_request(URL_DOM_SWITCH + switch_status)

"""
Main
"""
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

"""
Press the button short set the switch state On or Off.
When keeping the button down the switch state will change On/Off constantly.
"""
while True:
    # Check if the button is pressed
    if btn.is_pressed:
        # If the button is not released then set the switch state
        if btn.is_released == False:
            set_domoticz_switch()
```

Automation Script

```
-- [[
File: buttoncontrol.dzvents
Date: 20230418
Author: Robert W.B. Linn

Handle switch device (idx=16, name=Pico W LED1 Control) state change On or Off
triggered by the Pico W web server submitting HTTP API/JSON requests.
The HTTP request submitted from the Pico W to switch On/Off:
http://domoticz-ip:port/json.htm?type=command&param=switchlight&idx=16&switchcmd=On
or Off

Log Example
2023-04-10 13:13:21.310 VirtualSensors: Light/Switch (ButtonControl)
2023-04-10 13:13:21.304 Status: User: admin initiated a switch command
(16/ButtonControl/Off)
2023-04-10 13:13:21.415 Status: dzVents: Info: Handling events for:
"ButtonControl", value: "Off"
2023-04-10 13:13:21.415 Status: dzVents: Info: LOG_BUTTONCONTROL: ----- Start
internal script: buttoncontrol: Device: "ButtonControl (VirtualSensors)", Index: 16
2023-04-10 13:13:21.415 Status: dzVents: Info: LOG_BUTTONCONTROL: Device State
Change: device=ButtonControl, state=Off
2023-04-10 13:13:21.415 Status: dzVents: Info: LOG_BUTTONCONTROL: ----- Finished
buttoncontrol
]]-- 

-- Domoticz IDX of the switch which state is set by the Pico W web server
local IDX_SWITCH = 16

local LOG_MARKER = "LOG_BUTTONCONTROL"

return {
  on = {
    devices = {IDX_SWITCH}
  },
  logging = {
    level = domoticz.LOG_INFO, marker = LOG_MARKER
  },
  execute = function(domoticz, device)
    domoticz.log(string.format('Device State Change: device=%s, state=%s',
device.name, device.state), domoticz.LOG_INFO)
  end
}
```

Domoticz Custom Event

MicroPython Script

```
"""
File:    buttoncontrol_customevent.py
Date:    20230418
Author:  Robert W.B. Linn

:description
Turn Domoticz Switch (IDX=16) On/Off by pressing Pico Breadboard Kit Button K4.
If the switch state is On, the Pico Breadboard Kit LED1 is On else Off.
The Domoticz switch device state is changed by using HTTP API/JSON POST request to
the Domoticz server.

Example:
http://domoticz-
ip:8080/json.htm?type=command&param=customevent&event=switchlight&data={"idx":16,"s
tate":"On"}
http://domoticz-
ip:8080/json.htm?type=command&param=customevent&event=switchlight&data={"idx":16,"s
tate":"Off"}

:notes
This script handles button press using the library picozero.
Configuration is stored in config.py - Ensure to upload to the picow.
The button K4 of the Pico Breadboard Kit is used.
Press the button short set the switch state On or Off.
When keeping the button down the switch state with change On/Off constantly.

:log
ButtonControl Custom Event v20230410
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Button K4 pressed - setstatus=On
Send POST request url=http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=switchlight&data=,
postdata={'idx': 16, 'state': 'On'}
Send POST request status=OK
Button K4 pressed - setstatus=Off
Send POST request url=http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=switchlight&data=,
postdata={'idx': 16, 'state': 'Off'}
Send POST request status=OK

:wiring
Pico Breadboard Kit Button = Pico W
K4 = GP20 (Pin #26) # Pushbutton
LED1 = GP16 (Pin #21)      # LED switch state
The Pico W onboard LED is also used to indicate the network connection state.

"""

# Convert the Domoticz HTTP API/JSON response
import json
from machine import Pin, Timer
from utime import sleep
# picozero - BETA version - beginner-friendly library to help you use common
electronics components with the Raspberry Pi Pico. Thanks to Raspberry Pi
Foundation.
from picozero import Button
# Network class to communicate with Domoticz or other clients
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
NAME = 'ButtonControl Custom Event'
```

```
VERSION = 'v20230410'

# Create the led object indicating the state of the K4 button On/Off
ledbuttonstatus = Pin(config.PIN_LED1, Pin.OUT)
ledbuttonstatus.value(0)

# Button K4 pin
BUTTON_PINNR = 20
# Button K4 object
btn = Button(BUTTON_PINNR)
switch_status = "Off"

## Domoticz IDX of the Switch device
IDX_SWITCH = 16

# URL Domoticz
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=MyEvent&data=MyData
URL_DOM_SWITCH = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=customevent&event=switchlight&data="

# Handle Key Pressed
def set_domoticz_switch():
    global switch_status
    if switch_status == "Off":
        switch_status = "On"
        ledbuttonstatus.value(1)
    else:
        switch_status = "Off"
        ledbuttonstatus.value(0)
    print(f'Button K4 pressed - setstatus={switch_status}')
    # Post data
    postdata = {}
    postdata['idx'] = 16
    postdata['state'] = switch_status
    # Submit domoticz
    status = network.send_post_request(URL_DOM_SWITCH, postdata)

# Main
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

"""
Press the button short set the switch state On or Off.
When keeping the button down the switch state will change On/Off constantly.
"""
while True:
    # Check if the button is pressed
    if btn.is_pressed:
        # If the button is not released then set the switch state
        if btn.is_released == False:
            set_domoticz_switch()
```

Automation Script

```
-- [[
File:    buttoncontrol_customevent.dzvents
Date:   20230418
Author: Robert W.B. Linn

Handle switch device (idx=16, name=Pico W LED1 Control) state change On or Off
triggered by the Pico W web server submitting HTTP API/JSON requests.
The HTTP request submitted from the Pico W to switch On/Off:
http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=switchlight&data={"idx":16,"s
tate":"On"} or {"idx":16,"state":"Off"}
]]-- 

-- Custom event name as used by the Pico W web server HTTP API/JSON POST request
local CUSTOM_EVENT_NAME = 'switchlight'

return {
  on = {
    customEvents = { CUSTOM_EVENT_NAME }
  },
  data = {},
  logging = {},
  execute = function(domoticz, triggeredItem)
    if (triggeredItem.isCustomEvent) then
      -- domoticz.log(triggeredItem.data)
        -- Check the custom event name in case there are more custom events
      if (triggeredItem.trigger == CUSTOM_EVENT_NAME) then
        -- Get the JSON object from the triggered item
        local data = triggeredItem.json
        -- Log to check idx and state to be set
        domoticz.log(string.format('idx=%d,state=%s', data.idx, data.state))
        -- Set the light state
        domoticz.devices(data.idx).setState(data.state)
      end
    end
  end
}
```

Button Control MQTT Auto Discovery

Description

This project auto creates a Domoticz Push On Button device which is controlled via Pico W Button.

Solution

This project is based up the project [Button Control](#).

Instead communicating via HTTP, the Domoticz hardware controller [MQTT Auto Discovery Client Gateway with LAN interface](#) (MQTT Auto Discovery) is used.

The Pico W connects to the network and to the Domoticz Client Gateways for MQTT & MQTT Auto Discovery.

The config & state messages published by the Pico W are handled by the Domoticz hardware controller MQTT Auto Discovery Client Gateway with LAN interface.

Step 1 – Publish MQTT Config message to create the Domoticz Push On Button device. If these devices are already in place, Domoticz takes no action.


The Domoticz devices list with the device auto created assigned to the MQTT Auto Discovery hardware (named MQTTADGateway):

| Idx | Hardware | ID | Unit | Name | Type | SubType | |
|-----|---------------|-------|------|---------------|--------------|---------|----|
| 41 | MQTTADGateway | BM001 | 1 | MakelabButton | Light/Switch | Switch | On |

Step 2 – Publish MQTT State message after pressing the button.

The MQTT messages published are picked up by Domoticz and the device state is updated. See block diagram.

Block Diagram

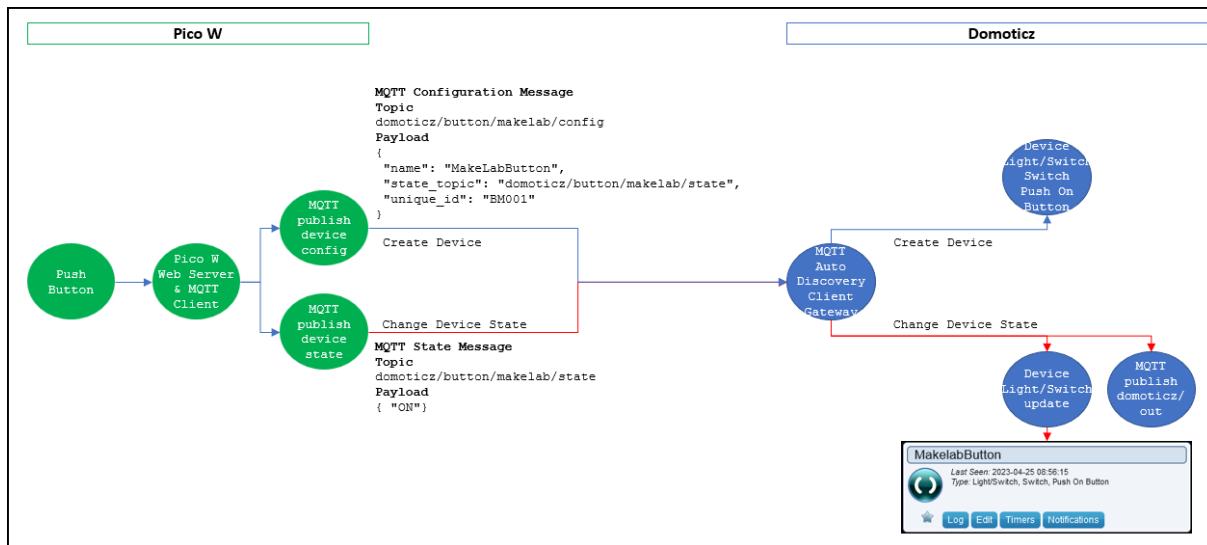

MQTT Auto Discovery Topics & Payload


| CONFIGURATION | |
|----------------------------|--|
| Light/Switch Device | |
| Configuration Topic | <code>domoticz/button/makelab/config</code> |
| Configuration Payload | { " <code>name</code> ": " <code>MakeLabButton</code> ", " <code>state_topicdomoticz/button/makelab/state</code> ", " <code>unique_id</code> ": " <code>BM001</code> " } |
| STATE | |
| Topic | <code>domoticz/button/makelab/state</code> |
| Payload | { " <code>ON</code> " } |

Domoticz

Devices

The device widget created via MQTT Auto Discovery.

Note: the switch type is “Push On Button”.

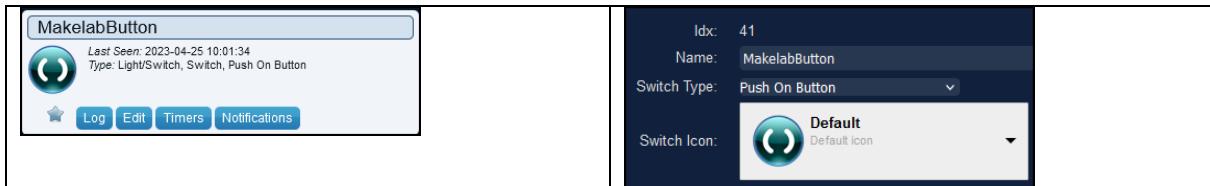

Debug Log

Domoticz Debug Log showing the MQTT Auto Discovery gateway receiving the message with the payload.

The message is published using Domoticz topic “domoticz/out”.

```
2023-04-25 10:01:34.149 Debug: MQTTADGateway: topic: domoticz/button/makelab/state,
message: {"ON"}
2023-04-25 10:01:34.280 Debug: MQTTADGateway: topic: domoticz/out, message: {
2023-04-25 10:01:34.280 "Battery" : 255,
2023-04-25 10:01:34.280 "LastUpdate" : "2023-04-25 10:01:34",
2023-04-25 10:01:34.280 "RSSI" : 12,
2023-04-25 10:01:34.280 "description" : "",
2023-04-25 10:01:34.280 "dtype" : "Light/Switch",
2023-04-25 10:01:34.280 "hwid" : "6",
2023-04-25 10:01:34.280 "id" : "BM001",
2023-04-25 10:01:34.280 "idx" : 41,
2023-04-25 10:01:34.280 "name" : "MakelabButton",
2023-04-25 10:01:34.280 "nvalue" : 1,
2023-04-25 10:01:34.280 "stype" : "Switch",
2023-04-25 10:01:34.280 "svalue1" : "0",
2023-04-25 10:01:34.280 "switchType" : "Push On Button",
2023-04-25 10:01:34.280 "unit" : 1
2023-04-25 10:01:34.280 }
```

Automation Script

There is no automation script used, but ... if want to capture device changes, this is a simple example.

```
--[[[
File: buttoncontrol_mqtt_ad.dzvents
Date: 20230425
Author: Robert W.B. Linn

:description
Listen to device changes which has been created using MQTT Auto Discovery.

:log
INFO: Log after Domoticz restart
2023-04-25 08:53:18.791 Debug: MQTTADGateway: topic:
domoticz/button/makelab/config, message: {"name": "MakelabButton", "state_topic":
"domoticz/button/makelab/state", "unique_id": "BM001"}
2023-04-25 08:53:18.892 Debug: MQTTADGateway: topic: domoticz/status, message:
online
```

```
INFO: Log after pressing button K4
2023-04-25 08:53:27.610 MQTTADGateway: Light/Switch/Switch (MakelabButton)
2023-04-25 08:53:27.710 Status: dzVents: Info: Handling events for:
"MakelabButton", value: "On"
2023-04-25 08:53:27.710 Status: dzVents: Info: BUTTONCONTROL_MQTT_AD: ----- Start
internal script: buttoncontrol_mqtt_ad: Device: "MakelabButton (MQTTADGateway)",
Index: 41
2023-04-25 08:53:27.710 Status: dzVents: Info: BUTTONCONTROL_MQTT_AD: Device
changed: name=MakelabButton, unique_id=BM001, state=On
2023-04-25 08:53:27.710 Status: dzVents: Info: BUTTONCONTROL_MQTT_AD: -----
Finished buttoncontrol_mqtt_ad
]]--
```

-- IDX of the device

```
local IDX_BUTTON = 41
```

return {

```
    on = { devices = { IDX_BUTTON } },
    logging = { level = domoticz.LOG_INFO, marker = 'BUTTONCONTROL_MQTT_AD', },
    execute = function(domoticz, device)
        domoticz.log(string.format('Device changed: name=%s, unique_id=%s, state=%s',
            device.name, device.deviceId, device.state))
    end
}
```

Web Server

Libraries

The MicroPython script uses the MicroPython library Lightweight MQTT client for MicroPython “umqtt.simple”.

Credits

Thanks for developing & sharing the MicroPython library [micropython-umqtt.simple](#).

MicroPython Script

```
"""
File:    buttoncontrol_mqtt_ad.py
Date:    20230425
Author:  Robert W.B. Linn

:description
Test MQTT auto discovery with Domoticz and the Pico W running as web server.
Domoticz Hardware: MQTT Auto Discovery Client Gateway with LAN Interface,
Name=MQTTADGateway
Domoticz Device created via MQTT auto discovery by publishing config topic (see
domoticz log below).
The autodiscover component is button and the Domoticz device is type=Light/Switch.
Note that this script does not use the library server.py but has simple code to
connect to the network.

:external libraries
umqtt.simple

MQTT Remove Retained message for creating the button:
mosquitto_sub -h localhost --remove-retained -t 'domoticz/button/makelab/config' -W
1
Restart Domoticz:
sudo service domoticz.sh restart

:thonny log
buttoncontrol_mqtt_ad v20230425
Network connecting...
Network connected: picow-ip
MQTT Broker connecting...
MQTT Broker connected: domoticz-ip
MQTT State published: topic=domoticz/button/makelab/config, payload={"name": "MakeLabButton", "state_topic": "domoticz/button/makelab/state", "unique_id": "BM001"}
MQTT published: topic=domoticz/button/makelab/state, payload={"ON"}

:wiring
Button = Pico W
Button K4 = GP20 (Pin #26)
GND (-) = GND (Pin #28)
"""

# Imports
import network
import time
from machine import Pin
# picozero - BETA version (Installed via Thonny manage packages)
from picozero import Button
# mqtt simple (Installed via Thonny manage packages)
from umqtt.simple import MQTTClient
# Configuration (must be uploaded to the pico w)
import config

# Constants
```

```
VERSION = const('buttoncontrol_mqtt_ad v20230425')

"""
BUTTON
"""

# Button K4 pin
BUTTON_PINNR = 20
# Button object
btn = Button(BUTTON_PINNR)

# MQTT publish with encoded topic & payload (buffered objects required).
# The topic is the state_topic as defined in the configuration.
# The payload is the string ON (uppercase).
def button_pressed():
    client.publish(STATE_TOPIC, STATE_PAYLOAD)
    print(f'MQTT published: topic={STATE_TOPIC.decode()} ,'
          f'payload={STATE_PAYLOAD.decode()}' )

# Set the function to run if the button is pressed
btn.when_pressed = button_pressed

"""

MQTT
"""

MQTT_BROKER = const('domoticz-ip')
MQTT_CLIENT_ID = const('picow_button_k4')

# Topic & payload to create the device. The configuration component is button.
BUTTON_TOPIC_CONFIG = const(b'domoticz/button/makelab/config')
BUTTON_PAYLOAD_CONFIG = const(b'{"name": "MakeLabButton", "state_topic":'
                             '"domoticz/button/makelab/state", "unique_id": "BM001"}')

# Topic used to publish the state of the button
# Payload is JSON format (uppercase): {"ON"}
STATE_TOPIC = const(b'domoticz/button/makelab/state')
STATE_PAYLOAD = const(b'{"ON"}')

# Connect to the MQTT broker with client id and server address
def mqtt_connect(client_id, mqtt_server):
    client = MQTTClient(client_id, mqtt_server, keepalive=3600)
    client.connect()
    print(f'MQTT Broker connecting...')

    return client

# Reconnect to the MQTT broker
def mqtt_reconnect():
    print('[ERROR] Failed to connect to the MQTT Broker. Reconnecting...')
    time.sleep(5)
    machine.reset()

# Info
print(f'{VERSION}')

# Connect to the network
try:
    print(f'Network connecting...')

    wlan = network.WLAN(network.STA_IF)
    wlan.active(True)
    wlan.connect(config.WIFI_SSID, config.WIFI_PASSWORD)
    time.sleep(5)
    if not wlan.isconnected():
        raise RuntimeError('[ERROR] Can not connect to the network.')
    print(f'Network connected: {wlan.ifconfig()[0]}')
except Exception as e:
    raise RuntimeError('[ERROR] Can not connect to the network.')

# Connect to MQTT
# Publish mqtt auto discovery topic & payload for the switch device (button)
try:
```

```
# Connect to MQTT broker
client = mqtt_connect(MQTT_CLIENT_ID, MQTT_BROKER)
print(f'MQTT Broker connected: {MQTT_BROKER}')

# Publish config topics to auto create the device in domoticz
client.publish(BUTTON_TOPIC_CONFIG, BUTTON_PAYLOAD_CONFIG)
print(f'MQTT State published: topic={BUTTON_TOPIC_CONFIG.decode() }, payload={BUTTON_PAYLOAD_CONFIG.decode() }')

except OSError as e:
    mqtt_reconnect()

# Main
while True:
    pass
```

DHT22 Temperature & Humidity

Description

This project reads in regular intervals the DHT22 sensor temperature & humidity, connected to the Pico W, and sent the data to a Domoticz Temperature + Humidity device.

Ideas for Use

- Mini weather station,
- Room temperature & humidity control.

Solutions

The Pico W has a DHT22 sensor connected and runs as a web server. The web server reads in regular intervals the temperature & humidity.

Two solutions worked out:

Domoticz Device Update

The DHT22 sensor data is sent to Domoticz via HTTP API/JSON GET request with parameter:

- udevice – used for the command,
- svalue - contains the temperature, humidity, humidity status,
- idx – the Domoticz temperature humidity device to be updated.

```
http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=15&nvalue=0&svalue=16;64;0
```

Domoticz Custom Event

The DHT22 sensor data is sent to Domoticz via HTTP API/JSON POST request with parameter:


- customevent – used for the command,
- event - the custom event name,
- data - contains JSON object temperature (t), humidity (h), and humidity status (s).

```
http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DHT22&data={"h": 56, "t": 16,
"s": 0}
```

Wiring

| DHT22 | Pico W |
|---------------|----------------|
| VCC (+) | VBUS (Pin #40) |
| OUT | GP22 (Pin #29) |
| GND (-) | GND (Pin #38) |
| LED (blue) | Pico W |
| + (Anode) | 16 (Pin #21) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

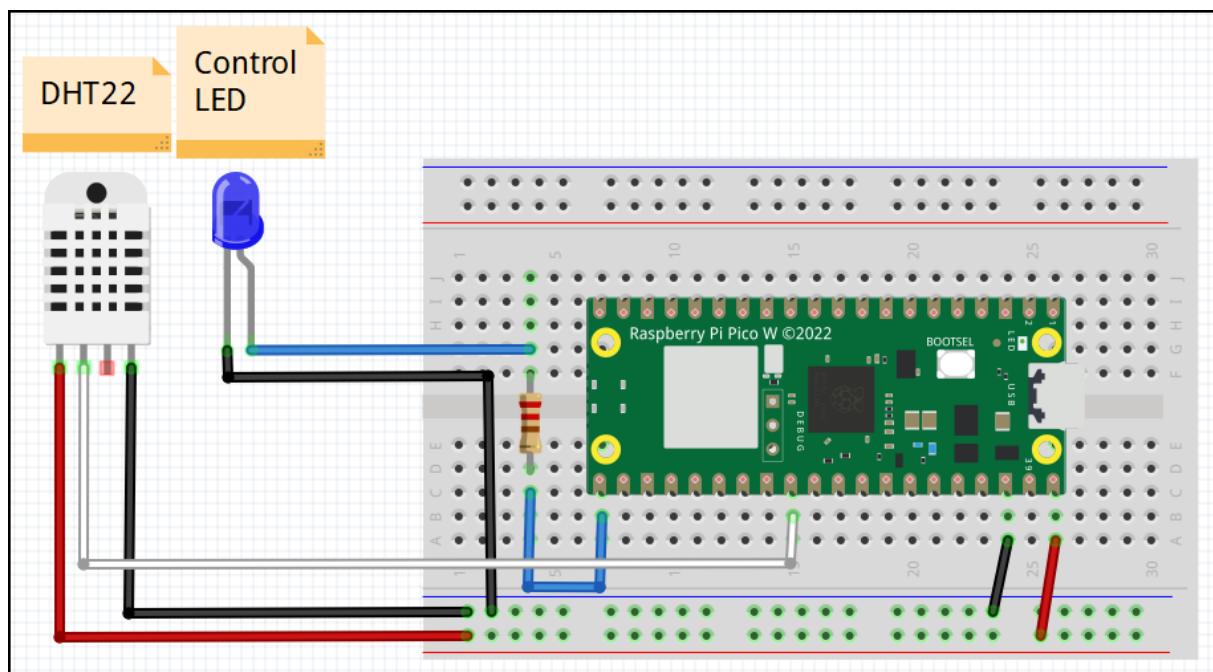


Domoticz Device Update

The picture shows the flow of actions:

1. Create the Domoticz Temp+Hum device from the hardware “Dummy” (Create Virtual Sensors),
2. Run the Pico W web server and request every 60 seconds the DHT22 data,
3. After receiving data, the Pico W web server submits the data to Domoticz via HTTP API/JSON GET request with the command “udevice” for the device “idx” and the data as “svalue”,
4. Domoticz handles the incoming HTTP request and updates the device.

Block Diagram

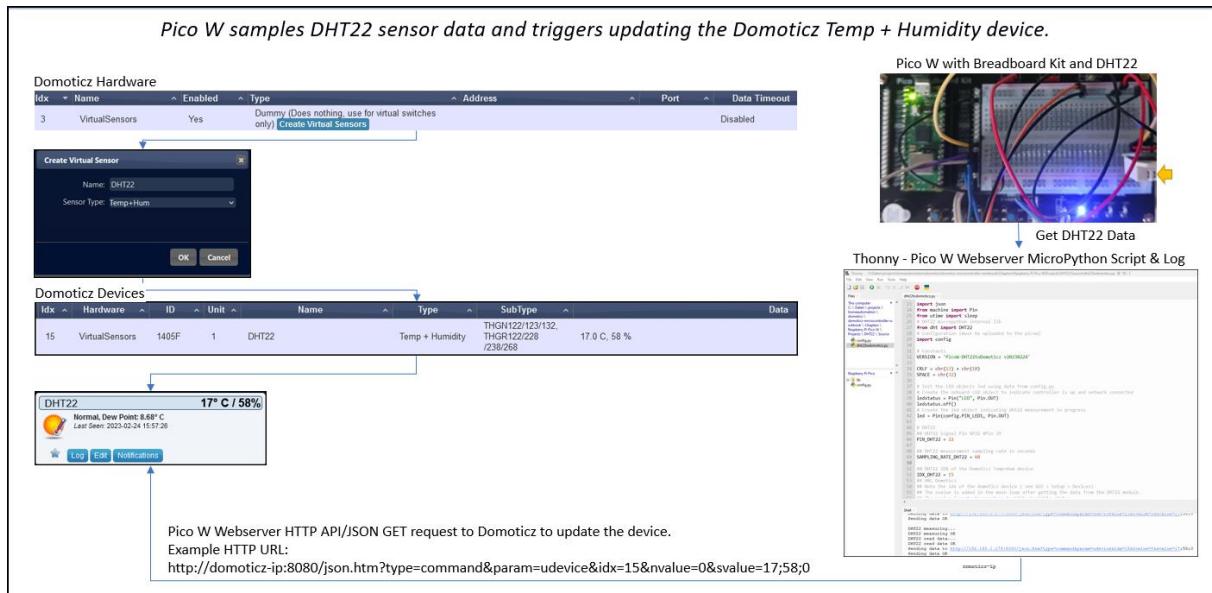

MicroPython Script

```
"""
File: dht22.py
Date: 20230318
Author: Robert W.B. Linn

Read in regular intervals the DHT22 temperature and humidity and update the svalue
(i.e., 16;55;1) of a Domoticz device named DHT22.
The Domoticz device is updated using HTTP API/JSON request to the Domoticz server.

:notes
Pico Breadboard Kit is used to wire up the DHT22.
Pico Breadboard Kit LED1 is used as status LED when requesting DHT22 data and
updating domoticz.
Configuration stored in config.py, ensure to upload to the picow.
DHT22 measures every 60 seconds.

:log
DHT22 v20230311
Sampling Rate: 60s.
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
DHT22 t=19, h=43, hs=0, svalue=19;43;0
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=15&nvalue=0&svalue=19;43;0
Send GET request status=OK

:wiring
DHT22 = Pico W
VCC (+) = VBUS (Pin #40)
OUT = GP22 (Pin #29)
GND (-) = GND (Pin #28)
"""

# Imports
from machine import Pin
from utime import sleep
# DHT22 micropython internal lib
from dht import DHT22
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'DHT22 v20230311'

# Create the led object indicating dht22 measurement in progress
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

# DHT22 Signal Pin GP22 #Pin 29
PIN_DHT22 = 22
# DHT22 measurement sampling rate in seconds
SAMPLING_RATE_DHT22 = 60
# DHT22 IDX of the Domoticz Temp+Hum device
IDX_DHT22 = 15
# URL Domoticz
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# The svalue is added in the main loop after getting the data from the DHT22
module.
# The svalue format: temperature,humidity,humidity status
URL_DOM_DHT22 = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(IDX_DHT22) + "&nvalue=0&svalue="

# Create the dht22 sensor object
```

```

dht22_sensor = DHT22(Pin(Pin_DHT22, Pin.IN, Pin.PULL_UP))

"""
Set the humidity status level used for Domoticz HUM_STAT value.

:param int hum
    0: NORMAL, 1: COMFORTABLE, 2: DRY, 3: WET

:return int level
    Humidity level 0 - 3
"""

def set_humidity_status(hum, temp):
    level = 9
    # 2 = Dry
    if hum <= 30:
        level = 2
    # 3 = Wet
    elif hum >= 70:
        level = 3
    # 1 = Comfortable
    elif hum >= 35 and hum <= 65 and temp >= 22 and temp <= 26:
        level = 1
    # 0 = Normal
    else:
        level = 0
    return level

"""
DHT22 measurement with roundes values for temperature and humidity.
During measurement, LED1 of the Pico Breadboard is on.

:return string svalue
    svalue with temperature (°C), humidity (0-100%) and humidity_status (0-3)

:example
    16;55;1
"""

def get_dht22_data():
    led1.value(1)
    sleep(1)
    # print(f'DHT22 measuring...')
    dht22_sensor.measure()
    # print(f'DHT22 measuring OK')

    # print(f'DHT22 read data...')
    # Assign the data (rounded)
    temperature      = round(dht22_sensor.temperature())
    humidity         = round(dht22_sensor.humidity())
    humidity_status = set_humidity_status(humidity, temperature)

    # Set the svalue, i.e. svalue=TEMP;HUM;HUM_STAT
    svalue = str(temperature) + ';' + str(humidity) + ';' + str(humidity_status)
    led1.value(0)
    print(f'DHT22 t={temperature}, h={humidity}, hs={humidity_status},'
          f'svalue={svalue}')
    return svalue

# Info
print(f'{VERSION}')
print(f'Sampling Rate: {SAMPLING_RATE_DHT22}s.')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

# Main
# Measure DHT22 every NN seconds (see constant SAMPLING_DELAY)

```


```
while True:  
    # Measure DHT22 temperature & humidity & humidity status  
    # Submit Domoticz HTTP API/JSON GET request to update the device  
    network.send_get_request(URL_DOM_DHT22 + get_dht22_data())  
  
    # Delay till next sample  
    sleep(SAMPLING_RATE_DHT22)
```

Domoticz Custom Event

The picture shows the flow of actions:

1. Create the Domoticz Temp+Hum device from the hardware “Dummy” (Create Virtual Sensors),
2. Run the Pico W web server and request every 60 seconds the DHT22 data,
3. After receiving data, the Pico W web server submits the data to Domoticz via HTTP API/JSON POST request with the command “customevent” and data as “JSON object”,
4. Domoticz handles the incoming HTTP request and updates the device.

Block Diagram

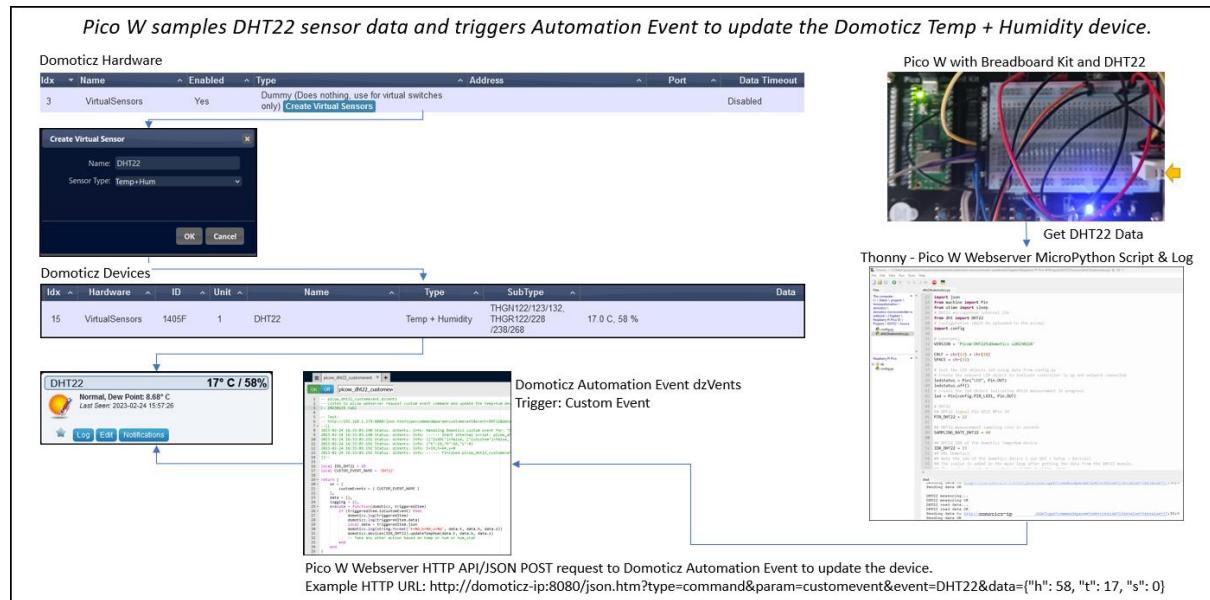

MicroPython Script

```
"""
File: dht22_customevent.py
Date: 20230318
Author: Robert W.B. Linn

Read in regular intervals the DHT22 temperature and humidity and update the
Domoticz device named DHT22.
The Domoticz device is updated using HTTP API/JSON POST request Custom Event to the
Domoticz server.
The data is a JSON object: {"t":temperature NN,"h":humidity 0-100,"s":humidity
status 0-3}

:example
http://domoticz-
ip:8080/json.htm?type=command&param=customevent&event=DHT22&data={"t":19,"h":64,"s":0}

:notes
Pico Breadboard Kit is used to wire up the DHT22.
Pico Breadboard Kit LED1 is used as status LED when requesting DHT22 data and
updating domoticz.
Configuration stored in config.py, ensure to upload to the picow.
DHT22 measures every 60 seconds.

```

```
:log
DHT22_CustomEvent v20230311
Sampling Rate: 60s.
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
DHT22 t=19, h=43, hs=0, data={'h': 43, 't': 19, 's': 0}
Send POST request url=http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DHT22&data=, postdata={'h':
43, 't': 19, 's': 0}
Send POST request status=OK

:wiring
DHT22 = Pico W
VCC (+) = VBUS (Pin #40)
OUT = GP22 (Pin #29)
GND (-) = GND (Pin #28)
"""

# Imports
from machine import Pin
from utime import sleep
# Convert the Domoticz HTTP API/JSON response
import json
# DHT22 micropython internal lib
from dht import DHT22
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'DHT22_CustomEvent v20230311'

# Create the led object indicating dht22 measurement in progress
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

# DHT22 Signal Pin GP22 #Pin 29
PIN_DHT22 = 22
# DHT22 measurement sampling rate in seconds
SAMPLING_RATE_DHT22 = 60
# DHT22 IDX of the Domoticz Temp+Hum device
IDX_DHT22 = 15
# URL Domoticz
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# The data is a JSON object, i.e. {"t":19,"h":64,"s":0}
URL_DOM_DHT22 = "http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DHT22&data="

# Create the dht22 sensor object
dht22_sensor = DHT22(Pin(PIN_DHT22, Pin.IN, Pin.PULL_UP))

"""
Set the humidity status level used for Domoticz HUM_STAT value.

:param int hum
    0: NORMAL, 1: COMFORTABLE, 2: DRY, 3: WET

:return int level
    Humidity level 0 - 3
"""
def set_humidity_status(hum, temp):
    level = 9
    # 2 = Dry
    if hum <= 30:
        level = 2
    # 3 = Wet
```

```

    elif hum >= 70:
        level = 3
    # 1 = Comfortable
    elif hum >= 35 and hum <= 65 and temp >=22 and temp <= 26:
        level = 1
    # 0 = Normal
    else:
        level = 0
    return level

"""
DHT22 measurement with roundes values for temperature and humidity.
During measurement, LED1 of the Pico Breadboard is on.

:return string data
    JSON object with key:value pairs t=temperature (°C), h=humidity (0-100%),
s=humidity_status (0-3)

:example
{'h': 48, 't': 18, 's': 0}
"""

def get_dht22_data():
    led1.value(1)
    sleep(1)
    # print(f'DHT22 measuring...')
    dht22_sensor.measure()
    # print(f'DHT22 measuring OK')

    # print(f'DHT22 read data...')
    # Assign the data (rounded)
    temperature      = round(dht22_sensor.temperature())
    humidity         = round(dht22_sensor.humidity())
    humidity_status = set_humidity_status(humidity, temperature)

    # Set the data JSON object: {"t":NN,"h":NN,"s":N}
    data = {}
    data['t'] = temperature
    data['h'] = humidity
    data['s'] = humidity_status
    led1.value(0)
    print(f'DHT22 t={temperature}, h={humidity}, hs={humidity_status},'
data={data}')
    return data

# Info
print(f'{VERSION}')
print(f'Sampling Rate: {SAMPLING_RATE_DHT22}s.')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

# Main
# Measure DHT22 every NN seconds (see constant SAMPLING_DELAY)
while True:

    # Measure DHT22 temperature & humidity & humidity status
    # Submit Domoticz HTTP API/JSON POST request to update the device
    network.send_post_request(URL_DOM_DHT22, get_dht22_data())

    # Delay till next sample
    sleep(SAMPLING_RATE_DHT22)

```

Automation Script

```
--[[[
File: dht22_customevent.dzvents
Date: 20230225
Author: Robert W.B. Linn

Listen to Pico W web server request custom event command and update the temp+hum
device temp,hum,hum_stat.

Test
http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DHT22&data={"t":19,"h":64,"s":0}
Log
2023-02-24 16:33:03.190 Status: dzVents: Info: Handling Domoticz custom event for:
"DHT22"
2023-02-24 16:33:03.190 Status: dzVents: Info: ----- Start internal script:
picow_dht22_customevent: Custom event: "DHT22"
2023-02-24 16:33:03.191 Status: dzVents: Info: { ["isXML"]=false,
["isSystem"]=false, ["customEvent"]="DHT22", ["data"]=[{"t":19,"h":64,"s":0}],
["isShellCommandResponse"]=false, ["type"]="customEvent", ["isHTTPResponse"]=false,
["json"]=[{"h":64, "t":19, "s":0}, {"isCustomEvent"]=true, ["message"]="", "isGroup"]=false, ["isHardware"]=false, ["status"]="info", ["isDevice"]=false, ["trigger"]="DHT22", ["isSecurity"]=false, ["baseType"]="custom", ["dump"]=function, ["isTimer"]=false, ["isScene"]=false, ["isVariable"]=false, ["isJSON"]=true}
2023-02-24 16:33:03.191 Status: dzVents: Info: {"t":19,"h":64,"s":0}
2023-02-24 16:33:03.192 Status: dzVents: Info: t=19,h=64,s=0
2023-02-24 16:33:03.192 Status: dzVents: Info: ----- Finished
picow_dht22_customevent
]]-- 

local IDX_DHT22 = 15
-- Custom event name as used by the Pico W web server HTTP API/JSON POST request
local CUSTOM_EVENT_NAME = 'DHT22'

return {
  on = {
    customEvents = { CUSTOM_EVENT_NAME }
  },
  data = {},
  logging = {},
  execute = function(domoticz, triggeredItem)
    if (triggeredItem.isCustomEvent) then
      domoticz.log(triggeredItem)
        -- Check the custom event name in case there are more custom events
      if (triggeredItem.trigger == CUSTOM_EVENT_NAME) then
        domoticz.log(triggeredItem.data)
        local data = triggeredItem.json
        domoticz.log(string.format('t=%d,h=%d,s=%d', data.t, data.h, data.s))
        domoticz.devices(IDX_DHT22).updateTempHum(data.t, data.h, data.s)
        -- Take any other action based on temp or hum or hum_stat
      end
    end
  end
}
```

DHT22 Temperature & Humidity MQTT Auto Discovery

Description

This project auto creates two Domoticz devices for Temperature & Humidity and regular updates the devices state.

Solution

This project is based up the project [DHT22 Temperature & Humidity](#) and uses this [Home Assistant Example](#) (thanks for sharing).

Instead communicating via HTTP, the Domoticz hardware controller [MQTT Auto Discovery Client Gateway with LAN interface](#) (MQTT Auto Discovery) is used.

The Pico W connects to the network and to the Domoticz Client Gateways for MQTT & MQTT Auto Discovery.

The config & state messages published by the Pico W are handled by the Domoticz hardware controller MQTT Auto Discovery Client Gateway with LAN interface.

Step 1 – Publish MQTT Config messages to create the two Domoticz devices for Temperature & Humidity.

If these devices are already in place, Domoticz takes no action.


The Domoticz devices list with the two devices auto created for the MQTT Auto Discovery hardware (named MQTTADGateway):

| Idx | Hardware | ID | Unit | Name | Type | SubType |
|-----|---------------|--------|------|-------------|----------|-----------------------|
| 38 | MQTTADGateway | SGT001 | 1 | Garden Temp | Temp | THR128/138, THC138 |
| 37 | MQTTADGateway | SGH001 | 1 | Garden Hum | Humidity | LaCrosse WS2300 |

Step 2 – Publish MQTT State message after reading the DHT22 temperature and humidity. The MQTT messages published are picked up by Domoticz and the value of the two devices are updated.

See block diagram showing the two device widgets Garden Temp & Garden Hum.

Block Diagram

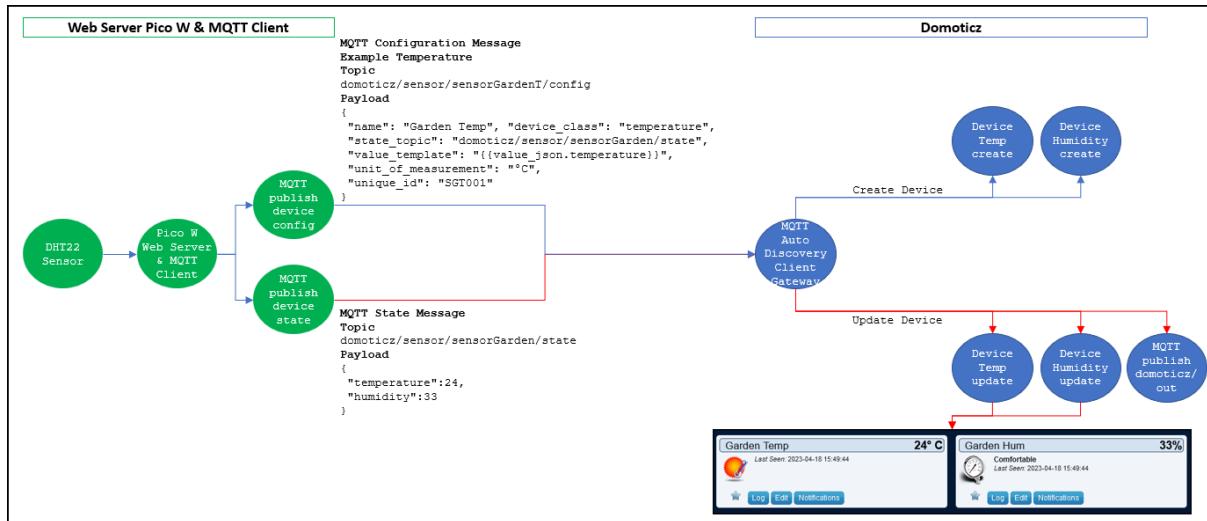

MQTT Auto Discovery Topics & Payload

| CONFIGURATION | |
|--------------------------------------|--|
| Temperature Device | |
| Configuration Topic | <code>domoticz/sensor/sensorGardenT/config</code> |
| Configuration Payload | { "name": "Garden Temp", "device_class": "temperature", "state_topic": "domoticz/sensor/sensorGarden/state", "value_template": "{{value_json.temperature}}", "unit_of_measurement": "°C", "unique_id": "SGT001" } |
| Humidity Device | |
| Configuration Topic | <code>domoticz/sensor/sensorGardenH/config</code> |
| Configuration Payload | { "name": "Garden Hum", "device_class": "humidity", "state_topic": "domoticz/sensor/sensorGarden/state", "value_template": "{{value_json.humidity}}", "unit_of_measurement": "%", "unique_id": "SGH001" } |
| STATE | |
| Topic | <code>domoticz/sensor/sensorGarden/state</code> |
| Payload Temperature & Humidity | { "temperature":{T}, "humidity":{H} } |
| Payload Temperature | { "temperature":{T}, } |

| | |
|----------|---|
| Payload | { |
| Humidity | "humidity":{H}, } |
| | <i>Note</i> {T} and {H} are placeholders for the values. |

Domoticz

Devices

The two devices widget created via MQTT Auto Discovery:



Debug Log

Domoticz Debug Log showing the MQTT Auto Discovery gateway receiving the message with the payload containing the temperature & humidity keys with values.

The message is split into two messages for the temperature & humidity for the Domoticz topic "domoticz/out".

```

2023-04-18 15:51:15.090 Debug: MQTTADGateway: topic:
domoticz/sensor/sensorGarden/state, message: {"temperature":24, "humidity":33}
2023-04-18 15:51:15.220 Debug: MQTTADGateway: topic: domoticz/out, message: {
2023-04-18 15:51:15.220 "Battery" : 255,
2023-04-18 15:51:15.220 "LastUpdate" : "2023-04-18 15:51:15",
2023-04-18 15:51:15.220 "RSSI" : 12,
2023-04-18 15:51:15.220 "description" : "",
2023-04-18 15:51:15.220 "dtype" : "Humidity",
2023-04-18 15:51:15.220 "hwid" : "6",
2023-04-18 15:51:15.220 "id" : "SGH001",
2023-04-18 15:51:15.220 "idx" : 37,
2023-04-18 15:51:15.220 "name" : "Garden Hum",
2023-04-18 15:51:15.220 "nvalue" : 33,
2023-04-18 15:51:15.220 "stype" : "LaCrosse WS2300",
2023-04-18 15:51:15.220 "svaluel" : "1",
2023-04-18 15:51:15.220 "unit" : 1
2023-04-18 15:51:15.220 }
2023-04-18 15:51:15.220
2023-04-18 15:51:15.321 Debug: MQTTADGateway: topic: domoticz/out, message: {
2023-04-18 15:51:15.321 "Battery" : 255,
2023-04-18 15:51:15.321 "LastUpdate" : "2023-04-18 15:51:15",
2023-04-18 15:51:15.321 "RSSI" : 12,
2023-04-18 15:51:15.321 "description" : "",
2023-04-18 15:51:15.321 "dtype" : "Temp",
2023-04-18 15:51:15.321 "hwid" : "6",
2023-04-18 15:51:15.321 "id" : "SGT001",
2023-04-18 15:51:15.321 "idx" : 38,
2023-04-18 15:51:15.321 "name" : "Garden Temp",
2023-04-18 15:51:15.321 "nvalue" : 0,
2023-04-18 15:51:15.321 "stype" : "THR128/138, THC138",
2023-04-18 15:51:15.321 "svaluel" : "24.00",
2023-04-18 15:51:15.321 "unit" : 1
2023-04-18 15:51:15.321 }
```

2023-04-18 15:51:15.321

Automation Script

There is no automation script used, but ... if want to capture device changes, this is a simple example.

```
--[[[
File: dht22_mqtt_ad.dzvents
Date: 20230424
Author: Robert W.B. Linn

:description
Listen to two device changes which has been created using MQTT Auto Discovery.

:log
2023-04-24 10:53:30.121 MQTTADGateway: Humidity/LaCrosse WS2300 (Garden Hum)
2023-04-24 10:53:30.136 MQTTADGateway: Temp/THR128/138, THC138 (Garden Temp)
2023-04-24 10:53:30.215 Status: dzVents: Info: Handling events for: "Garden Hum",
value: "51"
2023-04-24 10:53:30.215 Status: dzVents: Info: DHT22_MQTT_AD: ----- Start internal
script: dht22_mqtt_ad: Device: "Garden Hum (MQTTADGateway)", Index: 37
2023-04-24 10:53:30.215 Status: dzVents: Info: DHT22_MQTT_AD: Device changed:
name=Garden Hum, unique_id=SGH001, state=51
2023-04-24 10:53:30.215 Status: dzVents: Info: DHT22_MQTT_AD: ----- Finished
dht22_mqtt_ad
2023-04-24 10:53:30.268 Status: dzVents: Info: Handling events for: "Garden Temp",
value: "18.00"
2023-04-24 10:53:30.268 Status: dzVents: Info: DHT22_MQTT_AD: ----- Start internal
script: dht22_mqtt_ad: Device: "Garden Temp (MQTTADGateway)", Index: 38
2023-04-24 10:53:30.268 Status: dzVents: Info: DHT22_MQTT_AD: Device changed:
name=Garden Temp, unique_id=SGT001, state=18.00
2023-04-24 10:53:30.268 Status: dzVents: Info: DHT22_MQTT_AD: ----- Finished
dht22_mqtt_ad
2023-04-24 10:53:30.117 Debug: MQTTADGateway: topic:
domoticz/sensor/sensorGarden/state, message: {"temperature":18, "humidity":51}
]]--]

-- IDX of the devices Temperature & Humidity
local IDX_DHT22_T = 38
local IDX_DHT22_H = 37

return {
    on = { devices = { IDX_DHT22_T, IDX_DHT22_H } },
    logging = { level = domoticz.LOG_INFO, marker = 'DHT22_MQTT_AD', },
    execute = function(domoticz, device)
        domoticz.log(string.format('Device changed: name=%s, unique_id=%s, state=%s',
            device.name, device.deviceId, device.state))
        -- Device changed: name=Garden Temp, unique_id=SGT001, state=21.00
    end
}
```

Web Server

Libraries

The MicroPython script uses the MicroPython library Lightweight MQTT client for MicroPython “umqtt.simple”.

Credits

Thanks for developing & sharing the MicroPython library [micropython-umqtt.simple](#).

MicroPython Script

```
"""
File:    dht22_mqtt_ad.py
Date:    20230424
Author:  Robert W.B. Linn

:description
Test MQTT auto discovery with Domoticz and the Pico W running as web server.
Domoticz Hardware: MQTT Auto Discovery Client Gateway with LAN Interface,
Name=MQTTADGateway
Domoticz Devices created via MQTT auto discovery by publishing config topic (see
domoticz log below).
The two devices are from type=Temp and type=Humidity.
Note that this script does not use the library server.py but has simple code to
connect to the network.

:external libraries
umqtt.simple

MQTT Remove Retained messages:
mosquitto_sub -h localhost --remove-retained -t '#' -W 1

:domoticz log
NOTE:
Initially the two devices for temperature & humidity are not in place.
These are created first time by the MQTT topics
"domoticz/sensor/sensorGardenT/config" and "domoticz/sensor/sensorGardenH/config".
The state, i.e. the two device value updates is set by the topic
"domoticz/sensor/sensorGarden/state".
See below log for payload examples for the topics.

2023-04-16 14:30:33.183 Debug: : MQTT PublishSchema 1 (1), Retain 0
2023-04-16 14:30:33.183 Debug: : MQTT PublishSchema 0 (0), Retain 0
2023-04-16 14:30:36.702 Debug: MQTTADGateway: topic: domoticz/status, message:
online
2023-04-16 14:30:52.422 Debug: MQTTADGateway: topic:
domoticz/sensor/sensorGardenT/config, message: {"name": "Garden Temp",
"device_class": "temperature", "state_topic": "domoticz/sensor/sensorGarden/state",
"value_template": "{{value_json.temperature}}", "unit_of_measurement": "\u00b0C",
"unique_id": "SGT001"}
2023-04-16 14:30:52.523 Debug: MQTTADGateway: topic:
domoticz/sensor/sensorGardenH/config, message: {"name": "Garden Hum",
"device_class": "humidity", "state_topic": "domoticz/sensor/sensorGarden/state",
"value_template": "{{value_json.humidity}}", "unit_of_measurement": "%",
"unique_id": "SGH001"}
2023-04-16 14:30:53.704 Debug: MQTTADGateway: topic:
domoticz/sensor/sensorGarden/state, message: {"temperature":21, "humidity":45}
2023-04-16 14:31:04.907 Debug: MQTTADGateway: topic:
domoticz/sensor/sensorGarden/state, message: {"temperature":21, "humidity":45}

:thonny log
dht22_mqtt_ad v20230420
Sampling Rate: 10s.
Network connecting...
```

```

Network connected: picow-ip
MQTT Broker connecting...
MQTT Broker connected: domoticz-ip
MQTT Auto Discovery published: topic=domoticz/sensor/sensorGardenT/config,
payload={"name": "Garden Temp", "device_class": "temperature", "state_topic":
"domoticz/sensor/sensorGarden/state", "value_template":
"{{value_json.temperature}}", "unit_of_measurement": "°C", "unique_id": "SGT001"}
MQTT Auto Discovery published: topic=domoticz/sensor/sensorGardenH/config,
payload={"name": "Garden Hum", "device_class": "humidity", "state_topic":
"domoticz/sensor/sensorGarden/state", "value_template": "{{value_json.humidity}}",
"unit_of_measurement": "%", "unique_id": "SGH001"}
MQTT published: topic=domoticz/sensor/sensorGarden/state,
payload={"temperature":21, "humidity":37}
MQTT published: topic=domoticz/sensor/sensorGarden/state,
payload={"temperature":21, "humidity":37}

:wiring
DHT22 = Pico W
VCC (+) = VBUS (Pin #40)
OUT = GP22 (Pin #29)
GND (-) = GND (Pin #28)
"""

# Imports
import network
import time
from machine import Pin
from utime import sleep, sleep_ms
# Installed via Thonny manage packages
from umqtt.simple import MQTTClient
# DHT22 micropython internal lib
from dht import DHT22
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the pico w)
import config
import sys

# Constants
VERSION = const('dht22_mqtt_ad v20230420')

"""
DHT22
"""
# DHT22 Signal GP22 (Pin #29)
PIN_DHT22 = const(22)
# DHT22 measurement sampling rate in seconds
SAMPLING_RATE = const(60)

# Create the DHT22 sensor object
dht22_sensor = DHT22(Pin(PIN_DHT22, Pin.IN, Pin.PULL_UP))

# DHT22 measurement with roundes values for temperature and humidity.
# return int temperature, int humidity
def get_dht22_data():
    # print(f'DHT22 measuring...')
    dht22_sensor.measure()
    # print(f'DHT22 measuring OK')

    # print(f'DHT22 read data...')
    # Assign the data (rounded)
    temperature      = round(dht22_sensor.temperature())
    humidity        = round(dht22_sensor.humidity())

    # Create the payload for the STATE_TOPIC (see below)
    payload = STATE_PAYLOAD
    payload = payload.replace('{T}', str(temperature))
    payload = payload.replace('{H}', str(humidity))

```

```

# print(f'DHT22 t={temperature}, h={humidity}')
return payload.encode()

"""
MQTT
"""
MQTT_BROKER = const('domoticz-ip')
MQTT_CLIENT_ID = const('picow_dht22')

# Topics & payload to create the devices. The configuration component is sensor.
TEMP_TOPIC_CONFIG= const(b'domoticz/sensor/sensorGardenT/config')
TEMP_PAYLOAD_CONFIG = const(b'{"name": "Garden Temp", "device_class": "temperature", "state_topic": "domoticz/sensor/sensorGarden/state", "value_template": "{value_json.temperature}}", "unit_of_measurement": "\u00b0C", "unique_id": "SGT001"}')
HUM_TOPIC_CONFIG = const(b'domoticz/sensor/sensorGardenH/config')
HUM_PAYLOAD_CONFIG = const(b'{"name": "Garden Hum", "device_class": "humidity", "state_topic": "domoticz/sensor/sensorGarden/state", "value_template": "{value_json.humidity}}", "unit_of_measurement": "%", "unique_id": "SGH001"}')

# Topic used to publish the state of the two sensors
# Payload is JSON format: {"temperature":21, "humidity":45}
STATE_TOPIC = const(b'domoticz/sensor/sensorGarden/state')
STATE_PAYLOAD = '{"temperature":{T}, "humidity":{H}}'

# Connect to the MQTT broker with client id and server address
def mqtt_connect(client_id, mqtt_server):
    client = MQTTClient(client_id, mqtt_server, keepalive=3600)
    client.connect()
    print(f'MQTT Broker connecting...')
    return client

# Reconnect to the MQTT broker
def mqtt_reconnect():
    print('[ERROR] Failed to connect to the MQTT Broker. Reconnecting...')
    time.sleep(5)
    machine.reset()

# Info
print(f'{VERSION}')
print(f'Sampling Rate: {SAMPLING_RATE}s.')

# Connect to the network
print(f'Network connecting...')
wlan = network.WLAN(network.STA_IF)
wlan.active(True)
wlan.connect(config.WIFI_SSID, config.WIFI_PASSWORD)
time.sleep(5)
if not wlan.isconnected():
    raise RuntimeError('[ERROR] Can not connect to the network.')
print(f'Network connected: {wlan.ifconfig()[0]}')

# Connect to MQTT
# Publish mqtt auto discovery topic & payload for the temperature & humidity device
try:
    # Connect to MQTT broker
    client = mqtt_connect(MQTT_CLIENT_ID, MQTT_BROKER)
    print(f'MQTT Broker connected: {MQTT_BROKER}')

    # Publish config topics to auto create the two devices in domoticz
    client.publish(TEMP_TOPIC_CONFIG, TEMP_PAYLOAD_CONFIG)
    print(f'MQTT Auto Discovery published: topic={TEMP_TOPIC_CONFIG.decode()}, payload={TEMP_PAYLOAD_CONFIG.decode()}')

    client.publish(HUM_TOPIC_CONFIG, HUM_PAYLOAD_CONFIG)
    print(f'MQTT Auto Discovery published: topic={HUM_TOPIC_CONFIG.decode()}, payload={HUM_PAYLOAD_CONFIG.decode()}')

except OSError as e:
    mqtt_reconnect()

```

```
# Main
while True:
    # Read the sensor data to get the payload {"temperature":19, "humidity":39}
    payload = get_dht22_data()

    # MQTT publish with encoded topic & payload (buffered objects required)
    client.publish(STATE_TOPIC, payload)
    print(f'MQTT published: topic={STATE_TOPIC.decode()} ,'
    payload={payload.decode() }')

    # Delay till next sample
    sleep(SAMPLING_RATE)
```

LCD 20x4 I2C LED Control

Description

This project switches, via Domoticz, LED1 of the Pico Breadboard Kit On/Off and display the LED state on an LCD 20x4 I2C display (LCD2004) connected to the Pico W.



This project shows how to set text on the LCD2004. It will be used by other projects.

Ideas for Use

- Domoticz Mini Information display,
- Domoticz Motherboard Monitor,
- Weather Station.

Screenshot LED1 On displayed on the LCD2004.



Solution

The Pico W has an LCD 20x4 I2C display connected and runs as a web server. A Domoticz Switch state change triggers an Domoticz Automation Event dzVents. This event listens to the switch device state changes and submits an HTTP POST request to the Pico W web server.

The POST data received by the Pico W is a JSON object:

```
{"state": "on" or "off"}
```

The LED1 is set according to the given state on or off.
The LCD2004 displays “LED1: On OK” on line 3 (row index 2, col index 0).


The Pico W web server sends an HTTP response back to Domoticz (as the client).

The HTTP response received by Domoticz, is a JSON object with key:value pairs parsed by the Domoticz event.

```
{ ["message"]="On", ["title"]="{"state": "on"}", ["status"]="OK"}
```

- message - LED1 state On or Off,
- title - Command received from the Domoticz Automation Event,
- status - OK, means the command has been executed successfully.


Block Diagram

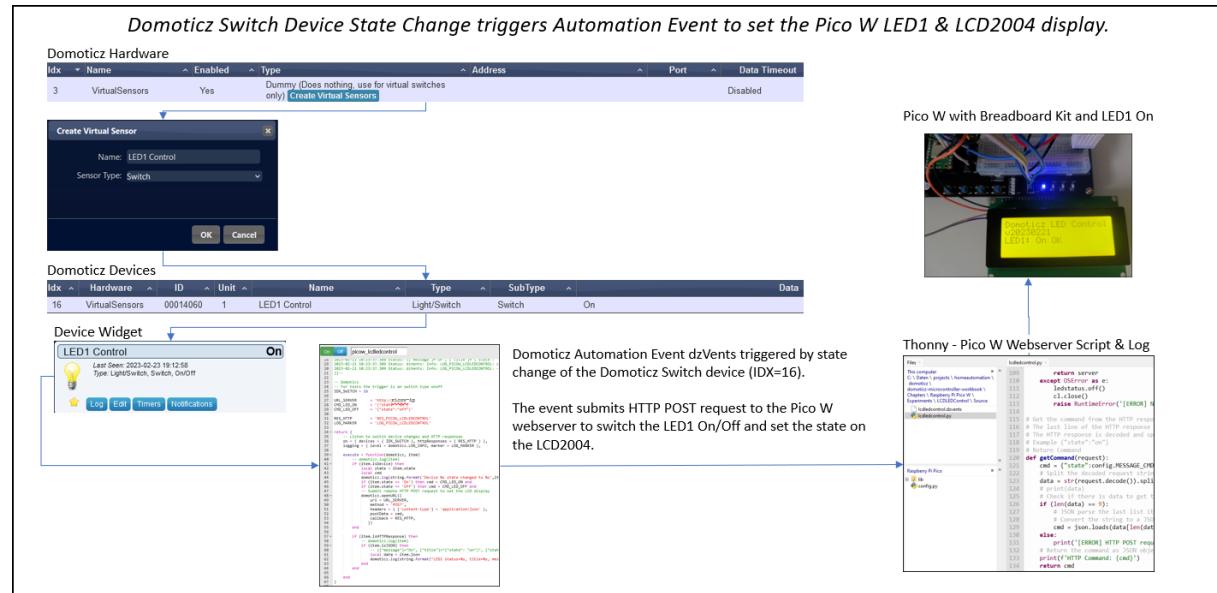

Wiring

| LCD 2004 I2C | Pico W |
|---------------|----------------|
| VCC | VBUS (5V) |
| SDA | GP20 (Pin #26) |
| SCL | GP21 (Pin #27) |
| GND | GND (Pin #38) |
| I2C Address | 0x27 |
| | |
| LED (blue) | Pico W |
| + (Anode) | GP16 (Pin #21) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

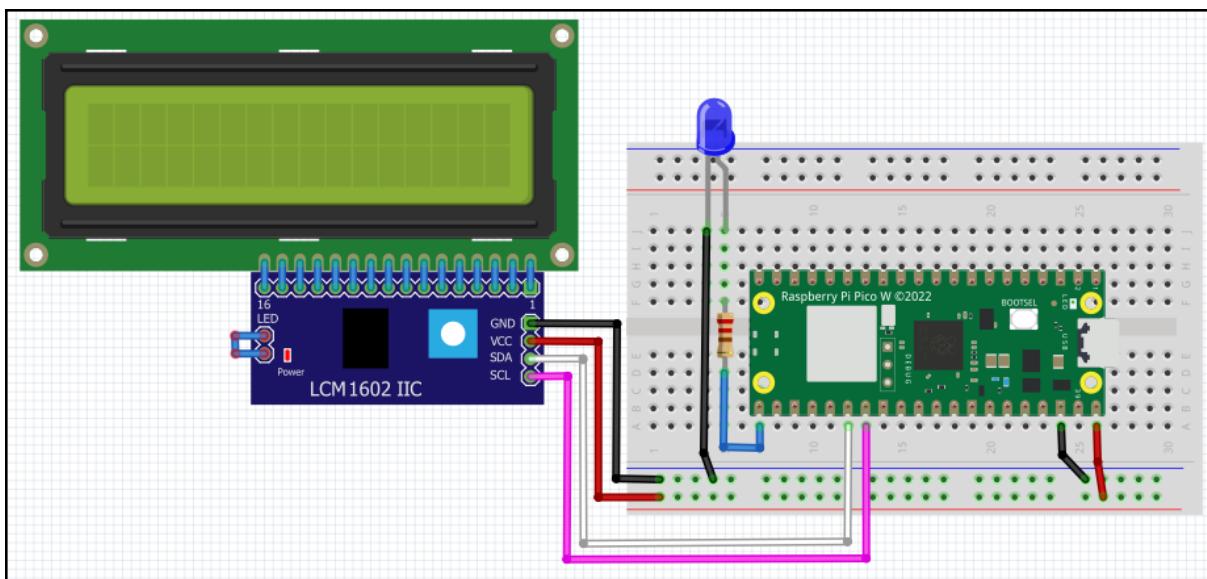

Note

The circuit shows an LCD 16x2 I2C instead the used LCD 20x4 I2C.

This solution can also be used for an LCD 16x2 I2C - need to change parameter in the Pico W web server script:

```
# LCD1602 Constants
LCD_I2C_ADDRESS = 0x27
LCD_ROWS = 2
LCD_COLS = 16
```

Note

The I2C address must be checked via the scan function. See MicroPython source code below.

Domoticz Setup

Devices

Create a virtual sensor, hardware dummy, named LED1 Control from sensor type Switch/Light.

After creating the device, the Domoticz devices list shows the entry:

```
Idx=16, Hardware=VirtualSensors, ID=00014060, Unit=1, Name=LED1 Control,
Type=Light/Switch, SubType=Switch, Data=On
```

Automation Script

The event listens to the Domoticz switch device state change On or Off.

Depending on the switch state, the HTTP POST JSON object is defined.

The HTTP POST request is sent to the Pico W web server.

The HTTP response from the Pico W web server is logged in the Domoticz log.

```
-- [[
File: lcdledcontrol.dzvents
Date: 20230221
Author: Robert W.B. Linn

Switch the Pico W LED1 (of the Breadboard Kit) and display on LCD2004.
The Pico W runs a RESTful web server.
The HTTP POST request to the Pico W web server is a JSON object: {"state":"on" or
"off"}.
The Pico W web server HTTP response is a JSON object with key:value pairs:
{["message"]="On", ["title"]={"state": "on"}, ["status"]="OK"}

Domoticz Log
2023-02-21 10:23:36.299 Status: dzVents: Info: Handling events for: "Pico W-
Control", value: "On"
2023-02-21 10:23:36.300 Status: dzVents: Info: LOG_PICOW_LCLEDCONTROL: -----
Start internal script: picow_lcdledcontrol: Device: "Pico W-Control
(VirtualSensors)", Index: 16
2023-02-21 10:23:36.300 Status: dzVents: Info: LOG_PICOW_LCLEDCONTROL: Device Pico
W-Control state changed to On
2023-02-21 10:23:36.300 Status: dzVents: Info: LOG_PICOW_LCLEDCONTROL: -----
Finished picow_lcdledcontrol
2023-02-21 10:23:36.300 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-02-21 10:23:37.308 Status: dzVents: Info: Handling httpResponse-events for:
"RES_PICOW_LCLEDCONTROL"
2023-02-21 10:23:37.308 Status: dzVents: Info: LOG_PICOW_LCLEDCONTROL: -----
Start internal script: picow_lcdledcontrol: HTTPResponse: "RES_PICOW_LCLEDCONTROL"
2023-02-21 10:23:37.308 Status: {["message"]="On", ["title"]={"state": "on"}, [
"status"]="OK"}
2023-02-21 10:23:37.309 Status: dzVents: Info: LOG_PICOW_LCLEDCONTROL: LED1
status=OK, title={"state": "on"}, message=On
2023-02-21 10:23:37.309 Status: dzVents: Info: LOG_PICOW_LCLEDCONTROL: -----
Finished picow_lcdledcontrol
]]--


-- Domoticz
-- For tests the trigger is an switch type onoff
local IDX_SWITCH = 16

local URL_SERVER      = 'http://picow-ip'
local CMD_LED_ON      = '{"state":"on"}'
local CMD_LED_OFF     = '{"state":"off"}'
```

```
local RES_HTTP      = 'RES_PICOW_LCDLEDCONTROL'
local LOG_MARKER    = 'LOG_PICOW_LCDLEDCONTROL'

return {
    -- Listen to switch device changes and HTTP responses
    on = { devices = { IDX_SWITCH }, httpResponses = { RES_HTTP } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },

    execute = function(domoticz, item)
        -- domoticz.log(item)
        if (item.isDevice) then
            local state = item.state
            local cmd
            domoticz.log(string.format('Device %s state changed to %s', item.name, state),
domoticz.LOG_INFO)
            if (item.state == 'On') then cmd = CMD_LED_ON end
            if (item.state == 'Off') then cmd = CMD_LED_OFF end
            -- Submit remote HTTP POST request to set the LCD display
            domoticz.openURL({
                url = URL_SERVER,
                method = 'POST',
                headers = { ['content-type'] = 'application/json' },
                postData = cmd,
                callback = RES_HTTP,
            })
        end

        if (item.isHTTPResponse) then
            -- domoticz.log(item)
            if (item.isJSON) then
                -- {[{"message"]="On", ["title"]={"state": "on"}, ["status"]="OK"}]
                local data = item.json
                domoticz.log(string.format("LED1 status=%s, title=%s, message=%s",
data.status, data.title, data.message))
            end
        end
    end
}
```

Web Server

Libraries

The MicroPython script uses the two external libraries *lcd_api.py* and *machine_i2c_lcd.py* to control the LCD2004.

Enhanced is the library *lcd_api.py* with additional functions, like setting text at position col:row and more.

The two libraries are stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Credits

Thanks for developing & sharing the libraries [lcd_api](#) and [machine_i2c_lcd](#).

MicroPython Script

```
"""
File: lcdledcontrol.py
Date: 20230318
Author: Robert W.B. Linn

Pico W RESTful web server listening for data from Domoticz event.
The incoming data is from a HTTP POST request with JSON object to switch LED1 on or off.
LED1 is attached on the Pico Breadboard kit.

:log
Example turning LED1 on from Domoticz:
HTTP Command: {'state': 'on'}
HTTP Response: {"status": "OK", "title": {"state": "on"}, "message": "On"}

:wiring
LCD2004 = Pico W
VCC = VBUS (5V) (red)
SDA = GP20 (Pin #26) (white)
SCL = GP21 (Pin #27) (Pink)
GND = GND (black)
"""

# Libraries
from time import sleep
from machine import Pin
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# LCD Display libs stored in Pico W folder lib
# lcd_api.py, machine_i2c_lcd.py
from machine import I2C, Pin
from machine_i2c_lcd import I2cLcd
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'Domoticz LED Control'
VERSION = 'v20230311'

CRLF = chr(13) + chr(10)
SPACE = chr(32)

# Create the LED1 (blue) object using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.off()

# LCD2004 Constants
LCD_I2C_ADDRESS = 0x27
```

```

LCD_PIN_SDA = 20
LCD_PIN_SCL = 21
LCD_ROWS = 4
LCD_COLS = 20

def set_lcd(address, pinsda, pinscl, rows, cols):
    """
    Create the LCD object by init the lcd with i2c.

    :param hex address
        Address of the LCD I2C. Default 0x27

    :param int pinsda
        SDA pin

    :param int pinscl
        SCL pin

    :param int rows
        Number of rows 20 or 16

    :param int cols
        Number of cols 4 or 2

    :return
        LCD object

    :example
    set_lcd(LCD_I2C_ADDRESS, LCD_PIN_SDA, LCD_PIN_SCL, LCD_ROWS, LCD_COLS)
    """
    try:
        # I2C object
        i2c = I2C(0, sda=Pin(Pinsda), scl=Pin(Pinscl), freq=100000)
        # Init LCD object using I2C with address & rows (4, index 0-3) & cols (20,
index 0-19)
        lcd = I2cLcd(i2c, address, rows, cols)
        print("LCD init. Address: " + str(i2c.scan()))
        return lcd
    except OSError as e:
        raise RuntimeError('[ERROR] LCD init.')
    """

def set_lcd_welcome(row1, row2):
    """
    LCD Initial text on row 1 & 2
    """
    lcd.putstr(row1 + "\n" + row2)
    sleep(.3)

def handle_request(cmd, status):
    """
    Handle the LCD command defined as JSON object.

    :param JSON object
        JSON object with key:value pair {"state":"on" or "off"}

    :status
        If status is 1 set the display else unknown command

    :return JSON object response
    """
    # Assign the command to the response title
    response[config.KEY_TITLE] = cmd

    if status == 1:
        # Select the command and set the lcd text
        if cmd['state'] == 'on':
            led1.on()
            response[config.KEY_MESSAGE] = config.MESSAGE_ON
            response[config.KEY_STATE] = config.STATE_OK

```

```

        elif cmd['state'] == 'off':
            led1.off()
            response[config.KEY_MESSAGE] = config.MESSAGE_OFF
            response[config.KEY_STATE] = config.STATE_OK
        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

    # LCD display set
    # Clear row 2 (the row range for LCD2004 is 0 to 3)
    lcd.clrrow(2)
    sleep(.3)

    # Write the keys message and state as string at col 0, row 2
    lcd.putstrat(0, 2, 'LED1: ' + response[config.KEY_MESSAGE] + ' ' +
response[config.KEY_STATE])
    sleep(.3)

    return response

# Main
# Listen for incoming connections from the Domoticz Automation Event dzVents
print(f'{NAME} {VERSION}')

# Create the LCD object
lcd = set_lcd(LCD_I2C_ADDRESS, LCD_PIN_SDA, LCD_PIN_SCL, LCD_ROWS, LCD_COLS)

# Set the LCD display welcome text
set_lcd_welcome(NAME, VERSION)

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd as JSON object from the POST request
        # {"state":"on" or "off"}
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to update the LCD text.
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')

```

LCD 20x4 I2C Motherboard Info

Description


This project displays and updates in regular intervals selective Domoticz data from the hardware motherboard sensors on an LCD 20x4 I2C display (LCD2004) connected to the Pico W.

Solution


The LCD2004 setup is as previous described in the project [LCD 20x4 I2C LED Control \[Domoticz to Pico W\]](#).

Domoticz uses an Automation Event dzVents, triggered by a switch or timer, to send the selective Domoticz hardware motherboard sensors data via HTTP POST request to the Pico W web server. The data is a JSON array with items per LCD line.

LCD Text Example
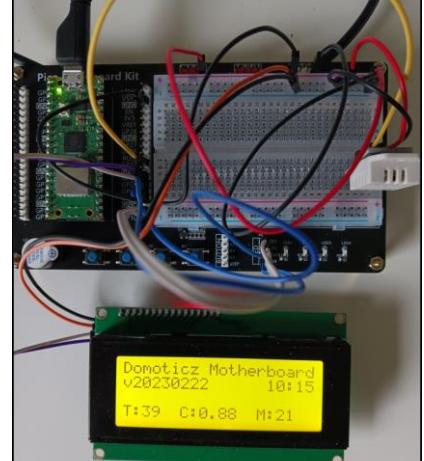
| | |
|--|---|
|  | <p>The motherboard sensors T=internaltemperature C=cpuusage M=memoryusage</p> |
|--|---|

Block Diagram

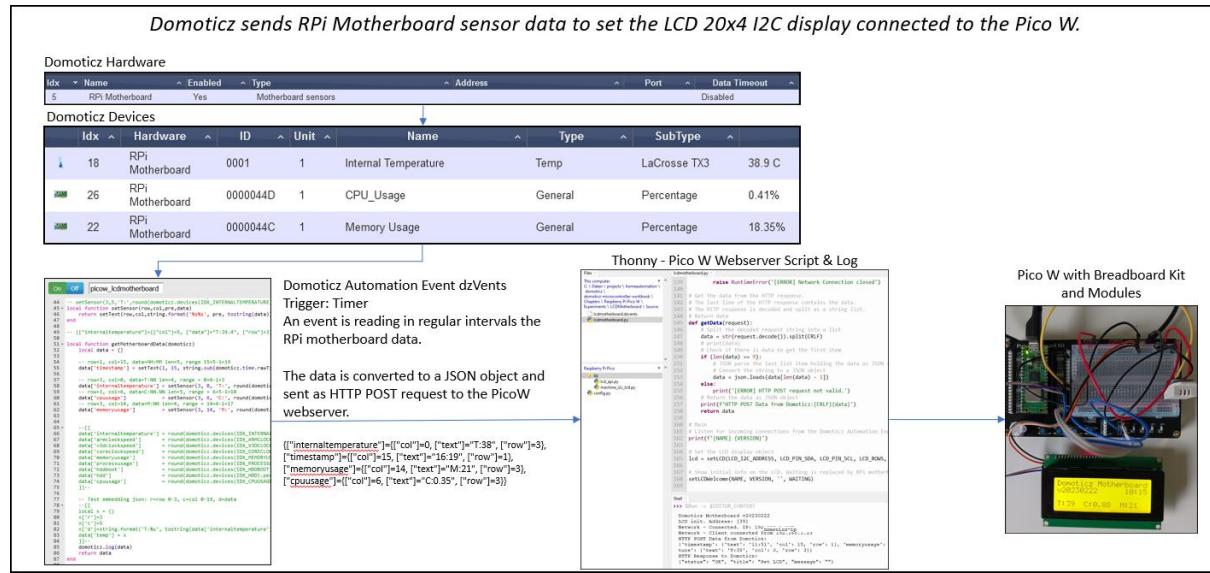

Wiring

See project [LCD 20x4 I2C LED Control \[Domoticz to Pico W\]](#).

Circuit Diagram

See project [LCD 20x4 I2C LED Control \[Domoticz to Pico W\]](#).

Domoticz Setup

Devices

The hardware Motherboard sensors is added, and the devices Internal Temperature, CPU Usage and Memory Usage are added.

The other devices from the hardware Motherboard sensors are not used for this project.

After creating the device(s), the Domoticz devices list shows the entries:

```

IDX=26, Hardware=RPi Motherboard, ID=0000044D, Unit=1, Name=CPU Usage,
Type=General, SubType=Percentage, Data=0.43%
IDX=22, Hardware=RPi Motherboard, ID=0000044C, Unit=1, Name=Memory Usage,
Type=General, SubType=Percentage, Data=22.93%
IDX=18, Hardware=RPi Motherboard, ID=0001, Unit=1, Name=Internal Temperature,
Type=Temp, SubType=LaCrosse TX3, Data=38.4 C
  
```

Automation Script

```
--[[[
File: lcdmotherboard.dzvents
Date: 20230221
Author Robert W.B. Linn

Switch the Pico W LED1 (of the Breadboard Kit) and display on LCD2004.
The Pico W runs a RESTful web server.
The HTTP POST request to the Pico W web server is a JSON object: {"state":"on" or
"off"}.
The Pico W web server HTTP response is a JSON object with key:value pairs:
{["message"]="On", ["title"]={"state": "on"}, ["status"]="OK"}

Log
2023-03-06 10:45:00.310 Status: dzVents: Info: LOG_PICOW_LCDMOTHERBOARD: -----
Start internal script: picow_lcdmotherboard:, trigger: "every minute"
2023-03-06 10:45:00.334 Status: dzVents: Info: LOG_PICOW_LCDMOTHERBOARD:
{["memoryusage"]=[{"row":3, ["text"]="M:20", ["col":14}, {"cpuusage"]=[{"row":3,
["text"]="C:0.37", ["col":6}, {"timestamp"]=[{"row":1, ["text"]="10:45",
["col":15}, {"internaltemperature"]=[{"row":3, ["text"]="T:44", ["col":0}}}
2023-03-06 10:45:00.335 Status: dzVents: Info: LOG_PICOW_LCDMOTHERBOARD: -----
Finished picow_lcdmotherboard
2023-03-06 10:45:00.335 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
]]-- 

-- Domoticz
-- For tests the trigger is an switch type onoff
local IDX_SWITCH = 16
--- IDX of the motherboard sensors (devices)
local IDX_INTERNALTEMPERATURE = 18      -- temperature
local IDX_ARMCLOCKSPEED = 19            -- sensorValue
local IDX_V3DCLOCKSPED = 20             -- sensorValue
local IDX_CORECLOCKSPEED = 21           -- sensorValue
local IDX_MEMORYUSAGE = 22              -- percentage
local IDX_PROCESSUSAGE = 23              -- sensorValue
local IDX_HDDBOOT = 24                  -- percentage
local IDX_HDD = 25                      -- percentage
local IDX_CPUUSAGE = 26                 -- percentage

-- Round a number with digital places
local function round(num, numDecimalPlaces)
    return tonumber(string.format("%. .. (numDecimalPlaces or 0) .. "f", num))
end

-- Create table with keys col, row and text to be displayed on the LCD.
-- For a LCD2004 row 0-3, col 0-19, text length max 20 characters
-- setText(3,0,'Hello World')
local function setText(row,col,text)
    local x = {}
    x['row']=row
    x['col']=col
    x['text']=text
    return x
end

-- Create table with sensor data for LCD display
-- setSensor(3,5,'T:',round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature,
2))
local function setSensor(row,col,pre,data)
    return setText(row,col,string.format('%s%s', pre, tostring(data)))
end

-- {[{"internaltemperature"]=[{"col":5, ["data"]="T:39.4", ["row":3},
["cpuusage"]=0.68, ["coreclockspeed"]=500, ["v3dclockspeed"]=250,
["processusage"]=45.06, ["armclockspeed"]=600, ["hdd"]]=38.19, ["memoryusage"]=20.9,
["hddboot"]]=19.68}
```

```

local function getMotherboardData(domoticz)
    local data = {}

    -- row=1, col=15, data=HH:MM len=5, range 15+5-1=19
    data['timestamp'] = setText(1, 15, string.sub(domoticz.time.rawTime, 1, 5))

    -- row=3, col=0, data=T:NN len=4, range = 0+4-1=3
    data['internaltemperature'] = setSensor(3, 0, 'T:', 
round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 0))
    -- row=3, col=6, data=C:NN len=5, range = 6+5-1=10
    data['cpuusage'] = setSensor(3, 6, 'C:', 
round(domoticz.devices(IDX_CPUUSAGE).percentage, 2))
    -- row=3, col=14, data=M:NN len=4, range = 14+4-1=17
    data['memoryusage'] = setSensor(3, 14, 'M:', 
round(domoticz.devices(IDX_MEMORYUSAGE).percentage, 0))

    --[[
        data['internaltemperature'] =
round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 2)
        data['armclockspeed'] =
round(domoticz.devices(IDX_ARMCLOCKSPEED).sensorValue, 0)
        data['v3dclockspeed'] =
round(domoticz.devices(IDX_V3DCLOCKSPEED).sensorValue, 0)
        data['coreclockspeed'] =
round(domoticz.devices(IDX_CORECLOCKSPEED).sensorValue, 0)
        data['memoryusage'] = round(domoticz.devices(IDX_MEMORYUSAGE).percentage,
2)
        data['processusage'] =
round(domoticz.devices(IDX_PROCESSUSAGE).sensorValue, 2)
        data['hddboot'] = round(domoticz.devices(IDX_HDDBOOT).percentage, 2)
        data['hdd'] = round(domoticz.devices(IDX_HDD).percentage, 2)
        data['cpuusage'] = round(domoticz.devices(IDX_CPUUSAGE).percentage, 2)
    ]]]-- 

-- Test embedding json: r=row 0-3, c=col 0-19, d=data
--[[
    local x = {}
    x['r']=3
    x['c']=5
    x['d']=string.format('T:%s', tostring(data['internaltemperature']))
    data['temp'] = x
]]-- 
domoticz.log(data)
return data
end

-- URL of the Pico W web server
local URL_SERVER = 'http://picow-ip'

local PROJECT = 'PICOW_LCDMOTHERBOARD'
local RES_HTTP = 'RES_'.. PROJECT
local LOG_MARKER = 'LOG_'.. PROJECT

local TIMER_RULE = 'every minute'

return {
    -- Listen to switch device changes and HTTP responses
    on = { devices = { IDX_SWITCH }, timer = { TIMER_RULE }, httpResponses = { 
RES_HTTP } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
    execute = function(domoticz, item)
        -- domoticz.log(item)
        if (item.isTimer) then
            domoticz.openURL({
                url = URL_SERVER,
                method = 'POST',

```

```
        headers = { ['content-type'] = 'application/json' },
        postData = getMotherboardData(domoticz),
        callback = RES_HTTP,
    })
end

if (item.isDevice) then
    domoticz.log(string.format('Device %s state changed to %s', item.name,
item.state), domoticz.LOG_INFO)
    if (item.state == 'On') then
        -- Submit remote HTTP POST request to set the LCD display
        domoticz.openURL({
            url = URL_SERVER,
            method = 'POST',
            headers = { ['content-type'] = 'application/json' },
            postData = getMotherboardData(domoticz),
            callback = RES_HTTP,
        })
    end
end

-- Handle HTTP response: OK is item statusCode 200 and item.ok true
-- Else error like statusCode 7, item.ok false
if (item.isHTTPResponse) then
    -- domoticz.log(string.format("%d %s", item.statusCode, item.ok))
    if (item.statusCode == 200) then
        if (item.isJSON) then
            -- {[{"message"]="On", ["title"]={"state": "on"}},
["status"]="OK"}
            local data = item.json
            domoticz.log(data)
            -- domoticz.log(string.format("LED1 status=%s, title=%s,
message=%s", data.status, data.title, data.message))
        end
    else
        -- Error like 7 false; ERROR 7:Couldn't connect to server
        domoticz.log(string.format("ERROR %d:%s", item.statusCode,
item.statusText))
    end
end
end
}
```

Web Server

Libraries

See project [LCD 20x4 I2C LED Control \[Domoticz to Pico W\]](#).

MicroPython Script

```
"""
File: lcdmotherboard.py
Date: 20230318
Author: Robert W.B. Linn

On an LCD2004 connected to the Pico W, display text and selective RPi motherboard
sensor data received from Domoticz.
The Pico W runs a RESTful web server handling incoming data from a Domoticz
Automation event dzVents.
The incoming data is received from a HTTP POST request with JSON object to set the
text.
The JSON object contains for each of the displayed text, the col, row and text.
{'sensor': {'text': 'TEXT', 'col': NN, 'row': N}, ...}
This enables to set the LCD display layout from the Domoticz event.

:log
Domoticz Motherboard v20230311
LCD init. Address: [39]
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command={'timestamp': {'text': '16:00', 'col': 15, 'row': 1}, 'memoryusage':
{'text': 'M:20', 'col': 14, 'row': 3}, 'cpuusage': {'text': 'C:0.3', 'col': 6,
'row': 3}, 'internaltemperature': {'text': 'T:41', 'col': 0, 'row': 3}}
HTTP Response={"status": "OK", "title": {"timestamp": {"text": "16:00", "col": 15,
"row": 1}, "memoryusage": {"text": "M:20", "col": 14, "row": 3}, "cpuusage":
{"text": "C:0.3", "col": 6, "row": 3}, "internaltemperature": {"text": "T:41",
"col": 0, "row": 3}}, "message": ""}

Network connection closed

:wiring
LCD2004 = Pico W
VCC = VBUS (5V) (red)
SDA = GP20 (Pin #26) (white)
SCL = GP21 (Pin #27) (Pink)
GND = GND (black)
"""

# Libraries
import time
from time import sleep
from machine import Pin
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# LCD Display libs stored in Pico W folder lib
# lcd_api.py, machine_i2c_lcd.py
from machine import I2C, Pin
from machine_i2c_lcd import I2cLcd
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
## Name (row 0), Version (row 1), Waiting (row 3) are displayed on the LCD
NAME = 'Domoticz Motherboard'
VERSION = 'v20230311'
WAITING = 'Waiting for data...'
```

```

## Title used for the HTTP JSON response to Domoticz key title
TITLE = 'Set LCD'

# Create the LED1 (blue) object using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.off()

# LCD2004 Constants
LCD_I2C_ADDRESS = 0x27
LCD_PIN_SDA = 20
LCD_PIN_SCL = 21
LCD_ROWS = 4
LCD_COLS = 20

"""
Create the LCD object by init the lcd with i2c.

:param hex address
    Address of the LCD I2C. Default 0x27

:param int pinsda
    SDA pin

:param int pinscl
    SCL pin

:param int rows
    Number of rows 20 or 16

:param int cols
    Number of cols 4 or 2

:return
    LCD object

:example
init_lcd(LCD_I2C_ADDRESS, LCD_PIN_SDA, LCD_PIN_SCL, LCD_ROWS, LCD_COLS)
"""
def init_lcd(address, pinsda, pinscl, rows, cols):
    try:
        # I2C object
        i2c = I2C(0, sda=Pin(Pinsda), scl=Pin(Pinscl), freq=100000)
        # Init LCD object using I2C with address & rows (4, index 0-3) & cols (20,
index 0-19)
        lcd = I2cLcd(i2c, address, rows, cols)
        print("LCD init. Address: " + str(i2c.scan()))
        return lcd
    except OSError as e:
        raise RuntimeError('[ERROR] LCD init.')

"""
LCD Initial text on row 1 & 2
"""
def set_lcd_welcome(row1, row2, row3, row4):
    lcd.putstr(row1 + "\n" + row2 + "\n" + row3 + "\n" + row4)
    sleep(.3)

"""
Set the sensor text at col, row

:param string Sensor
    String defining the RPi motherboard sensor, i.e. internaltemperature

:example
set_lcd_sensor_text('internaltemperature')
"""
def set_lcd_sensor_text(data, sensor):
    # Get the sensor data
    col = data[sensor]['col']

```

```

row = data[sensor]['row']
text = data[sensor]['text']
# Clear the sensor data text at col, row
lcd.clrtext(col, row, len(text))
sleep(.1)
# Write the sensor text at col, row
lcd.putstrat(col, row, text)
sleep(.1)

"""
Handle the LCD command defined as JSON object.
The command defines for every sensor data the text and the LCD start position
col/row.
{'timestamp': {'text': '15:53', 'col': 15, 'row': 1}, 'memoryusage': {'text':
'M:20', 'col': 14, 'row': 3}, 'cpuusage': {'text': 'C:0.39', 'col': 6, 'row': 3},
'internaltemperature': {'text': 'T:39', 'col': 0, 'row': 3}},

:param JSON object
    JSON object with key:value pair {"state":"on" or "off"}

:status
    If status is 1 set the display else unknown command

:return JSON object response
"""

def handle_request(cmd, status):
    # Assign the command to the response title
    response[config.KEY_TITLE] = cmd

    # If the status is 1 (OK) then set the lcd display with the sensor data.
    if status == 1:
        # Clear rows first (the row range for LCD2004 is 0 to 3)
        # Clear row 2 = NOT USED
        lcd.clrrow(2)
        sleep(.1)

        # Row 3 is used to display the RPi motherboard sensor data
        lcd.clrrow(3)
        sleep(.1)

        # Set the sensor data (subset only) on row 3
        set_lcd_sensor_text(cmd, 'timestamp')
        set_lcd_sensor_text(cmd, 'internaltemperature')
        set_lcd_sensor_text(cmd, 'cpuusage')
        set_lcd_sensor_text(cmd, 'memoryusage')

        # Set the response
        response[config.KEY_STATE] = config.STATE_OK
        response[config.KEY_MESSAGE] = config.MESSAGE_EMPTY
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

    # Return the response which is send to Domoticz
    return response

# Main
# Listen for incoming connections from the Domoticz Automation Event dzVents
print(f'{NAME} {VERSION}')

# Create the LCD display object
lcd = init_lcd(LCD_I2C_ADDRESS, LCD_PIN_SDA, LCD_PIN_SCL, LCD_ROWS, LCD_COLS)

# Show initial info on the LCD. Waiting is replaced by RPi motherboard sensor data
set_lcd_welcome(NAME, VERSION, '', WAITING)

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

```

```
# Connect to the network and get the server object
server = network.connect()

"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd to set the LCD text as JSON object from the POST request
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to update the LCD text.
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network - Connection closed')
```

LCD 20x4 I2C Text Input

Description

This project enables to enter text in a Domoticz text device with input field and display the text on an LCD 20x4 I2C display.

Ideas for Use

- Message or Information display with text set by user,
- Instead, LCD use a larger display or 7-segment display.

Solution

This project is

- based upon the project [LCD 20x4 I2C LED Control](#),
- inspired by [this](#) solution shared in the Domoticz Forum (thanks).

A Domoticz text device is enhanced by an input field with a button (Set).

If the button is pressed, Domoticz sends an HTTP POST request to the Pico W web server.

The POST request data (JSON format) contains the text to be displayed.

The display lines are separated by comma:

```
"text": "Line1,Line2,Line3,Line4"
```

The Pico W webserver parses the post data, performs checks, and display the text as lines on the LCD display.

Notes

- The LCD 20x4 has 20 columns and 4 rows,
- Although the Domoticz database has VARCHAR(200) for the field svalue specified, SQLite3 will not enforce that length specified

A Domoticz Automation event sets the text device input field and sends the HTTP POST request.

Block Diagram



Domoticz

Device

Create a virtual sensor, hardware dummy, named “LCD Text Input” from sensor type Text.

After creating the device, the Domoticz devices list shows the entry:

```
Idx=36, Hardware=VirtualSensors, ID=00082036, Unit=1, Name=LCD Text Input,
Type=General, SubType=Text
```

Automation Script

```
-- [[
File: lcdtextinput.dzvents
Date: 20230425
Author: Robert W.B. Linn
Based on this solution:
https://www.domoticz.com/forum/viewtopic.php?p=293175#p293175 (Thanks)

Create a Domoticz GUI input widget for text. The widget uses a text device.
The text is sent to the Pico W web server and sets the text of up-to 4 lines (LCD
rows 0-3).

As the event is running on the Domoticz system, there is no need to add an IP
address to the HTML form POST action.
See below variable widgetinputhtml.
]]--

local URL_SERVER      = 'http://picow-ip'

-- IDX of the switch which enables to init the textinput device
local IDX_SWITCH = 16

-- IDX of the text device which is functioning as an input device
local IDX_TEXT_DEVICE = 36
local INPUT_LABEL = "Text:"
-- Optional store the text in a user var (NOT USED)
local IDX_UV = 1
```

```

local PROJECT      = 'LCDWIDGETINPUT'
local RES_HTTP     = 'RES_' .. PROJECT
local LOG_MARKER   = 'LOG_' .. PROJECT

-- Create the HTML code for the text device containing input field.
-- This is a form submitting a POST request on the localhost.
-- The input field has type text. The label is commented out. The input field has
default with 200px.
-- The POST data contains all parameter as defined in the text device Domoticz HTTP
API/JSON documentation.
local widgetinputhtml = [[<!-- Widget Input for Text -->
<iframe name="dummyframe" id="dummyframe" style="display: none">
</iframe>
<form method="POST" action="/json.htm" target="dummyframe">
<input type="hidden" id="" name="type" value="command">
<input type="hidden" id="" name="param" value="udevice">
<input type="hidden" id="" name="idx" value="{IDX}">
<input type="hidden" id="" name="nvalue" value="0">
<!-- <label for="fname">{LABEL}</label><br> -->
<input type="text" id="fname" name="svalue" value="{VALUE}" style="width: 200px;">
<input type="image" class="btnsmall" alt="Set">
</form>]]

-- Set the content of the text device.
-- The content is HTML code (see previous var widgetinputhtml) with the value.
-- Ensure to remove the newline characters.
local function setTextDevice(domoticz, value)
    local text = widgetinputhtml
    text = string.gsub(text, "{IDX}", IDX_TEXT_DEVICE)
    text = string.gsub(text, "{LABEL}", string.format("%s", INPUT_LABEL))
    text = string.gsub(text, "{VALUE}", string.format("%s", value))
    text = string.gsub(text, "\n", "")
    domoticz.log(text)
    -- Silent update of the text device to avoid triggering device change.
    domoticz.devices(IDX_TEXT_DEVICE).updateText(text).silent()
end

local function updateLCD(domoticz, text)
    local postdata = {}
    postdata['text'] = text
    domoticz.openURL({
        url = URL_SERVER, method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = postdata, callback = RES_HTTP,
    })
end

return {
    on = {
        devices = { IDX_SWITCH, IDX_TEXT_DEVICE },
        httpResponses = { RES_HTTP }
    },
    logging = {
        level = domoticz.LOG_DEBUG, marker = LOG_MARKER,
    },
    -- Handle device changes
    execute = function(domoticz, item)
        -- Handle switch which init the text of the text device with html
        if item.isDevice then
            device = item
            if device.idx == IDX_SWITCH then
                setTextDevice(domoticz, '')
            end

            -- Handle change text device triggered by set button of the HTML form.
            -- The text device content is the inputted value without HTML code.
            if device.idx == IDX_TEXT_DEVICE then

```

```

        -- Get the state of the input device which is the text put in
        (without HTML code)
        -- Device TextInputDevice changed, state=Line1,Line2,Line3,Line4
        domoticz.log(string.format('Device change: name=%s, state=%s',
device.name, device.state))

        -- Update text device with new value embedded in the html code
        setTextDevice(domoticz, device.state)

        -- Update LCD display via HTTP POST request to Pico W web server
        updateLCD(domoticz, device.state)
    end
end

if (item.isHTTPResponse) then
    -- domoticz.log(item)
    if (item.isJSON) then
        local data = item.json
        domoticz.log(string.format("status=%s, title=%s, message=%s",
data.status, data.title, data.message))
    end
end
end
}

```

Web Server

Libraries

See project [LCD 20x4 I2C LED Control](#).

MicroPython Script

```

"""
File: lcdtextinput.py
Date: 20230425
Author: Robert W.B. Linn
"""

# Libraries
from time import sleep
from machine import Pin
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# LCD Display libs stored in Picow folder lib
# lcd_api.py, machine_i2c_lcd.py
from machine import I2C, Pin
from machine_i2c_lcd import I2cLcd
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'LCD Text Input'
VERSION = 'v20230425'

CRLF = chr(13) + chr(10)
SPACE = chr(32)

# LCD2004 Constants
LCD_I2C_ADDRESS = 0x27
LCD_PIN_SDA = 20
LCD_PIN_SCL = 21
LCD_ROWS = 4
LCD_COLS = 20

```

```
def set_lcd(address, pinsda, pinscl, rows, cols):
    """
    Create the LCD object by init the lcd with i2c.

    :param hex address
        Address of the LCD I2C. Default 0x27

    :param int pinsda
        SDA pin

    :param int pinscl
        SCL pin

    :param int rows
        Number of rows 20 or 16

    :param int cols
        Number of cols 4 or 2

    :return
        LCD object

    :example
    set_lcd(LCD_I2C_ADDRESS, LCD_PIN_SDA, LCD_PIN_SCL, LCD_ROWS, LCD_COLS)
    """
    try:
        # I2C object
        i2c = I2C(0, sda=Pin(pinsda), scl=Pin(pinscl), freq=100000)
        # Init LCD object using I2C with address & rows (4, index 0-3) & cols (20,
index 0-19)
        lcd = I2cLcd(i2c, address, rows, cols)
        print("LCD init. Address: " + str(i2c.scan()))
        return lcd
    except OSError as e:
        raise RuntimeError('[ERROR] LCD init.')

def set_lcd_welcome(row1, row2):
    """
    LCD Initial text on row 1 & 2
    """
    lcd.putstr(row1 + "\n" + row2)
    sleep(.3)

def handle_request(cmd, status):
    """
    Handle the LCD command defined as JSON object.

    :param JSON object
        JSON object with key:value pair {"text":"widget_input"}

    :status
        If status is 1 set the display else unknown command

    :return JSON object response
    """
    # print(lcd.num_lines, lcd.num_columns)

    # Assign the command to the response title
    response[config.KEY_TITLE] = cmd
    # Reset the message
    response[config.KEY_MESSAGE] = ''
    # Rest response
    response[config.KEY_STATE] = config.STATE_OK

    # If the status is 1 set the LCD text else error
    if status == 1:
        # Clear the LCD first
        lcd.clear()
```

```

# Write the text input from the widget starting at col 0, row 0
# Get the text
text = cmd['text']
# Split the text by , into up-to 4 lines 0-3
lines = text.split(",")
linenr = 0
# Loop over the lines and write the line at col 0, row rownr
# Check if the number of lines and number of columns are in range
for line in lines:
    if 0 <= linenr <= lcd.num_lines - 1:
        if len(line) > lcd.num_columns:
            response[config.KEY_MESSAGE] = f'[WARNING] Line {linenr} exceeds max length {str(lcd.num_columns)} ({str(len(line))}).'
            response[config.KEY_STATE] = config.STATE_WARNING
            print(response[config.KEY_MESSAGE])
            line = line[0:lcd.num_columns]
        lcd.putstrat(0, linenr, line)
        linenr = linenr + 1
    else:
        response[config.KEY_MESSAGE] = f'[WARNING] Line {linenr} ("{line}") out of range 0-{lcd.num_lines - 1}.'
        response[config.KEY_STATE] = config.STATE_WARNING
        print(response[config.KEY_MESSAGE])
    # sleep(.3)
else:
    response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
    response[config.KEY_STATE] = config.STATE_ERR

return response

# Main
# Listen for incoming connections from the Domoticz Automation Event dzVents
print(f'{NAME} {VERSION}')

# Create the LCD object
lcd = set_lcd(LCD_I2C_ADDRESS, LCD_PIN_SDA, LCD_PIN_SCL, LCD_ROWS, LCD_COLS)

# Set the LCD display welcome text
set_lcd_welcome(NAME, VERSION)

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd as JSON object from the POST request
        # {"state":"on" or "off"}
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to update the LCD text.
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)
    
```

```
except OSError as e:  
    ledstatus.off()  
    cl.close()  
    print('[ERROR] Network Connection closed')
```

Enhancements

Few enhancement ideas.

Use a user variable or persistent data (dzVents) to store the text (only) input.

Use text input device to send an emergency message. This handled by the Automation script.

Use number input to set an 7-segment LED display.

TM1637 4-digit 7-segment LED Display

Description

This project displays and updates in regular intervals selective Domoticz sensor data on a 4-digit 7-segment LED display connected to a Pico W.

Solution


The Pico W web server listens to incoming HTTP POST requests.

The POST data is a JSON object with key:value pair(s) to set the TM1637 display:


```
{ "data":NNNN }
```

Domoticz uses an Automation Event dzVents, triggered by a switch or timer, to send data to the Pico W web server.

To get started using the TM1637, the display shows the Raspberry Pi Motherboard Internal Temperature.

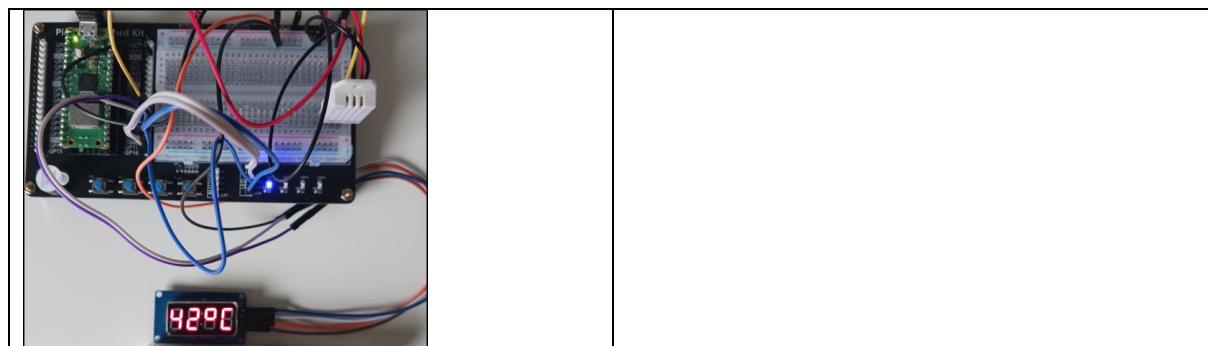


Block Diagram

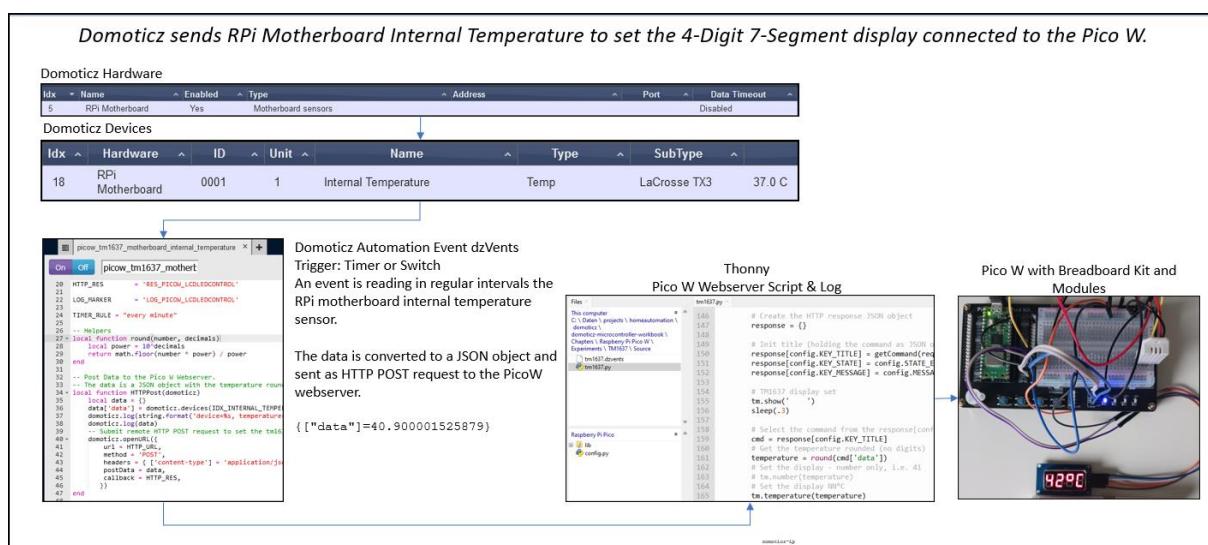

Wiring

| TM1637 I2C | Pico W |
|---------------|---------------------|
| VCC | VBUS (5V) (Pin #40) |
| SDA | GP20 (Pin #26) |
| SCL | GP21 (Pin #27) |
| GND | GND (Pin #38) |
| | |
| LED (blue) | Pico W |
| + (Anode) | GP16 (Pin #21) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

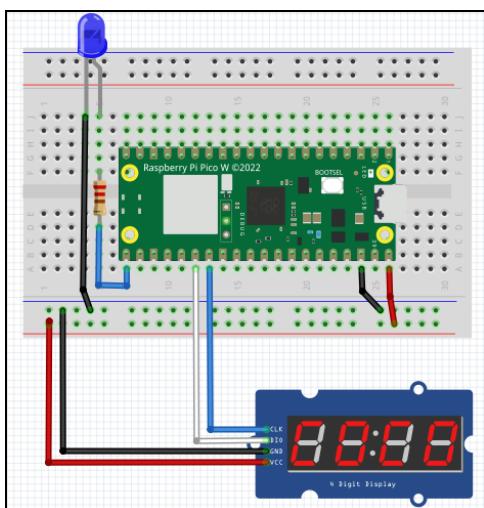

Domoticz Setup

Devices

The hardware “Motherboard sensors” is added and selective devices, like the Internal Temperature are added.

The other devices from the hardware Motherboard sensors are not used for this project.

After creating the device, the Domoticz devices list shows the entries:

```
...
IDX=18, Hardware=RPi Motherboard, ID=0001, Unit=1, Name=Internal Temperature,
Type=Temp, SubType=LaCrosse TX3, Data=38.4 C
...
```

Note

Only the Internal Temperature device is shown here

Automation Script

```
--[[[
File: tm1637_motherboard_internal_temperature.dzvents
Date: 20230304
Author: Robert W.B. Linn

Display the motherboard internal temperature on a TM1637 connected to the Pico W.
The Pico W runs a RESTful web server.
The HTTP POST request to the Pico W web server is a JSON object: {"data":NN}.
The NN is the temperature with 0 digit (integer).
The Pico W web server HTTP response is a JSON object with key:value pairs:
{["message"]="On", ["title"]={"data": "NN.N"}, ["status"]="OK"}
]]--]

-- Domoticz
local IDX_INTERNAL_TEMPERATURE = 18
local IDX_SWITCH = 16

local HTTP_URL          = 'http://picow-ip'
-- HTTP_POST_DATA = '{"data":"on"}'
local HTTP_RES           = 'RES_PICOW_LCDLEDCONTROL'
local LOG_MARKER         = 'LOG_PICOW_LCDLEDCONTROL'
local TIMER_RULE         = "every minute"

-- Helpers
local function round(number, decimals)
    local power = 10^decimals
    return math.floor(number * power) / power
end

-- Post Data to the Pico W web server.
-- The data is a JSON object with the temperature rounded: {"data":NN}
local function HTTPPost(domoticz)
    local data = {}
    data['data'] = domoticz.devices(IDX_INTERNAL_TEMPERATURE).temperature
    domoticz.log(string.format('device=%s, temperature=%.1f',
        domoticz.devices(IDX_INTERNAL_TEMPERATURE).name,
        domoticz.devices(IDX_INTERNAL_TEMPERATURE).temperature),
    domoticz.LOG_INFO)
    -- Submit remote HTTP POST request to set the tm1637
    domoticz.openURL({
        url = HTTP_URL, method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = data, callback = HTTP_RES,
    })
end

return {
    on = {
        devices = { IDX_SWITCH, IDX_INTERNAL_TEMPERATURE },
        timer = { TIMER_RULE },
        httpResponses = { HTTP_RES }
    },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
    execute = function(domoticz, item)
        if (item.isTimer) then
            HTTPPost(domoticz)
        end
        if (item.isDevice) then
            HTTPPost(domoticz)
        end
        if (item.isHTTPResponse) then
            if (item.isJSON) then
                local data = item.json

domoticz.log(string.format("status=%s,title=%s,message=%s", data.status, data.title,
data.message))
```

```
    end
    end
}
}
```

Web Server

Libraries

The MicroPython script uses the external MicroPython TM1637 library to control the TM1637.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Credit

Thanks for developing & sharing the [MicroPython TM1637](#) library.

MicroPython Script

```
"""
File:tm1637.py
Date:20230318
Author: Robert W.B. Linn

:description
Pico W RESTful web server listening for data from Domoticz event.
The incoming data is from a HTTP POST request with JSON object.
The JSON object has key:value pairs: {"data":NNNN}
LED1 is attached on the Pico Breadboard kit.

:log
Domoticz TM1637 v20230304
TM1637 init.
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command={'data': 40.90001}
HTTP Response={"title": {"data": 40.90001}, "message": "41°C", "status": "OK"}
Network connection closed

:wiring
TM1637 = Pico W
VCC = VBUS (5V) (red)
DIO = GP20 (Pin #26) (white)
CLK = GP21 (Pin #27) (Pink)
GND = GND (black)
"""

# Libraries
import time
from time import sleep
from machine import Pin
# Call server from server.py (must be uploaded to the picow)
from server import Server
# TM1637 lib stored in Pico W folder lib
import tm1637
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'Domoticz TM1637'
VERSION = 'v20230304'

# Create the LED1 (blue) object using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.off()

# TM1637 Constants
TM1637_I2C_ADDRESS = 0x27
```

```

TM1637_PIN_DIO = 20
TM1637_PIN_CLK = 21

# Create the TM1637 object by init the TM1637 with i2c.
# Example: init_tm1637(TM1637_I2C_ADDRESS, TM1637_PIN_DIO, TM1637_PIN_CLK)
# Return - TM1637 object
def init_tm1637(address, pindio, pinclk):
    try:
        # Init TM1637 object
        tm = tm1637.TM1637(clk=Pin(pinclk), dio=Pin(pindio))
        print("TM1637 init.")
        return tm
    except OSError as e:
        raise RuntimeError('[ERROR] TM1637 init.')

# TM1637 set display from the JSON object.
# cmd - Command from the key response[config.KEY_TITLE]
# Example: cmd['data']=41.3001
# Return - Temperature rounded
def set_tm1637(cmd, status):
    # Assign the command to the response title
    response[config.KEY_TITLE] = cmd

    # If the status is 1 (OK) then set the tm1637 with data.
    if status == 1:
        # Clear the display
        tm.show('      ')
        sleep(.3)

        # Get the temperature rounded (no digits) from the JSON key 'data'
        temperature = round(cmd['data'])

        # Set the display NN°C
        tm.temperature(temperature)

        # Not Used = Just to show
        # Set the display - number only, i.e. 41
        # tm.number(temperature)

        # Set the response
        # Convert the KEY_TITLE from JSON object to a string
        response[config.KEY_MESSAGE] = str(temperature) + "°C"
        response[config.KEY_STATE] = config.STATE_OK
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

    return response

# Main
# Listen for incoming connections from the Domoticz Automation Event dzVents
print(f'{NAME} {VERSION}')

# Set the TM1637 display
tm = init_tm1637(TM1637_I2C_ADDRESS, TM1637_PIN_DIO, TM1637_PIN_CLK)
tm.show('1958')
#tm.show('      ')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

"""

Main Loop
"""
while True:
    try:

```

```
# Get client connection and the request data
cl, request = network.get_client_connection(server)

# Get the cmd to set the LCD text as JSON object from the POST request
cmd, status = network.parse_post_request(request)

# Create the HTTP response JSON object
response = {}

# Set the display with data from the command
response = set_tm1637(cmd, status)

# Send the response to Domoticz and close the connection (wait for new)
network.send_response(cl, response, True)

except OSError as e:
    ledstatus.off()
    cl.close()
    print('[ERROR] Network Connection closed')
```

Servo Motor

Description

This project enables to control, via Domoticz, a servo motor connected to the Pico W.

Ideas for Use

- Use as a switch.

Solution

The Pico W is built in a Pico Breadboard Kit.

The servo, type Tower Pro Micro Servo 9g SG90, is connected to the Pico W.

A RESTful web server runs on the Pico W.

If the web server network connection is successful, the Pico W onboard LED is ON else OFF indicating an error.

The web server listens to incoming client connections, which are HTTP POST requests.

The POST data is a JSON object with the key:value pair to set the angle (position) of the servo:

```
{"angle":NNN}
```

The angle is between 0-180 degrees.

A Domoticz switch device type dimmer sets the position of the servo motor (0-100% is converted to 0-180 degrees).

If the level value changes, a Domoticz Automation Event dzVents submits the HTTP POST request to the Pico W web server.


The web server sets the servo angle.

If the dimmer is set to off, the angle is set to 0. If set to on, the last level is set as shown by the dimmer slider.

Flow

1. Create the Domoticz Switch device from the hardware “Dummy” (Create Virtual Sensors),
2. Edit the Switch device widget and set the type to Dimmer.
The Switch icon is also changed (as a test),
3. Run the Pico W web server (Thonny),
4. In Domoticz change the dimmer level of the switch device,
5. The automation event is triggered and converts the dimmer level 0-100% to a servo motor angle 0-180 deg. The angle is used as post-data for the HTTP POST request to the Pico W web server,
6. After receiving data, the Pico W web server set the servo motor angle and submits an HTTP POST request back to Domoticz with the status. The LED1 is on whilst setting the servo motor angle.


Block Diagram

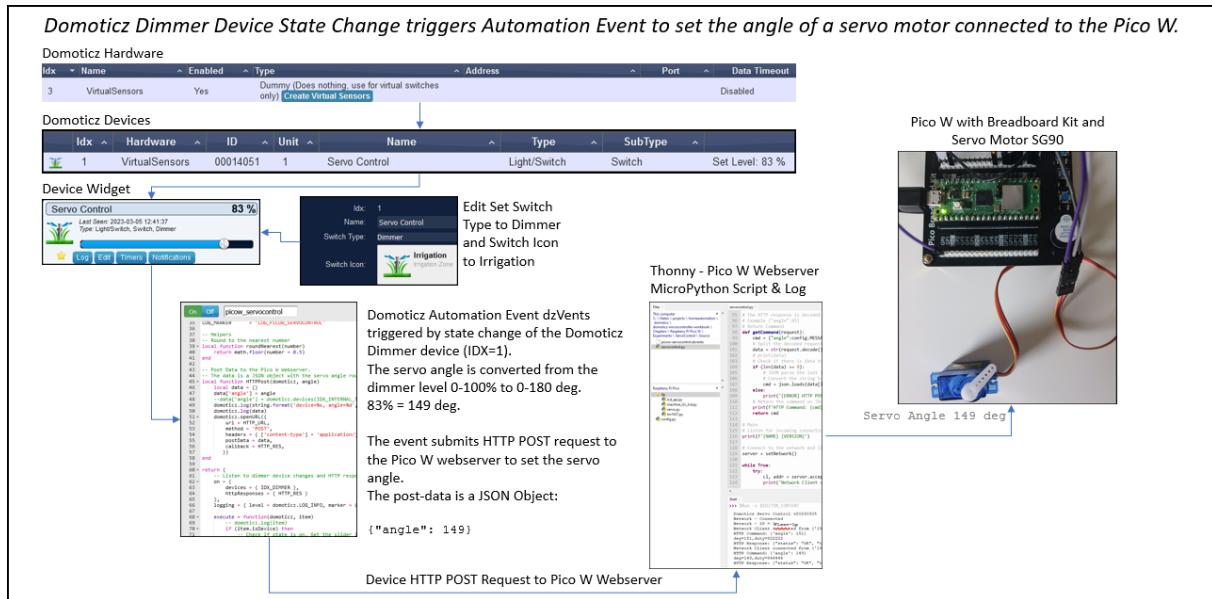

Wiring

| Servo Motor Tower Pro Micro Servo 9g SG90 | Pico W |
|--|----------------|
| VCC | VBUS (5V) |
| Signal | GP0 (Pin #1) |
| GND | GND (Pin #38) |
| LED (blue) | Pico W |
| + (Anode) | GP16 (Pin #21) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

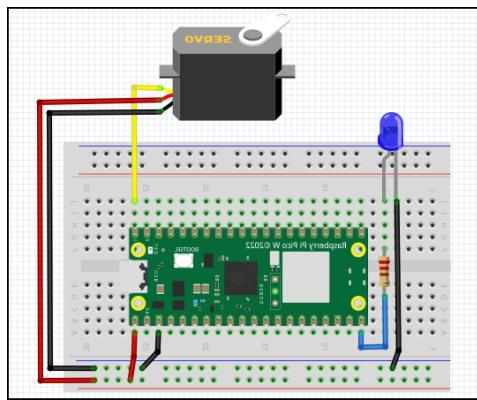

Domoticz Setup

Device

From the Domoticz hardware Dummy, a switch device is added, and its type changed to dimmer.

After creating the device, the Domoticz devices list shows the entry:

```
IDX=1, Hardware=VirtualSensors, ID=00014051, Unit=1, Name=Servo Control,
Type=Light/Switch, SubType=Switch, Date=Set Level: 28 %
```

Automation Script

```
-- [[
File: servocontrol.dzvents
Date: 20230305
Author: Robert W.B. Linn

Display the motherboard_internal_temperature on a TM1637 connected to the Pico W.
The Pico W runs a RESTful web server.
The HTTP POST request to the Pico W web server is a JSON object: {"angle":NNN}.
The NN is the angle of the servo to set. The angle is converted from the dimmer
range 0-100% to 0-180 deg.
The Pico W web server HTTP response is a JSON object with key:value pairs:
{"status": "OK", "title": "{\"angle\": 133}", "message": "133"}
]]--


-- Domoticz
local IDX_SWITCH = 16
local IDX_DIMMER = 1

local HTTP_URL      = 'http://picow-ip'
-- HTTP_POST_DATA   = '{"angle":90}'
local HTTP_RES       = 'RES_PICOW_SERVOCONTROL'
local LOG_MARKER     = 'LOG_PICOW_SERVOCONTROL'

-- Round to the nearest number
local function roundNearest(number)
    return math.floor(number + 0.5)
end

-- Post Data to the Pico W web server.
-- The data is a JSON object with the servo angle rounded: {"angle":NNN}
local function HTTPPost(domoticz, angle)
    local data = {}
    data['angle'] = angle
    --data['angle'] = domoticz.devices(IDX_INTERNAL_TEMPERATURE).temperature
    domoticz.log(string.format('device=%s,
angle=%d', domoticz.devices(IDX_SWITCH).name, angle), domoticz.LOG_INFO)
    domoticz.log(data)
    domoticz.openURL({
        url = HTTP_URL,
        method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = data,
        callback = HTTP_RES,
    })
end

return {
    -- Listen to dimmer device changes and HTTP responses
    on = {
        devices = { IDX_DIMMER },
        httpResponses = { HTTP_RES }
```

```

        },
logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },

execute = function(domoticz, item)
    -- domoticz.log(item)
    if (item.isDevice) then
        -- Check if state is on. Get the slider level to set the angle.
        if (item.state == 'On') then
            -- Get the level 0 - 100 %
            level = tonumber(item.levelVal)
            -- Convert the level to angle 0 - 180 deg
            angle = roundNearest((180 / 100) * level)
        end
        -- Check if the state is Off (the off button pressed)
        if (item.state == 'Off') then angle = 0 end

        -- Log
        domoticz.log(string.format("device=%s, state=%s, levelVal=%d, angle=%d",
item.name, item.state, item.levelVal, angle))

        -- Set the servo angle
        HTTPPost(domoticz, angle)
    end

    if (item.isHTTPResponse) then
        -- domoticz.log(item)
        if (item.isJSON) then
            -- {"status": "OK", "title": "{\"angle\": 133}", "message": "133"}
            local data = item.json
            domoticz.log(string.format("status=%s, title=%s, message=%s",
data.status, data.title, data.message))
        end
    end
end
}

```

Domoticz Log

```

2023-03-05 14:10:59.616 VirtualSensors: Light/Switch (Servo Control)
2023-03-05 14:10:59.610 Status: User: admin initiated a switch command (1/Servo
Control/Set Level)
2023-03-05 14:10:59.705 Status: dzVents: Info: Handling events for: "Servo
Control", value: "On"
2023-03-05 14:10:59.705 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: ----- Start
internal script: picow_servocontrol: Device: "Servo Control (VirtualSensors)", 
Index: 1
2023-03-05 14:10:59.705 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: device=Servo
Control, state=On, levelVal=45, angle=81
2023-03-05 14:10:59.706 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: device=Pico
W LED1 Control, angle=81
2023-03-05 14:10:59.706 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL:
{["angle"]=81}
2023-03-05 14:10:59.706 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: -----
Finished picow_servocontrol
2023-03-05 14:10:59.707 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-03-05 14:11:00.079 Status: dzVents: Info: Handling httpResponse-events for:
"RES_PICOW_SERVOCONTROL"
2023-03-05 14:11:00.079 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: ----- Start
internal script: picow_servocontrol: HTTPResponse: "RES_PICOW_SERVOCONTROL"
2023-03-05 14:11:00.079 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: status=OK,
title={"angle": 81}, message=81
2023-03-05 14:11:00.079 Status: dzVents: Info: LOG_PICOW_SERVOCONTROL: -----
Finished picow_servocontrol

```


Web Server

Libraries

The MicroPython script uses the library *servo.py* to set the angle of the servo motor. The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

```
"""
File: servo.py
Date: 20230305
Author: Robert W.B. Linn

Class to control a servo motor.
Tested with a Tower Pro Micro Servo 9 g SG90.
Min and max duty default values are obtained via try out.
Min angle is 0, max angle is 180.
Servo signal pin is default Pico Pin GP0 (Pin #1).
"""

# Imports
import machine
from machine import Pin, PWM

# Servo Class
class Servo:
    """
    Init the servo with defaults.

    :parameter long MIN_DUTY
    :parameter long MAX_DUTY
    :parameter int pin
    :parameter int frequency
    """
    def __init__(self, MIN_DUTY=500000, MAX_DUTY=2500000, pin=0, frequency=50):
        self.pwm = machine.PWM(machine.Pin(Pin))
        self.pwm.freq(frequency)
        self.MIN_DUTY = MIN_DUTY
        self.MAX_DUTY = MAX_DUTY

    """
    Set the servo angle between 0 - 180 degrees.

    :parameter int angle
        Set the angle of the servo between 0 - 180 degrees.

    :return flat duty_ns
    """
    def setAngle(self, angle):
        if angle < 0:
            angle = 0
        elif angle > 180:
            angle = 180
        duty_ns = int(self.MAX_DUTY - angle * (self.MAX_DUTY-self.MIN_DUTY)/180)
        # print(duty_ns)
        self.pwm.duty_ns(duty_ns)
        return duty_ns
```

MicroPython Script

```
"""
File: servocontrol.py
Date: 20230318
Author: Robert W.B. Linn

Pico W RESTful web server listening for data from Domoticz event.
The incoming data is from a HTTP POST request with JSON object to set the position
(angle) of a servo motor 0-180 degrees.

:log
Domoticz Servo Control v20230311
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command={'angle': 180}
Servo position deg=180,duty=500000
HTTP Response={"status": "OK", "title": {"angle": 180}, "message": "180"}
Network connection closed

:wiring
Servo = Pico W
VCC = VBUS (5V) (red)
Signal = GPO (Pin #1) (yellow)
GND = GND (black)
"""

# Libraries
import time
from time import sleep
from machine import Pin
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Servo lib stored in Pico W folder lib
from servo import Servo
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'Domoticz Servo Control'
VERSION = 'v20230311'

# Create the LED1 (blue) object using config.py settings
led1 = Pin(2, Pin.OUT)
led1.off()

# Create the servo object with the default (GPO (Pin #1))
servo = Servo()

# Set the servo pos and log
def set_servo_position(pos):
    duty = servo.set_angle(pos)
    print("Servo position deg=" + str(pos) + ",duty=" + str(duty))

"""

Handle the request to set the servo pos between 0-180 degrees.
"""
def handle_request(cmd, status):
    # Assign the command to the response title
    response[config.KEY_TITLE] = cmd

    # If the status is 1 (OK) then set the lcd display with the sensor data.
    if status == 1:
        led1.on()
```

```

# Get the angle of the servo to set
angle = cmd['angle']

# Set the servo pos
set_servo_position(angle)

# Set the response
response[config.KEY_STATE] = config.STATE_OK
response[config.KEY_MESSAGE] = str(angle)

led1.off()
else:
    response[config.KEY_STATE] = config.STATE_ERR
    response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

# Return the response which is send to Domoticz
return response

# Main
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd to set the LCD text as JSON object from the POST request
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to set the servo pos
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')

```

Thonny Log

```

Domoticz Servo Control v20230305
Network - Connected
Network - IP = picow-ip
Network Client connected from ('client-ip', 52702)
HTTP Command: {'angle': 151}
deg=151,duty=822222
HTTP Response: {"status": "OK", "title": "{\"angle\": 151}", "message": "151"}
Network Client connected from ('client-ip', 46286)
HTTP Command: {'angle': 149}
deg=149,duty=844444
HTTP Response: {"status": "OK", "title": "{\"angle\": 149}", "message": "149"}

```


Enhancement Ideas

Some ideas whilst exploring setting the servo motor. These depend of course on solution.

- Domoticz selector switch with angle positions, like 0, 45, 90, 135 and 180.
- Show the angle on a 4-digit 7-segment display TM1637.
- Use a linear servo to control a throttle or switch.

RFID Reader

Description

This project reads the UID of an RFID card and sends the data to Domoticz text device.

Ideas for Use

- Access control,
- Open garage door.

Solution


The Pico W web server listens to card readings of the RFID-RC522 sensor connected. An Domoticz text device is updated with the card UID as decimal value using HTTP API/JSON request to the Domoticz server.

The log of the Domoticz text device lists all the cards read.

The time between the card readings must be greater threshold (default 2 seconds) to avoid multiple readings and updates of the Domoticz text device.

For a later version, its planned to send the RFID card data, beside the RFID card UID. This could be done via custom event.


Block Diagram

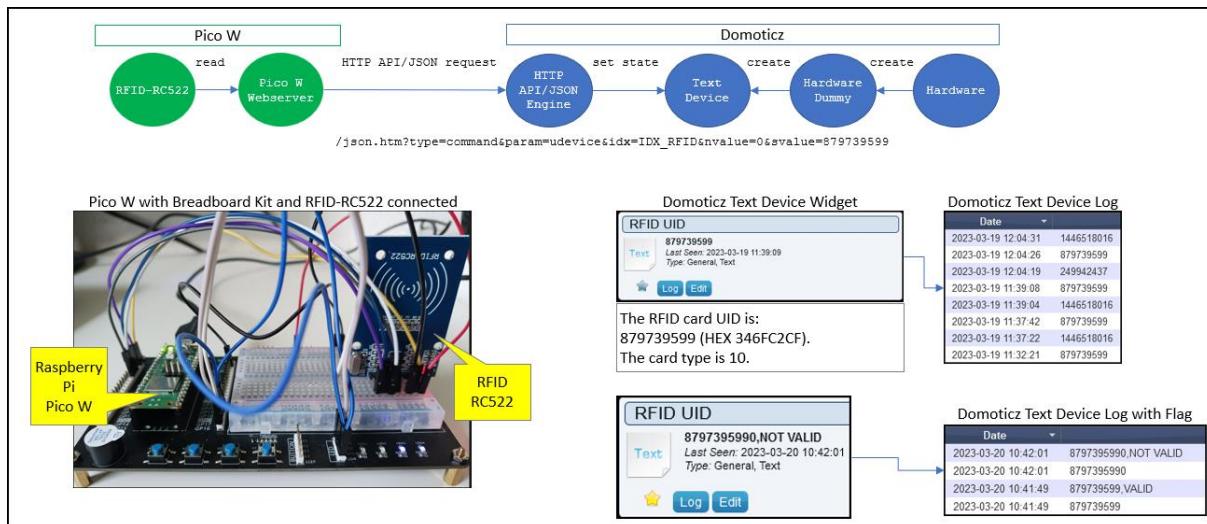

Wiring

| RFID-RC522 | Pico W |
|-------------------|----------------|
| VCC | 3V3 (Pin #36) |
| RST | GP0 (Pin #1) |
| GND | GND (Pin #38) |
| IRQ | Not connected |
| MISO | GP4 (Pin #6) |
| MOSI | GP3 (Pin #5) |
| SCK | GP2 (Pin #4) |
| SDA | GP1 (Pin #2) |
| | |
| LED (blue) | Pico W |
| + (Anode) | GP16 (Pin #21) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

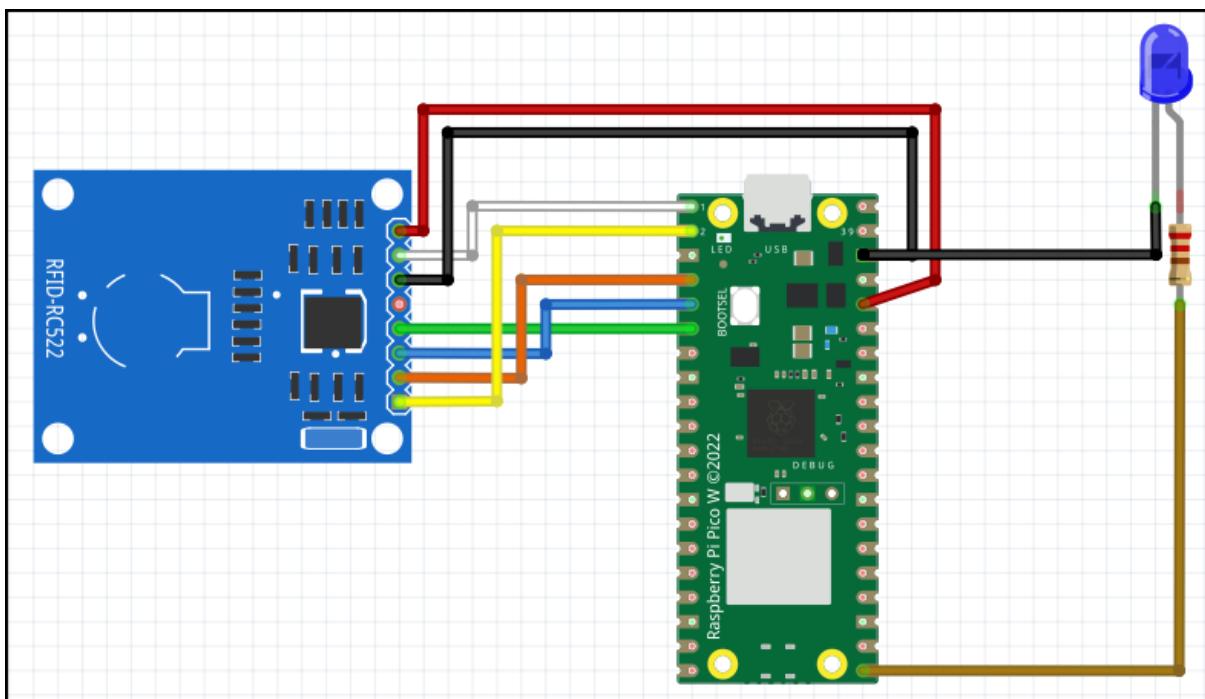

Domoticz Setup

Device

A text device is used to store the card UID as a decimal value i.e., 879739599.

From the Domoticz hardware Dummy, add a text device:

Create a virtual sensor with Name: RFID UID, Sensor Type: Text

After creating the device, the Domoticz devices list shows the entry:

```
Idx=27, Hardware=VirtualSensors, ID=00082027, Unit=1, Name=RFID UID, Type=General,  
SubType=Text, Data>Hello World
```

Device Update

The device is updated via HTTP API/JSON request for a Text sensor. This is handled by the Pico W web server.

```
http://domoticz-  
ip:port/json.htm?type=command&param=udevice&idx=IDX&nvalue=0&svalue=TEXT
```

Web Server

Libraries

The MicroPython script uses the external library PiPicoRFID to read the card.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Credit

Thanks for developing & sharing the [PiPicoRFID](#) library.

MicroPython Script

```
"""  
File: rfid.py  
Date: 20230319  
Author: Robert W.B. Linn  
  
:description  
Read the UID of an RFID card and send to Domoticz text device.  
The Domoticz text device is updated using HTTP API/JSON request to the Domoticz  
server.  
The log of the Domoticz text device lists all the cards read.  
The time between the card readings must be greater threshold to avoid multiple  
readings and updates of the Domoticz text device.  
The threshold in seconds is defined as constant MIN_DELTA_TIME = 2.  
  
:notes  
Pico Breadboard Kit is used to wire up the RFID.  
Pico Breadboard Kit LED1 is used as status LED when requesting RFID data and  
updating domoticz.  
Configuration stored in config.py, ensure to upload to the picow.  
For a later version, its planned to send the RFID card data, beside the RFID card  
UID. This could be done via custom event.  
  
:credits  
The MFRC522 library PiPicoRFID from Saket Upadhyay (https://github.com/Saket-Upadhyay/PiPicoRFID).
```

```
The base code is from https://github.com/wendlers/micropython-mfrc522.

:log
RFID v20230319
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Init RFID Module=rp2
CARD DETECTED: tag_type=10, uid_hex=346FC2CF, uid_dec=879739599
Send GET request url=http://domoticz-
ip:8080/json.htm?type=command&param=udevice&idx=27&nvalue=0&svalue=879739599
Send GET request status=OK
CARD DETECTED: tag_type=10, uid_hex=56381D00, uid_dec=1446518016
Send GET request url=http://domoticz-
ip:8080/json.htm?type=command&param=udevice&idx=27&nvalue=0&svalue=1446518016
Send GET request status=OK

:wiring
RFID-RC522 Module = Pico W
VCC = 3.3V
RST = GPO
GND = GND
IRQ = Not connected
MISO = GP4
MOSI = GP3
SCK = GP2
SDA = GP1
"""

"""
Imports
"""
from machine import Pin
from utime import sleep
import time
# RFID
import mfrc522
from os import uname
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'RFID v20230319'

# Create the led object indicating RFID read in progress
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

"""
Domoticz
"""
# IDX text device
IDX_RFID = 27
# URL to update the text device
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# The svalue is added in the main loop after getting the data from the RFID.
URL_DOM = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(IDX_RFID) + "&nvalue=0&svalue="

"""
RFID
"""
# Flag to read the data
# Not used as only the card uid is used
READ_DATA = False

"""
```

```

RFID Timer
"""
first_time_reading = True
# Delta time between readings in seconds
MIN_DELTA_TIME = 2
# Start time in seconds
start_time = time.time()
# Read_time
read_time = start_time
# Previous UID NOT USED
uid_previous = -1

"""
RFID object init

:return object mfrc522
"""
def init_rfid():
    print(f'Init RFID Module={str(uname()[0])}')
    return mfrc522.MFRC522(sck=2, miso=4, mosi=3, cs=1, rst=0)
    # print(f'Place card before reader. READ ARRD: 0x08')

"""
Read the RFID data (optional)

:param object rdr
    Card reader object

:return string hexstr
    Card data as hex string

:example
read_data(rdr)
RAW DATA: ['0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0',
'0x0', '0x0', '0x0', '0x0', '0x0', '0x0']
['0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0',
'0x0', '0x0', '0x0', '0x0', '0x0', '0x0', '0x0']
"""
def read_data(rdr):
    hexstr = []
    # Get the card data (optional)
    if rdr.select_tag(raw_uid) == rdr.OK:
        key = [0xFF, 0xFF, 0xFF, 0xFF, 0xFF, 0xFF]
        auth = rdr.auth(rdr.AUTHENT1A, 8, key, raw_uid)
        if rdr.auth(rdr.AUTHENT1A, 8, key, raw_uid) == rdr.OK:
            data = rdr.read(8)
            # print(data) [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0]
            if data is not None:
                for i in data:
                    hexstr.append(hex(i))
                print("RAW DATA: " + str(hexstr))
                rdr.stop_crypto1()
            else:
                print("AUTH ERR")
        else:
            print("Failed to select tag")
    return hexstr

"""
Main
"""
print(f'{VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object

```

```

server = network.connect()

# Init the RFID module
rdr = init_rfid()

while True:

    # Wait for RFID card to read.
    # If RFID card found, send the card UID as decimal to Domoticz text device
    # Read the rfid card data
    (stat, tag_type) = rdr.request(rdr.REQIDL)
    # print(stat)

    # If the reader status is OK, then get the card type and uid
    if stat == rdr.OK:
        # LED1 indicator on
        led1.value(1)

        # Get the reading status and uid as raw data
        (stat, raw_uid) = rdr.anticoll()

        # If the status is OK, lets send the UID to Domoticz
        if stat == rdr.OK:
            # Get the tag type, i.e. 10
            tagtype = f'{tag_type:0X}'

            # Get the card uid as hex (each byte 2 hex size in uppercase) and dec,
            i.e. 56381D00 = 1446518016
            # The dec value is send to domoticz
            uid_hex =
f'{raw_uid[0]:0>2X}{raw_uid[1]:0>2X}{raw_uid[2]:0>2X}{raw_uid[3]:0>2X}'
            uid_dec = int(uid_hex, 16)
            print(f'CARD DETECTED: tag_type={tagtype}, uid_hex={uid_hex},
uid_dec={uid_dec}')

            # Read_time and check the delta time in seconds between the readings
            # This to avoid multiple text device updates within (milli)seconds
            read_time = time.time()
            delta_time = read_time - start_time
            # print(f'{start_time}, {read_time}, {delta_time}')

            # Update domoticz if the delta time exceeded or if first time reading
            if delta_time > MIN_DELTA_TIME or first_time_reading:
                first_time_reading = False
                uid_previous = uid_dec
                start_time = read_time

                # Submit Domoticz HTTP API/JSON GET request to update the device
                # The uid card id decimal value is submitted to the Domoticz text
device
                network.send_get_request(URL_DOM + str(uid_dec))

            # Read data is not used and to be developed further like handling
auth error
            if READ_DATA:
                data = read_data(rdr)
                # network.send_get_request(URL_DOM + data)

            # LED1 indicator off
            led1.value(0)

```

Thonny Log

```

RFID v20230319
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Init RFID Module=rp2

```

```
CARD DETECTED: tag_type=10, uid_hex=346FC2CF, uid_dec=879739599
Send GET request url=http://domoticz-
ip:port:port/json.htm?type=command&param=udevice&idx=27&nvalue=0&svalue=879739599
Send GET request status=OK
```

Enhancement Ideas

Some ideas whilst exploring the card reader.

Device Change

Use an Automation Event dzVents to handle changes of the text device, i.e., the card or token UID received from the Pico W.

The card or token UID can be checked to trigger any action (see next enhancement idea).
The action could be to set a switch or send a notification.

Automation Script

```
--[[[
File: rfid_device_change.dzvents
Date: 20230320
Author: Robert W.B. Linn

:description
Handle the rfid text device state change triggered by the Pico W web server
submitting HTTP API/JSOM requests.

2023-03-19 11:37:33.558 Status: dzVents: Info: LOG_PICOW_RFID: ----- Start
internal script: picow_rfid: Device: "RFID UID (VirtualSensors)", Index: 27
2023-03-19 11:37:33.558 Status: dzVents: Info: LOG_PICOW_RFID: Device RFID UID:
statechange=1446518016
2023-03-19 11:37:33.558 Status: dzVents: Info: LOG_PICOW_RFID: Card UID 1446518016
is WRONG.
2023-03-19 11:37:33.558 Status: dzVents: Info: LOG_PICOW_RFID: ----- Finished
picow_rfid
2023-03-19 11:37:42.775 Status: dzVents: Info: Handling events for: "RFID UID",
value: "879739599"
2023-03-19 11:37:42.775 Status: dzVents: Info: LOG_PICOW_RFID: ----- Start
internal script: picow_rfid: Device: "RFID UID (VirtualSensors)", Index: 27
2023-03-19 11:37:42.775 Status: dzVents: Info: LOG_PICOW_RFID: Device RFID UID:
statechange=879739599
2023-03-19 11:37:42.775 Status: dzVents: Info: LOG_PICOW_RFID: Card UID 879739599
is OK.
2023-03-19 11:37:42.775 Status: dzVents: Info: LOG_PICOW_RFID: ----- Finished
picow_rfid
]]--]

-- Domoticz IDX of the text device state is set by the Pico W web server
IDX_DEVICE = 27

UID_CARD_A = '879739599'

LOG_MARKER = "LOG_PICOW_RFID"

return {
    on = { devices = { IDX_DEVICE } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
    execute = function(domoticz, device)
        domoticz.log(string.format('Device %s: statechange=%s', device.name,
device.state), domoticz.LOG_INFO)
        local uid = device.state
        if uid == UID_CARD_A then
            domoticz.log(string.format('Card UID %d is OK.', uid))
        else
            domoticz.log(string.format('Card UID %d is WRONG.', uid))
        end
    end
}
```

Check & Additional Log

If the text of the device has not changed, no new log entry is added for the device.

This means if the same card or token UID is read, but not logged.

To ensure a new log entry is added every time a card is read, a flag VALID or NOT VALID could be added to the device text.

This solution provides therefor an additional log entry and a check of the UID is valid or not.

| Date | Data |
|---------------------|----------------------|
| 2023-03-20 10:42:01 | 8797395990,NOT VALID |
| 2023-03-20 10:42:01 | 8797395990 |
| 2023-03-20 10:41:49 | 879739599,VALID |
| 2023-03-20 10:41:49 | 879739599 |

Automation Script

```
--[[[
File: rfid_uid_check.dzvents
Date: 20230320
Author: Robert W.B. Linn

:description
Handle the rfid text device state change triggered by the Pico W web server
submitting HTTP API/JSOM requests.

:log
2023-03-20 10:41:49.155 Status: dzVents: Info: Handling events for: "RFID UID",
value: "879739599"
2023-03-20 10:41:49.155 Status: dzVents: Info: LOG_PICOW_RFID: ----- Start
internal script: picow_rfid: Device: "RFID UID (VirtualSensors)", Index: 27
2023-03-20 10:41:49.155 Status: dzVents: Info: LOG_PICOW_RFID: Device RFID UID:
statechange=879739599
2023-03-20 10:41:49.155 Status: dzVents: Info: LOG_PICOW_RFID: Card UID 879739599
is VALID.
2023-03-20 10:41:49.156 Status: dzVents: Info: LOG_PICOW_RFID: ----- Finished
picow_rfid
2023-03-20 10:41:49.156 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-03-20 10:41:49.204 Status: [web:8080] Incoming connection from: ::1
2023-03-20 10:41:49.246 Status: dzVents: Info: Handling events for: "RFID UID",
value: "879739599,VALID"
2023-03-20 10:41:49.246 Status: dzVents: Info: LOG_PICOW_RFID: ----- Start
internal script: picow_rfid: Device: "RFID UID (VirtualSensors)", Index: 27
2023-03-20 10:41:49.246 Status: dzVents: Info: LOG_PICOW_RFID: Device RFID UID:
statechange=879739599,VALID
2023-03-20 10:41:49.246 Status: dzVents: Info: LOG_PICOW_RFID: ----- Finished
picow_rfid
2023-03-20 10:42:01.345 Status: dzVents: Info: Handling events for: "RFID UID",
value: "8797395990"
2023-03-20 10:42:01.345 Status: dzVents: Info: LOG_PICOW_RFID: ----- Start
internal script: picow_rfid: Device: "RFID UID (VirtualSensors)", Index: 27
2023-03-20 10:42:01.345 Status: dzVents: Info: LOG_PICOW_RFID: Device RFID UID:
statechange=8797395990
2023-03-20 10:42:01.345 Status: dzVents: Info: LOG_PICOW_RFID: Card UID 8797395990
is NOT VALID.
2023-03-20 10:42:01.345 Status: dzVents: Info: LOG_PICOW_RFID: ----- Finished
picow_rfid
2023-03-20 10:42:01.346 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-03-20 10:42:01.430 Status: dzVents: Info: Handling events for: "RFID UID",
value: "8797395990,NOT VALID"
2023-03-20 10:42:01.431 Status: dzVents: Info: LOG_PICOW_RFID: ----- Start
internal script: picow_rfid: Device: "RFID UID (VirtualSensors)", Index: 27
2023-03-20 10:42:01.431 Status: dzVents: Info: LOG_PICOW_RFID: Device RFID UID:
statechange=8797395990,NOT VALID
2023-03-20 10:42:01.431 Status: dzVents: Info: LOG_PICOW_RFID: ----- Finished
picow_rfid
]]--]

-- Domoticz IDX of the text device state is set by the Pico W web server
local IDX_DEVICE = 27
-- Card UID to verify
local UID_CARD_A = '879739599'
local FLAG_VALID = 'VALID'
local FLAG_NOT_VALID = 'NOT VALID'
-- Log marker
local LOG_MARKER = "LOG_PICOW_RFID"

-- Add a flag VALID or NOT VALID to the device state.
-- If the uid of the device is not changed, no new log entry is set.
-- Note the use of openurl with http api/json get request.
```

```
-- This updates the text of the device immediate, whereas dzvents updateText needs
more time.
local function UpdateDevice(domoticz, device, state)
    -- Define the new svalue with uid,state
    local svalue = string.format('%s,%s', device.text, state)
    -- Define the url for the http api/json get request
    local url =
string.format('http://localhost:8080/json.htm?type=command&param=udevice&idx=%d&nva
lue=0&svalue=%s', device.idx, svalue)
    -- Replace space by %20 in the url
    url = string.gsub(url, ' ', '%20')
    -- Submit the http get request
    domoticz.openURL(url)
    -- Optional return the new device svalue
    return svalue
end

-- Handle two device state changes:
-- First state change triggered by the Pico W web server with the card UID only.
-- Second state change by this event after adding the flag to the UID to add as
device log entry uid,flag.
-- If the card UID only is used, no new device log entry is added.
-- By using a flag Domoticz notices a text change and adds a log entry.
return {
    on = {
        devices = { IDX_DEVICE }
    },
    logging = {
        level = domoticz.LOG_INFO, marker = LOG_MARKER
    },
    execute = function(domoticz, device)
        domoticz.log(string.format('Device %s: statechange=%s', device.name,
device.state), domoticz.LOG_INFO)
        -- Check if the device state contains the flag uid,flag
        if string.find(device.state, ",") == nil then
            -- Get the UID
            uid = device.state
            -- Check the uid for any action
            if uid == UID_CARD_A then
                domoticz.log(string.format('Card UID %d is %s.', uid, FLAG_VALID))
                UpdateDevice(domoticz, device, FLAG_VALID)
                -- Trigger any action ...
                else
                    domoticz.log(string.format('Card UID %s is %s.', uid, FLAG_NOT_VALID))
                    UpdateDevice(domoticz, device, FLAG_NOT_VALID)
            end
            end
        end
    }
}
```

TM1638 LED&KEY

Description

This project explores how to use the 8-digit TM1638 seven segment 8 LEDs and 8 Push buttons component (TM1638 LED&KEY) with Domoticz.

Ideas for Use

This component offers a variety of applications with Domoticz. Just a few to mention are


- Devices monitor using up-to 8 LEDs as indicators,
- Push buttons to set the setpoint of up-to 8 thermostats or turn light on/off,
- Segment display to display thermostat setpoint changes or temperatures or server sensor data,
- and many more...

Solution

A two-way communication can be used, either the Pico W web server

- listens to HTTP GET or POST requests triggered by Domoticz (Domoticz to Pico W)
or
- sends HTTP API/JSON requests to Domoticz to update a device or trigger an Automation Event, like a dzVents Custom Event (Pico W to Domoticz)


Block Diagram

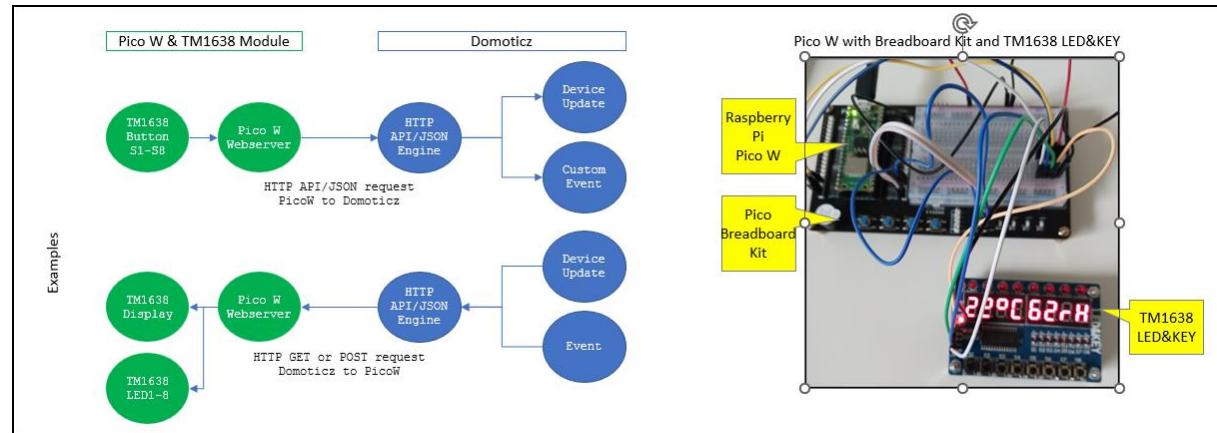

Wiring

| TM1638 LED&KEY Module | Pico W |
|-----------------------|----------------|
| VCC | 3V3 (Pin #36) |
| GND | GND (Pin #38) |
| STB | GP13 (Pin #17) |
| CLK | GP14 (Pin #19) |
| DIO | GP15 (Pin #20) |

Circuit Diagram

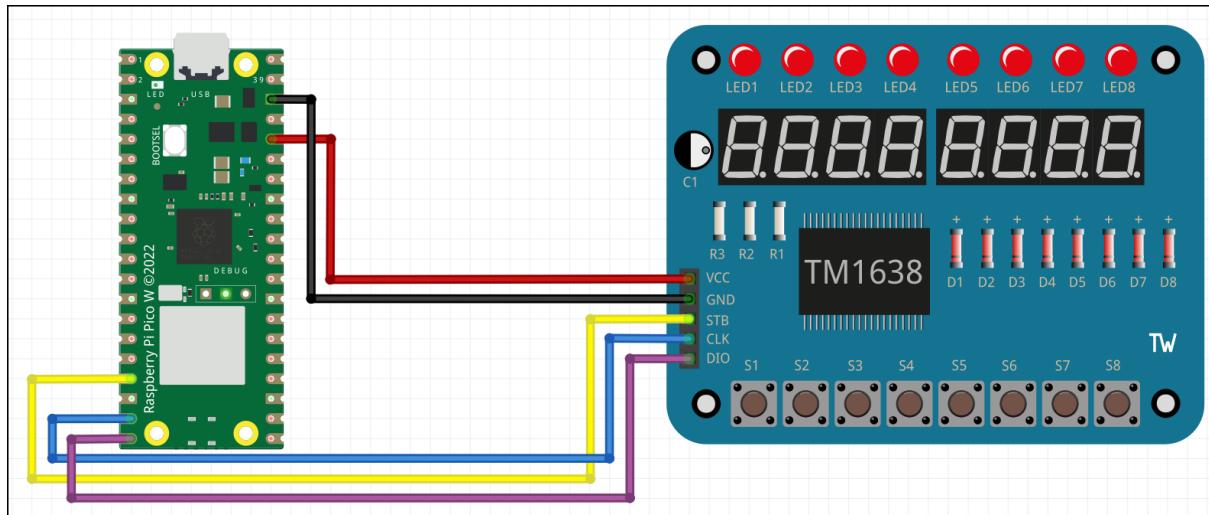

Domoticz Setup

The Domoticz device(s) or Domoticz Automation Event(s) used, depend on the solution developed.

Several basic projects have been developed which can be a base for solutions using the TM1638 LED&KEY component.

Web Server

Libraries

The MicroPython script(s) uses a modified version (by the author of this book) of the external MicroPython TM1638 LED display driver for 8x 7-segment decimal LED components with 8x individual LEDs and 8x push buttons.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Credit

Thanks for developing & sharing the [TM1638 LED driver](#).

MicroPython Script

There are several projects developed, each having their own script.

All scripts are using the class Server from server.py (in folder lib on the Pico W) and the configuration script config.py

Projects

Next some simple projects to explore how to use the TM1638 LED&KEY component.

LED1-8 set by Domoticz Switch On/Off

Pico W RESTful web server listening to control LED1-8 of the TM1638LEDKEY component via Domoticz Switch.

Commands set via HTTP GET request with HTTP response JSON object.

The command can be in any case as converted to lowercase.

Communication: Domoticz to Pico W.

MicroPython Script

```
"""
File:tm1638-ledcontrol-get.py
Date:20230321
Author: Robert W.B. Linn

:description
Pico W RESTful web server listening to control LED1-8 of the TM1638LEDKEY module
via Domoticz Switch.
Commands set via HTTP GET request with HTTP response JSON object.
The command can be in any case as converted to lowercase.

:commands
N = LED number 1 to 8 as displayed on the module.

LED ON
HTTP Request:http://picow-ip/led/N/on
HTTP response: {"status": "OK", "title": "/led/N/on", "message": "On"}

LED OFF
HTTP Request:http://picow-ip/led/1/off
HTTP response: {"status": "OK", "title": "/led/N/off", "message": "Off"}

LED STATE
HTTP Request:http://picow-ip/led/1/state
HTTP response: {"status": "OK", "title": "/led/N/state", "message": "On"}

In case of an error:
HTTP response: {"status": "ERROR", "title": "/led/N/x", "message": "Unknown
command."}

Example using curl to turn LED1 on:
curl -v http://picow-ip/led/1/on

:log
TM1638-LEDControl-GET v20230321
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command=/led/8/on
HTTP Response={"title": "/led/8/on", "message": "on", "status": "OK"}
Network connection closed
Network client connected from client-ip
```

```

HTTP Command=/led/8/state
HTTP Response={"title": "/led/8/state", "message": "On", "status": "OK"}
Network connection closed
"""

# Libraries
import network
import socket
import time
from machine import Pin
# Server class from server.py
from server import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config
# TM1638: credits to https://github.com/mcauser/micropython-tm1638
import tm1638ex

# Constants
NAME = 'TM1638-LEDControl-GET'
VERSION = 'v20230321'

# URL params to switch LED1-8 on or off or request state
CMD_LED_ON = 'on'
CMD_LED_OFF = 'off'
CMD_LED_STATE= 'state'

# Create the LED1 object (as indicator) using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

# Create the tm1638 object with STB = GP13, CLK = GP14, DIO = GP15
tm = tm1638ex.TM1638(stb=Pin(tm1638ex.PIN_STB), clk=Pin(tm1638ex.PIN_CLK),
dio=Pin(tm1638ex.PIN_DIO))
# Turn all LEDs off
tm.leds(tm.STATE_OFF)

"""

Handle the request containing the command.
The LED is turned on/off or the state is requested.
The response JSON object is updated.

:param string cmd
    Command to set the LED1-8 state on/off or get the state.
    The command can be in any case as converted to lowercase.
    Examples: /led/8/on, /led/8/off, /led/8/state

:return JSON object response
    JSON key:value pairs: {"title": <command>, "message": <state>, "status": OK or
ERROR}
    Example: {"title": "/led/8/on", "message": "on", "status": "OK"}
"""

def handle_request(cmd):
    # Convert the command to lowercase
    cmd = cmd.lower()

    # Split the command to get the led number and state
    # /led/N/on split into 4 items: '', led, 1-8, on|off|state
    cmd_params = cmd.split('/')

    # Check if the command length is 4
    if len(cmd_params) != 4:
        response[config.KEY_MESSAGE] = f'LED command unknown ({led_cmd}).'
        response[config.KEY_STATE] = config.STATE_ERR
        # raise ValueError(f'LED command unknown ({led_cmd}).')
        return response

    # Get & check the led pos in range 0-7.
    # Note the message is for the led range 1-8 as on the module LED1-LED8
    led_pos = int(cmd_params[2]) - 1

```

```

    if not tm.LED_POS_MIN <= led_pos <= tm.LED_POS_MAX:
        response[config.KEY_MESSAGE] = f'LED position {led_pos + 1} out of range
{tm.LED_POS_MIN + 1}-{tm.LED_POS_MAX + 1}.'
        response[config.KEY_STATE] = config.STATE_ERR
        # raise ValueError(f'LED Position out of range ({led_pos}).')
        return response

    # Get & check the command on,off,state
    led_cmd = cmd_params[3]
    if not led_cmd in [CMD_LED_ON, CMD_LED_OFF, CMD_LED_STATE]:
        response[config.KEY_MESSAGE] = f'LED command unknown ({led_cmd}).'
        response[config.KEY_STATE] = config.STATE_ERR
        # raise ValueError(f'LED command unknown ({led_cmd}).')
        return response

    # Set the led on or off or get the state
    if led_cmd == CMD_LED_ON:
        tm.led(led_pos, 1)
        response[config.KEY_MESSAGE] = config.MESSAGE_ON
    if led_cmd == CMD_LED_OFF:
        tm.led(led_pos, 0)
        response[config.KEY_MESSAGE] = config.MESSAGE_OFF
    if led_cmd == CMD_LED_STATE:
        if tm.led_value(led_pos) == 1:
            response[config.KEY_MESSAGE] = config.MESSAGE_ON
        else:
            response[config.KEY_MESSAGE] = config.MESSAGE_OFF
    response[config.KEY_STATE] = config.STATE_OK
    return response

"""
Main
"""
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Create the HTTP response JSON object
        response = {}

        # Parse the get data. In case of error, the status is 0.
        cmd, status = network.parse_get_request(request)

        # Assign the command to the response KEY_TITLE
        response[config.KEY_TITLE] = cmd

        # If the status is 1, handle the command
        if status == 1:
            response = handle_request(cmd)
        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

        # Send response to the client and close the connection
        network.send_response(cl, response, True)

    except OSError as e:
        network.ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')

```


Key S1-S8 press sets Domoticz Alert Device

Pico W RESTful web server listening if one of the push buttons S1-S8 of the TM1638LEDKEY component is pressed.

For S1 to S5, an HTTP API/JSON request is sent to Domoticz to set the Level and Text for an Alert Device.

Example: pressing S1 is sets alert level 0 with text "TM1638 Pressed Key S1".

This is a basic example for handling push button press and submit HTTP API/JSON request to Domoticz.

Communication: Pico W to Domoticz.

MicroPython Script

```
"""
File:tm1638-keys.py
Date:20230321
Author: Robert W.B. Linn

:description
Pico W RESTful web server listening if one of the push buttons S1-S8 of the
TM1638LEDKEY module is pressed.
For S1 to S5, an HTTP API/JSON request is send to Domoticz to set an the Level and
Text for an Alert Device.
Example: pressing S1 is sets alert level 0 with text "TM1638 Pressed Key S1".
This is a basic example for handling push button press and submit HTTP API/JSON
request to Domoticz.

The log shows pressing keys S1 to S5 with HTTP API/JSON request updating level and
text for the Alert device with idx 7.
:log
tm1638-keyscontrol v20230321
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=7&nvalue=0&svalue=TM1638 Pressed
Key S1
Send GET request status=OK
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=7&nvalue=1&svalue=TM1638 Pressed
Key S2
Send GET request status=OK
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=7&nvalue=2&svalue=TM1638 Pressed
Key S3
Send GET request status=OK
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=7&nvalue=3&svalue=TM1638 Pressed
Key S4
Send GET request status=OK
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=7&nvalue=4&svalue=TM1638 Pressed
Key S5
Send GET request status=OK
"""

# Libraries
import network
import socket
import time
from machine import Pin
# Server class from server.py
from server import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config
```

```

# TM1638: credits to https://github.com/mcauser/micropython-tm1638
import tm1638ex

# Constants
NAME = 'tm1638-keyscontrol'
VERSION = 'v20230321'

"""
/json.htm?type=command&param=udevice&idx=IDX&nvalue=LEVEL&svalue=TEXT
IDX = id of your device (This number can be found in the devices tab in the column
"IDX")
Level = (0=gray, 1=green, 2=yellow, 3=orange, 4=red)
TEXT = Text you want to display
"""
URL_DOM_ALERT_DEVICE = 'http://' + config.DOMOTICZ_IP +
'/json.htm?type=command&param=udevice&idx={IDX}&nvalue={LEVEL}&svalue={TEXT}'
IDX_ALERT_DEVICE = 7

# Create the LED1 object (as indicator) using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

# Create the tm1638 object with STB = GP13, CLK = GP14, DIO = GP15
tm = tm1638ex.TM1638(stb=Pin(tm1638ex.PIN_STB), clk=Pin(tm1638ex.PIN_CLK),
dio=Pin(tm1638ex.PIN_DIO))
# Turn all LEDs off
tm.leds(tm.STATE_OFF)

"""
Handle Request
"""
def handle_request(cmd):
    print(f'NOT USED')

"""
Main
"""
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    # Listen to key pressed
    pressed = tm.keys()

    # Loop over the 8 keys S1-S8
    for i in range(8):
        # Check which key is pressed
        if ((pressed >> i) & 1):
            # Set the LED display with the key number
            tm.number(i+1)
            # tm.show(f'      S{i+1}')

            # Send request to Domoticz for the keys 1-5 (index 0-4)
            if 0 <= i <= 4:
                url = URL_DOM_ALERT_DEVICE.replace('{IDX}', str(IDX_ALERT_DEVICE))
                url = url.replace('{LEVEL}', str(i))
                url = url.replace('{TEXT}', f'TM1638 Pressed Key S{i + 1}')
                network.send_get_request(url)
                time.sleep(.01)

```

Domoticz Widget Alert Device



Key S1 press gets Domoticz Temp+Hum Device Data and set display

Pico W RESTful web server listening if key S1 of the TM1638LEDKEY component is pressed.

If pressed, an HTTP API/JSON request is sent to Domoticz to get the status of a Temp+Hum device.

The Domoticz server sends a JSON object as response back.

The JSON object is parsed to get the temp and hum values.

These are set on the 8-segment display i.e., 20°C54rH

Communication: Pico W to Domoticz and Domoticz to Pico W.

MicroPython Script

```
"""
File:tm1638-keys1-temphum.py
Date:20230321
Author: Robert W.B. Linn

:description
Pico W RESTful web server listening if key S1 of the TM1638LEDKEY module is
pressed.
If pressed, an HTTP API/JSON request is send to Domoticz to get the status of a
Temp+Hum device.
The Domoticz server sends a JSON object as response back.
The JSON object is parsed to get the temp and hum values.
These are set on the 8-segment display i.e., 20°C54rH

:log
tm1638-keys1-temphum v20230321
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Send GET request url=http://domoticz-ip:port/json.htm?type=devices&rid=15
Send GET request status=OK
Handle request status=1,json={'Sunset': '18:35', 'NautTwilights' ...
Handle request temp=20,hum=54
"""

# Libraries
import network
import socket
import time
from machine import Pin
import json
# Server class from server.py
from server import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config
# TM1638: credits to https://github.com/mcauser/micropython-tm1638
import tm1638ex

# Constants
NAME = 'tm1638-keys1-temphum'
VERSION = 'v20230321'

# Define the url for the HTTP API/JSON GET request
URL_DOM = 'http://' + config.DOMOTICZ_IP + '/json.htm?type=devices&rid={IDX}'
# IDX of the Domoticz temp+hum device
IDX_DEVICE = 15

# Create the LED1 object (as indicator) using config.py settings
led1 = Pin(config.PIN_LED1, Pin.OUT)
led1.value(0)

# Create the tm1638 object with STB = GP13, CLK = GP14, DIO = GP15
```

```

tm = tm1638ex.TM1638(stb=Pin(tm1638ex.PIN_STB), clk=Pin(tm1638ex.PIN_CLK),
dio=Pin(tm1638ex.PIN_DIO))
# Turn all LEDs off
tm.leds(tm.STATE_OFF)

"""
Handle Request.
The status for the Domoticz temp+hum device is requested from the Domoticz server.
The Domoticz server sends a JSON response back.
The JSON object is parsed to get the temp and hum values.
These are set on the display i.e., 20°C,54rH
During the request handling, LED1 of the Pico W Breadboard is on, but also LED1 of
the TM1638 module.
"""
def handle_request(cmd):
    led1.value(1)
    tm.led(tm.LED1, tm.STATE_ON)
    status, content = network.send_get_request(url)
    print(f'Handle request status={status},json={content}')
    if status == 1:
        try:
            # Get key result first array entry
            result = content['result'][0]
            # print(result)
            # Get the properties Temp and Humidity
            temp = int(result['Temp'])
            hum = int(result['Humidity'])
            print(f'Handle request temp={temp},hum={hum}')
            # Set the temp + hum on the display
            tm.temperature(temp,0)
            tm.humidity(hum,4)
        except ValueError as e:
            # print(f'[ERROR] {e}, {r.content.decode() }')
            raise Exception(f'[ERROR] {e}, {r.content.decode() }')
    else:
        tm.show('ERR')
    led1.value(0)
    tm.led(tm.LED1, tm.STATE_OFF)

"""
Main
"""
print(f'{NAME} {VERSION}')


# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    # Listen to key pressed
    pressed = tm.keys()

    # Loop over the 8 keys S1-S8
    for i in range(8):
        # Check which key is pressed
        if ((pressed >> i) & 1):
            key_nr = i+1
            if key_nr == 1:
                url = URL_DOM.replace('{IDX}', str(IDX_DEVICE))
                handle_request(url)
            time.sleep(.01)

```

TM1638 Display shows Temp 22°C + Humidity 62 RH

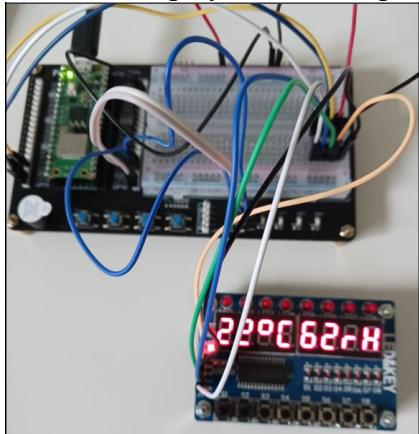

OLED 0,96" I2C Display

Description

This project displays and updates in regular intervals selective Domoticz data from the hardware motherboard sensors on an 0,96" I2C OLED display (OLED) connected to the Pico W.


Solution

Domoticz uses an Automation Event dzVents, triggered by a switch or timer, to send the selective Domoticz hardware motherboard sensors data (internal temperature, CPU usage, memory usage) via HTTP POST request to the Pico W web server. The data is a JSON array with items text, row, col per OLED line.

Example:

```
{
  'timestamp': {'text': '15:53', 'col': 15, 'row': 1},
  'memoryusage': {'text': 'M:20', 'col': 14, 'row': 3},
  'cpuusage': {'text': 'C:0.39', 'col': 6, 'row': 3},
  'internaltemperature': {'text': 'T:39', 'col': 0, 'row': 3}
}
```

Block Diagram

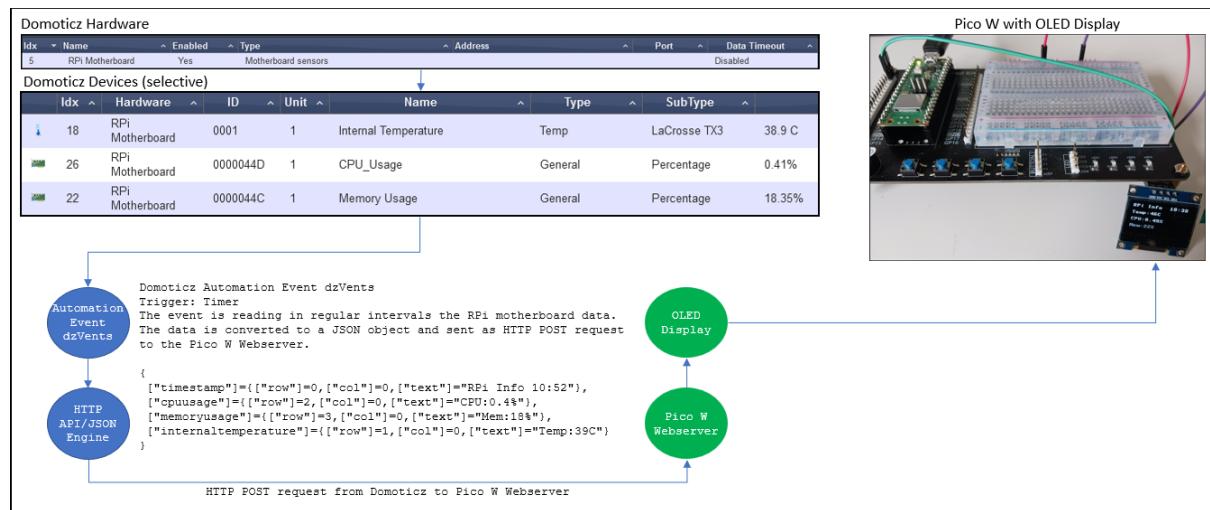


This project can be used as a base for solutions using this OLED display.

Wiring

| OLED | Pico W |
|-------------|---------------|
| GND | GND (Pin #38) |
| VCC | 3V3 (Pin #36) |
| SDA | GP0 (Pin #1) |
| SCL | GP1 (Pin #2) |
| I2C Address | 0x3C |

Circuit Diagram

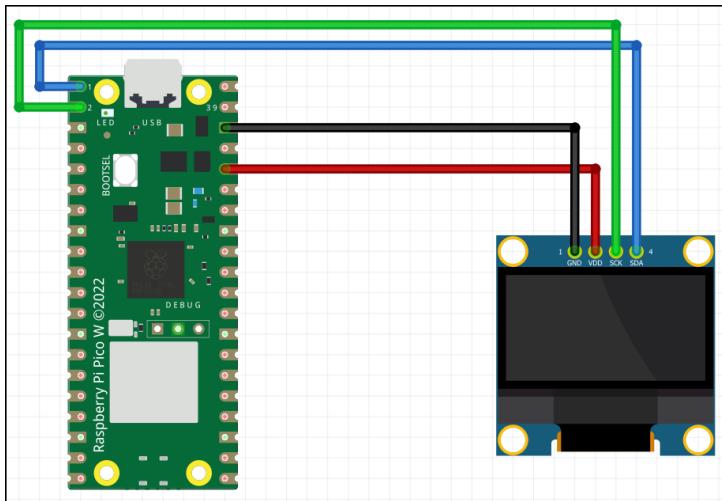

Domoticz Setup

Devices

The hardware Motherboard sensors is added, and the devices Internal Temperature, CPU Usage and Memory Usage are added.

The other devices from the hardware Motherboard sensors are not used for this project.

After creating the device(s), the Domoticz devices list shows the entries:

```
IDX=26, Hardware=RPi Motherboard, ID=0000044D, Unit=1, Name=CPU Usage,
Type=General, SubType=Percentage, Data=0.43%
IDX=22, Hardware=RPi Motherboard, ID=0000044C, Unit=1, Name=Memory Usage,
Type=General, SubType=Percentage, Data=22.93%
IDX=18, Hardware=RPi Motherboard, ID=0001, Unit=1, Name=Internal Temperature,
Type=Temp, SubType=LaCrosse TX3, Data=38.4 C
```

Automation Script

```
-- [[
File:     oled_motherboard.dzvents
Date:    20230323
Author:  Robert W.B. Linn

:description
Display selective motherboard information on an OLED display connected to the Pico W.

:log
2023-03-23 10:04:00.563 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Start internal script: picow_oled_motherboard:, trigger: "every minute"
2023-03-23 10:04:00.586 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD:
{["internaltemperature"]=[{"col":0, "row":1, "text":"Temp:44C"}, {"cpuusage"]=[{"col":0, "row":2, "text":"CPU:0.39%"}, {"memoryusage"]=[{"col":0, "row":3, "text":"Mem:22%"}, {"timestamp"]=[{"col":0, "row":0, "text":"RPi Info 10:04"}}
2023-03-23 10:04:00.587 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Finished picow_oled_motherboard
2023-03-23 10:04:00.587 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-03-23 10:04:01.084 Status: dzVents: Info: Handling httpResponse-events for:
"RES_PICOW_OLED_MOTHERBOARD"
2023-03-23 10:04:01.084 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Start internal script: picow_oled_motherboard: HTTPResponse:
"RES_PICOW_OLED_MOTHERBOARD"
2023-03-23 10:04:01.084 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD:
{["title"]=[{"cpuusage"]=[{"col":0, "row":2, "text":"CPU:0.39%"}, {"timestamp"]=[{"col":0, "row":0, "text":"RPi Info 10:04"}, {"internaltemperature"]=[{"col":0, "row":1, "text":"Temp:44C"}, {"memoryusage"]=[{"col":0, "row":3, "text":"Mem:22%"}}, {"status"]="OK", ["message"]=""}
2023-03-23 10:04:01.084 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Finished picow_oled_motherboard
]]--



-- Domoticz
-- For tests the trigger is an switch type onoff
local IDX_SWITCH = 16
--- IDX of the motherboard sensors (devices)
local IDX_INTERNALTEMPERATURE = 18      -- temperature
local IDX_ARMCLOCKSPEED = 19            -- sensorValue
local IDX_V3DCLOCKSPEED = 20            -- sensorValue
local IDX_CORECLOCKSPEED = 21            -- sensorValue
local IDX_MEMORYUSAGE = 22              -- percentage
local IDX_PROCESSUSAGE = 23             -- sensorValue
local IDX_HDDBOOT = 24                  -- percentage
local IDX_HDD = 25                      -- percentage
local IDX_CPUUSAGE = 26                 -- percentage

-- Round a number with digital places
local function round(num, numDecimalPlaces)
    return tonumber(string.format("%. .. (numDecimalPlaces or 0) .. "f", num))
end

-- Create table with keys col, row and text to be displayed on the OLED.
-- For an OLED row 0-3, col 0-15, text length max 16 characters
-- setText(3,0,'Hello World')
local function setText(row,col,text)
    local x = {}
    x['row']=row
    x['col']=col
    x['text']=text
    return x
end
```

```

-- Create table with sensor data for OLEDdisplay
-- setSensor(0,0,'T:',round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature,
2),'*C')
local function setSensor(row,col,pre,data,unit)
    return setText(row,col,string.format('%s%s%s', pre, tostring(data), unit))
end

-- {[{"internaltemperature":{["col"]的社会
2, ["data"]的社会
"=T:39.4", ["row"]的社会
3}, ["cpuusage"]的社会
0.68, ["coreclockspeed"]的社会
500, ["v3dclockspeed"]的社会
250, ["processususage"]和社会
45.06, ["armclockspeed"]和社会
600, ["hdd"]和社会
38.19, ["memoryusage"]和社会
20.9, ["hddboot"]和社会
19.68}

local function getMotherboardData(domoticz)
    local data = {}

    -- row=0, col=0, data=HH:MM len=5, range 0+5=5
    data['timestamp'] = setText(0, 0, string.format('%s%s', 'RPi Info ', string.sub(domoticz.time.rawTime, 1, 5)))

    -- row=1, col=0, data=T:NN len=4, range = 0+4=4
    data['internaltemperature'] = setSensor(1, 0, 'Temp:', round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 0), 'C')
    -- row=2, col=0, data=C:NN len=5, range = 0+5=5
    data['cpuusage'] = setSensor(2, 0, 'CPU:', round(domoticz.devices(IDX_CPUUSAGE).percentage, 2), '%')
    -- row=3, col=0, data=M:NN len=4, range = 0+4=4
    data['memoryusage'] = setSensor(3, 0, 'Mem:', round(domoticz.devices(IDX_MEMORYUSAGE).percentage, 0), '%')

    --[[
    data['internaltemperature'] =
    round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 2)
    data['armclockspeed'] =
    round(domoticz.devices(IDX_ARMCLOCKSPEED).sensorValue, 0)
    data['v3dclockspeed'] =
    round(domoticz.devices(IDX_V3DCLOCKSPEED).sensorValue, 0)
    data['coreclockspeed'] =
    round(domoticz.devices(IDX_CORECLOCKSPEED).sensorValue, 0)
    data['memoryusage'] = round(domoticz.devices(IDX_MEMORYUSAGE).percentage, 2)
    data['processususage'] =
    round(domoticz.devices(IDX_PROCESSUSUSAGE).sensorValue, 2)
    data['hddboot'] = round(domoticz.devices(IDX_HDDBOOT).percentage, 2)
    data['hdd'] = round(domoticz.devices(IDX_HDD).percentage, 2)
    data['cpuusage'] = round(domoticz.devices(IDX_CPUUSAGE).percentage, 2)
    ]]]]

-- Test embedding json: r=row 0-3, c=col 0-19, d=data
--[[
local x = {}
x['r']=3
x['c']=5
x['d']=string.format('T:%s', tostring(data['internaltemperature']))
data['temp'] = x
]]]
domoticz.log(data)
return data
end

-- URL of the Pico W web server
local URL_SERVER = 'http://picow-ip'

local PROJECT = 'PICOW_OLED_MOTHERBOARD'
local RES_HTTP = 'RES_'..PROJECT
local LOG_MARKER = 'LOG_'..PROJECT

local TIMER_RULE = 'every minute'

```

```

return {
    -- Listen to switch device changes and HTTP responses
    on = { devices = { IDX_SWITCH }, timer = { TIMER_RULE }, httpResponses = {
        RES_HTTP } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },

    execute = function(domoticz, item)
        -- domoticz.log(item)
        if (item.isTimer) then
            domoticz.openURL({
                url = URL_SERVER,
                method = 'POST',
                headers = { ['content-type'] = 'application/json' },
                postData = getMotherboardData(domoticz),
                callback = RES_HTTP,
            })
        end

        if (item.isDevice) then
            domoticz.log(string.format('Device %s state changed to %s', item.name,
item.state), domoticz.LOG_INFO)
            if (item.state == 'On') or (item.state == 'Off') then
                -- Submit remote HTTP POST request to set the OLED display
                domoticz.openURL({
                    url = URL_SERVER,
                    method = 'POST',
                    headers = { ['content-type'] = 'application/json' },
                    postData = getMotherboardData(domoticz),
                    callback = RES_HTTP,
                })
            end
        end

        -- Handle HTTP response: OK is item statusCode 200 and item.ok true
        -- Else error like statusCode 7, item.ok false
        if (item.isHTTPResponse) then
            -- domoticz.log(string.format("%d %s", item.statusCode, item.ok))
            if (item.statusCode == 200) then
                if (item.isJSON) then
                    -- {[{"message"}]="On", [{"title"}]={"state": "on"}},
["status"]="OK"
                    local data = item.json
                    domoticz.log(data)
                    -- domoticz.log(string.format("LED1 status=%s, title=%s,
message=%s", data.status, data.title, data.message))
                end
            else
                -- Error like 7 false; ERROR 7:Couldn't connect to server
                domoticz.log(string.format("ERROR %d:%s", item.statusCode,
item.statusText))
            end
        end
    end
}

```

Domoticz Log

```
2023-03-23 10:04:00.563 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Start internal script: picow_oled_motherboard:, trigger: "every minute"
2023-03-23 10:04:00.586 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD:
{["internaltemperature"]=[{"col":0, "row":1, "text":"Temp:44C"}, {"cpuusage"]=[{"col":0, "row":2, "text":"CPU:0.39%"}, {"memoryusage"]=[{"col":0, "row":3, "text":"Mem:22%"}, {"timestamp"]=[{"col":0, "row":0, "text":"RPi Info 10:04"}}
2023-03-23 10:04:00.587 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Finished picow_oled_motherboard
2023-03-23 10:04:00.587 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-03-23 10:04:01.084 Status: dzVents: Info: Handling httpResponse-events for:
"RES_PICOW_OLED_MOTHERBOARD"
2023-03-23 10:04:01.084 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Start internal script: picow_oled_motherboard: HTTPResponse:
"RES_PICOW_OLED_MOTHERBOARD"
2023-03-23 10:04:01.084 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD:
{["title"]=[{"cpuusage"]=[{"col":0, "row":2, "text":"CPU:0.39%"}, {"timestamp"]=[{"col":0, "row":0, "text":"RPi Info 10:04"}, {"internaltemperature"]=[{"col":0, "row":1, "text":"Temp:44C"}, {"memoryusage"]=[{"col":0, "row":3, "text":"Mem:22%"}}, {"status"]="OK", "message"]=""}
2023-03-23 10:04:01.084 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Finished picow_oled_motherboard
```

Web Server

Libraries

The MicroPython script uses a modified version of the external OLED library MicroPython SSD1306 OLED driver, I2C and SPI interfaces.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Parameter

- A character has size 8px width x 16px height.
- Max char per row is 16, max rows is 4.
- The starting index for the columns and rows is 0.

Credits

Thanks for developing & sharing the [OLED library](#).

MicroPython Script

```
"""
File:oled_motherboard.py
Date:20230323
Author: Robert W.B. Linn

:description
On 0,96inch I2C OLED display connected to the Pico W, display text and selective
RPi motherboard sensor data received from Domoticz.
The Pico W runs a RESTful web server handling incoming data from a Domoticz
Automation event dzVents.
The incoming data is received from a HTTP POST request with JSON object to set the
text.
The JSON object contains for each of the displayed text, col and row.
{'sensor': {'text': 'TEXT', 'col': NN, 'row': N}, ...}
This enables to set the OLED display layout from the Domoticz event.

:log
Domoticz Motherboard v20230323
Init OLED address=60, sda=GP0, scl=GP1
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command={'timestamp': {'text': 'RPi Info 10:52', 'col': 0, 'row': 0},
'memoryusage': {'text': 'Mem:22%', 'col': 0, 'row': 3}, 'cpuusage': {'text':
'CPU:0.3%', 'col': 0, 'row': 2}, 'internaltemperature': {'text': 'Temp:44C', 'col':
0, 'row': 1}}
HTTP Response={"status": "OK", "title": {"timestamp": {"text": "RPi Info 10:52",
"col": 0, "row": 0}, "memoryusage": {"text": "Mem:22%", "col": 0, "row": 3},
"cpuusage": {"text": "CPU:0.3%", "col": 0, "row": 2}, "internaltemperature":
{"text": "Temp:44C", "col": 0, "row": 1}}, "message": ""}

Network connection closed

:wiring
OLED = Pico W
GND = GND
VCC = 3V3
SCL = GP1 (Pin #2)
SDA = GP0 (Pin #1)
"""

# Libraries
import time
from time import sleep
```

```

from machine import Pin, I2C
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# OLED display lib stored in Pico W folder lib
import ssd1306ex
from ssd1306ex import SSD1306_I2C
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
## Name (row 0), Version (row 1), Waiting (row 3) are displayed on the OLED
NAME = 'Domoticz Motherboard'
VERSION = 'v20230323'
WAITING = 'Waiting for data...'
## Title used for the HTTP JSON response to Domoticz key title
TITLE = 'Set OLED'

def init_oled(Pin_sda=ssd1306ex.PIN_SDA, pin_scl=ssd1306ex.PIN_SCL,
width=ssd1306ex.DISPLAY_WIDTH, height=ssd1306ex.DISPLAY_HEIGHT):
    """
    Create the OLED object. The I2C 0 is used.

    :param int pin_sda
    :param int pin_scl
    :param int width
        Width of the display, default = 128
    :param int height
        Height of the display, default = 64
    :return
        OLED object
    :example
        init_oled()
    """
    try:
        # Init I2C
        i2c = I2C(0, sda=Pin(Pin_sda), scl=Pin(Pin_scl), freq=400000)

        # OLED display with 128px width and 64px height and i2C
        oled = SSD1306_I2C(width, height, i2c)
        print(f'Init OLED address={oled.addr}, sda=GP{pin_sda}, scl=GP{pin_scl}')

        # Return the OLED object
        return oled
    except OSError as e:
        raise RuntimeError('[ERROR] Init OLED: {}'.format(e))

def set_oled_welcome(row1, row2, row3, row4):
    """
    Initial text at col 0 on row 1 to 4.

    """
    oled.text_col_row(row1, 0, 0)
    oled.text_col_row(row2, 0, 1)
    oled.text_col_row(row3, 0, 2)
    oled.text_col_row(row4, 0, 3)
    oled.show()

def set_oled_sensor_text(data, sensor):
    """
    Set the sensor text at col, row
    : param JSON data
        JSON object with keys for col, row and text.
    :param string Sensor
    """

```

```

String defining the RPi motherboard sensor, i.e. internaltemperature.

:example
    set_oled_sensor_text('internaltemperature')
"""

# Get the sensor data
col = data[sensor]['col']
row = data[sensor]['row']
text = data[sensor]['text']
oled.text_col_row(text, col, row)

def handle_request(cmd, status):
    """
    Handle the OLED command defined as JSON object.
    The command defines for every sensor data the text and the OLED start position
    col/row.
    {'timestamp': {'text': 'RPi Info 10:52', 'col': 0, 'row': 0}, 'memoryusage':
    {'text': 'Mem:22%', 'col': 0, 'row': 3}, 'cpuusage': {'text': 'CPU:0.3%', 'col': 0,
    'row': 2}, 'internaltemperature': {'text': 'Temp:44C', 'col': 0, 'row': 1}}

    :param JSON object
        JSON object with key:value pair {"state":"on" or "off"}

    :status
        If status is 1 set the display else unknown command

    :return JSON object response
"""
# Assign the command to the response title
response[config.KEY_TITLE] = cmd

# If the status is 1 (OK) then set the OLED display with the sensor data.
if status == 1:
    # Clear the display first
    oled.clear()
    sleep(.1)

    # Set the sensor data (subset only)
    set_oled_sensor_text(cmd, 'timestamp')
    set_oled_sensor_text(cmd, 'internaltemperature')
    set_oled_sensor_text(cmd, 'cpuusage')
    set_oled_sensor_text(cmd, 'memoryusage')
    # Show the text
    oled.show()

    # Set the response
    response[config.KEY_STATE] = config.STATE_OK
    response[config.KEY_MESSAGE] = config.MESSAGE_EMPTY
else:
    response[config.KEY_STATE] = config.STATE_ERR
    response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

# Return the response which is send to Domoticz
return response

print(f'{NAME} {VERSION}')

# Create the OLED display object
oled = init_oled(ssd1306ex.PIN_SDA, ssd1306ex.PIN_SCL, ssd1306ex.DISPLAY_WIDTH,
ssd1306ex.DISPLAY_HEIGHT)

# Show initial info on the OLED. Waiting is replaced by RPi motherboard sensor data
set_oled_welcome(NAME, VERSION, '', WAITING)

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

```

```
"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd to set the OLED text as JSON object from the POST request
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to update the OLED text.
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network - Connection closed')
```


Enhancement Ideas

Display Blocks

Display data in 6 blocks Time, Temp, CPU, Mem, ARM, HDD with title & value for the timestamp (block 1) + Raspberry Pi selective Motherboard sensors data (blocks 2-6).

The display is segmented in 6 blocks, 3 top and 3 bottom.

Each block has two rows to show a title and value with max text length of 4 characters.

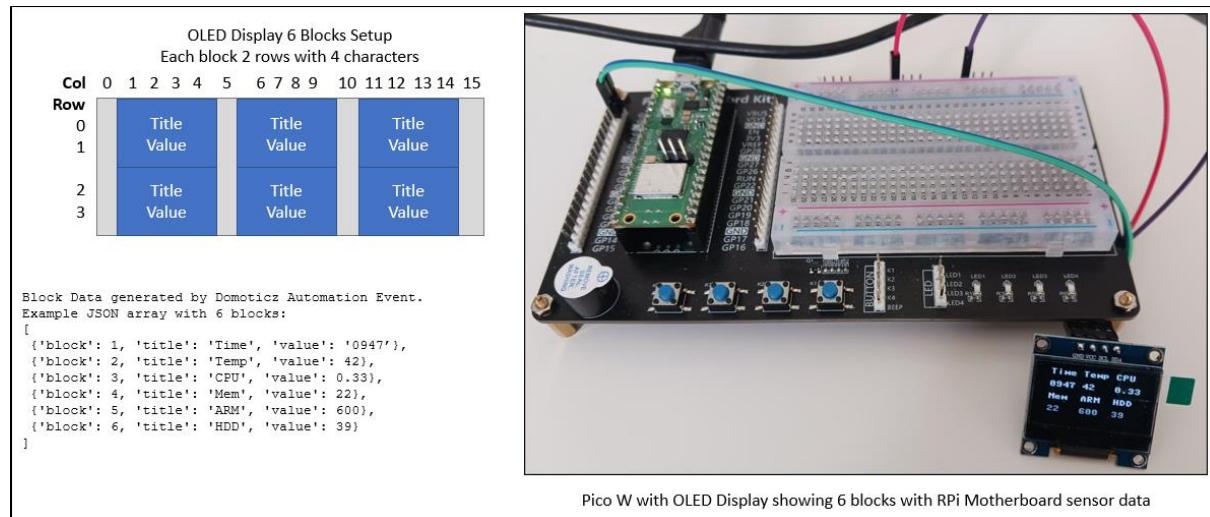

The data, a JSON array, is prepared by Domoticz Automation Event dzVents and submitted via HTTP POST request to the Pico W web server. The Pico W web server sends a response back.

HTTP Request received from Domoticz parsed by the Pico W web server

```
[{"block": 1, "title": "Time", "value": "1405"}, {"block": 2, "title": "Temp", "value": 42}, {"block": 3, "title": "CPU", "value": 0.45}, {"block": 4, "title": "Mem", "value": 22}, {"block": 5, "title": "ARM", "value": 600}, {"block": 6, "title": "HDD", "value": 39}]
```

HTTP Response from the Pico W web server to Domoticz (see Domoticz Log)

```
{
  "status": "OK",
  "title": [{"block": 1, "title": "Time", "value": "1405"}, {"block": 2, "title": "Temp", "value": 42}, {"block": 3, "title": "CPU", "value": 0.45}, {"block": 4, "title": "Mem", "value": 22}, {"block": 5, "title": "ARM", "value": 600}, {"block": 6, "title": "HDD", "value": 39}],
  "message": ""
}
```

Automation Script

```
--[[[
File:    oled_blocks.dzvents
Date:   20230323
Author: Robert W.B. Linn

:description
Set raspberry pi selective motherboard data on an 0,96" I2C OLED display connected
to a Raspberry Pi Pico W running as web server.
The data is submitted to the Pico W as HTTP POST request.
The OLED display has 6 block to display title:value for a motherboard sensor.

Domoticz Log
2023-03-23 14:29:36.115 VirtualSensors: Light/Switch (Pico W LED1 Control)
2023-03-23 14:29:36.109 Status: User: admin initiated a switch command (16/Pico W
LED1 Control/On)
2023-03-23 14:29:36.210 Status: dzVents: Info: Handling events for: "Pico W LED1
Control", value: "On"
2023-03-23 14:29:36.210 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Start internal script: picow_oled_blocks: Device: "Pico W LED1 Control
(VirtualSensors)", Index: 16
2023-03-23 14:29:36.210 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: Device
Pico W LED1 Control state changed to On
2023-03-23 14:29:36.216 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD:
{{{"value": "1429", ["block": 1, ["title": "Time"], {"value": 43, ["block": 2,
["title": "Temp"]}, {"value": 0.7, ["block": 3, ["title": "CPU"], {"value": 22,
["block": 4, ["title": "Mem"], {"value": 600, ["block": 5, ["title": "ARM"],
{"value": 39, ["block": 6, ["title": "HDD"]}}}}}}}}
2023-03-23 14:29:36.216 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Finished picow_oled_blocks
2023-03-23 14:29:36.217 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-03-23 14:29:36.754 Status: dzVents: Info: Handling httpResponse-events for:
"RES_PICOW_OLED_MOTHERBOARD"
2023-03-23 14:29:36.754 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Start internal script: picow_oled_blocks: HTTPResponse:
"RES_PICOW_OLED_MOTHERBOARD"
2023-03-23 14:29:36.755 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD:
{{"status": "OK", "message": "", ["title": {"value": "1429", "block": 1,
["title": "Time"], {"value": 43, "block": 2, ["title": "Temp"], {"value": 0.7,
["block": 3, ["title": "CPU"], {"value": 22, "block": 4, ["title": "Mem"],
{"value": 600, "block": 5, ["title": "ARM"], {"value": 39, "block": 6,
["title": "HDD"]}}}}}}}}
2023-03-23 14:29:36.755 Status: dzVents: Info: LOG_PICOW_OLED_MOTHERBOARD: -----
Finished picow_oled_blocks
]]--]

-- URL of the Pico W web server
local URL_PICOW      = 'picow-ip'
local PROJECT        = 'PICOW_OLED_MOTHERBOARD'
local RES_HTTP        = 'RES '.. PROJECT
local LOG_MARKER     = 'LOG_' .. PROJECT
local TIMER_RULE     = 'every minute'

-- Domoticz
-- For tests the trigger is an switch type onoff
local IDX_SWITCH = 16
--- IDX of the motherboard sensors (devices)
local IDX_INTERNALTEMPERATURE = 18      -- temperature
local IDX_ARMCLOCKSPD = 19                -- sensorValue
local IDX_V3DCLOCKSPD = 20                -- sensorValue
local IDX_CORECLOCKSPD = 21                -- sensorValue
local IDX_MEMORYUSAGE = 22                -- percentage
local IDX_PROCESSUSAGE = 23                -- sensorValue
local IDX_HDDBOOT = 24                    -- percentage
local IDX_HDD = 25                      -- percentage
local IDX_CPUUSAGE = 26                  -- percentage
```

```

-- Round a number with digital places
local function round(num, numDecimalPlaces)
    return tonumber(string.format("%.0f" .. (numDecimalPlaces or 0) .. "f", num))
end

-- Create table with keys block, title, value to be displayed on the OLED.
-- Block numbers are 1 to 6, title and value length max 4 characters
-- setBlock(1,'Title', 123)
local function setBlock(block, title, value)
    local x = {}
    x['block']=block
    x['title']=title
    x['value']=value
    return x
end

-- Create a json array with sensor data to display on the oled in block 1-6
--- {[{"title":{["block"]的社会, ["title"]="Time", ["value"]="1353"}, {"["block"]的社会=2, ["title"]="Temp", ["value"]=42}, {"["block"]的社会=3, ["title"]="CPU", ["value"]=0.48}, {"["block"]=4, ["title"]="Mem", ["value"]=22}, {"["block"]=5, ["title"]="ARM", ["value"]=600}, {"["block"]=6, ["title"]="HDD", ["value"]=39}}, {"status"]="OK", ["message"]=""}
local function setMotherboardData(domoticz)
    local data = {}
    t = string.sub(domoticz.time.rawTime, 1, 5)
    t = string.gsub(t, ':','')
    data[1] = setBlock(1, 'Time', t)
    data[2] = setBlock(2, 'Temp', round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 0))
    data[3] = setBlock(3, 'CPU', round(domoticz.devices(IDX_CPUUSAGE).percentage, 2))
    data[4] = setBlock(4, 'Mem', round(domoticz.devices(IDX_MEMORYUSAGE).percentage, 0))
    data[5] = setBlock(5, 'ARM', round(domoticz.devices(IDX_ARMCLOCKSPEED).sensorValue, 0))
    data[6] = setBlock(6, 'HDD', round(domoticz.devices(IDX_HDD).percentage, 0))

    --[[[
        data['internaltemperature'] =
        round(domoticz.devices(IDX_INTERNALTEMPERATURE).temperature, 2)
        data['armclockspeed'] =
        round(domoticz.devices(IDX_ARMCLOCKSPEED).sensorValue, 0)
        data['v3dclockspeed'] =
        round(domoticz.devices(IDX_V3DCLOCKSPEED).sensorValue, 0)
        data['coreclockspeed'] =
        round(domoticz.devices(IDX_CORECLOCKSPEED).sensorValue, 0)
        data['memoryusage'] = round(domoticz.devices(IDX_MEMORYUSAGE).percentage, 2)
        data['processusage'] =
        round(domoticz.devices(IDX_PROCESSUSAGE).sensorValue, 2)
        data['hddboot'] = round(domoticz.devices(IDX_HDDBOOT).percentage, 2)
        data['hdd'] = round(domoticz.devices(IDX_HDD).percentage, 2)
        data['cpuusage'] = round(domoticz.devices(IDX_CPUUSAGE).percentage, 2)
    ]]]]
    domoticz.log(data)
    return data
end

local function submitRequest(domoticz)
    domoticz.openURL({
        url = URL_PICOW, method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = setMotherboardData(domoticz), callback = RES_HTTP,
    })
end

return {
    on = { devices = { IDX_SWITCH }, timer = { TIMER_RULE }, httpResponses = { RES_HTTP } },
}

```

```
logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
execute = function(domoticz, item)
    if (item.isTimer) then submitRequest(domoticz) end
    if (item.isDevice) then
        domoticz.log(string.format('Device %s state changed to %s', item.name,
item.state))
        if (item.state == 'On') or (item.state == 'Off') then
submitRequest(domoticz) end
    end
    -- Handle HTTP response: OK is item statusCode 200 and item.ok true
    -- Else error like statusCode 7, item.ok false
    if (item.isHTTPResponse) then
        -- domoticz.log(string.format("%d %s", item.statusCode, item.ok))
        if (item.statusCode == 200) then
            if (item.isJSON) then
                -- {[{"message"]="On", ["title"]=""{"state": "on"}}, [{"status"]="OK"}
                local data = item.json
                domoticz.log(data)
            end
        else
            -- Error like 7 false; ERROR 7:Couldn't connect to server
            domoticz.log(string.format("ERROR %d:%s", item.statusCode, item.statusText))
        end
    end
end
}
```

MicroPython Script

```
"""
File:oled_motherboard_block.py
Date:20230324
Author: Robert W.B. Linn

:description
On 0,96inch I2C OLED display connected to the Pico W, display text and selective
RPi motherboard sensor data received from Domoticz.
The Pico W runs a RESTful web server handling incoming data from a Domoticz
Automation event dzVents.
The incoming data is received from a HTTP POST request with JSON object to set the
text.
The JSON object contains for each of the displayed sensor data the block number,
title and value.
[{'block': 1, 'title': 'Time', 'value': '1403'}, {'block': 2, 'title': 'Temp',
'value': 42}, {'block': 3, 'title': 'CPU', 'value': 0.37}, {'block': 4, 'title':
'Mem', 'value': 22}, {'block': 5, 'title': 'ARM', 'value': 600}, {'block': 6,
'title': 'HDD', 'value': 39}]
This enables to set the OLED display layout from the Domoticz event.

:log
Domoticz Motherboard v20230323
Init OLED address=60, sda=GP0, scl=GP1
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command=[{'block': 1, 'title': 'Time', 'value': '1405'}, {'block': 2, 'title':
'Temp', 'value': 42}, {'block': 3, 'title': 'CPU', 'value': 0.45}, {'block': 4,
'title': 'Mem', 'value': 22}, {'block': 5, 'title': 'ARM', 'value': 600}, {'block':
6, 'title': 'HDD', 'value': 39}]
HTTP Response={"status": "OK", "title": [{"block": 1, "title": "Time", "value":
"1405"}, {"block": 2, "title": "Temp", "value": 42}, {"block": 3, "title": "CPU",
"value": 0.45}, {"block": 4, "title": "Mem", "value": 22}, {"block": 5, "title":
"ARM", "value": 600}, {"block": 6, "title": "HDD", "value": 39}], "message": ""}
Network connection closed

:wiring
OLED = Pico W
GND = GND
VCC = 3V3
SCL = GP1 (Pin #2)
SDA = GP0 (Pin #1)
"""

# Libraries
import time
from time import sleep
from machine import Pin, I2C
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# OLED display lib stored in Pico W folder lib
import ssd1306ex
from ssd1306ex import SSD1306_I2C
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
## Name (row 0), Version (row 1), Waiting (row 3) are displayed on the OLED
NAME = 'Domoticz Motherboard'
VERSION = 'v20230324'
WAITING = 'Waiting for data...'
## Title used for the HTTP JSON response to Domoticz key title
TITLE = 'Set OLED'
```

```

def init_oled(Pin_sda=ssd1306ex.PIN_SDA, pin_scl=ssd1306ex.PIN_SCL,
width=ssd1306ex.DISPLAY_WIDTH, height=ssd1306ex.DISPLAY_HEIGHT):
    """
    Create the OLED object. The I2C 0 is used.

    :param int pin_sda
    :param int pin_scl
    :param int width
        Width of the display, default = 128
    :param int height
        Height of the display, default = 64
    :return
        OLED object

    :example
        init_oled()
    """
    try:
        # Init I2C
        i2c = I2C(0, sda=Pin(Pin_sda), scl=Pin(Pin_scl), freq=400000)

        # OLED display with 128px width and 64px height and i2C
        oled = SSD1306_I2C(width, height, i2c)
        print(f'Init OLED address={oled.addr}, sda=GP{pin_sda}, scl=GP{pin_scl}'')

        # Return the OLED object
        return oled
    except OSError as e:
        raise RuntimeError('[ERROR] Init OLED: {e}.')
    
```

```

def handle_request(cmd, status):
    """
    Handle the OLED command defined as JSON object.
    The command defines for every sensor data the text and the OLED start position
    col/row.

    {'timestamp': {'text': 'RPi Info 10:52', 'col': 0, 'row': 0}, 'memoryusage':
    {'text': 'Mem:22%', 'col': 0, 'row': 3}, 'cpuusage': {'text': 'CPU:0.3%', 'col': 0,
    'row': 2}, 'internaltemperature': {'text': 'Temp:44C', 'col': 0, 'row': 1}}

    :param JSON object
        JSON object with key:value pair {"state":"on" or "off"}

    :status
        If status is 1 set the display else unknown command

    :return JSON object response
    """
    # Assign the command to the response title
    response[config.KEY_TITLE] = cmd

    # If the status is 1 (OK) then set the OLED display with the sensor data.
    if status == 1:
        # Clear the display first
        oled.clear()
        sleep(.1)

        # Set the sensor data in the text blocks 1-6
        for item in cmd:
            oled.text_block(item['block'], item['title'], item['value'])

        # Show the text blocks
        oled.show()

        # Set the response
        response[config.KEY_STATE] = config.STATE_OK
    
```

```
        response[config.KEY_MESSAGE] = config.MESSAGE_EMPTY
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

    # Return the response which is send to Domoticz
    return response

print(f'{NAME} {VERSION}')

# Create the OLED display object
oled = init_oled(ssd1306ex.PIN_SDA, ssd1306ex.PIN_SCL, ssd1306ex.DISPLAY_WIDTH,
ssd1306ex.DISPLAY_HEIGHT)

# Show initial info on the OLED. Waiting is replaced by RPi motherboard sensor data
oled.text_rows(NAME, VERSION, '', WAITING)

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd to set the OLED text as JSON object from the POST request
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to update the OLED text.
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network - Connection closed')
```

PIR Motion Sensor

Description

This project detects motion and sends a message to a Domoticz Alert sensor.

Solution


The Pico W has a Passive Infrared (PIR) sensor connected and listens to an interrupt assigned to the PIR sensor signal pin. The Pico W runs as a web server.

If a motion is detected, an HTTP API/JSON request is sent to Domoticz to set for an Alert Device the Level to 4 and the Text “Motion Detected”.

Also, a RED LED is blinking for a second.

In addition, a GREEN LED is blinking every 5 seconds to indicate the motion detector is working.


Block Diagram

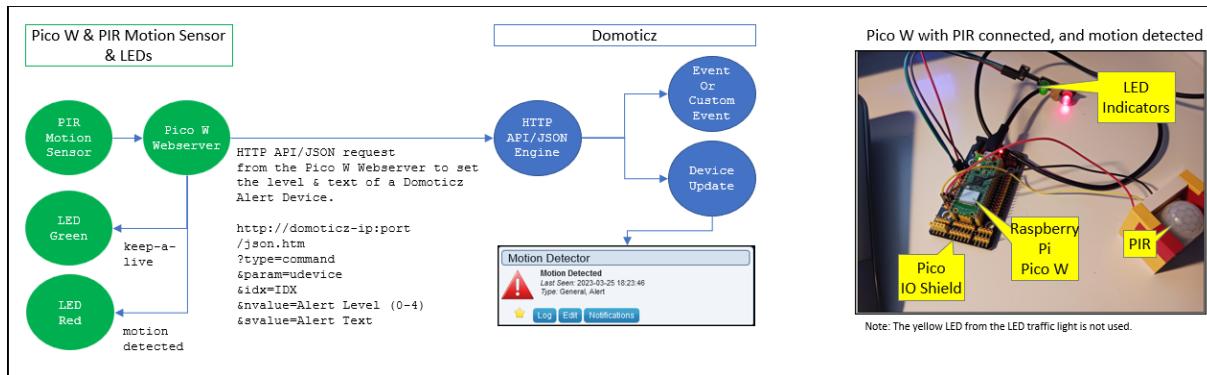

Wiring

| PIR | Pico W |
|------------------|---------------|
| VCC | 3V3 (Pin #36) |
| Signal | GP13 (Pin #1) |
| GND | GND (Pin #38) |
| LED RED | |
| + | GP2 (Pin #4) |
| LED GREEN | |
| + | GP4 (Pin #6) |

Circuit Diagram

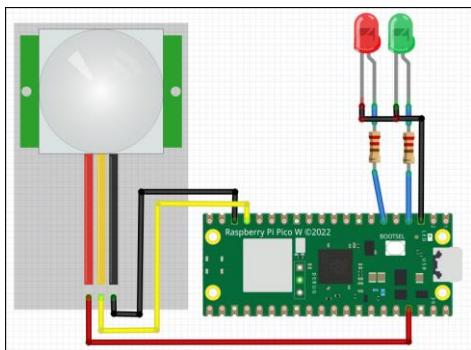

Domoticz Setup

Devices

From the hardware “Dummy”, create an Alert device:

Name: Motion Detector, Sensor Type: Alert

After creating the device, the Domoticz devices list shows the entry:

```
IDX=7, Hardware=VirtualSensors, ID=82007, Unit=1, Name=Motion Detector,
Type=General, SubType=Alert, Data=Motion Detected
```

Automation Script

No automation event used, but if additional action(s) required in case motion is detected, then for example an Event with trigger “Device Change” could be used.

```
--[[  
File: pir_motion_sensor.dzvents  
Date: 20230326  
Author: Robert W.B. Linn  
  
:description  
Listen to PIR motion device changes  
]]--  
  
-- Alert device  
IDX_ALERT = 7  
  
return {  
    -- Listen to device changes.  
    on = { devices = { IDX_ALERT } },  
    logging = { level = domoticz.LOG_INFO, marker = 'PIR', },  
    execute = function(domoticz, device)  
        domoticz.log(string.format('Device %s - Motion detected.', device.name))  
    end  
}
```

Web Server

Libraries

No dedicated PIR library used.

MicroPython Script

```
"""
File:pir-motion-detection.py
Date:20230325
Author: Robert W.B. Linn

:description
Pico W RESTful web server listening if a motion is detected.
If a motion is detected, an HTTP API/JSON request is send to Domoticz to set an the
Level and Text for an Alert Device.
Also a RED LED is blinking for a sec. In addition a GREEN LED is on every 5 seconds
to indicate the motion detector is working.
Example: Motion detected sets alert level 4 with text "Motion detected".

:log
pir-motion-detection v20230326
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Motion detected!
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=7&nvalue=4&svalue=Motion Detected
Send GET request status=OK
"""

# Libraries
import network
import socket
import time
from machine import Pin
# Server class from server.py
from server import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'pir-motion-detection'
VERSION = 'v20230326'

# Domoticz alert sensor
URL_DOM_ALERT_DEVICE = 'http://' + config.DOMOTICZ_IP +
'/json.htm?type=command&param=udevice&idx={IDX}&nvalue={LEVEL}&svalue={TEXT}'
IDX_ALERT_DEVICE = 7
ALERT_LEVEL = 4
ALERT_TEXT = 'Motion Detected'

# Motion detection duration (red led blinking): 1s = 10 cycles a 100ms
MOTION_DETECTION_DURATION = 10

# Create LED objects
# LED RED GPIO2 indicated motion detected (blinking)
led_red = machine.Pin(2, machine.Pin.OUT)
led_red.value(0)
# LED GREEN GPIO4 indicates motion detection process running
led_green = machine.Pin(4, machine.Pin.OUT)
led_green.value(0)

# Set GPIO13 PIR Interrupt as input
sensor_pir=Pin(13, Pin.IN, Pin.PULL_UP)
```

```
# Handle motion detection triggered by the interrupt
def pir_handler(Pin):
    print("Motion detected!")
    url = URL_DOM_ALERT_DEVICE
    url = url.replace('{IDX}', str(IDX_ALERT_DEVICE))
    url = url.replace('{LEVEL}', str(ALERT_LEVEL))
    url = url.replace('{TEXT}', str(ALERT_TEXT))

    network.send_get_request(url)

    # Let red led blink for a sec
    for i in range(MOTION_DETECTION_DURATION):
        led_red.toggle()
        time.sleep_ms(100)
    led_red.value(0)

# Attach external interrupt to GPIO13 and rising edge as an external event source
sensor_pir.irq(trigger=machine.Pin.IRQ_RISING, handler=pir_handler)

"""
Handle Request
"""
def handle_request(cmd):
    print(f'NOT USED')

"""
Main
"""
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    led_green.toggle()
    time.sleep(5)
```

BMP280 Temperature + Barometer

Description

This project reads in regular intervals, from a Bosch BMP280 environmental sensor, the temperature (°C) & barometric pressure (hPa) and sends the data to a Domoticz Temp+Baro device.

Ideas for Use


- Mini weather station,
- Room temperature control.

Solution

The Pico W has a BMP280 pressure & temperature sensor and LED connected and runs as a web server.

The web server reads in regular intervals the temperature & barometric pressure and sends the data via Domoticz HTTP API/JSON request to a Domoticz Temp+Baro device.


Block Diagram

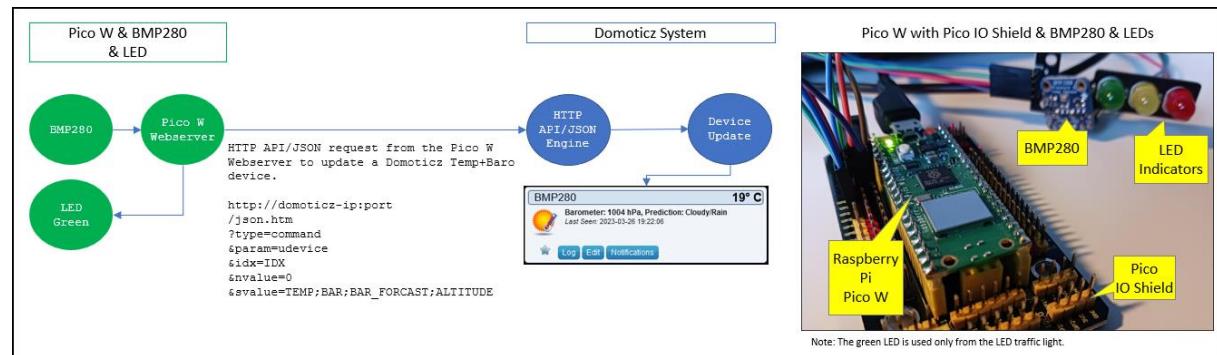

Wiring

| BMP280 | Pico W |
|---------------|---------------|
| VCC | 3V3 (Pin #36) |
| GND | GND (Pin #28) |
| SDI | GP0 (Pin #1) |
| SCK | GP1 (Pin #2) |
| <hr/> | |
| LED (green) | Pico W |
| + (Anode) | GP4 (Pin #6) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

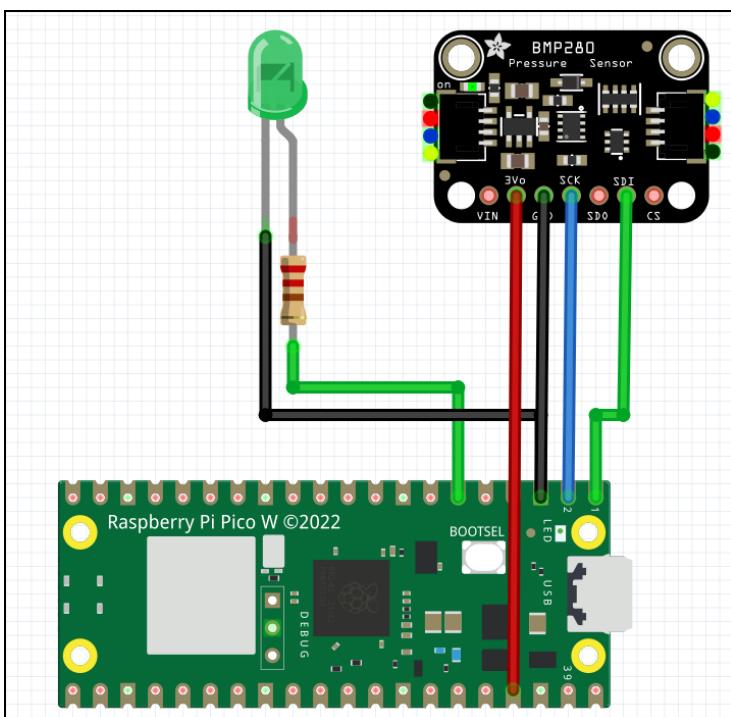

Domoticz Setup

Devices

From the hardware “Dummy”, create a Temp+Baro device:
Name: BMP280, Sensor Type: Temp+Baro

After creating the device, the Domoticz devices list shows the entry:

```
IDX=29, Hardware=VirtualSensors, ID=1406D, Unit=1, Name=BMP280, Type=Temp + Baro,
SubType=BMP085 I2C, Data=32.0 C, 1004.0 hPa
```

Automation Script

No automation event used, but if additional action(s) required in case device has changed, then for example an Event with trigger “Device Change” be used.

```
--[[  
File:    bmp280.dzvents  
Date:   20230418  
Author: Robert W.B. Linn  
  
:description  
Listen to bmp280 device changes. No action defined.  
]]--  
  
-- BMP280 device IDX  
IDX_BMP280 = 29  
  
return {  
    -- Listen to device changes.  
    on = { devices = { IDX_BMP280 } },  
    logging = { level = domoticz.LOG_INFO, marker = 'BMP280', },  
    execute = function(domoticz, device)  
        -- domoticz.log(device)  
        domoticz.log(string.format('Device %s has changed. New state %s', device.name,  
device.state))  
    end  
}
```

Web Server

Libraries

The MicroPython script uses external the MicroPython BMP280 library.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Credits

Thanks for developing & sharing the [micropython-bmp280 library](#).

MicroPython Script

```
"""
File:    bmp280.py
Date:    20230327
Author:  Robert W.B. Linn

:description
Read in regular intervals the BMP280 temperature and barometric pressure and update
a Domoticz Temp+Baro device.
The Domoticz devices are updated using HTTP API/JSON POST request Custom Event to
the Domoticz server.

:log
BMP280 v20230326
Sampling Rate: 60s.
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
BMP280 t=24,p=101340.5,hpa=1013,bar=1.013404,mmhg=760.1157,svalue=24;1013;0;0
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=29&nvalue=0&svalue=24;1013;0;0
Send GET request status=OK
"""

# Imports
from machine import Pin,I2C
from utime import sleep
# BMP280
from bmp280 import *
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'BMP280 v20230326'

# Create the led object (GP4, Pin #6) indicating bmp280 measurement in progress
led_green = Pin(4, Pin.OUT)
led_green.value(0)

# BMP280 SCK & SDA Pins and address
BMP_PIN_SDH = 0
BMP_PIN_SCK = 1
BMP_ADDR = 0x77
# BMP280 measurement sampling rate in seconds
SAMPLING_RATE = 60
# BMP280 IDX of the Domoticz Temp+Baro device
IDX_TEMP_BARO = 29
# URL Domoticz
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# The svalue is added in the main loop after getting the data from the BMP280.
# The svalue format: TEMP;BAR;BAR_FOR;ALTITUDE
```

```

URL_DOM = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx={IDX}&nvalue=0&svalue={SVALUE}"

# Create the bmp280 sensor object
# Init the bus with GPO (SDA) and GP1 (CLK)
bus = I2C(0, scl=Pin(BMP_PIN_SCK), sda=Pin(BMP_PIN_SDI), freq=200000)
# Create the bmp280 object with address 0x77. The default address 0x76 gives error
OSErr: [Errno 5] EIO
bmp = BMP280(bus, addr=BMP_ADDR)
# The use case is indoor
bmp.use_case(BMP280_CASE_INDOOR)

"""
Set the barometer forecast depending pressure.

:param int pressure

:return int forecast
    0=Stable,1=Sunny,2=Cloudy,3=Unstable,4=Thunderstorm,5=Unknown,6=Cloudy/Rain
"""

def barometer_forecast(pressure):
    if pressure < 966:
        return 4 # THUNDERSTORM
    elif pressure < 993:
        return 2 # CLOUDY
    elif pressure < 1007:
        return 6 # PARTLYCLOUDY
    elif pressure < 1013:
        return 3 # UNSTABLE
    elif pressure < 1033:
        return 0 # STABLE
    else:
        return 5 # Unknown

"""
BMP280 measurement with rounded values for temperature and pressure.
During measurement, the green led is on.

:return string svalue
    svalue with TEMP;BAR;BAR_FOR;ALTITUDE

:example svalue
    19;1004;6;0
"""

def get_bmp280_data():
    led_green.value(1)
    sleep(1)
    # print(f'BMP280 measuring...')
    temperature = round(bmp.temperature)
    pressure = bmp.pressure
    p_pa = pressure
    p_hpa = round(pressure/100)
    p_bar = pressure/100000
    p_mmHg = pressure/133.3224
    forecast = barometer_forecast(p_hpa)

    # Set the svalue, i.e. svalue=TEMP;BAR;BAR_FOR;ALTITUDE
    svalue = str(temperature) + ';' + str(p_hpa) + ';' + str(forecast) + ';' + str(0)
    print(f"BMP280
t={temperature},p={p_pa},hpa={p_hpa},bar={p_bar},mmhg={p_mmHg},svalue={svalue}")

    # Return the svalue
    led_green.value(0)
    return svalue

# Info
print(f'{VERSION}')
print(f'Sampling Rate: {SAMPLING_RATE}s.')

```

```
# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

# Domoticz url
url = URL_DOM
url = url.replace('{IDX}', str(IDX_TEMP_BARO))

# Main
while True:
    # Measure & submit BMP280 data to Domoticz
    network.send_get_request(url = url.replace('{SVALUE}', get_bmp280_data()))
    # Delay till next sample
    sleep(SAMPLING_RATE)
```

Potentiometer Dimmer

Description

This project enables to set the level 0-100% of a Domoticz Dimmer switch via potentiometer connected to the Pico W running as a web server.

Ideas for Use


- Control lights

Solution

The Pico W has a potentiometer and LED connected and runs as a web server.

The web server listens to potentiometer signal changes and sends the converted potentiometer signal via Domoticz HTTP API/JSON request to a Domoticz dimmer device (Type Light/Switch, Subtype Switch) to set the level between 0-100%.


Block Diagram

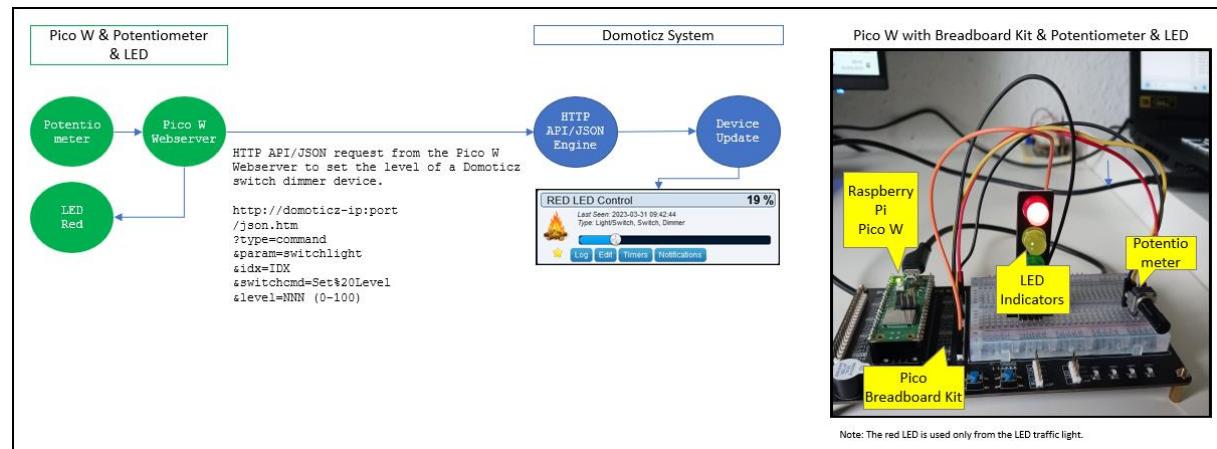

Wiring

| Potentiometer | Pico W |
|---------------|----------------------|
| VCC | 3V3 (Pin #36) |
| GND | GND (Pin #28) |
| Signal | GP26 (Pin #31, ADC0) |
| | |
| LED (red) | Pico W |
| + (Anode) | GP16 (Pin #6) |
| GND (Cathode) | GND (Pin #21) |

Circuit Diagram

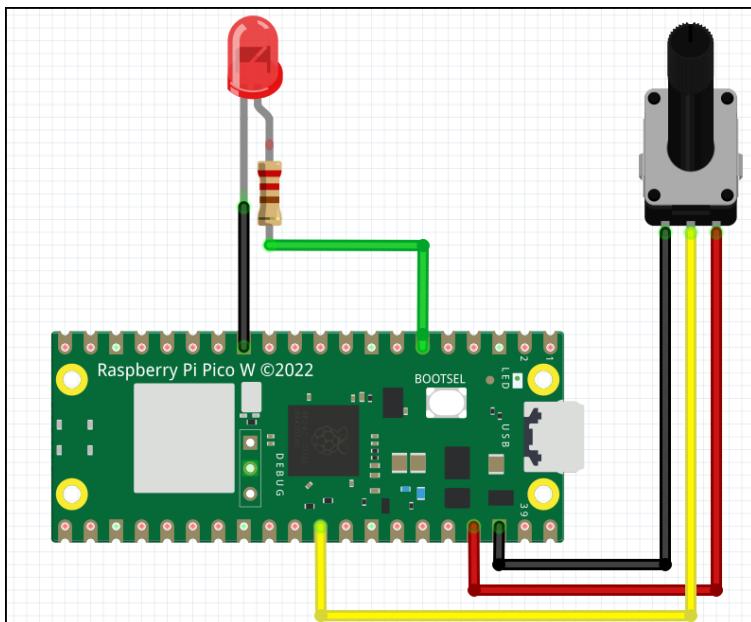

Domoticz Setup


Devices

Create a virtual sensor, hardware dummy, named Dimmer from sensor type Switch/Light.

After creating the device, the Domoticz devices list shows the entry:

```
Idx=1, Hardware=VirtualSensors, ID=00014051, Unit=1, Name=Dimmer,
Type=Light/Switch, SubType=Switch, Data=Off
```

The switch type Dimmer is set in the Switch device properties (edit the widget).

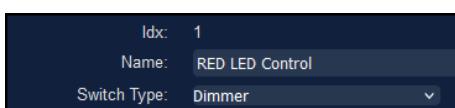

Automation Event

No automation event used, but if additional action(s) required in case device has changed, then for example an Event with trigger “Device Change” be used.

Web Server

Libraries

No additional libraries used, beside the server and the config script.

MicroPython Script

```
"""
File:potmeterdimmer.py
Date:20230330
Author: Robert W.B. Linn

:description
To dim a Domoticz dimmer switch.
The Domoticz device is updated using HTTP API/JSON request to the Domoticz server.

:notes
Pico Breadboard Kit is used to wire up the potmeter.
Configuration stored in config.py, ensure to upload to the picow.

:log
PotMeterDimmer v20230330
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
value=11026, level=17, prev_level=-1, abs=18
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=switchlight&idx=1&switchcmd=Set%20Level&level=1
7
Send GET request status=OK
value=224, level=0, prev_level=17, abs=17
Send GET request url=http://domoticz-
ip:port/json.htm?type=command&param=switchlight&idx=1&switchcmd=Set%20Level&level=0
Send GET request status=OK

:wiring
PotMeter = Pico W
VCC (+) = VBUS (Pin #40)
OUT = GP26 (Pin #31, ADC0)
GND (-) = GND (Pin #28)

LED = Pico W
+ (Anode) = GP16 (Pin #21)
"""

# Imports
from machine import Pin, ADC, PWM
from utime import sleep
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'PotMeterDimmer v20230330'

# Dimmer min max range using offsets
DIMMER_MAX = const(65500) # 65535
DIMMER_MIN = const(250) # 0

# Helper to map the PWM range to 0-100%
def mapRange(value, inMin, inMax, outMin, outMax):
    return outMin + (((value - inMin) / (inMax - inMin)) * (outMax - outMin))

# Create ADC0 object GP26
```

```
adc0 = ADC(0)

# Create PWM LED GP16 to control the dimmer level 0-100%
pwmled = PWM(Pin(16, Pin.OUT))
pwmled.freq(1000)

# IDX of the Domoticz Dimmer Switch device
IDX_DIMMER = 1
# URL Domoticz
# Note the idx of the domoticz device ( see GUI > Setup > Devices)
# /json.htm?type=command&param=switchlight&idx=99&switchcmd=Set%20Level&level=6
URL_DOM =
'http://'+config.DOMOTICZ_IP+'/json.htm?type=command&param=switchlight&idx='+str(IDX_DIMMER)+'&switchcmd=Set%20Level&level='

# Por meter noise level 2%
NOISE_LEVEL = 2
# Keep the previous level
prev_level = -1

"""
Get the dimmer level between 0-100.

:return int level
    level between 0-100

:example
    18
"""
def set_dimmer_level():
    global prev_level

    # Read ADC0
    # Noise reduction: Not used but either LSB divide (adc0.read_u16() >> 2) or
    remove (adc0.read_u16() & 0b1111111111111100)
    value = adc0.read_u16()

    # Map the potmeter range to 0-100
    level = round(mapRange(value, DIMMER_MIN, DIMMER_MAX, 0, 100))

    # Check if the abs value between the current and prev reading is greater noise
    level
    if abs(prev_level - level) > NOISE_LEVEL:
        print(f'value={value}, level={level}, prev_level={prev_level},'
              f'abs={abs(level - prev_level)}')

    # Set PWM-Duty-Cycle = brightness of the control LED
    pwmled.duty_u16(value)

    # Keep the prev level
    prev_level = level

    # Submit Domoticz HTTP API/JSON GET request to update the device
    network.send_get_request(URL_DOM + str(level))
    sleep(0.5)

# Info
print(f'{VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

# Main
while True:
    # Listen to potmeter changes & set domoticz dimmer to 0-100%
    set_dimmer_level()
```


DS18B20 Temperature (Push)

Description

This project reads in regular intervals the temperature ($^{\circ}\text{C}$), from DS18B20 1-wire digital thermometer sensors and sends (push) the data to Domoticz Temperature device(s).

Ideas for Use

- Mini weather station,
- Room temperature control.


Solution

The Pico W has two DS18B20 sensors and an LED connected and runs as a web server. The web server reads in regular intervals the temperature and sends the data via Domoticz HTTP API/JSON request to Domoticz Temperature device(s).

The two DS18B20 sensors are:

- Keyes DS18B20 sensor (address 28FF5E1804150334)
- Oumefar Digital Temperature DS18B20 sensor (address 28330A9497040373)


Block Diagram

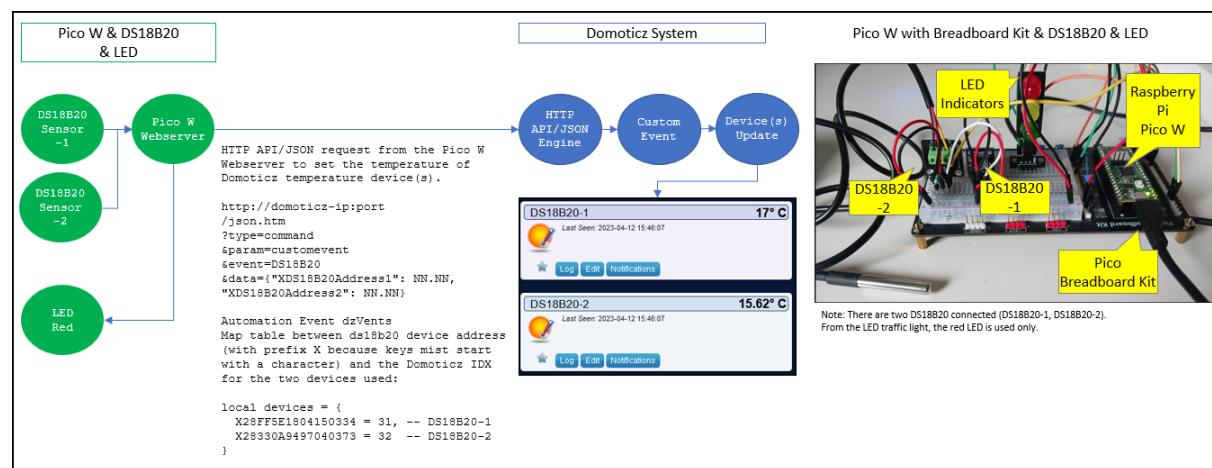

Wiring

| DS18B20 (2x) | Pico W |
|--|----------------|
| VCC | 3V3 (Pin #36) |
| GND | GND (Pin #28) |
| Data | GP15 (Pin #20) |
| The wiring applies to the two DS18B20 sensors. | |
| LED (green) | Pico W |
| + (Anode) | GP4 (Pin #6) |
| GND (Cathode) | GND (Pin #38) |

Circuit Diagram

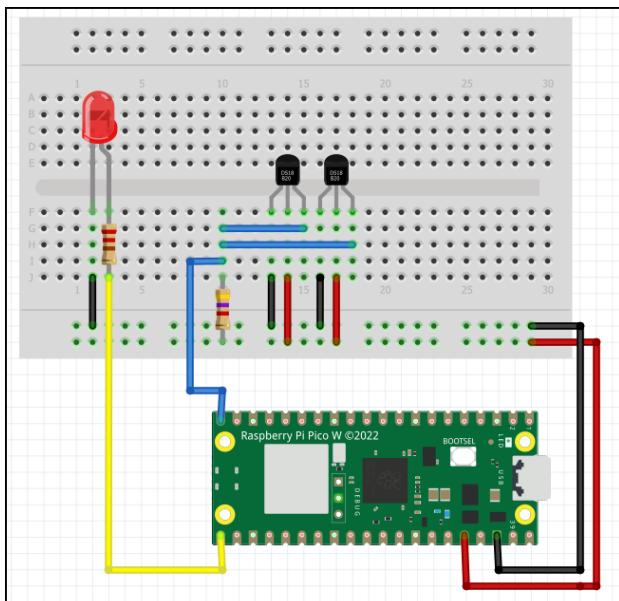

Domoticz Setup

Devices

From the hardware “Dummy”, create a Temperature device:

Name: DS18B20-1, Sensor Type: Temperature

Do the same if more DS18B20 devices, i.e.

Name: DS18B20-2, Sensor Type: Temperature

After creating the device(s), the Domoticz devices list shows the entries:

```
IDX=31, Hardware=VirtualSensors, ID=1406F, Unit=1, Name=DS18B20-1, Type=Temp,
SubType=LaCrosse TX3, Data=0.0 C
IDX=32, Hardware=VirtualSensors, ID=14070, Unit=1, Name=DS18B20-2, Type=Temp,
SubType=LaCrosse TX3, Data=0.0 C
```

Automation Script

A custom event handles updating the Domoticz temperature devices.
The event receives data as JSON array with key:value pairs:

```
device address : temperature

Example
{'X28FF5E1804150334': 16.5, 'X28330A9497040373': 15.25}
```

The DS18B20 device address has a prefix X to get handled by the custom event devices table.

```
-- [[
File: ds18b20_customevent.dzvents
Date: 20230412
Author: Robert W.B. Linn

:description
Listen to picow webserver request custom event command and update the temp devices
assigned to the ds18b20 device(s).

:log
023-04-12 15:42:03.651 Status: dzVents: Info: Handling Domoticz custom event for:
"DS18B20"
2023-04-12 15:42:03.652 Status: dzVents: Info: ----- Start internal script:
ds18b20_customevent: Custom event: "DS18B20"
2023-04-12 15:42:03.653 Status: dzVents: Info: d=X28FF5E1804150334, t=16.75
2023-04-12 15:42:03.678 Status: dzVents: Info: d=X28330A9497040373, t=15.50
2023-04-12 15:42:03.679 Status: dzVents: Info: ----- Finished ds18b20_customevent
2023-04-12 15:42:03.680 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
]]--

-- Custom event name as used by the PicoW webserver HTTP API/JSON POST request
local CUSTOM_EVENT_NAME = 'DS18B20'

-- Define map table between ds18b20 device address (with prefix X because keys must
start with a character) and the domoticz idx
local devices = {
    X28FF5E1804150334 = 31, -- DS18B20-1
    X28330A9497040373 = 32 -- DS18B20-2
}

-- Update the devices by looping over the Lua table containing address &
temperature
local function updateDevices(domoticz, data)
    for k,v in pairs(data) do
        -- d=X28FF5E1804150334, t=16.75
        -- d=X28330A9497040373, t=15.50
        domoticz.log(string.format('d=%s, t=%0.2f', k, v))
        -- Select the device and update
        domoticz.devices(devices[k]).updateTemperature(v)
    end
end

return {
    on = { customEvents = { CUSTOM_EVENT_NAME } },
    execute = function(domoticz, triggeredItem)
        if (triggeredItem.isCustomEvent) then
            -- Check the custom event name in case there are more custom events
            if (triggeredItem.trigger == CUSTOM_EVENT_NAME) then
                -- domoticz.log(triggeredItem.data)
                local data = triggeredItem.json
                updateDevices(domoticz, data)
            end
        end
    end
}
```

```
|     end  
| }
```

Web Server

Libraries

The MicroPython script uses the MicroPython internal libraries OneWire and DS18X20.

MicroPython Script

```
"""
File:ds18b20_customevent.py
Date:20230412
Author: Robert W.B. Linn

:description
Read in regular intervals the temperature of two DS18B20 devices and update the
temperature of the Domoticz devices named DS18B20-1, DS18B20-2.
Each DS18B20 has an unique 8-byte address, like 28 FF 5E 18 04 15 03 34.
The two DS18B20 sensors are:
* Keyes DS18B20 sensor (address 28FF5E1804150334)
* Oumefar Digital Temperature DS18B20 sensor (address 28330A9497040373)

The Domoticz devices are updated from a Domoticz Custom Event (dzVents) triggered
by a HTTP API/JSON CustomEvent request to the Domoticz server.
Example:
http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DS18B20&data={'X28FF5E1804150
334': 16.5, 'X28330A9497040373': 15.25}

:notes
Pico Breadboard Kit is used to wire up the DS18B20.
Configuration stored in config.py, ensure to upload to the picow.
DS18B20 measures every 60 seconds.

:log
DS18B20 v20230412
Sampling Rate: 60s.
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
One-Wire Devices found: 2
Device: 28FF5E1804150334
Device: 28330A9497040373
-----
Send POST request url=http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DS18B20&data=,
postdata={'X28FF5E1804150334': 16.5, 'X28330A9497040373': 15.25}
Send POST request status=OK

:wiring
DS18B20 = Raspberry Pi Pico W
VDD = 3V3 (Pin #36)
GND = GND (Pin #38)
Data = GP15 (Pin #20)
The wiring applies to N sensors.
"""

# Imports
from machine import Pin
from utime import sleep, sleep_ms
# The onewire and ds18x20 are micropython internal libs.
from onewire import OneWire
from ds18x20 import DS18X20
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
```

```

import config

# Constants
VERSION = 'DS18B20 v20230412'

# Create the led object indicating sensor measurement in progress
led_indicator = Pin(config.PIN_LED1, Pin.OUT)
led_indicator.value(0)

# DS18B20 Signal Pin GP15 #Pin 20
PIN_DS18B20 = 15
# DS18B20 measurement sampling rate in seconds
SAMPLING_RATE = 60
# URL Domoticz
URL_DOM = "http://"+ config.DOMOTICZ_IP
+"/json.htm?type=command&param=customevent&event=DS18B20&data="

# Init OneWire with the pin to which one or more DS18B20 sensors are connected
one_wire_bus = Pin(PIN_DS18B20)
# Init the DS18X20 class with constructor function
ds_sensor = DS18X20(OneWire(one_wire_bus))

"""
Read the temperature of the DS18B20 sensor(s).

:return json array
    JSON array with key:value pairs {"device address":temperature, ...}
    NOTE: The device address has prefix X to get handled by the Domoticz dzVents
custom event.
    {'X28FF5E1804150334': 16.5, 'X28330A9497040373': 15.1875}
"""

def read_ds_sensor():
    # Read & convert temperature
    ds_sensor.convert_temp()
    # Wait: min. 750 ms
    sleep_ms(750)
    # Loop over the devices to get the temperature
    result = {}
    for device in devices:
        device_address = 'X' + bytes(device).hex().upper()
        # print(f'Sensor: {device_address}')
        temperature = ds_sensor.read_temp(device)
        # print(f'Temperatur: {temperature}°C')
        # Add the device address and temperature to the json array
        result[device_address] = temperature
    # Return the json array with the data
    return result

# Info
print(f'{VERSION}')
print(f'Sampling Rate: {SAMPLING_RATE}s.')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

# Scan for One-Wire devices
# Get list of ROM addresses for all attached slaves. Each ROM address is an 8-byte
long byte array.
devices = ds_sensor.scan()
print(f'One-Wire Devices found: {len(devices)}')
for device in devices:
    print(f'Device: {bytes(device).hex().upper()}')
print('-----')

# Main
# Measure every NN seconds (see constant SAMPLING_DELAY)

```

```
while True:  
    led_indicator.value(1)  
    # Read the sensor(s)  
    data = read_ds_sensor()  
    # print(f'{data}')  
    # Submit Domoticz HTTP API/JSON POST request to update the devices via  
    customevent  
    network.send_post_request(URL_DOM, data)  
    led_indicator.value(0)  
    # Delay till next sample  
    sleep(SAMPLING_RATE)
```

DS18B20 Temperature (Pull)

Description

This project listens to HTTP client requests to read the temperature (°C), from DS18B20 1-wire digital thermometer sensors and sends an HTTP response with data to the client (Domoticz, Node-RED or other).

Solution

The Pico W has two DS18B20 sensors and an LED connected and runs as a web server.

The two DS18B20 sensors are (same as previous project with Push solution):

- Keyes DS18B20 sensor (address 28FF5E1804150334)
- Oumefar Digital Temperature DS18B20 sensor (address 28330A9497040373)

The web server listens to HTTP POST requests (JSON object) to read the sensor temperature (°C).

The JSON request object has key:value pair:

- request:1 | 0 where 1 is requesting for data.

```
{'request': 1} or {'request': 0}
```

The web server sends an HTTP response back to the client containing the data (JSON object).

The JSON object structure is Domoticz like with the keys

- status: OK or ERROR
- title: the HTTP POST request
- message: the sensor data as array with fields id, temperature and address for each sensor.

```
{
    "status": "OK",
    "title": "'request': 1",
    "message":
    [
        {"id": 1, "temperature": 17.0, "address": "28FF5E1804150334"},
        {"id": 2, "temperature": 13.875, "address": "28330A9497040373"}
    ]
}
```

Wiring

The wiring is described in project [DS18B20 Temperature \(Push\)](#).

Circuit Diagram

The circuit diagram is described in project [DS18B20 Temperature \(Push\)](#).

Web Server

Libraries

The MicroPython script uses the MicroPython internal libraries OneWire and DS18X20.

MicroPython Script

```
"""
File:ds18b20_client_pull.py
Date:20230413
Author: Robert W.B. Linn

:description
The Pico W runs as a web server and listens to post request from clients (PULL).
If the post request is {"request":1} then the temperatures of the connected sensors
are read.
The data is returned to the client as JSON object in Domoticz format:
{"status": "OK", "title": {"'request': 1"}, "message": [{"id": 1, "temperature": 22.0, "address": "28FF5E1804150334"}, {"id": 2, "temperature": 17.4375, "address": "28330A9497040373"}]}
The key message contains the JSON array with the DS18B20 address and temperature.

Each DS18B20 has a unique 8-byte address, like 28 FF 5E 18 04 15 03 34.
The two DS18B20 sensors are:
* Keyes DS18B20 (address 28FF5E1804150334)
* Oumefar Digital Temperature sensor DS18B20 (address 28330A9497040373)

:example
Using curl with HTTP response JSON object.
HTTP Request
curl -v -H "Content-Type: application/json" -d "{\"request\":1}" http://picow-ip
HTTP Response
{"status": "OK", "title": {"'request': 1"}, "message": [{"id": 1, "temperature": 22.0, "address": "28FF5E1804150334"}, {"id": 2, "temperature": 17.4375, "address": "28330A9497040373"}]}

:notes
Pico Breadboard Kit is used to wire up the DS18B20.
Configuration stored in config.py, ensure to upload to the picow.
DS18B20 measures every 60 seconds.

:log
DS18B20 v20230413
Sampling Rate: 60s.
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
One-Wire Devices found: 2
Device: 28FF5E1804150334
Device: 28330A9497040373
-----
Network client connected from client-ip
HTTP Command={'request': 1}
HTTP Response={"status": "OK", "title": {"'request': 1"}, "message": [{"id": 1, "temperature": 17.0, "address": "28FF5E1804150334"}, {"id": 2, "temperature": 13.875, "address": "28330A9497040373"}]}
Network connection closed
HTTP Command={'request': 0}
HTTP Response={"status": "ERROR", "title": {""request": 0}, "message": ""}
Network connection closed
Network client connected from client-ip

:wiring
DS18B20 = Raspberry Pi Pico W
VDD = 3V3 (Pin #36)
```

```
GND = GND (Pin #38)
Data = GP15 (Pin #20)
The wiring applies to N sensors.
"""

# Imports
from machine import Pin
from utime import sleep, sleep_ms
# The onewire and ds18x20 are micropython internal libs.
from onewire import OneWire
from ds18x20 import DS18X20
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'DS18B20 v20230412'

# Create the led object indicating sensor measurement in progress
led_indicator = Pin(config.PIN_LED1, Pin.OUT)
led_indicator.value(0)

# DS18B20 Signal Pin GP15 #Pin 20
PIN_DS18B20 = 15

# Init OneWire with the pin to which one or more DS18B20 sensors are connected
one_wire_bus = Pin(PIN_DS18B20)
# Init the DS18X20 class with constructor function
ds_sensor = DS18X20(OneWire(one_wire_bus))

"""
Read the temperature of the DS18B20 sensor(s).

:return json array
    JSON array with key:value pairs:
    [{"id": 1, "temperature": 17.0, "address": "28FF5E1804150334"}, 
     {"id": 2, "temperature": 13.875, "address": "28330A9497040373"}]
"""
def read_ds_sensor():
    # Read & convert temperature
    ds_sensor.convert_temp()
    # Wait: min. 750 ms
    sleep_ms(750)
    # Loop over the devices to get the temperature
    result = []
    id = 0
    for device in devices:
        device_address = bytes(device).hex().upper()
        # print(f'Sensor: {device_address}')
        temperature = ds_sensor.read_temp(device)
        # print(f'Temperatur: {temperature}°C')
        # Add the device address and temperature to the json array
        device = {}
        id = id + 1
        device["id"] = id
        device["address"] = device_address
        device["temperature"] = temperature
        result.append(device);
    # Return the json array with the data
    return result

"""
Handle the request containing the command as JSON object.

The DS18B20 sensor data is read if the command is {"request":1}.
The response JSON object is updated.
"""
```

```

:param string data
    JSON object with key:value pair containing the command

:return JSON object response
"""
def handle_request(data):
    # Get the JSON key request {"request":0 or 1}
    request = data["request"]
    if request == 1:
        # Response is OK
        response[config.KEY_STATE] = config.STATE_OK
        response[config.KEY_MESSAGE] = read_ds_sensor()
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = ""
    return response

# Info
print(f'{VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

# Scan for One-Wire devices
# Get list of ROM addresses for all of the attached slaves. Each ROM address is an
# 8-byte long bytearray.
devices = ds_sensor.scan()
print(f'One-Wire Devices found: {len(devices)}')
for device in devices:
    print(f'Device: {bytes(device).hex().upper()}')
print('-----')

# Main
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Create the HTTP response JSON object
        response = {}

        # Parse the post data. In case of error, the status is 0.
        data, status = network.parse_post_request(request)

        # Assign the postdata to the response KEY_TITLE: {"request": 1} or 0
        response[config.KEY_TITLE] = str(data)

        # If status is 1, then the post response is properly parsed, lets get the
        # sensor data.
        if status == 1:
            response = handle_request(data)
            # HTTP Response={"status": "OK", "title": {"request": 1}, "message": {
            ("28FF5E1804150334": 19.75, "28330A9497040373": 15.5625)}
        else:
            # Error with unknown command
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

        # Send response to the client and close the connection
        network.send_response(cl, response, True)

    except OSError as e:
        network.ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')


```


Node-RED Client

This solution uses Node-RED as client.

Node-RED is running on the Domoticz Test System.

Block Diagram

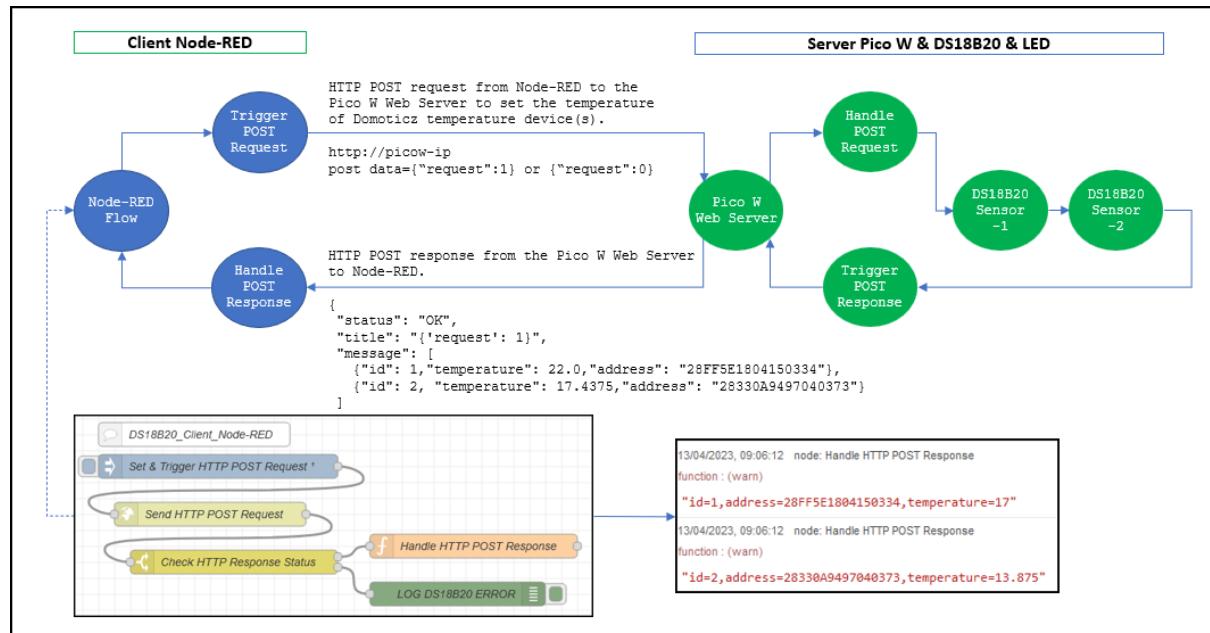

Node-RED Flow

The flow starts with the Inject node “Set & Trigger HTTP POST Request”, to the msg.payload = {“request”:1} and the msg.url = “picow-ip”.

The node injects after 0.1 second, the HTTP Request node “Send HTTP POST Request” to submit the HTTP POST request to the Pico W Web Server.

The HTTP response JSON object, key status is checked by the Switch node “Check HTTP Response” on OK or ERROR.

If the msg.payload.status is OK, then the Function node “Handle HTTP POST Response” lists the DS18B20 sensor data derived from the JSON array in the key msg.payload.message.

```
// Get the device data from the key message of the payload
data = msg.payload.message;
// node.warn(data);

// Loop over the data
data.forEach(getDevices);

function getDevices(item, index) {
    // node.warn(JSON.stringify(item), index)
    // get the device data
    let device = JSON.parse(JSON.stringify(item));
    node.warn("id=" + device.id + ",address=" + device.address + ",temperature=" + device.temperature);
}
```

Node-RED Flow Source

```
[{"id": "5e7fdee23c9d653f", "type": "tab", "label": "DMPP", "disabled": false, "info": "domoticz-micropython-projects", "env": []}, {"id": "23a82a4e9c805de6", "type": "inject", "z": "5e7fdee23c9d653f", "name": "Set & Trigger HTTP POST Request", "props": [{"p": "payload"}, {"p": "url", "v": "http://picow-ip", "vt": "str"}], "repeat": "", "crontab": "", "once": true, "onceDelay": 0.1, "topic": "", "payload": "{\"request\":1}", "payloadType": "json", "x": 190, "y": 80, "wires": [[{"b88c7ce9a1832e9a"}]], {"id": "b88c7ce9a1832e9a", "type": "http request", "z": "5e7fdee23c9d653f", "name": "Send HTTP POST Request", "method": "POST", "ret": "obj", "paytoqs": "ignore", "url": "", "tls": "", "persist": false, "proxy": "", "insecureHTTPParser": false, "authType": "", "senderr": false, "headers": [], "x": 180, "y": 140, "wires": [[{"17d1f4aa93e79c5"}]]}, {"id": "7b7b06756ee15219", "type": "debug", "z": "5e7fdee23c9d653f", "name": "LOG DS18B20 ERROR", "active": true, "tosidebar": true, "console": false, "tostatus": false, "complete": "payload", "targetType": "msg", "statusVal": "", "statusType": "auto", "x": 490, "y": 240, "wires": []}, {"id": "854cb3f9d6670309", "type": "comment", "z": "5e7fdee23c9d653f", "name": "DS18B20_Client_Node-RED", "info": "DS18B20 Get Temperature\n\nSent a HTTP POST request to the Pico W web server.\n\nThe post data contains a JSON object:\n\n{\\"request\":1}\n\nor\n\n{\\"request\":0}\n\nSet 1 to ask for data.\n\nThe HTTP response is a JSON object.\n\nThe key message holds the data from the sensors.\n\nThe data is a JSON array.\n\n  \\"status\\":\\"OK\\",\n  \\"title\\":\\"{'request': 1}\\",\n  \\"message\\":\n    \\\n      \\"id\\\":1,\\"temperature\\":22,\\"address\\":\\"28FF5E1804150334\\",\n      \\"id\\\":2,\\"temperature\\":17.4375,\\"address\\":\\"28330A9497040373\\\"\n    ]\n  ,\n  \"x\":160,\n  \"y\":40,\n  \"wires\":[]}, {"id": "ef2c522da453a408", "type": "function", "z": "5e7fdee23c9d653f", "name": "Handle HTTP POST Response", "func": "// Get the device data from the key message of the payload\ndata = msg.payload.message;\n\n// node.warn(data);\n\n// Loop over the data\ndata.forEach(getDevices);\n\nfunction getDevices(item, index) {\n  // node.warn(JSON.stringify(item), index)\n  // get the device data\n  let device = JSON.parse(JSON.stringify(item));\n  node.warn(\"id=\" + device.id + \",address=\" + device.address + \",temperature=\\" + device.temperature);\n}\n\n\", "outputs": 1, "noerr": 0, "initialize": "", "finalize": "", "libs": [], "x": 510, "y": 180, "wires": [[]]}, {"id": "17d1f4aa93e79c5", "type": "switch", "z": "5e7fdee23c9d653f", "name": "Check HTTP Response Status", "property": "payload.status", "propertyType": "msg", "rules": [{"t": "eq", "v": "OK", "vt": "str"}, {"t": "eq", "v": "ERROR", "vt": "str"}], "checkall": "true", "repair": false, "outputs": 2, "x": 210, "y": 200, "wires": [[{"ef2c522da453a408"}, {"7b7b06756ee15219"}]]}]
```


Domoticz Client

This solution uses Domoticz as client.

An Automation Event dzVents triggers every minute or via a switch, an HTTP POST request to the Pico W Web Server.

The web server reads the temperature of the DS18B20 sensors and sends HTTP response back to the Automation Event. The response is a JSON object which is parsed to update the Domoticz Temperature devices.

Block Diagram

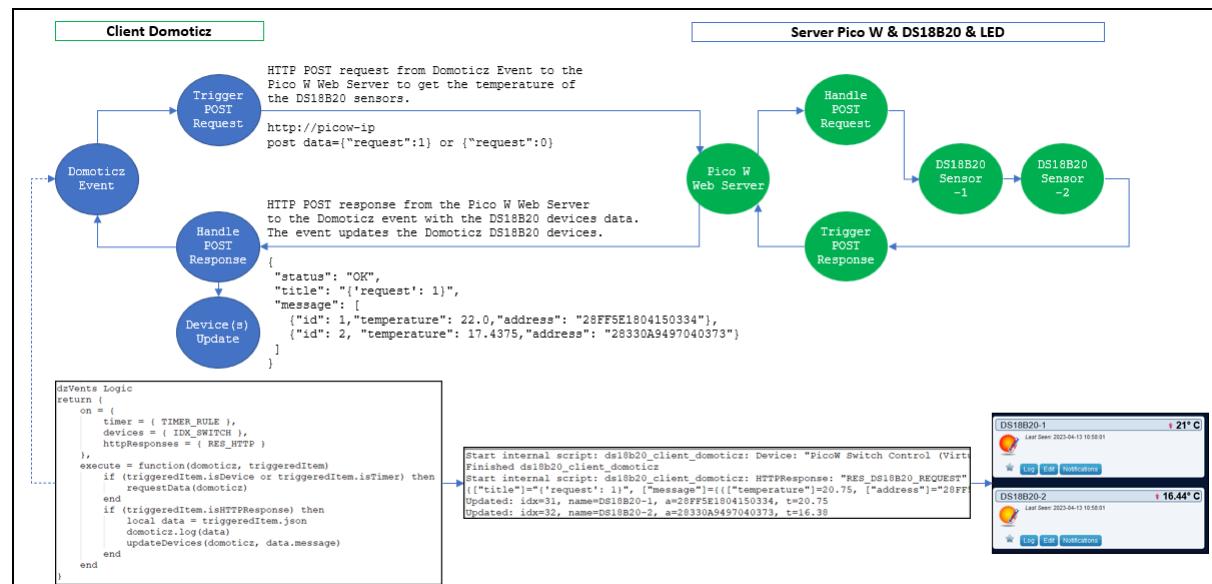

Automation Script

```
--[[[
File:    ds18b20_client_domoticz.dzvents
Date:    20230413
Author:  Robert W.B. Linn

:description
Requests in regular intervals DS18B20 sensor data from a Pico W Web Server.
The HTTP response JSON object is parsed and the Domoticz temperature devices
assigned to the ds18b20 device(s) are updated.
{["message"]={{["temperature"]=19.5, ["address"]="28FF5E1804150334", ["id"]=1},
 {["temperature"]=15.4375, ["address"]="28330A9497040373", ["id"]=2}},
 ["status"]="OK", ["title"]={"request": 1}}

:log
2023-04-13 10:54:29.351 VirtualSensors: Light/Switch (PicoW Switch Control)
2023-04-13 10:54:29.345 Status: User: admin initiated a switch command (16/PicoW
Switch Control/On)
2023-04-13 10:54:29.452 Status: dzVents: Info: Handling events for: "PicoW Switch
Control", value: "On"
2023-04-13 10:54:29.452 Status: dzVents: Info: LOG_DS18B20_REQUEST: ----- Start
internal script: ds18b20_client_domoticz: Device: "PicoW Switch Control
(VirtualSensors)", Index: 16
2023-04-13 10:54:29.453 Status: dzVents: Info: LOG_DS18B20_REQUEST: ----- Finished
ds18b20_client_domoticz
2023-04-13 10:54:29.453 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
2023-04-13 10:54:30.428 Status: dzVents: Info: Handling httpResponse-events for:
"RES_DS18B20_REQUEST"
2023-04-13 10:54:30.428 Status: dzVents: Info: LOG_DS18B20_REQUEST: ----- Start
internal script: ds18b20_client_domoticz: HTTPResponse: "RES_DS18B20_REQUEST"
2023-04-13 10:54:30.428 Status: dzVents: Info: LOG_DS18B20_REQUEST:
{["title"]={"request": 1}, ["message"]={{["temperature"]=20.75,
["address"]="28FF5E1804150334", ["id"]=1}, {["temperature"]=16.375,
["address"]="28330A9497040373", ["id"]=2}}, ["status"]="OK"}
2023-04-13 10:54:30.440 Status: dzVents: Info: LOG_DS18B20_REQUEST: Updated:
idx=31, name=DS18B20-1, a=28FF5E1804150334, t=20.75
2023-04-13 10:54:30.441 Status: dzVents: Info: LOG_DS18B20_REQUEST: Updated:
idx=32, name=DS18B20-2, a=28330A9497040373, t=16.38
2023-04-13 10:54:30.441 Status: dzVents: Info: LOG_DS18B20_REQUEST: ----- Finished
ds18b20_client_domoticz
2023-04-13 10:54:30.441 Status: EventSystem: Script event triggered:
/home/pi/domoticz/dzVents/runtime/dzVents.lua
]]-- 

-- Domoticz IDX of the switch triggering the request
local IDX_SWITCH = 16

local URL_SERVER      = 'http://picow-ip'
local PROJECT         = 'DS18B20_REQUEST'
local RES_HTTP         = 'RES ' .. PROJECT
local LOG_MARKER       = 'LOG-' .. PROJECT

-- Define map table between ds18b20 device address (with prefix X because keys must
-- start with a character) and the domoticz idx
local devices = {
    X28FF5E1804150334 = 31, -- DS18B20-1
    X28330A9497040373 = 32 -- DS18B20-2
}

-- Send HTTP POST request to get the sensor data from the Pico W Web Server
local function requestData(domoticz)
    local postdata = {}
    postdata["request"] = 1
    domoticz.openURL({
        url = URL_SERVER, method = 'POST',
        
```

```

        postData = postdata, callback = RES_HTTP,
    })
end

-- Update the devices by looping over the Lua array data and the Lua device table
-- containing address & temperature.
-- The data is taken from the key message from the HTTP JSON response.
-- {[{"address":"28FF5E1804150334", "id":1, "temperature":19.25},
-- {"address":"28330A9497040373", "id":2, "temperature":15.5}]
local function updateDevices(domoticz, data)
    for i, device in ipairs(data) do
        -- Select the device and update
        local deviceaddress = 'X' .. device.address
        local deviceidx = devices[deviceaddress]
        domoticz.devices(deviceidx).updateTemperature(device.temperature)
        domoticz.log(string.format('Updated: idx=%s, name=%s, a=%s, t=%0.2f',
domoticz.devices(deviceidx).idx, domoticz.devices(deviceidx).name, device.address,
device.temperature))
    end
end

--Timer Rule (for tests use every minute)
local TIMER_RULE = 'every minute'

return {
    on = {
        timer = { TIMER_RULE },
        devices = { IDX_SWITCH },
        httpResponses = { RES_HTTP }
    },
    logging = {
        level = domoticz.LOG_INFO,
        marker = LOG_MARKER,
    },
    execute = function(domoticz, triggeredItem)
        -- Trigger the HTTP POST request to the Pico W Web Server
        if (triggeredItem.isDevice or triggeredItem.isTimer) then
requestData(domoticz) end

        -- Handle HTTP response: OK is item statusCode 200 and item.ok true
        -- Else error like statusCode 7, item.ok false
        if (triggeredItem.isHTTPResponse) then
            -- domoticz.log(string.format("%d %s", item.statusCode, item.ok))
            if (triggeredItem.statusCode == 200) then
                if (triggeredItem.isJSON) then
                    local data = triggeredItem.json
                    domoticz.log(data)
                    updateDevices(domoticz, data.message)
                end
            else
                -- Error like 7 false; ERROR 7:Couldn't connect to server
                domoticz.log(string.format("ERROR %d:%s", item.statusCode,
item.statusText))
            end
        end
    end
}
}

```

Stepper Motor Selector Switch Angle Move

Description

This project moves a stepper motor by step via a Domoticz Selector Switch device.

Solution

The Pico W has a 28BYJ-48 Stepper Motor with ULN2003 motor driver connected and runs as a web server.


The web server waits for a HTTP POST requests from a client connection. The POST data contains the command for moving the stepper motor.

The commands supported are

- “angle” - move the stepper motor by a given angle clockwise or anti-clockwise,
- “steps” - move the stepper motor by number of steps clockwise or anti-clockwise,
- “rotate” - rotate the stepper motor by number of rotations clockwise or anti-clockwise,

The block diagram shows the solution to move the stepper motor by an angle 5° clockwise or anti-clockwise by a Domoticz Selector Switch.


Block Diagram

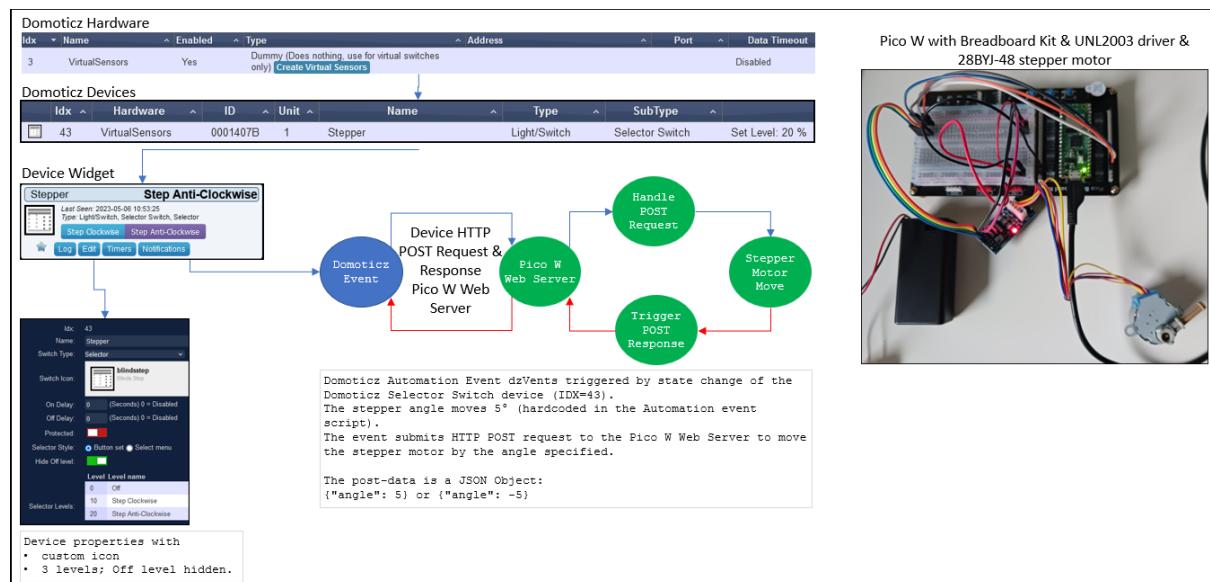

Wiring

| Stepper Motor Driver ULN2003 | Pico W |
|------------------------------|--------------|
| IN1 | GP2 (Pin #4) |
| IN2 | GP3 (Pin #5) |
| IN3 | GP4 (Pin #6) |
| IN4 | GP5 (Pin #7) |
| VCC = External 5V | |
| GND = External 5V | |

Circuit Diagram

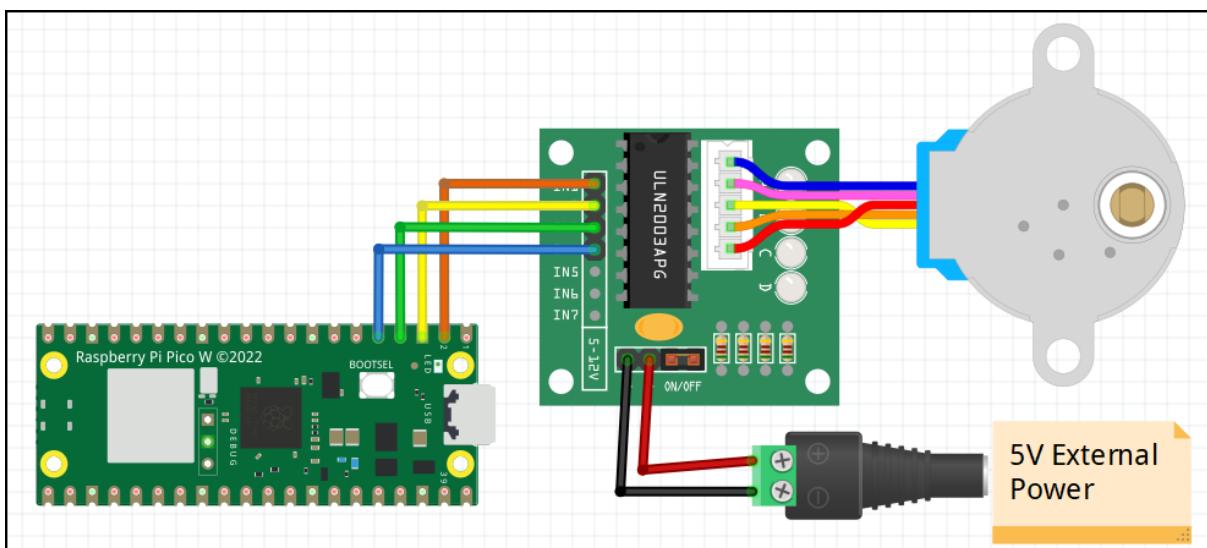

Domoticz Setup

Devices

From the hardware “Dummy”, create a Selector Switch device:

Name: Stepper, Sensor Type: Selector Switch

After creating the device, the Domoticz devices list shows the entry:

```
IDX=43, Hardware=VirtualSensors, ID=0001407B, Unit=1, Name=Stepper,
Type=Light/Switch, SubType=Selector Switch, Data=0ff
```

Automation Script

The automation script is triggered by the state change of the selector switch.

```
-- [[
File:    steppermotor.dzvents
Date:   20230506
Author: Robert W.B. Linn

:description
Turn the stepper motor stepwise in the direction clockwise or anticlockwise by
using a Domoticz Selector Switch. The selector switch has 3 levels 0, 10, 20.
The level 0, Off, is not used. Level 10 is Step Clockwise, and level 20 is Step
Anti-Clockwise. This means the selector switch shows two buttons Step Clockwise and
Step Anti-Clockwise. Each step moves the stepper motor in the direction by an angle
of 5°. The angle is hardcoded but could be set flexible via a User Variable.
]]--

-- Domoticz device Selector Switch
local IDX_STEPPER_SELECTOR = 43
-- Pico W web server IP address
local HTTP_URL      = 'http://picow-ip'
-- Callback and logging
local PROJECT       = 'STEPPER'
local HTTP_RES      = 'RES_' .. PROJECT
local LOG_MARKER    = 'LOG_' .. PROJECT
-- Stepper
local ANGLE_MOVE   = 5

-- Post Data to the Pico W Webserver.
-- The data is a JSON object with the servo angle to move: {"angle":NNN}
local function HTTPPost(domoticz, angle)
    local data = {}
    data['angle'] = angle
    domoticz.log(data)
    domoticz.openURL({
        url = HTTP_URL, method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = data, callback = HTTP_RES,
    })
end

return {
    on = { devices = { IDX_STEPPER_SELECTOR }, httpResponses = { HTTP_RES } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
    execute = function(domoticz, item)
        if (item.isDevice) then
            if item.idx == IDX_STEPPER_SELECTOR then
                domoticz.log(string.format("device=%s, state=%s, level=%d",
                    item.name, item.state, item.level))
                local angle
                if item.level == 10 then angle = ANGLE_MOVE end
            end
        end
    end
}
```

```
    if item.level == 20 then angle = ANGLE_MOVE * -1 end
    HTTPPost(domoticz, angle)
end
end
if (item.isHTTPResponse) then
    if (item.isJSON) then
        -- {"status": "OK", "title": "{\"angle\": 5}", "message": "5"}
        local data = item.json
        domoticz.log(string.format("status=%s, title=%s, message=%s",
            data.status, data.title, data.message))
    end
end
end
}
```

Web Server

Libraries

The MicroPython script uses the MicroPython library *stepper* stored in Pico W folder lib.

Credits

The stepper library is based on the [ULN2003](#) library (c) IDWizard 2017, # MIT License.
Thanks for developing & sharing.

```
"""
File: stepper.py
Date: 20230506
Author: Robert W.B. Linn

:description
Library for the stepper motor 8BYJ-48 5V DC with ULN2003 motor driver.
Tested on a Raspberry Pi Pico W.

:credits
This library is based upon the Micropython code to drive stepper motors via ULN2003
with the BBC micro:bit.
https://github.com/IDWizard/uln2003 (c) IDWizard 2017, # MIT License. Thanks for
developing & sharing.

:usage
stepper = Stepper('HALF_STEP',2 , 3, 4, 5, delay=1)

stepper.step(60, 1)
time.sleep(1)
stepper.step(-60)
time.sleep(1)

stepper.angle(90, 1)
time.sleep(1)
stepper.angle(-90)
time.sleep(1)

stepper.rotate(1)
time.sleep(1)
stepper.rotate(-1)
time.sleep(1)
"""

# Imports
from machine import Pin
import time

#
class Stepper:
    # The number of steps for a full rotation. Between 508-509 steps for one
    revolution.
    # Reference: http://www.jangeox.be/2013/10/stepper-motor-28byj-48_25.html
    FULL_ROTATION = int(4075.7728395061727 / 8)

    # Modes
    HALF_STEP_MODE = 'HALF_STEP'
    FULL_STEP_MODE = 'FULL_STEP'

    # Mode bit sequences for the 4 motor pins
    HALF_STEP = [
        [0, 0, 0, 1],
        [0, 0, 1, 1],
        [0, 0, 1, 0],
        [0, 1, 1, 0],
```

```
[0, 1, 0, 0],
[1, 1, 0, 0],
[1, 0, 0, 0],
[1, 0, 0, 1],
]

FULL_STEP = [
    [1, 0, 1, 0],
    [0, 1, 1, 0],
    [0, 1, 0, 1],
    [1, 0, 0, 1]
]

def __init__(self, mode=HALF_STEP_MODE, IN1=2, IN2=3, IN3=4, IN4=5, delay=1):
    """
    Init the class with default Pico pins GP2 - GP5.

    :param stepmode string
        Set the stepmode to HALF_STEP_MODE or FULL_STEP_MODE

    :param IN1 - IN4 int
        Set the 4 stepper motor pin numbers.
        The defaults are the Raspberry Pico pins GP2 (Pin #4) - GP5 (Pin #7).

    :param delay int
        Set the step move delay in ms.

    """
    if mode == self.FULL_STEP_MODE:
        self.mode = self.FULL_STEP
    else:
        self.mode = self.HALF_STEP

    self.pin1 = Pin(IN1, Pin.OUT)
    self.pin2 = Pin(IN2, Pin.OUT)
    self.pin3 = Pin(IN3, Pin.OUT)
    self.pin4 = Pin(IN4, Pin.OUT)
    # Recommend 10+ for FULL_STEP, 1 is OK for HALF_STEP
    self.delay = delay

    # Initialize all pins to 0
    self.reset()

def step(self, count, direction=1):
    """
    Move the stepper by steps.

    :param count int
        Set the number of steps to move.
        If count == -1 then direction is anti-clockwise.

    :param direction int
        Set the stepper motor move direction.
        Directions: clockwise (cw) = 1, anti-clockwise (acw) = -1
    """
    if count < 0:
        direction = -1
        count = abs(count)
    for x in range(count):
        for bit in self.mode[::-direction]:
            self.pin1(bit[0])
            self.pin2(bit[1])
            self.pin3(bit[2])
            self.pin4(bit[3])
            time.sleep_ms(self.delay)
    self.reset()

def angle(self, r, direction=1):
    """
```

```
Move the stepper by angle.

:param angle int
    Set the angle to move the stepper motor.
    If r < 0 then direction is anti-clockwise.

:param direction int
    Set the stepper motor move direction.
    Directions: clockwise (cw) = 1, anti-clockwise (acw) = -1
"""
if r < 0:
    direction = -1
    r = abs(r)
self.step(int(self.FULL_ROTATION * r / 360), direction)

def rotate(self, count, direction=1):
    """
    Rotate the stepper by 360°.

    :param count int
        Set the number of rotations to move.
        If count == -1 then direction is anti-clockwise.

    :param direction int
        Set the stepper motor move direction.
        Directions: clockwise (cw) = 1, anti-clockwise (acw) = -1
"""
    if count < 0:
        direction = -1
        count = abs(count)
    for n in range(count):
        self.angle(360, direction)

def reset(self):
    """
    Reset to the stepper motor pins to 0.
    There is no holding, the pins are geared, not movable.
    """
    self.pin1(0)
    self.pin2(0)
    self.pin3(0)
    self.pin4(0)
```

MicroPython Script

```
"""
File: steppermotor.py
Date: 20230506
Author: Robert W.B. Linn

:description
PicoW RESTful webserver to move a stepper motor (28BYJ-48 Stepper Motor with
ULN2003 motor driver).
The incoming data is from a HTTP POST request with JSON object (key:value pair)
containing the command to control the stepper motor:
angle: NNN
steps: NNN
rotate: NNN

:examples
Command submitted using curl with HTTP response.

curl -v -H "Content-Type:application/json" -d "{\"angle\":90}" http://picow-ip
{"title": {"'angle': 90}, "message": "90", "status": "OK"}

curl -v -H "Content-Type:application/json" -d "{\"angle\":-90}" http://picow-ip
{"title": {"'angle': -90}, "message": "-90", "status": "OK"}

curl -v -H "Content-Type:application/json" -d "{\"steps\":-200}" http://picow-ip
{"status": "OK", "title": {"'steps': -200}, "message": "-200"}

curl -v -H "Content-Type:application/json" -d "{\"rotate\":2}" http://picow-ip
{"status": "OK", "title": {"'rotate': 2}, "message": "2"}

curl -v -H "Content-Type:application/json" -d "{\"rotate\":-2}" http://picow-ip
{"status": "OK", "title": {"'rotate': -2}, "message": "-2"}

Error example:
curl -v -H "Content-Type:application/json" -d "{\"step\":100}" http://picow-ip
{"status": "ERROR", "title": {"'step': 100}, "message": "Unknown command."}

:log
Stepper Motor v20230505
Network waiting for connection...
Network connected OK
Network IP picow-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command={'steps': -200}
HTTP Response={"status": "OK", "title": {"'steps': -200}, "message": "-200"}
Network connection closed
Network client connected from client-ip
HTTP Command={'step': 100}
HTTP Response={"status": "ERROR", "title": {"'step': 100}, "message": "Unknown command."}
Network connection closed
Network client connected from client-ip
HTTP Command={'steps': -200}
HTTP Response={"status": "OK", "title": {"'steps': -200}, "message": "-200"}
Network connection closed
Network client connected from client-ip
HTTP Command={'rotate': 2}
HTTP Response={"status": "OK", "title": {"'rotate': 2}, "message": "2"}
Network connection closed
Network client connected from client-ip
HTTP Command={'rotate': -2}
HTTP Response={"status": "OK", "title": {"'rotate': -2}, "message": "-2"}
Network connection closed

:wiring
Stepper Motor = Pico W
```

```
IN1 = GP2
IN2 = GP3
IN3 = GP4
IN4 = GP5
VCC = External 5V
GND = GND common with external GND
"""

# Libraries
# Steppermotor lib created by the author
from machine import Pin
from time import sleep
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Stepper stored in PicoW folder lib
# Credits: This library is based on: https://github.com/IDWizard/uln2003 (c)
IDWizard 2017, # MIT License.
from stepper import Stepper
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'Stepper Motor'
VERSION = 'v20230506'

# Create a stepper motor object with defaults
stepper = Stepper()

"""

Handle the request to move the stepper.

"""

def handle_request(cmd, status):
    # Assign the command to the response title
    response[config.KEY_TITLE] = str(cmd)
    # Set the response initially to ok
    response[config.KEY_STATE] = config.STATE_OK

    # If the status is 1 (OK) then action
    if status == 1:

        # Get the command by checking the json key
        if cmd.get('angle') != None:
            # Get the angle of the stepper to move
            angle = cmd['angle']
            # Move the stepper by angle
            stepper.angle(angle)
            response[config.KEY_MESSAGE] = str(angle)

        elif cmd.get('steps') != None:
            # Get the number of steps for the stepper to move
            steps = cmd['steps']
            # Move the stepper by steps
            stepper.step(steps)
            response[config.KEY_MESSAGE] = str(steps)

        elif cmd.get('rotate') != None:
            # Get the number of steps for the stepper to move
            ntimes = cmd['rotate']
            # Move the stepper by rotation
            stepper.rotate(ntimes)
            response[config.KEY_MESSAGE] = str(ntimes)

        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

    else:
        response[config.KEY_STATE] = config.STATE_ERR
```

```
response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

# Return the response which is send to Domoticz
return response

# Main
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd to set the LCD text as JSON object from the POST request
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to set the servo pos
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')
```

Enhancement Ideas

LED Indicators

If the stepper motor is moving, turn a RED LED on else turn a GREEN LED on indicating stand-by.

See steppermotorled.py.

Multiple Steppers

Control more than one stepper.

Stepper Motor Blind Simulation

Description

This project simulates a blind by moving the stepper up and down by a given angle.

Solution

The solution is based up-on the previous described project [Stepper Motor](#).

Instead using a Domoticz Selector Switch to move the stepper motor by an angle (hardcoded 5°), a Domoticz Blind device, with states Open & Closed is used.

The stepper motor is moved by setting the angle. For the blind simulation:

- Blind Open = Angle 180°
- Blind Closed = Angle -180°


Notes

The previous described Domoticz Selector Switch can be used to set the stepper motor starting position (calibrate).

Alternatives

Instead changing the angle (command “angle”:NNN) of the stepper motor, the stepper motor could rotate N times (command “rotate”: N).

Block Diagram

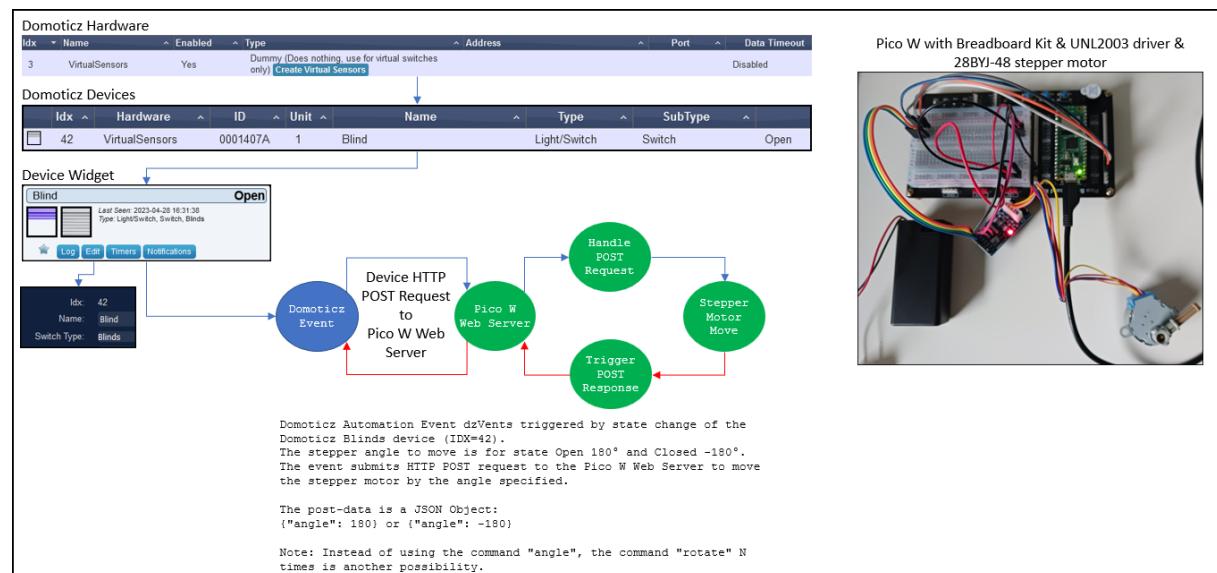

Domoticz Setup

Devices

From the hardware “Dummy”, create a Blind device:

Name: Blind, Sensor Type: Switch

After creating the device, the Domoticz devices list shows the entry:

```
IDX=43, Hardware=VirtualSensors, ID=0001407A, Unit=1, Name=Blind,
Type=Light/Switch, SubType=Switch, Data=Off
```

To set the switch type, select the device widget and change the switch type to blind.

See Block Diagram.

Automation Script

```
-- [[
File: stepperblind.dzvents
Date: 20230506
Author: Robert W.B. Linn

:description
Simulating a blind state Open or Closed by moving a stepper motor by angle 180
(Open) or -180 (Closed).
]]--

-- Domoticz device from type light/switch, light, blinds
local IDX_BLIND = 42
-- Pico W web server IP address
local HTTP_URL      = 'http://picow-ip'
-- Callback and logging
local PROJECT        = 'STEPPERBLIND'
local HTTP_RES       = 'RES_' .. PROJECT
local LOG_MARKER     = 'LOG_' .. PROJECT
-- Stepper
local ANGLE_OPEN    = 180
local ANGLE_CLOSED   = ANGLE_OPEN * -1
local STATE_OPEN     = 'Open'
local STATE_CLOSED   = 'Closed'

-- Post Data to the Pico W Webserver.
-- The data is a JSON object with the servo angle rounded: {"angle":NNN}
local function HTTPPost(domoticz, angle)
    local data = {}
    data['angle'] = angle
    domoticz.log(string.format('device=%s, angle=%d',
        domoticz.devices(IDX_SWITCH).name, angle), domoticz.LOG_INFO)
    domoticz.openURL({
        url = HTTP_URL, method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = data, callback = HTTP_RES,
    })
end

-- Set the blind angle
local function setblind(domoticz, state)
    local angle = ANGLE_OPEN
    if state == STATE_CLOSED then angle = ANGLE_CLOSED end
    HTTPPost(domoticz, angle)
end

return {
    on = { devices = { IDX_BLIND }, httpResponses = { HTTP_RES } },
    data = { stateprev = {initial = STATE_OPEN}, },
}
```

```
logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
execute = function(domoticz, item)
    if (item.isDevice) then
        domoticz.log(string.format("device=%s, state=%s, stateprev=%s",
            item.name, item.state, domoticz.data.stateprev))
        -- Check if the state has changed i.e., Open to Closed or Closed to Open
        if item.state ~= domoticz.data.stateprev then
            -- Set the blind state
            setblind(domoticz, item.state)
            -- Capture the new state
            domoticz.data.stateprev = item.state
        end
    end
    if (item.isHTTPResponse) then
        if (item.isJSON) then
            -- {"status": "OK", "title": "{\"angle\": 180}", "message": "180"}
            local data = item.json
            domoticz.log(string.format("status=%s, title=%s, message=%s",
                data.status, data.title, data.message))
        end
    end
end
}
```

Web Server

Libraries

See project Stepper Motor > [Web Server](#). The same solution is used.

MicroPython Script

See project Stepper Motor > [Web Server](#). The same solution is used.

Stepper Motor Timer Run Stop


Description

This project enables to run or stop a stepper motor.

Solution

The solution is based up-on the previous described project [Stepper Motor](#).

A Domoticz Selector Switch is used to move the stepper motor depending selected level:

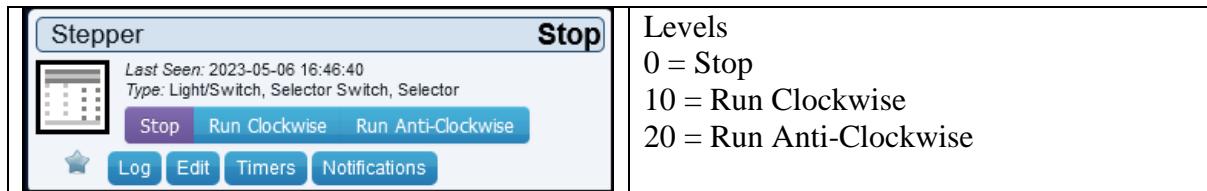

By clicking on the selected selector switch button, an automation event is triggered. The event creates a JSON object used as post-data for an HTTP POST request to the Pico W, which is running as a web server.

The Pico W web server parses the post-data and executes the command. If the command is run then the stepper motor starts running in the direction given, until a stop command is received.


The stepper motor runs by using a timer with callback function.

Note

Prior using the timer class, explored other libraries like asyncio or thread ... but found (for now) too complex to use.

MicroPython's Timer class defines a baseline operation of executing a callback with a given period (or once after some delay),

Block Diagram

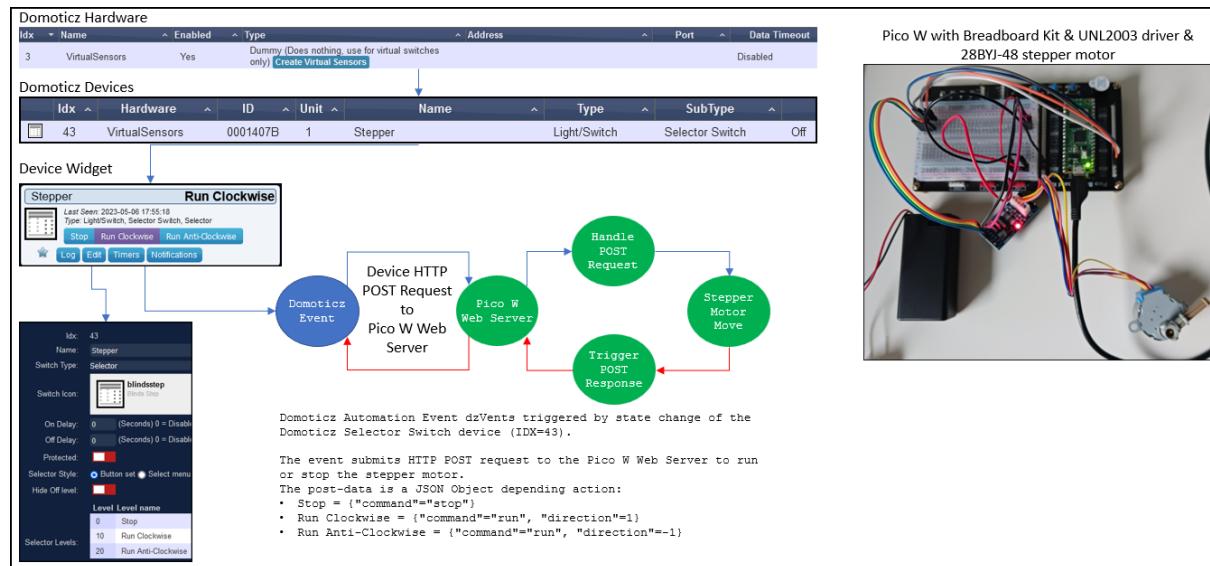

Domoticz Setup

Devices

From the hardware “Dummy”, create a Selector Switch device:

Name: Stepper, Sensor Type: Selector Switch

After creating the device, the Domoticz devices list shows the entry:

```
IDX=43, Hardware=VirtualSensors, ID=0001407A, Unit=1, Name=Stepper,
Type=Light/Switch, SubType=Selector Switch, Data=0ff
```

Automation Script

```
--[[[
File:    steppermotor_timer.dzevents
Date:   20230506
Author: Robert W.B. Linn

:description
Turn the stepper motor stepwise in the direction clockwise or anticlockwise by
using a Domoticz Selector Switch.
The selector switch has 3 levels 0, 10, 20.
The level 0, Off stops the stepper motor. Level 10 is Run Clockwise, and level 20
is Run Anti-Clockwise.
This means the selector switch shows two buttons Run Clockwise and Run Anti-
Clockwise.
]]]

-- Domoticz device Selector Switch
local IDX_STEPPER_SELECTOR = 43

-- Pico W web server IP address
local HTTP_URL      = 'http://picow-ip'
-- Callback and logging
local PROJECT       = 'STEPPERTIMER'
local HTTP_RES       = 'RES_' .. PROJECT
local LOG_MARKER     = 'LOG_' .. PROJECT

-- Post Data to the Pico W Webserver.
```

```
-- The data is a JSON object with the command run or stop.
local function HTTPPost(domoticz, data)
    domoticz.log(data)
    domoticz.openURL({
        url = HTTP_URL, method = 'POST',
        headers = { ['content-type'] = 'application/json' },
        postData = data, callback = HTTP_RES,
    })
end

return {
    on = { devices = { IDX_STEPPER_SELECTOR }, httpResponses = { HTTP_RES } },
    logging = { level = domoticz.LOG_INFO, marker = LOG_MARKER },
    execute = function(domoticz, item)
        if (item.isDevice) then
            if item.idx == IDX_STEPPER_SELECTOR then
                domoticz.log(string.format("device=%s, state=%s, level=%d",
                    item.name, item.state, item.level))
                local data = {}
                if item.level == 0 then
                    data['command'] = 'stop'
                end
                if item.level == 10 then
                    data['command'] = 'run'
                    data['direction'] = 1
                end
                if item.level == 20 then
                    data['command'] = 'run'
                    data['direction'] = -1
                end
                HTTPPost(domoticz, data)
            end
        end

        if (item.isHTTPResponse) then
            if (item.isJSON) then
                local data = item.json
                domoticz.log(string.format("status=%s, title=%s, message=%s",
                    data.status, data.title, data.message))
            end
        end
    end
}
```

Web Server

Libraries

See project Stepper Motor > [Web Server](#). The same solution is used.

MicroPython Script

```
"""
File: steppermotor_timer.py
Date: 20230506
Author: Robert W.B. Linn

:description
PicoW RESTful webserver to move a stepper motor (28BYJ-48 Stepper Motor with
ULN2003 motor driver).
The incoming data is from a HTTP POST request with JSON object (key:value pair)
containing the command:
{"command":"run", "direction":1 or -1}. Clockwise is 1 and anti-clockwise is -1.
{"command":"stop"}"
```

The motor is running using a timer with periodic=10ms and callback which sets one step. The stepper motor object uses 1ms for a step.

Additionally, a RED LED indicates if the stepper motor is running

:note

Prior using the timer class, explored other libraries like asyncio or thread ... but found (for now) too complex to use.

MicroPython's Timer class defines a baseline operation of executing a callback with a given period (or once after some delay),

:examples

Command submitted using curl with HTTP response.

```
curl -v -H "Content-Type:application/json" -d "{\"command\":\"run\", \"direction\":1}" http://picow-ip {"status": "OK", "title": {"command": 'run', 'direction': 1}, "message": "run"}
```

```
curl -v -H "Content-Type:application/json" -d "{\"command\":\"run\", \"direction\":-1}" http:// picow-ip {"status": "OK", "title": {"command": 'run', 'direction': -1}, "message": "run"}
```

```
curl -v -H "Content-Type:application/json" -d "{\"command\":\"stop\"}" http:// picow-ip {"status": "OK", "title": {"command": 'stop'}, "message": "stop"}
```

:wiring

Stepper Motor = Pico W

IN1 = GP2

IN2 = GP3

IN3 = GP4

IN4 = GP5

VCC = External 5V

GND = GND common with external GND

LED RED = Pico W

+ = GP21 (Pin #27)

GND = GND

"""

Libraries

```
from machine import Pin
from machine import Timer
from time import sleep
import json
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Stepper stored in PicoW folder lib
# Credits: This library is based on: https://github.com/IDWizard/uln2003 (c)
IDWizard 2017, # MIT License.
from stepper import Stepper
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config
```

Constants

NAME = 'Stepper Motor Timer'

VERSION = 'v20230506'

Create the LED

```
led1 = Pin(21, Pin.OUT)
led1.off()
```

Create a stepper motor object with defaults

```
stepper = Stepper()
sleep(0.1)
```

```
# Create the timer object used by the function handle_request
timer_stepper = Timer()
```

```

"""
Run the stepper motor by moving a single step in direction clockwise (cw) or anti-
clockwise (acw).
Function is used by the timer_stepper object as callback.
Argument t is mandatory.
"""
def run_stepper_motor_cw(t):
    stepper.step(1)

def run_stepper_motor_acw(t):
    stepper.step(-1)

"""
Handle the request to move the stepper.
"""
def handle_request(cmd, status):
    # Assign the command to the response title
    response[config.KEY_TITLE] = str(cmd)
    # Set the response initially to ok
    response[config.KEY_STATE] = config.STATE_OK

    # If the status is 1 (OK) then action
    if status == 1:

        if cmd.get('command') != None:
            command = cmd['command']
            # print(f'Stepper Motor Command: {command}')
            if command == 'run':
                # Set the direction clockwise or anti-clockwise
                direction = 1
                if cmd.get('direction') != None:
                    direction = cmd['direction']
                # periodic with 10ms period
                if direction == 1:
                    timer_stepper.init(mode=Timer.PERIODIC, period=10,
callback=run_stepper_motor_cw)
                elif direction == -1:
                    timer_stepper.init(mode=Timer.PERIODIC, period=10,
callback=run_stepper_motor_acw)
                else:
                    print(f'[ERROR] Wrong direction')
                    led1.on()
                    response[config.KEY_MESSAGE] = 'run'
            elif command == 'stop':
                timer_stepper.deinit()
                led1.off()
                response[config.KEY_MESSAGE] = 'stop'
            else:
                response[config.KEY_STATE] = config.STATE_ERR
                response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN

    # Return the response which is send to Domoticz
    return response

# Main
print(f'{NAME} {VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect()

```

```
"""
Main Loop
"""
while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Get the cmd
        cmd, status = network.parse_post_request(request)

        # Create the HTTP response JSON object
        response = {}

        # Handle the command to set the servo pos
        # Set the response
        response = handle_request(cmd, status)

        # Send the response to Domoticz and close the connection (wait for new)
        network.send_response(cl, response, True)

    except OSError as e:
        ledstatus.off()
        cl.close()
        print('[ERROR] Network Connection closed')
```

Distance Sensor

Description

This project reads in regular intervals, from an Ultrasonic Distance sensor HC-SR04, the distance and sends the distance to a Domoticz Distance device.


Ideas for Use

- Measure tank level,
- Monitor access control.

Solution

The Pico W has an Ultrasonic Distance sensor HC-SR04 connected and runs as a web server. The web server measures in regular intervals the distance and sends the distance via Domoticz HTTP API/JSON request to a Domoticz Distance device.

Block Diagram

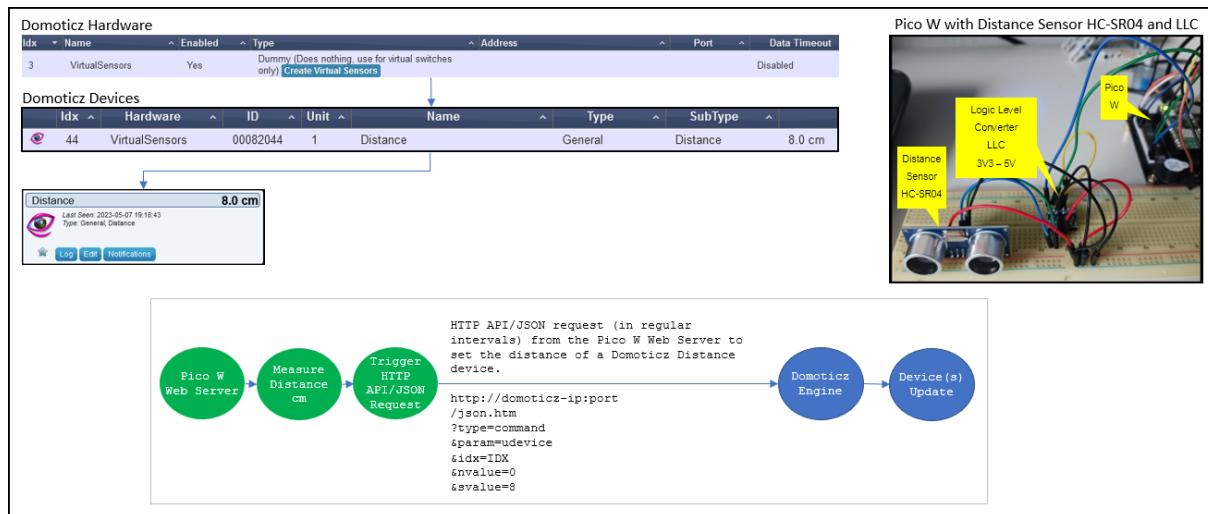

Wiring


| LLC = Pico W | LLC = HC-SR04 |
|----------------------|---------------|
| LV1 = N/A | LV1 = N/A |
| LV2 = N/A | LV2 = N/A |
| LV = 3V3 (OUT) | LV = N/A |
| GND = GND (Pin #38) | GND = N/A |
| LV3 = GP14 (Pin #19) | LV3 = N/A |
| LV4 = GP15 (Pin #20) | LV4 = N/A |
| HV1 = N/A | HV1 = N/A |
| HV2 = N/A | HV2 = N/A |
| HV = VBUS (Pin #40) | HV = VCC |
| GND = GND (Pin #38) | GND = GND |
| HV3 = N/A | HV3 = Echo |
| HV4 = N/A | HV4 = Trig |

Notes

LLC = Logic Level Converter 5V to 3V3.
The LLC is used because the HC-SR04 operates at 5V which is higher than the Pico W GPIO pin voltage tolerance of 3V3.

N/A = Pin is not used

Circuit Diagram

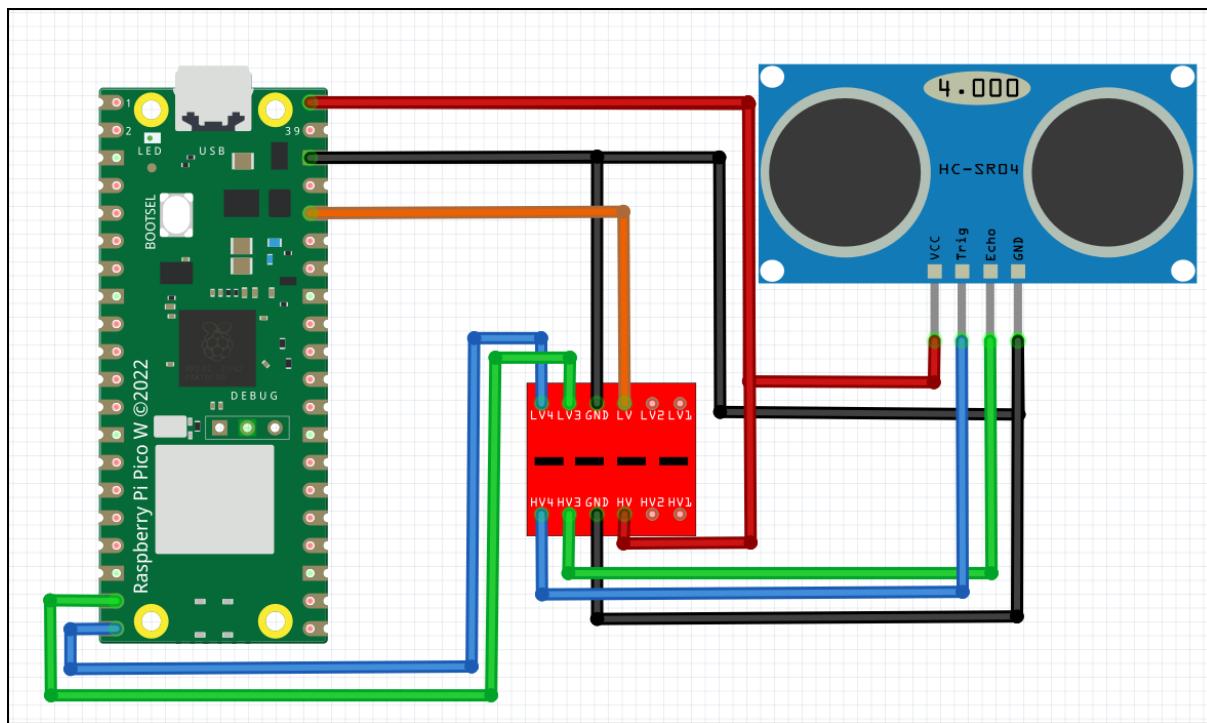

Domoticz Setup

Devices

From the hardware “Dummy”, create a Distance device:

Name: Distance, Sensor Type: Distance

After creating the device, the Domoticz devices list shows the entry:

```
Idx=44, Hardware:VirtualSensors, ID=00082044, Unit=1, Name=Distance,
Type=General, SubType=Distance, Data=123.4 cm
```

Automation Script

No automation event used, but if additional action(s) required in case device has changed, then for example an Event with trigger “Device Change” could be used.

```
-- [[
File: distancesensor.dzvents
Date: 20230512
Author: Robert W.B. Linn

:description
Listen to distance device changes.
If the distance is below a threshold then log as domoticz error.
]]--

-- Device IDX
local IDX_DISTANCE = 44

-- Define the distance threshold.
-- For flexibility could use a user variable.
local THRESHOLD = 20      -- cm

return {
    -- Listen to device changes of the distance device.
    on = { devices = { IDX_DISTANCE } },
    logging = { level = domoticz.LOG_INFO, marker = 'DISTANCESENSOR', },
    execute = function(domoticz, device)
        -- domoticz.log(device)

        -- Log the device change.
        domoticz.log(string.format(
            'Device %s has changed. New state %s',
            device.name, device.state))

        -- Check if distance below threshold using the device property distance.
        local distance = device.distance
        -- Log a warning with error level to make immediate visible.
        if distance < THRESHOLD then
            -- 2023-05-12 10:53:38.046 Error: dzVents: Error: (3.1.8) IDX_DISTANCE:
            [WARNING] Distance 16.2 below threshold 20!
            domoticz.log(string.format(
                '[WARNING] Distance %.1f below threshold %d!',
                distance, THRESHOLD), domoticz.LOG_ERROR)
        end
    end
}
```

Web Server

Libraries

The MicroPython script uses external the MicroPython HC-SR04 library.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

Credits

Thanks for developing & sharing the [MicroPython HCSR04](#) driver.

MicroPython Script

```
"""
File:    distancesensor.py
Date:    20230512
Author:  Robert W.B. Linn

:description
Read in regular intervals the distance using a HC-SR04 sensor and update the svalue
(i.e., 20.132) of a Domoticz Distance device.
The Domoticz device from type general, distance, is updated using HTTP API/JSON
request to the Domoticz server.
/json.htm?type=command&param=udevice&idx=IDX&nvalue=0&svalue=DISTANCE
IDX = device id, DISTANCE = distance in cm or inches with decimals.

:external libraries
hcsr04 (https://github.com/rsc1975/micropython-hcsr04)
"""

# Imports
from machine import Pin
from utime import sleep
# HCSR04 from hcsr04.py (must be uploaded to the pico)
from hcsr04 import HCSR04
# Server from server.py (must be uploaded to the pico)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'Distance Sensor v20230512'

"""
DOMOTICZ
"""
# Distance Sensor IDX of the Domoticz Temp+Hum device
IDX_DISTANCE = 44
# URL Domoticz
# The svalue is added in the main loop after getting the data from the distance
# sensor.
# The svalue format: distance
URL_DOM = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(IDX_DISTANCE) +
"&nvalue=0&svalue="

"""
DISTANCESENSOR HC-SR04
"""
# Sensor Pins
PIN_ECHO = 14
PIN_TRIGGER = 15
distance_sensor = HCSR04(trigger_pin=PIN_TRIGGER, echo_pin=PIN_ECHO)

"""
SAMPLING
```

```
"""
# Distance measurement sampling rate in seconds
SAMPLING_RATE = 10

# Info
print(f'{VERSION}')
print(f'Sampling Rate: {SAMPLING_RATE}s.')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect2()

# Main
while True:

    # Measure the distance in cm
    try:
        distance = distance_sensor.distance_cm()
    except OSError as e:
        print(f'[ERROR] Can not get the distance {e}')

    # Submit Domoticz HTTP API/JSON GET request to update the device
    network.send_get_request(URL_DOM + str(distance))

    # Delay till next sample
    sleep(SAMPLING_RATE)
```

Distance Sensor MQTT Auto Discovery

Description

This project auto creates a Domoticz Distance device and regular updates the device state.

Solution

This project is based up the project [Distance Sensor](#).

Instead communicating via HTTP, the Domoticz hardware controller [MQTT Auto Discovery Client Gateway with LAN interface](#) (MQTT Auto Discovery) is used.

The Pico W connects to the network and to the Domoticz Client Gateways for MQTT & MQTT Auto Discovery.

The config & state messages published by the Pico W are handled by the Domoticz hardware controller MQTT Auto Discovery Client Gateway with LAN interface.

Step 1 – Publish MQTT Config message to create the Domoticz Distance device.

If these devices are already in place, Domoticz takes no action.

The Domoticz devices list with the Distance device auto created for the MQTT Auto Discovery hardware (named MQTTADGateway):


| Idx | Hardware | ID | Unit | Name | Type | SubType | Value |
|-----|---------------|---------|------|----------|---------|----------|---------|
| 45 | MQTTADGateway | DIST001 | 1 | Distance | General | Distance | 12.7 cm |

Step 2 – Publish MQTT State message after reading the distance.

The MQTT message published is picked up by Domoticz and the value of the Distance devices is updated.

See block diagram.

Block Diagram

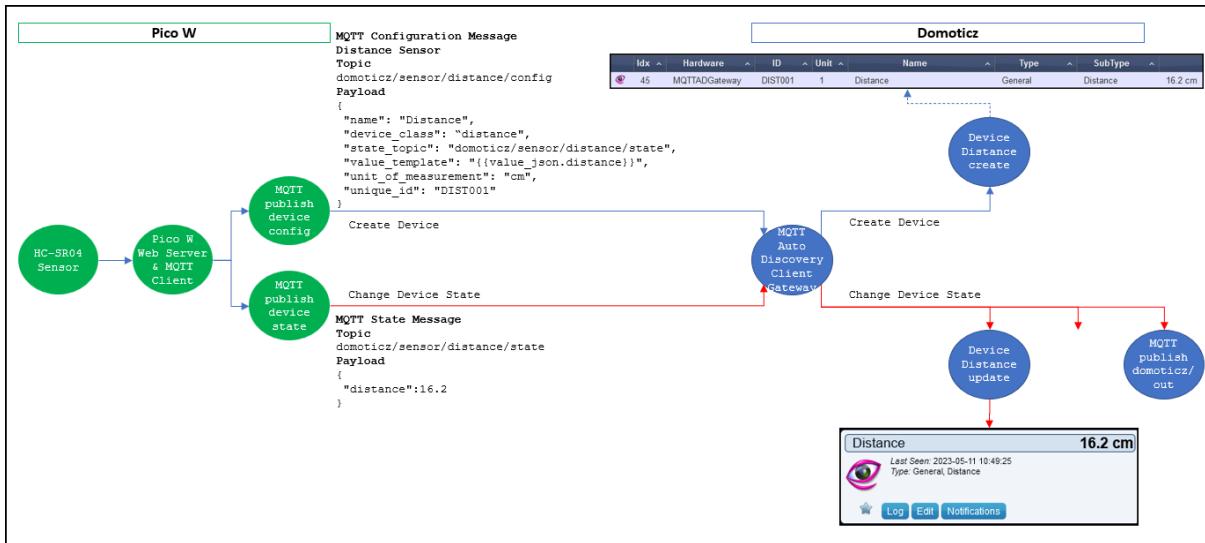

MQTT Auto Discovery Topics & Payload

| CONFIGURATION | |
|---|--|
| Distance Device | |
| Configuration Topic | <code>domoticz/sensor/distance/config</code> |
| Configuration Payload | <pre>{ "name": "Distance", "device_class": "distance", "state_topic": "domoticz/sensor/distance/state", "value_template": "{ value_json.distance }", "unit_of_measurement": "cm", "unique_id": "DIST001" }</pre> |
| STATE | |
| Topic | <code>domoticz/sensor/distance/state</code> |
| Payload Distance | <pre>{ "distance": {D} }</pre> |
| Notes <ul style="list-style-type: none"> The key <code>distance</code> is defined in the configuration payload <code>value_template</code> property <code>distance</code>. <code>{D}</code> is a placeholder for the distance value. | |

Domoticz

Devices

After creating the device via MQTT Auto Discovery, the Domoticz devices list shows the entry:

```
Idx=45, Hardware:VirtualSensors, ID=DIST001, Unit=1, Name=Distance,  
Type=General, SubType=Distance, Data=123.4 cm
```

Debug Log

Domoticz Debug Log showing the MQTT Auto Discovery gateway receiving the message with the payload containing the distance key with values.

```
2023-05-12 11:07:12.189 Debug: MQTTADGateway: topic:  
domoticz/sensor/distance/state, message: {"distance":16.23711}  
  
2023-05-12 11:07:12.308 Debug: MQTTADGateway: topic: domoticz/out, message: {  
2023-05-12 11:07:12.308 "Battery" : 255,  
2023-05-12 11:07:12.308 "LastUpdate" : "2023-05-12 11:07:12",  
2023-05-12 11:07:12.308 "RSSI" : 12,  
2023-05-12 11:07:12.308 "description" : "",  
2023-05-12 11:07:12.308 "dtype" : "General",  
2023-05-12 11:07:12.308 "hwid" : "6",  
2023-05-12 11:07:12.308 "id" : "DIST001",  
2023-05-12 11:07:12.308 "idx" : 45,  
2023-05-12 11:07:12.308 "name" : "Distance",  
2023-05-12 11:07:12.308 "nvalue" : 0,  
2023-05-12 11:07:12.308 "stype" : "Distance",  
2023-05-12 11:07:12.308 "svalue1" : "16.2",  
2023-05-12 11:07:12.308 "unit" : 1  
2023-05-12 11:07:12.308 }
```

Automation Script

There is no automation script used.
See project [Distance Sensor](#) for an example.

Web Server

Libraries

In addition to the MicroPython HCSR04 library (see project [Distance Sensor](#)), the MicroPython script uses the MicroPython library Lightweight MQTT client for MicroPython “umqtt.simple”.

Credits

Thanks for developing & sharing the MicroPython library [micropython-umqtt.simple](#).

MicroPython Script

```
"""
File:    distancesensor_mqtt_ad.py
Date:    20230511
Author:  Robert W.B. Linn

:description
Test MQTT auto discovery with Domoticz and the Pico W running as web server.
Domoticz Hardware: MQTT Auto Discovery Client Gateway with LAN Interface,
Name=MQTTADGateway
Domoticz Devices created via MQTT auto discovery by publishing config topic (see
domoticz log below).
The device is from type General, Distance.

:external libraries
umqtt.simple (https://github.com/micropython/micropython-lib/tree/master/micropython/umqtt.simple)
hcsr04 (https://github.com/rsc1975/micropython-hcsr04)

MQTT Remove Retained messages:
Distance Device:
mosquitto_sub -h localhost --remove-retained -t 'domoticz/sensor/distance/config' -
W 1
"""

# Imports
import network
import time
from machine import Pin
from utime import sleep, sleep_ms
# Installed via Thonny manage packages
from umqtt.simple import MQTTClient
# HCSR04 from hcsr04.py (must be uploaded to the pico)
from hcsr04 import HCSR04
# Call server from server.py (must be uploaded to the picow)
from server import Server
# Configuration (must be uploaded to the pico w)
import config
import sys

# Constants
VERSION = const('distance_mqtt_ad v20230512')

"""
DISTANCESENSOR HC-SR04
"""
# Sensor Pins
PIN_ECHO = 14
PIN_TRIGGER = 15
distance_sensor = HCSR04(trigger_pin=15, echo_pin=14)

"""
```

```

SAMPLING
"""
# Distance measurement sampling rate in seconds
SAMPLING_RATE = 10

"""
MQTT
"""
MQTT_BROKER = config.DOMOTICZ_MQTT_IP
MQTT_CLIENT_ID = const('picow_distance_sensor')

# Topic & payload to create the device. The configuration component is sensor.
DISTANCE_TOPIC_CONFIG = const(b'domoticz/sensor/distance/config')
DISTANCE_PAYLOAD_CONFIG = const(b'{"name": "Distance", "device_class": "distance", "state_topic": "domoticz/sensor/distance/state", "value_template": "{value_json.distance}}", "unit_of_measurement": "cm", "unique_id": "DIST001"}')

# Topic used to publish the state of the sensor
# Payload is JSON format: {"distance":NN}
STATE_TOPIC = const(b'domoticz/sensor/distance/state')
STATE_PAYLOAD = '{"distance":{D}}'

def mqtt_connect(client_id, mqtt_server):
    """Connect to the MQTT broker with client id and server address"""
    client = MQTTClient(client_id, mqtt_server, keepalive=3600)
    client.connect()
    print(f'MQTT Broker connecting... ')
    return client

def mqtt_reconnect():
    """Reconnect to the MQTT broker"""
    print('[ERROR] Failed to connect to the MQTT Broker. Reconnecting... ')
    time.sleep(5)
    machine.reset()

def mqtt_init():
    """Connect to MQTT & Publish mqtt auto discovery topic & payload for the domoticz device"""
    try:
        # Connect to MQTT broker
        client = mqtt_connect(MQTT_CLIENT_ID, MQTT_BROKER)
        print(f'MQTT Broker connected: {MQTT_BROKER}')

        # Publish config topic to auto create the distance device in domoticz
        client.publish(DISTANCE_TOPIC_CONFIG, DISTANCE_PAYLOAD_CONFIG)
        print(f'MQTT Auto Discovery published: {DISTANCE_TOPIC_CONFIG.decode()}, {DISTANCE_PAYLOAD_CONFIG.decode()}')
    except OSError as e:
        mqtt_reconnect()

    # Info
    print(f'{VERSION}')
    print(f'Sampling Rate: {SAMPLING_RATE}s.')

    # Create network object using the ssid & password from config.py
    network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

    # Connect to the network and get the server object
    server = network.connect()

    # Connect to MQTT
    mqtt_client = mqtt_init()

    # Main
    while True:

```

```
try:
    # Measure distance, set payload message (encoded for mqtt client publish)
    payload = STATE_PAYLOAD.replace('{D}', str(distance_sensor.distance_cm())).encode()

    # MQTT publish with encoded topic & payload (buffered objects required)
    mqtt_client.publish(STATE_TOPIC, payload)
    print(f'MQTT published: topic={STATE_TOPIC.decode()}',
          payload={payload.decode()})'

except OSError as e:
    print(f'[ERROR] Can not get the distance {e}')

# Delay till next sample
sleep(SAMPLING_RATE)
```

IKEA VINDRIKTNING Air Quality Sensor

Description

This project listens to data received from an IKEA VINDRIKTNING¹ Air Quality sensor and sends the Air Quality Particulate Matter 2.5 μm Concentration ($\mu\text{g}/\text{m}^3$, PM2.5) to a Domoticz Custom Sensor.

Ideas for Use

- Measure room air quality.

Solution

The Pico W runs as a web server with IKEA VINDRIKTNING Air Quality sensor connected.

From the sensor internal MCU test pad, the pin REST is connected to the Pico W UART Serial Bus 0 (UART0), pin GND to Pico W GND and pin 5V to Pico W VBUS or 5V. This means, the sensor data is received by the Pico W via UART Serial Communication. The sensor sends every ~20 seconds, 5-6 serial messages over UART0.

The message buffer received from the sensor must have a length of 20 bytes.

The first 3 bytes (the header) must be 0x16 0x11 0x0B.

The bytes 5 & 6 are used to calculate the PM2.5 concentration.

An offset (absolute difference between current and previous value) is used to update the sensor data in Domoticz instead of updating with a value that has not changed.

The data send to Domoticz can be via HTTP API/JSON (REST) or using the MQTT Auto Discovery Client Gateway.

The sensor has an RGB LED strip to indicate the Air Quality level:


- Level 1 = 0-35 ug/m3 (good/green)
- Level 2 = 36-85 ug/m3 (moderate/yellow)
- Level 3 = 86 ug/m3 and up (bad/red)

Notes

- The sensor modification, at the MCU test pad, does not impact its operation.
- Making modifications to IKEA VINDRIKTNING Air Quality sensor are for your own risk.

¹ IKEA® is a trademark of Inter-IKEA Systems B.V.


Block Diagram

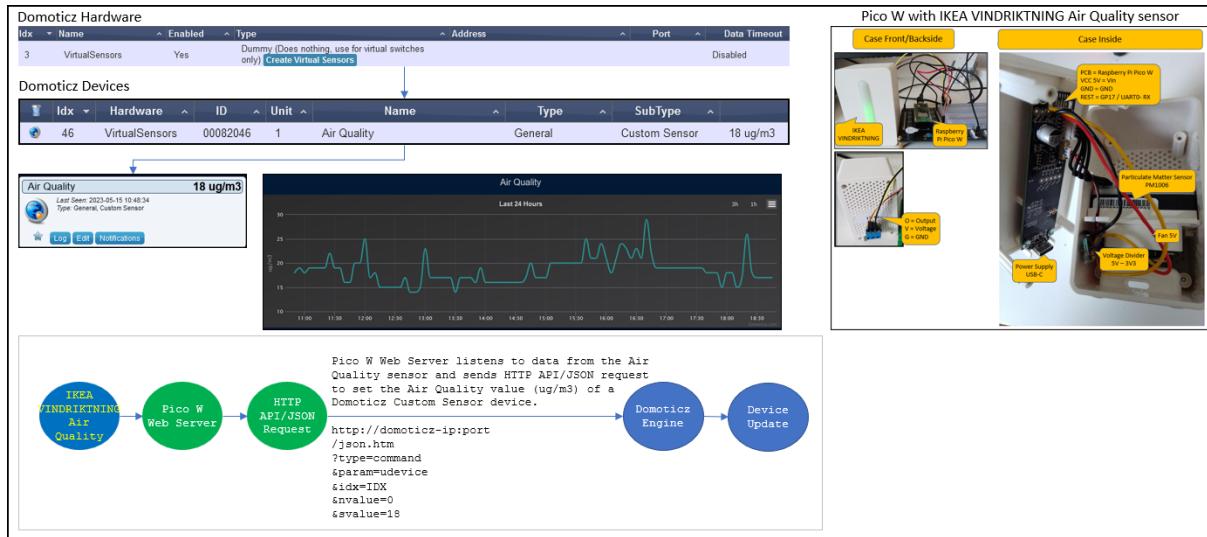

Wiring

| IKEA VINDRIKTNING Air Quality sensor | Pico W |
|--------------------------------------|---|
| VCC | VUSB (Pin #40) |
| GND | GND (Pin #38) |
| Test Pad REST (TX Pin) | GP17 (Pin #22) with voltage divider 5V to 3V3. |

Circuit Diagram

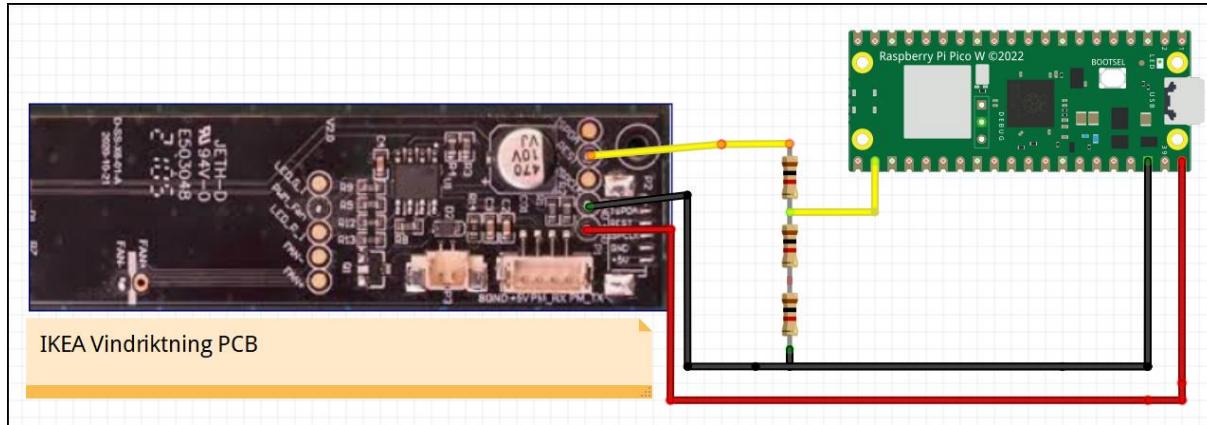

Note

Between the sensor TX pin and the Pico W RX pin, a voltage divider 5V to 3V3 is required.

Domoticz Setup

Devices

From the hardware “Dummy”, create a Custom Sensor device:

Name: Air Quality, Sensor Type: Custom Sensor

After creating the device, the Domoticz devices list shows the entry:

```
Idx=46, Hardware:VirtualSensors, ID=00082046, Unit=1, Name=Air Quality,
Type=General, SubType=Custom Sensor, Data=0 ug/m
```

Automation Script

No automation event used. See section [Enhancements](#) for some examples.

Web Server

Libraries

The MicroPython script uses the IKEA VINDRIKTNING library (`ikeavindriktning.py`) developed by the author.

The library is stored on the Pico W in folder lib (see sub chapter [Additional Libraries](#)).

```
"""
File: ikeavindriktning.py
Date: 20230515
Author: Robert W.B. Linn
Description
Library for the IKEA Vindriktning Air Quality sensor. Tested on a Raspberry Pi Pico W.

__version__ = '0.5.0'
__author__ = 'Robert W.B. Linn'
__license__ = 'GNU GENERAL PUBLIC LICENSE Version 3, https://www.gnu.org/licenses/'

# Imports
from machine import Pin, UART
import time

class IKEAVINDRIKTNING:
    # Define the air quality level thresholds min & max
    AIR_QUALITY_LEVEL_GREEN_MIN = 0
    AIR_QUALITY_LEVEL_GREEN_MAX = 35
    AIR_QUALITY_LEVEL_YELLOW_MIN = AIR_QUALITY_LEVEL_GREEN_MAX
    AIR_QUALITY_LEVEL_YELLOW_MAX = 85
    AIR_QUALITY_LEVEL_RED_MIN = AIR_QUALITY_LEVEL_YELLOW_MAX
    AIR_QUALITY_LEVEL_RED_MAX = 1000

    def __init__(self, uartport=0, rxpin=17, offset=5):
        """
        Init the class with default UART port and RX pin.
        :param int uartport
            Set the UART peripherals 0 (for UART0) or 1 (for UART1).
        :param int rxpin
            Set the receiver (RX pin). Default GP 17 (Pin #22).
        :param int offset
            Set the value offset used to transmit the data.
        """

        # Properties for the current & previous air quality & level
        self.air_quality_current = -1
        self.air_quality_previous = self.air_quality_current
```

```

        self.air_quality_level_current = -1
        self.air_quality_level_previous = self.air_quality_level_current
        self.air_quality_offset = offset

        # Create the uart instance with uart0, tx=None, rx=gp17
        self.uart = UART(uartport, baudrate=9600, tx=None, rx=Pin(rxpin))

        # Initialize uart instance with 8 bits data, no parity bit, 2 stop bits.
        self.uart.init(bits=8, parity=None, stop=2)

    def is_valid_message_length(self, data):
        """Check if the message has 20 bytes"""
        if len(data) == 20:
            # print(f'Received message with correct length: {len(data)}')
            return True
        else:
            print(f'[ERROR] Received message with invalid length: {len(data)}')

    def is_valid_message_header(self, data):
        """Check the message header. The first 3 bytes must be 16 11 0B."""
        if (data[0] == 0x16) and (data[1] == 0x11) and (data[2] == 0x0B):
            # print(f'Received message with correct header.')
            return True
        else:
            print(f'[ERROR] Received message with invalid header.')
            return False

    def checksum(self, data):
        """Create a checksum."""
        return b'%02X' % (sum(data) & 0xFF)

    def is_valid_checksum(self, data):
        """Check if the data checksum is 0."""
        checksum = int(self.checksum(data))
        if (checksum == 0):
            # print(f'Received message with correct checksum: {checksum}.')
            return True
        else:
            print(f'[ERROR] Received message with invalid checksum. Expected: 0.
Actual: {checksum}')
            return False

    def air_quality(self, data):
        """Calculate the air quality pm2.5 value from the bytes data 5 & 6"""
        air_quality = data[5] * 256 + data[6]
        # print(f'air_quality={air_quality}')
        return air_quality

    def air_quality_level(self, data):
        """
        Get the air quality level depending on air_quality PM2.5 value.
        The sensor has 3 levels and LED indicators:
        Green LOW: 0-35=Good, Amber MEDIUM: 36-85=OK, Red (HIGH): 86-1000=NOT GOOD.
        Returns - air_quality level 1=LOW (GREEN), 2=MEDIUM (YELLOW), 3=HIGH (RED)
        """
        # Set initial air quality level
        air_quality_level = -1

        # Get the air quality
        value = self.air_quality(data)

        # Calculate the air quality level
        # Level 1 = LOW = GREEN
        if value <= self.AIR_QUALITY_LEVEL_GREEN_MAX:
            air_quality_level = 1
        # Level 2 = MEDIUM = YELLOW
        elif value > self.AIR_QUALITY_LEVEL_YELLOW_MIN and value <=
self.AIR_QUALITY_LEVEL_YELLOW_MAX:
            air_quality_level = 2

```

```

# Level 3 = HIGH = RED
elif value > self.AIR_QUALITY_LEVEL_RED_MIN:
    air_quality_level = 3
# print(f'air_quality_level={level}, value={value}')
return air_quality_level

def air_quality_data(self, data):
    """Get sensor air_quality pm2.5 value 0-100 ug/m3 and the
    level 1-3 (GREEN, YELLOW, RED)."""
    # Check the message data
    if self.is_valid_message_length(data) and
        self.is_valid_message_header(data) and
        self.is_valid_checksum(data):

        # Get the current air quality pm2.5 (0 - 100) and the level 1-3
        self.air_quality_current      = self.air_quality(data)
        self.air_quality_level_current = self.air_quality_level(data)

        # Check if value has changed > offset (to avoid sending same values)
        if abs(self.air_quality_current - self.air_quality_previous) >
self.air_quality_offset:
            self.air_quality_previous = self.air_quality_current
            self.air_quality_level_previous = self.air_quality_level_current

        # Return dict with two entries
        return self.air_quality_current, self.air_quality_level_current

```

MicroPython Script

```

"""
File:ikeavindriktning.py
Date:20230515
Author: Robert W.B. Linn
"""

# Imports
from machine import Pin,UART
from utime import sleep
# Class IKEAVINDRIKTNING library ikeavindriktning.py (must be uploaded to picow)
from ikeavindriktning import IKEAVINDRIKTNING
# Class server from the library server.py (must be uploaded to picow)
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'IKEA VINDRIKTNING v20230515'

"""
PICO W
"""

PIN_UART0_RX = 17    # IKEA VINDRIKTNING UART0 RX Pin GP17 #Pin 22

"""
IKEA VINDRIKTNING SENSOR
"""

UART_BUS = 0          # UART bus 0
VALUE_OFFSET = 2      # Update Domoticz air quality device is abs value between old
and new value > offset
# Create an IKEA VINDRIKTNING object
# UART Serial Bus Number 0 or 1, RX pin (default GP17), offset new/old value
iv = IKEAVINDRIKTNING(UART_BUS, PIN_UART0_RX, VALUE_OFFSET)

"""
DOMOTICZ
"""

# IDX of the Domoticz Custom Sensor device for the Air Quality
DOM_IDX = 46
# Domoticz API/JSON URL

```

```
# The svalue (containing the air quality) is added in the main loop after getting
# the data from the sensor.
DOM_URL = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(DOM_IDX) + "&nvalue=0&svalue="

# Info
print(f'{VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect2()

# Loop forever
while True:
    # Check if there is data send from the sensor via serial line
    if iv.uart.any():

        # Get the air quality & air quality level as dict
        data = iv.air_quality_data(iv.uart.read())

        # Check if the dict contains data - only if above offset
        if data != None:
            # Log the air quality & level from the data dict
            print(f'Air Quality pm2.5={data[0]} ug/m3, level={data[1]}')

            # Submit Domoticz HTTP API/JSON GET request to update the device
            network.send_get_request(DOM_URL + str(data[0]))

        # Wait a second
        sleep(1)
```

Enhancements

The next described enhancements are ideas and not all fully worked out.

Domoticz Alert Device Air Quality Level

Define a Domoticz Alert device to show the Air Quality Level derived from the Air Quality value.

The Alert device text and value could be set via the next outlined solutions.

Create Alert Device

Create from the hardware controller dummy, the device named Air Quality Level and sensor type Alert. After device creation, the Domoticz devices list shows the new device:

```
IDX=48, Hardware=VirtualSensors, ID=82048, Unit=1, Name=Air Quality Level,
Type=General, SubType=Alert, Data>No Alert!
```

REST API Request MicroPython script

The MicroPython script below updates the Air Quality and the Air Quality Level devices via HTTP API/JSON requests to the Domoticz server.

The text of the Air Quality Alert Sensor could also show the Air Quality value in ug/m3 as displayed in the 2nd screen shot of the Air Quality widgets from the Domoticz GUI.



MicroPython Script

```
"""
File: ikeavindriktning-alert-sensor.py
Date: 20230516
Author: Robert W.B. Linn
This example is an enhancement of ikeavindriktning.py.

"""

# Imports
from machine import Pin, UART
from utime import sleep
# Class IKEAVINDRIKTNING from lib ikeavindriktning.py - stored in Pico W folder lib
from ikeavindriktning import IKEAVINDRIKTNING
# Class Server from lib server.py - stored in Pico W folder lib

from server import Server
# Configuration (must be uploaded to the picow)
import config
```

```

# Constants
VERSION = 'IKEA VINDRIKTNING ALERT SENSOR v20230516'

"""
PICO W
"""
PIN_UART0_RX = 17    # IKEA VINDRIKTNING UART0 RX Pin GP17 #Pin 22

"""
IKEA VINDRIKTNING SENSOR
"""
UART_BUS = 0          # UART bus 0
VALUE_OFFSET = 2      # Update Domoticz air quality device is abs value between old
and new value > offset
# Create an IKEA VINDRIKTNING object
# UART Serial Bus Number 0 or 1, RX pin (default GP17), offset new/old value
iv = IKEAVINDRIKTNING(UART_BUS, PIN_UART0_RX, VALUE_OFFSET)

"""
DOMOTICZ
"""
# Air Quality
# IDX of the Domoticz Custom Sensor for the Air Quality
DOM_IDX_AIR_QUALITY = 46
# Domoticz API/JSON URL
# The svalue (containing the air quality) is added in the main loop after getting
the data from the sensor.
DOM_URL_AIR_QUALITY = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(DOM_IDX_AIR_QUALITY) +
"&nvalue=0&svalue="

# Air Quality Level
# IDX of the Domoticz Alert Sensor for the Air Quality Level
DOM_IDX_AIR_QUALITY_LEVEL = 48
# Domoticz API/JSON URL
# Level = (1=green, 2=yellow, 3=orange), TEXT = GOOD, MODERATE, BAD.
DOM_URL_AIR_QUALITY_LEVEL = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(DOM_IDX_AIR_QUALITY_LEVEL) +
"&nvalue={LEVEL}&svalue={TEXT}"
# Define the 3 air quality levels with text used for the alert sensor text.
# Note the text could be enhanced with the air quality value, i.e. GOOD (19 ug/m3)
air_quality_levels = { 1: "GOOD", 2: "MODERATE", 3: "BAD" }

# Info
print(f'{VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect2()

# Loop forever
while True:

    # Check if there is data send from the sensor via serial line
    if iv.uart.any():

        # Get the air quality & air quality level as dict
        data = iv.air_quality_data(iv.uart.read())

        # Check if the dict contains data - only if above offset
        if data != None:
            # Log the air quality & level from the data dict
            print(f'Air Quality pm2.5={data[0]} ug/m3, level={data[1]}')

        # Submit Domoticz HTTP API/JSON GET requests to update the devices

```

```

# Air Quality Custom Sensor
url = DOM_URL_AIR_QUALITY + str(data[0])
network.send_get_request(url)

# Wait a moment before sending another request
sleep(1)

# Air Quality Level Alert Sensor
url = DOM_URL_AIR_QUALITY_LEVEL
url = url.replace('{LEVEL}', str(data[1]))
# Option text with level text only i.e., GOOD
# url = url.replace('{TEXT}', air_quality_levels[data[1]])
# Option to enhance text with air quality value i.e., GOOD (19 ug/m3)
url = url.replace('{TEXT}', f'{air_quality_levels[data[1]]}%20({str(data[0])}%20ug/m3)')
network.send_get_request(url)

# Wait a second
sleep(1)

```

Automation Script Trigger Air Quality Device Change

The dzVents automation script updates the Air Quality Alert sensor using the same calculation as in the IKEA VINDRIKTNING library (ikeavindriktning.py).

The automation script enables to define additional actions depending on Air Quality level.

MicroPython Script

The MicroPython script, ikeavindriktning.py, is the same as for the first solution.

Automation Script

```

--[[[
File:    ikeavindriktning-alert-sensor.dzvents
Date:    20230516
Author:  Robert W.B. Linn

:description
Listen to air quality device changes to set the level & text of the air quality
alert sensor.
]]--


-- Device IDs
local IDX_AIR_QUALITY = 46          -- Custom sensor
local IDX_AIR_QUALITY_LEVEL = 48      -- Alert sensor

-- Define the air quality levels.
local air_quality_levels = {"GOOD", "MODERATE", "BAD", "UNKNOWN"}

-- Update the alert sensor device
-- Green GOOD: 0-35, Amber MODERATE: 36-85, Orange BAD: > 86.
local function update_air_quality_level(domoticz, value)
    value = tonumber(value)
    local level = 4
    if value >= 0 and value <= 35 then
        level = 1
    elseif value > 35 and value <= 85 then
        level = 2
    elseif value > 85 then
        level = 3
    end
    -- local text = air_quality_levels[level]
    local text = string.format('%s (%d ug/m3)', air_quality_levels[level], value)
domoticz.log(string.format(
    'update_air_quality_level: value=%d, level=%d, text=%s',
    value, level, text))

```

```
-- Update the alert sensor
domoticz.devices(IDX_AIR_QUALITY_LEVEL).updateAlertSensor(level, text)
end

return {
    -- Listen to device changes of the air quality device.
    on = { devices = { IDX_AIR_QUALITY } },
    logging = { level = domoticz.LOG_INFO, marker = 'IKEAVINDRIKTNING', },
    execute = function(domoticz, device)
        update_air_quality_level(domoticz, device.state)
    end
}
```

Automation Script Trigger Custom Event

MicroPython script sending a HTTP API/JSON POST request to a dzVents custom event with data in JSON format, like

```
{
  "value":NN, "level":N
}
```

The custom event to update both devices Air Quality and Air Quality Level.

The dzVents automation script enables to define additional actions depending on air quality level.

MicroPython Script

```
"""
File: ikeavindriktning-custom-event.py
Date: 20230515
Author: Robert W.B. Linn
This example is an enhancement of ikeavindriktning.py.

"""

# Imports
from machine import Pin, UART
from utime import sleep
# Class IKEAVINDRIKTNING from the lib ikeavindriktning.py - stored in Pico W folder
lib
from ikeavindriktning import IKEAVINDRIKTNING
# Class Server from the library server.py - stored in Pico W folder lib
from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'IKEA VINDRIKTNING CUSTOM EVENT v20230516'

"""

PICO W
"""

PIN_UART0_RX = 17    # IKEA VINDRIKTNING UART0 RX Pin GP17 #Pin 22

"""

IKEA VINDRIKTNING SENSOR
"""

UART_BUS = 0          # UART bus 0
VALUE_OFFSET = 0      # Update Domoticz air quality device is abs value between old
and new value > offset
# Create an IKEA VINDRIKTNING object
# UART Serial Bus Number 0 or 1, RX pin (default GP17), offset new/old value
iv = IKEAVINDRIKTNING(UART_BUS, PIN_UART0_RX, VALUE_OFFSET)
```

```

"""
DOMOTICZ
"""

# Domoticz API/JSON URL for the custom event handled by POST request.
# The postdata is added after having the data received: {"value":NN,"level":N}
DOM_URL = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=customevent&event=airquality&data="

# Info
print(f'{VERSION}')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect2()

# Loop forever
while True:

    # Check if there is data send from the sensor via serial line
    if iv.uart.any():

        # Get the air quality & air quality level as dict
        data = iv.air_quality_data(iv.uart.read())

        # Check if the dict contains data - only if above offset
        if data != None:
            # Log the air quality & level from the data dict
            print(f'Air Quality pm2.5={data[0]} ug/m3, level={data[1]}')

            # Submit Domoticz HTTP API/JSON GET request to update the device
            # Post data
            postdata = {}
            postdata['value'] = data[0]
            postdata['level'] = data[1]
            # Submit domoticz
            status = network.send_post_request(DOM_URL, postdata)

        # Wait a second
        sleep(1)

```

Automation Script

```

-- [[
File: ikeavindriktning-custom-event.dzevents
Date: 20230516
Author: Robert W.B. Linn

:description
Listen to custom event to set the air quality devices custom sensor value and level
& text of the air quality alert sensor.
]]--

-- Custom event name as used by the PicoW webserver HTTP API/JSON POST request
local CUSTOM_EVENT_NAME = 'airquality'

-- Device IDxs
local IDX_AIR_QUALITY = 46          -- Custom sensor
local IDX_AIR_QUALITY_LEVEL = 48     -- Alert sensor

-- Define the air quality levels.
local air_quality_levels = {"GOOD", "MODERATE", "BAD", "UNKNOWN"}

-- Get the air quality alert sensor level & text
-- Green GOOD: 0-35, Amber MODERATE: 36-85, Orange BAD: > 86.
local function air_quality_level_text(domoticz, value)

```


```
value = tonumber(value)
local level = 4
if value >= 0 and value <= 35 then
    level = 1
elseif value > 35 and value <= 85 then
    level = 2
elseif value > 85 then
    level = 3
end
-- local text = air_quality_levels[level]
local text = string.format('%s (%d ug/m3)', air_quality_levels[level], value)
domoticz.log(string.format(
    'update_air_quality_level: value=%d, level=%d, text=%s',
    value, level, text))
data = {}
data['level'] = level
data['text'] = text
return data
end

return {
on = { customEvents = { CUSTOM_EVENT_NAME } },
logging = { level = domoticz.LOG_INFO, marker = 'IKEAVINDRIKTNING', },
execute = function(domoticz, triggeredItem)
    if (triggeredItem.isCustomEvent) then
        -- domoticz.log(triggeredItem.data)
        -- Check the custom event name in case there are more custom events
        if (triggeredItem.trigger == CUSTOM_EVENT_NAME) then
            -- Get the JSON object from the triggered item
            local event_data = triggeredItem.json
            -- Log to check air quality value and level to be set
            domoticz.log(string.format('value=%d, level=%d',
                event_data.value, event_data.level))
            -- Update the custom sensor
            domoticz.devices(IDX_AIR_QUALITY).updateCustomSensor(event_data.value)
            -- Update the alert sensor
            local alert_data = air_quality_level_text(domoticz, event_data.value)
            domoticz.devices(IDX_AIR_QUALITY_LEVEL).updateAlertSensor(
                alert_data['level'], alert_data['text'])
        end
    end
end
}
```

7-Segment Display TM1637

Display on a TM1637 7-Segment Display, the air quality value, 0-99 rounded and the level 1 or 2 or 3.

See [TM1637 4-digit 7-segment LED Display](#).

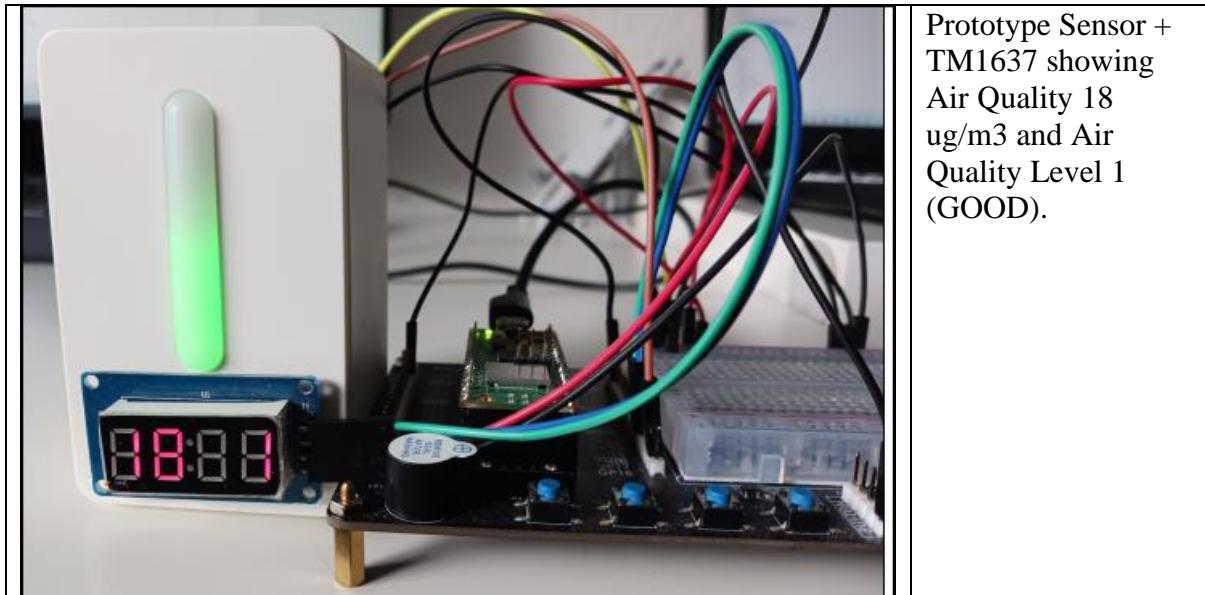

MicroPython Script

```
"""
File: ikeavindriktning-tm1637.py
Date: 20230516
Author: Robert W.B. Linn

:description
Receive data via UART Serial Communication from the IKEA VINDRIKTNING Air Quality
sensor based on particles. PM2.5 = Particulate Matter 2.5µm Concentration (µg/m3).
The air quality value 0-100+ and the air quality level 1 (good), 2 (moderate), 3
(bad) are calculated.
The value is sent via HTTP API/JSON to a Domoticz Custom Sensor.
The value and level are displayed on a 7-segment-LED display.

This example is an enhancement of ikeavindriktning.py.

:wiring
IKEA VINDRIKTNING = Pico W
VCC = 5V (Pin #40, VBUS)
GND = GND (Pin #38)
Data = GP17 (Pin #22, UART0 RX) + Voltage divider 5V to 3V3

TM1637 I2C = Pico W
VCC = VBUS (5V) (Pin #40)
SDA = GP20 (Pin #26)
SCL = GP21 (Pin #27)
GND = GND (Pin #38)
"""

# Imports
from machine import Pin, UART
from utime import sleep
# Class IKEAVINDRIKTNING from lib ikeavindriktning.py - stored in Pico W folder lib
from ikeavindriktning import IKEAVINDRIKTNING
# TM1637 lib - stored in Pico W folder lib
import tm1637
# Class Server from the library server.py - stored in Pico W folder lib
```

```

from server import Server
# Configuration (must be uploaded to the picow)
import config

# Constants
VERSION = 'IKEA VINDRIKTNING TM1637 v20230516'

"""
PICO W
"""
PIN_UART0_RX = 17    # IKEA VINDRIKTNING UART0 RX Pin GP17 #Pin 22

"""
IKEA VINDRIKTNING SENSOR
"""
UART_BUS = 0          # UART bus 0
VALUE_OFFSET = 2      # Update Domoticz air quality device is abs value between old
and new value > offset
# Create an IKEA VINDRIKTNING object
# UART Serial Bus Number 0 or 1, RX pin (default GP17), offset new/old value
iv = IKEAVINDRIKTNING(UART_BUS, PIN_UART0_RX, VALUE_OFFSET)

"""
TM1637
"""
TM1637_I2C_ADDRESS = 0x27  # Default I2C address
TM1637_PIN_DIO = 20
TM1637_PIN_CLK = 21

def tm1637_init(address, pindio, pinclk):
    """Create the TM1637 object by init the TM1637 with i2c.
       Example: tm1637_init(TM1637_I2C_ADDRESS, TM1637_PIN_DIO, TM1637_PIN_CLK)
       Return - TM1637 object
    """
    try:
        tm = tm1637.TM1637(clk=Pin(pinclk), dio=Pin(pindio))
        # print("TM1637 init.")
        return tm
    except OSError as e:
        raise RuntimeError('[ERROR] TM1637 init.')

def tm1637_set_display(value, level):
    """Display air quality value and level."""

    # Clear the display first
    tm.show('      ')
    sleep(.3)

    # Round the value
    value = round(value, 0)
    # Check if the value is < 100
    if value > 99:
        value = 99
    # Set the space between value and level
    space = ' '
    if value < 10:
        space = '  '
    # Set the text
    text = f'{value}{space}{level}'
    # Show the text
    tm.show(text)

"""
DOMOTICZ
"""
# IDX of the Domoticz Custom Sensor for the Air Quality
DOM_IDX = 46
# Domoticz API/JSON URL

```

```
# The svalue (containing the air quality) is added in the main loop after getting
# the data from the sensor.
DOM_URL = "http://" + config.DOMOTICZ_IP
+ "/json.htm?type=command&param=udevice&idx=" + str(DOM_IDX) + "&nvalue=0&svalue="

# Info
print(f'{VERSION}')

# TM1637 display init
tm = tm1637_init(TM1637_I2C_ADDRESS, TM1637_PIN_DIO, TM1637_PIN_CLK)
tm.show(' Ok ')

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD, DEBUG=True)

# Connect to the network and get the server object
server = network.connect2()

# Loop forever
while True:

    # Check if there is data send from the sensor via serial line
    if iv.uart.any():

        # Get the air quality & air quality level as dict
        data = iv.air_quality_data(iv.uart.read())

        # Check if the dict contains data - only if above offset
        if data != None:
            # Log the air quality & level from the data dict
            print(f'Air Quality pm2.5={data[0]} ug/m3, level={data[1]}')

            # Display air quality value 0-99 and level 1-3 on the TM1637 display.
            tm1637_set_display(data[0], data[1])

            # Submit Domoticz HTTP API/JSON GET request to update the device
            network.send_get_request(DOM_URL + str(data[0]))

        # Wait a second
        sleep(1)
```

Traffic Light

Instead using the sensor RGB LEDs, use a Traffic Light LED.
Not started.

MQTT Auto Discovery

Use the Domoticz MQTT Auto Discovery Client Gateway (MQTT-AD) to send data from the Pico W to Domoticz.

Started testing for a Custom Sensor using the mosquitto_pub client from the CLI on the Domoticz Test System

Configuration Message

```
mosquitto_pub -r -h localhost -p 1883
-t "domoticz/sensor/airquality/config"
-m '{
"name": "Air Quality",
"device_class": "airquality",
"state_topic": "domoticz/sensor/airquality/state",
"value_template": "{{value_json.airquality}}",
"unit_of_measurement": "ug/m3",
"unique_id": "AQ001"
}'
```

MQTT-AD State Message

```
mosquitto_pub -h 127.0.0.1 -p 1883
-t "domoticz/sensor/airquality/state"
-m '{"airquality":16}'
```

Domoticz Device

The device is created after sending the MQTT-AD Config and State messages.

```
IDX=47, hardware=MQTTADGateway, ID=AQ001, Unit=1, Name=Air Quality, Type=General,
SubType=Custom Sensor, Data=16 ug/m3
```

[TODO] Create and update a Domoticz Alert Sensor.

Not supported at time of writing (20230515)

Bluetooth Low Energy Sensor MQTT Auto Discovery

Description

This project explores how to use the Raspberry Pi Pico W Microcontroller Bluetooth Low Energy (BLE) feature.

The purpose is to

- create a Bluetooth Low Energy (BLE) environment sensor using the Raspberry Pi Pico W.
- advertise in regular intervals, the environment data temperature, humidity & pressure, and sensor battery level.
- simulate, as a proof-of-concept, data advertised instead using connected sensors sending real data.
- create and update a Domoticz Temp+Humidity+Baro (including the battery level) device using the MQTT Auto Discovery feature.
- explore how to integrate the [OpenMQTTGateway](#) into Domoticz.
- Explore how to use the [MQTT Explorer](#).

CREDITS

To the authors of the OpenMQTTGateway and the MQTT Explorer – great tools.

Solution

A MicroPython script, running on the Raspberry Pi Pico W (called PICOES for this project), generates the environment data temperature, humidity & air pressure + battery level every 2 seconds (indicated by the PICOES onboard GREEN LED).

The data is converted to bytes which are used as the BLE payload being advertised.

An OpenMQTTGateway (OMG), running on a ESP32-WROOM-32 microcontroller, reads the advertised data every 66 seconds (default) and converts the data to a MQTT message.

The data is published, in HEX format, using the PICOES device name.

Why? This is an OMG workaround because the OMG recognizes only the by the PICOES advertised fields MAC address, Name and RSSI.

A Node-RED flow acts as the bridge between the OMG and Domoticz MQTT Auto Discovery Gateway (MQTTAD).

Node-RED runs on the same Raspberry Pi system as Domoticz.

The OMG MQTT message is converted to a Domoticz MQTT-AD message.


The Domoticz MQTT Auto Discovery Gateway reads the Node-RED MQTT message published and updates the Domoticz Temp+Humidity+Baro device.

This solution is an example on how to advertise data and read in passive mode from the Pico W Microcontroller using Bluetooth Low Energy.

It could be the base for other solutions to advertise data and handle in Domoticz (or other).

Sources found in the archive: bleenvironmentsensor.zip.

Block Diagram

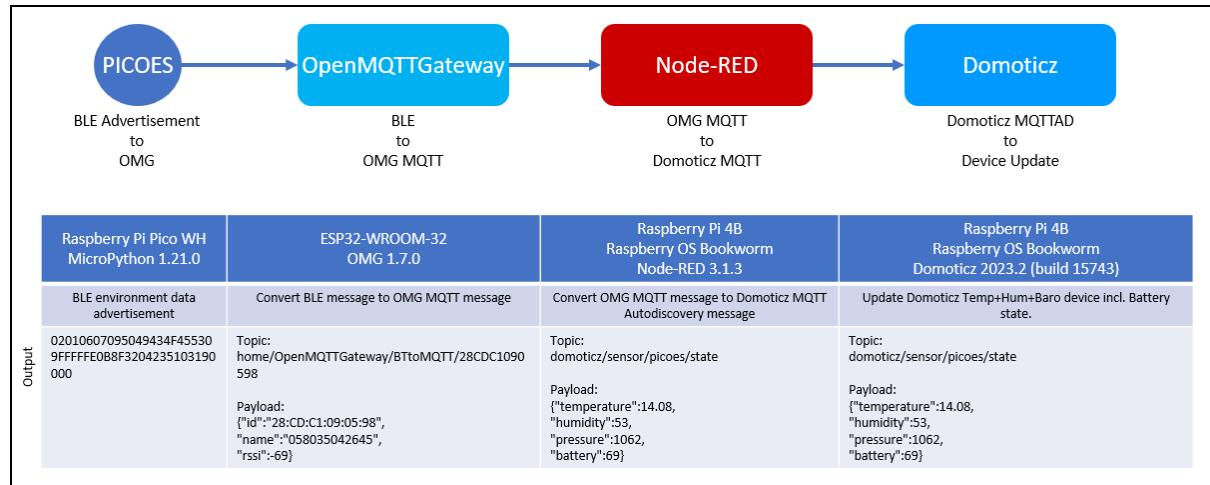

Flow

1. PICOES advertises data, every 2 seconds, via Bluetooth Low Energy (BLE).
2. OMG reads the PICOES advertised data every 66 seconds (default).
3. OMG converts the data and publishes to MQTT.
4. Node-RED flow listens to OMG MQTT messages for the PICOES topic and converts the OMG message to a Domoticz MQTT Auto Discovery message.
5. Domoticz MQTT Auto Discovery Client Gateway to subscribe to the messages.
6. Domoticz to update the auto-created devices, in this case a Temp+Humidity+Baro device.

Notes

The tool MQTT Explorer is used to analyse the MQTT messages from the various systems.

Components

- * 1x Raspberry Pi Pico W, Firmware RPI_PICO_W-20231227-v1.22.0
- * 1x ESP32-WROOM-32, Firmware 1.7.0 (esp32dev-ble)
- * Domoticz 2023.2 (build 15781 BETA)
- * Node-RED v3.1.3

Wiring

| Raspberry Pi Pico W | ESP32-WROOM-32 |
|---|---|
| No additional wiring as environment data is simulated. | No additional wiring. |
| Onboard GREEN LED used to indicate BLE advertising every 2 seconds. | Onboard RED LED used to indicate power status. |
| | Onboard Blue LED used to indicate network status. |

Circuit Diagram

No additional wiring. See block diagram.

The 5V power for the Raspberry Pi Pico W and the ESP32-WROOM-32 are provided by the Raspberry Pi running Domoticz Test System and Node-RED.

Domoticz Setup

MQTT

See chapter [MQTT Auto Discovery](#).

Devices

The devices are created automatically when receiving data.

For this solution, a single Temp+Humidity+Baro (Weather Station) device is created assigned to the hardware OMGGW with id 0001, unit 1 and name PICOES.

| Idx | Hardware | ID | Unit | Name | Type | SubType | Data |
|-----|----------|------|------|--------|------------------------|-----------------|-------------------------|
| 38 | OMGGW | 0001 | 1 | PICOES | Temp + Humidity + Baro | Weather Station | 26.3 C, 56 %, 909.0 hPa |

Automation Script

No automation event used.

MQTT Auto Discovery Configuration

Domoticz Device

The Domoticz Temp+Humidity+Baro device is created using the mosquito_pub client with the retained flag set. The commands are executed from a Domoticz Test System terminal (CLI).

There are 4 commands required to create the single device Temp+Humidity+Baro with battery level state. For each command:

- set the same name PICOES
- set the same state topic “domoticz/sensor/picoes/state”
- set the same value for the configuration key device.identifiers
- set a unique id for each device

Notes

Looked up the Domoticz source on how to create a single device holding multiple environment data, like the Temp+Humidity+Baro sensor.

Bash Script

A bash script is used to create the devices.

```
#!/bin/bash

# File: setautoload.sh
# Date: 20231215
# Author: Robert W.B. Linn
# Description:
# For the PICOES project, create the Domoticz device type Temp+Humidity+Baro,
# subtype Weather Station using MQTT Auto Discovery (MQTTAD).
# The message is published with the retain flag.
# Make Executable:
# sudo chmod +x setautoload.sh
# Run:
# ./setautoload.sh

# Init
# Pause function waiting for enter key.
function pause(){
    read -p "$*"
}

echo 'Creating Domoticz Temp+Humidity+Baro (Weather Station) device'

# Option: delete all retained messages
echo 'Clearing retained messages ...'
mosquitto_sub -h localhost --remove-retained -t '#' -W 1

# Create the Domoticz devices with the goal to create a single Temp+Humidity+Baro
device.
echo 'Creating Domoticz devices ...'

mosquitto_pub -r -h 127.0.0.1 -p 1883 -t
"domoticz/sensor/picoes/temperature/config" -m '{"name": "PICOES","device_class": "temperature","state_topic": "domoticz/sensor/picoes/state","value_template": "{value_json.temperature}}","unit_of_measurement": "c","unique_id": "PICOEST","device": {"identifiers": "1"}}'

mosquitto_pub -r -h 127.0.0.1 -p 1883 -t "domoticz/sensor/picoes/humidity/config" -m '{"name": "PICOES","device_class": "humidity","state_topic": "domoticz/sensor/picoes/state","value_template": "{value_json.humidity}}","unit_of_measurement": "%","unique_id": "PICOESH","device": {"identifiers": "1"}}'

mosquitto_pub -r -h 127.0.0.1 -p 1883 -t "domoticz/sensor/picoes/pressure/config" -m '{"name": "PICOES","device_class": "pressure","state_topic": "domoticz/sensor/picoes/state","value_template": "{value_json.pressure}}","unit_of_measurement": "hpa","unique_id": "PICOESP","device": {"identifiers": "1"}}'

mosquitto_pub -r -h 127.0.0.1 -p 1883 -t "domoticz/sensor/picoes/battery/config" -m '{"name": "PICOES","device_class": "battery","state_topic": "domoticz/sensor/picoes/state","value_template": "{value_json.battery}}","unit_of_measurement": "%","unique_id": "PICOESB","device": {"identifiers": "1"}}'

echo 'Devices created. Check the Domoticz log and the devices list'
pause 'Done, press [Enter] to continue...'
exit
```

BLE Advertised Data Format

The BLE advertised data has a length of 31 bytes containing four fields.

| Field | Field Length Bytes | Field Length 1 Byte | Field Type 1 Byte | Field Data Byte(s) |
|-------------|--------------------|---------------------|-------------------|---|
| Flags | 3 | 02 | 01 | 06 = 02+04 (see source code) Data length: 1 byte |
| Name | 14 | 0D | 09 | NNNNNNNNNNNNNNNNNNNNNNNNNN containing the custom data 6-byte HEX string with length $6 * 2 = 12$ bytes. Each byte holds the HEX value for the HEX character. Data length: 12 bytes |
| Custom Data | 10 | 09 | FF | Manufacturer Key FEFF (2 bytes) + 4 Data Fields (6 bytes) (see below custom data structure) Data length: 8 bytes |
| Appearance | 4 | 03 | 19 | 0000 (see source code) Data length: 2 bytes |
| | 31 | | | |

Example Advertised Payload (length 31 bytes):

0201060D093041384333230333834333009FFFEFF0A8C3203843003190000

| Field | Data = Field Length Byte + Field Type + Data |
|-------------|--|
| Flags | 02 01 06 |
| Name | 0D 09 30413843332303338343330 |
| Custom Data | 09 FF FEFF 0A8C 32 0384 30 |
| Appearance | 03 19 0000 |

Custom Data Structure

| Data | Type (length) | Python Struct | Example Data |
|-------------------------------|-------------------------|---|-----------------------------|
| t=temperature °C (in 1000) | short 2 bytes | struct.pack(">h", t) | HEX=0A8C DEC=2700=27 %C |
| h=humidity %RH (0-100%) | unsigned char 1 byte | struct.pack(">B", h) | HEX=32 DEC=50=50 %RH |
| p=air pressure (hPa) | short 2 bytes | struct.pack(">h", p) | HEX=0384 DEC=900=900 hPa |
| b=battery level (0-100%) | unsigned char 1 byte | struct.pack(">B", b) | HEX=30 DEC=48=48 % |
| | | h=short (2 bytes) B=unsigned char (1 byte) | |

BLE Device Environment Sensor

The Raspberry Pi Pico W acts as the environment sensor advertising via BLE environment data every 2 seconds.

Libraries

The MicroPython script uses a helper for generating BLE advertising payloads. This helper is forked from [this](#) (> examples > bluetooth > ble_advertising.py) MicroPython example - THANKS for sharing:
The helper is stored on the Pico W, in same folder as the bleenvsensor.py script.

Configuration data is stored in the config.py script also stored in the same folder as the bleenvsensor.py script.

The BLE advertising interval is set to 2 seconds, which is higher than the OMG reading message interval of 66 seconds.

```
# File: config.py
# Date: 20231227
# Author: Robert W.B. Linn
# Description:
# Constants for the Raspberry Pi Pico W Environment Sensor (PICOES).
# Import the configuration file: import config.py
# Access configuration item: config.NAME

# Import the const package
from micropython import const

# Version Info - comment out if mem limited
VERSION = const('BLE Environment Sensor v20231227')

# States
STATE_OFF = 0
STATE_ON = 1

# Name of the BLE sensor
# For using the OMG, the name changes to sensor data HEX string (see below OMG)
NAME = const('PICOES')

# Advertised manufacturer id
MANUFACTURER_ID = const(0xFFFFE)

# Gap advertising interval in us
# 1 second = 1000000, but use 0.5 seconds
GAP_ADVERTISE_INTERVAL = 500000

# BLE Advertising Interval in seconds
ADVERTISING_INTERVAL = const(2)

# Pico W onboard LED
PIN_LED_ONBOARD = const('LED')

# OpenMQTTGateway (OMG) to publish data HEX string as sensor name
# WORKAROUND
OMG = True
```

MicroPython Script

```

# File: bleenvsensor.py
# Date: 20231224
# Author: Robert W.B. Linn
# Description:
# Advertised via BLE simulated data temperature, humidity, pressure, battery level.

from machine import Pin
import sys
import bluetooth
import random
import struct
import time
from time import sleep
from ble_advertising_customdata import advertising_payload as advertisepayload
import config

# Create the LED as advertising status indicator
led_status = Pin(config.PIN_LED_ONBOARD, Pin.OUT)
led_status.value(config.STATE_OFF)

def sensor_task():
    """Set the random environment data and advertise.

    Instead, simulated data, add real sensor data here.
    """
    t = 2450
    h = 55
    p = 1000
    b = 85
    while True:
        led_status.value(config.STATE_ON)

        # Create the environment random data
        t = int(random.uniform(1000, 3000))
        h = int(random.uniform(50, 60))
        p = int(random.uniform(900, 1100))
        b = int(random.uniform(20, 90))
        print(f't={t},hex={{:04X}'.format(t)}')
        print(f'h={h},hex={{:02X}'.format(h)}')
        print(f'p={p},hex={{:04X}'.format(p)}')
        print(f'b={b},hex={{:02X}'.format(b)}')

        # Create the custom data as 9 bytes
        # h=short (2 bytes), B=unsigned char (1 byte)
        # Data has 6 bytes = 2 + 1 + 2 +1
        data = struct.pack(">h", t) + struct.pack(">B", h) + struct.pack(">h", p) +
struct.pack(">B", b)

        # Set the name of the device
        name = config.NAME

        # Use the OpenMQTTEexplorer with workaround
        # The sensor name contains the data in HEX format
        if config.OMG:
            name = data.hex().upper()
            print(name, len(name))

        # Create the full payload as bytes to be advertised
        payload = advertisepayload(
            # services=[bluetooth.UUID("6E400001-B5A3-F393-E0A9-E50E24DCCA9E")],
            name=name,
            manufacturer_id=config.MANUFACTURER_ID,
            custom_data=data)
        print(payload.hex().upper(), len(payload))

        # Advertise payload interval (ms) and payload as buffer protocol (bytes)

```

```
ble.gap_advertise(config.GAP_ADVERTISE_INTERVAL, adv_data=payload)

led_status.value(config.STATE_OFF)

# Short delay prior next advertisement
sleep(config.ADVERTISING_INTERVAL)

# Print version info
print(f'{config.VERSION}')

# Create ble object
ble = bluetooth.BLE()

# Activate BLE
# Before using any other method of this class, the radio to be at active state.
try:
    ble.active(True)
    print(f'MAC Address: {ble.config("mac")[1].hex().upper()}, OMG Mode: {config.OMG}')
except OSError as e:
    # Error like etimedout
    print(f'[ERROR] {str(e)}')
    sys.exit(1)

# Start the sensor task which has an infinite loop
sensor_task()
```

OpenMQTTGateway

This solution makes use of the [OpenMQTTGateway](#) (OMG).

It is the first time that the OMG is used in this workbook.

It is a test, on how to integrate the PICOES into Domoticz using the OMG.

Setup

The OMG has been setup according to the provided guidelines (not repeated here) for OMG BLE support for a ESP32-WROOM-32.

- OMG Firmware 1.7.0 **esp32dev-ble** uploaded from the Web (Option 1)
- Configure WiFi Manager:
 - MQTT server: NNN.NNN.NNN.NNN:1883
(this is the Domoticz Test system IP address running also MQTT mosquitto)
 - Gateway Name: OpenMQTTGateway
 - MQTT base topic: home/
 - OMG IP address: NNN.NNN.NNN.NNN
- OMG default settings used – check out with the OMG WebUI or MQTT Explorer.

Environment Data Workaround

The MQTT Explorer shows the PICOES sensor message with the keys:

```
{"id": "28:CD:C1:09:05:98", "name": "PICOES", "rssi": -31}
```

Because the PICOES is a custom sensor, it was clear that there is no other data received like the environment data.

Question: How to get the environment data into Domoticz?

WORKAROUND

The solution uses the data, which is a HEX string, as the name of the PICOES sensor.

The key “name” with default PICOES is replaced by the data in HEX format (see MicroPython code).

Example message seen in the MQTT explorer:

Topic

```
home/OpenMQTTGateway/BTtoMQTT/28CDC1090598
```

Payload


```
{"id": "28:CD:C1:09:05:98", "name": "06C539041323", "rssi": -43}
```

OpenMQTTGateway – Pico W Environment Sensor

The **PICOES** is recognized with its MAC address, but no manufacturer data.

WORKAROUND
Use the key name to publish the environment data in HEX format.

Example message: {
 "id": "28:CD:C1:09:05:98",
 "name": "06C539041323",
 "rssi": -43 }
 The name with HEX string contains the data:
 06C539041323 = 06C5 39 0413 23
Temperature
 HEX 06C5 = DEC 1733 = 17.33 °C
Humidity
 HEX 39 = DEC 57 = 57 %RH
Pressure
 HEX 0413 = DEC 1043 = 1043 hPa
Battery Level
 HEX 23 = DEC 35 = 35 %

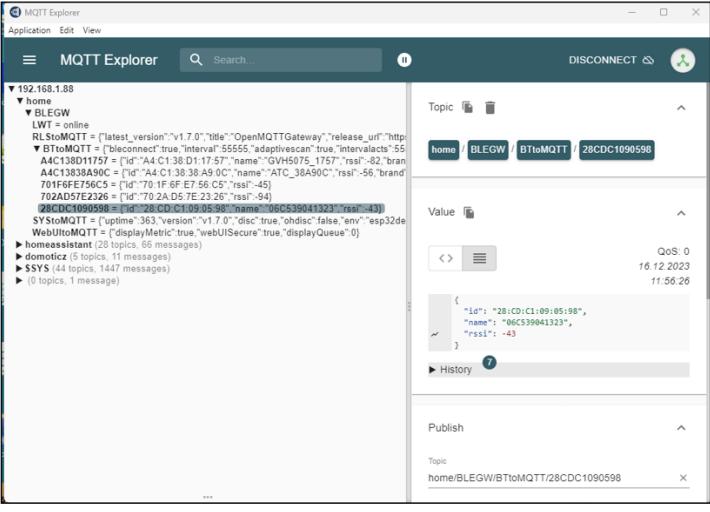

The screenshot shows the MQTT Explorer interface connected to 192.168.1.88. The left sidebar shows topics under 'BLEGW' and 'LWT'. The main pane displays a list of messages. One message is selected, showing its details: Topic: home/BLEGW/BTtoMQTT/28CDC1090598, Value: { "id": "28:CD:C1:09:05:98", "name": "06C539041323", "rssi": -43 }, QoS: 0, Published at 16.12.2023 11:56:26.

Note: Screenshot of the MQTT Explorer with the BLE devices messages.

The next step is to convert the OMG MQTT message to Domoticz MQTT Auto Discovery Client Gateway using Node-RED flow.

OMG MQTT Message

Topic

home/OpenMQTTGateway/BTtoMQTT/28CDC1090598

Payload

```
{
  "id": "28:CD:C1:09:05:98",
  "name": "06C539041323",
  "rssi": -35
}
```

Converted by the Node-RED flow “Update” and published to Domoticz (see next Node-RED).

Domoticz MQTT-AD Message

Topic

domoticz/sensor/picoes/state

Payload

```
{
  "temperature": 17.33,
  "humidity": 57,
  "pressure": 1043,
  "battery": 35
}
```

Just to reiterate:

The Domoticz MQTT-AD topic is the “state_topic” defined in the MQTT-AD configuration messages for temperature, humidity, pressure, and battery level.

Example temperature:

Topic

```
domoticz/sensor/picoes/temperature/config
```

Payload

```
{
  "name": "PICOES",
  "device_class": "temperature",
  "state_topic": "domoticz/sensor/picoes/state",
  "value_template": "{{value_json.temperature}}",
  "unit_of_measurement": "c",
  "unique_id": "PICOEST",
  "device": {"identifiers": "1"}
}
```

Node-RED


Node-RED is used to convert the OMG MQTT message to a Domoticz MQTT message.

Flows

Flow Configuration to define the MQTT-AD topic & payload to create the Domoticz Temp+Humidity+Baro device. This flow is only created as a test. The previous described Bash script is used to create the MQTT-AD configuration messages.


Flow Update to listen to the PICOES OMG topic, convert the payload to a Domoticz MQTT-AD message and publish to Domoticz.

Flow Test to listen to all messages from the PICOES OMG.

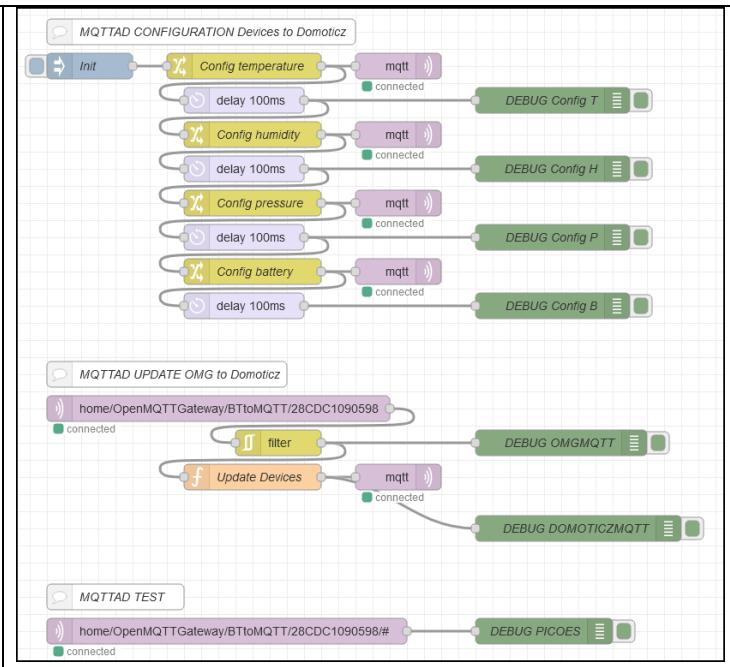

Flow Update

The Node-RED flow listens to OMG MQTT messages from the PICOES, converts the payload to a Domoticz MQTT-AD message and published to Domoticz MQTT-AD.

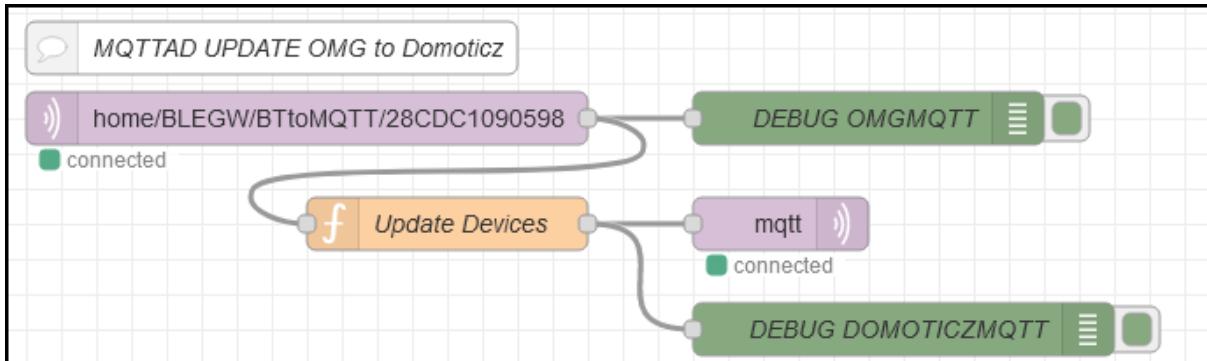

Node MQTT in

| | |
|--|---|
| <p>Server OMG</p> <p>Action Subscribe to single topic</p> <p>Topic home/BLEGW/BTtoMQTT/28CDC1090598</p> <p>QoS 2</p> <p>Output auto-detect (parsed JSON object, string or buffer)</p> | <p>Name OMG</p> <p>Connection</p> <ul style="list-style-type: none"> Server: localhost Port: 1883 <input checked="" type="checkbox"/> Connect automatically <input type="checkbox"/> Use TLS <p>Protocol MQTT V3.1.1</p> <p>Client ID Leave blank for auto generated</p> <p>Keep Alive 60</p> <p>Session <input checked="" type="checkbox"/> Use clean session</p> |
| Listen to OMG MQTT messages from topic PICOES: home/BLEGW... | MQTT server runs on localhost = Domoticz test system. |

Function Node

```

// Assign the payload key name to data
let data = msg.payload.name;

// Get temperature from bytes 1,2 (len 4)
let thex = data.substring(0, 4);
// Get humidity from byte 3 (len 2)
let hhex = data.substring(4, 6);
// Get pressure from bytes 4,5 (len 4)
let phex = data.substring(6, 10);
// Get battery from byte 6 (len 2)
let bhex = data.substring(10, 12);

// Topic prefix as defined in the configuration flow
let topicPrefix = "domoticz/sensor/picoes/";

// Create update message
let msgx = {};
msgx.topic = topicPrefix + 'state';
msgx.payload = {
    'temperature': parseInt(thex, 16) / 100.0 ,
    'humidity': parseInt(hhex, 16),
    'pressure': parseInt(phex, 16),
    'battery': parseInt(bhex, 16)
};
return msgx;
  
```

Get the environment data from the payload.name and create the Domoticz MQTT Auto Discovery state topic with payload.

Topic

domoticz/sensor/picoes/state,

Payload

```
{
"temperature":29.83,
"humidity":50,
"pressure":1006,
"battery":77
}
```

Node MQTT out

| | |
|--|---|
| | |
| | Domoticz MQTT server running same host as the Domoticz test system. |

Enhancements

Real Sensors

As mentioned, the environment data is simulated.

Lookup at other projects, like BMP280, DHT22 on how to connect sensors and get real data which can be published to Domoticz via BLE.

Actuators

It is also possible to connect actuators, like button(s) or a distance sensor to the PICOES and let Domoticz act accordingly.

The environment data to be replaced by the actuator data and the OMG scanning interval set to higher rate (for example 50 milliseconds with adaptivescan false).

See next chapter [Bluetooth Low Energy Actuator MQTT Auto Discovery](#).

Bluetooth Low Energy Actuator MQTT Auto Discovery

Description

- To create a Bluetooth Low Energy (BLE) actuator using the Raspberry Pi Pico W Microcontroller.
- To advertise the actuator changed state.
- To auto create and update the state of Domoticz device(s) using the MQTT Auto Discovery feature.

Note

This example is based upon the project PICOES - [Bluetooth Low Energy Sensor MQTT Auto Discovery](#).

Solution

The Raspberry Pi Pico W (named PICOACT) is built in a Raspberry Pi Pico Breadboard Kit. This kit has 4 pushbuttons, named K1-K4 and 4 LEDs named LED1-LED4.

The two pushbuttons K1 and K2 act as actuators.

If pressed, the state of an assigned Domoticz device from type Light/Switch, Switch, Push On Button is set to on.

A Micropython script, running on the PICOACT, generates data if a pushbutton is pressed. The data is converted to bytes which are used as the BLE payload being advertised.

An OpenMQTTGateway (OMG), running on a ESP32-WROOM-32 microcontroller, reads the advertised data and converts the data to a MQTT message.

The MQTT messages is published, with payload containing the key manufacturerdata with the data.


A Node-RED flow acts as the bridge between the OMG and Domoticz MQTT Auto Discovery Gateway (MQTTAD).

The OMG MQTT message is converted to a Domoticz MQTT-AD message.

The Domoticz MQTT Auto Discovery Gateway reads the Node-RED MQTT message published and updates the Domoticz switch device.

Sources found in the archive: bleactuator.zip.

Block Diagram

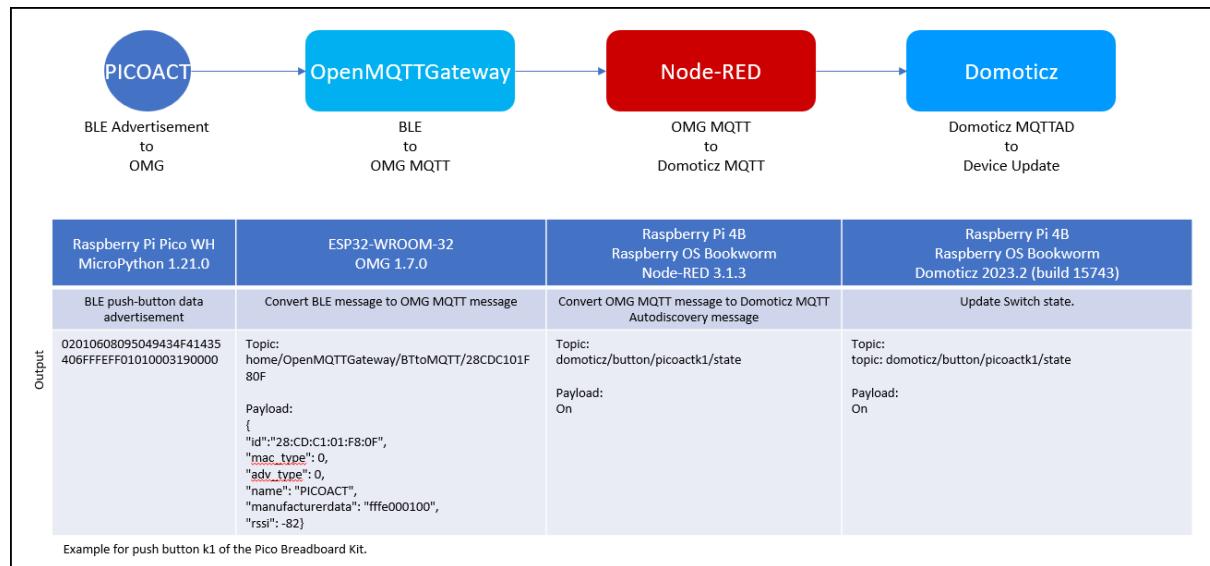

Flow

1. PICOACT advertises data if a pushbutton (example push button k1 of the Pico Breadboard Kit) is pressed via Bluetooth Low Energy (BLE).
2. OMG reads the PICOACT advertised data every 100 milliseconds.
3. OMG converts the BLE message and publishes to MQTT.
4. Node-RED flow listens to OMG MQTT message for the PICOACT topic and converts the OMG message to a Domoticz MQTT Auto Discovery message.
5. Domoticz MQTT Auto Discovery Client Gateway to subscribe to the messages.
6. Domoticz to update the auto-created devices, in this case a push on button device.

Notes

The tool MQTT Explorer is used to analyse the MQTT messages from the various systems.

Components

- * 1x Raspberry Pi Pico W, Firmware RPI_PICO_W-20231227-v1.22.0
- * 1x Raspberry Pi Pico Breadboard Kit
- * 1x ESP32-WROOM-32, Firmware 1.7.0 (esp32dev-ble)
- * Domoticz 2023.2 (build 15781 BETA)
- * Node-RED v3.1.3

Wiring

| Pico Breadboard Kit | Pico W |
|-------------------------------|---|
| Button K1 | GP18 (Pin #24)(wire yellow) |
| Button K2 | GP19 (Pin #25)(wire green) |
| Beep | GND (Workaround to avoid ad hoc beeping - not clear why this happens) |
| Onboard LED BLUE + (Anode) | GP25 (Onboard) |

Circuit Diagram

No additional wiring. See block diagram.

The 5V power for the Raspberry Pi Pico W and the ESP32-WROOM-32 are provided by the Raspberry Pi running Domoticz Test System and Node-RED.

Domoticz Setup

MQTT

See chapter [MQTT Auto Discovery](#).

Devices

For this solution, two devices from type Light/Switch, Switch, Push On Button are created assigned to the hardware OMGGW.

The screenshot shows the Domoticz software interface. At the top, there is a table titled "Domoticz Hardware" with one entry: "Idx Name Enabled Type Address Port Data Timeout" (13 OMGGW Yes MQTT Auto.Discovery Client Gateway with LAN interface localhost 1883 Disabled). Below this is a table titled "Domoticz Devices" with two entries: "Idx Hardware ID Unit Name Type SubType" (39 OMGGW K1FFE 1 Button K1 Light/Switch Switch On, 40 OMGGW K2FFE 1 Button K2 Light/Switch Switch On). Arrows point from the "Name" column of the "Domoticz Devices" table to two separate device detail panes at the bottom. Each pane has a title (e.g., "Button K1", "Button K2"), a status bar with "Last Seen: 2023-12-31 18:02:25" and "Type: Light/Switch, Switch, Push On Button", and a footer with buttons for "Log", "Edit", "Timers", and "Notifications".

The Domoticz devices list after submitting the MQTT Config messages.
The initial state of a pushbutton is Off.

Automation Script

Example of a dzVents script, which listens to device pushbutton changes.

```
--[[  
File: picoact_pushbuttons.dzvents  
Date: 20231231  
Author: Robert W.B. Linn  
Description:  
Test handling the PICOACT pushbutton K1 or K2 press.  
]]--  
  
-- Domoticz Idx  
-- Switch K1 from type push on button  
local IDX_SWITCH_K1 = 39  
local IDX_SWITCH_K2 = 40  
local PUSH_BUTTONS = { IDX_SWITCH_K1, IDX_SWITCH_K2 }  
  
return {  
    on = {  
        devices = PUSH_BUTTONS  
    },  
    execute = function(domoticz, item)  
        -- domoticz.log(item)  
        domoticz.log(string.format("Device %s state changed to %s", item.name,  
item.state))  
        -- Do something  
    end  
}
```

Domoticz Log

```
2023-12-31 10:53:44.168 OMGGW: Light/Switch/Switch (Button K1)  
2023-12-31 10:53:44.252 Status: dzVents: Info: Handling events for: "Button K1",  
value: "On"  
2023-12-31 10:53:44.253 Status: dzVents: Info: ----- Start internal script:  
picoact_pushbuttons: Device: "Button K1 (OMGGW)", Index: 39  
2023-12-31 10:53:44.253 Status: dzVents: Info: Device Button K1 state changed to On  
2023-12-31 10:53:44.253 Status: dzVents: Info: ----- Finished picoact_pushbuttons  
2023-12-31 10:53:44.161 Debug: OMGGW: topic: domoticz/button/picoactk1/state,  
message: On  
2023-12-31 10:53:49.886 OMGGW: Light/Switch/Switch (Button K2)  
2023-12-31 10:53:49.972 Status: dzVents: Info: Handling events for: "Button K2",  
value: "On"  
2023-12-31 10:53:49.972 Status: dzVents: Info: ----- Start internal script:  
picoact_pushbuttons: Device: "Button K2 (OMGGW)", Index: 40  
2023-12-31 10:53:49.972 Status: dzVents: Info: Device Button K2 state changed to On  
2023-12-31 10:53:49.972 Status: dzVents: Info: ----- Finished picoact_pushbuttons  
2023-12-31 10:53:49.880 Debug: OMGGW: topic: domoticz/button/picoactk2/state,  
message: On
```

MQTT Auto Discovery

MQTT-AD is used to create & update the Domoticz devices.

The component is a button - default push on button in Domoticz.

This means that each state sent is a trigger setting the device state to On, i.e. push button pressed (see MQTT Update Message).

MQTT Config Message

MQTT configuration message to create the Domoticz pushbutton devices.

The MQTT command is executed from a terminal (CLI) on the Domoticz test system.

The retained flag is set.

Each button has a unique ID containing the Pico Breadboard pushbutton name and the manufacturer id (set in the MicroPython script).

```
mosquitto_pub -r -h 127.0.0.1 -p 1883 -t "domoticz/button/picoactk1/config" -m
'{"name": "Button K1", "state_topic": "domoticz/button/picoactk1/state",
"unique_id": "K1FFFE"}'

mosquitto_pub -r -h 127.0.0.1 -p 1883 -t "domoticz/button/picoactk2/config" -m
'{"name": "Button K2", "state_topic": "domoticz/button/picoactk2/state",
"unique_id": "K2FFFE"}'
```

Bash Script

```
#!/bin/bash

# File: setautoload.sh
# Date: 20231231
# Author: Robert W.B. Linn
# Description:
# For the PICOACT project, create the Domoticz device type Switch, subtype Switch
using MQTT Auto Discovery (MQTTAD).
# The message is published with the retain flag.
# Read more about MQTT-AD on Homeassistant.
# Make Executable:
# sudo chmod +x setautoload.sh
# Run from the Domoticz system:
# ./setautoload.sh

# Init
# Pause function waiting for enter key.
function pause(){
    read -p "$*"
}

echo 'Creating Domoticz Switch devices'

# Option: clear the button config retained messages
echo 'Clearing retained messages ...'
mosquitto_sub -h localhost --remove-retained -t 'domoticz/button/picoactk1/config'
-W 1
mosquitto_sub -h localhost --remove-retained -t 'domoticz/button/picoactk2/config'
-W 1

# Create the Domoticz devices with the goal to create Domoticz push button device.
# Each device is from type Switch, SubType Switch with unique ID KnManufacturerID,
i.e. K1FFFE, K2FFFE.
echo 'Creating Domoticz devices ...'

mosquitto_pub -r -h 127.0.0.1 -p 1883 \
```

```
-t "domoticz/button/picoactk1/config" \
-m '{"name": "Button K1", "state_topic": "domoticz/button/picoactk1/state",
"unique_id": "K1FFFE"}'
# 2023-12-29 13:18:47.407 Status: OMGGW: discovered: PICOACT/PICOACT (unique_id:
K1FFFE)
# 2023-12-29 13:18:47.406 Debug: OMGGW: topic: domoticz/button/picoact/config,
message: {"name": "Button K1", "state_topic": "domoticz/button/picoactk1/state",
"unique_id": "K1FFFE"}

mosquitto_pub -r -h 127.0.0.1 -p 1883 \
-t "domoticz/button/picoactk2/config" \
-m '{"name": "Button K2", "state_topic": "domoticz/button/picoactk2/state",
"unique_id": "K2FFFE"}'
# 2023-12-29 13:19:47.407 Status: OMGGW: discovered: PICOACT/PICOACT (unique_id:
K2FFFE)
# 2023-12-29 13:18:47.406 Debug: OMGGW: topic: domoticz/button/picoact/config,
message: {"name": "Button K2", "state_topic": "domoticz/button/picoactk2/state",
"unique_id": "K2FFFE"}

# ADD MORE like K3, K4

echo 'Devices created. Check the Domoticz log and the devices list'

pause 'Done, press [Enter] to continue...'
exit
```

Domoticz Log

The Domoticz log lists the devices discovered after submitting the MQTT config message.

```
2023-12-30 11:20:03.499 Status: OMGGW: discovered: Button K1/Button K1 (unique_id: K1FFE)
2023-12-30 11:20:03.499 Debug: OMGGW: topic: domoticz/button/picoactk1/config, message: {"name": "Button K1", "state_topic": "domoticz/button/picoactk1/state", "unique_id": "K1FFE"}
2023-12-30 11:20:15.844 Status: OMGGW: discovered: Button K2/Button K2 (unique_id: K2FFE)
2023-12-30 11:20:15.843 Debug: OMGGW: topic: domoticz/button/picoactk1/config, message: {"name": "Button K2", "state_topic": "domoticz/button/picoactk2/state", "unique_id": "K2FFE"}
```

MQTT Remove Config Topics

With these MQTT messages, the retained config topics are removed.

```
mosquitto_sub -h localhost --remove-retained -t 'domoticz/button/picoactk1/config' -W 1
mosquitto_sub -h localhost --remove-retained -t 'domoticz/button/picoactk2/config' -W 1
```

Domoticz Devices List

The Domoticz devices list after submitting the MQTT Config messages.

The initial state of the pushbutton is Off.

```
IDX=39, hardware=OMGGW, ID=K1FFE, Unit=1, Name=Button K1, Type=Light/Switch, SubType=Switch, Data=Off
IDX=40, hardware=OMGGW, ID=K2FFE, Unit=1, Name=Button K2, Type=Light/Switch, SubType=Switch, Data=Off
```

MQTT Update Message

Push the button on can be achieved by setting the state to whatever value.

Each state value is handled by Domoticz as a trigger to push the button.

DO NOT USE THE RETAINED FLAG -r.

```
mosquitto_pub -h 127.0.0.1 -p 1883 -t "domoticz/button/picoactk1/state" -m ON
OR
mosquitto_pub -h 127.0.0.1 -p 1883 -t "domoticz/button/picoactk1/state" -m '{"state":1}'
```

Domoticz Log

```
2023-12-30 11:53:11.281 OMGGW: Light/Switch/Switch (Button K1)
2023-12-31 10:00:36.123 Debug: OMGGW: topic: domoticz/button/picoactk1/state, message: ON
OR
2023-12-30 11:53:11.274 Debug: OMGGW: topic: domoticz/button/picoactk1/state, message: {"state":1}
```

BLE Device Actuator

The Raspberry Pi Pico W acts as an actuator advertising the changed state of a pushbutton.

Libraries

The MicroPython script uses a helper for generating BLE advertising payloads.

This helper is forked from [this](#) (> examples > bluetooth > ble_advertising.py) MicroPython example - THANKS for sharing:

The helper is stored on the Pico W, in same folder as the bleenvsensor.py script.

Configuration data is stored in the config.py script also stored in the same folder as the bleenvsensor.py script.

The BLE advertising interval is set to 2 seconds, which is higher than the OMG reading message interval of 66 seconds.

```
# File: config.py
# Date: 20231227
# Author: Robert W.B. Linn
# Description:
# Constants for the Raspberry Pi Pico W Environment Sensor (PICOES).
# Import the configuration file: import config.py
# Access configuration item: config.NAME

# Import the const package
from micropython import const

# Version Info - comment out if mem limited
VERSION = const('BLE Environment Sensor v20231227')

# States
STATE_OFF = 0
STATE_ON = 1

# Name of the BLE sensor
# For using the OMG, the name changes to sensor data HEX string (see below OMG)
NAME = const('PICOES')

# Advertised manufacturer id
MANUFACTURER_ID = const(0xFFFF)

# Gap advertising interval in us
# 1 second = 1000000, but use 0.5 seconds
GAP_ADVERTISE_INTERVAL = 500000

# BLE Advertising Interval in seconds
ADVERTISING_INTERVAL = const(2)

# Pico W onboard LED
PIN_LED_ONBOARD = const('LED')

# OpenMQTTGateway (OMG) to publish data HEX string as sensor name
# WORKAROUND
OMG = True
```

MicroPython Script

```

# File: bleactuator.py
# Date: 20231229
# Author: Robert W.B. Linn
# Description:
# Advertised via BLE the state of 2 buttons (actuators).
# The Pico Breadboard Kit buttons K1-K2 are used.

from machine import Pin
import sys
import bluetooth
import random
import struct
import time
from time import sleep
from ble_advertising_customdata import advertising_payload as advertisepayload
import config

# Create the LED as advertising status indicator
led_status = Pin(config.PIN_LED_ONBOARD, Pin.OUT)
led_status.value(config.STATE_OFF)

# Create the Buttons K1 (Yellow), K2 (Green)
BUTTON_K1_PINNR = 18
button_k1 = Pin(BUTTON_K1_PINNR, Pin.IN, Pin.PULL_UP)
BUTTON_K2_PINNR = 19
button_k2 = Pin(BUTTON_K2_PINNR, Pin.IN, Pin.PULL_UP)

# Button globals handling the button interrupt and button debounce time
interrupt_flag = 0
debounce_time = 0

# Global button_data
button_data = None

def callback_button(pin):
    """Callback for the button pressed"""

    global button_data
    global button_k1, button_k2
    global interrupt_flag, debounce_time

    led_status.value(config.STATE_ON)

    # Init the button states
    state_k1 = 0
    state_k2 = 0

    # Check debounce
    if (time.ticks_ms() - debounce_time) > 500:
        # Interrupt flag set
        interrupt_flag = 1
        # Get the ticks for handling debounce
        debounce_time = time.ticks_ms()

        print(f'[DEBUG] callback_button: pin={pin}')
        if pin is button_k1:
            state_k1 = 1
        elif pin is button_k2:
            state_k2 = 1
        # and so on

        # Set the button data
        button_data = struct.pack(">B", state_k1) + struct.pack(">B", state_k2)
        print(f'[DEBUG] callback_button: data={button_data.hex()}')

    led_status.value(config.STATE_OFF)

```

```

# Assign interrupt to the buttons
button_k1.irq(trigger=Pin.IRQ_FALLING, handler=callback_button)
button_k2.irq(trigger=Pin.IRQ_FALLING, handler=callback_button)

# BLE Advertise id
advertise_id = 1

def actuator_task(advertise_id):
    """Set the button state and advertise"""

    # Get the button data set by the button callback
    global button_data

    # Create the custom data as 2 bytes
    # h=short (2 bytes), B=unsigned char (1 byte)
    # Data has 1 byte = 1
    data = struct.pack(">B", advertise_id) + button_data
    # struct.pack(">B", state)

    # Set the name of the device
    name = config.NAME

    # Use the OpenMQTTEexplorer with workaround
    # The sensor name contains the data in HEX format
    if config.OMG:
        name = data.hex().upper()

    # Create the full payload as bytes to be advertised
    payload = advertisepayload(
        # services=[bluetooth.UUID("6E400001-B5A3-F393-E0A9-E50E24DCCA9E")],
        name = name,
        manufacturer_id = config.MANUFACTURER_ID,
        custom_data = data)
    print("[DEBUG]", payload.hex().upper(), len(payload))

    # Advertise the payload with interval (microseconds) and payload as buffer
    protocol (bytes)
    ble.gap_advertise(config.GAP_ADVERTISE_INTERVAL, adv_data=payload)

# Print version info
print(f'{config.VERSION}')

# Create ble object
ble = bluetooth.BLE()

# Activate BLE = Before using any other method of this class, the radio to be at
active state.
try:
    ble.active(True)
    # Increase the MTU if data length > 31
    # ble.config(gap_name='test', mtu=100)
    print(f'MAC Address: {ble.config('mac')[1].hex().upper()}', OMG Mode:
{config.OMG}')
except OSError as e:
    print(f'[ERROR] {str(e)}')
    sys.exit(1)

# if __name__ == "__main__":
while True:

    # Handle interrupt detected
    # Trigger: button pressed
    if interrupt_flag is 1:
        print("[DEBUG] Button Interrupt Detected")
        interrupt_flag = 0
        advertise_id = 0 if advertise_id == 1 else 1
        actuator_task(advertise_id)

```

OpenMQTTGateway

The OpenMQTTGateway (OMG) is used to listen to BLE advertised messages if the state of a PICOACT pushbutton changes.

Then convert the BLE message to a OMG MQTT message and publish the OMG MQTT message to the Domoticz MQTT broker.

The OMG WebUI is used to manage the settings.

Setup

The OMG settings are set using the OMG WebUI accessed via web browser OMG IP address.

WebUI Console Commands

Full command submitted using the OMG WebUI Console:

```
commands/MQTTtoBT/config {"adaptivescan":false, "interval":100, "white-
list":["28:CD:C1:01:F8:0F"], "bleconnect":false, "save": true}
```

OMG Console Log

Log entries after changing some settings:

```
N: [ MQTT->OMG ]: {"adaptivescan":false,"interval":100,"white-
list":["28:CD:C1:01:F8:0F"],"bleconnect":false,"save":true}
N: Config bleconnect changed: false
N: Config adaptivescan changed: false
N: Config interval changed: false
N: Config intervalacts changed: false
N: Config scanduration changed: false
N: BT config save:
{"bleconnect":false,"interval":100,"adaptivescan":false,"intervalacts":100,"interva
lcnct":3600000,"scanduration":1000,"onlysensors":false,"randommacs":false,"hasspres
ence":false,"prestopic":"presence/","presuseuuid":false,"minrssi":-
100,"extDecoderEnable":false,"extDecoderTopic":"undecoded","filterConnectable":fals
e,"pubadvdata":true,"pubuuuid4topic":false,"ignoreWBlist":false,"presenceawaytimer":120000,"movingtimer":60000,"forcepscn":false,"enabled":true}, result: 459
N: Send on /BTtoMQTT msg
{"bleconnect":false,"interval":100,"adaptivescan":false,"intervalacts":100,"interva
lcnct":3600000,"scanduration":1000,"onlysensors":false,"randommacs":false,"hasspres
ence":false,"prestopic":"presence/","presuseuuid":false,"minrssi":-
100,"extDecoderEnable":false,"extDecoderTopic":"undecoded","filterConnectable":fals
e,"pubadvdata":true,"pubuuuid4topic":false,"ignoreWBlist":false,"presenceawaytimer":120000,"movingtimer":60000,"forcepscn":false,"tskstck":2644,"crstck":3064,"enabled"
:true,"scnct":14}
N: Send on /BTtoMQTT/28CDC101F80F msg
{"id":"28:CD:C1:01:F8:0F","mac_type":0,"adv_type":0,"name":"PICOACT","manufactured
data":"ffffe000001","rss":-67}
```

The last log entry contains the data send to the PICOACT.

Commands

| Task | Command |
|----------------------------|--|
| Adaptive scan disabled: | commands/MQTTtoBT/config {"adaptivescan":false} |
| Change interval (ms): | commands/MQTTtoBT/config {"interval":100} |
| Set white list to PICOACT: | commands/MQTTtoBT/config {"whitelist":["28:CD:C1:01:F8:0F"]} |
| Disable ble connect | commands/MQTTtoBT/config {"bleconnect":false} |

OMG Console Log PICOACT pushbutton press

Log entry after pushing the PICOACT K2 button.

The key manufacturerdata contains the data fffe000001, which is manufacturer-id:fffe, change-flag:00, k1 state:00, k2 state: 01.

```
N: Send on /BTtoMQTT/28CDC101F80F msg
{"id":"28:CD:C1:01:F8:0F","mac_type":0,"adv_type":0,"name":"PICOACT","manufacturerdata":"fffe000001","rss":-67}
```

Node-RED

Node-RED is used to convert the OMG MQTT message to a Domoticz MQTT message. To get the data published to Domoticz using MQTT Auto Discovery, an MQTT update flow is used.

Flows

| | |
|---|--|
| Flow Configuration is not defined as a Bash script is used to create the devices using MQTT-AD. | |
| Flow Update to listen to the PICOACT OMG topic, convert the payload to a Domoticz MQTT-AD message and publish to Domoticz. | <pre> graph TD MQTTin[MQTTAD UPDATE OMG to Domoticz] --> PayloadChangeFilter[Payload Change Filter] PayloadChangeFilter --> CreateMessage[Create Domoticz Device Update Message] CreateMessage --> MQTTout[MQTT out] DEBUGOMGMQTT[DEBUG OMGMQTT] --- PayloadChangeFilter DEBUGDOMOTICZMQTT[DEBUG DOMOTICZMQTT] --- CreateMessage </pre> |

MQTT Server

Two MQTT servers are defined: OMG and Domoticz.

The OMG MQTT server subscribes to the topic published by the OMG.

home/OpenMQTTGateway/BTtoMQTT/28CDC101F80F

The Domoticz MQTT server publishes the converted OMG message, but also the device autodiscovery message - only once or if device config has changed.

Flow Update

Publish device data and Domoticz to update the devices.

Node MQTT in > Node rbe > Node Function > Node MQTT out

Node MQTT in

Listen to topic

home/OpenMQTTGateway/BTtoMQTT/28CDC101F80F

with MQTT server localhost as running on the same system as Domoticz.

Node rbe

Filter to handle only messages which payload has changed.

Each PICOACT BLE message contains a change indicator, value 00 or 01, as the first byte. This ensures that only MQTT messages are handled if the state of a pushbutton has changed.

Setting: Block unless value changes (ignore initial value).

Node Function

Update the temperature by MQTT publishing to Domoticz.

```
// Create Domoticz MQTT-AD message.

// Get the sensor data from the payload key name and convert the HEX string to
device values.
node.warn(msg.payload);

// Example message:
{"id":"28:CD:C1:01:F8:0F","mac_type":0,"adv_type":0,"name":"PICOACT","manufacturerd
ata":"fffe000100","rssi":-76}
// The key manufacturer data with HEX string contains the data:
"manufacturerdata":"fffe000100"
// feff (2 bytes) = manufacturer id (little endian)
// 00 (1 byte) = changed id
// 01 (1 byte) = state button k1 = 00 off, 01 pushed
// 00 (1 byte) = state button k2 = 00 off, 01 pushed

// Assign the payload key name to data
let data = msg.payload.manufacturerdata;
// feff000100
// node.warn(data);

// Get state button k1 from byte 4 (len 2)
// startpos: (4-1) * 2 = 6, endpos: startpos + 2 = 8
let k1hex = data.substring(6, 8);
// Get state button k2 from byte 5 (len 2)
// startpos: (5-1) * 2 = 8, endpos: startpos + 2 = 10
let k2hex = data.substring(8, 10);

let button = "";
// Check which button is pressed, i.e. hex value is 01
if (k1hex == "01") { button = "k1"; }
if (k2hex == "01") { button = "k2"; }
// node.warn(k1hex + ";" + k2hex);

// Create update message for the selected push button
if (button.length > 0) {
    let msgx = {}
    msgx.topic = "domoticz/button/picoact" + button + "/state";
    msgx.payload = 'On';
    // msgx.payload = { 'state': 1 };


    node.warn(msgx.topic);
    return msgx;
}
```

MQTT out

Publish to Domoticz MQTT-AD with server localhost.

Node-RED Debug Log

The Node-RED debug lists the output of the nodes Debug and messages from the function node.warn used in the function node.

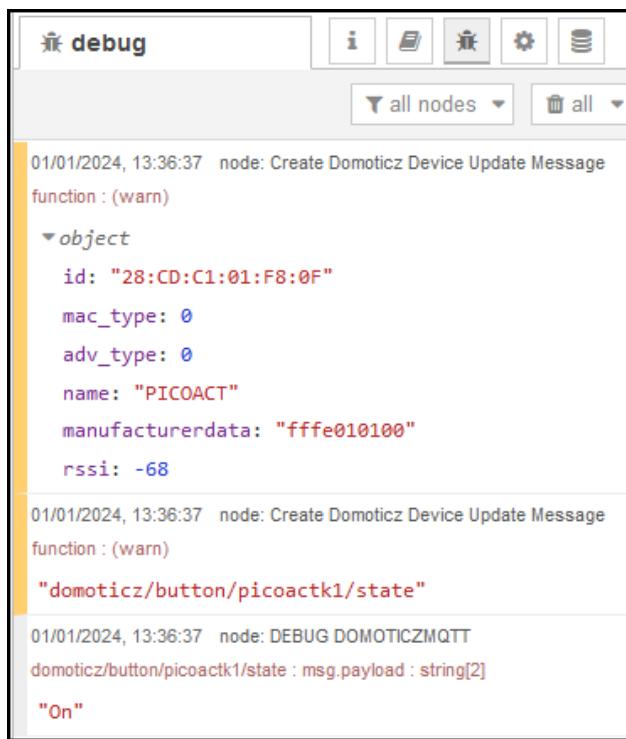

The screenshot shows the Node-RED debug log window. It has a toolbar at the top with icons for info, copy, search, settings, and save. Below the toolbar are two dropdown menus: "all nodes" and "all". The main area displays the following log entries:

```
01/01/2024, 13:36:37  node: Create Domoticz Device Update Message
function : (warn)

  ▼ object
    id: "28:CD:C1:01:F8:0F"
    mac_type: 0
    adv_type: 0
    name: "PICOACT"
    manufacturerdata: "fffe010100"
    rssi: -68

01/01/2024, 13:36:37  node: Create Domoticz Device Update Message
function : (warn)

  "domoticz/button/picoactk1/state"

01/01/2024, 13:36:37  node: DEBUG DOMOTICZMQTT
domoticz/button/picoactk1/state : msg.payload : string[2]
"On"
```

ESP8266 Projects

Introduction


This chapter explores how to use the ESP8266 microcontroller with MicroPython. As mentioned in the [Introduction](#), the core of the projects uses the Raspberry Pi Pico W microcontroller, but out of curiosity made few simple ESP8266 projects.

Setup


The hardware is an ESP8266 NodeMCU (Model ESP8266MOD, Vendor AI-THINKER). The NodeMCU is connected to USB COM12 of the development device. Thonny is used to flash and program the NodeMCU.

The firmware is download from [here](#).

To flash, open Thonny, go to bottom right, select MicroPython (ESP8266) COM12. Then select menu Tools > Options > Interpreter

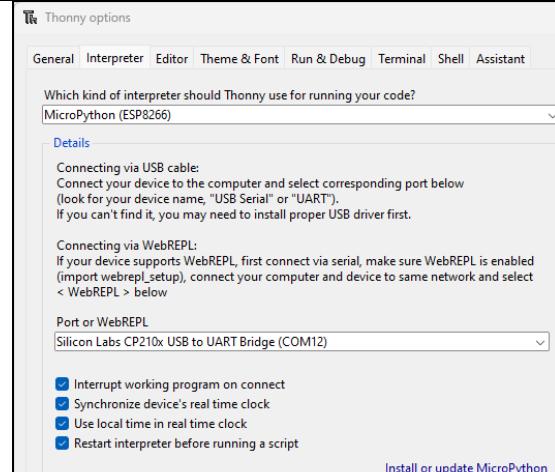

Select Install or Update MicroPython.
See picture right.

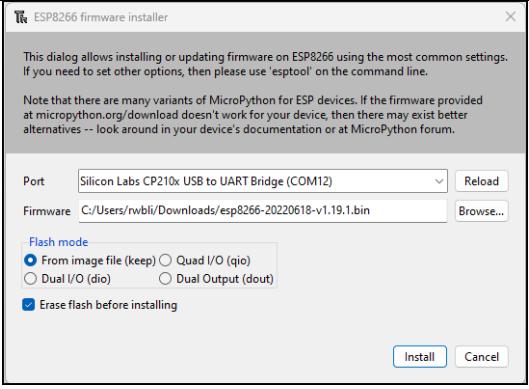

Press Install.

Notes

During flash the onboard blue LED is blinking. If the option “Erase flash before installing” is disabled, the MicroPython files are not deleted. After flash the Thonny log shows (REPL): MicroPython v1.19.1 on 2022-06-18; ESP module with ESP8266

LED Blink

Description

This project let an LED blink every 2 seconds.


Solution

The ESP8266, NodeMCU, has an LED connected.

Wiring

| LED (red) | NodeMCU |
|------------------------------|------------------|
| + (Anode) with resistor 220k | GPIO15 (Pin #D8) |
| GND (Cathode) | GND |

Circuit Diagram

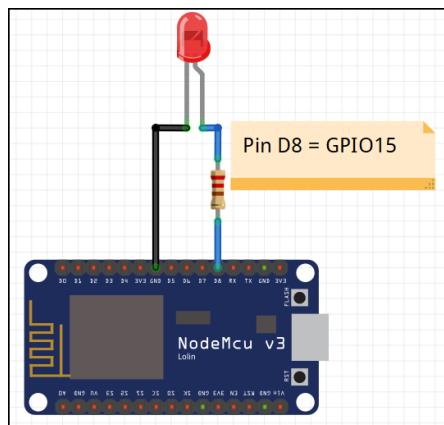

MicroPython Script

```
"""
File: esp8266-ledblink.py
Date: 20230413
Author: Robert W.B. Linn

:description
Let LED connected to an ESP8266 pin #D8 (GPIO15) blink every 2 seconds.

:log
esp8266-ledblink v20230413
LED state On
LED state Off
LED state On
"""

# Imports
from machine import Pin
from time import sleep

VERSION = 'esp8266-ledblink v20230413'

# Define the LED pin D8=GPIO15
```

```
PIN_LED_D8 = 15
# Create the LED object and set state off
led = Pin(PIN_LED_D8, Pin.OUT)
led.value(0)

# Set blink delay
DELAY = 2 # seconds

def IIF(state):
    """Convert the state 1 | 0 to On | Off string.
    """
    if state == 1:
        return 'On'
    else:
        return 'Off'

print(VERSION)
# Loop forever
while True:
    led.value(not led.value())
    state = led.value()

    # Print the led state On or Off
    print('LED state', IIF(led.value()))

    # This is not working on the ESP8266
    # print(f'LED state {led.value() }')

    # Wait few seconds
    sleep(DELAY)
```

LED Remote Control

Description

This project sets the state of an LED (connected to the NodeMCU) On/Off via a Domoticz Switch submitting an HTTP GET request.

Solution


The NodeMCU runs as a web server and listens to HTTP GET requests to turn the LED On or Off.

This is the same project as described for the Pico W project [Domoticz Switch Device Action](#).

Wiring

| LED (red) | NodeMCU |
|------------------------------|------------------|
| + (Anode) with resistor 220k | GPIO15 (Pin #D8) |
| GND (Cathode) | GND |

Circuit Diagram

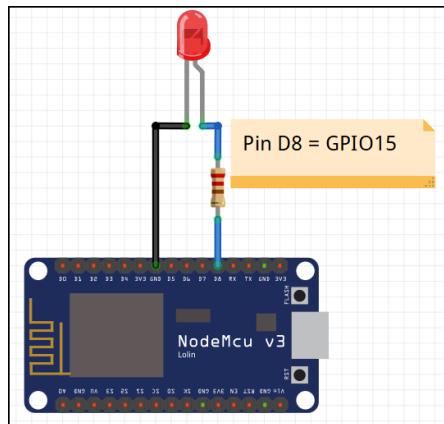

Web Server

Libraries

The MicroPython script uses the MicroPython library “espserver.py” developed by the author. This library is based upon the Pico W [Web Server](#) solution.

```
"""
File:espserver.py
Date:20230423
Author: Robert W.B. Linn

:description
Class to manage the ESP8266 RESTful webserver.
Commands set via HTTP GET or POST requests with HTTP response JSON object.
"""

# Libraries
import network
import urequests
import socket
import time
from machine import Pin
import json

"""
Class Server
"""
class Server:
    # Constants
    NAME = 'ESPServer'
    VERSION = 'v20230414'

    CRLF = chr(13) + chr(10)
    SPACE = chr(32)

    # Domoticz
    # HTTP response JSON keys
    KEY_STATE= 'status'
    KEY_TITLE= 'title'
    KEY_MESSAGE = 'message'

    # Messages used for HTTP response
    STATE_OK      = 'OK'
    STATE_ERR     = 'ERROR'
    MESSAGE_EMPTY = ''
    MESSAGE_UNKNOWN = 'Unknown'
    MESSAGE_CMD_UNKNOWN = 'Unknown command.'
    MESSAGE_ON     = 'On'
    MESSAGE_OFF    = 'Off'

    def __init__(self, wifi_ssid, wifi_password, STATUS_PIN=16, DEBUG=True):
        """
        Init the network with defaults.

        :param string wifi_ssid
            SSID of the network to connect

        :param string wifi_password
            Passord of the network to connect

        :param string | int STATUS_PIN
            Pin number of the LED indicating network status connected
            For an NodeMCU this is GPIO16 (pin #D0)

        :param bool DEBUG
        
```

```

        Flag to set the log for debugging purposes
"""
self.debug = DEBUG
self.wifi_ssid = wifi_ssid
self.wifi_password = wifi_password

# Create the onboard LED object to indicate controller is up and network
connected
self.ledstatus = Pin(STATUS_PIN, Pin.OUT)
self.ledstatus.off()

def log(self, msg):
    """
    Log to the console if debug flag is true.

    :param string msg
        Message to print
    """
    if self.debug:
        print(msg)

def connect(self):
    """
    Connect to the network using the class SSID and password.

    :param None
    :return object server
        Server object.

    :example
        # Create network object
        network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
        # Connect to the network and get the server object
        server = network.connect()
    """

try:
    wlan = network.WLAN(network.STA_IF)
    if wlan.isconnected():
        wlan.active(False)
    wlan.active(True)
    wlan.connect(self.wifi_ssid, self.wifi_password)
    # Network connection
    max_wait = 10
    self.log('Network waiting for connection...')
    while wlan.isconnected() == False:
        if wlan.status() < 0 or wlan.status() >= 3:
            break
        max_wait -= 1
        pass
        max_wait -= 1

    if wlan.isconnected() == False:
        self.ledstatus.off()
        raise RuntimeError('[ERROR] Network connection failed!')
    else:
        self.ledstatus.on()
        self.log('Network connected OK')
        status = wlan.ifconfig()
        self.log('Network IP ' + status[0] )

    # Network Get address
    addr = socket.getaddrinfo('0.0.0.0', 80)[0][-1]

    # Network Create the server socket
    server = socket.socket()

    # Option to reuse addr to avoid error EADDRINUSE
    server.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)

```

```

        # Bind the address befor starting to listen for icoming client
connections
        server.bind(addr)
        server.listen(1)
        self.log('Network listening on ' + str(addr))
        # self.log(server)
        return server
    except OSError as e:
        self.ledstatus.off()
        cl.close()
        raise RuntimeError('[ERROR] Network connection closed')

def parse_get_request(self, request):
    """
    Parse the command from the HTTP GET Request.
    The first line of the request contains the command.
    The first line is split and the 2nd item holds the command + data.
    Example first line with the command:
    GET /led1/on HTTP/1.1
    The command is /led1/on.

    :param string request
        HTTP GET request

    :return string command
        Command, i.e. /led1/on

    :return int status
        0 = Error, 1 = OK

    :example
        # Parse the get data. In case of error, the status is 0.
        cmd, status = network.parse_get_request(request)
    """
    status = 0
    cmd = self.MESSAGE_CMD_UNKNOWN

    # Split the decoded request string into a list
    data = str(request.decode()).split(self.CRLF)

    # Check if there is data to get the first item
    if (len(data) > 0):
        # print(data[0])
        # Split the first item which is the command string into a list with 3
        items
        cmd = data[0].split(self.SPACE)
        # Check length and get the 2nd item, i.e. /led1/on
        if len(cmds) == 3:
            cmd = cmd[1]
            status = 1
        else:
            print('[ERROR] HTTP GET number of command items invalid. Expect 3,
got ' + len(cmds))
        else:
            print('[ERROR] HTTP GET request not valid.')
            self.log('HTTP Command=' + cmd)

        # Return the command, i.e. /led1/on etc.
        return cmd, status

def parse_post_request(self, request):
    """
    Parse the command from the HTTP POST Request.
    The last line of the HTTP request contains the command + data.
    The HTTP request is decoded and split as a string list.
    The last line is a JSON object with key:value pair(s).

    :param string request

```

```

    HTTP request

    :return string command
        Command as JSON key:value pair(s), i.e. {"led":1}

    :return int status
        0 = Error, 1 = OK

    :example
        # Parse the post data. In case of error, the status is 0.
        data, status = network.parse_get_request(request)
    """
status = 0
cmd = self.MESSAGE_CMD_UNKNOWN

# Split the decoded request string into a list
data = str(request.decode()).split(self.CRLF)

# Check if there is data to get the last item
# At least 8 items
if (len(data) > 7):
    # JSON parse the last list item holding the command as JSON string
    # Convert the string to a JSON object
    try:
        cmd = json.loads(data[len(data) - 1])
        status = 1
    except ValueError:
        # In case the JSON data can not be parsed
        cmd = data[len(data) - 1]
        print('[ERROR] HTTP POST request not valid (ValueError).')
    else:
        print('[ERROR] HTTP POST request not valid (Not enough items, must be
8 or more).')
        self.log('HTTP Command=' + cmd)

    # Return the command as JSON object, i.e. HTTP Command: {'state': 'on'}
    return cmd, status

def get_client_connection(self, server):
    """
    Get the client connection.

    :param object server
        Server object which is listening

    :return object cl
        The requested data format depends on the request

    :example
        cl, request = network.get_client_connection(server)
    """
    # Get client connection
    cl, addr = server.accept()
    self.log('Network client connected from ' + addr[0])

    # Get the request data used to extract the command
    request = cl.recv(1024)
    # Return cl and the request data
    return cl, request

def send_response(self, cl, response, close):
    """
    Send the response to the client, i.e. Domoticz, curl etc. as JSON object.

    :param object cl
    :param JSON response

```

```
:param bool close
"""
self.log('HTTP Response=' + json.dumps(response))

# Important to have a blank line prior JSON response string
# Note the use of json.dumps for the response
cl.send('HTTP/1.1 200 OK'+self.CRLF+'content-type:
application/json'+self.CRLF+self.CRLF+json.dumps(response))

# If flag close is set, ensure to close the connection
if close == True:
    cl.close()
    self.log('Network connection closed')

def send_get_request(self, url):
"""
Network submit http get request to the domoticz server.

:param string url
    URL of the HTTP request

:return int status
    0 = Error, 1 = OK

:return string content
    HTTP response content sent by Domoticz engine

:example
    Update the Domoticz temp+hum device with IDX 15
    http://domoticz-
ip:port/json.htm?type=command&param=udevice&idx=15&nvalue=0&svalue=16;55;1
"""
status = 0
content = ''
self.log('Send GET request url=',url)
try:
    # URL encode space
    url = url.replace(' ', '%20')
    r = urequests.get(url)
    j = json.loads(r.content)
    content = j
    self.log('Send GET request status=' + j['status'])
    r.close()
    status = 1
except OSError as e:
    # print('[ERROR] Sending data', e)
    raise Exception('[ERROR] Sending data ' + e)
except ValueError as e:
    # print('[ERROR]', e, r.content.decode())
    raise Exception('[ERROR]', e, r.content.decode())
return status, content

def send_post_request(self, url, postdata):
"""
Network submit http post request to the domoticz server.

:param string url
    URL of the HTTP request

:param string postdata
    postdata as JSON object

:return int status
    0 = Error, 1 = OK

:example
    Trigger the Domoticz custom event named DHT22 with data JSON object
```

```
        http://domoticz-
ip:port/json.htm?type=command&param=customevent&event=DHT22&data={"h": 58, "t": 16,
"s": 0}
"""
status = 0
self.log('Send POST request url=' + url + ', postdata=' + postdata)
try:
    r = urequests.post(url, data=json.dumps(postdata))
    j = json.loads(r.content)
    self.log('Send POST request status=' + j['status'])
    r.close()
    status = 1
except OSError as e:
    print('[ERROR] Sending data', e)
    # raise Exception('Network Connection failed.')
return status
```

MicroPython Script

```
"""
File:esp8266-ledremotecontrol.py
Date:20230413
Author: Robert W.B. Linn

ESP8266 RESTful webserver listening to control an LED via Domoticz Switch.
Commands are set via HTTP GET request with HTTP response JSON object.

:commands
LED ON:
HTTP Request:http://esp8266-ip/led1/on
HTTP response: {"status": "OK", "title": "/led1/on", "message": "On"}

LED OFF:
HTTP Request:http://esp8266-ip/led1/off
HTTP response: {"status": "OK", "title": "/led1/off", "message": "Off"}

LED STATE:
HTTP Request:http://esp8266-ip/led1/state
HTTP response: {"status": "OK", "title": "/led1/state", "message": "On"}

In case of an error:
HTTP response: {"status": "ERROR", "title": "/led1/x", "message": "Unknown
command."}

Example using curl to turn LED1 on:
curl -v http://esp8266-ip/led1/on

:log
esp8266-ledremotecontrol v20230414
#7 ets_task(4020f560, 28, 3fff9430, 10)
Network waiting for connection...
Network connected OK
Network IP esp8266-ip
Network listening on ('0.0.0.0', 80)
Network client connected from client-ip
HTTP Command=/led1/on
HTTP Response={"title": "/led1/on", "message": "On", "status": "OK"}
Network connection closed
Network client connected from client-ip
HTTP Command=/led1/off
HTTP Response={"title": "/led1/off", "message": "Off", "status": "OK"}
Network connection closed
"""

# Libraries
import network
import socket
import time
from machine import Pin
import json
# Import server class from server.py
from espserver import Server
# Configuration read from config.py (must be uploaded to the picow prior testing)
import config

# Constants
NAME = 'esp8266-ledremotecontrol'
VERSION = 'v20230413'

# URL params to switch LED1 on or off or request state
# http://pico-ip/command
CMD_LED_ON = '/led1/on'
CMD_LED_OFF = '/led1/off'
CMD_LED_STATE= '/led1/state'
```

```
# Create the LED object using config.py settings
# Define the LED pin D8=GPIO15
PIN_LED_D8 = 15
# Create the LED object and set state off
led = Pin(PIN_LED_D8, Pin.OUT)
led.value(0)

"""
Handle the request containing the command.
The LED is turned on/off or the state is requested.
The response JSON object is updated.

:param string cmd
    Command to set the LED1 state on/off or get the state.

:return JSON object response
"""

def handle_request(cmd):
    # Turn the LED on
    if cmd == CMD_LED_ON:
        led.value(1)
        response[config.KEY_MESSAGE] = config.MESSAGE_ON
        response[config.KEY_STATE] = config.STATE_OK
    # Turn the LED off
    elif cmd == CMD_LED_OFF:
        led.value(0)
        response[config.KEY_MESSAGE] = config.MESSAGE_OFF
        response[config.KEY_STATE] = config.STATE_OK
    # Get the LED state
    elif cmd == CMD_LED_STATE:
        if led.value() == 1:
            response[config.KEY_MESSAGE] = config.MESSAGE_ON
        else:
            response[config.KEY_MESSAGE] = config.MESSAGE_OFF
            response[config.KEY_STATE] = config.STATE_OK
    else:
        response[config.KEY_STATE] = config.STATE_ERR
        response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
    return response

# Main
print(NAME, VERSION)

# Create network object
network = Server(config.WIFI_SSID, config.WIFI_PASSWORD)
# Connect to the network and get the server object
server = network.connect()

while True:
    try:
        # Get client connection and the request data
        cl, request = network.get_client_connection(server)

        # Create the HTTP response JSON object
        response = {}

        # Parse the get data. In case of error, the status is 0.
        cmd, status = network.parse_get_request(request)

        # Assign the command to the response KEY_TITLE
        response[config.KEY_TITLE] = cmd

        # If the status is 1, handle the command
        if status == 1:
            response = handle_request(cmd)
        else:
            response[config.KEY_STATE] = config.STATE_ERR
            response[config.KEY_MESSAGE] = config.MESSAGE_CMD_UNKNOWN
```

```
# Send response to the client and close the connection
network.send_response(cl, response, True)

except OSError as e:
    network.ledstatus.off()
    cl.close()
    print('[ERROR] Network Connection closed')
```

Domoticz Setup

Devices

Create a virtual sensor, hardware dummy, named LED1 Control from sensor type Switch/Light.

After creating the device, the Domoticz devices list shows the entry:

```
Idx=16, Hardware=VirtualSensors, ID=00014060, Unit=1, Name=LED1 Control,
Type=Light/Switch, SubType=Switch, Data=On
```

Device Actions

For the switch device with IDX=16, two device actions are defined:

```
On Action: http://esp8266-ip/led1/on
Off Action: http://esp8266-ip/led1/off
```

The screenshot shows the Domoticz interface. On the left, there is a preview window showing the device status as 'On'. It displays the name 'LED1 Control', last seen date '2023-04-14 13:56:09', type 'Light/Switch, Switch, On/Off', and a lightbulb icon. Below the preview are buttons for 'Log', 'Edit', 'Timers', and 'Notifications'. On the right, the detailed configuration page for 'LED1 Control' is shown. The device details are: Idx: 16, Name: LED1 Control, Switch Type: On/Off, and a 'Default' switch icon. Under the 'Actions' section, 'On Delay' and 'Off Delay' are both set to 0 seconds. The 'On Action' is set to 'http://esp8266-ip/led1/on' and the 'Off Action' is set to 'http://esp8266-ip/led1/off'.

Automation Script

There is no automation script.

If required to take any other action rather switching the LED On/Off, create an dzVents script.

```
--[[[
File: esp8266_remotecontrol.dzvents
Date: 20230224
Author: Robert W.B. Linn

:description
Listen to the state change of a switch device.
The state change is triggered by device actions http://esp8266-ip/led1/on or Off

:log
2023-04-14 14:02:38.682 VirtualSensors: Light/Switch (LED1 Control)
2023-04-14 14:02:38.676 Status: User: admin initiated a switch command (16/LED1
Control/Off)
2023-04-14 14:02:38.779 Status: dzVents: Info: Handling events for: "LED1 Control",
value: "Off"
2023-04-14 14:02:38.779 Status: dzVents: Info: template: ----- Start internal
script: esp8266_remotecontrol: Device: "LED1 Control (VirtualSensors)", Index: 16
2023-04-14 14:02:38.779 Status: dzVents: Info: template: Device LED1 Control state
changed to Off
2023-04-14 14:02:38.779 Status: dzVents: Info: template: ----- Finished
esp8266_remotecontrol
2023-04-14 14:02:41.070 VirtualSensors: Light/Switch (LED1 Control)
2023-04-14 14:02:41.067 Status: User: admin initiated a switch command (16/LED1
Control/On)
```

```
2023-04-14 14:02:41.117 Status: dzVents: Info: Handling events for: "LED1 Control",
value: "On"
2023-04-14 14:02:41.117 Status: dzVents: Info: template: ----- Start internal
script: esp8266_remotecontrol: Device: "LED1 Control (VirtualSensors)", Index: 16
2023-04-14 14:02:41.117 Status: dzVents: Info: template: Device LED1 Control state
changed to On
2023-04-14 14:02:41.117 Status: dzVents: Info: template: ----- Finished
esp8266_remotecontrol
]]--
```

```
IDX_SWITCH = 16

return {
    on = {
        devices = {
            IDX_SWITCH
        }
    },
    logging = {
        level = domoticz.LOG_INFO,
        marker = 'template',
    },
    execute = function(domoticz, device)
        domoticz.log(string.format('Device %s state changed to %s', device.name,
device.state), domoticz.LOG_INFO)
    end
}
```

Appendix

MQTT Auto Discovery

Description

Whilst starting to write this book, the projects require to create manually Domoticz devices. For example, the [DHT22 Temperature + Humidity](#) project requires to create manually a Domoticz device from type Temp + Humidity using the Dummy hardware controller.

As from Domoticz version 2022.1 stable, the hardware controller [MQTT Auto Discovery Client Gateway with LAN interface](#) has been added.

This means that for a device, own state topics can be defined, handled by Domoticz. No need to use the Domoticz topics “domoticz/in” or domoticz/out”. A device state can be set by its own MQTT topic with payload.

To mention is that the MQTT broker mosquitto and the clients mosquitto_pub and mosquitto_sub run on the Domoticz Test System (Raspberry Pi 4B). The Domoticz hardware controller MQTT Client with LAN interface is added and enabled.

Domoticz Setup

MQTT Auto Discovery Client Gateway with LAN interface

The first step is to add new hardware “MQTT Auto Discovery Client Gateway with LAN interface”.

Hardware device settings

| Screenshot | Settings |
|------------|---|
| | <p>Name: MQTTADGateway</p> <p>Note Used a short name for easier log reading.</p> <p>Remote Address: localhost</p> <p>Note The gateway runs on the same Domoticz system but can be accessed remote via MQTT.</p> <p>Port: 1883</p> <p>Note This is the default MQTT port.</p> <p>Auto Discovery Prefix: domoticz</p> <p>Note Ensure to use the same prefix as for MQTT client gateway.</p> |

Domoticz MQTT Debug

For exploring how to use the MQTT Auto Discovery feature, it is helpful to log MQTT messages at debug level.

To enable (tested on Raspberry Pi) the mosquitto configuration file needs changes followed by a restart of Domoticz.

Modify the file “/etc/init.d/domoticz.sh” by adding the two lines:

```
DAEMON_ARGS="$DAEMON_ARGS -loglevel normal,status,error,debug"  
DAEMON_ARGS="$DAEMON_ARGS -debuglevel hardware"
```

Then restart Domoticz

```
sudo systemctl daemon-reload  
sudo service domoticz restart
```

Domoticz Log

Below is a snippet of the Domoticz log after restarting Domoticz.

The gateways MQTT client (MQTTClientGateway) and Auto Discovery (MQTTADGateway) are connected to the localhost.

The MQTTADGateway discovers two devices.

```
2023-04-18 14:29:15.468 Status: MQTTClientGateway: Connecting to localhost:1883  
2023-04-18 14:29:15.468 Status: MQTTADGateway: Connecting to localhost:1883  
2023-04-18 14:29:15.669 Status: MQTTADGateway: connected to: localhost:1883  
2023-04-18 14:29:15.669 Status: MQTTClientGateway: connected to: localhost:1883  
2023-04-18 14:29:15.970 Status: MQTTADGateway: discovered: SGT001/Garden Temp  
(unique_id: SGT001)  
2023-04-18 14:29:15.970 Debug: MQTTADGateway: topic:  
domoticz/sensor/sensorGardenT/config, message: {"name": "Garden Temp",  
"device_class": "temperature", "state_topic": "domoticz/sensor/sensorGarden/state",  
"value_template": "{{value_json.temperature}}", "unit_of_measurement": "\u00b0C",  
"unique_id": "SGT001"}  
2023-04-18 14:29:16.071 Status: MQTTADGateway: discovered: SGH001/Garden Hum  
(unique_id: SGH001)  
2023-04-18 14:29:16.070 Debug: MQTTADGateway: topic:  
domoticz/sensor/sensorGardenH/config, message: {"name": "Garden Hum",  
"device_class": "humidity", "state_topic": "domoticz/sensor/sensorGarden/state",  
"value_template": "{{value_json.humidity}}", "unit_of_measurement": "%",  
"unique_id": "SGH001"}  
2023-04-18 14:29:16.171 Debug: MQTTADGateway: topic: domoticz/status, message:  
online
```

MQTT Hints

MQTT Clients

Both clients “mosquitto_pub” and “mosquitto_sub”, are used for testing configuration, publish, and subscribe MQTT messages i.e., topics with payload.

The clients are running from a terminal on Domoticz Test System (Raspberry Pi).

Using the command line clients enables to understand the MQTT message topics and payloads.

These are used by the MicroPython scripts in the various projects.

So, for every project the command line clients are used prior developing the MicroPython code. This is essential.

Remote Access

To be able to access MQTT from remote clients, the mosquitto configuration require to “allow anonymous” and a listener on the default port.

Edit the Mosquitto configuration file (this is done on a Raspberry Pi)

```
sudo nano /etc/mosquitto/conf.d/mosquitto.conf
```

Add the lines

```
allow_anonymous true
listener 1883 0.0.0.0
```

Restart Mosquitto service

```
sudo service mosquitto restart
```

Check the mosquitto log message on errors

```
sudo cat /var/log/mosquitto/mosquitto.log
```

Test Remote Access

To test if able to access remotely, like publishing a message to update the temperature & humidity of the devices assigned to the object with id sensorGarden.

```
mosquitto_pub -h domoticz-ip -p 1883 -t "domoticz/sensor/sensorGarden/state" -m '{"temperature":21.9,"humidity":71}'
```

Remove Retained Messages

```
mosquitto_sub -h localhost --remove-retained -t '#' -W 1
```

During testing a whole bunch of messages are published. Lots with errors. These are kept in the MQTT queue. It is therefore required to remove.

Here an example log output from the remove-retain command

```
{"name": "Garden Temp", "cmd_t": "~set", "stat_t": "~state", "uniq_id": "gt123"
}
{"name": "Garden Temp Sensor", "device_class": "temperature", "state_topic": "domoticz/sensor/garden/tempsensor/state"}, "value_template": "{{ value_json.temperature|default(0) }}"
```

```
{"name": "plant_sensor_1", "state_topic": "domoticz/plants/1/state",
"value_template": "{{ value_json.temperature|default(0) }}"
{"name": "plant_sensor_1", "state_topic": "domoticz/plants/1/state"
{"name": "plantsensor1", "device_class": "temperature", "state_topic":
"domoticz/plants/1/state", "value_template": "{{ value_json.temperature|default(0)
}}"
 {"name": "Garden Temp", "device_class": "temperature", "state_topic":
"domoticz/sensor/sensorGarden/state", "value_template": "{{ value_json.temperature}}",
"unit_of_measurement": "°C" }
 {"name": "Garden Hum", "device_class": "humidity", "state_topic":
"domoticz/sensor/sensorGarden/state", "value_template": "{{ value_json.humidity}}",
"unit_of_measurement": "%RH" }
```

IMPORTANT

Restart Domoticz after removing the retained messages and check the Domoticz log.

```
sudo service domoticz restart
```

MQTT Auto Discovery Hints

Some hints gathered during testing.

Sensor Multiple Measurement Values

The Autodiscover feature does not allow to create a Temp+Humidity device but require two devices Temperature and Humidity instead.

These are created by submitting two configuration topics using the same state topic.

IP-Address

The ip address used was localhost or 127.0.0.1 (because running from local terminal) but can also access remote, like domoticz-ip (see previous Hints > Remote Access).

Unit of Measure

Important to use the correct unit_of_measure.

Example if for a Humidity device the unit was set to %RH instead %, the device created was from type "General" instead "Humidity".

See Domoticz source code

```
void MQTAAutoDiscover::GuessSensorTypeValue(...)
```

Device Unique ID

Ensure that each device has a unique id (key "unique_id") in the configuration message.

Hint

If familiar with Piping and Instrument Diagrams, an option is to use for the device an Instrumentation ID, like for the temperature TR001.

Clean All Retained Messages

To start with a clean sheet, all MQTT retained messages are removed, the related Domoticz devices deleted, and the Domoticz Test System is restarted.

Example with command and output:

```
mosquitto_sub -h localhost --remove-retained -t '#' -W 1

{
    "name": "Garden Temp", "device_class": "temperature", "state_topic": "domoticz/sensor/sensorGarden/state", "value_template": "{value_json.temperature}", "unit_of_measurement": "°C", "unique_id": "SGT001"
}, {
    "name": "Garden Hum", "device_class": "humidity", "state_topic": "domoticz/sensor/sensorGarden/state", "value_template": "{value_json.humidity}", "unit_of_measurement": "%", "unique_id": "SGH001"
}

sudo service domoticz.sh restart
```

Example Devices

Sensor Temperature & Humidity

Create Devices Temperature, Humidity

```
mosquitto_pub -r -h localhost -p 1883
-t "domoticz/sensor/sensorGardenH/config"
-m '{
"name": "Garden Hum",
"device_class": "humidity",
"state_topic": "domoticz/sensor/sensorGarden/state",
"value_template": "{{value_json.humidity}}",
"unit_of_measurement": "%",
"unique_id": "SGH001"
}'

mosquitto_pub -r -h localhost -p 1883
-t "domoticz/sensor/sensorGardenT/config"
-m '{
"name": "Garden Temp",
"device_class": "temperature",
"state_topic": "domoticz/sensor/sensorGarden/state",
"value_template": "{{value_json.temperature}}",
"unit_of_measurement": "°C",
"unique_id": "SGT001"
}'
```

Publish to Set Values

```
mosquitto_pub -h localhost -p 1883
-t "domoticz/sensor/sensorGarden/state"
-m '{"temperature":22.1,"humidity":64}'
```

Subscribe to Get Values

```
mosquitto_sub -h localhost -p 1883
-t "domoticz/sensor/sensorGarden/#"

{"temperature":22.1,"humidity":64}
```

Domoticz Devices List

```
IDX=33, Hardware=MQTTADGateway, ID=SGH001, Unit=1, Name=Garden Hum,
Type=Humidity, SubType=LaCrosse WS2300, Data=Humidity 64 %

IDX=34, Hardware=MQTTADGateway, ID=SGT001, Unit=1, Name=Garden Temp,
Type=Temp, SubType=THR128/138, THC138, Data=22.1 C
```

Remove Retained Message

```
mosquitto_sub -h localhost --remove-retained
-t 'domoticz/sensor/sensorGardenH/config' -W 1

mosquitto_sub -h localhost --remove-retained
-t 'domoticz/sensor/sensorGardenT/config' -W 1
```

Sensor Distance

Create Device Distance

```
mosquitto_pub -r -h localhost -p 1883
-t "domoticz/sensor/distance/config"
-m '{
"name": "Distance",
"device_class": "distance",
"state_topic": "domoticz/sensor/distance/state",
"value_template": "{{value_json.distance}}",
"unit_of_measurement": "cm",
"unique_id": "DIST001"
}'
```

Publish to Set Value

```
mosquitto_pub -h localhost -p 1883
-t "domoticz/sensor/distance/state"
-m '{"distance":NN.NN}'
```

Subscribe to Get Value

```
mosquitto_sub -h localhost -p 1883
-t "domoticz/sensor/distance/#"

{"distance":64}
```

Domoticz Devices List

```
IDx=45, Hardware:VirtualSensors, ID=DIST001, Unit=1, Name=Distance,
Type=General, SubType=Distance, Data=123.4 cm
```

Remove Retained Message

```
mosquitto_sub -h localhost --remove-retained
-t 'domoticz/sensor/distance/config' -W 1
```

Push On Button

Create Device

```
mosquitto_pub -r -h 127.0.0.1 -p 1883
-t "domoticz/button/makelab/config"
-m '{
"name": "MakeLabButton",
"state_topic": "domoticz/button/makelab/state",
"unique_id": "BM001"
}'
```

Publish to Set Value

```
mosquitto_pub -h 127.0.0.1 -p 1883
-t "domoticz/button/makelab/state"
-m {'ON'}
OR
-m ON
```

Subscribe to Get Value

```
mosquitto_sub -h localhost -p 1883
-t "domoticz/button/makelab/#"

ON
```

Domoticz Devices List

```
IDX=39, Hardware=MQTTADGateway, ID=BM001, Unit=1, Name=MakeLabButton,
Type=Light/Switch, SubType=Switch, Data=Off
```

Remove Retained Message

```
mosquitto_sub -h localhost --remove-retained
-t 'domoticz/button/makelab/config' -W 1
```

Custom Sensor

Create Device

```
mosquitto_pub -r -h localhost -p 1883
-t "domoticz/sensor/airquality/config"
-m '{
"name": "Air Quality",
"device_class": "airquality",
"state_topic": "domoticz/sensor/airquality/state",
"value_template": "{{value_json.airquality}}",
"unit_of_measurement": "ug/m3",
"unique_id": "AQ001"
}'
```

Publish to Set Value

```
mosquitto_pub -h 127.0.0.1 -p 1883
-t "domoticz/sensor/airquality/state"
-m '{"airquality":16}'
```

Subscribe to Get Value

```
mosquitto_sub -h localhost -p 1883
-t "domoticz/sensor/airquality/#"
```

Domoticz Devices List

```
IDX=47, hardware=MQTTADGateway, ID=AQ001, Unit=1, Name=Air Quality, Type=General,
SubType=Custom Sensor, Data=16 ug/m3
```

Remove Retained Message

```
mosquitto_sub -h localhost --remove-retained
-t domoticz/sensor/airquality/config' -W 1
```

MicroPython Development Hints

| Item | Hint |
|--|--|
| Python | PEP 8 – Style Book for Python Code |
| REPL Command for Help on Modules <pre>>>> help('modules')</pre> | <pre>_main_ lwip uasyncio/lock ure _boot math uasyncio/stream urequests _boot_fat micropython ubinascii uselect _onewire mip/_init_ ucollections usocket _rp2 neopixel ucryptolib ussl _thread network uctypes ustruct _uasyncio ntptime uerrno usys _webrepl onewire uhashlib utime builtins rp2 uheapq uwebsocket cmath uarray uio dht uasyncio/_init_ ujson ds18x20 uasyncio/core umachine webrepl_setup framebuf uasyncio/event uos gc uasyncio/funcs urandom Plus, any modules on the filesystem</pre> |
| REPL Command for Help on rp2 module <pre>>>> import rp2 >>> help('rp2')</pre> | <pre>object rp2 is of type str find -- <function>, rfind -- <function> index -- <function>, rindex -- <function> join -- <function>, split -- <function> splitlines -- <function>, rsplit -- <function> startswith -- <function>, endswith -- <function> strip -- <function>, lstrip -- <function> rstrip -- <function>, format -- <function> replace -- <function>, count -- <function> partition -- <function>, rpartition -- <function> center -- <function>, lower -- <function> upper -- <function>, isspace -- <function> isalpha -- <function>, isdigit -- <function> isupper -- <function>, islower -- <function> encode -- <function></pre> |
| | |
| | |

Abbreviations

Some of the abbreviations used. These apply esp. for the scripts.

| | |
|------------------|---|
| BLE | Bluetooth Low Energy |
| CLI | Terminal Command Line Interface |
| domoticz-ip:port | Domoticz system IP address and port |
| ~domoticz | Path to the Domoticz folder (Home Directory) on the RPi |
| dzVents | Domoticz Easy Events |
| GUI | Domoticz UI in Web Browser |
| Hm, HmIP | Homematic, HomematicIP |
| JSON | JavaScript Object Notation |
| LLC | Logic Level Converter |
| MCU | Microcontroller Unit (Raspberry Pi Pico/Pico W, ESP8266, ESP32) |
| MQTT | Message Queuing Telemetry Transport |
| NodeMCU | ESP8266 MCU |
| Pico W or PicoW | Raspberry Pi Pico W |
| picow-ip | Raspberry Pi Pico W web server IP address |
| RPi | Raspberry Pi |
| webserver | Web Server |