02132 ASSIGNMENT 2 REPORT

HARDWARE IMPLEMENTATION IN CHISEL OF A SMALL CPU RUNNING THE IMAGE EROSION

Group: 22

Mikkel Arn Andersen **s224187**Niclas Juul Schæffer **s224744**Rasmus Kronborg Finnemann Wiuff **s163977**github.com/rwiuff/02132Assignment2 •

November 5th

1 WORK DISTRIBUTION

Table 1 shows the work distribution in the group for this project.

Table 1: Work distribution on the project

Name	Development tasks	Report tasks
Mikkel Arn Andersen Niclas Juul Schæffer Rasmus Wiuff	ISA	Section 2.1

2 DESIGN

2.1. ISA AND ENCODING

The ISA instructions are inspired from Appendix A in the assignment description. It is listed in Table 2.

Table 2: Instruction-set architecture used in the assignment

Instruction	Crintor	Mooning		
IIISTRUCTION	Syntax	Meaning		
Arithmetic instructions				
Addition	ADD Rx, Ry, Rz;	Rx = Ry + Rz		
Subtraction	SUB Rx, Ry, Rz;	Rx = Ry - Rz		
Immediate addition	ADDI Rx, Ry, z;	Rx = Ry + z		
Immediate subtraction	SUBI Rx, Ry, z;	Rx = Ry - z		
Logic instructions				
Bitwise OR	OR Rx, Ry, Rz;	Rx = Ry Rz		
Bitwise AND	AND Rx, Ry, Rz;	Rx = Ry & Rz		
Bitwise NOT	NOT Rx, Ry;	$Rx = \sim Ry$		
Memory instructions				
Load immediate	LI Rx, y;	Rx = y		
Load data	LD Rx, Ry;	Rx = memory(Ry)		
Store data	SD Rx, Ry;	memory(Ry) = Rx		
Control and flow instructions				
Jump	JMP x	GOTO INST x		
Jump if equal	JEQ Rx, Ry, z;	if(Rx == Ry) GOTO INST z		
Jump if less than	JLT Rx, Ry, z;	if(Rx < Ry) GOTO INST z		
Jump if greater than	JGT Rx, Ry, z;	if(Rx > Ry) GOTO INST z		
Do nothing	NOP;	No operation		
END	END;	Terminate		



To design the instructions, first the bit sizes are considered. Some are given in the assignment. If there are 16 registers, these can be reached with $\log_2 16 = 4$ bits. Values for the logic and arithmetic operations are 16 bit as well as addresses in the memory. The opcodes fit within 4 bits. The instruction layout is laid out in Fig. 1.

Figure 1: Instruction layout. R1 and 2 are operands, Rd is the destination register. Remaining bits are used for either memory address or immediate value.

OPCODE (4 bits) Rd (4 bits) R1 (4 bits) R2 (4 bits) Value/address (16 bit) 31···28 27···24 23···20 19···16 Value/address (16 bit)

2.1.1. Opcodes As seen in Fig. 1 there are 4 bits allocated to opcodes. Table 2 accounts for seven register type operations, four jump types, three immediate types and two runtime operations.

Table 3: OPCODE instruction bits.


Instruction type	OPCODE bits	Instruction
Register	0001	ADD
	0010	SUB
	0011	OR
	0100	AND
	0101	NOT
	0110	LD
	0111	SD
Jump	1000	JMP
	1001	JEQ
	1010	JLT
	1011	JGT
Immediate	1100	ADDI
	1101	SUBI
	1110	LI
Runtime	0000	NOP
	1111	END



2.2. COMPILE AND ENCODE

Listing 1: The program compiled to assembly

```
LOAD R1 <- 0
   LOAD R2 <- 0
   ADD R8 = R1 + R2
   ADD R3 = R8 + 1
   ADD R4 = R8 + 20
   ADD R5 = R8 + 22
   ADD R6 = R8 + 41
   LOAD R3 R3
   LOAD R4 R4
   LOAD R5 R5
   LOAD R6 R6
   ADD R3 = R3 + R4
12
   ADD R3 = R3 + R5
13
   ADD R3 = R3 + R6
   ADD R7 = R8 + 21
15
   STORE R7 <- 255
   JEQ R3 === 1020 -> 19
   STORE R7 <- 000
   ADD R1 = R1 + 1
19
   JEQ R1 === 19 -> 22
20
   JUMP -> 3
21
   ADD R1 = 0 + 0
22
   ADD R2 = R2 + 20
   JEQ R2 === 380 -> 26
   JUMP -> 3
25
   END;
```

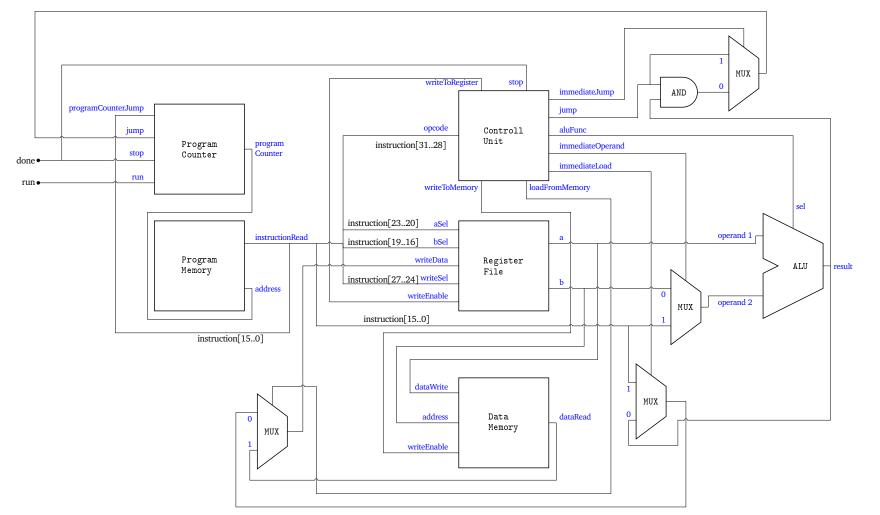



3 IMPLEMENTATION

Briefly discuss the implementation in Chisel of your design. You can include some code snippets if these are relevant to explain certain aspects of the implementation. In other words, try to answer the question "What does a reader need to know about your Chisel implementation?"

4 TEST AND ANALYSIS

Report here the results from the test you have carried out. Present the test you have developed (if any). Remember to discuss the results and the test you have carried out, do not just present them, but explain and argue their meaning. Address the design evaluation questions listed in Task 11 in the Assignment 2 document.

REFERENCES

[1] Arduino, José Bagur, Taddy Chung *Arduino Memory Guide* (19/09/2023) https://docs.arduino.cc/learn/programming/memory-guide