# Microprocessor Systems Lab 3: Asynchronous & Synchronous Serial Communications

Nick Choi

Samuel Deslandes

10/17/16

# 1 Introduction

# 2 Methods

### 2.1 Software

The code for parts 1, 2 and 3 can be found in the appendix below. All code was uploaded and run on the 8051 through the programming/debugging USB port.

### 2.1.1 Part 1

The purpose of C program for the first section of the lab was to write a procedure that would monitor the UART0 and UART1 serial ports continuously, and echo a message received on one port to the other. For this section of the lab, this was accomplished by polling the receive interrupt flags RI0 and RI1 for UART0 and UART1 respectively.

Since this lab uses both UART0 and UART1, both ports must be enabled on the crossbar. The enable bit for UART0 can be found on the XBR0 SFR, XBR2 for that of UART1. As always, the crossbar enable bit in XBR2 must be set. UART0 was configured to be in mode 1 (8-bit UART with variable baud rate), and use Timer2 to generate a baud rate of 9600bps. UART0 configuration can set in the SSTA0 and SCON0 SFRs. Timer2 was configured to be in auto-reload mode and use SYSCLK as a base. These settings can be found in the TMR2CN and TMR2CF SRFs. To count to 9600, the reload value must be set to 0xFEBC. This was calculated as follows:

$$\texttt{Mode1\_BaudRate} = \frac{\texttt{SYSCLK}}{16*(65536 - \texttt{ReloadValue})} \tag{1}$$

For a desired baud rate of 9600 and SYSCLK of 49,766,400Hz, this comes out to:

$$9600 = \frac{49766400}{16 * (65536 - \text{ReloadValue})} \tag{2}$$

$$ReloadValue = 65212 \tag{3}$$

This is equivalent to OxFEBC in hex.

UART1 was similarly configured, but used Timer1 to generate a baud rate of 115200bps. UART1 can be configured in the SCON1 SFR. Timer1 was set to be an 8-bit counter with auto-reload, and use SYSCLK as a base; these changes can be made in the TMOD SFR. The Timer1 reload value should be set as 0xE5. This was calculated as shown below:

$$Mode1\_BaudRate = \frac{SYSCLK}{16 * (256 - ReloadValue)}$$
 (4)

$$ReloadValue = 229 \tag{5}$$

This is equivalent to 0xE5 in hex.

When configuring both UARTs be sure that the receive enable bits are set in the SCON SFRs and that the timers are have been started. In addition to this, in the P0MDOUT SFR

configure the TX pins (P0.0, P0.2) as push-pull for outputs, and the RX pins (P0.1, P0.3) as open-drain for inputs; Also, in the P0 SFR set the inputs (RX pins) for high impedance.

The main routine of this program consists of two sub-routines 'checkSBUF()' and 'echo()' which are run in an infinite loop. The 'checkSBUF()' function continuously polls RI0 and RI1, and returns the value stored in the UART data register when one of the flags is set. The UART data register (SBUFn) is used for both a receive and a transmit buffer. When data is read from SBUF, as is the case for the 'checkSBUF()' function, it comes from the receive buffer. When data is written to SBUF it goes to the transmit buffer and is eventually transmitted when a full byte has been written. The returned value from 'checkSBUF()' is then passed into the 'echo()' function, where it is loaded into both SBUF0 and SBUF1 for transmission to both terminals. Recall that SBUF0 and SBUF1 are on different pages, and that SFRPAGE should be changed accordingly.

### 2.1.2 Part 2

This section of the lab was divided into two parts. The task for the first part was similar to that of section 1, however rather than polling, interrupts were used. The second part involved connecting UART1 to that of another 8051, so that when data is sent to UART0 of one of the 8051s, it echoed to the UART0 of the other microcontroller. The initial configurations were all the same as they were in section 1, with the addition of having to set the global interrupt enable bit (EA), as well as the individual UART0 and UART1 interrupt enable bits which can be found on the IE and EIE2 SFRs respectively. With these bits set, whenever the transmit interrupt flags (TIn) or receive interrupt flags (RIn) are set, the CPU vectors to the appropriate interrupt service routine (ISR); These flags must be cleared manually by the software. The UART0 interrupt has a priority level of 4, while the UART1 interrupt has a priority of 20. One thing to keep in mind in regard to these interrupts is that while UART0 interrupts are enabled, unless the UART0 and UART1 interrupt priorities are swapped, UART1 will not receive any interrupts. Since both receiving and transmitting will trigger an interrupt, the ISR must poll each flag to verify the source of the interrupt.

For part 1 of this section of the lab, the main would only check if the command to end the program had been sent; everything else was handled in the ISRs. The UARTO ISR checks if the source of the interrupt was a receive by checking if RIO has been set. If so, it is cleared and the 'echo()' subroutine is called. After this, UARTO interrupts are temporarily disabled to allow UART1 interrupts to go though. The UART1 ISR has the same routine, however rather than disabling UARTO interrupts, it re-enables them.

The program for part 2 was handled slightly differently. The main routine now continuously polled two flags 'UART0\_flag' and 'UART1\_flag', which would be set in the ISRs of UART0 and UART1 respectively. The 'echo()' function is also used for this part, of the lab, but with the slight modification of disabling UART0 interrupts before loading data into the SBUF registers. The UART0 ISR checks whether the source of the interrupt is a receive, and if it is it clears RI0, reads SBUF0 into a global variable, and sets the UART0\_flag. The UART1 ISR does the same, but enables UART0 interrupts at the end of the ISR.

In the main routine, once the UART0\_flag has been set, the program calls the 'echo()' function, and clears the flag. If the UART1\_flag has been set, the program disables UART0 interrupts, transmits the character to UART0 via the SBUF0 register, re-enables UART0

interrupts, then clears the flag. In this case, the character is sent only to UART0 rather than being echoed to both ports to avoid a feedback loop of infinite transmissions between the two microcontrollers.

In order to allow interrupts on UART1 to go through, in the main routine there is a brief period of time in which UART0 is disable. This small window was implemented by incrementing a variable to 255 in a for loop.

### 2.1.3 Part 3

The third section of this lab deals with the serial peripheral interface bus (SPI), a synchronous serial communication interface. The goal of this section was to communicate with the 68HC11 as a slave device, and use it to echo back any characters that get sent to it. Although the primary focus of this lab is SPI, UART0 is also used to send data to the terminal. As was the case with UART, SPI must also be enabled on the crossbar to function. It's enable bit can be found on XBR0. The relevant configuration SFRs for SPI are SPI0CFG, SPI0CN, and SPI0CKR. In SPI0CFG, enable master mode, so that the 8051 acts as the master device. In the SPI0CN register, enable SPI0, and set it to operate in 4-wire single master mode. The SPI0CKR register stores data pertaining to SPI clock rate, which can be calculated as follows:

$$SCK = \frac{SYSCLK}{2 \times (SPI0CKR + 1)} \tag{6}$$

Setting SPI0CKR to 0x18 with a SYSCLK of 49,766,400 results in a SCK of 995, 328Hz. For SPI communication, in the P0MDOUT SFR, the SCK, MOSI, and NSS pins (P0.2, P0.4, P0.5 respectively) must be set to push-pull.

- 2.2 Hardware
- 3 Results
- 4 Conclusion

# 5 Appendices

# 5.1 Modified putget.h

```
// putget.h
// Title:
                          Microcontroller Development: putchar() & getchar() functions.
// Author:
                         Dan Burke
// Date Created:
                         03.25.2006
// Date Last Modified:
                         03.25.2006
//
// Description:
                         http://chaokhun.kmitl.ac.th/~kswichit/easy1/easy1_3.html
// Target:
                         C8051F120
// Tool Chain:
                         KEIL C51
   putchar()
void putchar (char c)
    while (!TI0);
    TI0=0;
    SBUF0 = c;
   getchar()
char getchar (void)
    char c;
    while (!RIO);
    RI0 = 0;
    c \; = \; SBUF0 \, ;
// Echoing the get character back to the terminal is not normally part of getchar()
      putchar(c);
                      // echo to terminal
    return SBUF0;
```

# 5.2 Circuit Schematic for sections 1 and 3

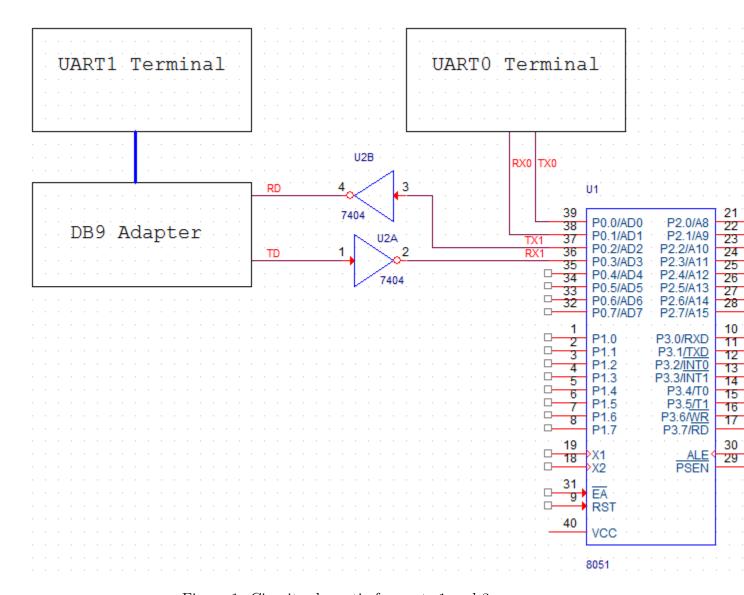


Figure 1: Circuit schematic for parts 1 and 3

# 5.3 Part 1

### 5.3.1 Code

```
//-
// Includes
//-
#include <c8051f120.h>
#include <stdio.h>
#include <stdlib.h>
#include "putget.h"
//-
// Global CONSTANTS
```

```
// External oscillator frequency in Hz
#define EXTCLK
                     22118400
                                 // Output of PLL derived from (EXTCLK * 9/4)
#define SYSCLK
                     49766400
                                 // UART baud rate in bps
#define BAUDRATE
                    115200
//#define BAUDRATE 19200
                                 // UART baud rate in bps
// Function PROTOTYPES
void main(void);
void PORT_INIT(void);
void SYSCLK_INIT(void);
void UART0_INIT(void);
void UART1_INIT(void);
void TIMER0_INIT(void);
{\tt char \ checkSBUF(char \ CUR\_PAGE)}\;;
void echo(char character);
   Main Function
void main(void){
  // Declare local variables
  char message;
  unsigned long i;
    WDTCN = 0xDE;
                                         // Disable the watchdog timer
   WDTCN = 0xAD;
    PORT_INIT();
                                         // Initialize the Crossbar and GPIO
                                         // Initialize the oscillator
    SYSCLK_INIT();
                                          // Initialize UARTO
    UARTO_INIT();
                                       // Initialize UART1
  UART1_INIT();
    SFRPAGE = UART1\_PAGE;
                                         // Direct output to UART1
    printf("\033[2J");
                                         // Erase screen & move cursor to home position
    printf("Test of the printf() function.\n\n\r");
  SFRPAGE = UARTO_PAGE;
                               // Direct output to UART1
  printf("\033[2J");
                                       // Erase screen & move cursor to home position
    printf("Test of the printf() function.\n\r");
    while (1)
    message = checkSBUF(SFRPAGE);
    if(message == 27)
      printf("\n\n\rStopping now...");
      SFRPAGE = UART1_PAGE;
      printf("\n\rStopping now...");
      for (i = 0; i < 2000000; i++);
      return;
    echo (message);
}
char checkSBUF(char CUR_PAGE){
  char serial_dat0;
  char serial_dat1;
  while (1) {
    SFRPAGE = UARTO_PAGE;
    if(RI0){
      serial_dat0 = SBUF0;
      RI0 = 0;
```

```
SFRPAGE = CUR\_PAGE;
      return serial_dat0;
    SFRPAGE = UART1_PAGE;
    if(RI1){
      serial_dat1 = SBUF1;
      RI1 = 0;
      SFRPAGE = CUR\_PAGE;
      return serial_dat1;
 }
}
void echo(char character){
  char SFRPAGE_SAVE;
  SFRPAGE\_SAVE = SFRPAGE;
  SFRPAGE = UARTO_PAGE;
 SBUF0 = character;
 SFRPAGE = UART1_PAGE;
 SBUF1 = character;
 SFRPAGE = SFRPAGE\_SAVE;
   Interrupts
   PORT_Init
// Configure the Crossbar and GPIO ports
void PORT_INIT(void){
  char SFRPAGE_SAVE;
 SFRPAGE\_SAVE = SFRPAGE;
                                // Save Current SFR page.
 SFRPAGE = CONFIG_PAGE;
          = 1;
                                // Enable interrupts as selected.
  EA
  XBR0
          = 0 \times 04;
                                // Enable UARTO.
  XBR1
          = 0x00;
                                XBR2
          = 0x44;
                                ^{\prime\prime} ^{\prime} ^{\prime} ^{\prime} P0.0 (TX0) and P0.2 (TX1) are configured as Push-Pull for
 POMDOUT = 0 \times 05;
      output, P0.1 (RX0) and P0.3 (RX1) are Open-drain
                                // Additionally, set P0.0=0, P0.1=1, P0.2=0, P0.3=1
          = ^{\circ}0 \times 05;
 SFRPAGE = SFRPAGE\_SAVE;
                                // Restore SFR page.
   {\tt SYSCLK\_Init}
// Initialize the system clock 22.1184\mathrm{Mhz}
void SYSCLK_INIT(void){
  int i;
  char SFRPAGE_SAVE;
 SFRPAGE\_SAVE = SFRPAGE;
                              // Save Current SFR page.
```

```
SFRPAGE = CONFIG_PAGE;
 OSCXCN = 0x67;
                                // Start external oscillator
                                // Wait for the oscillator to start up.
  for (i=0; i < 256; i++);
                                // Check to see if the Crystal Oscillator Valid Flag is set.
  while (!(OSCXCN \& 0x80));
  CLKSEL = 0 \times 01;
                                // SYSCLK derived from the External Oscillator circuit.
  OSCICN = 0 \times 00;
                                // Disable the internal oscillator.
 SFRPAGE = CONFIG_PAGE;
 PLL0CN = 0 \times 04;
 SFRPAGE = LEGACY_PAGE;
 FLSCL = 0x10;
 SFRPAGE = CONFIG_PAGE;
 PLL0CN = 0 \times 01;
 PLL0DIV = 0x04;
  PLL0FLT = 0x01;
 PLL0MUL = 0x09;
  for (i=0; i < 256; i++);
  PLL0CN \mid = 0 \times 02;
  while (!(PLL0CN & 0x10));
 CLKSEL = 0 \times 02;
                                // SYSCLK derived from the PLL.
 SFRPAGE = SFRPAGE\_SAVE;
                                // Restore SFR page.
   UART0_Init
// Configure the UARTO using Timer1, for 9600 and 8-N-1.
void UART0_INIT(void)
  char SFRPAGE_SAVE;
 SFRPAGE\_SAVE = SFRPAGE;
                               // Save Current SFR page.
 SFRPAGE \,=\, TMR2\_PAGE;
                                  // Auto-reload mode, use clock defined in TMR2CF,
   TMR2CN = 0x00;
                          // Timer 2 uses SYSCLK as time base
  TMR2CF = 0x08;
 RCAP2H = 0xFE;
                                // Set timer 2 auto-reload value for 9600bps
 RCAP2L = 0xBC;
 TR2 = 1;
                     // Start timer 2
 SFRPAGE = UARTO_PAGE;
 \begin{array}{ll} \text{SCON0} & = 0 \times 50; \\ \text{SSTA0} & = 0 \times 15; \end{array}
                                 // Set Mode 1: 8-Bit UART
                                // UARTO baud rate divide-by-two disabled (SMODO = 1) and use
     TMR2.
  TI0
         = 1;
                                // Indicate TX0 ready.
 SFRPAGE = SFRPAGE\_SAVE;
                                // Restore SFR page
// Configure the UART1 using Timer1, for 115200 and 8-N-1.
void UART1_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                           // Save Current SFR page
    SFRPAGE = TIMER01\_PAGE;
   TMOD &= ^{\circ}0 \times F0;
                                           // Timer1, Mode 2, 8-bit reload
   TMOD = 0x20;
    TH1
          = 40;
                            // Set Timer1 reload baudrate value T1 Hi Byte
  CKCON = 0 \times 10;
                                         // Timer1 uses SYSCLK as time base
    TL1
            = TH1;
    TR1
            = 1;
                                           // Start Timer1
```

## 5.4 Part 2

### 5.4.1 Code

```
// Includes
#include <c8051f120.h>
#include <stdio.h>
#include <stdlib.h>
#include "putget.h"
   Global CONSTANTS
                                 // External oscillator frequency in Hz
#define EXTCLK
                    22118400
#define SYSCLK
                    49766400
                                 // Output of PLL derived from (EXTCLK * 9/4)
#define BAUDRATE
                    115200
                                 // UART baud rate in bps
//#define BAUDRATE 19200
                                 // UART baud rate in bps
char CURR_PAGE;
char exit_flag = 0;
char UART0_flag = 0;
char\ UART1\_flag = 0;
char choice = 0;
// Function PROTOTYPES
void main(void);
void PORT_INIT(void);
void SYSCLK_INIT(void);
void UART0_INIT(void);
void UART1_INIT(void);
void TIMER0_INIT(void);
char checkSBUF(char CUR_PAGE);
void echo(char character);
void INTERRUPT_INIT(void);
void UART0_int(void) __interrupt 4;
void UART1_int(void) __interrupt 20;
  Main Function
void main(void){
  // Declare local variables
  char message;
  unsigned long i;
  char j;
   WDTCN = 0xDE;
                                         // Disable the watchdog timer
   WDTCN = 0xAD;
                                         // Initialize the Crossbar and GPIO
    PORT_INIT();
    SYSCLK_INIT();
                                         // Initialize the oscillator
    UARTO_INIT();
                                         // Initialize UARTO
                                       // Initialize UART1
  UART1_INIT();
  INTERRUPT_INIT();
```

```
SFRPAGE = UARTO_PAGE;
                                   // Direct output to UART1
  printf("\033[2J");
                                          // Erase screen & move cursor to home position
    printf("Test of the printf() function.\n\n\");
    while (1)
    SFRPAGE = UARTO_PAGE;
    if(exit_flag){
      printf("\n\rStopping now...");
      SFRPAGE = UART1_PAGE;
      printf("\n\rStopping now...");
      for (i = 0; i < 20000; i++);
      break;
    }
    for (j=0; j<255; j++){
     ES0 = 0;
    ES0 = 1;
    if(UART0_flag){
      echo(choice);
      UARTO_flag = 0;
    if (UART1_flag) {
      \dot{E}S0 = 0;
      SBUF0 = choice;
      ES0 = 1;
      UART1_flag = 0;
  return;
void echo(char character){
  if(character == 27){
    exit_flag = 1;
    return;
  ES0 = 0;
 \overrightarrow{SFRPAGE} = \overrightarrow{UART0.PAGE};
 SBUF0 = character;
 SFRPAGE = UART1_PAGE;
 SBUF1 = character;
// Interrupts
void UARTO_int(void) __interrupt 4{
  CURR\_PAGE = SFRPAGE;
 SFRPAGE = UARTO_PAGE;
  if(RI0){
    RI0 = 0;
    choice = SBUF0;
    UART0_flag = 1;
 \dot{S}FRPAGE = CURR\_PAGE;
void UART1_int(void) __interrupt 20{
 CURR_PAGE = \hat{SFRPAGE};
  SFRPAGE = UART1\_PAGE;
  if (RI1) {
    RI1 = 0;
```

```
choice = SBUF1;
    UART1_flag = 1;
  ES0 = 1;
 SFRPAGE = CURR_PAGE;
   PORT_Init
// Configure the Crossbar and GPIO ports
void PORT_INIT(void){
  char SFRPAGE_SAVE;
  SFRPAGE\_SAVE = SFRPAGE;
                                 // Save Current SFR page.
 SFRPAGE = CONFIG_PAGE;
          = 0x04;
                                 // Enable UARTO.
  XBR1
          = 0x00;
                                 // Enable Crossbar and weak pull-ups and UART1. // P0.0 (TX0) and P0.2 (TX1) are configured as Push-Pull for
  XBR2
          = 0x44;
 POMDOUT = 0 \times 05;
      output, P0.1 (RX0) and P0.3 (RX1) are Open-drain
                                 // Additionally, set P0.0=0, P0.1=1, P0.2=0, P0.3=1
          = 0x0A;
 SFRPAGE = SFRPAGE\_SAVE;
                                 // Restore SFR page.
}
   SYSCLK_Init
// Initialize the system clock 22.1184Mhz
void SYSCLK_INIT(void){
  int i;
  char SFRPAGE_SAVE;
 SFRPAGE\_SAVE = SFRPAGE;
                                 // Save Current SFR page.
  SFRPAGE = CONFIG_PAGE;
  OSCXCN = 0x67;
                                 // Start external oscillator
                                 // Wait for the oscillator to start up.
// Check to see if the Crystal Oscillator Valid Flag is set.
  for (i=0; i < 256; i++);
  while (!(OSCXCN \& 0x80));
  CLKSEL = 0 \times 01;
                                 // SYSCLK derived from the External Oscillator circuit.
  OSCICN = 0 \times 00;
                                 // Disable the internal oscillator.
  SFRPAGE = CONFIG_PAGE;
  PLL0CN = 0 \times 04;
  SFRPAGE = LEGACY_PAGE;
  FLSCL = 0x10;
  SFRPAGE = CONFIG_PAGE;
  PLL0CN = 0x01;
  PLL0DIV = 0x04;
  PLL0FLT = 0x01;
  PLLOMUL = 0 \times 09;
  for (i=0; i < 256; i++);
  PLLOCN = 0x02;
  while (!(PLL0CN & 0x10));
  CLKSEL = 0x02;
                                 // SYSCLK derived from the PLL.
 SFRPAGE = SFRPAGE\_SAVE;
                                 // Restore SFR page.
void INTERRUPT_INIT(void){
```

```
EA = 1;
                           // Enable interrupts as selected.
  ES0 = 1;
  EIE2 \mid = 0x40;
// Configure the UARTO using Timer1, for 9600 and 8-N-1.
void UARTO_INIT(void)
  char SFRPAGE_SAVE;
  SFRPAGE\_SAVE = SFRPAGE;
                               // Save Current SFR page.
  SFRPAGE = TMR2\_PAGE;
    TMR2CN = 0x00;
                                  // Auto-reload mode, use clock defined in TMR2CF,
  TMR2CF = 0x08;
                          // Timer 2 uses SYSCLK as time base
  RCAP2H = 0xFD;
                                // Set timer 2 auto-reload value for 4800bps
  RCAP2L = 0x78;
  TR2 = 1;
                     // Start timer 2
  SFRPAGE = UARTO_PAGE;
                                 // Set Mode 1: 8-Bit UART
  \begin{array}{ll} \text{SCON0} & = 0 \times 50; \\ \text{SSTA0} & = 0 \times 15; \end{array}
                                // UARTO baud rate divide-by-two disabled (SMODO = 1) and use
      TMR2.
  \mathrm{TI0} \qquad = \ 1;
                                // Indicate TX0 ready.
  SFRPAGE = SFRPAGE\_SAVE;
                               // Restore SFR page
// Configure the UART1 using Timer1, for 115200 and 8-N-1.
void UART1_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                           // Save Current SFR page
    SFRPAGE = TIMER01\_PAGE;
    TMOD &= ^{\circ}0 \times F0;
                                           // Timer1, Mode 2, 8-bit reload
          = 0x20;
    TMOD
                            // Set Timer1 reload baudrate value T1 Hi Byte
    TH1
          = 40;
                                         // Timer1 uses SYSCLK as time base
  CKCON = 0 \times 10;
    TL1
            = TH1;
    TR1
                                            // Start Timer1
            = 1;
  SFRPAGE = UART1_PAGE;
    SCON1 = 0 \times 30;
                                            // Mode 1, 8-bit UART, enable RX
    TI1
            = 1;
                                            // Indicate TX1 ready
  SFRPAGE = SFRPAGE\_SAVE;
                                         // Restore SFR page
5.5
       Part 3
5.5.1 Code
// Includes
#include <c8051f120.h>
#include <stdio.h>
#include "putget.h"
```

// Global Constants

```
#define EXTCLK
                                            // External oscillator frequency in Hz
                      22118400
                                            // Output of PLL derived from (EXTCLK * 9/4)
#define SYSCLK
                      49766400
                                            // UART baud rate in bps
#define BAUDRATE
                      115200
char choice;
char scroll_dwn = 0;
char dummy;
  Function Prototypes
//-
void main(void);
void SYSCLK_INIT(void);
void PORT_INIT(void);
void UART0_INIT(void);
void SPI0_READ(void);
void SPI0_WRITE(void);
void write_dummy(void);
// MAIN Routine
void main (void)
{
  WDTCN = 0xDE;
                                          // Disable the watchdog timer
    WDTCN = 0xAD;
    SYSCLK_INIT();
                                            // Initialize the oscillator
  PORT_INIT();
  UARTO_INIT();
  SFRPAGE = UARTO_PAGE;
  printf("\033[2J");
printf("Local char typed");
printf("\033[13;0H");
printf("Received char\n\r");
                                          // Erase screen & move cursor to home position
                                                // jump down type
  printf("\033[s");
                                          // save position
  while (1)
    SFRPAGE = UARTO_PAGE;
    if(RI0){
      RI0 = 0;
      SPIO_WRITE();
      SPIO_READ();
}
void SPI0_WRITE(void){
  char i;
  char j;
  choice = SBUF0;
                            // get char from terminal
  SFRPAGE = SPI0\_PAGE;
  SPIF = 0;
  NSSMD0 = 0;
                        // select slave
  while (SPIOCFG & 0x80); // Make sure SPI is not busy
  SPIF = 0;
                      // clear SPIF
                          // Load char into SPI0DAT
// Small delay
  SPI0DAT = choice;
  for (i=0; i<100; i++);
  while (!SPIF);
                        // Wait until transmission complete
  SPIF = 0;
  //Read Dummy
```

```
// Release slave
  NSSMD0 = 1;
  dummy = SPI0DAT;
                        // Get received char from SPIODAT (dummy)
  // for (i=0; i<100; i++);
                            // Small delay
  if (choice = 0x7F) {
    while (SPI0DAT != 0xFF) {
      for (i=0; i<100; i++);
      write_dummy();
      SPIO_READ();
      //if(choice == 0xFF) break;
  }
  else{
    //ANSI formatting
    printf("\033[2;12r");
    printf("\033[2;0H");
    for ( j=0; j<scroll_dwn; j++){
printf("\033[B");
    //Output local char
    printf("Choice is: %c\r", choice);
    write_dummy();
 }
}
void write_dummy(void){
  //Write Dummy
  NSSMD0 = 0;
                       // Select slave
  while (SPIOCFG & 0x80); // Make sure SPI is not busy
                    // Clear SPIF
  SPIF = 0;
  // Wait until transmission complete
  while (!SPIF);
  SPIF = 0;
void SPI0_READ(void){
  char j;
  NSSMD0 = 1;
                       // Release slave
  //Output dummy
  printf("\033[2;30H");
  printf("DUMMY: 0x%x", dummy);
  SPIF = 0;
  //ANSI format
  printf("\setminus 033[14;24r");
  printf("\033[14;0H");
  for (j=0;j<scroll_dwn;j++){
printf("\033[B");
  //Output choice
  //choice = SPI0DAT;
  printf("Data read from SPIODAT is: %c\r", choice);
  scroll_dwn += 1;
  if (scroll_dwn > 10) scroll_dwn = 10;
  SPIF = 0;
}
  SYSCLK_Init
```

```
Initialize the system clock to use a 22.1184MHz crystal as its clock source
void SYSCLK_INIT(void)
    int i;
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                          // Save Current SFR page
    SFRPAGE = CONFIG_PAGE;
    OSCXCN = 0x67;
                                           // Start ext osc with 22.1184MHz crystal
    for (i=0; i < 256; i++);
                                           // Wait for the oscillator to start up
    while (!(OSCXCN \& 0x80));
    CLKSEL = 0x01;
    OSCICN \ = \ 0\,x\,0\,0\ ;
    SFRPAGE = CONFIG_PAGE;
    PLL0CN = 0x04;
    SFRPAGE = LEGACY_PAGE;
    FLSCL = 0x10;
    SFRPAGE = CONFIG_PAGE;
    PLL0CN \mid = 0 \times 01;
    PLL0DIV = 0x04;
    PLL0FLT = 0x01;
    PLLOMUL = 0x09;
    for (i=0; i < 256; i++);
    PLL0CN \mid = 0 \times 02;
    while (!(PLL0CN \& 0x10));
    CLKSEL = 0x02;
    SFRPAGE = SFRPAGE\_SAVE;
                                          // Restore SFR page
}
// PORT_Init
// Configure the Crossbar and GPIO ports
void PORT_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                        // Save Current SFR page
 SFRPAGE = CONFIG_PAGE;
                                        // Enable UARTO, SPI
  XBR0
           = 0x06;
    XBR1
            = 0 \times 00;
                                          // Enable Crossbar and weak pull-up
    XBR2
             = 0 \times 40;
 POMDOUT &= ^{\circ}0 \times 02; //^{\circ}0 \times 0A
 POMDOUT \mid = 0x35;
                                         // Set pins 0,2,4,5 to push-pull
    //P0
                                            // RX0 pin and to high impedance
             = 0 \times 02;
  SFRPAGE = SPI0\_PAGE;
    SPI0CFG = 0x40;
                                // Master mode
  SPI0CN = 0x0D;
                           // Enable SPI
  SPIOCKR = 0x18;
                           // SPI clock rate for 230399
 EA = 1;
 SFRPAGE = SFRPAGE\_SAVE;
                                       // Restore SFR page
void UART0_INIT(void)
```

```
{
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                             // Save Current SFR page
    SFRPAGE = TIMER01\_PAGE;
    TMOD &= ^{\circ}0 xF0;
                                             // Timer1, Mode 2, 8-bit reload
// Set Timer1 reload baudrate value T1 Hi Byte
    TMOD
          = 0x20;
    TH1
             = -(SYSCLK/BAUDRATE/16);
                                             // Timer1 uses SYSCLK as time base
    CKCON = 0 \times 10;
    TL1
             = TH1;
                                             // Start Timer1
    TR1
             = 1;
    SFRPAGE = UARTO_PAGE;
    SCON0 = 0x50;
                                             // Mode 1, 8-bit UART, enable RX
                                        // SMOD0 = 1
    SSTA0 \quad = \ 0\,x10\ ;
                                            // Indicate TX0 ready
    TI0
             = 1;
    SFRPAGE = SFRPAGE\_SAVE;
                                            // Restore SFR page
}
```

# 6 References

"MPS Lab 2," in RPI ECSE Department, 2016. [Online]. Available: http://www.rpi.edu/dept/ecse/mps/MPS\_Lab\_Ex2-Intrpt.pdf. Accessed: Sep. 22, 2016.

"C8051 Manual," in RPI ECSE Department, 1.4 ed., 2005. [Online]. Available: https://www.ecse.rpi.edu/courses/CStudio/Silabs/C8051F12x-13x.pdf. Accessed: Sep. 22, 2016.