### A Trusted Business Card



### WHY?

- To celebrate TCG's 25th
- To demonstrate full supply chain protection on an inexpensive IoT device
  - Supply chain of embedded electronics is now critical
  - Tired of the excuses that trusted computing is too complex and too expensive
- It's an Arduino development board
  - Learn how to write arduino sketches
- It's an esp32 development board
  - Learn esp-idf command line build and flash tools
- It's a TPM development board
  - Prototype new and interesting TPM applications



## What

- Hardware
  - ESP32-S3-Wroom
    - 32bit dual core
    - 16mb flash
    - 8mb PSRAM
    - efuse based secure boot\*
  - Infineon SLB9672 TPM

Software

**Application** 

WolfTPM/WolfSSL

WolfTPM HAL

tinyusb


**FreeRTOS** 


esp-idf bsp

100% Open Hardware and Open Source \*not activated on demo cards, so you can play

# **Application Functionality**

- USB-MSC: VFAT thumb drive to serve resume, certs and log
- USB-ACM: Firmware loading and debug over serial
- Full Supply chain attestation
  - Endorsement Key Cert
  - Platform Cert
  - Attestation Key Cert
- WolfTPM provides full TPM stack on the card,
- Measured boot and runtime
- CEL-IMA-TLV attestation with signatures in RIM

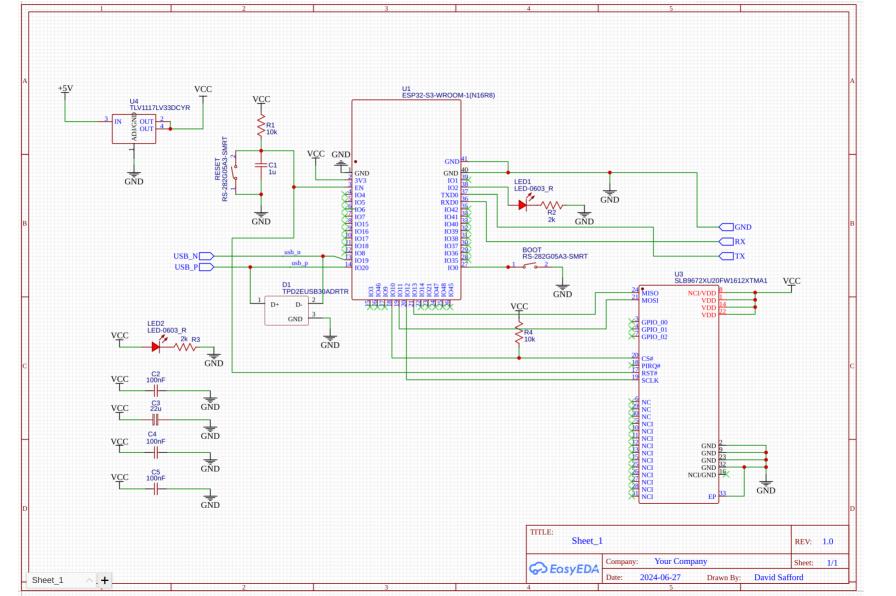

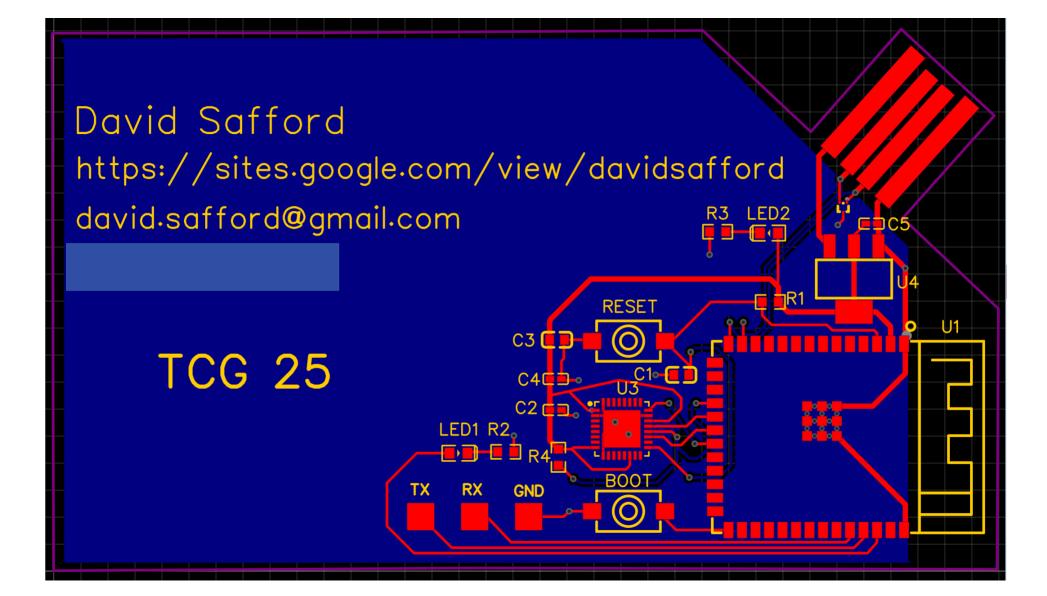

## BOM Cost (qty 1)

- PCB (jclpcb.com) \$3
- Esp32 \$4
- TPM \$5
- Everything else \$3

• Total \$15

#### Detailed BOM (Digikey)

Schematic ID	Manufacturer ID	Digikey ID	Description
U1	ESP32-S3-WROOM-1-N16R8	1965-ESP32-S3-WROOM- 1-N16R8CT-ND	ESP32S3
U2	SLB9672AU20FW1613XTMA1	448-SLB9672AU 20FW1613XTMA1CT-ND	TPM
D1	TPD2EUSB30ADRTR	296-28153-1-ND	ESD Diode Pair
U4	TLV1117LV33DCYR	296-28778-1-ND	3.3V regulator
Led1, Led2	QTLP601CRTR	1080-1407-1-ND	Led, red
Boot, Reset	RS-282G05A3-SMRT	CKN10384CT-ND	Switch, tactile
R1, R4	RMCF0603JT10K0	RMCF0603JT10K0CT-ND	RES 10K
R2, R3	ERJ-3EKF2001V	P2.00KHCT-ND	RES 2K
C1	CL05A105KP5NNNC	1276-1076-1-ND	CAP CER 1UF 10V
C2, C4, C5	CL05B104KA5NNNC	1276-6720-1-ND	CAP CER 0.1UF 25V
C3	CL10A226MQ8NRNC	1276-1193-1-ND	CAP CER 22UF 6.3V

# The High Cost of Assembly

Precision
 Placement
 Device (\$2)





Reflow Station (\$49)

## Learn Arduino Programming





## Espressif tools

```
idf.py set-target esp32s3
idf.py menuconfig
idf.py build
idf.py -p /dev/ttyACMO flash monitor
```


### Keys and Certificates

- Infineon OPTIGA(TM) RSA Root CA 2 (Root for EK.CRT)
- Infineon OPTIGA(TM) TPM 2.0 RSA CA 065 (intermediate for EK.CRT)
- safford\_ca.com.pem (Self-signed root for AK.CRT and PLATFORM.CRT)
- EK.DER, EK.CRT (signed by Infineon)
- AK.DER, AK.CRT issued based on verification of EK, signed by Dave
- PLATFORM.CRT binds EK to Platform description, signed by Dave
- Verifying a Quote with AK proves:
  - Talking to Infineon certified TPM
  - Platform characteristics, including EK and AK certified by Dave

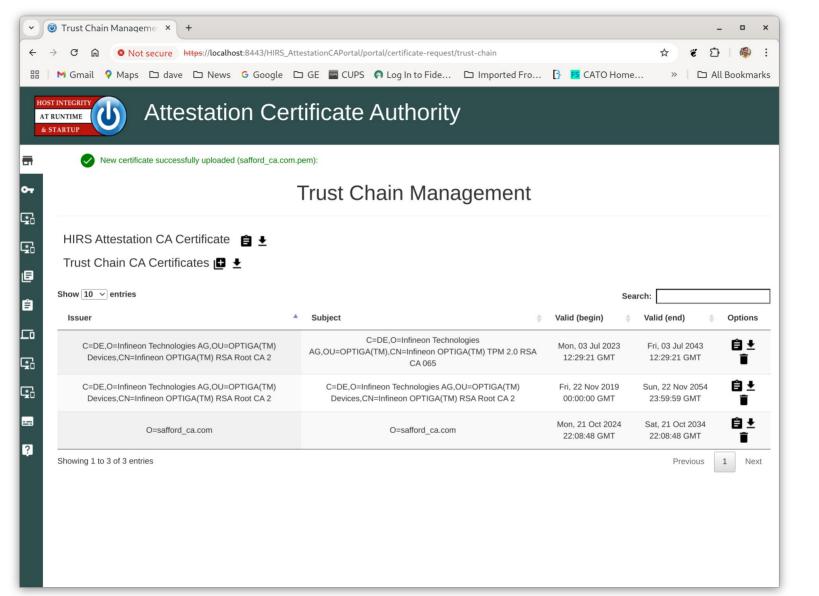

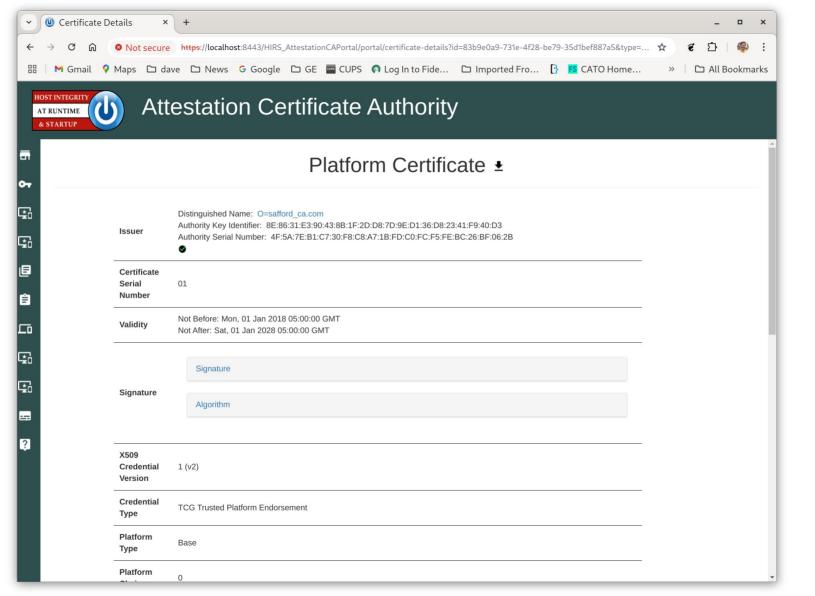

### Verifying the TPM\_Quote

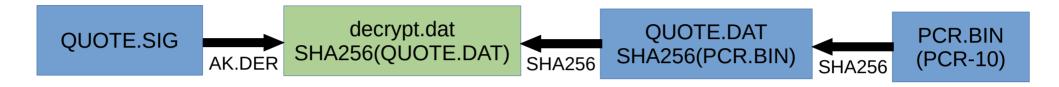

Normally we could do this entire check with tpm2\_checkquote utility, but it cannot handle the raw data blobs from WolfTPM, so we have to do these checks manually with openssl.


### **Example Quote Verification**

Decrypting QUOTE.SIG with AK

```
Decrypted data:
00000000
          30 31 30 0d 06 09 60 86 48 01 65 03 04 02 01 05
                                                              |010...`.H.e....
                                   d9 9c b3 63 af 60 5f db
00000010
          00 04 20 ea ca a1 c3 4b
                                                               .. ....K...c.` .
          2b 0b 99 65 e0 93 2e 55
                                   92 28 70 4f fd 16 e8 57
                                                               +..e...U.(p0...W
00000020
          f1 a0 66
00000030
sha256 of OUOTE.DAT
00000000
          ea ca a1 c3 4b
                         d9 9c b3
                                    63 af 60 5f db 2b 0b 99
                                                              ....K...c.` .+..
          65 e0 93 2e 55 92 28 70
                                   4f fd 16 e8 57 f1 a0 66
                                                              e...U.(p0...W..f
00000010
OUOTE.DAT
                                                              |.TCG..."...'....
|/.`''^....Dn.v.}
00000000
          ff 54 43 47 80 18 00 22
                                   00 0b e1 27 0c 17 cb b3
          2f 04 60 27 27 5e 1c 07
                                   be 9b 44 6e 80 76 e4 7d
00000010
                                                               '2d...Y.(......
00000020
          27 32 64 f7 02 a3 59 d9 28 0b 00 00 00 00 00 00
          17 67 73 9e 27 9f e7 c0
                                   94 6e df a3 01 ad bb dd
                                                               .gs.'....n....
00000030
                                   01 00 0b 03 00 04 00 00
00000040
          1c 87 f7 a5 06 00 00 00
                                                                2...'7.....&...@
00000050
          20 32 d4 a6 27 37 ff 00
                                   e2 90 01 06 26 8f 90 40
                                   87 2f 3f 0b 4b 4b e6 bf
          df dc 45 6e 5e 01 85 d3
00000060
                                                               ..En^..../?.KK..
00000070
          89
hashed PCR.BIN
00000000
          32 d4 a6 27 37 ff 00 e2
                                    90 01 06 26 8f 90 40 df
                                                               2...'7.....&...@.
                                   2f 3f 0b 4b 4b e6 bf 89
00000010
          dc 45 6e 5e 01 85 d3 87
                                                              .En^..../?.KK...
PCR.BIN
0000000
          a4 84 07 20 57 9f a9 c1 71 ac b2 26 f8 39 82 db
                                                              l... W...a..&.9..
          9d 9f c1 0f 67 32 ad 08
                                  f6 86 08 4b 33 81 c2 01
00000010
                                                              |....g2....K3...
```

#### CEL\_IMA\_TLV

- An example of how to do measurement safely
  - Entire content field, including types and lengths are measured

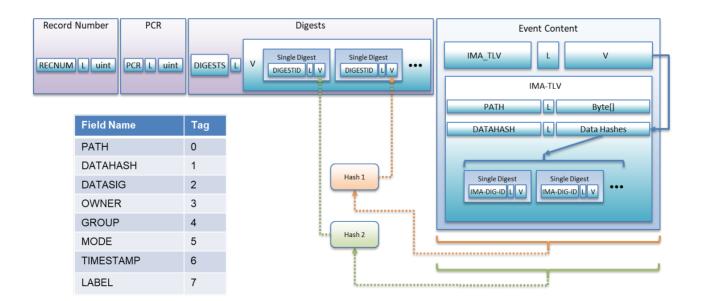

## **Example Attestation Verification**

Verifying Measurement log from Quote

PCR 10 SHA256: A4840720579FA9C171ACB226F83982DB9D9FC10F6732AD08F686084B3381C201 MATCHES

SEQ 0 PCR 10 CEL\_CONTENT\_IMA\_TLV Filename /data/esp/safford.pdf Filehash: D0471A5C5E9F00A0A2E761924C6AFF6EB966E8A468822E9016D0DED8751E18F2 Entire Content TLV Verified by digest File Hash Verified by signed RIM

SEQ 1 PCR 10 CEL\_CONTENT\_IMA\_TLV Filename /data/esp/card.jpg Filehash: 8D5C6DB2635740A84188CDE92D8A8CD56E5F16175F8992C59033B6FBB998AF66 Entire Content TLV Verified by digest File Hash Verified by signed RIM

SEQ 2 PCR 10 CEL\_CONTENT\_IMA\_TLV Filename /data/esp/chall.bin Filehash: 063F1995CA9EF8471D7F40992E27BD075A04E04F4F6EBA270E1CDBE2FC7CAAF6 Entire Content TLV Verified by digest

# Warning

- I used leaded solder paste for assembly.
- Try not to lick the front of the card.