



# Low Power Wide Area Networks for the Internet of Things

Framework, Performance Evaluation, and Challenges of LoRaWAN and NB-IoT

Samer Lahoud Melhem El Helou

ESIB, Saint Joseph University of Beirut, Lebanon

ICT 2018, Saint-Malo, France



#### Outline

- 1 General Framework
- 2 Design Rationale
- 3 Technical Specification
- 4 Performance Evaluation
- 5 Research Challenges



## Definition of the Internet of Things

#### Internet of Things

The Internet of Things (IoT) generally refers to scenarios where network connectivity and computing capability extends to devices, sensors, and everyday items (ISOC IoT Overview, October 2015).

- IoT devices are also called smart objects or connected objects
  - Physical world interface
  - Computing capability
  - Communication interface
- IoT is referred to as Smart Object Networking (IETF)





- 2 Design Rationale
- 3 Technical Specification
- 4 Performance Evaluation
- 5 Research Challenges



# F n

## Need for Optimised Radio Modulation

- End-devices are mainly composed of:
  - a processing unit: usually a microcontroller with a limited amount of memory
  - a sensing unit: sensors and analog to digital converters
  - a radio unit: usually a transceiver capable of bidirectional communications
- The radio unit power, that includes the transceiver circuit power and transmit signal power, is a main contributor to device power consumption
- Reducing the transmit signal power leads to lower signal-to-noise ratio (SNR) particularly at long distances

#### Modulation Requirement

Low *SNR* threshold to achieve acceptable radio transmission quality even with reduced transmit signal power



## What is Spread Spectrum?

#### Spread Spectrum (SS)

Spread-spectrum techniques deliberately spread a signal in the frequency domain, resulting in a signal with a wider bandwidth

■ Frequency-hopping SS (FHSS), direct-sequence SS (DSSS), time-hopping SS (THSS), and chirp SS (CSS) are forms of spread spectrum

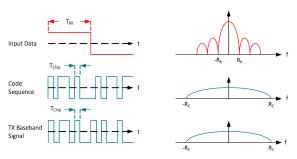


Figure 1: Spreading process in DSSS systems

# L S C

#### What is Spread Spectrum?

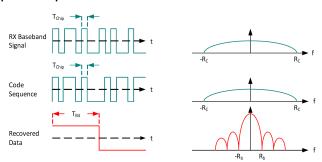


Figure 2: De-spreading process in DSSS systems

#### Direct Sequence Spread Spectrum

- At the transmitter, the wanted signal is multiplied with a spreading code
- At the receiver, the wanted signal is re-covered by re-multiplying with the same spreading code



## Radio Quality Indicators

- The SNR, or equivalently the carrier-to-noise ratio (CNR or C/N), is defined as the ratio of the received signal power C to the power of the noise N within the bandwidth of the transmitted signal
- The energy per bit to noise power spectral density ratio  $(E_b/N_0)$  is defined as the ratio of the energy per bit  $(E_b)$  to the noise power spectral density  $(N_0)$
- $E_b/N_0$  is a normalized SNR measure, also known as the "SNR per bit"
- The  $E_b/N_0$  (or SNR) needs to be greater than the  $E_b/N_0$  (or SNR) threshold for acceptable transmission quality (bit error rate (BER)  $\leq$  target BER)

$$\frac{E_b}{N_0} \ge \left(\frac{E_b}{N_0}\right)_{threshold} \Rightarrow BER \le BER_{target}$$

#### SNR threshold vs. $E_b/N_0$ threshold

Unlike the SNR threshold, the  $E_b/N_0$  threshold does not depend on the signal bandwidth and bit-rate (including any use of spread spectrum)

# L S C

## Why Spread Spectrum?

$$SNR = \frac{C}{N} = \frac{E_b/T_b}{N_0B} = \frac{E_b}{N_0} \frac{R_b}{R_c}$$

where B is the signal bandwidth in Hz,  $R_b$  the bit-rate in b/s, and  $R_c$  the chip rate in chip/second

$$\Rightarrow \left(\frac{E_b}{N_0}\right)_{dB} = (SNR)_{dB} + G_p$$

where  $G_p$  is the processing gain given by:  $G_p = 10log_{10}(BT_b) = 10log_{10}(\frac{R_c}{R_b})$ 

■ Spread spectrum compensates for the SNR degradation

#### The higher the processing gain is...

- the lower the *SNR* threshold is ⇒ lower receiver sensitivity ⇒ larger radio coverage (assuming a fixed transmit signal power)
- the lower  $R_h$  is (assuming a fixed W)

■ The receiver sensitivity is given by:

$$S = SNR_{threshold} + \nu$$

$R_c/R_b$	$G_p$	Receiver sensitivity (dBm)
128	21.0721	-121
256	24.0824	
512	27.0927	
1024	30.1030	
2048	33.1133	
4096	36.1236	

■ The receiver sensitivity is given by:

$$S = SNR_{threshold} + \nu$$

$R_c/R_b$	$G_p$	Receiver sensitivity (dBm)
128	21.0721	-121
256	24.0824	-124
512	27.0927	
1024	30.1030	
2048	33.1133	
4096	36.1236	

■ The receiver sensitivity is given by:

$$S = SNR_{threshold} + \nu$$

$R_c/R_b$	$G_p$	Receiver sensitivity (dBm)
128	21.0721	-121
256	24.0824	-124
512	27.0927	-127
1024	30.1030	
2048	33.1133	
4096	36.1236	

■ The receiver sensitivity is given by:

$$S = SNR_{threshold} + \nu$$

$R_c/R_b$	$G_p$	Receiver sensitivity (dBm)
128	21.0721	-121
256	24.0824	-124
512	27.0927	-127
1024	30.1030	-130
2048	33.1133	
4096	36.1236	

■ The receiver sensitivity is given by:

$$S = SNR_{threshold} + \nu$$

$R_c/R_b$	$G_p$	Receiver sensitivity (dBm)
128	21.0721	-121
256	24.0824	-124
512	27.0927	-127
1024	30.1030	-130
2048	33.1133	-133
4096	36.1236	

■ The receiver sensitivity is given by:

$$S = SNR_{threshold} + \nu$$

$R_c/R_b$	$G_p$	Receiver sensitivity (dBm)
128	21.0721	-121
256	24.0824	-124
512	27.0927	-127
1024	30.1030	-130
2048	33.1133	-133
4096	36.1236	-136



# **Chirp Spread Spectrum**



# Linear Chirp

#### Linear Chirp

Sinusoidal signal whose frequency linearly increases (*up-chirp*) or decreases (*down-chirp*) over time

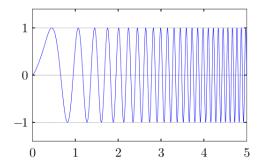


Figure 3: A sinusoidal linear up-chirp in the time domain

# | S | C |

# **Linear Chirp Theory**

■ A linear chirp waveform can be written as:

$$x(t) = a(t)\sin(2\pi f_0 t + \pi \mu t^2 + \phi_0)$$

where a(t) is the envelope of the chirp signal which is zero outside a time interval of length T,  $f_0$  the initial frequency,  $\mu$  the chirp rate, or chirpyness, and  $\phi_0$  the initial phase

■ The instantaneous frequency f(t) is defined as:

$$f(t) = \frac{1}{2\pi} \frac{d(2\pi f_0 t + \pi \mu t^2 + \phi_0)}{dt} = f_0 + \mu t$$

 $\blacksquare$  The chirp rate  $\mu$  represents the rate of change of the instantanous frequency:

$$\mu = \frac{df(t)}{dt}$$

# Spectrograms of Linear Chirps

 $\blacksquare \mu > 0 \Rightarrow up$ -chirps,  $\mu < 0 \Rightarrow down$ -chirps


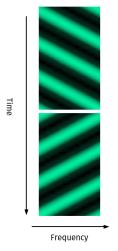


Figure 4: Spectrograms of linear up-chirp (top) and down-chirp (bottom)



# **Bandwidth Spreading**

- The bandwidth B is defined as the range of the instantaneous frequency:  $B = |\mu|T$
- The processing gain is given by the time-bandwidth product *TB*

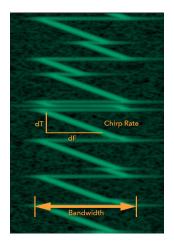

#### - S U

## What is Chirp Spread Spectrum?

#### Chirp Spread Spectrum (CSS)

Spread spectrum technique that uses wideband linear frequency modulated chirps to encode information

- Encoding information using *up-chirp* and *down-chirp* signals:
  - Example: "1"  $\Rightarrow$  transmit an *up-chirp*, "0"  $\Rightarrow$  transmit a *down-chirp*
  - Chirps are transmitted in equidistant time steps
- Encoding information using only one chirp waveform with Pulse-Position Modulation (PPM):
  - M bits are encoded by transmitting a single *chirp* in one of  $2^M$  possible time shifts  $\Rightarrow$  bit-rate = M/T in b/s
  - Chirps are not transmitted in equidistant time steps
- At the receiver, the wanted information is re-covered through de-chirping



#### Example: Binary Orthogonal Keying (BOK) Schemes

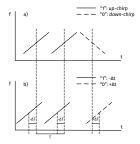


Figure 5: a) BOK using up- and down- chirps b) BOK using PPM



## Advantages of CSS

- CSS is robust to interference, multipath fading, and Doppler effect
- Time and frequency offsets between transmitter and receiver are equivalent, greatly reducing the complexity of the receiver design

#### Why CSS?

CSS provides a low-complexity, low-cost, low-power, yet robust alternative to the traditional SS techniques

#### Outline

- 1 General Framework
- 2 Design Rationale
- 3 Technical Specification
- 4 Performance Evaluation
- 5 Research Challenges



#### From LoRa to LoRaWAN

#### What is LoRa?

#### Definition of LoRa

LoRa is a wireless modulation technique that uses Chirp Spread Spectrum (CSS) in combination with Pulse-Position Modulation (PPM).

- Processing gain given by  $g_p = BT$
- Variable number of bits encoded in a symbol

$$R_b = \frac{log_2(g_p)}{T} = log_2(g_p) \cdot \frac{B}{g_p}$$


■ Spreading factor SF given by  $log_2(g_p)$ 

$$R_b = SF \cdot \frac{B}{2^{SF}}$$



## LoRa Symbols


- $log_2(g_p)$  bits are encoded by transmitting a single *chirp* in  $g_p$  possible cyclic time shifts
- Example:  $g_p = 4 \Rightarrow 2$  bits/symbol

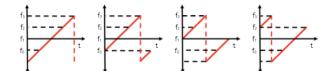



# **LoRa Spreading Factors**

■ LoRa uses spreading factors from 7 to 12

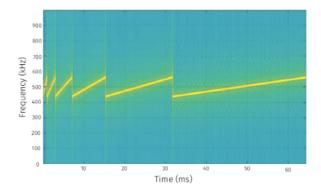



#### LoRa Bit-Rate

 LoRa also includes a variable error correction scheme that improves the robustness of the transmitted signal at the expense of redundancy

$$\Rightarrow R_b = SF \cdot \frac{B}{2^{SF}} \cdot CR$$

where CR represents the coding rate

 $\blacksquare$   $R_b$  can also be written as follows:


$$\Rightarrow R_b = SF \cdot \frac{B}{2^{SF}} \cdot \frac{4}{4 + CR}$$

where  $1 \le CR \le 4$  and  $7 \le SF \le 12$ 

# F S C

## LoRa Physical Layer

8 preamble (up-chirp) symbols, 2 synchronization (down-chirp) symbols, and
5 modulated symbols (payload)

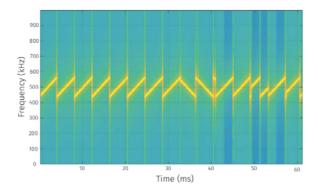



#### LoRa Characteristics

- Operates in license-free bands all around the world
  - 433, 868 (EU), 915 MHz
- Spectrum regulation for EU (including Lebanon)
  - Transmit power (EIRP) is limited to 14 dBm (25 mW)
  - 1% per sub-band duty-cycle limitation
- Receiver sensitivity: -142 dBm
- Link budget: 156 dB
- Uses spreading factors and channel coding rates to set the modulation rate



#### LoRa Radio Optimization

Spreading Factor	Bit Rate (kb/s)	Sensitivity (dBm)
6	9.375	-118
7	5.468	-123
8	3.125	-126
9	1.757	-129
10	0.976	-132
11	0.537	-134.5
12	0.293	-137

(CR = 1 and B = 125 kHz)

- Higher spreading factors lead to lower sensitivity and larger coverage
- Lower spreading factors lead to higher data rates



# **Enhanced Network Capacity**

- LoRa employs orthogonal spreading factors which enables multiple spread signals to be transmitted at the same time and on the same channel
- Modulated signals at different spreading factors appear as noise to the target receiver
- The equivalent capacity of a single 125 kHz LoRa channel is:

$$SF12 + SF11 + SF10 + SF9 + SF8 + SF7 + SF6$$

$$= 293 + 537 + 976 + 1757 + 3125 + 5468 + 9375$$

$$= 21531 \text{ b/s} = 21.321 \text{ kb/s}$$





- The link budget is a measure of all the gains and losses from the transmitter, through the propagation channel, to the target receiver
- The link budget of a network wireless link can be expressed as:

$$P_{Rx} = P_{Tx} + G_{System} - L_{System} - L_{Channel} - M$$

#### where:

 $P_{Rx}$  = the expected received power

 $P_{Tx}$  = the transmitted power

 $G_{System}$  = system gains such as antenna gains

L<sub>System</sub> = system losses such as feed-line losses

 $L_{Channel}$  = losses due to the propagation channel

M = fading margin and protection margin

# L S U

#### From LoRa to LoRaWAN

- LoRa
  - Modulation technique for LPWAN
- LoRaWAN
  - Uses LoRa modulation on physical layer
  - Proposes a MAC layer for access control
  - Specified by LoRa Alliance



#### LoRaWAN Timeline


- Cycleo first introduced LoRa in 2009
  - M2M communications
  - Large coverage
- Semtech acquired Cycleo in 2012 for 5 M\$!
  - Patents filed in 2014
- LoRa Alliance initiated in 2014
  - Actility, Cisco, Bouygues, IBM, Orange, SK Telecom, KPN, ZTE, Semtech, La Poste, SoftBank, Swisscom, etc.
  - LoRaWAN 1.0 specification in 2015



### **Network Architecture**



#### **End-Devices**

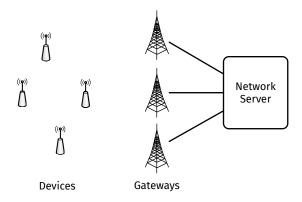


- End-devices are also called motes or devices
- Communicate to one or more gateways via a wireless interface using single hop LoRa or FSK






# Gateways

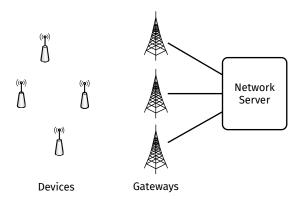

- Gateways are also called concentrators or base stations
- Forward Frames between devices and network server
- Connected to the network server via IP interfaces



### **Network Server**

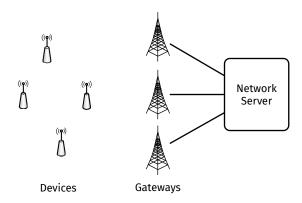

- Network server is a central server located at the backend
- Provides mobility, frame control, and security functions
- Adapts data transmission rates

# L S C

### LoRaWAN General Characteristics

- LoRaWAN network architecture is typically laid out in a star-of-stars topology
- All end-point communication is generally bi-directional
  - Uplink communications are predominant
- Data rates ranging from 300 bps to 5.5 kbps
  - Two high-speed channels at 11 kbps and 50 kbps (FSK modulation)
  - Eight channels: bandwidth 125 kHz or 250 kHz
  - Support for adaptive data rate (power and spreading factor control)
- Secure bi-directional communication, mobility, and localization
  - Device authentication, message encryption, and frame counter



# **Data Transmission**



# Uplink transmission

- Uncoordinated data transmission
  - Devices transmit without any coordination on a randomly chosen channel
  - Regulated maximum transmit duty cycle
  - Regulated maximum transmit duration (or dwell time)

#### LoRaWAN Access Method

LoRaWAN is an ALOHA-type protocol: transmission by the device is based on its own communication needs with a small variation based on a random time basis

# L S C

#### **Device Classes**

- Class A
  - Each uplink transmission is followed by two short downlink receive windows
  - Adapted for applications that only require downlink communication from the server shortly after the end-device has sent an uplink transmission
- Class B
  - In addition to class A, receive windows are opened at scheduled times
  - A time synchronized Beacon is sent by the gateway
- Class C
  - Nearly always open receive windows (unless transmitting)




# Messages

- Uplink messages
  - Sent by devices to the NS
  - Relayed by one or multiple gateways
  - [Preamble, PHDR, PHDR\_CRC, Payload, CRC]
- Downlink messages
  - Sent by the NS to only one device and is relayed by a single gateway
  - [Preamble, PHDR, PHDR\_CRC, Payload]

#### Receive Windows for Class A Devices

- First receive window
  - Same channel (and data rate) as the uplink
- Second receive window
  - Predefined channel and data rate, and possibility to modify it by MAC commands

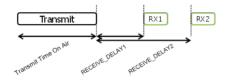

# Physical Layer



#### Channels

- FU 863-870MHz ISM Band
- Default radiated transmit output power by devices: 14 dBm
- Minimum set of three channels, maximum of 16 channels

Modulation	Bw [kHz]	Freq [MHz]	Data Rate	Nb Channels	Duty cycle
LoRa	125	868.10	DR0 to DR5	3	<1%
		868.30	0.3-5 kbps		
		868.50			

#### **ETSI Limitations**

- Restrictions on the maximum time the transmitter can be on or the maximum time a transmitter can transmit per hour
- Choice between
  - Duty-cycle limitation
  - Listen Before Talk Adaptive Frequency Agility (LBT AFA) transmissions management
- The current LoRaWAN specification exclusively uses duty-cycled limited transmissions to comply with the ETSI regulations



# **Duty Cycle Limitation**

- The LoRaWAN enforces a per sub-band duty-cycle limitation
  - Each time a frame is transmitted in a given sub-band, the time of emission and the on-air duration of the frame are recorded for this sub-band
  - The same sub-band cannot be used again during the next  $T_{off}$  seconds where:

$$T_{off} = \frac{TimeOnAir}{DutyCyleSubband} - TimeOnAir$$

- During the unavailable time of a given sub-band, the device may still be able to transmit on another sub-band
- The device adapts its channel hopping sequence according to the sub-band availability

#### Example

A device just transmitted a 0.5 s long frame on one default channel. This channel is in a sub-band allowing 1% duty-cycle. Therefore this whole sub-band (868 – 868.6) will be unavailable for 49.5 s



# MAC Layer



#### MAC Header

- Format
  - [ MAC type, ..., Device Address, Frame Control, Frame Counter, Frame Options, Frame Port, Payload]
- Message Types
  - Join Request
  - Join Accept
  - Unconfirmed Data Up
  - Unconfirmed Data Down
  - Confirmed Data Up
  - Confirmed Data Down
  - RFU
  - Proprietary



#### ACK in Frame Control

- If the ACK (demanding acknowledge) sender is an end-device, the network will send the acknowledgement using one of the receive windows opened by the end-device after the send operation
- If the sender is a NS, the end-device transmits an acknowledgment at its own discretion, possibly piggybacked with the next Data message
- A message is retransmitted (predefined number of times) if an ACK is not received



#### Frame Counter

- Each device has two frame counters
  - Uplink frames, incremented by the device
  - Downlink frames, incremented by the NS



#### **MAC Commands**

- Commands are exchanged between devices and NS, not visible to the application layer
- Examples
  - Indicate the quality of reception of the device
  - Indicate the battery level of a device
  - Request the device to change data rate, transmit power, repetition rate or channel
  - Sets the maximum aggregated transmit duty-cycle of a device
  - Change to the frequency and the data rate set for the second receive window (RX2) following each uplink



### Data Stored in Each device

- Device address
  - 7 bit network identifier
  - 25 bit network address arbitrarily assigned by the admin
- Application Identifier
  - 64 bits that uniquely identify the owner of the device (EUI-64)
- Session key
  - Used for integrity check and encryption/decryption of MAC only messages
- Application Session key
  - Used for integrity check and encryption/decryption of application data messages



# Two Ways of Activation

- Over the air activation
  - Necessitates a globally unique end-device identifier (DevEUI), the application identifier (AppEUI), and an AES-128 key (AppKey)
  - Two MAC messages between NS and devices: Join and Accept
- Activation by Personalization
  - No MAC messages
  - The DevAddr and the two session keys NwkSKey and AppSKey are directly stored into the end-device



# LoRa Radio Optimization

Spreading Factor	Bit Rate (kb/s)	Sensitivity (dBm)	
7	5.468	-123	
8	3.125	-126	
9	1.757	-129	
10	0.976	-132	
11	0.537	-134.5	
12	0.293	-137	

(RC = 1 and B = 125 kHz)

- Higher spreading factors lead to better sensitivity and larger coverage
- Lower spreading factors lead to higher data rates




# Adaptive Data Rate

- Objectives
  - Increase battery life
  - Maximize network capacity
- Data rate validation
  - A device periodically sets the ADR acknowledgment bit and waits for an acknowledgment from the network
  - If an ACK is not received, the device switches to the next lower data rate that provides a longer radio range


# O S C

# Wrap-up Example (1/3)

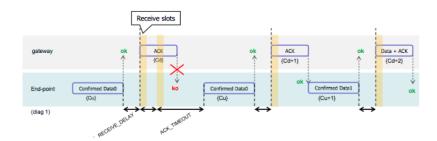




# Wrap-up Example (2/3)

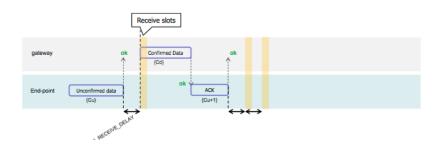



# Wrap-up Example (3/3)

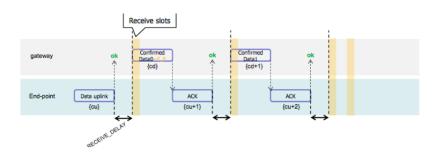



# Security

# L S U

# Online Video Tutorial on Security

https://www.youtube.com/watch?v=Nu\_yZelDMZI



# **ESIB Platform**



#### Presentation and Tutorials

- https://speakerdeck.com/iotusj/end-to-end-lorawan-platform
- http://wiki.lahoud.fr/doku.php?id=deploying\_lorawan




# LISA: Long-range IoT for Smart Agriculture

- Project launched at ESIB-USJ in Sept. 2016
- Scientific objectives cover networking and agriculture topics
  - Deploy and test LoRa for agriculture
  - Automate measurement process of microclimates under vines
  - Test and assess different pruning lengths
- LISA will deploy a LoRa based IoT network in Bekaa in 2018

# L S C

#### First LoRaWAN Pilot in Lebanon at ESIB

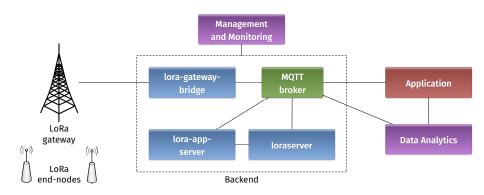

- Lab prototype: Arduino + Dragino (HopeRF) LoRa shield, Raspberry Pi based DIY gateway
- Deployment: Sodaq autonomo with (Microchip) LoRabee devices, Kerlink Wirnet gateway

#### \_\_\_\_\_ remarks recommend specimental remormance evaluation likes



# LoRa Campus Coverage



## LoRa Drive Test







### **IoT Cool Services**

- View the live dashboard
  - https://emoncms.org/dashboard/view?id=37655
- Play with MQTT and receive LoRa messages
  - Install a MQTT app (MQTT Dashboard on Android)
  - Connect to 212.98.137.194 port 1883
  - Subscribe to topic #
  - Enjoy!
- Connect with our plants
  - Twitter: @allo\_laplante
  - Hangout: rt.laplante@gmail.com and type /bot eguz

## Outline

- Performance Evaluation



# Test

### Test

#### Outline

- 1 General Framework
- 2 Design Rationale
- 3 Technical Specification
- 4 Performance Evaluation
- 5 Research Challenges

# Test

### Test