Components and Examples of tikzircuit

February 12, 2017

Contents

1	Introductory Examples 1.1 Bridge Rectifier	5 6 7
2	chktex-file 1	8
3	chktex-file 11	8
4	chktex-file 12	8
5	chktex-file 26	8
6	chktex-file 36	8
7	chktex-file 37	8
8	chktex-file 8	8
9	Sources 9.1 Voltage Source in North-South Orientation 9.2 Voltage Source in South-North Orientation 9.3 Voltage Source in West-East Orientation	9
	9.4 Voltage Source in East-West Orientation	9 10
	u	10
		10 10
		10 11
		11
	3.10 Ourrein bource in East-West Orientation	11


10	Voltage and Current Arrows	11
	10.1 Voltage Arrow Between Two Nodes	11
	10.2 Curved Voltage Arrow Between Two Nodes	12
	10.3 Current Arrow in North-South Orientation	
	10.4 Current Arrow in South-North Orientation	12
	10.5 Current Arrow in West-East Orientation	12
	10.6 Current Arrow in East-West Orientation	13
11	Resistors, Capacitors and Inductors	13
	11.1 Resistor in West-East Orientation	13
	11.2 Resistor in North-South Orientation	13
	11.3 Capacitor in West-East Orientation	13
	11.4 Capacitor in North-South Orientation	14
	11.5 Inductor in West-East Orientation	14
	11.6 Inductor in North-South Orientation	14
	11.7 Inductor in North-South Orientation (Mirrored)	15
	11.8 Varistor in West-East Orientation	15
	11.9 Potentiometer in West-East Orientation, North Connection	15
	11.10Potentiometer in West-East Orientation, South Connection	16
	11.11Potentiometer in North-South Orientation, East Connection	16
	11.12Potentiometer in North-South Orientation, West Connection	16
10		4-
12	Transformer	17 17
	12.1 Transformer in North-South Orientation	11
13	Diodes	17
	13.1 Diode In North-South Orientation	17
	13.2 Diode in South-North Orientation	17
	13.3 Diode in West-East Orientation	18
	13.4 Diode in East-West Orientation	18
	13.5 Zener Diode in North-South Orientation	18
	13.5 Zener Diode in North-South Orientation	18
	13.5 Zener Diode in North-South Orientation	18 19
	13.5 Zener Diode in North-South Orientation	18 19 19
	13.5 Zener Diode in North-South Orientation 13.6 Zener Diode in South-North Orientation 13.7 Zener Diode in West-East Orientation 13.8 Zener Diode in East-West Orientation	18 19 19
	13.5 Zener Diode in North-South Orientation13.6 Zener Diode in South-North Orientation13.7 Zener Diode in West-East Orientation13.8 Zener Diode in East-West Orientation13.9 Schottky Diode in North-South Orientation	18 19 19 19
	13.5 Zener Diode in North-South Orientation	18 19 19 19 19 20
	13.5 Zener Diode in North-South Orientation	18 19 19 19 19 20 20
	13.5 Zener Diode in North-South Orientation	18 19 19 19 19 20 20 20
	13.5 Zener Diode in North-South Orientation	18 19 19 19 20 20 20 21
	13.5 Zener Diode in North-South Orientation 13.6 Zener Diode in South-North Orientation 13.7 Zener Diode in West-East Orientation 13.8 Zener Diode in East-West Orientation 13.9 Schottky Diode in North-South Orientation 13.10Schottky Diode in South-North Orientation 13.11Schottky Diode in West-East Orientation 13.12Schottky Diode in East-West Orientation 13.13LED in North-South Orientation, Light in East Direction 13.14LED in North-South Orientation, Light in West Direction	18 19 19 19 20 20 20 21 21
	13.5 Zener Diode in North-South Orientation 13.6 Zener Diode in South-North Orientation 13.7 Zener Diode in West-East Orientation 13.8 Zener Diode in East-West Orientation 13.9 Schottky Diode in North-South Orientation 13.10Schottky Diode in South-North Orientation 13.11Schottky Diode in West-East Orientation 13.12Schottky Diode in East-West Orientation 13.13LED in North-South Orientation, Light in East Direction 13.14LED in North-South Orientation, Light in West Direction 13.15LED in South-North Orientation, Light in West Direction	18 19 19 19 20 20 21 21 21

	13.19photo diode in North-South Orientation, Light from West	
14	Transistors 14.1 N-Channel JFET in North-South Orientation	23 23 24 24 24 25 25 26
15	15.3 OP-AMP	
16	Amplifiers 16.1 Amplifier, Standardized Symbol	28 28
17	Logic Gates 17.1 Inversion Symbol for Logic Gates Outputs 17.2 Logic Gate Symbol, IEC Standard 17.3 Logic AND Gate Symbol 17.4 Logic NAND Gate Symbol 17.5 Logic OR Gate Symbol 17.6 Logic NOR Gate Symbol 17.7 Logic NOT Gate Symbol 17.8 Logic XOR Gate Symbol 17.9 Logic XNOR Gate Symbol 17.10Logic AND Gate, ANSI Symbol 17.11Logic NAND Gate, ANSI Symbol 17.12Logic OR Gate, ANSI Symbol 17.13Logic NOR Gate, ANSI Symbol 17.14Logic NOT Gate, ANSI Symbol 17.15Logic XOR Gate, ANSI Symbol 17.15Logic XOR Gate, ANSI Symbol 17.16Logic XOR Gate, ANSI Symbol	29 29 30 30 31 31 31 32 32 33 33 33 34
18	Flip-Flops 18.1 General Flip-Flop Symbol	34

	18.2 General Flip-Flop Symbol for Negative Logic	34
	18.3 Flip-Flop Changing on Rising Edge	35
	18.4 Flip-Flop Changing on Falling Edge	35
	18.5 RS Flip-Flop	
	18.6 RS NAND Flip-Flop (Negative Logic)	36
	18.7 RS Flip-Flop Changing on Rising Edge	36
	18.8 RS Flip-Flop Changing on Falling Edge	36
	18.9 JK Flip-Flop Changing on Rising Edge	37
	18.10JK Master-Slave Flip-Flop	37
	18.11D Flip-Flop Changing on Rising Edge	37
	18.12T Flip-Flop Changing on Rising Edge	38
	18.13T Flip-Flop Changing on Falling Edge	38
	18.14Monoflop	38
	18.15Switch, West-East Direction	39
	18.16Closed Switch, West-East Direction	39
	18.17Switch, East-West Direction	39
	18.18Closed Switch, East-West Direction	40
	18.19Switch, South-North Direction	40
	18.20Closed Switch, South-North Direction	40
	18.21Pushbutton, West-East Direction	40
	18.22Pushbutton, South-North Direction	41
19	Miscellaneous	41
19	19.1 Ground as Symbol	41
19	19.1 Ground as Symbol	41 41
19	19.1 Ground as Symbol19.2 Ground as Continued Drawing19.3 Connecting Terminal	41 41 42
19	19.1 Ground as Symbol19.2 Ground as Continued Drawing19.3 Connecting Terminal19.4 Junction (Black Filled Circle)	41 41 42 42
19	19.1 Ground as Symbol19.2 Ground as Continued Drawing19.3 Connecting Terminal19.4 Junction (Black Filled Circle)19.5 Junction in the Middle of a Path	41 42 42 42
19	19.1 Ground as Symbol19.2 Ground as Continued Drawing19.3 Connecting Terminal19.4 Junction (Black Filled Circle)19.5 Junction in the Middle of a Path19.6 Connection Node (for Referencing, not Visible)	41 42 42 42 42
19	19.1 Ground as Symbol19.2 Ground as Continued Drawing19.3 Connecting Terminal19.4 Junction (Black Filled Circle)19.5 Junction in the Middle of a Path19.6 Connection Node (for Referencing, not Visible)19.7 Midway Connection Node	41 42 42 42 42 43
19	19.1 Ground as Symbol	41 42 42 42 42 43 43
19	19.1 Ground as Symbol	41 42 42 42 42 43 43 43
19	19.1 Ground as Symbol	41 42 42 42 43 43 43 43
19	19.1 Ground as Symbol	41 42 42 42 43 43 43 44
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter	41 42 42 42 43 43 43 44 44
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter	41 41 42 42 42 43 43 43 43 44 44 44
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter 19.14Brushless DC Electric Motor	41 41 42 42 42 43 43 43 44 44 44 44
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter 19.14Brushless DC Electric Motor 19.15Brushless DC Electric Generator	41 41 42 42 42 43 43 43 44 44 44 44 44 45
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter 19.14Brushless DC Electric Motor 19.15Brushless DC Electric Generator 19.16Brushes for Electric Motors and Generators	41 42 42 42 43 43 43 44 44 44 45 45
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter 19.14Brushless DC Electric Motor 19.15Brushless DC Electric Generator 19.16Brushes for Electric Motors and Generators 19.17Brushless DC Electric Motor with Permanent Magnet	41 42 42 42 43 43 43 44 44 44 45 45
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter 19.14Brushless DC Electric Motor 19.15Brushless DC Electric Generator 19.16Brushes for Electric Motor with Permanent Magnet 19.18DC Electric Motor with Permanent Magnet	41 42 42 42 43 43 43 43 44 44 44 45 45 45
19	19.1 Ground as Symbol 19.2 Ground as Continued Drawing 19.3 Connecting Terminal 19.4 Junction (Black Filled Circle) 19.5 Junction in the Middle of a Path 19.6 Connection Node (for Referencing, not Visible) 19.7 Midway Connection Node 19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows) 19.9 Speaker 19.10Bulb 19.11Multimeter (Circle for Voltmeter or Ammeter) 19.12Voltmeter 19.13Ammeter 19.14Brushless DC Electric Motor 19.15Brushless DC Electric Generator 19.16Brushes for Electric Motors and Generators 19.17Brushless DC Electric Motor with Permanent Magnet	41 42 42 42 43 43 43 44 44 44 45 45


1 Introductory Examples

1.1 Bridge Rectifier

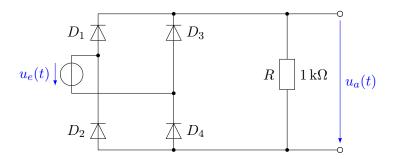

```
\begin{tikzpicture}
 \renewcommand{\voltagecolor}{blue}
 \voltagesourceNS{Uin}{(0.3,0)}{left}{$u_e(t)$}
 \label{left} $$ \diodeSn{diodeOne}{(1,1.3)}{left}{$D_{1}$} $$
 \label{linear_condition} $$ \diodeSN{diodeThree}{(3,1.3)}{right}{$D_{3}$}$
 \label{linear_substitution} $$ \widetilde{SN}(diodeFour)_{(3,-1.3)}{right}_{$D_{4}$}$
 \draw (UinN) -- ++(0,0.2) node (UinHelpOne) {} -- (UinHelpOne -|
     diodeOneA) \junction{UinOne};
 \draw (UinS) -- ++(0,-0.2) node (UinHelpTwo) {} -- (UinHelpTwo -|
     diodeThreeA) \junction{UinTwo};
 \draw (diodeOneA) -- (diodeTwoC) (diodeThreeA) -- (diodeFourC);
 \draw (diodeThreeC) -- ++(0,0.3) \junction{jThree} -| (diodeOneC);
 \draw (diodeFourA) -- ++(0,-0.3) \junction{jFour} -| (diodeTwoA);
 \draw (jThree) -| (resistorN);
 \draw (jFour) - | (resistorS);
 \draw (jThree -| resistor) \junction{jrN} -- ++(1.4,0)
     \terminal{tuOutPlus};
 \draw (jFour -| resistor) \junction{jrS} -- (jFour -| tuOutPlus)
     \terminal{tuOutMinus};
 \end{tikzpicture}
```


1.2 Strain Gauges Bridge

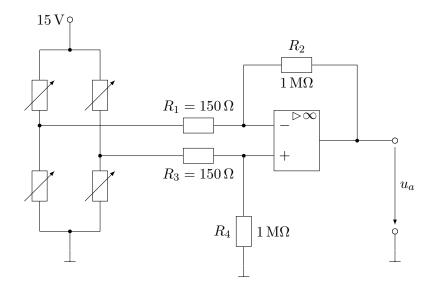

```
\begin{tikzpicture}
 \renewcommand{\voltagecolor}{black}
 \opampNormInv{op}{(0,0)}
 \label{local_rone} $$\operatorname{Three}_{(opInPlus-|r0ne)}_{\space{0.5cm}} = SI_{150}_{\ohm}_{\space{0.5cm}} $$
 \draw (rOneE) -- (opInMinus) \mjunction{jopInMinus};
 \draw (rThreeE) -- (opInPlus) \mjunction{jopInPlus};
 \phi = \phi + (-6,0) \cnode{dms};
 \int \sqrt{y} = in \{-0.8/1.2/0ne, -0.8/-1.2/Two, 0.8/1.2/Three, \}
                        0.8/-1.2/Four}{%
     \draw[-latex] (dms)++(\x,\y) ++(-0.4,-0.4) -- ++(0.8,0.8);
 \draw (dmsOneN) -- ++(0,0.8) \cnode{foo};
 \draw (dmsThreeN) -- (dmsThree|-foo) -- (foo) \mjunction{jdmsN};
 \displaystyle \frac{draw (jdmsN) -- ++(0,0.8) 	ext{trminal}{tudmsPlus} node [left] {} {} \
 \draw (dmsTwoS) -- ++(0,-0.8) \cnode{foo};
 \draw (dmsFourS) -- (dmsFour|-foo) -- (foo) \mjunction{jdmsS};
 \draw (jdmsS) -- ++(0,-0.5) \cnode{gnddms};
 \gnd{(gnddms)}
 \draw (dmsOneS) -- (dmsTwoN) (rOneW) -- (rOne-|dmsOne) \junction{jLeft};
 \draw (dmsThreeS) -- (dmsFourN);
 \draw (rThreeW) -- (rThree-|dmsThree) \junction{jRight};
 \draw (jopInPlus) -- (rFourN) (rFourS) -- ++(0,-0.5) \cnode{gndRFour};
 \gnd{(gndRFour)}
 \draw (jopInMinus) |- (rTwoW);
```

```
\draw (opOut) -- ++(1,0) \junction{jopOut} |- (rTwoE);
\draw (jopOut) -- ++(1,0) \terminal{tuaPlus};
\draw (tuaPlus|-gnddms) \cnode{gndOut} -- ++(0,0.5) \terminal{tuaMinus};
\gnd{(gndOut)}
\voltagearrow{(tuaPlus)}{(tuaMinus)}{right}{$u_{a}$}
\end{tikzpicture}
```

1.3 Astable Multivibrator

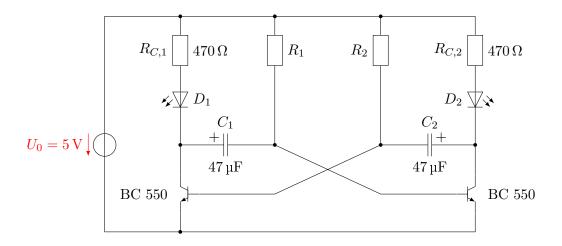

```
\begin{tikzpicture}
 \renewcommand{\voltagecolor}{red}
 \BJTnpnNSMirror{bjtOne}{(0,0)}
 \path (bjtOne) ++(-0.2,0) node[left] {BC 550};
 \BJTnpnNS{bjtTwo}{(bjtOne)++(7.8,0)}
 \path (bjtTwo) ++(0.2,0) node [right] {BC 550};
 \ledNSW{ledOne}{(bjtOneC)++(0,1.8)}{$D_{1}$}
 \ledNSE{ledTwo}{(bjtTwoC |- ledOne)}{$D_{2}$}
 \label{ledOne} $$\operatorname{C}_{C,1}$}{\$XI{470}}{\mathbb R}^{C,1}}
 \capacitorWE{cOne}{(ledOne)++(1.2,-1)}{$C_{1}}{$xI_{47}{\min cro\hat{s}}}
 \path (c0ne)++(-0.3,0.2) node \{\$+\$\};
 \rcone \resistorNS{rOne}{(rcOne)++(2.5,0)}{}{$R_{1}$}
 \capacitorWE\{cTwo\}\{(ledTwo)++(-1.2,-1)\}\{\$C_{2}\}\$\}\{\$SI\{47\}\{\micro\farad\}\$\}
 \path (cTwo)++(0.3,0.2) node \{\$+\$\};
 \draw (rcOneN) -- ++(0,0.5) \junction{jrcN} -| (uN);
 \draw (bjtOneE) -- ++(0,-0.5) \junction{jbjtE} -| (uS);
 \draw (jrcN) -| (rcTwoN);
 \draw (jbjtE) -| (bjtTwoE);
 \draw (rOneN) -- (rOne |- jrcN) \junction{jrOneN};
```

```
\draw (rTwoN) -- (rTwo |- jrcN) \junction{jrTwoN};
\draw (rcOneS) -- (ledOneA) (ledOneC) -- (bjtOneC);
\draw (rcTwoS) -- (ledTwoA) (ledTwoC) -- (bjtTwoC);
\draw (bjtOneC |- cOne) \junction{jbjtOneC} -- (cOneW);
\draw (bjtTwoC |- cTwo) \junction{jbjtTwoC} -- (cTwoE);
\draw (cOneE) -- (cOne -| rOne) \junction{jcOneW} -- (rOneS);
\draw (cTwoW) -- (cTwo -| rTwo) \junction{jcTwoE} -- (rTwoS);
\draw (jcOneW) -- (rTwo |- bjtTwo) -- (bjtTwoB);
\draw (jcTwoE) -- (rOne |- bjtOne) -- (bjtOneB);
\end{tikzpicture}
```

- 2 chktex-file 1
- 3 chktex-file 11
- 4 chktex-file 12
- 5 chktex-file 26
- 6 chktex-file 36
- 7 chktex-file 37
- 8 chktex-file 8
- 9 Sources
- 9.1 Voltage Source in North-South Orientation

```
\voltagesourceNS{name}{position}{align:left|right}{text}
```

node endings: N: north, S: south

```
\renewcommand{\voltagecolor}{blue}
\renewcommand{\fillcolor}{lightgray}
\voltagesourceNS{u}{(0,0)}{left}{\SI{1}{\volt}}
\draw (uN) -- ++(0,0.5) (uS) -- ++(0,-0.5);
```



9.2 Voltage Source in South-North Orientation

\voltagesourceSN{name}{position}{align:left|right}{text}

node endings: N: north, S: south

Example:



9.3 Voltage Source in West-East Orientation

\voltagesourceWE{name}{position}{align:above|below}{text}

node endings: W: west, E: east

Example:

$$\voltagesourceWE{u}{(0,0)}{above}{\SI{1}{\volt}}\draw (uW) -- ++(-0.5,0) (uE) -- ++(0.5,0);$$



9.4 Voltage Source in East-West Orientation

\voltagesourceEW{name}{position}{align:above|below}{text}

node endings: W: west, E: east



9.5 Battery in North-South Orientation

\batteryNS{name}{position}{left text}{right text}

node endings: N: north, S: south

Example:

$$\batteryNS\{u\}\{(0,0)\}\{\$U_{b}\}\{\SI\{1\}\{\volt\}\}\draw\ (uN) -- ++(0,0.5)\ (uS) -- ++(0,-0.5);$$

 $U_b \stackrel{\downarrow}{=} 1 \text{ V}$

9.6 Battery in South-North Orientation

\batterySN{name}{position}{left text}{right text}

node endings: N: north, S: south

Example:

 $U_b \stackrel{\downarrow}{-} 1 V$

9.7 Current Source in North-South Orientation

\currentsourceNS{name}{position}{align:left|right}{text}

node endings: N: north, S: south

Example:

 $\bigoplus I$

9.8 Current Source in South-North Orientation

\currentsourceSN{name}{position}{align:left|right}{text}

node endings: N: north, S: south

Example:



9.9 Current Source in West-East Orientation

\currentsourceWE{name}{position}{align:above|below}{text}

node endings: W: west, E: east

Example:



9.10 Current Source in East-West Orientation

\currentsourceEW{name}{position}{align:above|below}{text}

node endings: W: west, E: east

Example:



10 Voltage and Current Arrows

10.1 Voltage Arrow Between Two Nodes

\voltagearrow{begin}{end}{text parameters}{text}

```
Example:
\draw (0,1) -- (1,1) \terminal{tOne};
\draw (0,0) -- (1,0) \terminal{tTwo};
\voltagearrow{(tOne)}{(tTwo)}{right}{$U$}
```

10.2 Curved Voltage Arrow Between Two Nodes

\voltagearrowC{begin}{end}{control option}{text parameters}{text}

```
Example:
\draw (0,1) -- (1,1) \terminal{tA};
\draw (0,0) -- (1,0) \terminal{tB};

\voltagearrowC{(tA)}{(tB)}{+(1,0) and +(1,0)}{left}{$U$}
```

10.3 Current Arrow in North-South Orientation

\currentarrowNS{position}{align:left|right}{text}

Example: \draw (0,0) -- (0,1) \mnode{ia}; \currentarrowNS{(ia)}{left}{\$I\$}



\currentarrowSN{position}{align:left|right}{text}

```
Example:
```

```
\draw (0,0) -- (0,1) \mnode{ia};
\currentarrowSN{(ia)}{left}{$I$}
```

10.5 Current Arrow in West-East Orientation

\currentarrowWE{position}{align:above|below}{text}

```
Example:
\draw (0,0) -- (1,0) \mnode{ia};
\currentarrowWE{(ia)}{above}{$I$}
```

10.6 Current Arrow in East-West Orientation

\currentarrowEW{position}{align:above|below}{text}

Example:
\draw (0,0) -- (1,0) \mnode{ia};
\currentarrowEW{(ia)}{above}{\$I\$}



11 Resistors, Capacitors and Inductors

11.1 Resistor in West-East Orientation

\resistorWE{name}{position}{text above}{text below}

node endings: W: west, E: east

Example:



11.2 Resistor in North-South Orientation

\resistorWE{name}{position}{text left}{text right}

node endings: N: north, S: south

Example:

$$\rsistorNS{r}{(0,0)}{R_{1}}{} \ \draw (rN) -- ++(0,0.5) (rS) -- ++(0,-0.5);$$



11.3 Capacitor in West-East Orientation

\capacitorWE{name}{position}{text above}{text below}

node endings: W: west, E: east

Example:

11.4 Capacitor in North-South Orientation

\capacitorNS{name}{position}{text left}{text right}

node endings: N: north, S: south

Example:

11.5 Inductor in West-East Orientation

\inductorWE{name}{position}{text above}{text below}

node endings: W: west, E: east

Example:

11.6 Inductor in North-South Orientation

\inductorNS{name}{position}{text left}{text right}

node endings: N: north, S: south

11.7 Inductor in North-South Orientation (Mirrored)

\inductorNS{name}{position}{text left}{text right}

node endings: N: north, S: south

Example:

11.8 Varistor in West-East Orientation

\varistorWE{name}{position}{text left}{text right}{controlling voltage}

node endings: W: west, E: east

Example:

11.9 Potentiometer in West-East Orientation, North Connection

\potentiometerWEN{name}{position}{text}

node endings: W: west, E: east, N: north

11.10 Potentiometer in West-East Orientation, South Connection

\potentiometerWES{name}{position}{text}

node endings: W: west, E: east, S: south


Example:

11.11 Potentiometer in North-South Orientation, East Connection

\potentiometerNSE{name}{position}{text}

node endings: N: north, S: south, E: east

Example:

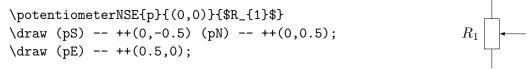

11.12 Potentiometer in North-South Orientation, West Connection

\potentiometerNSW{name}{position}{text}

node endings: N: north, S: south, W: west

```
\potentiometerNSW{p}{(0,0)}{$R_{1}$}
\draw (pS) -- ++(0,-0.5) (pN) -- ++(0,0.5);
\draw (pW) -- ++(-0.5,0);
```



12 Transformer

12.1 Transformer in North-South Orientation

\transformerNS{name}{position}

node endings: N: north, S: south

Example:

```
\transformerNS{tf}{(0,0)}
\draw (tfAN) -- ++(-0.5,0) (tfAS) -- ++(-0.5,0);
\draw (tfBN) -- ++( 0.5,0) (tfBS) -- ++( 0.5,0);
```



13 Diodes

13.1 Diode In North-South Orientation

\diodeNS{name}{position}{align:left|right}{text}

node endings: A: anode, C: cathode

Example:

$$\label{lem:diodens} $$ \draw (dA) -- ++(0,0.5) (dC) -- ++(0,-0.5);$$



13.2 Diode in South-North Orientation

\diodeSN{name}{position}{align:left|right}{text}

node endings: A: anode, C: cathode

Example:



13.3 Diode in West-East Orientation

\diodeWE{name}{position}{align:above|below}{text}

node endings: A: anode, C: cathode

Example:

$$\label{local_def} $$ \widetilde{d}_{(0,0)}_{above}_{5D_{1}}^{1}$ \draw (dA) -- ++(-0.5,0) (dC) -- ++(0.5,0);$$



13.4 Diode in East-West Orientation

\diodeEW{name}{position}{align:above|below}{text}

node endings: A: anode, C: cathode

Example:



13.5 Zener Diode in North-South Orientation

\zDiodeNS{name}{position}{align:left|right}{text}

node endings: A: anode, C: cathode



13.6 Zener Diode in South-North Orientation

\zDiodeSN{name}{position}{align:left|right}{text}

node endings: A: anode, C: cathode

Example:

 $D_1 \stackrel{\downarrow}{\bigwedge}$

13.7 Zener Diode in West-East Orientation

\zDiodeWE{name}{position}{align:above|below}{text}

node endings: A: anode, C: cathode

Example:

$$\zDiodeWE{zd}{(0,0)}{above}{D_{1}} \draw (zdA) -- ++(-0.5,0) (zdC) -- ++(0.5,0);$$



13.8 Zener Diode in East-West Orientation

\zDiodeEW{name}{position}{align:above|below}{text}

node endings: A: anode, C: cathode

Example:

$$\label{local_substitution} $$\zDiodeEW{zd}{(0,0)}{above}{D_{1}} \draw (zdA) -- ++(0.5,0) (zdC) -- ++(-0.5,0);$$

 D_1

13.9 Schottky Diode in North-South Orientation

\sDiodeNS{name}{position}{align:left|right}{text}

node endings: A: anode, C: cathode

Example:



13.10 Schottky Diode in South-North Orientation

\sDiodeSN{name}{position}{align:left|right}{text}

node endings: A: anode, C: cathode

Example:

$$\s DiodeSN{zd}{(0,0)}{left}{D_{1}} \draw (zdA) -- ++(0,-0.5) (zdC) -- ++(0,0.5);$$



13.11 Schottky Diode in West-East Orientation

\sDiodeWE{name}{position}{align:above|below}{text}

node endings: A: anode, C: cathode

Example:

$$\sDiodeWE{zd}{(0,0)}{above}{D_{1}} \draw (zdA) -- ++(-0.5,0) (zdC) -- ++(0.5,0);$$



13.12 Schottky Diode in East-West Orientation

\sDiodeEW{name}{position}{align:above|below}{text}

node endings: A: anode, C: cathode



13.13 LED in North-South Orientation, Light in East Direction

\ledNSE{name}{position}{text}

node endings: A: anode, C: cathode

Example:

$$\label{ledNSE} $$ \left(0,0\right)_{\SD_{1}}$ \draw (ledA) -- ++(0,0.5) (ledC) -- ++(0,-0.5);$$



13.14 LED in North-South Orientation, Light in West Direction

\ledNSW{name}{position}{text}

node endings: A: anode, C: cathode

Example:

$$\label{ledNSW} $$ \left((0,0) \right) $$ D_{1}$ \ \draw (ledA) -- ++ (0,0.5) (ledC) -- ++ (0,-0.5);$$



13.15 LED in South-North Orientation, Light in West Direction

\ledSNW{name}{position}{text}

node endings: A: anode, C: cathode

Example:



13.16 LED in West-East orientation, Light in North Direction

\ledWEN{name}{position}{text}

node endings: A: anode, C: cathode

Example:

$$\label{led} $$ \left(0,0 \right) { $D_{1} $} $$ \\ \draw (ledA) -- ++ (-0.5,0) (ledC) -- ++ (0.5,0); $$ D_{1}$$$

13.17 LED in East-West orientation, Light in North Direction

\ledEWN{name}{position}{text}

node endings: A: anode, C: cathode

Example:

13.18 Photo Diode in North-South Orientation, Light from East

\photodiodeNSE{name}{position}{text}

node endings: A: anode, C: cathode

Example:

\photodiodeNSE{pd}{(0,0)}{\$D_{1}\$} \draw (pdA) -- ++(0,0.5) (pdC) -- ++(0,-0.5);
$$D_1 = \sum_{i=1}^{n} D_i = \sum_{i=1}^{n} D$$

13.19 photo diode in North-South Orientation, Light from West

\photodiodeNSW{name}{position}{text}

node endings: A: anode, C: cathode

13.20 photo diode in South-North Orientation, Light from West

\photodiodeSNW{name}{position}{text}

node endings: A: anode, C: cathode

Example:



14 Transistors

14.1 N-Channel JFET in North-South Orientation

\nChnJFETNS{name}{position}

node endings: D: drain, G: gate, S: source

Example:



14.2 N-Channel JFET in West-East Orientation

\nChnJFETWE{name}{position}

node endings: D: drain, G: gate, S: source

$$D \longrightarrow S$$

14.3 Enhancement-Mode N-Channel MOSFET in North-South Orientation

\NMOSFETenhNS{name}{position}

node endings: D: drain, G: gate, S: source, B: bulk

Example:

14.4 Enhancement-Mode P-Channel MOSFET in North-South Orientation

\PMOSFETenhNS{name}{position}

node endings: D: drain, G: gate, S: source, B: bulk

Example:

14.5 NPN Bipolar Junction Transistor in North-South Orientation

\BJTnpnNS{name}{position}

node endings: B: basis, E: emitter, C: collector

14.6 NPN Bipolar Junction Transistor in North-South Orientation (Mirrored)

\BJTnpnNSMirror{name}{position}

node endings: B: basis, E: emitter, C: collector

Example:

```
\BJTnpnNSMirror{b}{(0,0)}
\path (bB) node [right]{B};
\path (bC) node [above]{C};
\path (bE) node [below]{E};
```

14.7 NPN Bipolar Junction Transistor in South-North Orientation

\BJTnpnSN{name}{position}

node endings: B: basis, E: emitter, C: collector

Example:

```
BJTnpnSN\{b\}\{(0,0)\}
\path (bB) node [left]{B};
\path (bC) node [below]{C};
\path (bE) node [above]{E};
```

14.8 NPN Bipolar Junction Transistor in East-West Orientation

\BJTnpnEW{name}{position}

node endings: B: basis, E: emitter, C: collector

```
\BJTnpnEW\{b\}\{(0,0)\}\
                                                                     E \longrightarrow C
B
\path (bB) node [below]{B};
\path (bC) node [right]{C};
\path (bE) node [left]{E};
```

14.9 PNP Bipolar Junction Transistor in North-South Orientation

```
\BJTpnpNS{name}{position}
```

node endings: B: basis, E: emitter, C: collector

Example:

```
\BJTpnpNS{b}{(0,0)}
\path (bB) node [left]{B};
\path (bC) node [above]{C};
\path (bE) node [below]{E};
```

15 Operational Amplifiers

15.1 OP-AMP, Standardized Symbol

\opampNorm{name}{position}

node endings: Out: output, InMinus: n-input, InPlus: p-input, UbattPlus: positive power supply, UbattMinus: negative power supply Gnd: ground

15.2 OP-AMP, Standardized Symbol, N-Input above P-Input

\opampNormInv{name}{position}

node endings: Out: output, InMinus: n-input, InPlus: p-input, UbattPlus: positive power supply, UbattMinus: negative power supply Gnd: ground

15.3 OP-AMP

\opamp{name}{position}

node endings: Out: output, InMinus: n-input, InPlus: p-input, UbattPlus: positive power supply, UbattMinus: negative power supply Gnd: ground

15.4 OP-AMP, N-Input above P-Input

\opampInv{name}{position}

node endings: Out: output, InMinus: n-input, InPlus: p-input, UbattPlus: positive power supply, UbattMinus: negative power supply Gnd: ground

```
\label{eq:composition} $$ \operatorname{opampInv}(0,0) $$ \\ \operatorname{draw} (\operatorname{opampOut}) -- ++(0.5,0); $$ \\ \operatorname{draw} (\operatorname{opInMinus}) -- ++(-0.5,0); $$ \\ \operatorname{draw} (\operatorname{opInPlus}) -- ++(0,0.3) \ \operatorname{node} \ [above] $$ +U_{0}; $$ \\ \operatorname{draw} (\operatorname{opUbattPlus}) -- ++(0,-0.3) \ \operatorname{node} \ [below] $$ -U_{0}; $$ \\ \operatorname{draw} (\operatorname{opUbattMinus}) -- ++(0,-0.3) \ \operatorname{node} \ [below] $$ -U_{0}; $$ \\ \operatorname{draw} (\operatorname{opGnd}) -- ++(0,-0.2) \ -| ++(0.3,-0.1) \ \operatorname{cnode} \ [gnd]; $$ \\ \operatorname{gnd} \{(gnd)\} $$
```

15.5 General Amplifier

\amplifier{name}{position}

node endings: OutPlus: p-output OutMinus: n-output, InMinus: n-input, InPlus: p-input, UbattPlus: positive power supply, UbattMinus: negative power supply Gnd: ground

16 Amplifiers

16.1 Amplifier, Standardized Symbol

\ampNorm{name}{position}{amplification factor}

node endings: Out: output, InMinus: n-input, InPlus: p-input, UbattPlus: positive power supply, UbattMinus: negative power supply Gnd: ground

17 Logic Gates

17.1 Inversion Symbol for Logic Gates Outputs

\NOTcircle{name}{position}

```
Example:
\draw (0,0) -- (0,1);
\NOTcircle{n}{(0,0.5)}
```

17.2 Logic Gate Symbol, IEC Standard

\LogicGateIEC{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:

\LogicGateIEC{g}{(0,0)}

\draw (gIn) -- ++(-0.2,0);

\draw (gOut) -- ++(0.5,0);

\draw (gInN) -- ++(-0.5,0);

\draw (gN) -- ++(0,0.2);

\draw (gS) -- ++(0,-0.2);
```

17.3 Logic AND Gate Symbol

\GateAND{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:

\GateAND{g}{(0,0)}

\draw (gOut) -- ++(0.5,0);

\draw (gInN) -- ++(-0.5,0);

\draw (gInS) -- ++(-0.5,0);
```

17.4 Logic NAND Gate Symbol

\GateNAND{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:

\GateNAND{g}{(0,0)}

\draw (gOut) -- ++(0.5,0);

\draw (gInN) -- ++(-0.5,0);

\draw (gInS) -- ++(-0.5,0);
```

17.5 Logic OR Gate Symbol

\GateOR{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:

\GateOR{g}{(0,0)}

\draw (gOut) -- ++(0.5,0);

\draw (gInN) -- ++(-0.5,0);

\draw (gInS) -- ++(-0.5,0);
```

17.6 Logic NOR Gate Symbol

\GateNOR{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:
\GateNOR{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```

17.7 Logic NOT Gate Symbol

\GateNOT{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:

\GateNOT{g}{(0,0)}

\draw (gOut) -- ++(0.5,0);

\draw (gIn) -- ++(-0.5,0);
```

17.8 Logic XOR Gate Symbol

\GateXOR{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example:

\GateXOR{g}{(0,0)}

\draw (gOut) -- ++(0.5,0);

\draw (gInN) -- ++(-0.5,0);

\draw (gInS) -- ++(-0.5,0);
```

17.9 Logic XNOR Gate Symbol

\GateXNOR{name}{position}

node endings: In: input, Out: output, InN: north input, InS: south input, N: north, S: south

```
Example: \GateXNOR{g}{(0,0)}
```

```
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```



17.10 Logic AND Gate, ANSI Symbol

\ANSIGateAND{name}{position}

node endings: Out: output, InN: north input, InS: south input, N: north, S: south

Example:

```
\ANSIGateAND{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```



17.11 Logic NAND Gate, ANSI Symbol

\ANSIGateNAND{name}{position}

node endings: Out: output, InN: north input, InS: south input, N: north, S: south

```
\ANSIGateNAND{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```



17.12 Logic OR Gate, ANSI Symbol

\ANSIGateOR{name}{position}

node endings: Out: output, InN: north input, InS: south input, N: north, S: south

Example:

```
\ANSIGateOR{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```

17.13 Logic NOR Gate, ANSI Symbol

\ANSIGateNOR{name}{position}

node endings: Out: output, InN: north input, InS: south input, N: north, S: south

Example:

```
\ANSIGateNOR{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```

17.14 Logic NOT Gate, ANSI Symbol

\ANSIGateNOT{name}{position}

node endings: Out: output, In: input, N: north, S: south

Example:

```
\ANSIGateNOT{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gIn) -- ++(-0.5,0);
```



17.15 Logic XOR Gate, ANSI Symbol

\ANSIGateXOR{name}{position}

node endings: Out: output, InN: north input, InS: south input, N: north, S: south

Example:

```
\ANSIGateXOR{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```

17.16 Logic XNOR Gate, ANSI Symbol

\ANSIGateXNOR{name}{position}

node endings: Out: output, InN: north input, InS: south input, N: north, S: south

Example:

```
\ANSIGateXNOR{g}{(0,0)}
\draw (gOut) -- ++(0.5,0);
\draw (gInN) -- ++(-0.5,0);
\draw (gInS) -- ++(-0.5,0);
```

18 Flip-Flops

18.1 General Flip-Flop Symbol

```
\FlipFlop{name}{position}
```

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

Example:

```
\FlipFlop{ff}{(0,0)}
\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.2 General Flip-Flop Symbol for Negative Logic

\FlipFlopNegLogic{name}{position}

Example:

```
\FlipFlopNegLogic{ff}{(0,0)}
\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.3 Flip-Flop Changing on Rising Edge

\FlipFlopRisingEdge{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

Example:

```
\FlipFlopRisingEdge{ff}{(0,0)}
\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);
\draw (ffW) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.4 Flip-Flop Changing on Falling Edge

\FlipFlopFallingEdge{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

Example:

```
\FlipFlopFallingEdge{ff}{(0,0)}
\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);
\draw (ffInC) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.5 RS Flip-Flop

\RSFlipFlop{name}{position}

Example:

```
\RSFlipFlop{ff}{(0,0)}
\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.6 RS NAND Flip-Flop (Negative Logic)

\RSNANDFlipFlop{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

Example:

```
\label{eq:continuous_state} $$ \RSNANDFlipFlop{ff}{(0,0)} $$ $$ $$ \draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0); $$ $$ $$ \draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0); $$ $$ $$ $$ $$ $$ $$ $$ $$ $$
```

18.7 RS Flip-Flop Changing on Rising Edge

\RSFlipFlopRisingEdge{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

Example:

```
\RSFlipFlopRisingEdge{ff}{(0,0)}
\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);
\draw (ffW) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.8 RS Flip-Flop Changing on Falling Edge

\RSFlipFlopFallingEdge{name}{position}

Example: \RSFlipFlopFallingEdge{ff}{(0,0)} \draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0); \draw (ffInC) -- ++(-0.5,0); \draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);

18.9 JK Flip-Flop Changing on Rising Edge

\JKFlipFlopRisingEdge{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

```
Example:

\JKFlipFlopRisingEdge{ff}{(0,0)}

\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);

\draw (ffW) -- ++(-0.5,0);

\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.10 JK Master-Slave Flip-Flop

\JKMSFlipFlop{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

```
Example:

\JKMSFlipFlop{ff}{(0,0)}

\draw (ffInN) -- ++(-0.5,0) (ffInS) -- ++(-0.5,0);

\draw (ffW) -- ++(-0.5,0);

\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.11 D Flip-Flop Changing on Rising Edge

\DFlipFlopRisingEdge{name}{position}

```
Example:

\DFlipFlopRisingEdge{ff}{(0,0)}

\draw (ffInN) -- ++(-0.5,0);

\draw (ffW) -- ++(-0.5,0);

\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.12 T Flip-Flop Changing on Rising Edge

\TFlipFlopRisingEdge{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

```
Example:

\TFlipFlopRisingEdge{ff}{(0,0)}
\draw (ffW) -- ++(-0.5,0);
\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.13 T Flip-Flop Changing on Falling Edge

\TFlipFlopFallingEdge{name}{position}

node endings: OutN: north output, OutS: south output InN: north input, InS: south input, N: north, S: south W: middle input

```
Example:

\TFlipFlopFallingEdge{ff}{(0,0)}

\draw (ffInC) -- ++(-0.5,0);

\draw (ffOutN) -- ++(0.5,0) (ffOutS) -- ++(0.5,0);
```

18.14 Monoflop

\Monoflop{name}{position}

Example:

18.15 Switch, West-East Direction

\switchWE{name}{position}

node endings: W: west, E: east, N: north connection

Example:

```
\switchWE{s}{(0,0)}
\draw (sW) -- ++(-0.5,0) (sE) -- ++(0.5,0);
```

18.16 Closed Switch, West-East Direction

\switchClosedWE{name}{position}

node endings: W: west, E: east, N: north connection

Example:

```
\switchClosedWE{s}{(0,0)}
\draw (sW) -- ++(-0.5,0) (sE) -- ++(0.5,0);
```

18.17 Switch, East-West Direction

\switchEW{name}{position}

node endings: W: west, E: east, N: north connection

```
\switchEW{s}{(0,0)}
\draw (sW) -- ++(-0.5,0) (sE) -- ++(0.5,0);
```

18.18 Closed Switch, East-West Direction

\switchClosedEW{name}{position}

node endings: W: west, E: east, N: north connection

Example:

\switchClosedEW{s}{(0,0)} \draw (sW) -- ++(-0.5,0) (sE) -- ++(0.5,0);

18.19 Switch, South-North Direction

\switchSN{name}{position}

node endings: S: south, N: north, W: west connection

Example:

 $\sitchSN{s}{(0,0)}$ \draw (sS) -- ++(0,-0.5) (sN) -- ++(0,0.5);

18.20 Closed Switch, South-North Direction

\switchClosedSN{name}{position}

node endings: S: south, N: north, W: west connection

Example:

\switchClosedSN{s}{(0,0)} \draw (sS) -- ++(0,-0.5) (sN) -- ++(0,0.5);

18.21 Pushbutton, West-East Direction

\pushbuttonWE{name}{position}

node endings: W: west, E: east, N: north connection

```
Example: 
\pushbuttonWE{b}{(0,0)}
\draw (bW) -- ++(-0.5,0) (bE) -- ++(0.5,0);
```



18.22 Pushbutton, South-North Direction

\pushbuttonSN{name}{position}

node endings: S: south, N: north, W: west connection

Example:

$$\begin{tabular}{ll} $$ \sup_{0,0} & (0,0) \\ draw (bS) -- ++(0,-0.5) (bN) -- ++(0,0.5); \\ \end{tabular}$$



19 Miscellaneous

19.1 Ground as Symbol

\gnd{position}



19.2 Ground as Continued Drawing

\gndNow

19.3 Connecting Terminal

```
\terminal{name}

node endings: Con: use terminal as connector (no space when wired)

Example:
\renewcommand{\fillcolor}{\white}
\draw (0,0) -- ++(1,0) \terminal{t};
```

19.4 Junction (Black Filled Circle)

```
\junction{name}
```

```
Example: \draw (0,0) -- (1,0); \draw (0.5,0) \junction{j} -- ++(0,-0.5);
```

19.5 Junction in the Middle of a Path

```
\junction{name}
```

```
Example: \draw (0,0) -- (1,0) \mjunction{j} (j) -- ++(1,0);
```

19.6 Connection Node (for Referencing, not Visible)

\cnode{name}

```
Example:
```

```
\draw (0,0) -- (0.5,0) \cnode{c} -- (0.5,0.5);
\draw (c) -- ++(0,-0.5);
```

19.7 Midway Connection Node

\mnode{name}

19.8 Invisible Node with Terminal Node Properties (Used with Voltage Arrows)

 $\ne {name}$

Example: \draw (0,0) -- ++(1,0) \tnode{t};

19.9 Speaker

\speakerWE{name}{position}

node endings: N: north, S: south,

Example:

 $\ensuremath{\verb|spath||} $$ \operatorname{sp}{(0,0)} $$ \draw (spN) -- ++(0,0.5) (spS) -- ++(0,-0.5);$



19.10 Bulb

\bulb{name}{position}

node endings: N: north, S: south, W: west, E: east

Example:

\bulb{b}{(0,0)} \draw (bN) -- ++(0,0.5) (bS) -- ++(0,-0.5);

19.11 Multimeter (Circle for Voltmeter or Ammeter)

\multimeter{name}{position}{letter}

node endings: N: north, S: south, W: west, E: east

Example:



19.12 Voltmeter

\voltmeter{name}{position}

node endings: N: north, S: south, W: west, E: east

Example:



19.13 Ammeter

\ammeter{name}{position}

node endings: N: north, S: south, W: west, E: east

Example:



19.14 Brushless DC Electric Motor

\BLDCMotor{name}{position}{pin1}{pin2}

node endings: N: north, S: south, W: west, E: east

Example:

19.15 Brushless DC Electric Generator

\BLDCGenerator{name}{position}{pin1}{pin2}

node endings: N: north, S: south, W: west, E: east

Example:

```
\BLDCGenerator{gen}{(0,0)}{$A_1$}{$A_2$} \draw (genN) -- ++(0,0.5); \draw (genS) -- ++(0,-0.5); \A_2
```

19.16 Brushes for Electric Motors and Generators

\brushes{position}

Only usful in combination with motors or generators.

Example:

\brushes{(0,0)}

19.17 Brushless DC Electric Motor with Permanent Magnet

\permanentMagnetBLDCMotor{name}{position}{pin1}{pin2}

node endings: N: north, S: south, W: west, E: east

```
\permanentMagnetBLDCMotor{motor}{(0,0)}{$A_1$}{$A_2$}
\draw (motorN) -- ++(0,0.5);
\draw (motorS) -- ++(0,-0.5);
```



19.18 DC Electric Motor with Permanent Magnet

\permanentMagnetDCMotor{name}{position}{pin1}{pin2}

node endings: N: north, S: south, W: west, E: east

Example:

```
\permanentMagnetDCMotor{motor}{(0,0)}{$A_1$}{$A_2$}
\draw (motorN) -- ++(0,0.5);
\draw (motorS) -- ++(0,-0.5);
```



19.19 Shunt DC Electric Motor

\shuntDCMotor{name}{position}

node endings: N: north, S: south, W: west, E: east

Example:

```
\shuntDCMotor{motor}{(0,0)}
\draw (motorN) -- ++(0,0.5);
\draw (motorS) -- ++(0,-0.5);
```



19.20 Series DC Electric Motor

\seriesDCMotor{name}{position}

node endings: N: north, S: south, W: west, E: east

```
\seriesDCMotor{motor}{(0,0)}
\draw (motorN) -- ++(0,0.5);
\draw (motorS) -- ++(0,-0.5);
```

