

Introduction to



An Open-Source Prototyping Platform

Hans-Petter Halvorsen


2013.08.20

Contents

1. [Overview](#)
2. [Installation](#)
3. [Arduino Starter Kit](#)
4. [Arduino TinkerKit](#)
5. [Arduino Examples](#)
6. [LabVIEW Interface for Arduino Toolkit](#)

<http://home.hit.no/~hansha/?equipment=arduino>

Arduino Overview

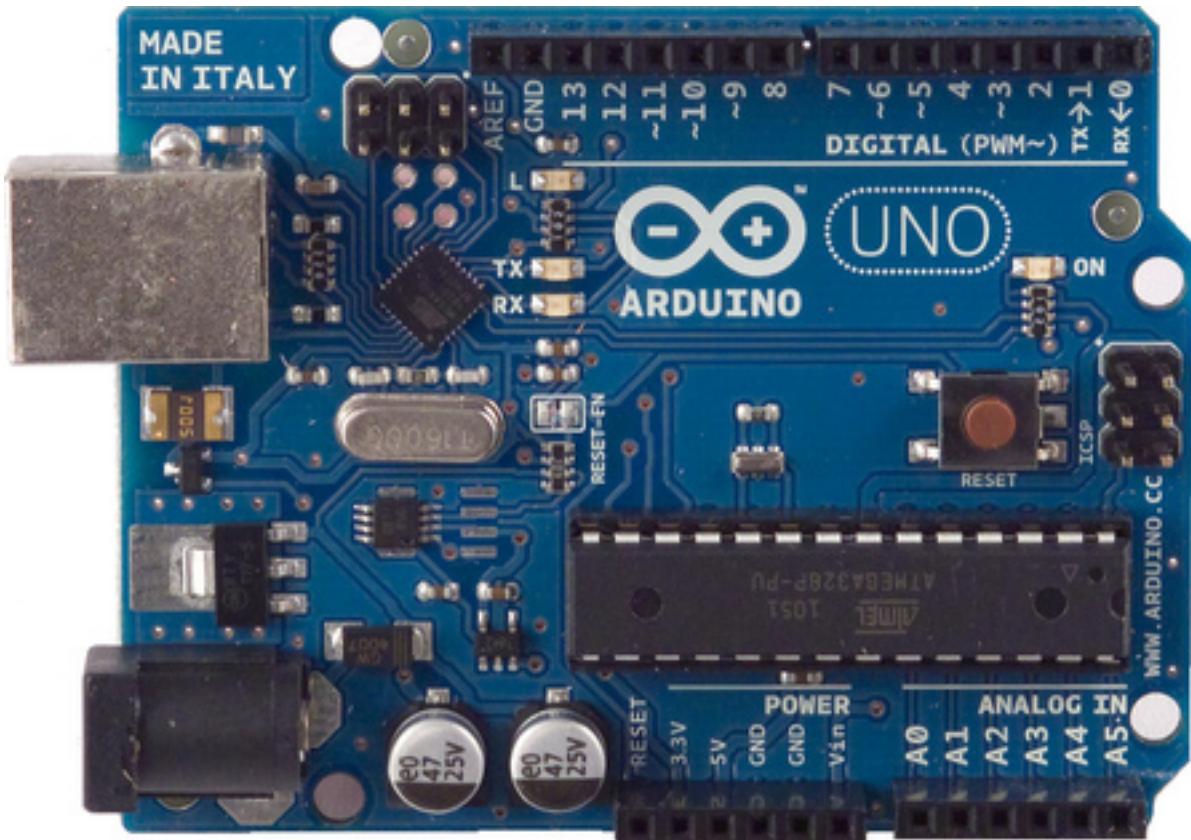

Arduino is a single-board microcontroller to make using electronics in multidisciplinary projects more accessible.


The hardware consists of a simple open source hardware board designed around an 8-bit Atmel AVR microcontroller, or a 32-bit Atmel ARM.

The software consists of a standard programming language compiler and a boot loader that executes on the microcontroller.

Hardware Specifications


- Microcontroller: ATmega328
- Operating Voltage: 5V
- Input Voltage (recommended): 7-12V
- Input Voltage (limits): 6-20V
- Digital I/O Pins: 14 (of which 6 provide PWM output)
- Analog Input Pins: 6
- DC Current per I/O Pin: 40 mA
- DC Current for 3.3V Pin: 50 mA
- Flash Memory: 32 KB (ATmega328)
- SRAM: 2 KB (ATmega328)
- EEPROM: 1 KB (ATmega328)
- Clock Speed: 16 MHz

Arduino UNO

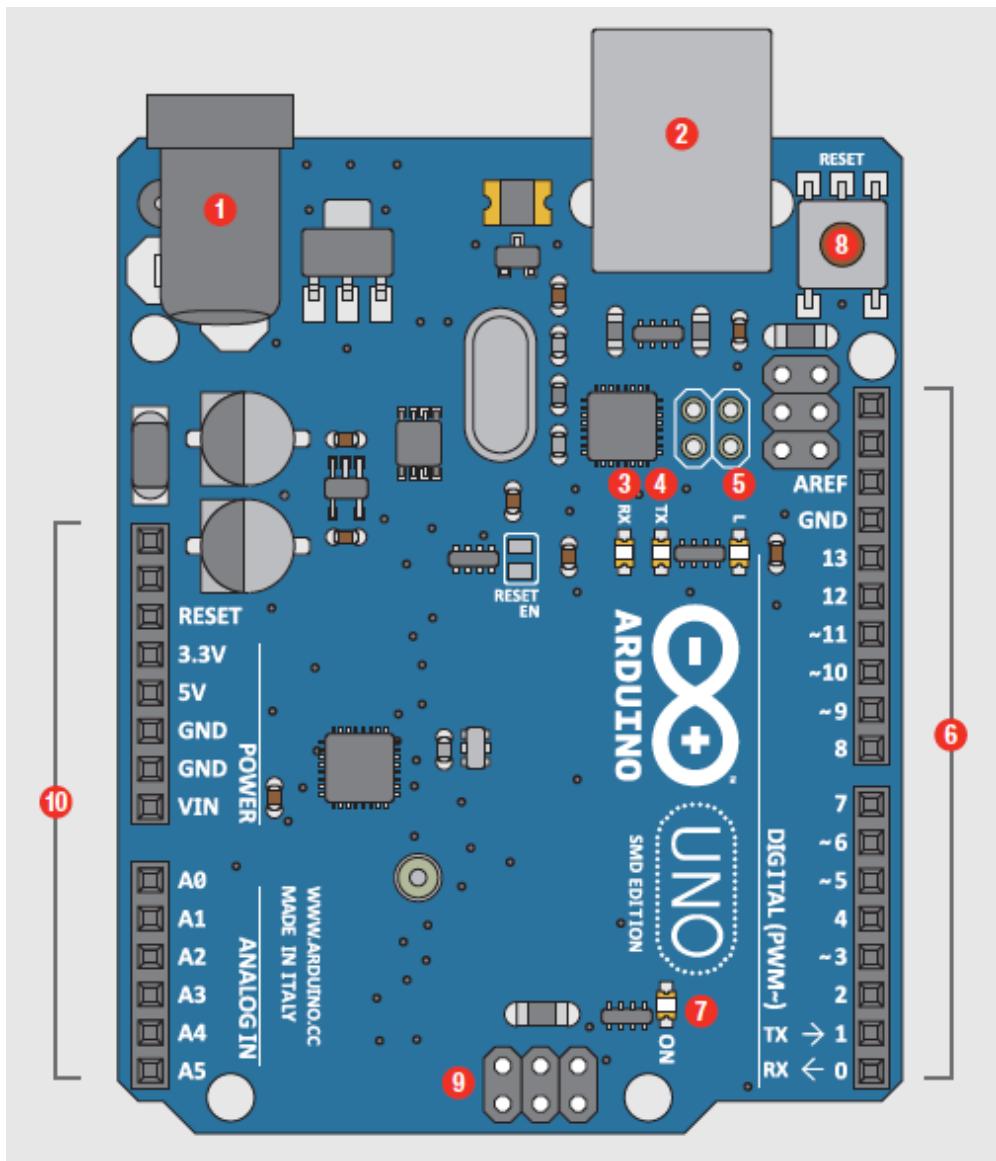


- ① Power In (Barrel Jack) - Can be used with either a 9V or 12V wall-wart or battery.
- ② Power In (USB Port) - Provides power and communicates with your board when plugged into your computer via USB.
- ③ LED (RX: Receiving) - This shows when the Arduino is receiving data (such as when being programmed).
- ④ LED (TX: Transmitting) - This shows when your Arduino is transmitting data (such as when running a program).
- ⑤ LED (Pin 13: Troubleshooting) - This LED is incorporated into your sketch to show if your program is running properly.
- ⑥ Pins (ARef, Ground, Digital, Rx, Tx) - These various pins can be used for inputs, outputs, power, and ground. // See Diagram Below
- ⑦ LED (Indicates Arduino is ON) - This is a simple power indicator LED.
- ⑧ Reset Button - This is a way to manually reset your Arduino, which makes your code restart.
- ⑨ ICSP Pins (Uploading Code without Bootloader) - This is for "In-Circuit Serial Programming," used if you want to bypass the boot loader.
- ⑩ Pins (Analog In, Power In, Ground, Power Out, Reset) - These various pins can be used for inputs, outputs, power, and ground. // See Diagram Below

Arduino UNO

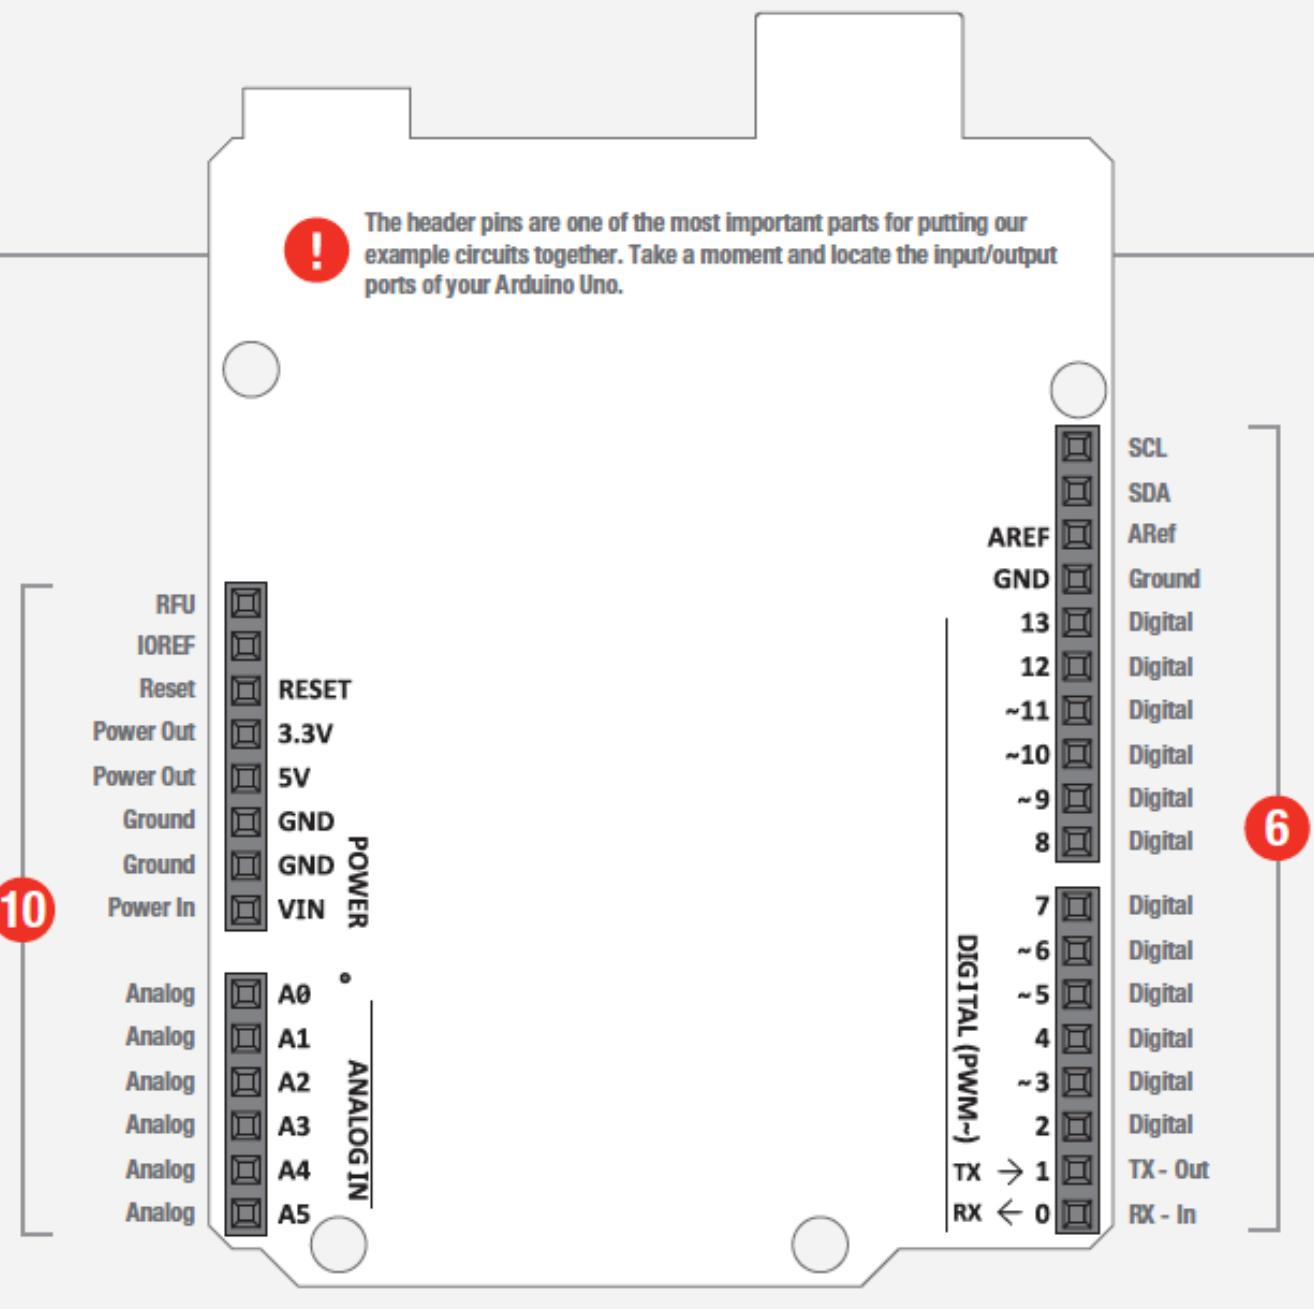



Alternatives

Alt 1 (no wiring)

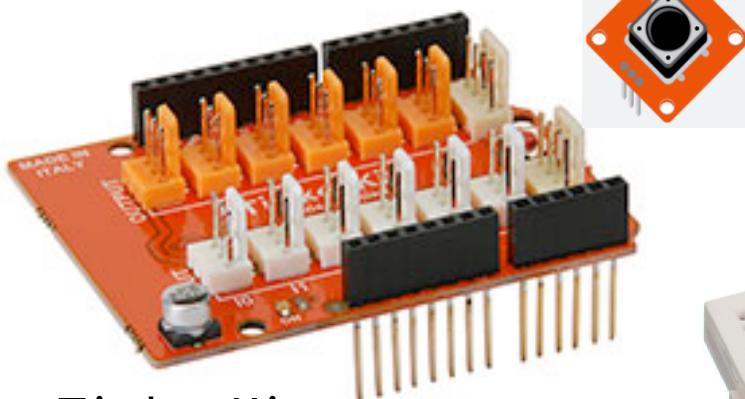


TinkerKit
Sensor Shield

Alt 2 (wiring)

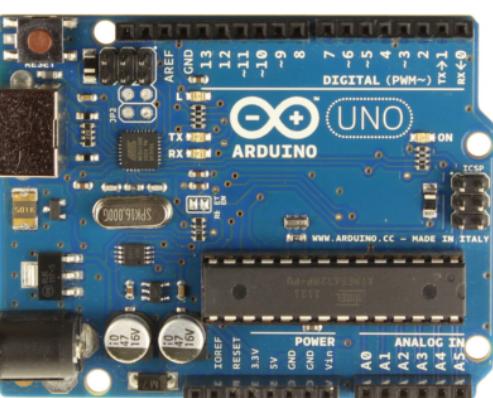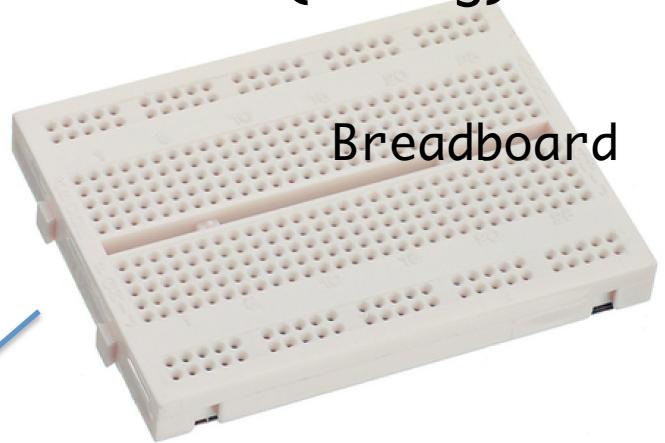




Arduino UNO

Alt 3 (soldering)

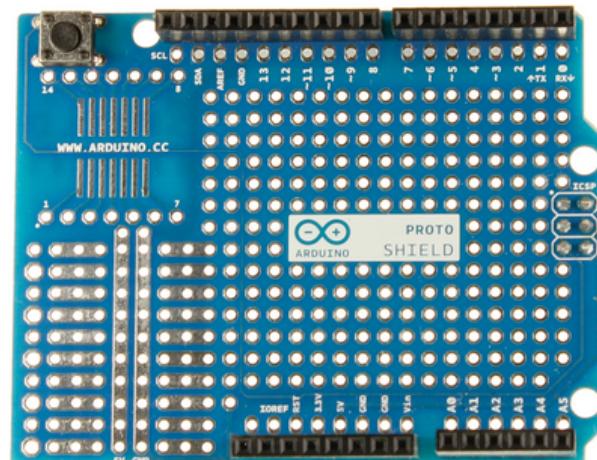


Arduino Proto Shield



Sensors & Actuators

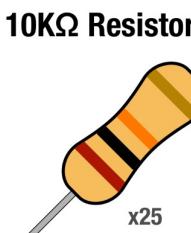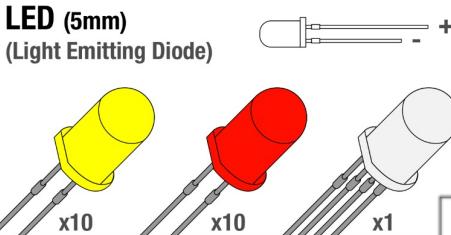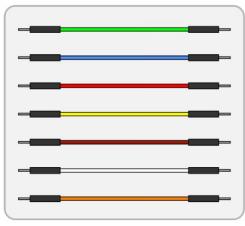

Flex Sensor

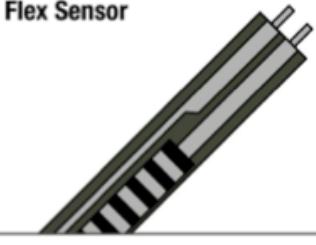


x1












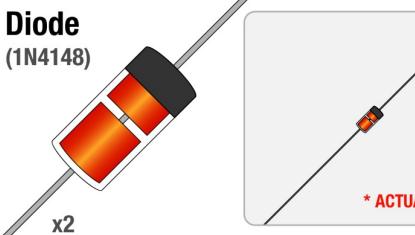
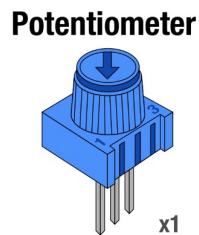


* ACTUAL SIZE


Soft Potentiometer

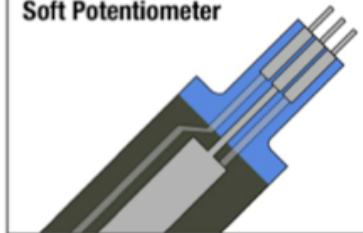


x1

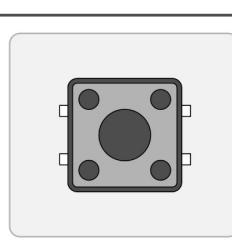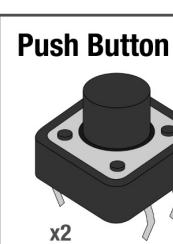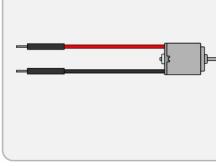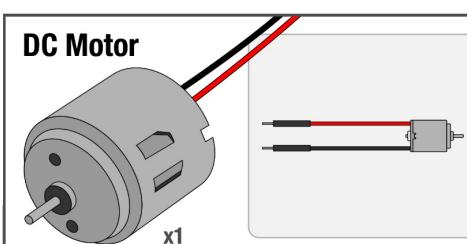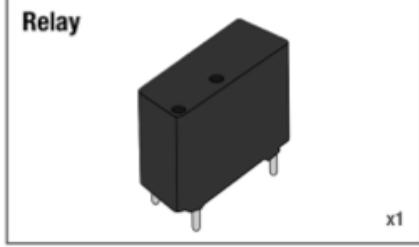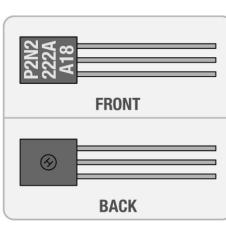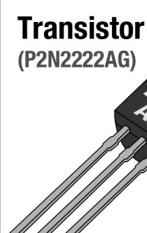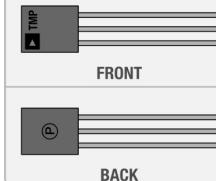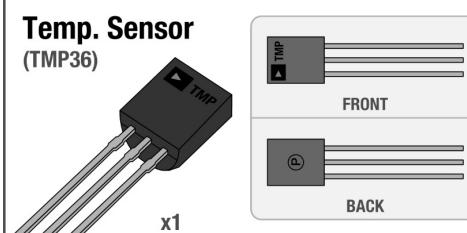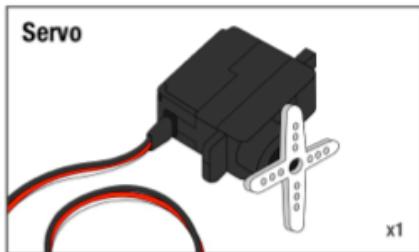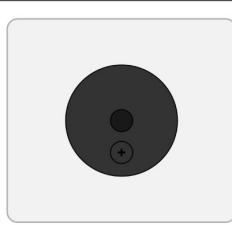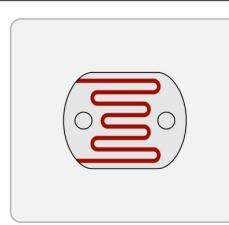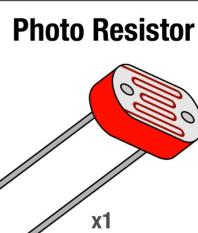

Breadboard

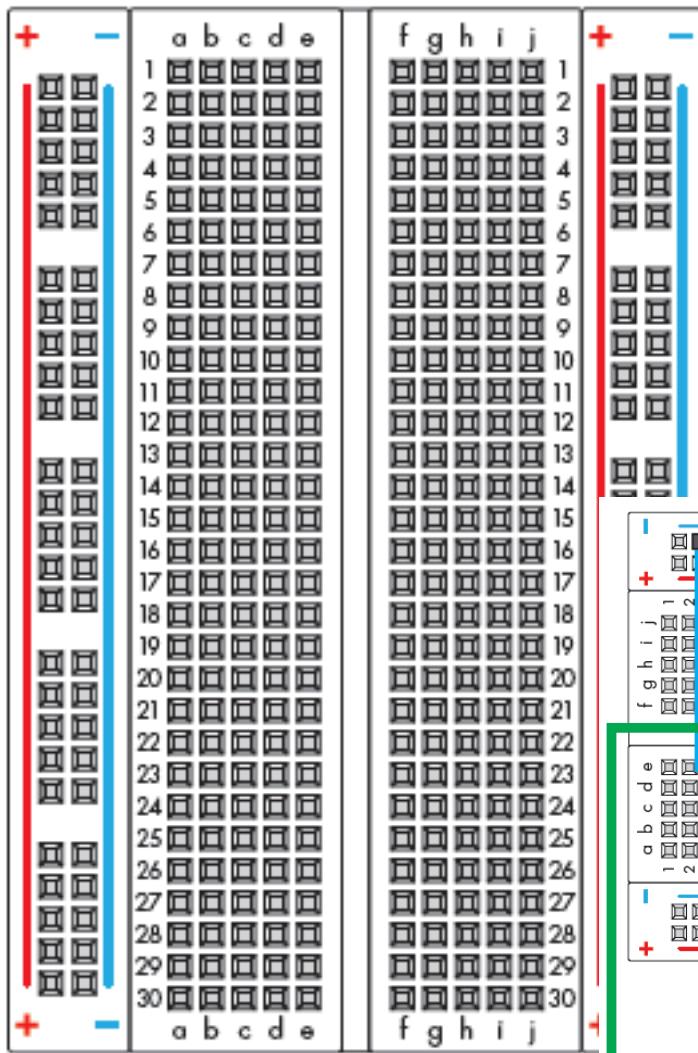

A breadboard is used to create circuits and connect different sensors and actuators to the Arduino board

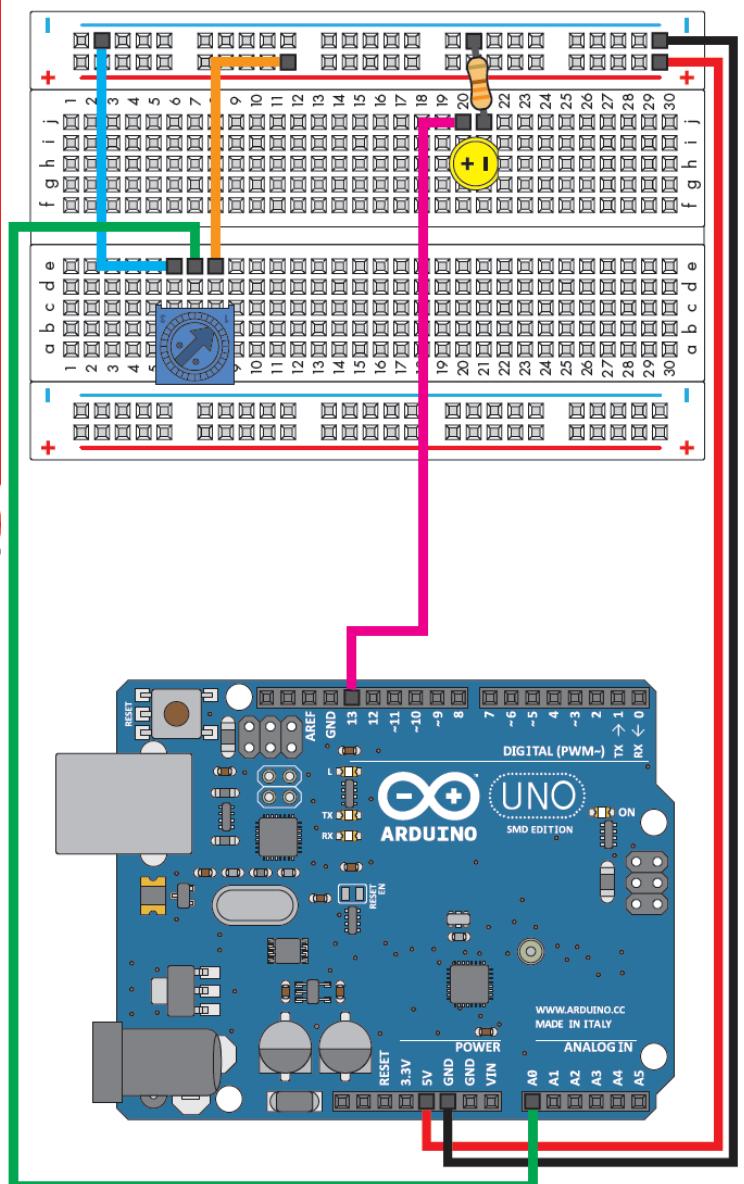

Software

The screenshot shows the Arduino IDE interface. The title bar says "Blink | Arduino 1.0.5". The menu bar includes File, Edit, Sketch, Tools, and Help. Below the menu is a toolbar with icons for file operations. The main area displays the "Blink" sketch code:

```
File Edit Sketch Tools Help
Blink
This example code is in the public domain.
/*
// include the TinkerKit library
#include <TinkerKit.h>

TKLed led(00); // creating the object 'led' that belongs to the 'TKLed' class
                // and giving the value to the desired output pin

void setup() {
//nothing here

}



void loop()
{
    led.on();      // set the LED on
    delay(1000);   // wait for a second
    led.off();     // set the LED off
    delay(1000);   // wait for a second
}
```

Below the code, a status window shows "Done uploading." and the binary sketch size: 1 992 bytes (of a 32 256 byte maximum). The bottom right corner indicates "Arduino Uno on COM4".

Alternative 1:
Arduino IDE
/Sketch


Alternative 2:
LabVIEW

+ LabVIEW Interface for
Arduino

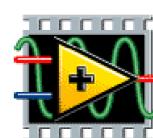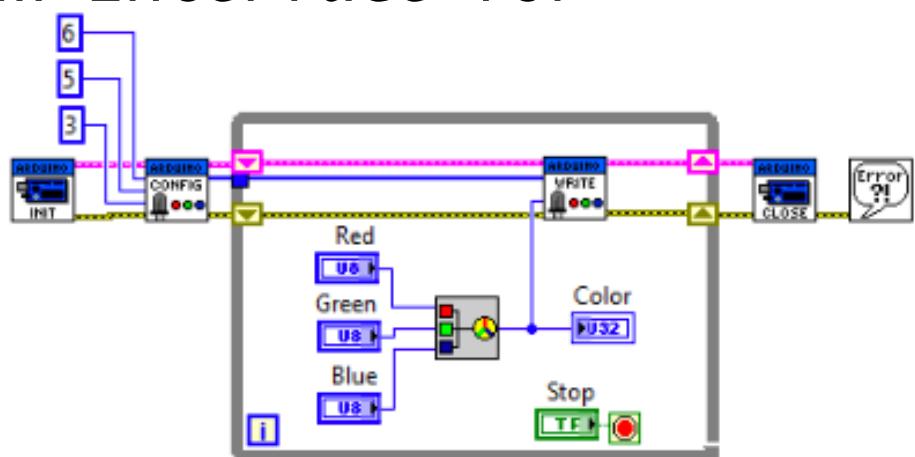

NATIONAL INSTRUMENTS
LabVIEW

Arduino IDE/Sketch

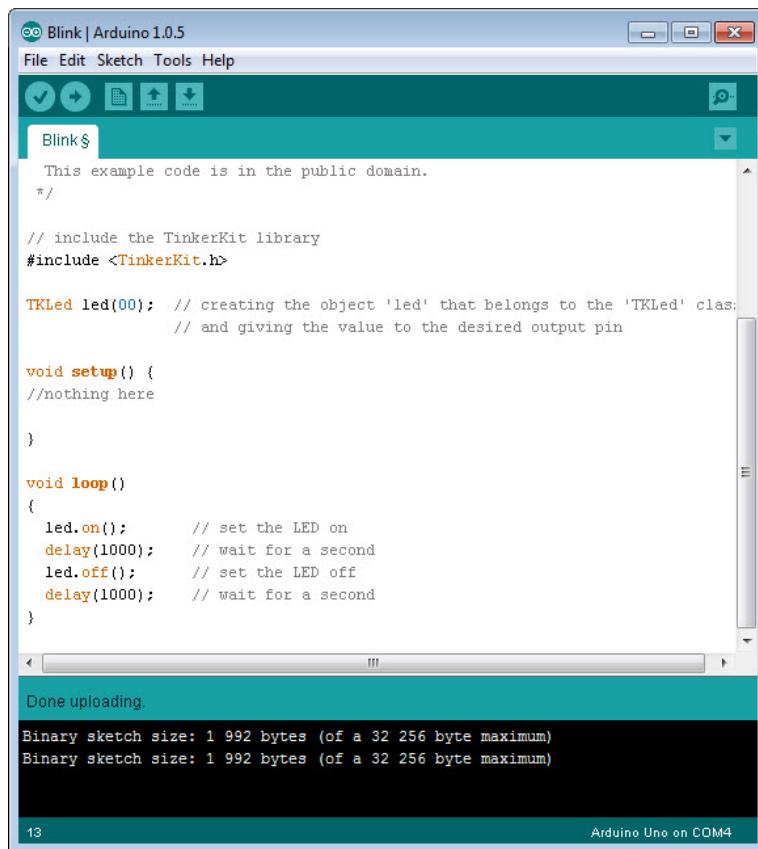

A typical program written in Sketch:

```
int led = 13;  
  
void setup() {  
    pinMode(led, OUTPUT);  
}  
  
// the loop routine runs over and over again forever:  
void loop() {  
    digitalWrite(led, HIGH);  
    delay(1000);  
    digitalWrite(led, LOW);  
    delay(1000);  
}
```

This simple program makes a LED connected to pin 13 blink

Installation

<http://arduino.cc/en/Main/Software>

Arduino Starter Kit



Arduino.cc/starterkit

Kit Contents

- 1Arduino Projects Book
(170 pages)
- 1Arduino UNO board
rev.3
- 1USB cable
- 1Breadboard
- 1 Easy-to-assemble
wooden base
- 19v battery snap
- 70 Solid core jumper
wires
- 2Stranded jumper wires
- 6Photoresistor
- 3Potentiometer
10kilohm
- 10 Pushbuttons
- 1Temperatursensor
- 1Tilt sensor
- 1LCD alphanumeric
(16x2 characters)
- 1LED (bright white)
- 1LED (RGB)
- 8LEDs (red)
- 8LEDs (green)
- 8LEDs (yellow)
- 3LEDs (blue)
- 1Small DC motor 6/9V
- 1Small servo motor
- 1Piezo capsule
- 1H-bridge motor
driver
- 20ptocouplers
- 5Transistor
- 2Mosfet transistors
- 5Capacitors 100nF
- 3Capacitors 100uF
- 5100pF capacitor
- 5Diodes
- 3Trasparent gels
(red, green, blue)
- 1Male pins strip
(40x1)
- 20 Resistors 220 ohm
- 5Resistors 560 ohm
- 5Resistors 1 kilohm
- 5Resistors 4.7 kilohm
- 10 Resistors 10
kilohm
- 5Resistors 1 megohm
- 5Resistors 10 megohm


SparkFun Arduino Starter Kit



Starter Kit Contents

- Arduino Uno - the latest Arduino USB board, fully assembled and tested.
- 6' USB A to B cable - USB provides power for up to 500mA (enough for most projects) and is ample length to connect to your desktop or laptop USB port.
- Mini breadboard - Excellent for making circuits and connections off the Arduino. Breadboard may come in various colors.
- Male to Male jumper wires - These are high quality wires that allow you to connect the female headers on the Arduino to the components and breadboard.
- **Flex Sensor** - Originally designed for the Nintendo Power Glove, now you too can measure flex!
- **SoftPot** - Measure position along the softpot by looking at the change in resistance. It's like a touch sensitive volume slider.
- **Photocell** - A sensor to detect ambient light. Perfect for detecting when a drawer is opened or when night-time approaches.
- **Thermistor** - A sensor for detecting ambient temperature and temperature changes.
- **Tri-Color LED** - Because everyone loves a blinky. Use this LED to PWM mix any color you need.
- **Basic LEDs** - Light emitting diodes make great general indicators.
- **Linear trim pot** - Also known as a variable resistor, this is a device commonly used to control volume, contrast, and makes a great general user control input.
- **Buzzer** - Make wonderful, brain splitting noises, alarms, and possibly music!
- **12mm button** - Because big buttons are easier to hit.
- **330 Ohm Resistors** - 5 current limiting resistors for LEDs, and strong pull-up resistors.
- **10k Ohm Resistors** - These make excellent pull-ups, pull-downs, and current limiters.


SparkFun Inventors Kit for Arduino (SIK)

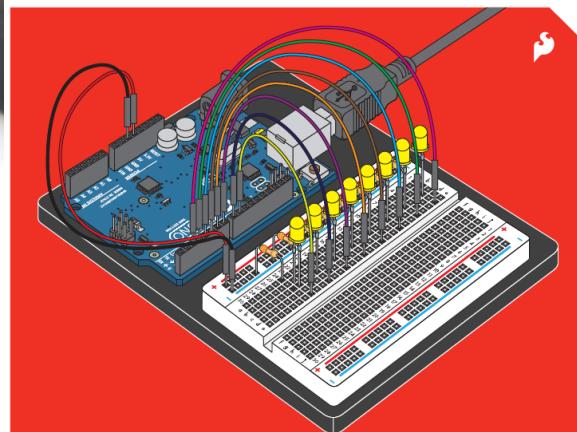

sparkfun.com/sikcode

SIK GUIDE


Your Guide to the SparkFun Inventor's Kit for Arduino

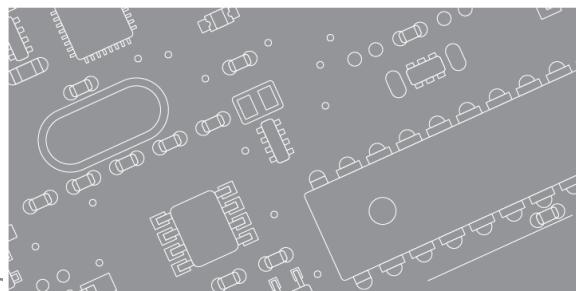

SIK Kit Contents

- Arduino Uno R3
- Arduino and Breadboard Holder
- New and Improved SIK Manual
- New and Improved SIK Carrying Case
- Translucent Red Bread Board
- 74HC595 Shift Register
- 2N2222 Transistors
- 1N4148 Diodes
- DC Motor with wires
- Small Servo
- 5V Relay
- TMP36 Temp Sensor
- Flex sensor
- Softpot
- 6' USB Cable
- Jumper Wires
- Photocell
- Tri-color LED
- Red and Yellow LEDs
- 10K Trimpot
- Piezo Buzzer
- Big 12mm Buttons
- 330 and 10K Resistors



Electronics

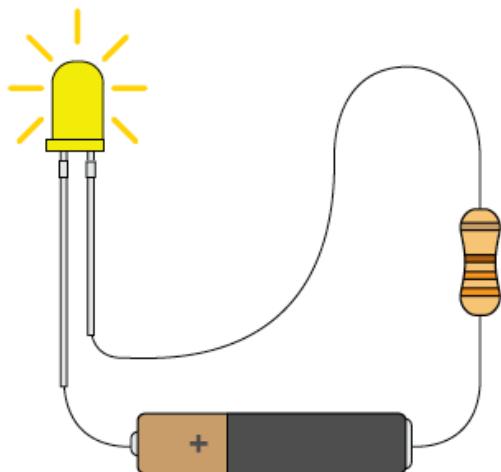



Ohms Law

$$U=RI$$



Resistor

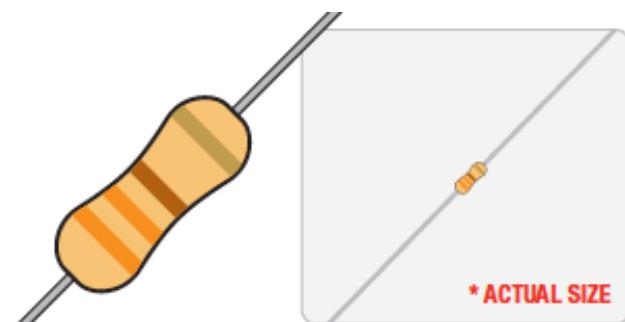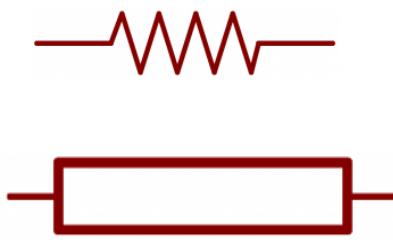

Diode

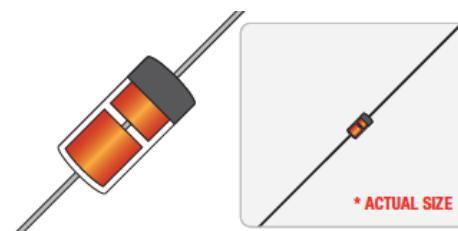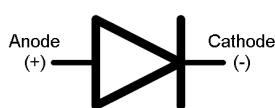


Transistor

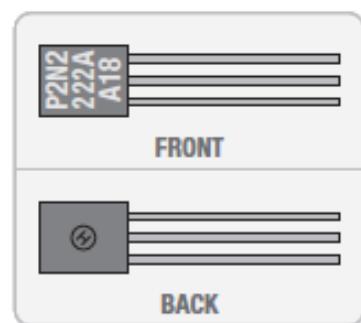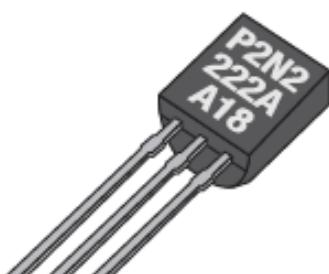


Resistors

Serial:

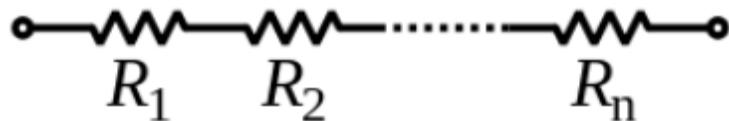

$$R_{\text{eq}} = R_1 + R_2 + \dots + R_n$$

Parallel:

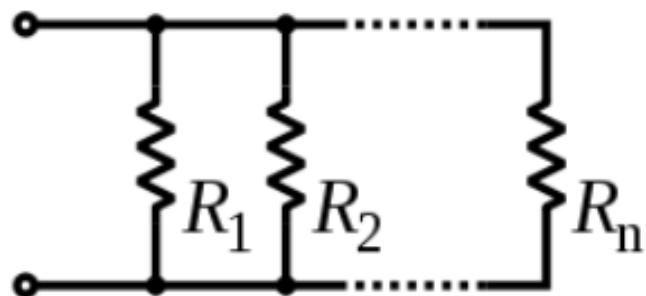


$$\frac{1}{R_{\text{eq}}} = \frac{1}{R_1} + \frac{1}{R_2} + \dots + \frac{1}{R_n}$$

If we have 2 in parallel:

$$R_{\text{eq}} = R_1 \parallel R_2 = \frac{R_1 R_2}{R_1 + R_2}$$

Resistors

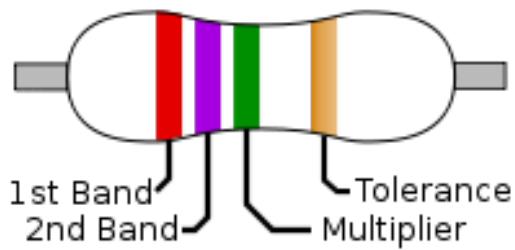

To distinguish left from right there is a gap between the C and D bands.



- band A is first significant figure of component value (left side)
- band B is the second significant figure (Some precision resistors have a third significant figure, and thus five bands.)
- band C is the decimal multiplier
- band D if present, indicates tolerance of value in percent (no band means 20%)

Color	Significant figures	Multiplier	Tolerance		Temp. Coefficient (ppm/K)	
Black	0	$\times 10^0$	–		250	U
Brown	1	$\times 10^1$	$\pm 1\%$	F	100	S
Red	2	$\times 10^2$	$\pm 2\%$	G	50	R
Orange	3	$\times 10^3$	–		15	P
Yellow	4	$\times 10^4$	($\pm 5\%$)	–	25	Q
Green	5	$\times 10^5$	$\pm 0.5\%$	D	20	Z
Blue	6	$\times 10^6$	$\pm 0.25\%$	C	10	Z
Violet	7	$\times 10^7$	$\pm 0.1\%$	B	5	M
Gray	8	$\times 10^8$	$\pm 0.05\% (\pm 10\%)$	A	1	K
White	9	$\times 10^9$	–		–	
Gold	–	$\times 10^{-1}$	$\pm 5\%$	J	–	
Silver	–	$\times 10^{-2}$	$\pm 10\%$	K	–	
None	–	–	$\pm 20\%$	M	–	

For example, a resistor with bands of yellow, violet, red, and gold will have first digit 4 (yellow), second digit 7 (violet), followed by 2 (red) zeros: 4,700 ohms. Gold signifies that the tolerance is $\pm 5\%$, so the real resistance could lie anywhere between 4,465 and 4,935 ohms.


Arduino TinkerKit

No Wiring and breadboard is needed, just
“plug and play”

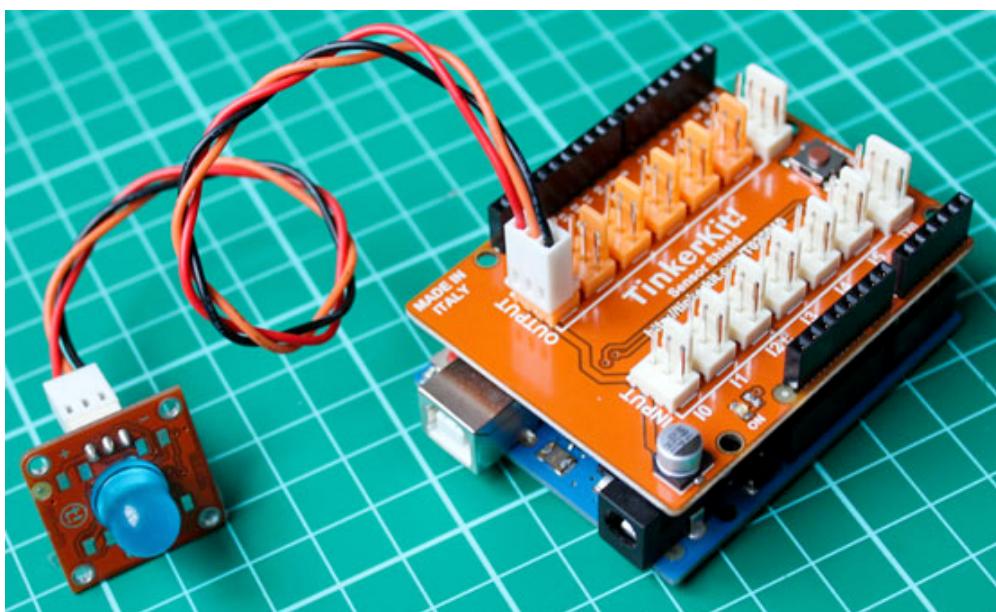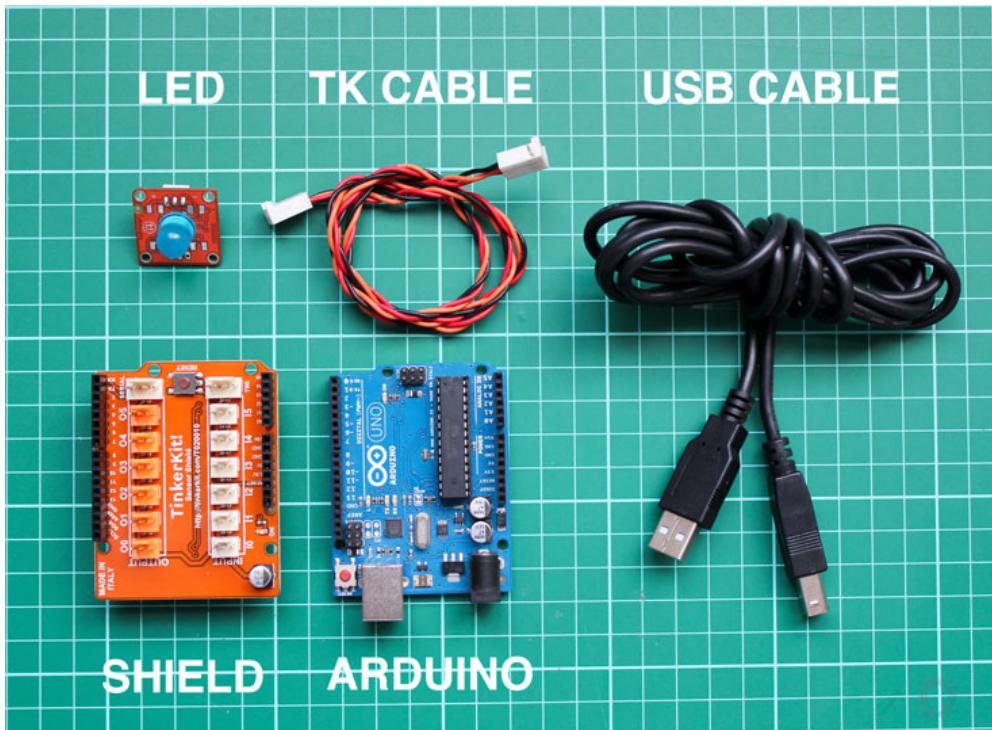


The TinkerKit Shield is mounted on top of the Arduino board

TinkerKit Overview

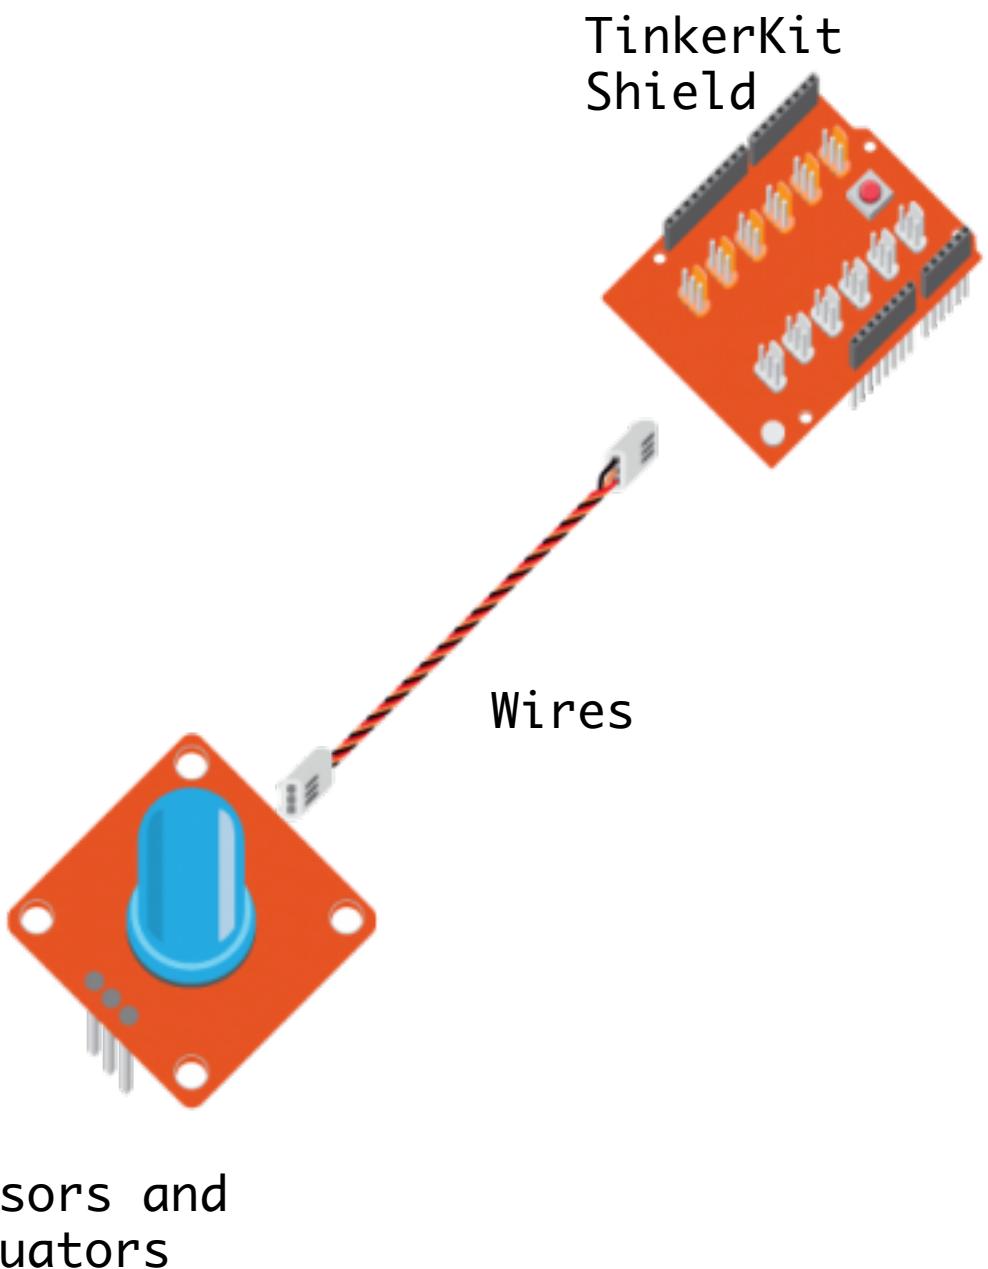


TinkerKit Sensors

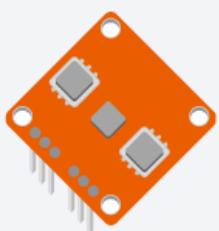


Accelerometer




Button

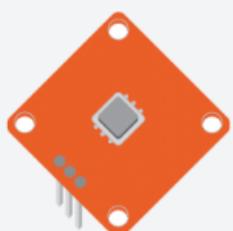


Gyroscope 1x

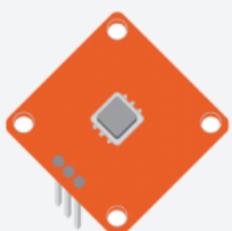

Gyroscope 4x

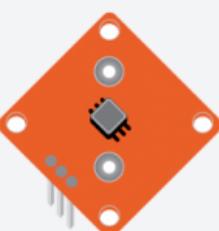


Hall

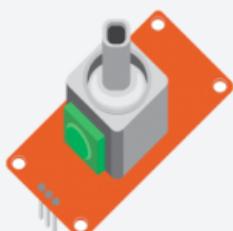


Joystick



Light Sensor

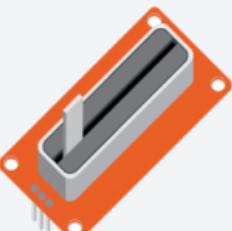


Linear Pot

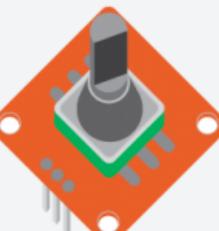

Rotary Pot



Thermistor

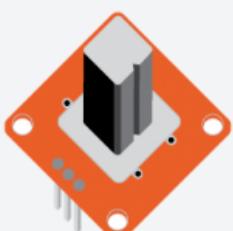

Tilt



Touch


TinkerKit Actuators




Installation

<http://www.tinkerkit.com>

Examples

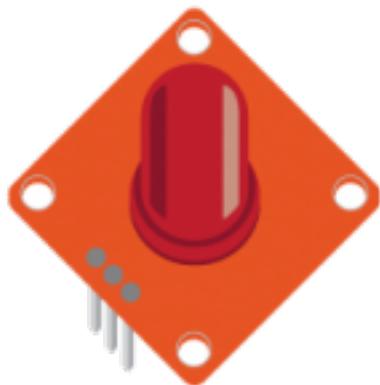


1. LED
2. Push Button
3. Temperature
4. Potentiometer

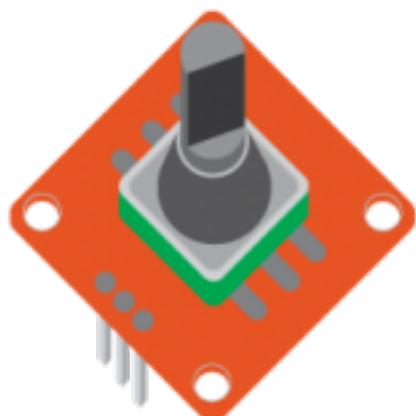



LED

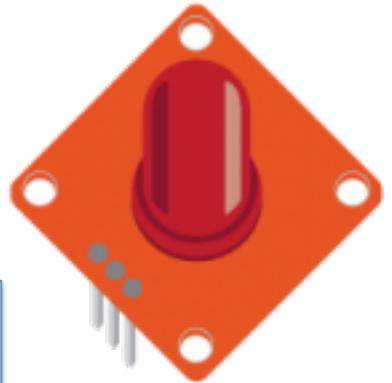

```
// include the TinkerKit library
#include <TinkerKit.h>

// creating the object 'led' that belongs to
// the 'TKLed' class
TKLed led(00);

void setup() {
//nothing here
}

void loop()
{
    led.on();          // set the LED on
    delay(1000);       // wait for a second
    led.off();         // set the LED off
    delay(1000);       // wait for a second
}
```

Push Button



This module is a **SENSOR**. The connector is an **OUTPUT** which must be connected to one of the **INPUT** connectors on the **TinkerKit Shield**.



```
// include the TinkerKit library
#include <TinkerKit.h>

// make a 'button' object that belongs to the 'TKButton' class
TKButton button(I0);

// make a 'button' object that belongs to the 'TKLed' class
TKLed led(O0);

void setup() {
//nothing here
}

void loop()
{
    // check the switchState of the button
    if (button.readSwitch() == HIGH) {
        led.on();
    }
    else {
        led.off();
    }
}
```

Temperature

The **Thermistor** is a resistor whose resistance varies significantly (more than in standard resistors) with temperature.

Output: This module's output approaches 5v as the temperature increases. As the temperature decreases, it approaches 0V. When connected to an input on the Arduino using the TinkerKit Shield, expect to read values between 0 and 1023



```
// include the TinkerKit library
#include <TinkerKit.h>

// creating the object 'therm' that belongs to the 'TKThermistor' class
TKThermistor therm(I0);

// temperature readings are returned in float format
float C, F;

void setup()
{
    // initialize serial communications at 9600 bps
    Serial.begin(9600);
}

void loop()
{
    // Reading the temperature in Celsius degrees and store in the C variable
    C = therm.readCelsius();
    // Reading the temperature in Fahrenheit degrees and store in the F variable
    F = therm.readFahrenheit();


    // Print the collected data in a row on the Serial Monitor
    Serial.print("Analog reading: ");
    // Reading the analog value from the thermistor
    Serial.print(therm.read());
    Serial.print("\tC: ");
    Serial.print(C);
    Serial.print("\tF: ");
    Serial.println(F);

    // Wait one second before get another temperature reading
    delay(1000);
}
```

Potentiometer

A **Potentiometer** is a commonly used variable resistor. Turning the knob, you vary the output voltage between 0 and 5V. This value is sent through the middle pin of the pot.

Output: This module outputs 5v when turned in one direction, and 0v when turned in the opposite way. When connected to an input on the Arduino using the TinkerKit Shield, you can expect to read values between 0 and 1023.

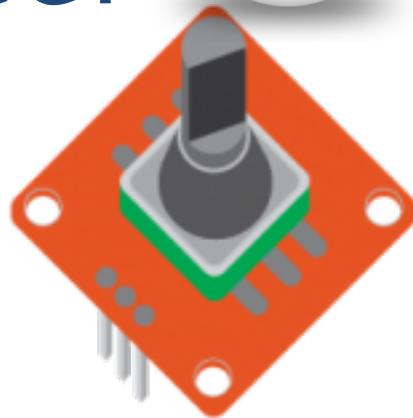

```
#include <TinkerKit.h>

// creating the object 'pot' that belongs to the
// 'TKPotentiometer' class
TKPotentiometer pot(I0);

// creating the object 'led' that belongs to the
// 'TKLed' class
TKLed led(O0);

int brightnessVal = 0; // value read from the pot

void setup() {
    // initialize serial communications at 9600 bps
    Serial.begin(9600);
}

void loop() {
    // read the potentiometer's value:
    brightnessVal = pot.read();

    // set the led brightness
    led.brightness(brightnessVal);

    // print the results to the serial monitor:
    Serial.print("brightness = " );
    Serial.println(brightnessVal);

    // wait 10 milliseconds before the next loop
    delay(10);
}
```


Exercises

1. Thermostat:


- Turn a led on when the temperature is below a value.
- Read the threshold value from a potentiometer

Arduino Examples

Push Button

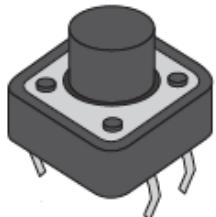


LED (5mm)
(Light Emitting Diode)

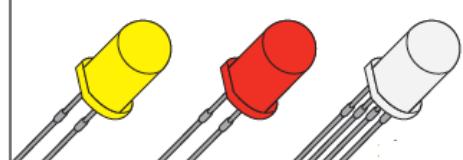


1. LED
2. Push Button
3. Temperature
4. Potentiometer
5. PWM
6. Servo Motor
7. DC Motor
8. Relay


Servo

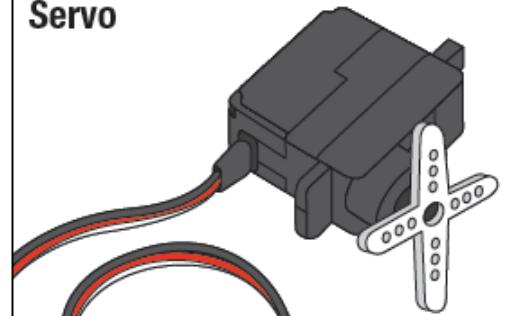

Potentiometer

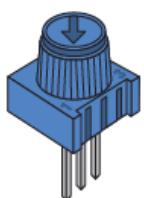


Temp. Sensor
(TMP36)

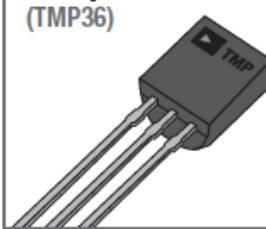



LED

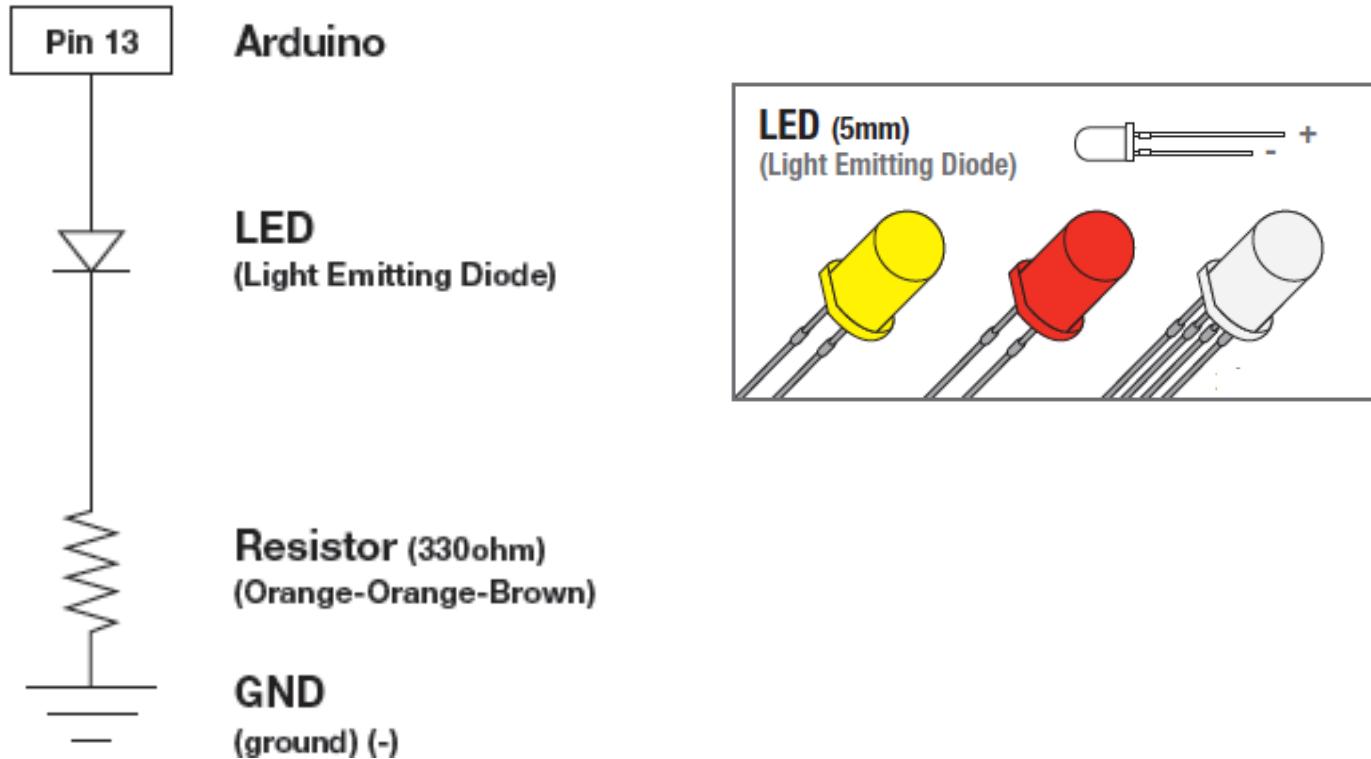


```
int led = 13;

void setup() {
  // initialize the digital pin as an output.
  pinMode(led, OUTPUT);
}

// the loop routine runs over and over again forever:
void loop() {
  digitalWrite(led, HIGH);      // turn the LED on (HIGH is the voltage level)
  delay(1000);                // wait for a second
  digitalWrite(led, LOW);       // turn the LED off by making the voltage LOW
  delay(1000);                // wait for a second
}
```




LED cont.

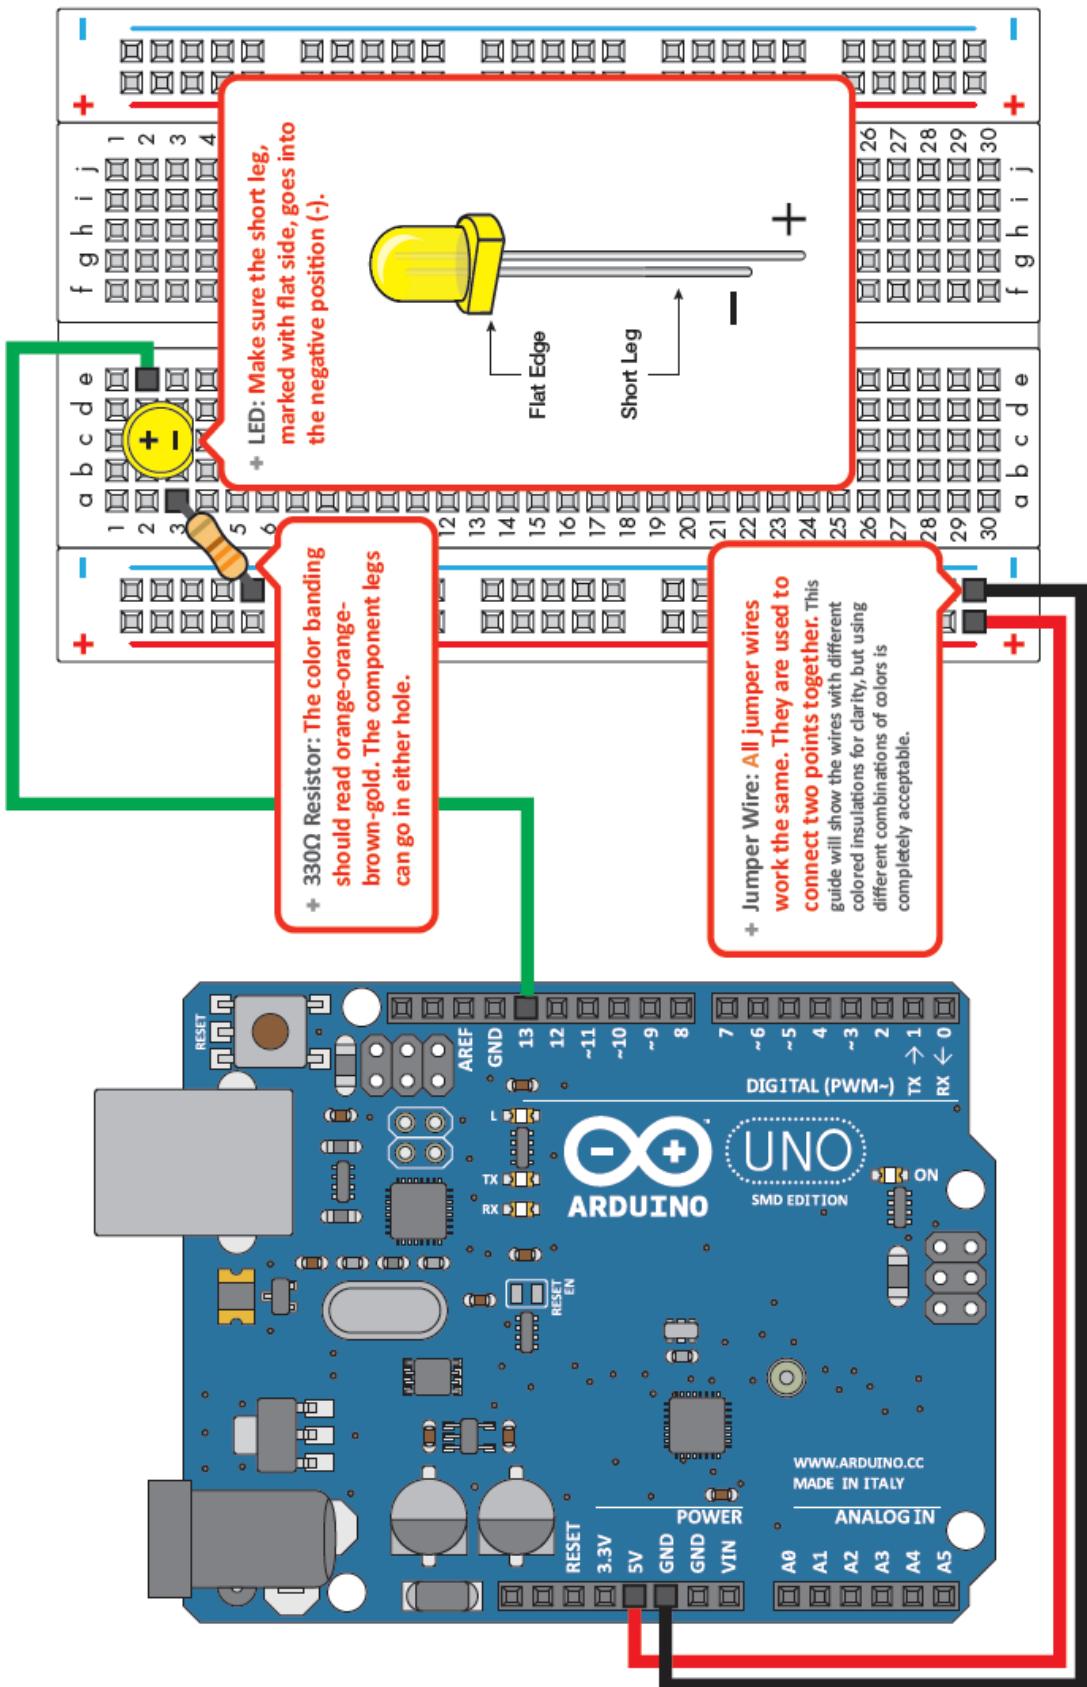

Push Button



Push Button

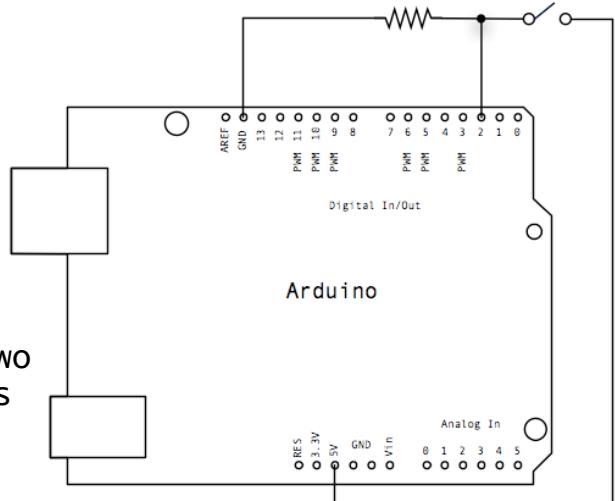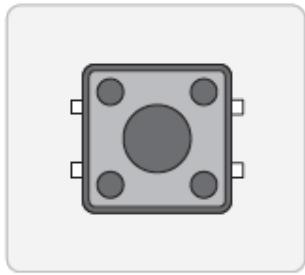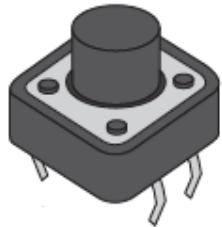

Pushbuttons or switches connect two points in a circuit when you press them. This example turns on the built-in LED on pin 13 when you press the button.

```
const int buttonPin = 2;          // the number of the pushbutton pin
const int ledPin = 13;           // the number of the LED pin

// variables will change:
int buttonState = 0;            // variable for reading the pushbutton
status

void setup() {
  // initialize the LED pin as an output:
  pinMode(ledPin, OUTPUT);
  // initialize the pushbutton pin as an input:
  pinMode(buttonPin, INPUT);
}




void loop(){
  // read the state of the pushbutton value:
  buttonState = digitalRead(buttonPin);

  // check if the pushbutton is pressed.
  // if it is, the buttonState is HIGH:
  if (buttonState == HIGH) {
    // turn LED on:
    digitalWrite(ledPin, HIGH);
  }
  else {
    // turn LED off:
    digitalWrite(ledPin, LOW);
  }
}
```



Temperature

Temp. Sensor
(TMP36)

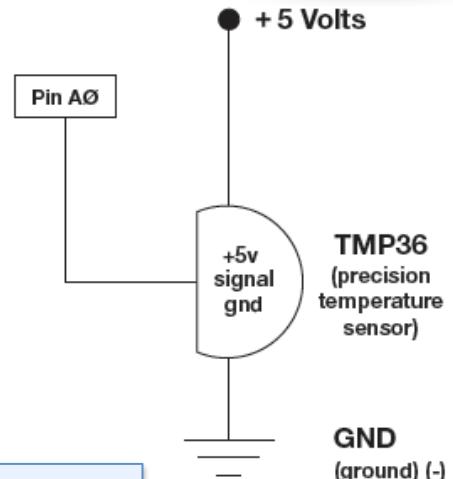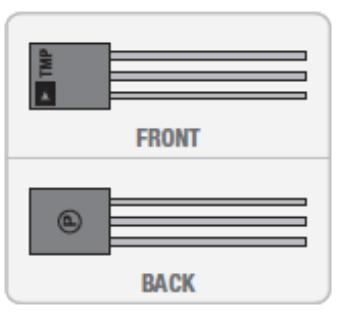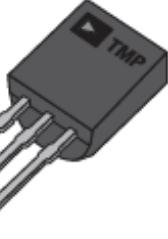

```
const int temperaturePin = 0;

void setup()
{
  Serial.begin(9600);
}

void loop()
{

  float voltage, degreesC, degreesF;

  // First we'll measure the voltage at the analog pin. Normally
  // we'd use analogRead(), which returns a number from 0 to 1023.
  // Here we've written a function (further down) called
  // getVoltage() that returns the true voltage (0 to 5 Volts)
  // present on an analog input pin.

  voltage = getVoltage(temperaturePin);

  // Now we'll convert the voltage to degrees Celsius.
  // This formula comes from the temperature sensor datasheet:

  degreesC = (voltage - 0.5) * 100.0;

  // While we're at it, let's convert degrees Celsius to Fahrenheit.
  // This is the classic C to F conversion formula:

  degreesF = degreesC * (9.0/5.0) + 32.0;

  // Now we'll use the serial port to print these values
  // to the serial monitor!

  Serial.print("voltage: ");
  Serial.print(voltage);
  Serial.print(" deg C: ");
  Serial.print(degreesC);
  Serial.print(" deg F: ");
  Serial.println(degreesF);

  delay(1000); // repeat once per second (change as you wish!)
}


float getVoltage(int pin)
{

  return (analogRead(pin) * 0.004882814);

  // This equation converts the 0 to 1023 value that analogRead()
  // returns, into a 0.0 to 5.0 value that is the true voltage
  // being read at that pin.
}
```




Datasheet:
http://dlmnhqip6v2uc.cloudfront.net/datasheets/Sensors/Temp/TMP35_36_37.pdf

Temperature cont.

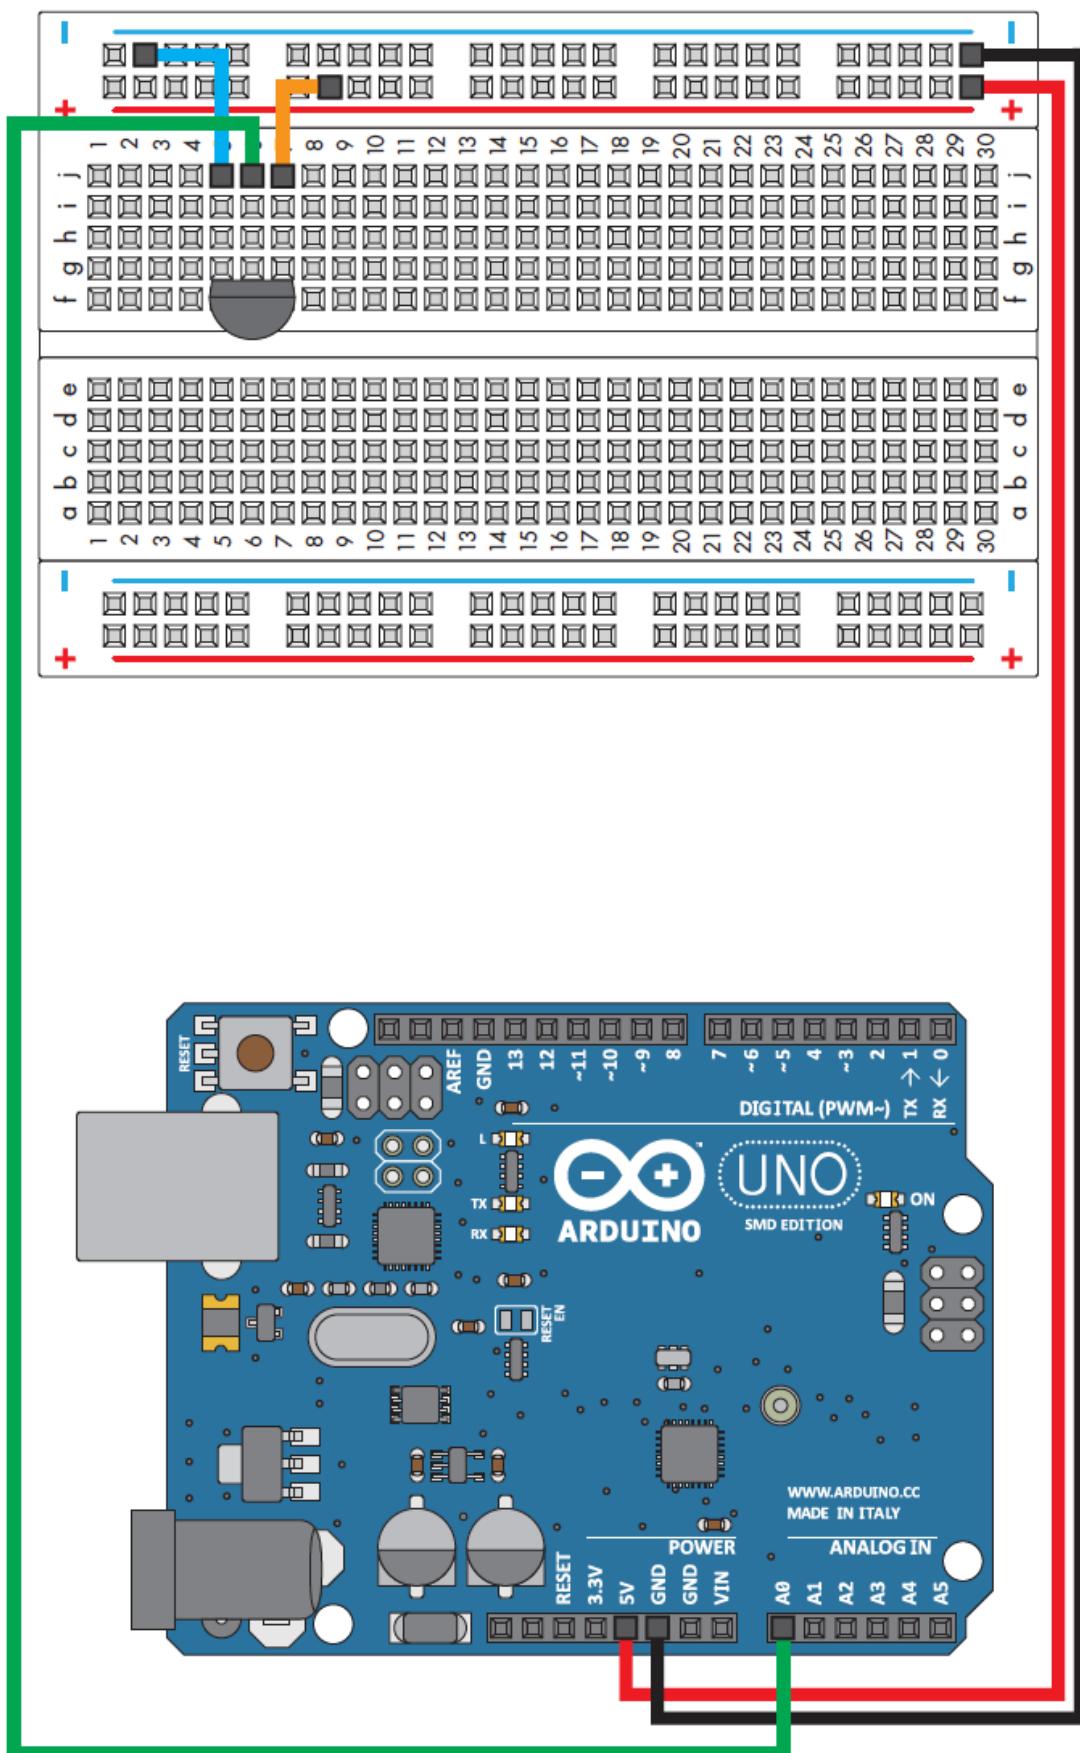

Potentiometer

Potentiometer

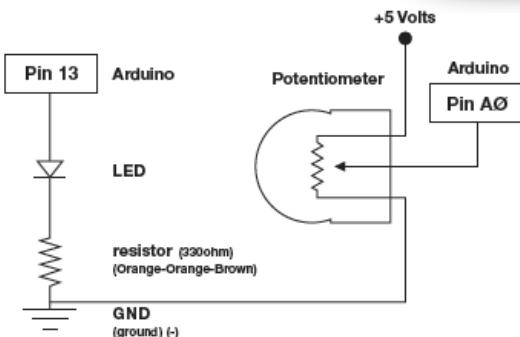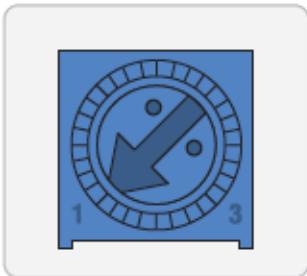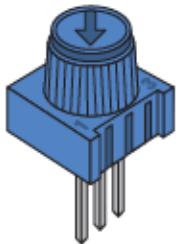

Measure the position of a potentiometer and use it to control the blink rate of an LED.

Turn the knob to make it blink faster or slower!

```

int sensorPin = 0;      // The potentiometer is connected to
analog pin 0
int ledPin = 13;        // The LED is connected to digital
pin 13

void setup() // this function runs once when the sketch
starts up
{

    pinMode(ledPin, OUTPUT);
}

void loop()
{

    int sensorValue;


    sensorValue = analogRead(sensorPin);

    digitalWrite(ledPin, HIGH);      // Turn the LED on
    delay(sensorValue);           // Pause for sensorValue
                                  // milliseconds

    digitalWrite(ledPin, LOW);      // Turn the LED off
    delay(sensorValue);           // Pause for sensorValue
}

```

Potentiometer cont.

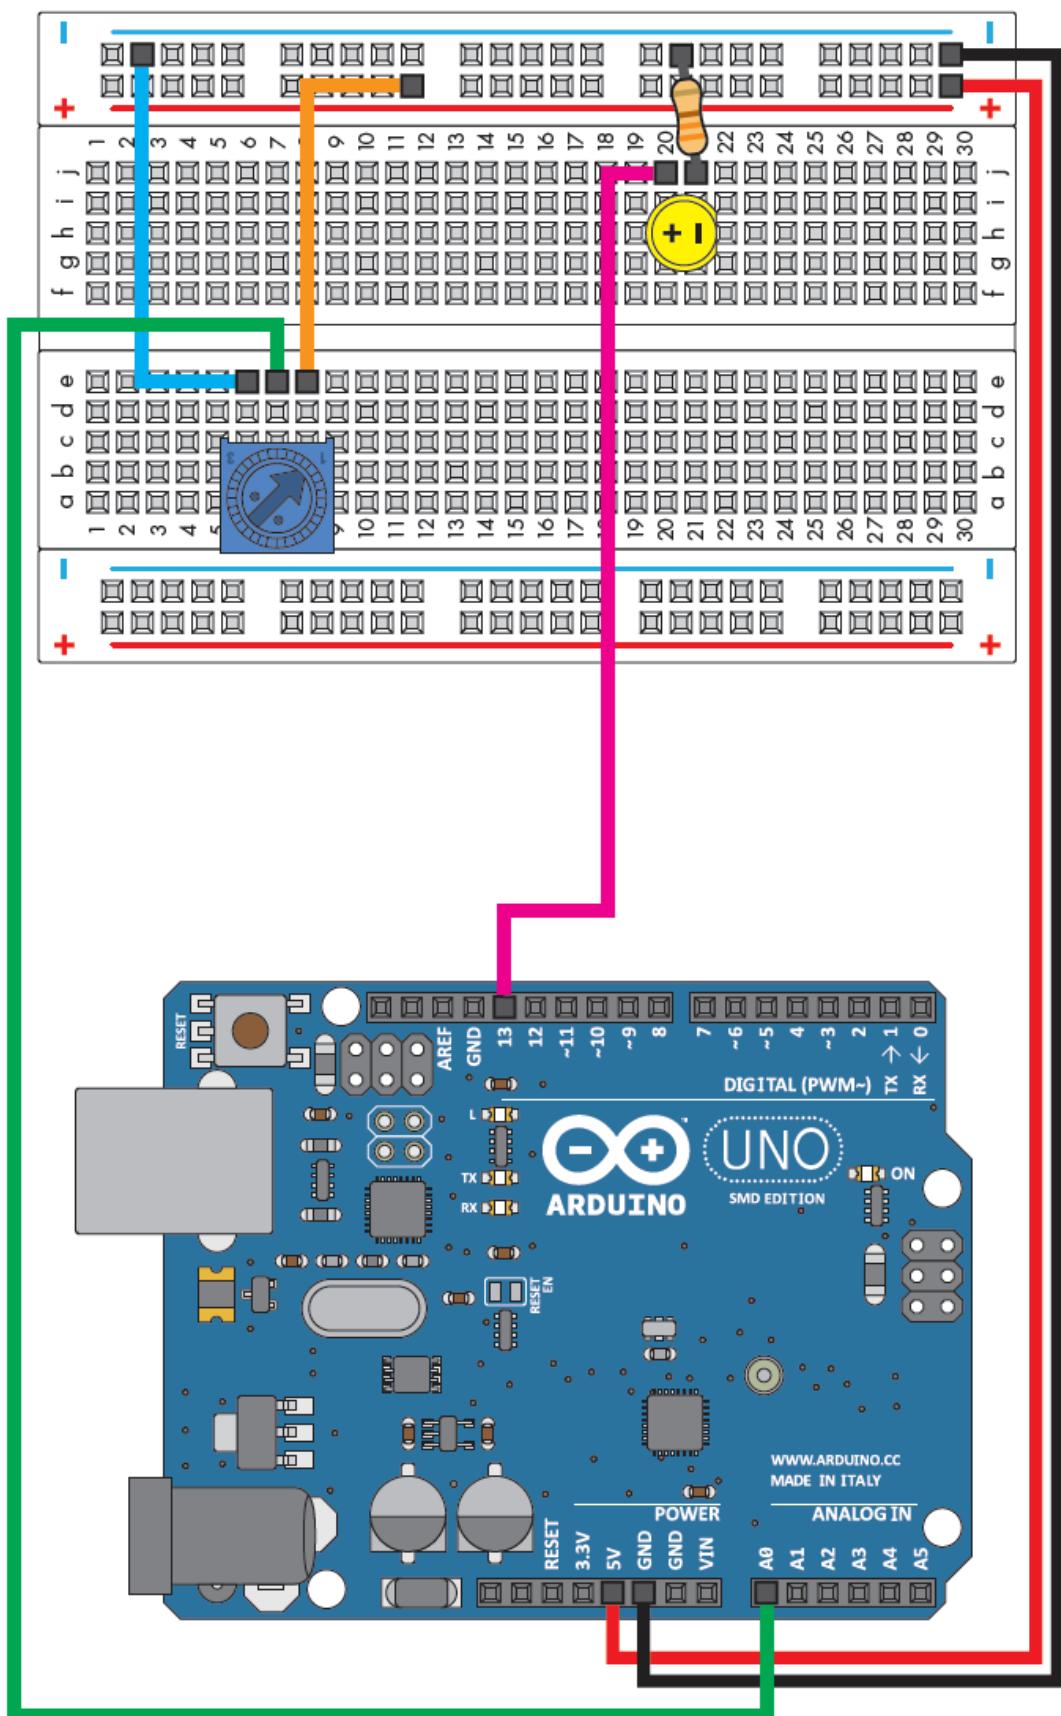

PWM


PWM – Pulse Width Modulation

The shocking truth behind `analogWrite()`:



We've seen that the Arduino can read analog voltages (voltages between 0 and 5 Volts) using the `analogRead()` function. Is there a way for the Arduino to output analog voltages as well?

The answer is no... and yes. The Arduino does not have a true analog voltage output. But, because the Arduino is so fast, it can fake it using something called **PWM ("Pulse-Width Modulation")**.

The Arduino is so fast that it can blink a pin on and off almost 1000 times per second. PWM goes one step further by varying the amount of time that the blinking pin spends HIGH vs. the time it spends LOW. If it spends most of its time HIGH, a LED connected to that pin will appear bright. If it spends most of its time LOW, the LED will look dim. Because the pin is blinking much faster than your eye can detect, the Arduino creates the illusion of a "true" analog output.

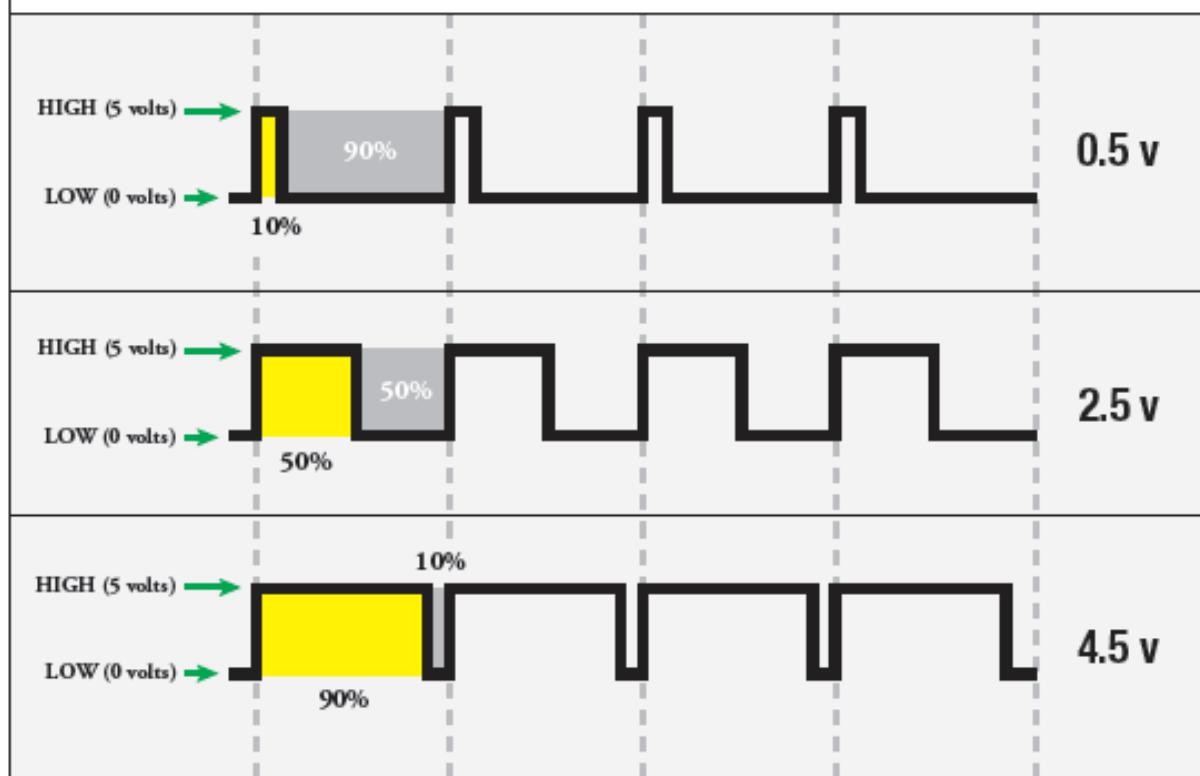

Servo Motor

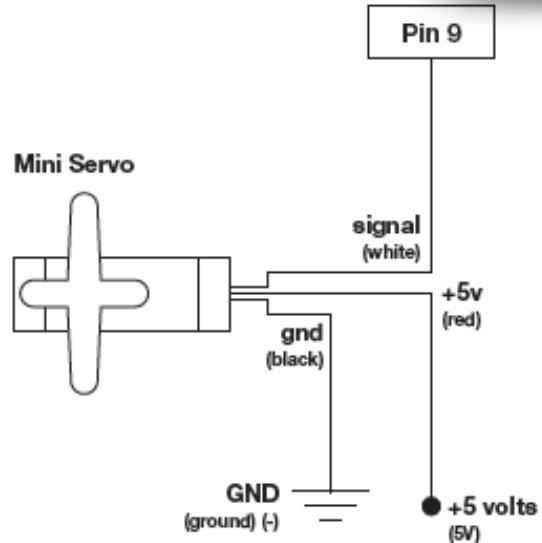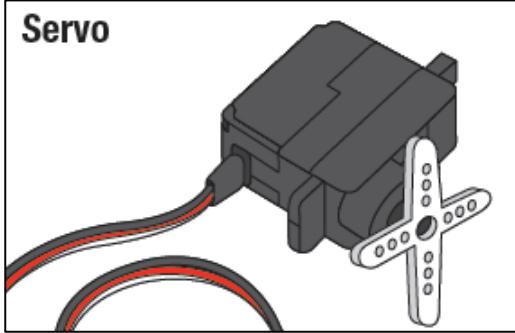

```
#include <Servo.h> // servo library

Servo servol; // servo control object

void setup()
{
  servol.attach(9);
}


void loop()
{
  int position;

  // To control a servo, you give it the angle you'd like it
  // to turn to. Servos cannot turn a full 360 degrees, but you
  // can tell it to move anywhere between 0 and 180 degrees.

  servol.write(90); // Tell servo to go to 90 degrees
  delay(1000); // Pause to get it time to move
  servol.write(180); // Tell servo to go to 180 degrees
  delay(1000); // Pause to get it time to move
  servol.write(0); // Tell servo to go to 0 degrees
  delay(1000); // Pause to get it time to move
}
```



By varying the pulse of voltage a servo receives, you can move a servo to a specific position. For example, a pulse of 1.5 milliseconds will move the servo 90 degrees. In this circuit, you'll learn how to use PWM (pulse width modulation) to control and rotate a servo.

Servo Motor cont.

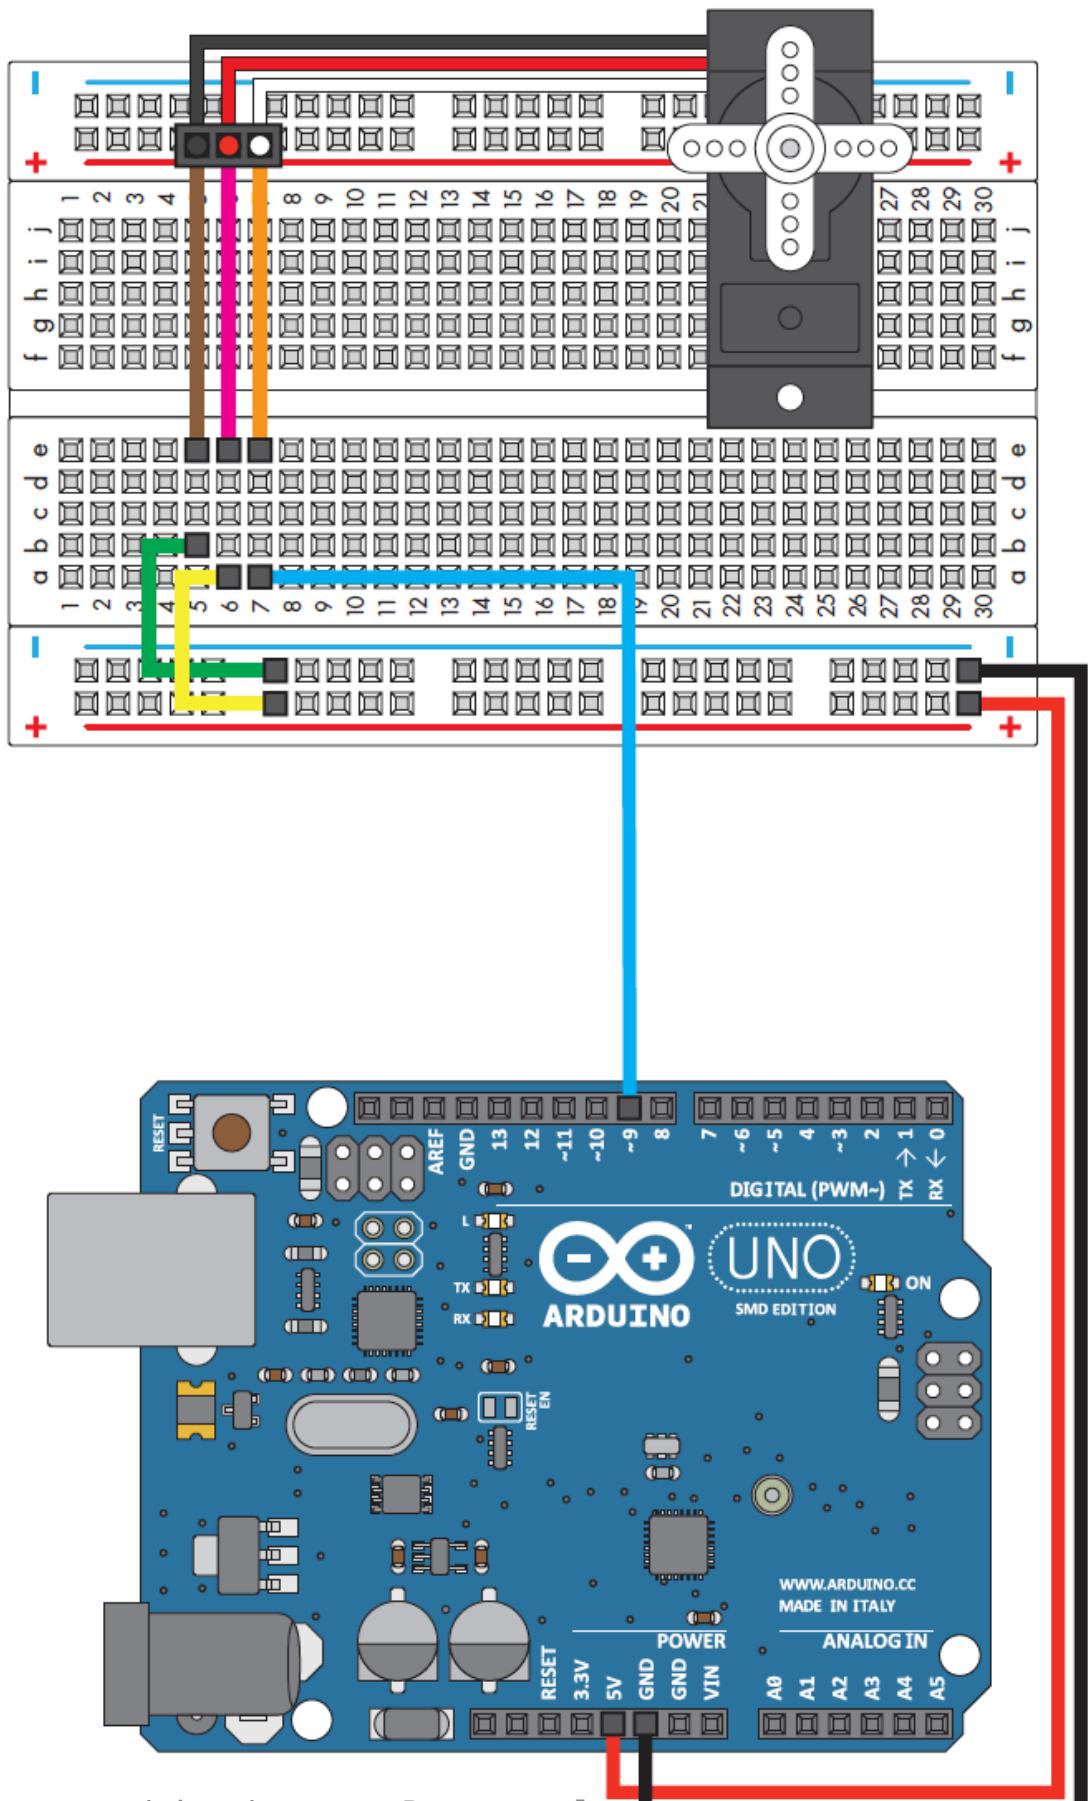

DC Motor

In order to make a DC motor work with Arduino we need to use a transistor, which can switch a larger amount of current than the Arduino can handle

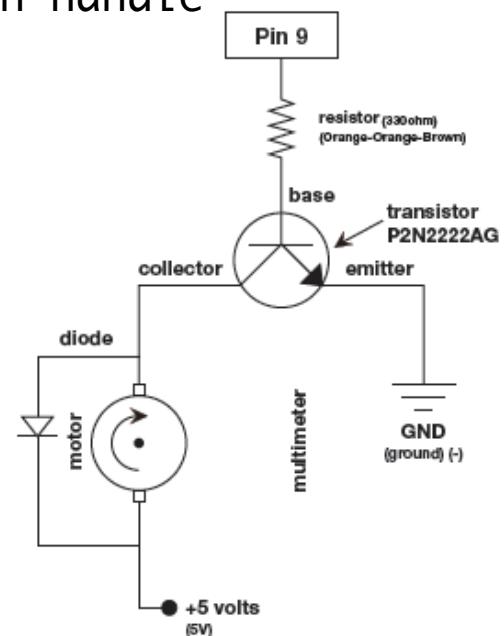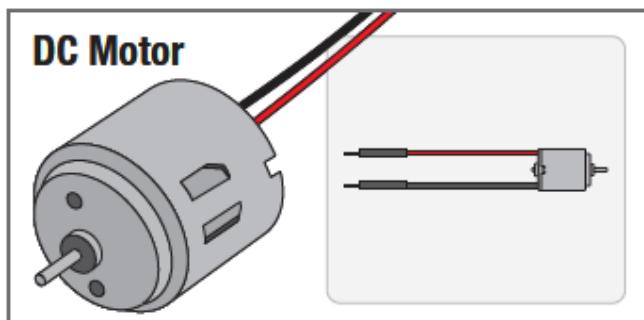

```

const int motorPin = 9;

void setup()
{
  pinMode(motorPin, OUTPUT);
  Serial.begin(9600);
}


void loop()
{
  motorOnThenOff();
}

void motorOnThenOff()
{
  int onTime = 3000; // milliseconds to turn the motor on
  int offTime = 3000; // milliseconds to turn the motor off

  digitalWrite(motorPin, HIGH); // turn the motor on (full speed)
  delay(onTime); // delay for onTime milliseconds
  digitalWrite(motorPin, LOW); // turn the motor off
  delay(offTime); // delay for offTime milliseconds
}

```

DC Motor cont.

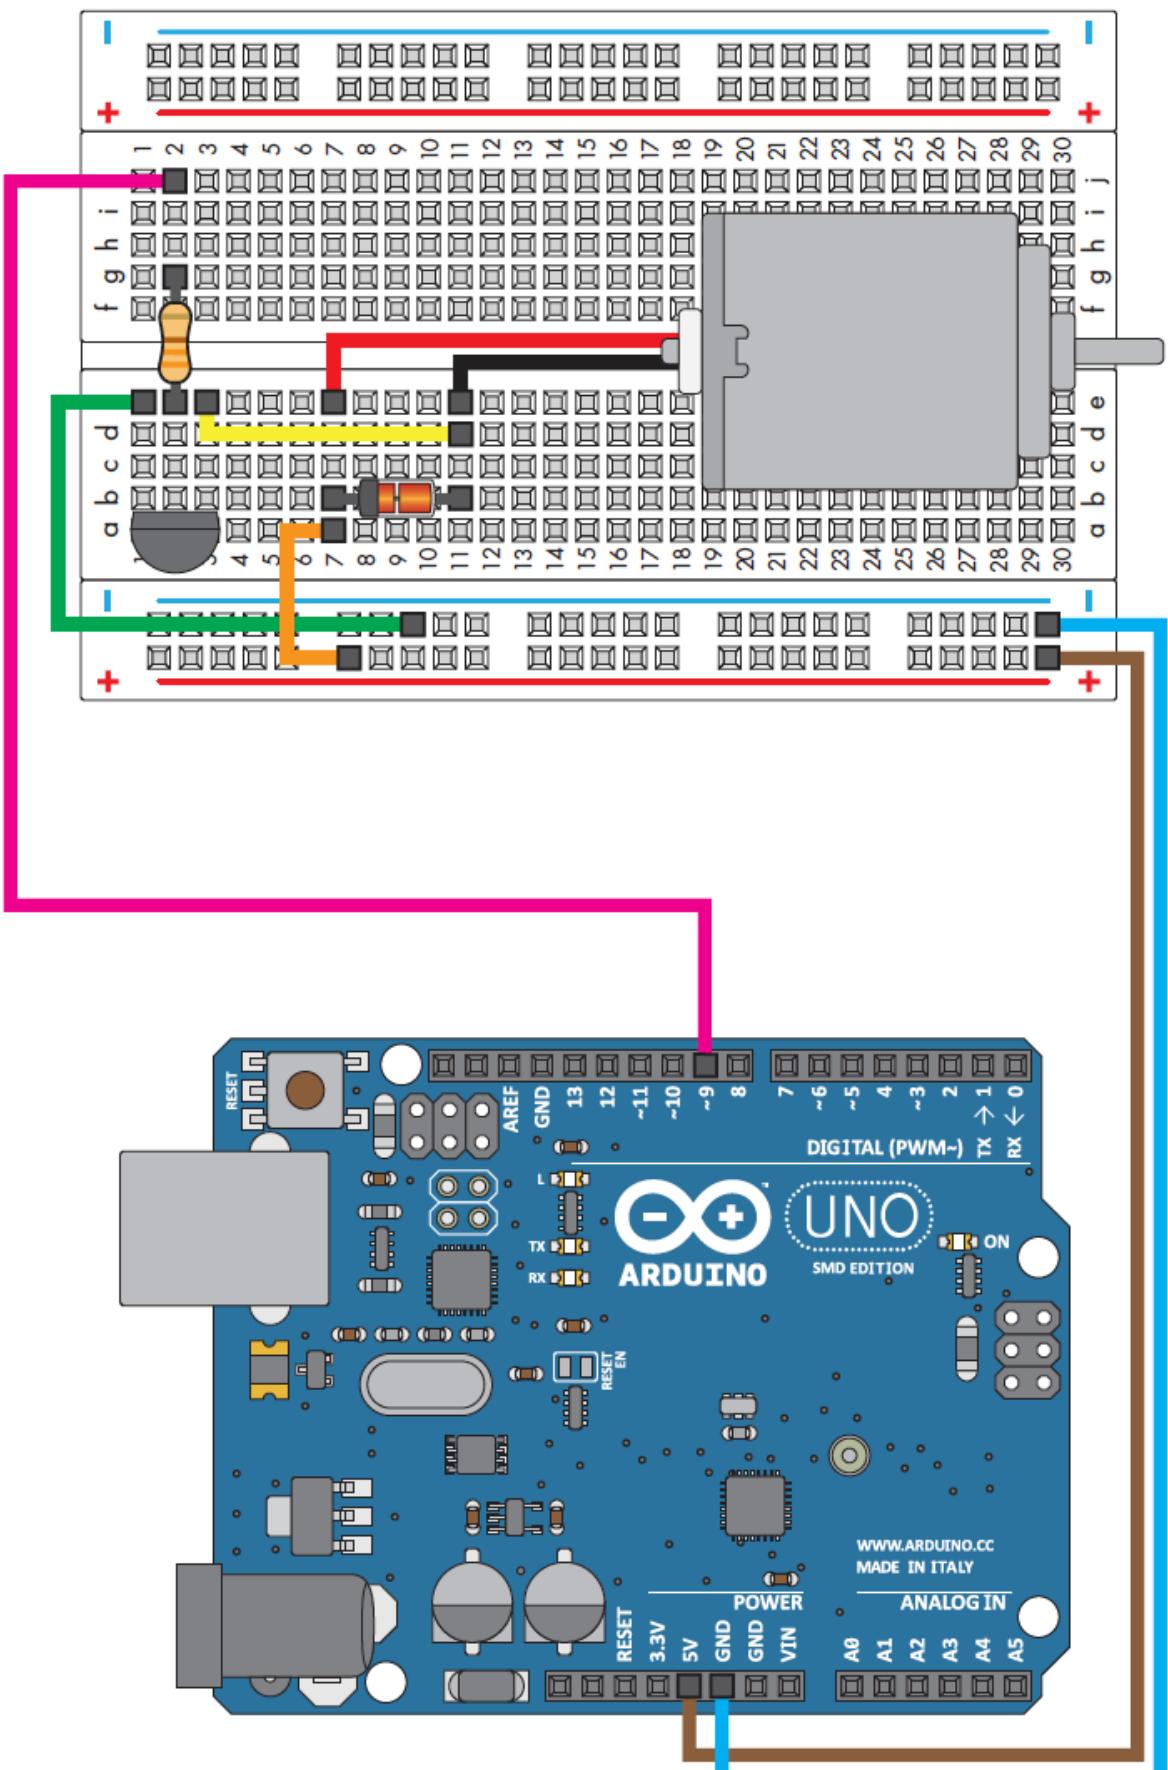

DC Motor cont.

Here we'll use pulse-width modulation (PWM) to vary the speed of a motor.

```
const int motorPin = 9;

void setup()
{
    pinMode(motorPin, OUTPUT);

    Serial.begin(9600);
}

void loop()
{

    motorOnThenOffWithSpeed();

}

// This function alternates between two speeds.
// Try different values to affect the timing and speed.

void motorOnThenOffWithSpeed()
{
    int Speed1 = 200;    // between 0 (stopped) and 255 (full speed)
    int Time1 = 3000;   // milliseconds for speed 1

    int Speed2 = 50;    // between 0 (stopped) and 255 (full speed)
    int Time2 = 3000;   // milliseconds to turn the motor off

    analogWrite(motorPin, Speed1);    // turns the motor On
    delay(Time1);                  // delay for onTime milliseconds
    analogWrite(motorPin, Speed2);    // turns the motor Off
    delay(Time2);                  // delay for offTime milliseconds
}
```

Relay




Exercises

1. Thermostat:

- Turn a led on when the temperature is below a value.
- Read the threshold value from a potentiometer

LabVIEW Interface for Arduino Toolkit

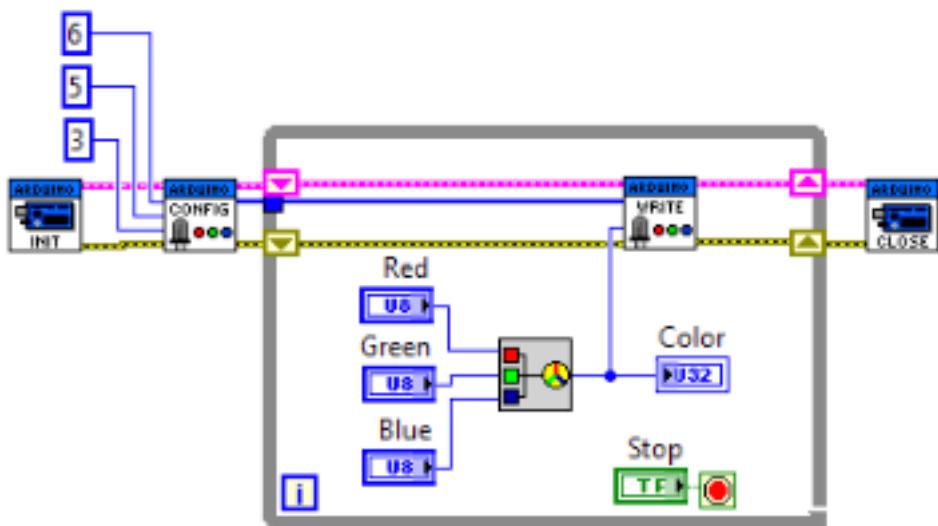

<https://decibel.ni.com/content/groups/labview-interface-for-arduino>

The LabVIEW Interface for Arduino (LIFA) Toolkit is a FREE download that allows developers to acquire data from the Arduino microcontroller and process it in the LabVIEW Graphical Programming environment.

Installation

<https://decibel.ni.com/content/groups/labview-interface-for-arduino>

Examples

1. LED
2. Push Button
3. Temperature
4. Potentiometer

Exercises

1. Thermostat:

- Turn a led on when the temperature is below a value.
- Read the threshold value from a potentiometer

References



- Arduino Web Site: <http://arduino.cc>
- TinkerKit Web Site:
<http://www.tinkerkit.com>
- LabVIEW Interface for Arduino:
<https://decibel.ni.com/content/groups/labview-interface-for-arduino>
- Arduino:
<http://home.hit.no/~hansha/?equipment=arduino>



Hans-Petter Halvorsen, M.Sc.
Telemark University College
Faculty of Technology
Department of Electrical Engineering, Information
Technology and Cybernetics



E-mail: hans.p.halvorsen@hit.no
Blog: <http://home.hit.no/~hansha/>