BLUETOOTH Characteristics

Goals of this challenge

- Flashing the firmware
- Solving the challenge

Challenge Description: One time password bluetooth device. This IoT device should work with an android application, but you don't have it. The goal is to provide a screenshot of the password. Something is leaking on 0000ffe1.

Flashing the firmware

- Connect the DVID board to the computer using the USB AVR Programmer, and start the script
- When the AVR programming has completed, the board should restart and you should the following
- Flash.sh .-----

```
#!/bin/bash

if [[ ! -d "./DVID/" ]]; then
    git clone https://github.com/vulcainreo/DVID


fi

pushd ./DVID/trainings/bluetooth/characteristics/
avrdude -F -v -p atmega328p -P /dev/ttyUSB0 -c
usbasp -u -U
flash:w:characteristics.ino.with_bootloader.arduin
o_standard.hex
popd
```

Note:

Flashing the firmware

 Now, we will connect the DVID board to our computer using the USB AVR programmer, and start the script. When the AVR programming has completed, the board should restart and you should see the following

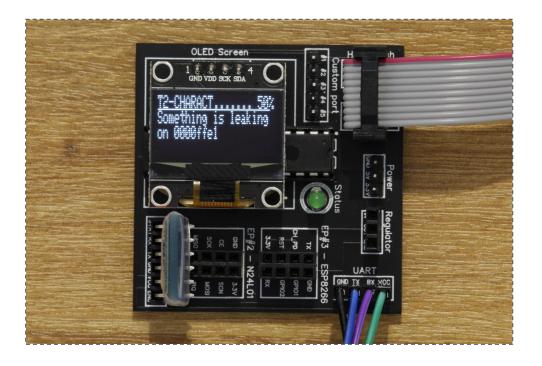

Note:

Avrdude for windows

https://github.com/mariusgreuel/avrdude/releases/download/v7.0-windows/avrdude-v7.0-windows-windows-arm64.zip

- In this challenge, the IoT device [DVID:characteristic]\$ bluetoothctl sends informations using bluetooth Agent registered characteristics on 0000ffe1
 [CHG] Controller B8:76:3F:AE:38:78
- Firstly, we need to do a **bluetooth** scan to find the device
- We can do this inside bluetoothctl using scan on command. (and scan off to stop)

```
[DVID:characteristic] 
[DVID:characteristic]$ bluetoothctl 
Agent registered 
[CHG] Controller B8:76:3F:AE:38:78 Pairable: yes 
[bluetooth]# scan on 
Discovery started 
[CHG] Controller B8:76:3F:AE:38:78 Discovering: yes 
[NEW] Device 00:13:AA:00:25:93 dvid-807 
[bluetooth]# scan off 
Discovery stopped 
[CHG] Controller B8:76:3F:AE:38:78 Discovering: no 
[CHG] Device 00:13:AA:00:25:93 TxPower is nil 
[CHG] Device 00:13:AA:00:25:93 RSSI is nil 
[bluetooth]#
```

- Now that we found the IoT device, we can connect to it by typing connect followed by the device's bluetooth address
- To use bluetooth characteristics, we need to use a specific menu, called gatt

```
[bluetooth]# connect 00:13:AA:00:25:93
Attempting to connect to 00:13:AA:00:25:93
[CHG] Device 00:13:AA:00:25:93 Connected: yes
Connection successful
[NEW] Primary Service (Handle 0x22a1)
        /org/bluez/hci0/dev 00 13 AA 00 25 93/service000c
        00001801-0000-1000-8000-00805f9b34fb
       Generic Attribute Profile
[NEW] Characteristic (Handle 0x22a1)
        /org/bluez/hci0/dev 00 13 AA 00 25 93/service000c/char000d
        00002a05-0000-1000-8000-00805f9b34fb
        Service Changed
[NEW] Descriptor (Handle 0x2134)
        /org/bluez/hci0/dev 00 13 AA 00 25 93/service000c/char000d/desc000f
       00002902-0000-1000-8000-00805f9b34fb
        Client Characteristic Configuration
[NEW] Primary Service (Handle 0x22a1)
        /org/bluez/hci0/dev 00 13 AA 00 25 93/service0010
        0000180a-0000-1000-8000-00805f9b34fb
        Device Information
[NEW] Characteristic (Handle 0x22a1)
        /org/bluez/hci0/dev_00_13_AA_00_25_93/service0010/char0011
        00002a23-0000-1000-8000-00805f9b34fb
        System ID
[NEW] Characteristic (Handle 0x22a1)
        /org/bluez/hci0/dev 00 13 AA 00 25 93/service0010/char0013
        00002a24-0000-1000-8000-00805f9b34fb
       Model Number String
[NEW] Characteristic (Handle 0x22a1)
        /org/bluez/hci0/dev 00 13 AA 00 25 93/service0010/char0015
        00002a25-0000-1000-8000-00805f9b34fb
```

- To access it in bluetoothctl, type menu gatt to enter the gatt menu and back to exit the menu
- In the gatt menu we have access to read [offset]
 many advanced features, such as listing attributes of a device, reading and writing data to bluetooth services

```
DVID:characteristic]
[dvid-807]# menu gatt
Menu gatt:
Available commands:
list-attributes [dev/local]
                                                  List attributes
select-attribute <attribute/UUID>
                                                  Select attribute
attribute-info [attribute/UUID]
                                                  Select attribute
                                                   Read attribute value
write <data=xx xx ...> [offset] [type]
                                                   Write attribute value
acquire-write
                                                   Acquire Write file descriptor
release-write
                                                  Release Write file descriptor
acquire-notify
                                                  Acquire Notify file descriptor
release-notify
                                                  Release Notify file descriptor
notify <on/off>
                                                  Notify attribute value
clone [dev/attribute/UUID]
                                                   Clone a device or attribute
register-application [UUID ...]
                                                   Register profile to connect
unregister-application
                                                  Unregister profile
                                                  Register application service.
register-service <UUID> [handle]
unregister-service <UUID/object>
                                                   Unregister application service
register-includes <UUID> [handle]
                                                  Register as Included service in.
<u>unregister-</u>includes <Service-UUID><Inc-UUID>
                                                  Unregister Included service.
register-characteristic <UUID> <Flags=read,write,notify...> [handle] Register applica
unregister-characteristic <UUID/object>
                                                  Unregister application characterist
register-descriptor <UUID> <Flags=read.write...> [handle] Register application descrip
unregister-descriptor <UUID/object>
                                                  Unregister application descriptor
back
                                                   Return to main menu
version
                                                  Display version
auit
                                                  Ouit program
exit
                                                   Quit program
help
                                                  Display help about this program
                                                   Print environment variables
```

 We will now list attributes offered by the bluetooth device using list-attributes command

```
dvid-8071#
dvid-807]#
dvid-8071# list-attributes
Primarv Service (Handle 0x0009)
       /org/bluez/hci0/dev 00 13 AA 00 25 93/service0023
       0000ffe0-0000-1000-8000-00805f9b34fb
       Unknown
Characteristic (Handle 0x5124)
       /org/bluez/hci0/dev 00 13 AA 00 25 93/service0023/char0024
       0000ffe1-0000-1000-8000-00805f9b34fb
       Unknown
Descriptor (Handle 0x0015)
       /org/bluez/hci0/dev 00 13 AA 00 25 93/service0023/char0024/desc0027
       00002901-0000-1000-8000-00805f9b34fb
       Characteristic User Description
Descriptor (Handle 0x0015)
       /org/bluez/hci0/dev 00 13 AA 00 25 93/service0023/char0024/desc0026
       00002902-0000-1000-8000-00805f9b34fb
       Client Characteristic Configuration
Primary Service (Handle 0xc920)
       /org/bluez/hci0/dev 00 13 AA 00 25 93/service0010
       0000180a-0000-1000-8000-00805f9b34fb
       Device Information
Characteristic (Handle 0x7ff4)
       /org/bluez/hci0/dev 00 13 AA 00 25 93/service0010/char0021
       00002a50-0000-1000-8000-00805f9b34fb
       PnP ID
Characteristic (Handle 0x7ff4)
       /org/bluez/hci0/dev_00_13_AA_00_25_93/service0010/char001f
       00002a2a-0000-1000-8000-00805f9b34fb
       IEEE 11073-20601 Regulatory Cert. Data List
Characteristic (Handle 0x7ff4)
        /ora/hluez/hcia/dev aa 13 AA aa 25 93/serviceaa1a/charaa1d
```

• Looking at the screen of the DVID device, we can see a message "Something is leaking on 0000ffe1", therefore we will try to interact with the characteristic 0000ffe1-0000-1000-8000-00805f9b34fb. To do this, we need to select the attribute using select-attribute <uuid> command

```
[DVID:characteristic]
[dvid-807]# select-attribute 0000ffe1-0000-1000-8000-00805f9b34fb
[dvid-807:/service0023/char0024]#
```

• Then we need to **acquire-notify** to connect to the stream and be able to read the values from the **service/characteristic**. We can then type read to read the stream of values coming from the **service/characteristic**.

```
[DVID:characteristic]
[dvid-807:/service0023/char0024]# acquire-notify
[CHG] Attribute /org/bluez/hci0/dev_00_13_AA_00_25_93/service0023/char0024 NotifyAcquired: yes
AcquireNotify success: fd 7 MTU 23
[dvid-807:/service0023/char0024]# read
Attempting to read /org/bluez/hci0/dev_00_13_AA_00_25_93/service0023/char0024
[CHG] Attribute /org/bluez/hci0/dev_00_13_AA_00_25_93/service0023/char0024 Value:
01
01
[CHG] /org/bluez/hci0/dev_00_13_AA_00_25_93/service0023/char0024 Notification:
50 61 73 73 77 6f 72 64 20 3a 20 43 6f 77 0d 0a Password:
[CHG] /org/bluez/hci0/dev_00_13_AA_00_25_93/service0023/char0024 Notification:
50 61 73 73 77 6f 72 64 20 3a 20 43 6f 77 0d 0a Password:
[dvid-807:/service0023/char0024]#
```