AGISTIN T4.6 Usage examples of the tool

CITCEA-UPC

Setembre 2023

Contents

1. Introduction

2. Example 0

3. Example 1

4. Example 2

5. Example 3

Introduction

AGISTIN

CITCEA-UF

Introduction

Example

Example

Example

Example

- ▶ Built in Python3
- Using Pyomo library and extension Pyomo Network
- Object oriented approach

AGISTIN

laren di arta

Example 0


Example

Example

Example

EXAMPLE 0

Two Reservoirs + one Source (imposes Q)

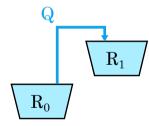

AGISTIN


CITCEA-UI

Introduction

Example 0

Example 3

Source

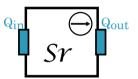

Var	Desc.	Units
Q(t)	Flow	$[m^3/s]$
$Q_{in}(t)$	Inlet flow	$[m^3/s]$
$Q_{out}(t)$	Outlet flow	$[m^3/s]$

Port	Var	
Q_{in}	$Q_{in}(t)$	
Q_{out}	$Q_{out}(t)$	

Equations

$$Q_{in}^{[k]} = -Q^{[k]}$$
 $Q_{out}^{[k]} = Q^{[k]}$

AGISTIN

Introductio

Example 0

Evamal

Example

Example

Source

```
import pyomo, environ as pyo
from pyomo.network import *
# data: Q(t)
def Source(b, t, data, init_data=None):
    # Parameters
    b.Q = pvo.Param(t. initialize=data['0'])
    # Variables
    b. Qin = pyo. Var(t, initialize=data['Q'], within=pyo. Reals)
    b. Qout = pvo. Var(t. initialize=data['0'], within=pvo. Reals)
    # Ports
    b. port_Qin = Port(initialize={'0': (b.Qin. Port.Extensive)})
    b.port_Qout = Port(initialize={'Q': (b.Qout, Port.Extensive)})
    # Constraints
    def Constraint_Qin(_b. _t):
        return _b.Qin[_t] = -_b.Q[_t]
    b.c_Qin = pyo.Constraint(t, rule=Constraint_Qin)
    def Constraint_Qout(_b, _t):
        return _b.Qout[_t] = _b.Q[_t]
    b.c_Qout = pvo.Constraint(t. rule=Constraint_Qout)
```

AGISTIN


CITCEA-UPO

ntroductio

Example 0

Example

Reservoir

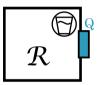

Var	Desc.	Units
W_0	Initial volume	[m ³]
$\underline{\mathbf{W}}$, $\overline{\mathbf{W}}$	min, max volume	$[m^3]$
W(t)	Volume	$[m^3/s]$
Q(t)	Flow	$[m^3/s]$
Port	Var	
Q	Q(t)	

Equations

$$W^{[k]} = egin{cases} W^{[k-1]} + Q^{[k]} & ext{if } k > 0 \ W_0 + Q^{[k]} & ext{otherwise} \end{cases}$$

AGISTIN

CITCEA-UP

Introduct

Example 0

Exampl

Example

Example

Reservoir

```
# data: WO, Wmin, Wmax
# init_data: Q(t), W(t)
def Reservoir_Ex0(b, t, data, init_data):
    # Parameters
    b.W0 = pyo.Param(initialize=data['W0'])
    # Variables
    b.Q = pyo.Var(t, initialize=init_data['Q'], within=pyo.Reals)
    b.W = pyo.Var(t, initialize=init_data['W'], bounds=(data['Wmin'], data['Wmax']), within=pyo.NonNegativeReals)
    # Ports
    b.port_Q = Port(initialize={'Q': (b.Q. Port.Extensive)})
    # Constraints
    def Constraint_W(_b. _t):
        if _t >0:
            return _b.W[_t] == _b.W[_t-1] + (_b.Q[_t]) # TODO: - Gloss - gamma
        else:
            return _{-}b.W[_{-}t] = _{-}b.W0 + (_{-}b.Q[_{-}t])
    b.c.W = pvo. Constraint(t. rule = Constraint W)
```



AGISTIN

CITCEA-U

troducti


Example 0

Example

Example

Example

Connect Blocks' Ports with Arcs

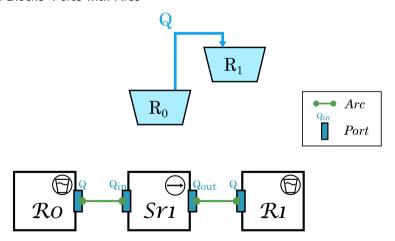

AGISTIN

CITCEA-UP

Introduction

Example 0

Evample

Example

Create the Blocks

```
# ===== Create the system =====
# Source 1
m.Sourcel = pyo.Block()
data.s1 = {'0':[1,1,1,1,1]}
Source(m.Sourcel, m.t, data.s1)
# Reservoir0
m.Reservoir0 = pyo.Block()
data.r0 = {'W0':10, 'Wmin':0, 'Wmax':20}
init.r0 = {'0':[0,0,0,0,0], 'W':[5,5,5,5,5]}
Reservoir.Ex0(m.Reservoir0, m.t, data.r0, init.r0)
# Reservoir1
m.Reservoir1 = pyo.Block()
data.r1 = {'W0':5, 'Wmin':0, 'Wmax':20}
init.r1 = {'0':[0,0,0,0,0], 'W':[5,5,5,5,5]}
Reservoir.Ex0(m.Reservoir1, m.t, data.r1, init.r1)
```

Create the Arcs

```
# Connections
m.slr0 = Arc(ports=(m.Sourcel.port.Qin, m.Reservoir0.port.Q), directed=True)
m.slr1 = Arc(ports=(m.Sourcel.port.Qout, m.Reservoir1.port.Q), directed=True)
pyo.TransformationFactory("network.expand_arcs").apply_to(m) # apply arcs to model
```

AGISTIN

C. . C.

Introduction

Example 0

_ `.

Run the optimization

```
#%% RUN THE OPTIMIZATION

# Objective function (Feasibility problem in this example)
def obj.fun(m):
    return 0

m.goal = pyo.Objective(rule=obj.fun, sense=pyo.minimize)

instance = m.create.instance()
solver = pyo.SolverFactory('ipopt')
solver.solve(instance, tee=False)
```

Results

```
instance. Reservoir1.W. pprint()
instance, Reservoir 0, W. pprint ()
# RESULTS:
    # W : Size=5, Index=t
          Kev : Lower : Value : Upper : Fixed : Stale : Domain
                          6.0 :
                                   20 : False : False : NonNegativeReals
                         7.0:
                                   20 : False : False : NonNegativeReals
                          8.0:
                                   20 : False : False : NonNegativeReals
            3 :
                          9.0:
                                   20 : False : False : NonNegativeReals
                    0 : 10.0 :
                                   20 : False : False : NonNegativeReals
    # W : Size=5, Index=t
          Kev : Lower : Value : Upper : Fixed : Stale : Domain
            0:
                          9.0:
                                   20 : False : False : NonNegativeReals
                          8.0 :
                                   20 : False : False : NonNegativeReals
            2 .
                          7.0:
                                   20 : False : False : NonNegativeReals
           3 :
                          6.0:
                                   20 : False : False : NonNegativeReals
           4 :
                          5.0:
                                   20 : False : False : NonNegativeReals
```

AGISTIN

CITCEA-UF

troductio

Example

Example 1


Example

Example


EXAMPLE 1

Two Reservoirs with Irrigation + two Pumps connected to Grid w/ time-dependent cost

Optimization:
$$\min \sum_{k=0}^{k=T} -P_{grid}(k) \cdot cost(k) \Delta k$$
 w/ $cost = [10, 5, 1, 5, 10]$

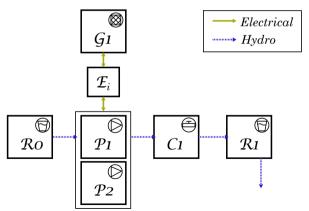

Pump

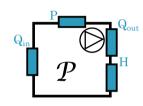

Var	Desc.	Units
A , B , η	Pump params	
n_n , Q_n	Nominal	
$Q_{in}(t), \ Q_{out}(t)$	I/O flow	$[m^3/s]$
H(t)	Head	[m]
n(t)	Speed	[rad/s]
$P_h(t), P_e(t)$	Power	[W]

Var
$Q_{in}(t), Q_{out}(t)$
H(t)
$P_e(t)$

Equations (etc.)

$$Q_{in}^{[k]} = -Q_{out}^{[k]}$$

$$H^{[k]} = \frac{n^{2[k]}}{n_n^2} \cdot A + B \cdot Q_{out}^{2[k]}$$

AGISTIN

CITCEA-UPO


ntroducti

Example 1

Example

Example :

Pipe

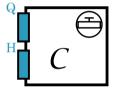

Var	Desc.	Units
H_0	Height	[m]
K	Losses cf.	
Q_{max}	Max. flow	$[m^3/s]$
Q(t)	Flow	$[m^3/s]$
H(t)	Head	[m]
Port	Var	
Q	Q(t)	
Н	H(t)	

Equations (etc.)

$$H^{[k]} = H_0 + K \cdot Q^{2[k]}$$

AGISTIN

CITCEA-UP

troducti

Example

Example 1

Example

Example 3

Grid



Var	Desc.	Units
P_{max} $P(t)$	Max power Power	[W] [W]
Port	Var <i>P</i> (<i>t</i>)	

Equations:

No constraints defined

AGISTIN

Introductio

Example

Example 0

Example

Example

 Hub^1



Equations:

$$P_{bal}^{[k]} = 0$$

¹E for Estació de Bombeig (Pumping Station) in catalan. It is meant to be a Node block to define a power balance (i.e.: sum of powers equal to 0)

AGISTIN

CITCEA-U


troducti

Example (

Example 1

Example

Connect Blocks' Ports with Arcs

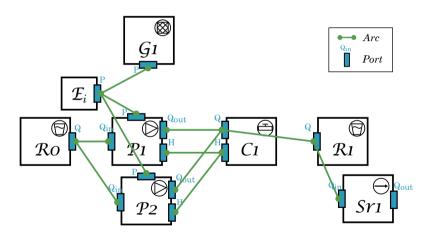

AGISTIN

....

Example 1

Example

Example

Create the Blocks

```
# ===== Create the system =====
m. Reservoir1 = pvo. Block()
m. Reservoir0 = pvo. Block()
m. Irrigation 1 = pvo. Block()
m.Pump1 = pvo.Block()
m.Pump2 = pvo.Block()
m. Pipe1 = pvo. Block()
m. Grid = pvo. Block()
m.EB = pyo.Block()
  data_irr = \{ Q: [2,1,1,1,1] \} \# irrigation
  Source (m. Irrigation 1, m.t. data_irr, None)
  data_res = {'WO':5, 'Wmin':0, 'Wmax':20} # reservoirs (both equal)
  init_res = \{ Q' : [0,0,0,0,0], W' : [5,5,5,5,5] \}
  Reservoir_Ex0 (m. Reservoir1, m.t. data_res, init_res)
  Reservoir_Ex0 (m. Reservoir0 , m.t. data_res , init_res)
  data_c1 = {'H0':20, 'K':0.05, 'Qmax':50} # canal
  Pipe_Ex0(m, Pipe1, m.t. data_c1, init_c1)
  data_p = {'A':50. 'B':0.1. 'n.n':1450. 'eff':0.9. 'Omax':20. 'Onom':5. 'Pmax':9810*50*20} # pumps (both equal)
  \mathsf{init\_p} = \{ \begin{smallmatrix} \mathbf{^1Q^1} \\ \mathbf{^1Q^1} \end{smallmatrix} : [0\ ,0\ ,0\ ,0\ ,0] \,, \quad \begin{smallmatrix} \mathbf{^1H^1} \\ \mathbf{^1H^1} \end{smallmatrix} : [20\ ,20\ ,20\ ,20\ ,20] \,, \quad \begin{smallmatrix} \mathbf{^1D^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ,1450\ ,1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ,1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ,1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,1450\ ] \,, \quad \begin{smallmatrix} \mathbf{^1Pe^1} \\ \mathbf{^1D^1} \end{smallmatrix} : [1450\ ,14
                                 :[9810*5*20.9810*5*20.9810*5*20.9810*5*20.9810*5*20]}
  Pump(m.Pump1, m.t, data_p, init_p)
  Pump(m.Pump2, m.t. data_p, init_p)
  Grid (m. Grid, m.t, {'Pmax':100e3}, None) # grid
 EB(m.EB, m.t. None, None) # node
```

AGISTIN

CITCEA-UP

ntroduci

Example

Example 1

Example

Example

Create the Arcs

```
# Connections
m.plr0 = Arc(ports=(m.Pumpl.port.Qin , m.Reservoir0.port.Q), directed=True)
m.plc1.Q = Arc(ports=(m.Pumpl.port.Qout , m.Pipel.port.Q), directed=True)
m.plc1.H = Arc(ports=(m.Pumpl.port.H , m.Pipel.port.H), directed=True)
m.plc1.H = Arc(ports=(m.Pumpl.port.H), m.Reservoir0.port.Q), directed=True)
m.plc1.H = Arc(ports=(m.Pumpl.port.Qit , m.Reservoir0.port.Q), directed=True)
m.plc1.H = Arc(ports=(m.Pumpl.port.H), m.Pipel.port.Q), directed=True)
m.clr1 = Arc(ports=(m.Pumpl.port.H), directed=True)
m.rli1 = Arc(ports=(m.Frigation1.port.Qin , m.Reservoir1.port.Q), directed=True)
m.EBpl = Arc(ports=(m.Pumpl.port.P), m.EB.port.P), directed=True)
m.EBpl = Arc(ports=(m.Pumpl.port.P), m.EB.port.P), directed=True)
m.EBpl = Arc(ports=(m.Fumpl.port.P), m.EB.port.P), directed=True)
pyo.TransformationFactory("network.expand_arcs").apply.to(m) # apply arcs to model
```

AGISTIN

roductio

Example 0

Example 1

Example

Example

```
\mbox{Run the optimization}^2 \qquad \mbox{\it cost} = [10, 5, 1, 5, 10]
```

```
#%% RUN THE OPTIMIZATION

# Objective function
def obj.fun(m):
    return sum(—m. Grid.P[t]*m.cost[t] for t in l.t)
m.goal = pyo.Objective(rule=obj.fun, sense=pyo.minimize)
instance = m.create.instance()
solver = pyo.SolverFactory('ipopt')
solver.solve(instance, tee=False)
```

Results

```
# P : Size=5, Index=t

# Key : Lower : Value : Upper : Fixed : Stale : Domain

# 0 : -100000.0 : 9.31716873473775e-09 : 100000.0 : False : False : Reals


# 1 : -100000.0 : -59037.077882885201 : 100000.0 : False : False : Reals

# 2 : -100000.0 : -100000.0 : 100000.0 : False : False : Reals

# 3 : -100000.0 : -59037.077882781225 : 100000.0 : False : False : Reals

# 4 : -100000.0 : 9.317168818435555e-09 : 100000.0 : False : False : Reals
```

E.g.: Negative grid power means power consumed from the grid

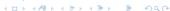

²Notice that P < 0 implies power injected and P > 0 power consumed by an element.

AGISTIN

troducti

Example

Example 2

Example


EXAMPLE 2

Add a solar PV plant to Example 1

Optimization:

$$\min \sum_{k=0}^{k=T} \left[P_{buy,grid}(k) \cdot C_{buy}(k) - P_{sell,grid}(k) \cdot C_{sell}(k) \right] \Delta k + P_{inst,PV} \cdot C_{newPV}$$

with:
$$C_{buy} = [10, 5, 1, 5, 10]$$
, $C_{sell} = rac{C_{buy}}{2}$ and $C_{newPV} = 10$

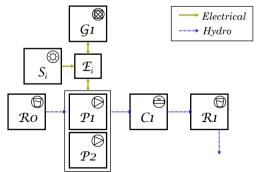

AGISTIN


CITCEA-UP


ntroductio

Example 2

Example

Solar PV plant



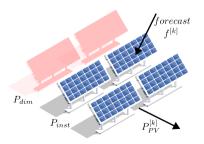

Var	Desc.	Units
P _{inst}	Installed power	[W]
P_{max}	Max available power	[W]
f(t)	Forecast	[p.u.]
P(t)	Power	[W]
$P_{dim}(t)$	Dimensioned power ^a	[W]
Port	Var	
Р	P(t)	

Equations

$$P_{max} \geq P_{inst} + P_{dim}$$


$$P^{[k]} \geq -(P_{inst} + P_{dim}) \cdot f^{[k]}$$

^aRefers to new power to install



Example 2

Connect Blocks' Ports with Arcs

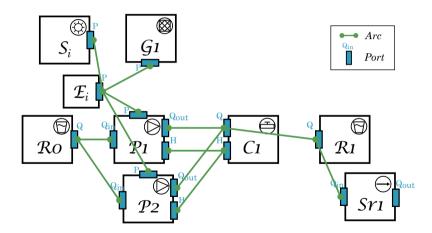

AGISTIN

CITCEA-U

Introducti

Lxampic

Example 2

Example

Create the Blocks

```
data_res = {'WO':5. 'Wmin':0. 'Wmax':20} # reservoirs (both equal)
Reservoir_Ex0 (m. Reservoir1 . m.t. data_res . init_res)
Reservoir_Ex0(m. Reservoir0, m.t. data_res, init_res)
data_c1 = {'HO':20, 'K':0.05, 'Qmax':50} # canal
init_c1 = \{ ,0, : [0,0,0,0,0], ,H' : [20,20,20,20,20] \}
Pipe_Ex0(m. Pipe1, m.t, data_c1, init_c1)
data_p = {'A':50, 'B':0.1, 'n_n':1450, 'eff':0.9, 'Qmax':20, 'Qnom':5, 'Pmax':9810*50*20} # pumps (both equal)
init_{P} = \{ {}^{\circ}Q^{\circ}; [0.0.0.0.0], {}^{\circ}H^{\circ}; [20.20.20.20.20], {}^{\circ}n^{\circ}; [1450.1450.1450.1450.1450], {}^{\circ}Pe^{\circ} \} 
       :[9810*5*20,9810*5*20,9810*5*20,9810*5*20,9810*5*20]}
Pump(m.Pump1, m.t. data_p, init_p)
Pump(m.Pump2, m.t. data_p, init_p)
data_pv = {'Pinst':50e3, 'Pmax':100e3, 'forecast':[0.0,0.2,0.8,1.0,0.1]} # PV
SolarPV (m.PV, m.t. data_pv)
Grid (m. Grid . m.t. { 'Pmax': 100e3}) # grid
EB(m, EB, m, t)
```

AGISTIN

CITCEA-UP

ntroduci

Example

Example 2

Example

Create the Arcs

```
# Connections

m.p1r0 = Arc(ports=(m.Pump1.port_Qin , m.Reservoir0.port_Q), directed=True)

m.p1c1.Q = Arc(ports=(m.Pump1.port_Qut , m.Pipe1.port_Q), directed=True)

m.p1c1.H = Arc(ports=(m.Pump1.port_H , m.Pipe1.port_H), directed=True)

m.p2r0 = Arc(ports=(m.Pump2.port_Qin , m.Reservoir0.port_Q), directed=True)

m.p2c1.Q = Arc(ports=(m.Pump2.port_Qin , m.Reservoir0.port_Q), directed=True)

m.p2c1.H = Arc(ports=(m.Pump2.port_H , m.Pipe1.port_H), directed=True)

m.c1r1 = Arc(ports=(m.Pipe1.port_Q , m.Reservoir1.port_Q), directed=True)

m.c1r1 = Arc(ports=(m.Pipe1.port_Q , m.Reservoir1.port_Q), directed=True)

m.c1r1 = Arc(ports=(m.Pump1.port_P , m.EB.port_P), directed=True)

m.cbp1 = Arc(ports=(m.Pump1.port_P , m.EB.port_P), directed=True)

m.cbp2 = Arc(ports=(m.Pump2.port_P , m.EB.port_P), directed=True)

m.pyeb = Arc(ports=(m.Pv.port_P , m.EB.port_P), directed=True)
```

AGISTIN

CITCEA-UP

ntroduct

Lxample

Example

Example 2

Example

Run the optimization

```
#%% RUN THE OPTIMIZATION

# Objective function
def obj_fun(m):
    return swm((m.Grid.Pbuy[t]*m.cost[t] - m.Grid.Psell[t]*m.cost[t]/2) for t in l_t ) + m.PV.Pdim*cost_new_pv
m.goal = pyo.Objective(rule=obj_fun, sense=pyo.minimize)

instance = m.create_instance()
solver = pyo.SolverFactory('ipopt')
solver = pyo.Solve(instance, tee=False)
```

AGISTIN

CITCEA-UPC

Introducti

- .

Example 2

Example

Results

```
instance. Reservoir1.W. pprint()
instance. Reservoir 0.W. pprint ()
instance . Grid . P. pprint ()
instance . PV . Pdim . pprint()
# RESULTS
    # W : Size=5. Index=t
         Kev : Lower : Value
                                          : Upper : Fixed : Stale : Domain
                   0 : 3.0000000000000000 : 20 : False : False : NonNegativeReals
                   0 : 2.051624535242702 :
                                               20 : False : False : NonNegativeReals
                  0 : 1.7161061718196515 :
                                              20 : False : False : NonNegativeReals
                                             20 : False : False : NonNegativeReals
                   0 : 0.9741875933941936 :
           4 :
                   0 .
                                       0.0:
                                               20 : False : False : NonNegativeReals
     W : Size=5. Index=t
                                         : Upper : Fixed : Stale : Domain
          Kev : Lower : Value
                                              20 : False : False : NonNegativeReals
                   0 : 4.99999999999999999999
                   0 : 4.948375464757298 :
                                              20 : False : False : NonNegativeReals
                   0 : 4.283893828180348 :
                                              20 : False : False : NonNegativeReals
                   0 : 4.025812406605806 :
                                              20 : False : False : NonNegativeReals
                   0 : 4.000000009999997 :
                                              20 : False : False : NonNegativeReals
       : Size=5. Index=t
          Kev : Lower
                        : Value
                                                   : Upper
                                                             : Fixed : Stale : Domain
            0 : -100000.0 : 9.444173782089441e-09 : 100000.0 : False : False : Reals
           1: -100000.0: -8.895566856661031e-09: 100000.0: False: False: Reals
            2 : -100000.0 :
                                        -100000.0 : 100000.0 : False : False : Reals
            3 : -100000.0 : -8.894453079458348e-09 : 100000.0 : False : False : Reals
            4 : -100000.0 : 9.520949369890758e-09 : 100000.0 : False : False : Reals
    # Pdim : Size=1. Index=None
         Kev : Lower : Value
                                         : Upper : Fixed : Stale : Domain
                    0 : 6271.117831362812 : 50000.0 : False : False : NonNegativeReals
```

AGISTIN

CITCEA-UPC

ntroduct

Example

Example


Example 3

EXAMPLE 3

Autoloading of Example 2

An automatic builder has been added to the project.

The Builder reads the data from excel files and generates the Pyomo model.

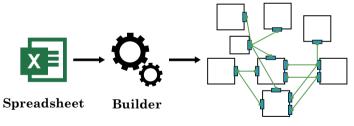

Pyomo model

AGISTIN

ntroductio

Lxampic


Lxumpic

Example

Example 3

Fill the spreadsheets with the devices' info

- ► [Case].xlsx Definition and parameters
- ► [Case]_time.xlsx Time dependent values

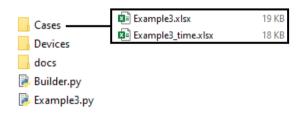



AGISTIN

CITCEA


Evample

Example


Example

Example 3

Example3.xlsx

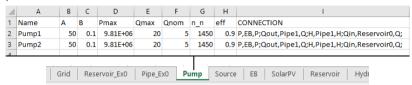

Example3_time.xlsx

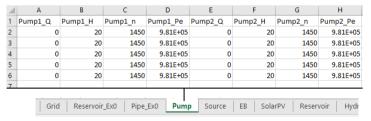

AGISTIN

CITCEA-UP

ntroduct

Example

Example

Example

Example 3

Run the Builder

```
# generate system json file
data_parser("Example3", dt=1) # dt = value of each timestep (if using SI this is seconds)
m = pyo.ConcreteModel()
# time
l.t = list(range(5))
m.t = pyo.Set(initialize=l.t)
# electricity cost
l.cost = [10.5,1,5,10]
m.cost = pyo.Param(m.t, initialize=l.cost)
cost.new_pv = 10
builder(m, 'Example3')
```

AGISTIN

CITCEA-UP

ntroduct

Example

Evample

Example

Example 3

Run the optimization

```
#%% RUN THE OPTIMIZATION

# Objective function
def obj_fun(m):
    return swm((m.Grid.Pbuy[t]*m.cost[t] — m.Grid.Psell[t]*m.cost[t]/2) for t in l_t ) + m.PV.Pdim*cost_new_pv
m.goal = pyo.Objective(rule=obj_fun, sense=pyo.minimize)

instance = m.create_instance()
solver = pyo.SolverFactory('ipopt')
solver.solve(instance, tee=False)
```

AGISTIN

Introducti

Example

Example 3

You should get the same results as in Example 2

```
instance. Reservoir1.W. pprint()
instance Reservoir O.W. pprint ()
instance . Grid . P. pprint ()
instance . PV . Pdim . pprint ()
# RESHLTS
    # W : Size=5. Index=t
         Kev : Lower : Value
                                          : Upper : Fixed : Stale : Domain
                   0 : 3.0000000000000000 : 20 : False : False : NonNegativeReals
                   0 : 2.051624535242702 : 20 : False : False : NonNegativeReals
                   0 : 1.7161061718196515 :
                                             20 : False : False : NonNegativeReals
                   0 : 0.9741875933941936 :
                                             20 : False : False : NonNegativeReals
                                               20 : False : False : NonNegativeReals
                   0 .
                                      0.0:
       : Size=5, Index=t
         Kev : Lower : Value
                                         : Upper : Fixed : Stale : Domain
                   0 : 4.99999999999999999999
                                              20 : False : False : NonNegativeReals
                                              20 : False : False : NonNegativeReals
                   0 : 4.948375464757298 :
                                              20 : False : False : NonNegativeReals
                   0 : 4.283893828180348 :
                                              20 : False : False : NonNegativeReals
                   0 : 4.025812406605806 :
                                              20 : False : False : NonNegativeReals
                   0 : 4.000000009999997 :
    # P : Size=5. Index=t
                        : Value
         Kev : Lower
                                                  : Upper
                                                             : Fixed : Stale : Domain
            0 : -100000.0 : 9.444173782089441e-09 : 100000.0 : False : False : Reals
           1 : -100000.0 : -8.895566856661031e-09 : 100000.0 : False : False : Reals
            2 : -100000.0 :
                                        -100000.0 : 100000.0 : False : False : Reals
            3 : -100000.0 : -8.894453079458348e-09 : 100000.0 : False : False : Reals
            4 : -100000.0 : 9.520949369890758e-09 : 100000.0 : False : False : Reals
    # Pdim : Size=1. Index=None
         Key : Lower : Value
                                         : Upper : Fixed : Stale : Domain
                    0: 6271.117831362812: 50000.0: False: False: NonNegativeReals
```

AGISTIN T4.6 Usage examples of the tool

CITCEA-UPC

Setembre 2023