



Radio Engineering

Lecture 1 – Introduction Florian Kaltenberger

Overview

- Introduction
 - History and overview
 - Requirements for services
- Technical challenges
 - Multipath propagation
 - Spectrum limitations
 - Limited Energy
 - User Mobility
- Noise and Interference Limited Systems
 - Noise
 - Link budget
 - Interference limited systems





HISTORY AND OVERVIEW





History of Wireless Communications

- 1873: James Clark Maxwell develops theory of electromagnetic waves (Maxwell's Equations)
- 1886: Heinrich Hertz: fundamental experiments confirming Maxwell's theory
- 1890-1905: First experiments for wireless information transmission (Tesla, Bose, Marconi).
- 1920: First radio broadcasting services in England
- 1948: Claude Shannon: fundamental information theory for modern communication systems [1]






History of Wireless Communications (2)

- 1950-1980: Development of cellular telephony, first analog systems
- GSM (Global System for Mobile Communications)
 - Second generation fully digital standard
 - First deployment 1990 in Europe
- Other second generation systems
 - IS-95 (cdmaOne): used mainly in US and Korea
 - PDC (Pacific Digital Cellular)






Evolution of Wireless Standards

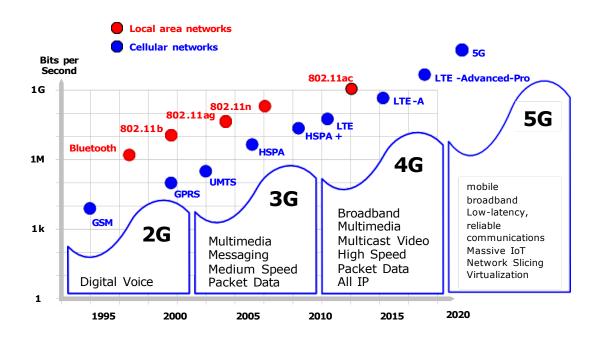






5G Market Share

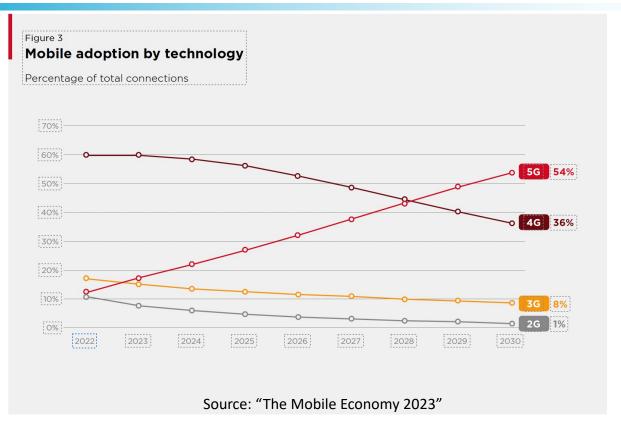






5G requirements

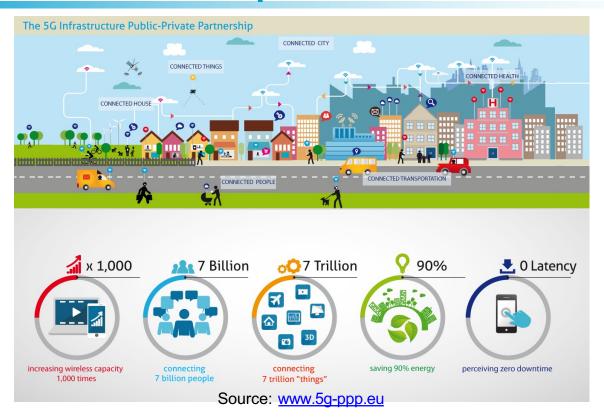





5G use cases

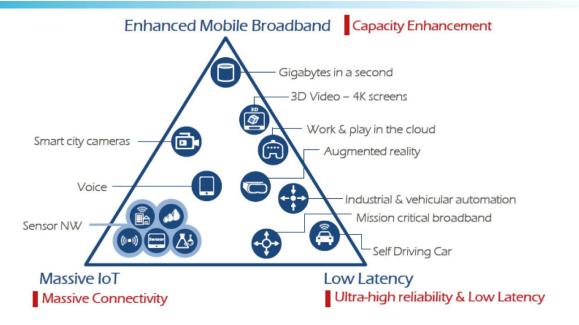


(Source: ETRI graphic, from ITU-R IMT 2020 requirements)





5G vertical industries

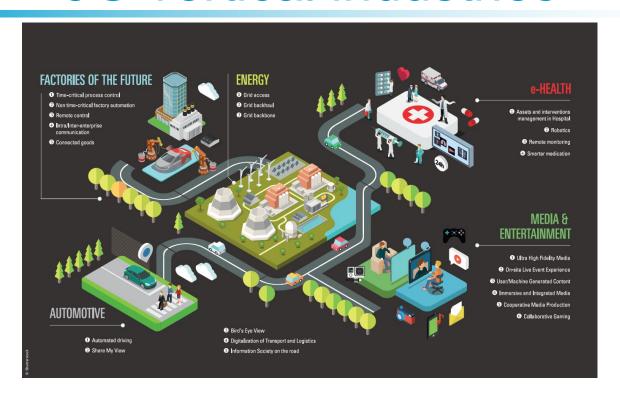


Source: www.5g-ppp.eu





Mobile-enabled technologies for climate technology solutions

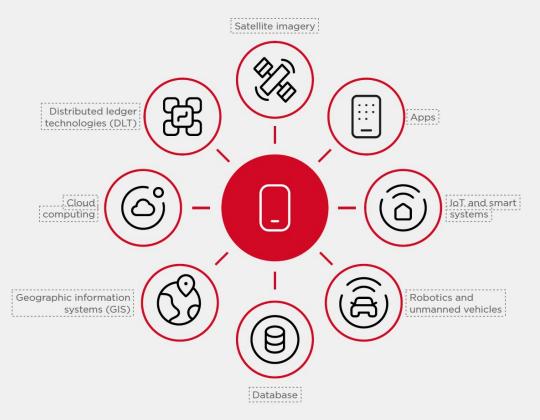





REQUIREMENTS FOR WIRELESS SERVICES





Requirements for wireless services

- Data rate
- Range
- Mobility
- Number of users
- Spectrum Usage
- Power consumption
- Network topology
- Trade-offs between requirements






Data Rate

- Sensor networks: <1kbit/s; central nodes need up to 10 Mbit/s
- Speech communications: 5-64 kbit/s, depending in speech coder (vocoder)
- Elementary data services (email, simple web pages): 10-100 kbit/s
- More sophisticated web pages: a few Mbit/s
- Video streaming: 1 Mbit/s 1Gbit/s (4K uncompressed)
- Virtual reality: a few Gbit/s





Data Rate vs Range

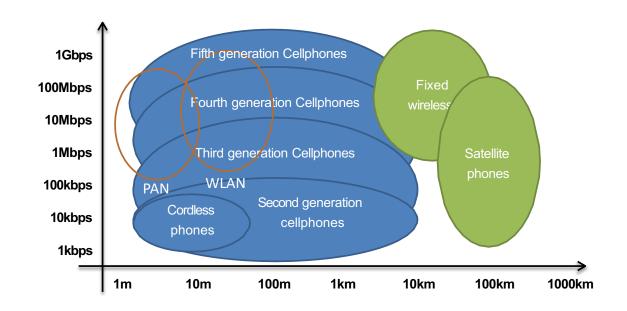





15

Mobility


- Fixed devices: stay in one location; temporal variations due to moving objects in surroundings
- Nomadic devices: MS placed at certain location, stays there for a while (WLANs)
- Low mobility: pedestrian speeds (cordless phones)
- High speed: cellphones in cars
- Extremely high speed: high-speed trains, planes,





16

Data Rate vs Speed

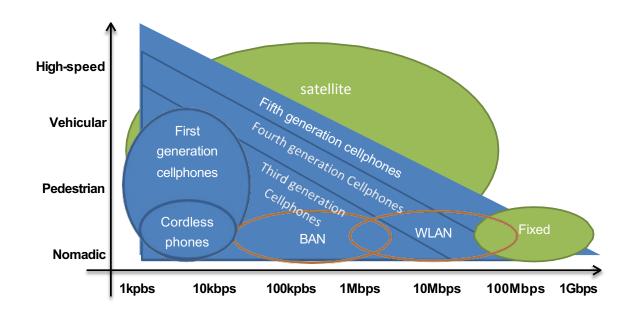





Spectrum Usage

- Regulated spectrum: dedicated to specific service and/or operator
 - Cellular phones, TV, Military, etc
 - Managed by national regulators (with some worldwide harmonization)
 - Typically very costly for operators
- Private 5G
 - ...
- Unregulated (Free) spectrum
 - Industrial, scientific and medical (ISM) bands: 915MHz, 2.4GHz, 5.8GHz
 - WiFi, Bluetooth, DECT, ZigBee, etc.
 - Listen before talk, Carrier sense multiple access
- Multi-tier spectrum access
 - Allows secondary users to access to licensed spectrum under condition that it is not disturbing the incumbent user
 - Based on geolocation databases and propagation models or spectrum sensing
 - Example: TV white space in UK (unused broadcast spectrum freed by switching from analogue to digital TV), CBRS in US
- Licensed Shared Access (LSA), Authorized Shared Access
 - Operators share spectrum based on some negotiation mechanism. Examples: 3.5GHz in US, 2.4 GHz in France





18

Wireless network topologies

- Cellular networks (focus of this course)
 - Macro, micro, picocells, femtocells
 - 2G, 3G, 4G, 5G
- Local area networks (LAN)
 - Usually implemented by WiFi
- Body Area Networks
 - Usually implemented by Bluetooth
- Low-power wide area networks (LP-WAN)
 - LoRa, SigFox
- Ad-hoc and sensor networks
 - Zigbee
- Mesh networks
- Fixed wireless link
- Broadcast (TV, Radio)
- Satellite Networks






Chapter 2

Technical challenges of wireless communications


The major challenges

- Multipath propagation
- Spectrum limitations
- Limited energy
- User mobility

Multipath propagation

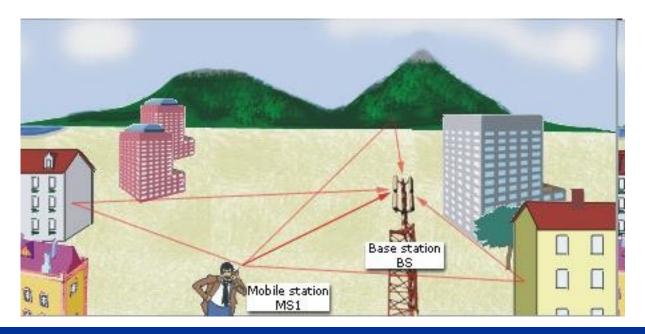


Small-scale fading

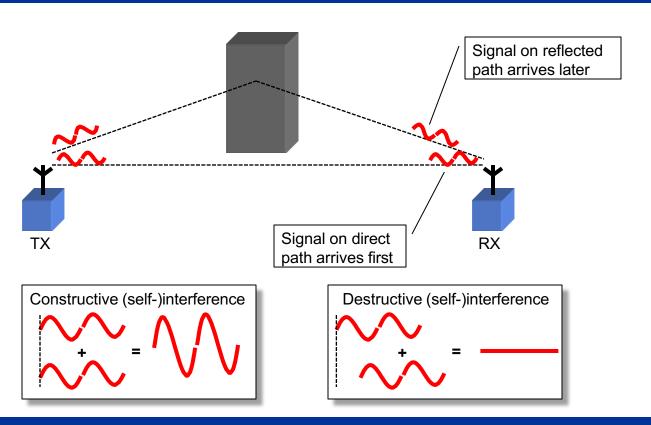

23

Large-scale fading

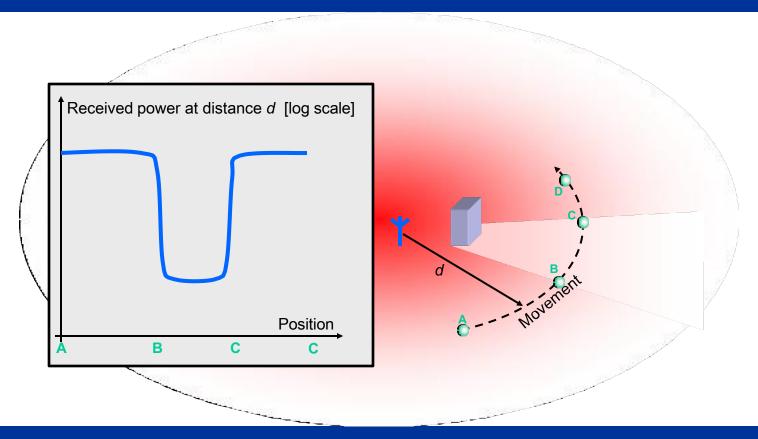


Consequences of fading


- Error probability is dominated by probability of being in a fading dip
- Error probability decreases only linearly with increasing SNR
- Fighting the effects of fading becomes essential for wireless transceiver design
- Deterministic modeling of channel at each point very difficult
- Statistical modeling of propagation and system behavior

Intersymbol interference (1)

Channel impulse response is delay-dispersive

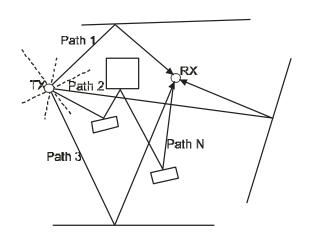


Multipath components with different runtimes

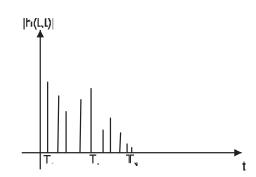

Channel impulse response

Intersymbol interference (2)

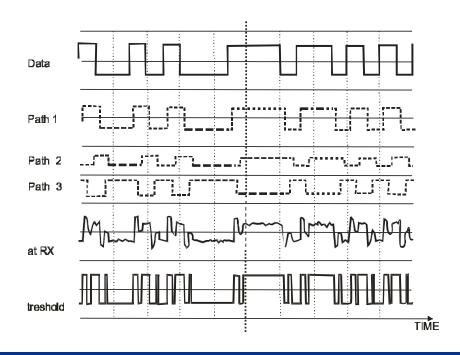

Spectrum Limitations

- Spectrum used for terrestrial wireless communications today 100MHz -60GHz
 - limited mainly by antenna size, which scales with wavelength
 - propagation characteristics: lower frequencies propagate further and penetrate building more easily
- Mm-wave (24GHz-60GHz) used for 5G systems
 - more spectrum available
 - challenging due to poor propagation properties and small antenna size;
 - beamforming and massive MIMO needed to increase antenna efficiency
- Available spectrum is limited

3/10/24


- the same frequency (range) has to be reused at many different locations (frequency reuse, cell planning),
- shared between users (multiple access), and shared between uplink and downlink (duplexing)





Duplexing and multiple access


 Within each frequency band, multiple users need to communicate with one BS (multiple access)

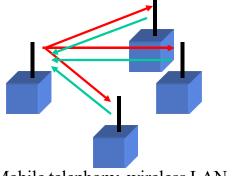

Mobile telephony, wireless LAN, ...

 Cellphones have to be able to transmit and receive voice communications (duplexing)

DUPLEXFrequency-division Duplex (FDD)

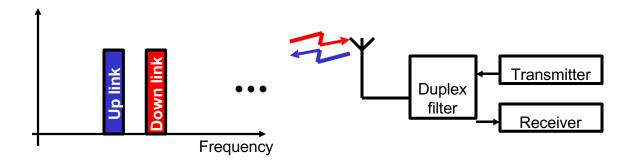


FDD gives a more complex solution (the duplex filter).


Can be used for continuous transmission.

Examples: Nodic Mobile Telephony (NMT), Global System for Mobile communications (GSM), Wideband CDMA (WCDMA)


DUPLEX Time-division duplex (TDD)

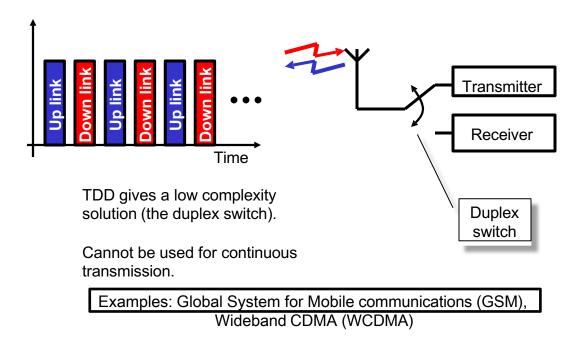


MULTIPLE ACCESS Freq.-division multiple access (FDMA)

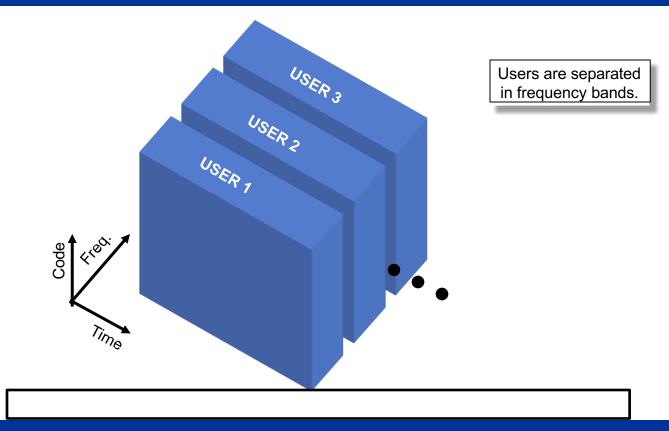


MULTIPLE ACCESS Time-division multiple access (TDMA)

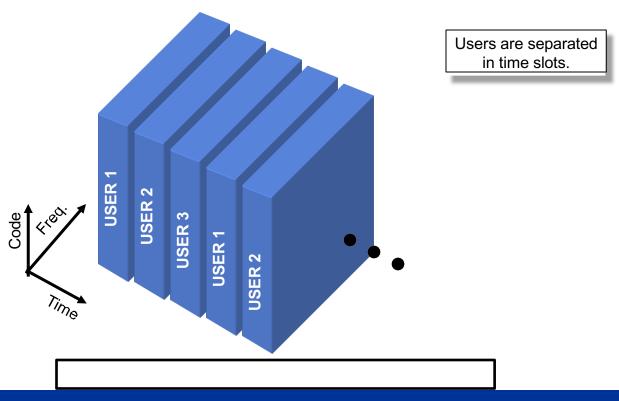

MULTIPLE ACCESS Code-division multiple access (CDMA)

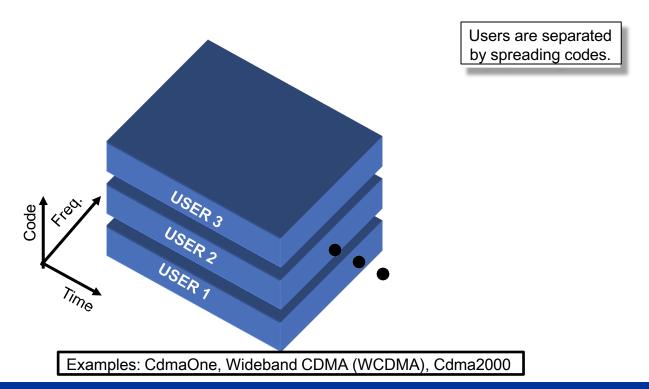

MULTIPLE ACCESS Carrier-sense multiple access (CSMA)

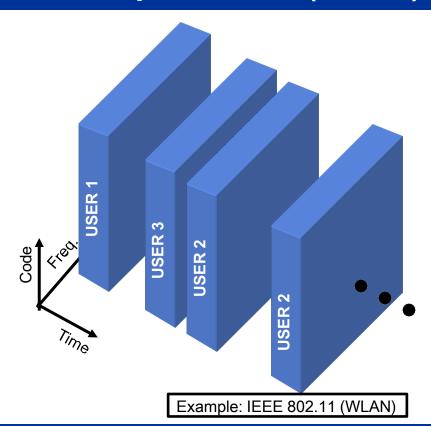


Users are separated in time but not in an organized way. The terminal listens to the channel, and transmits a packet if it's free.



MULTIPLE ACCESS

Orthogonal Frequency Division Multiplexing

- Similar to FDMA, but more efficient
- Blocks of subcarriers are assigned to different users
- Used in LTE downlink and WiMax

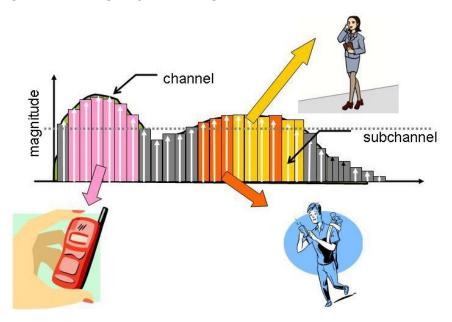





Limited Energy

- Mobile devices are powered by batteries and thus need to be energy efficient.
- Wireless chipset is not the main energy consumer in modern smartphones, but still important
- Today's standards already include various power-saving modes for phones
- Also infrastructure needs to be designed in power efficient way to reduce cost (minimize bits/Hertz/Joule).
- Sensor networks even more concerned: battery supposed to last for years





User mobility

- User can change position
- Mobility within one cell
 - i.e., maintaining a link to a certain BS
 - mostly effect on propagation channel (fading)
- Mobility from cell to cell:
 - Handover, roaming, etc






Chapter 3

Noise- and interference limited systems

Basics of link budgets

- Link budgets show how different components and propagation processes influence the available SNR
- Link budgets can be used to compute, e.g., required transmit power, possible range of a system, or required receiver sensitivity
- Link budgets can be most easily set up using logarithmic power units (dB)

SINGLE LINK The link budget – a central concept

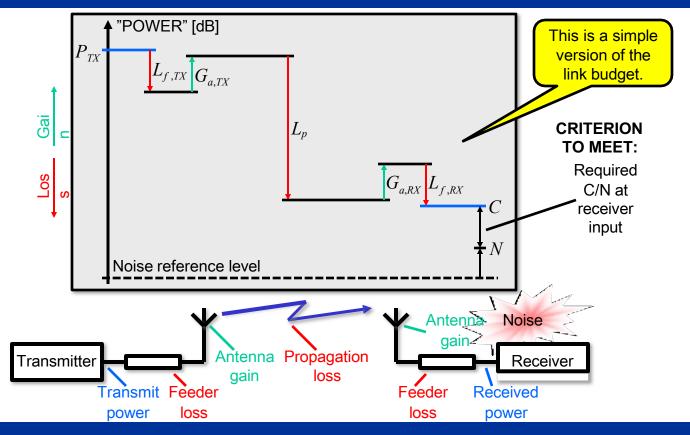

dB in general

When we convert a measure X into decibel scale, we always divide by a reference value X_{ref}:



The corresponding dB value is calculated as:

$$X|_{dB} = 10 \log \left(\frac{X|_{non-dB}}{X|_{ref}|_{non-dB}} \right)$$

Power

We usually measure power in Watt (W) and milliWatt [mW] The corresponding dB notations are dB and dBm

	Non-dB	dB
Watt:	$P _{W}$	$P _{dB} = 10 \log \left(\frac{P _{W}}{1 _{W}} \right) = 10 \log (P _{W})$
milliWatt:	$\left. P \right _{mW}$	$P _{dBm} = 10 \log \left(\frac{P _{mW}}{1 _{mW}} \right) = 10 \log (P _{mW})$
RELATION:	$P _{dBm} = 10\log\left(\frac{P _{W}}{0.001 _{W}}\right) = 10\log(P _{W}) + 30 _{dB} = P _{dB} + 30 _{dB}$	

Example: Power

Sensitivity level of GSM RX: $6.3x10^{-14}$ W = -132 dB or -102 dBm

Bluetooth TX: 10 mW = -20 dB or 10 dBm

GSM mobile TX: 1 W = 0 dB or 30 dBm

GSM base station TX: 40 W = 16 dB or 46 dBm

Vacuum cleaner: 1600 W = 32 dB or 62 dBm


Car engine: 100 kW = 50 dB or 80 dBm

TV transmitter (Hörby, SVT2): 1000 kW ERP = 60 dB or 90 dBm ERP


Nuclear powerplant (Barsebäck): 1200 MW = 91 dB or 121 dBm

ERP – Effective Radiated Power

Amplification and attenuation

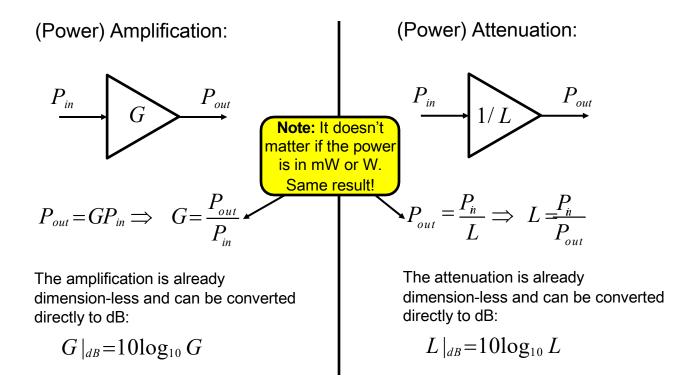

Example: Amplification and attenuation




The total amplification of the (simplified) receiver chain (between A and B) is

$$G_{A,B}$$
 |_{dB}=30-4+10+10=46

Noise sources

The noise situation in a receiver depends on several noise sources

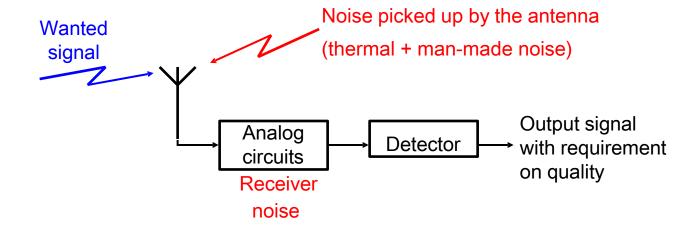

Thermal Noise


- N0 = kBTe
- N0 thermal noise in Watt/Hz,
- kB = 1.38 × 10-23 Joule/Kelvin Boltzman constant (Joule = Watt×second),
- Te environment temperature in Kelvin
- Average temperature on surface of the earth Te ≈ 300K
- ⇒ N0 ≈ -174dBm/Hz
- For a receiver with a total bandwidth of B Hz, the total received noise is Pn = N0B
- Example: B = 200kHz ⇒ Pn = -174 + 10 log10(B) ≈ -121 dBm





Man-made noise



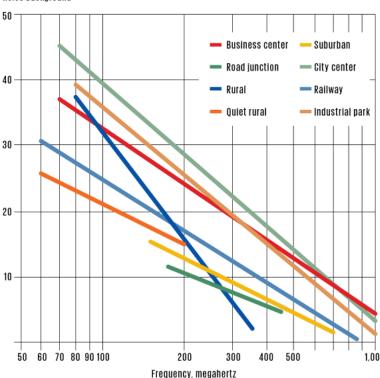

Source: M.A. McHenry, D. Roberson, R.J. Matheson, "Electronic Noise Is Drowning Out the Internet of Things," IEEE Spectrum, September 2015.




3/410/124/n Kaltenberger



Receiver noise: Equivalent noise source

To simplify the situation, we replace all noise sources with a single equivalent noise source.

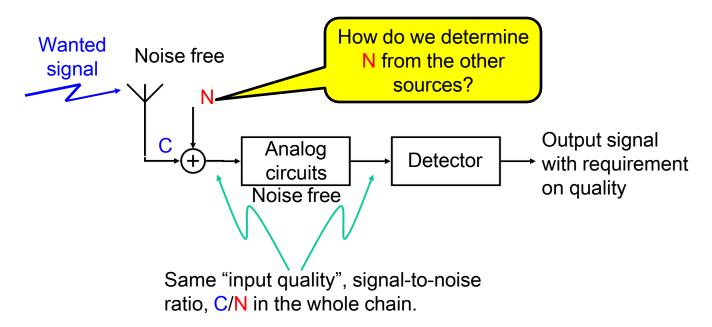

Receiver noise: Noise sources (1)

The power spectral density of a noise source is usually given in one of the following three ways:

- 1) Directly [W/Hz]:
- 2) Noise temperature [Kelvin]:
- 3) Noise factor [1]:

The relation between the three is


$$N_s = kT_s = kF_sT_0$$

where k is **Boltzmann's constant** (1.38x10⁻²³J/K) and T_0 is the, so called, **room temperature** of 290 K (17° C).

This one is sometimes given in dB and called noise figure.

Receiver noise: Noise sources (2)

Antenna example

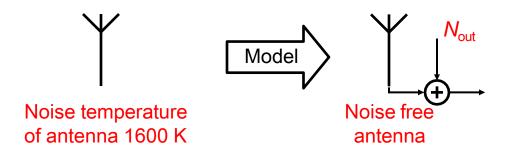


Power spectral density of antenna noise is

$$N_{out} = 1.38 \times 10^{-23} \times 1600 = 2.21 \times 10^{-20} \text{ W/Hz} = -196.6 \text{ dB[W/Hz]}$$


and its noise factor/noise figure is

$$F = 1600/290 = 5.52 = 7.42$$
dB

Receiver noise: System noise

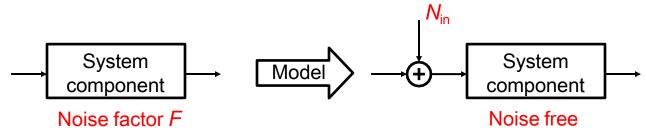

Due to a definition of noise factor (in this case) as the ratio of noise powers on the output versus on the input, when a resistor in room temperature (T_0 =290 K) generates the input noise, the PSD of the equivalent noise source (placed **at the input**) becomes



Receiver Noise: Example


- A GSM receiver has a bandwidth of 200kHz and requires that its input SNR is at least 10dB when the input signal is -104dBm.
 - What is the thermal noise level at the receiver?
 - What is the maximum permitted value of the receiver noise figure?
 - What it the equivalent input noise temperature of such a receiver?





Receiver noise: Sev. noise sources (1)

A simple example

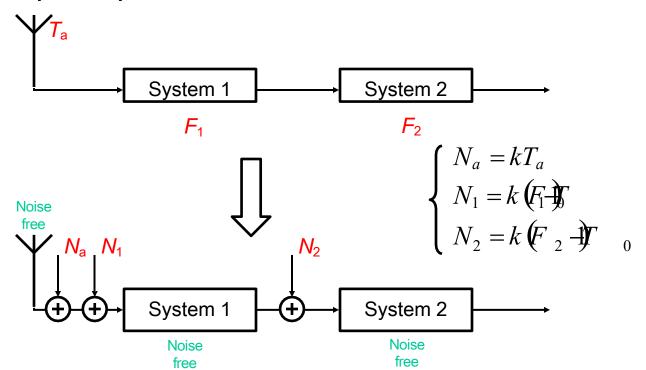


55

Receiver noise: Sev. noise sources (2)


After extraction of the noise sources from each component, we need to move them to one point.


When doing this, we must compensate for amplification and attenuation!

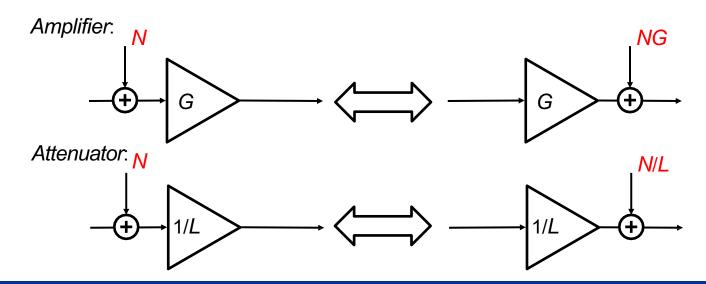

Pierce's rule

A passive attenuator, in this case a feeder, has a noise figure equal to its attenuation.

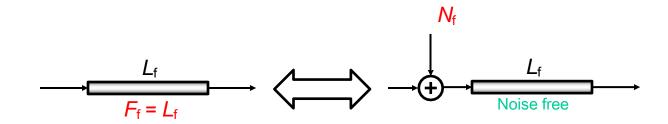

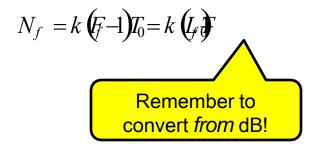

Cascading several elements




Figure 5.3: A cascade of two-port elements

Total Gain:

$$G = G_1 \cdot G_2 \cdot \cdot \cdot G_N$$

Total Noise Figure:

$$F = F_1 + \frac{F_2 - 1}{G_1} + \frac{F_3 - 1}{G_1 G_2} + \cdots + \frac{F_N - 1}{G_1 \cdots G_{N-1}}$$

Total effective noise temperature:

$$T_{\rm e} = T_{\rm e1} + \frac{T_{\rm e2}}{G_1} + \frac{T_{\rm e3}}{G_1 G_2} + \cdots + \frac{T_{\rm eN}}{G_1 \cdots G_{N-1}}$$






Example: Cascading several elements

- A receiver is made up of three main elements: a preamplifier, a mixer, and an IF amplifier with noise figures of 3, 6, and 10 dB.
 - If the overall gain of the receiver is 30 dB, and the IF amplifier gain is 10 dB, what is the minimum gain of the preamplifier to achieve an overall noise figure of no more that 5 dB?
 - If its gain is set to this minimum, what would the system noise figure become if the noise figure of the IF amplifier is increased to 20 dB?






The isotropic antenna

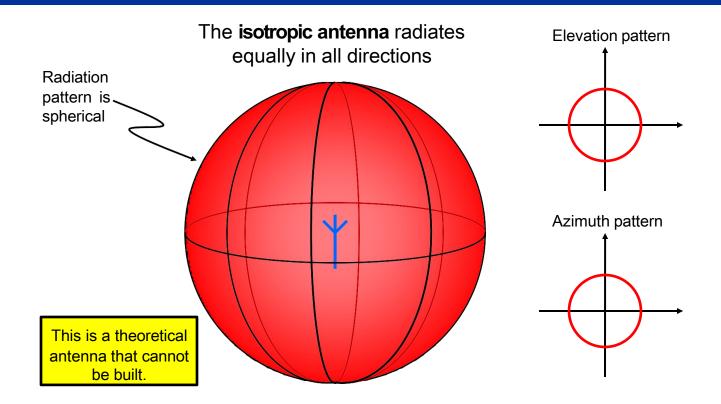


The dipole antenna

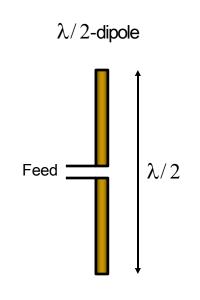

A dipole can be of any length, but the antenna patterns shown are only for the $\lambda/2$ -dipole.

This antenna does not radiate straight up or down. Therefore, more energy is available in other directions.

THIS IS THE PRINCIPLE BEHIND WHAT IS CALLED ANTENNA GAIN.

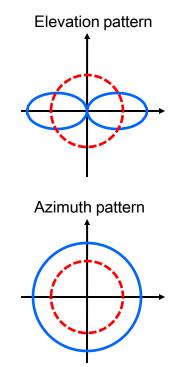


--- Antenna pattern of isotropic antenna.

Antenna gain (principle)

Antenna gain is a relative measure.

We will use the isotropic antenna as the reference.

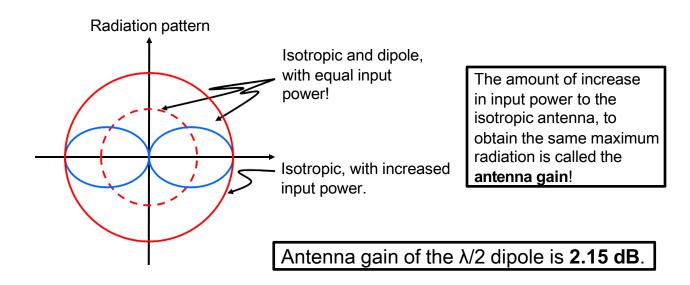

A note on antenna gain

Sometimes the notation **dBi** is used for antenna gain (instead of dB).

The "i" indicates that it is the gain relative to the isotropic antenna (which we will use in this course).

Another measure of antenna gain frequently encountered is **dBd**, which is relative to the $\lambda/2$ dipole.

$$G|_{dBi} = G|_{dBd} + 2.15$$

Be careful! Sometimes it is not clear if the antenna gain is given in dBi or dBd.

EIRP: Effective Isotropic Radiated Power

EIRP = Transmit power (fed to the antenna) + antenna gain

$$EIRP \mid_{dB} = P_{TX|dB} + G_{TX|dB}$$

Answers the questions:


How much transmit power would we need to feed an isotropic antenna to obtain the same maximum on the radiated power?

How "strong" is our radiation in the maximal

direction of the antenna?

This is the more important one, since a limit on EIRP is a limit on the radiation in the maximal direction.


EIRP and the link budget

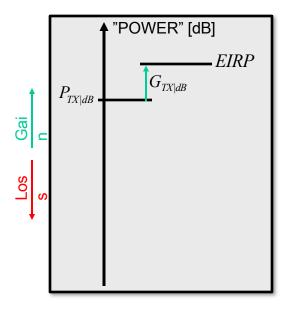

$$EIRP \mid_{dB} = P_{TX|dB} + G_{TX \nmid B}$$

Path loss



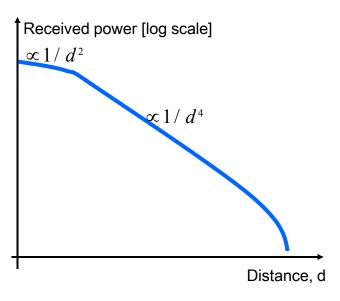


3/10/24

Fading margin


Received signal strength is not deterministic, more lea random process

-> include Fading margin to account for this uncertainty

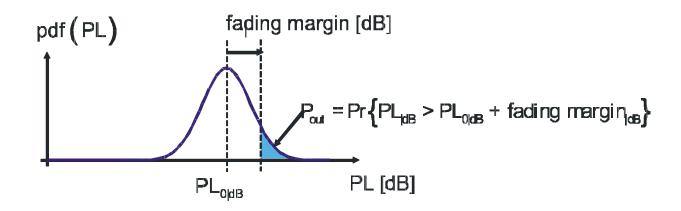

Required C/N – another central concept



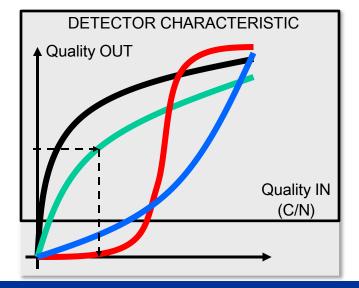


The detector characteristic is different for different system design choices.

REQUIRED QUALITY OUT:

Audio SNR
Perceptive audio quality
Bit-error rate
Packet-error rate
etc.

Example for link budget

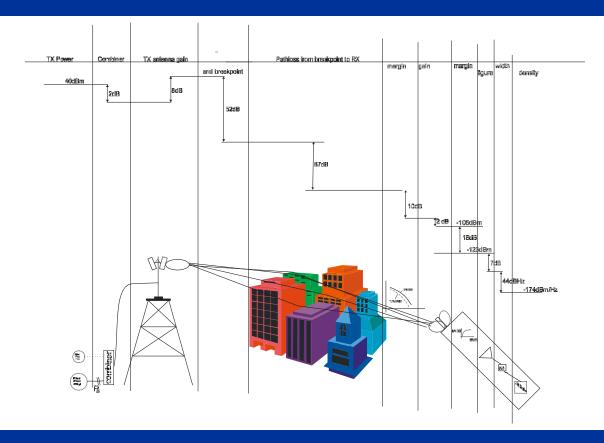

Path loss model

Path loss

$$P_{\text{RX}}(d) = \frac{P_{\text{TX}}}{PL(d)}$$
 or $P_{\text{RX}}(d)|_{\text{dB}} = P_{\text{TX}}|_{\text{dB}} - PL(d)|_{\text{dB}}$

Simple model

$$PL(d) = \left(\frac{4\pi d}{\lambda}\right)^{2} \quad 0 \le d \le d_{break}$$

$$PL(d) = PL(d_{break}) \left(\frac{d}{d_{break}}\right)^{n} \quad d \ge d_{break}$$



Link Budget: Example

- Consider a GSM system with the following characteristics:
 - Carrier frequency fc = 900MHz,
 - Bandwidth B = 200kHz,
 - Operating temperature T = 300 K,
 - Antenna gains $G_{TX} = 8 \text{ dB}$ and $G_{RX} = -2 \text{ dB}$,
 - Cable losses at TX L_{TX} = 2 dB,
 - Receiver noise figure F = 7 dB.
- The propagation characteristics are
 - The path loss exponent is n = 3.8, the breakpoint distance is 10 m, the fading margin is 10 dB.
 - The required operating SNR is 8 dB, the desired range of coverage 2 km.
- What is the minimum TX power?





References



Claude Elwood Shannon,
"A mathematical theory of communication,"

The Bell System Technical Journal, vol. 27, pp. 379–432, July 1948.



