

CS / EE 320 Computer Organization and Assembly Language Spring 2025 Lecture 27


Shahid Masud

Topics: Direct Memory Access (DMA),
Virtual Memory (VM)

Topics



- Direct Memory Access DMA
 - Concept
 - Controller
 - 3 Configurations
 - 3 Modes
- Introduction to Virtual Memory
 - Mapping Physical to Virtual
 - Page Tables
 - Role of Hard Disk

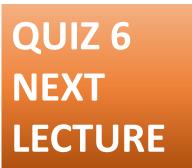



DIRECT MEMORY ACCESS DIMA

Input / Output and DMA



- I/O Modules
- Programmed I/O
- Interrupt-Driven I/O
- Direct Memory Access√

Review

Generic I/O Module




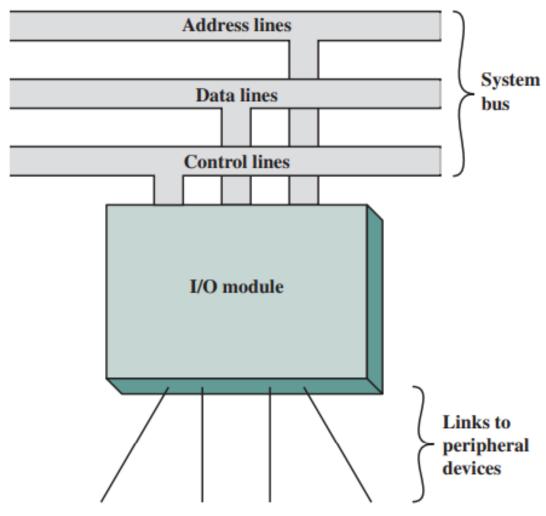


Figure 7.1 Generic Model of an I/O Module

Block Diagram of a Typical I/O Module



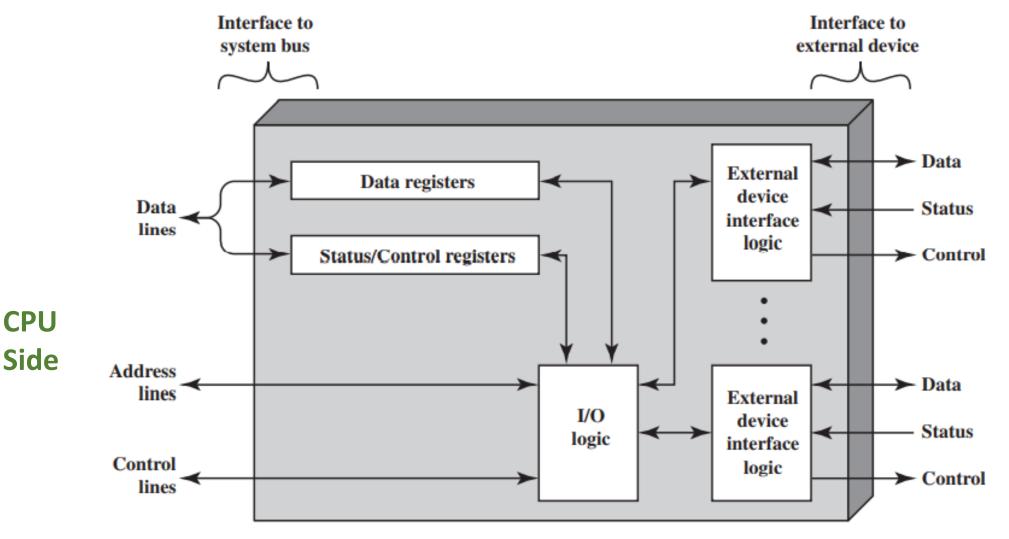

External Peripheral Side

Figure 7.3 Block Diagram of an I/O Module

I/O Channel vs I/O Controllers



- An I/O Module that can take on most of the detailed processing burden
- This presents a high-level interface to the processor
- A primitive or simple I/O module is called 'I/O Controller' or 'Device Controller'
- Personal Computers have I/O Controllers and Main Frames have I/O Channels Or I/O Processors

Fundamental Input Output Techniques




- Programmed I/O
- Interrupt driven I/O
- Direct Memory Access (DMA)

	No Interrupts	Use of Interrupts
I/O-to-memory transfer through processor	Programmed I/O	Interrupt-driven I/O
Direct I/O-to-memory transfer		Direct memory access (DMA)

Flowchart of Three I/O Techniques



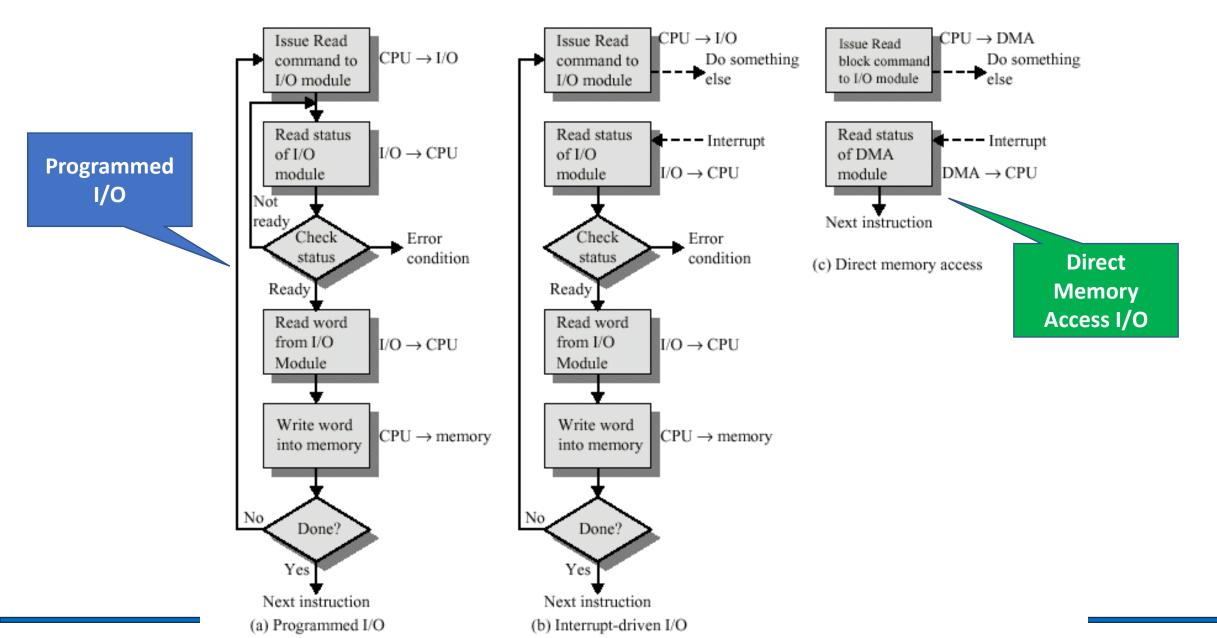

Drawback in I/O Techniques



• Interrupt Driven I/O is more efficient than Simple programmed I/O, but still requires active intervention of the processor to transfer data between memory and an I/O module, and any data transfer traverses a path through the processor.

Both have two drawbacks:

- The I/O Transfer rate is limited by the speed with which the processor can test and service a device.
- The processor is tied up in managing an I/O transfer, a number of Instructions must be executed for each I/O transfer.

What is DMA?



It is often necessary to transfer data to or from an interface at data rates higher than those possible using simple programmed I/O loops.

What is Direct Memory Access?

• Hardware Mechanism that allows peripheral components to transfer their I/O data directly to and from Main Memory without involving main CPU.

Why is Direct Memory Access Important?

• Use of DMA can greatly increase throughput to and from a device because a great deal of computation overhead is eliminated.

What is the downside of DMA?

- Additional hardware support is required in the form of 'DMA Controller'.
- This controller steals cycles from CPU. Extra synchronization mechanism is needed to distinguish between update and non-updated RAM areas.

DMA Operation



What is Direct Memory Access?

DMA is a capability provided by some computer bus architectures, including PCI, PCMCIA and CardBus, which allows data to be sent directly from an attached device to the memory on the host, freeing the CPU from involvement with the data transfer and thus improving the host's performance.

DMA Programming

The programming of a device's DMA controller is hardware specific. Normally, the OS needs to have the local device address, the physical memory address on the PC, and the size of the memory block to transfer. Then the register that initiates the transfer is set.

Typical DMA Block




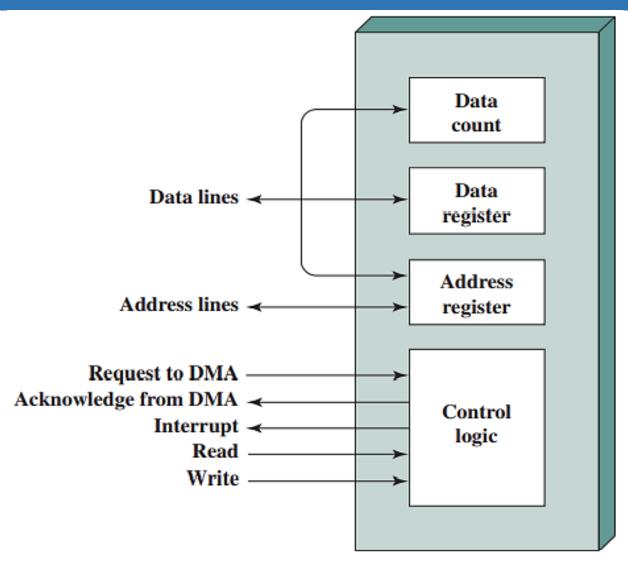


Figure 7.12 Typical DMA Block Diagram

DMA Controller Connections to CPU and I/O



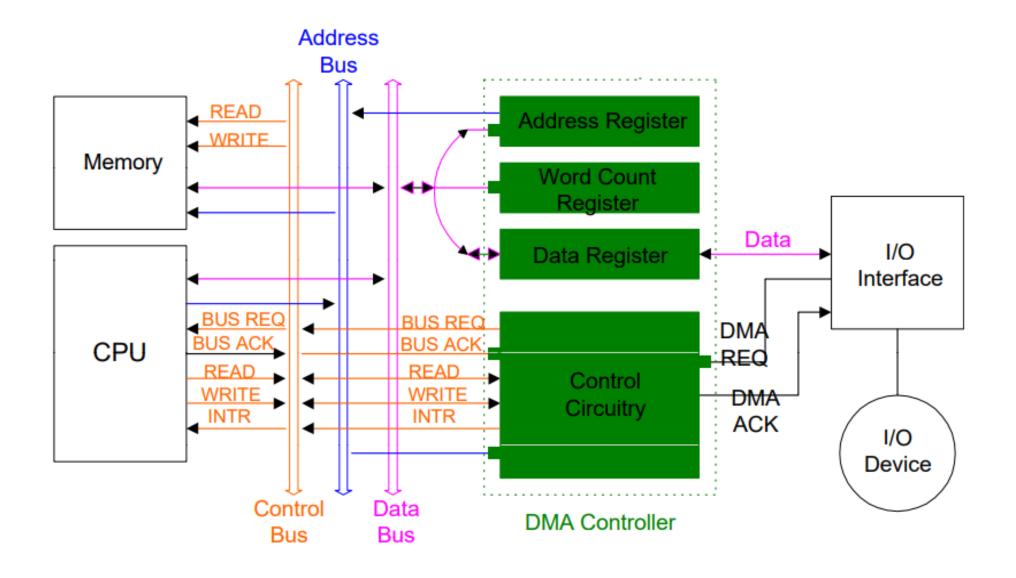


How to DMA?



- The starting location in memory to read from, or write to, is communicated on data bus and stored by the DMA module in its address registers.
- The number of words to be read or written is communicated via the data bus and stored in data count register of DMA.
- The processor then continues with other work.
- The DMA module transfers entire block of data, one word at a time, directly to or from memory without going through the processor.
- When the transfer is complete, the DMA module sends an interrupt to the processor.
- The processor is involved only at the beginning and end of data transfer operation.

Basic DMA Architecture



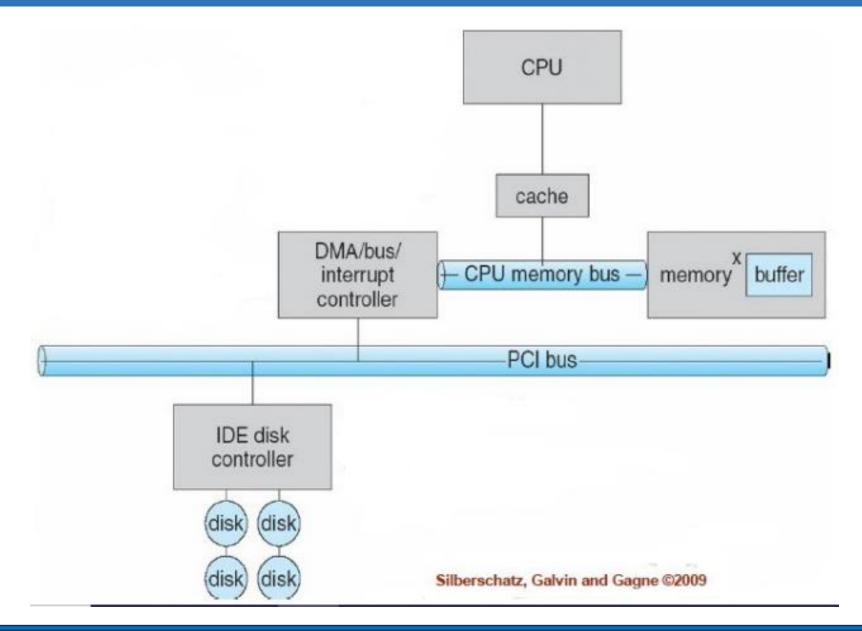


DMA Configurations



Single Bus Detached DMA


Processor DMA I/O . . . I/O Memory

(a) Single-bus, detached DMA

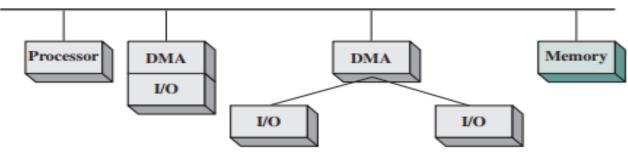

Single Bus Integrated DMA-I/O

(b) Single-bus, integrated DMA-I/O

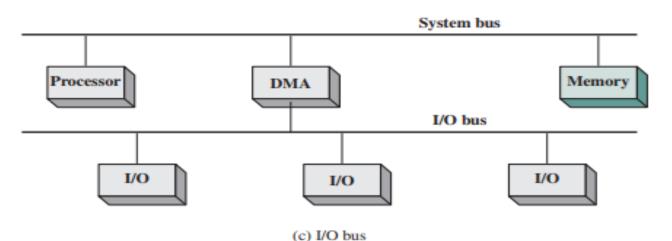


DMA through I/O Bus

Figure 7.14 Alternative DMA Configurations

DMA Configurations (1)




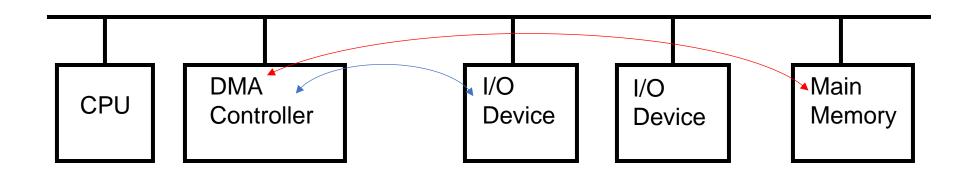

- Single Bus, Detached DMA controller
- Each transfer uses bus twice
 - I/O to DMA then DMA to memory
- CPU is suspended twice

DMA Configurations (2)




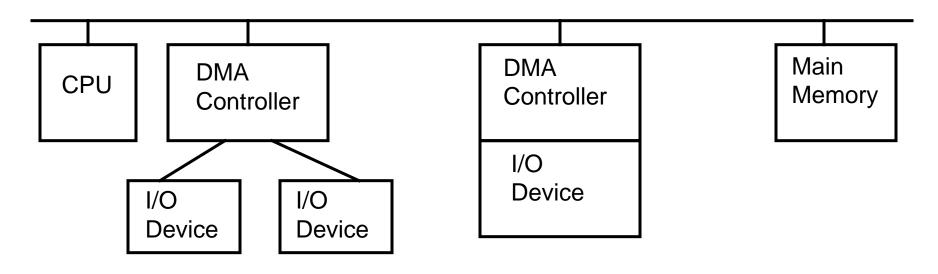

- Single Bus, Integrated DMA controller
- Controller may support >1 device
- Each transfer uses bus once
 - DMA to memory
- CPU is suspended once

DMA Configurations (3)



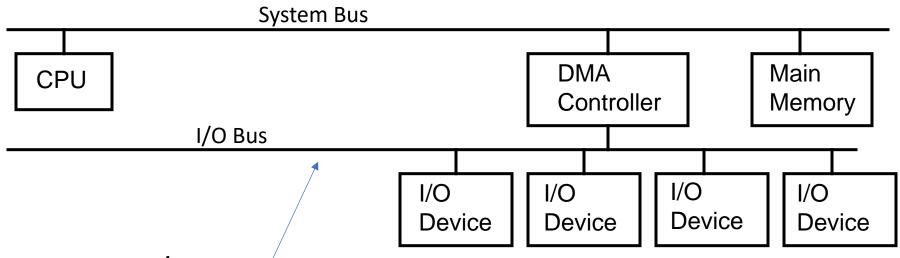

- Separate I/O Bus
- Bus supports all DMA enabled devices
- Each transfer uses Bus only once
 - DMA to memory
- CPU is suspended once

Data Read in DMA



Example of Input

- 1. Device driver allocates a DMA Buffer, sends a signal to device indicating where to send data, then sleeps.
- 2. Device writes data to DMA Buffer, raises interrupt when Finished.
- 3. Interrupt handler gets data from DMA Buffer, acknowledges Interrupt, awakens software to process the data.

Data Arrived for DMA



Hardware raises an interrupt to announce that new data has arrived


Interrupt handler associates a buffer, tells the hardware where to transfer the data

Device writes the data to the buffer, raises another interrupt when transfer is done

Interrupt handler dispatches the new data, awakens any relevant process and takes care of housekeeping

DMA Transfer - Graphically



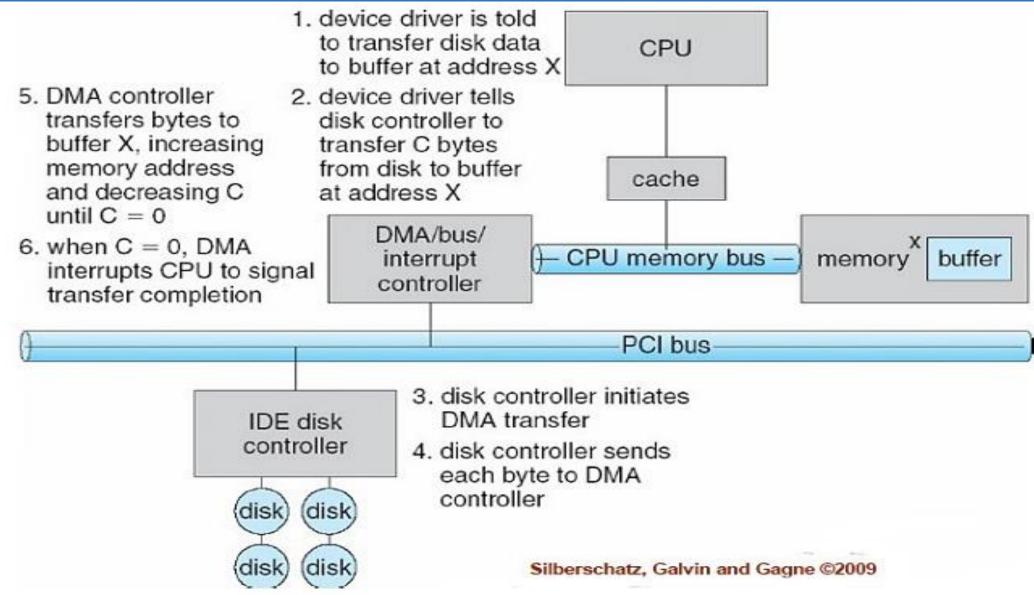


23

DMA Channels



- The 8237 DMA controller provided by IBM (International Business Machines) is a peripheral interface circuit for allowing peripheral devices to directly transfer data to or from main memory.
- It includes four independent channels and may be expanded to any number of channels by cascading additional controller chips.
- In the IBM architecture, two DMA controllers are used. One DMA controller is used for byte transfers, and the second DMA controller is user for word (16-bit) transfers.

The Intel 8237 DMA Controller Chip

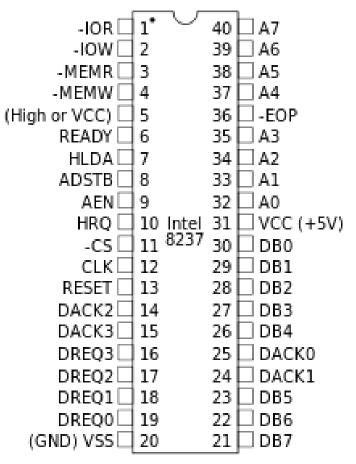



The 8237 Features:

- •Single One DMA cycle, one CPU cycle interleaved until address counter reaches zero
- •Block Transfer progresses until the word count reaches zero or the EOP signal goes active
- •Demand Transfers continue until TC or EOP goes active or DRQ goes inactive. The CPU is permitted to use the bus when no transfer is requested.
- •Cascade Used to cascade additional DMA controllers. DREQ and DACK is matched with HRQ and HLDA from the next chip to establish a priority chain. Actual bus signals is executed by cascaded chip.
- •Memory-to-memory transfer can be performed. The channel 0 Current Address register is the source for the data transfer and channel 1 and the transfer terminates when Current Word Count register becomes 0.

DMA Units of Transfer



Single

A single byte (or word) is transferred. The DMA must release and reacquire the bus for each additional byte. This is commonly-used by devices that cannot transfer the entire block of data immediately. The peripheral will request the DMA each time it is ready for another transfer.

Block/Demand

Once the DMA acquires the system bus, an entire block of data is transferred, up to a maximum of 64K. If the peripheral needs additional time, it can assert the READY signal to suspend the transfer briefly.

DMA Advantages



- DMA is fast because a dedicated piece of hardware transfers data from one computer location to another and only one or two bus read/write cycles are required per piece of data transferred.
- DMA is usually required to achieve maximum data transfer speed, and thus is useful for high-speed data acquisition devices.
- DMA also minimizes latency in servicing a data acquisition device because the dedicated hardware responds more quickly than interrupts, and transfer time is short.

DMA Disadvantages



- Cost of DMA hardware.
- DMA is useful only for DATA commands. All non-data commands have to be executed by CPU.
- Data has to be stored in continuous locations in memory.
- CPU's intervention is required for initializing DMA logic for every continuous data block transfer.

Different Modes of DMA operation



- During the DMA Transfer, CPU can perform only those operation in which it doesn't require the access of System Bus which means mostly CPU will be in blocked state.
- For how much time CPU remains in the blocked state will depend upon the following modes of DMA Transfer and after that CPU will take back control of system buses from DMAC.

There are three different modes of DMA operations:

- Burst Mode
- Cycle stealing Mode
- Transparent Mode

Burst Mode of DMA (Demand Mode)



- In burst mode, the DMA controller gets the system bus charge, after transfer completion, it will release system bus.
- In burst mode, a whole block of data is shared in one contiguous sequence. Since the DMA controller is allowed access to the system buses by the CPU, it sends all bytes of data in the data block and then yield control of the system buses back to the CPU.
- This mode is beneficial for loading programs or data records into memory.
- The CPU has to wait till that process finishes.
- This is the quickest mode of DMA Transfer since at once a huge amount of data is being transferred.

Cycle Stealing Mode of DMA (Byte Mode)



- In cycle stealing mode, the CPU gets forced by DMA controller to stop the operation and withdraw the control from bus for a short period of time.
- The DMA will release the bus and will request the system bus, like this, DMA will use the cycle clock for sending data bytes.
- It already issues requests via BR, sharing one byte of information per request
- Slow IO device will take some time to prepare data (or word) and within that time CPU keeps the control of the buses.
- Once the data or the word is ready, CPU gives back control of system buses to DMA Controller for 1cycle in which the prepared word is transferred to memory.
- As compared to Burst mode, this mode is slow since it requires some time which is actually consumed by I/O device while preparing the data.
- Once the DMA controller is granted access to the system bus by the CPU, it transfer one byte of data then it releases the memory access to CPU. Again, for another byte of transfer, it must acquire bus access by CPU via BR and BG signal (BUS REQUEST and BUS GRANT). For Every Byte of Transfer, it acquires bus access and releases it until entire Block of Data Transferred.
- DMA controllers can operate in a cycle stealing mode in which they take over the bus for each byte of data to be transferred and then return control to the CPU.

Comparing Burst Mode and Cycle Stealing Mode of DMA



Parameter	Burst Mode of DMA	Cycle Stealing Mode of DMA
Definition	It is the DMA data transfer technique in which no. of data words are transferred continuously until whole data is not transferred.	It is the data transfer technique in which one data word is transferred and then control is returned to CPU.
Data Transfer	Data transfer Continues until whole data is not transferred.	Data is transferred Only when CPU is idle.
Speed	This is very fast data transfer technique and is used to transfer data for fast speed devices.	It is the slow data transfer technique as data is transferred only when CPU is idle
CPU Utilization	Low CPU Utilization because CPU remains idle until whole data is not transferred.	High CPU utilization because data is transferred when CPU has no task to perform.
Extra Overhead	No need to check CPU idleness	Extra Overhead because every time CPU has to be monitored for idle periods or slots.

Transparent (Interleaving) Mode of DMA




- In transparent mode, the DMA controller will use system bus when the processor does not need system bus.
- Whenever CPU does not require the system buses then only control of buses will be given to DMA Controller.
- In this mode, CPU will not be blocked due to DMA at all.
- This is the slowest mode of DMA Transfer since DMA Controller has to wait for so long time to just even get the access of system buses from the CPU itself.
- The primary advantage of transparent mode is that the CPU never stops executing its programs and the DMA transfer is free in terms of time.
- While the disadvantage is that the hardware needs to determine when the CPU is not using the system buses, which can be complex.

Direct Cache Access



The I/O Channel allows access to the level of cache that is closest to Main Memory Could be L2 or L3 cache.

Usually, a packet-based data transfer is used.

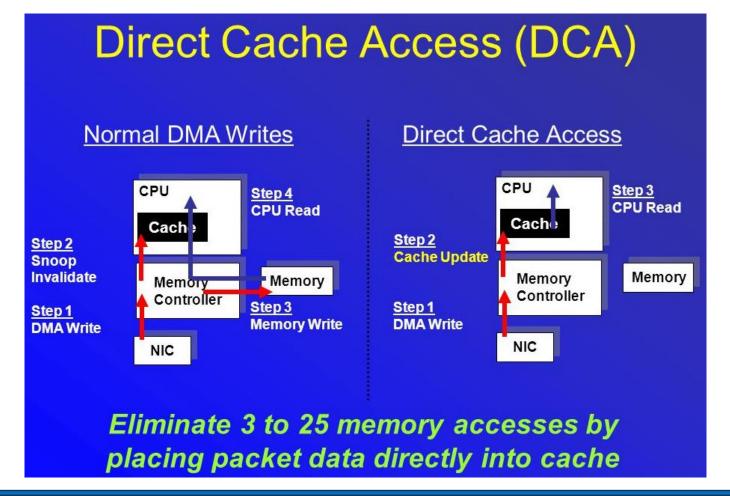

DMA and DDIO




DDIO = Direct Data I/O


CPU caches are used as the primary source and destination for I/O, allowing <u>network</u> interface controllers (NICs) to DMA directly to the Last level cache (L3 cache) of local CPUs and avoid costly fetching of the I/O data from system RAM.

As a result,


- DDIO reduces the overall I/O processing latency,
- allows processing of the I/O to be performed entirely in-cache,
- prevents the available RAM bandwidth/latency from becoming a performance bottleneck,
- and may lower the power consumption by allowing RAM to remain longer in lowpowered state.

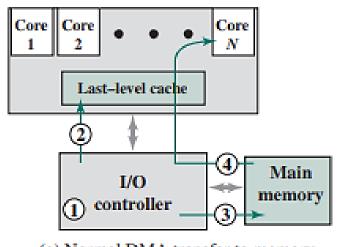

(a) Normal DMA transfer to memory

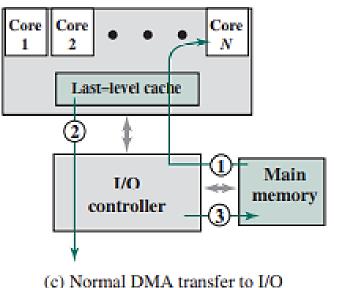

(c) Normal DIVIA transfer to 1/O

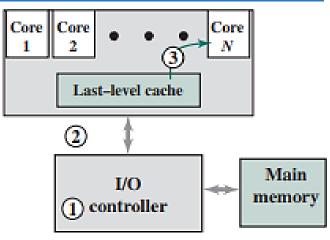

(b) DDIO transfer to cache

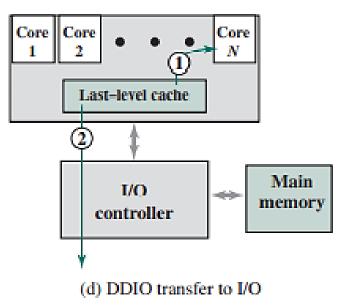


Figure 7.17 Comparison of DMA and DDIO



VIRTUAL MEMORY

Three problems in Memory



- Not Enough RAM in computer. We want to be able to run programs even
 if we don't have enough physical memory installed
- Holes in Address Space Run multiple programs, then close some of them. Chunks of distributed un-used memory spaces are apparent
- Programs overwriting each other how to provide Security
- VIRTUAL MEMORY uses Indirection Addresses that program use are artificially MAPPED to real address in Memory. We can control where the memory goes and how to use it
- PAGE TABLE and TRANSLATIONS how the mappings are done and stored
- Also need to worry how Virtual Memory interacts with Caches

Problems in using Shared Address Space



1 GB	Physical RAM
2	
3	
4	
5	
6	
7	
8	

Program 1
Program 2
Program 3

Depending upon how programs were called and removed, we may run out of continuous RAM space Though smaller spaces may exist. This is called **Holes**.
Same Physical Spaces maybe Overwritten causing Security Issues.

Idea of Virtual Memory



- Give each program its own Virtual Memory Space
- Separately map each program's virtual memory space to RAM's physical memory space
- Use Disk space if RAM space runs out
- Mapping gives us flexibility how we use Physical RAM space

How does Virtual Memory work?



Basic idea: separate memory spaces

- Virtual memory: what the program sees
 - e.g., ld R4, 1024(R0) accesses virtual address R0+1024=1024
- Physical memory: the physical RAM in the computer
 - e.g., if you have 2GB of RAM installed, you have physical addresses 0 to 2³¹-1

Virtual Addresses (VA)

- What the program uses
- In MIPS, this is the full 32-bit address space: 0 to 2³²-1

Physical Addresses (PA)

- What the hardware uses to talk to the RAM
- Address space determined by how much RAM is installed

What is Virtual Memory?



- An illusion of a memory much larger than the physical (main) memory
 - Large virtual address space, in spite of limited physical address space
 - Both spaces divided into equal sized pages an alternative of this is segmentation, in which division is on the logical boundaries
 - There may be multiple virtual spaces, one for each program

Virtual Memory and Hard Disk




- Implemented using hard disk drive
 - Each virtual page has a place on the disk
 - Some of these may also be in the main memory
 - The subset present in the main memory changes from time to time as per the need
- ISA must support large address spaces
- Hardware + software take care of the rest

Indirection in Virtual Memory




With Virtual Memory, Program Address MAPS to RAM Address

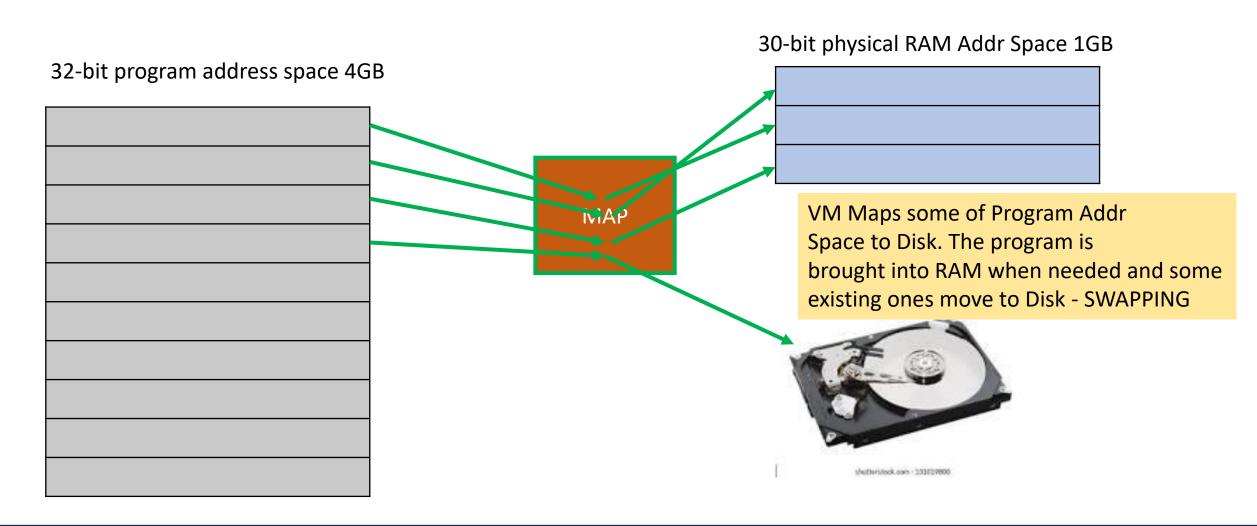

Solving Problem of Holes in Memory and Security




Each Program has its own MAPPING
We can map a program's address to RAM address in any way

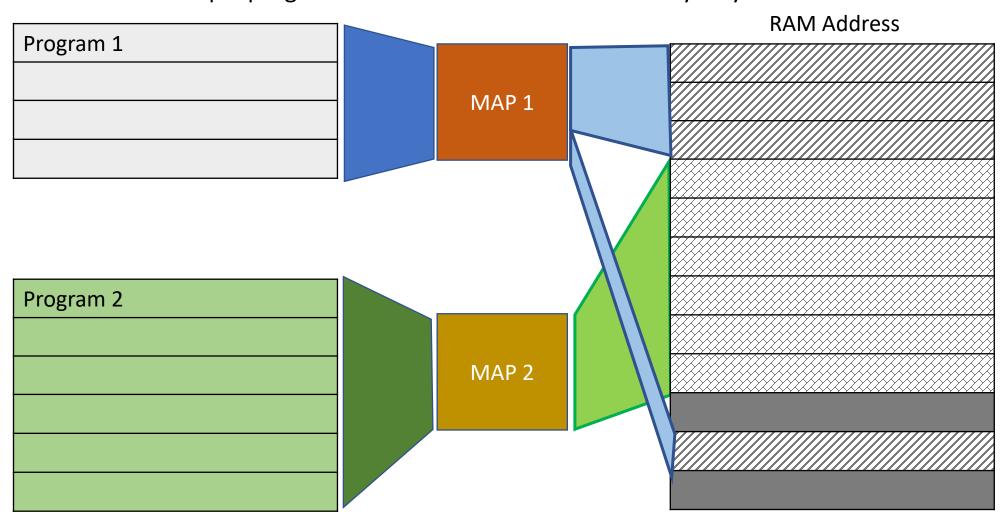

Each VM MAP uses a Unique area in RAM so Data stays independent and Secure

Virtual to Physical Mapping



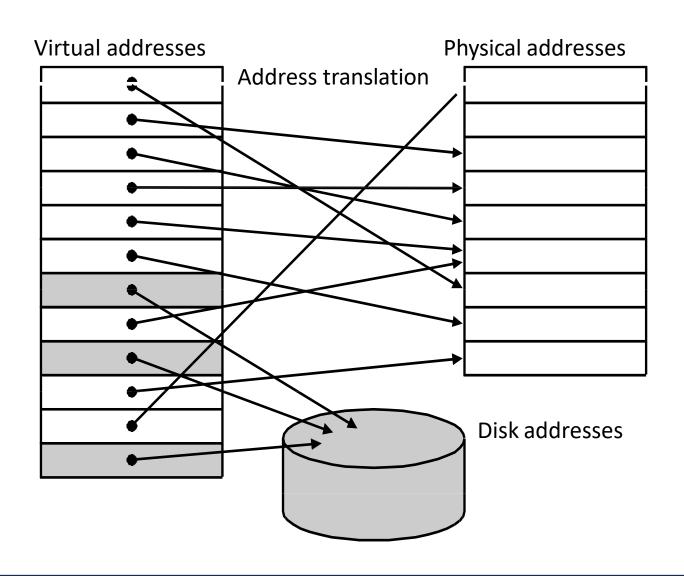


Address Update in Map Table



How does a program access memory?

- Program executes a load with a virtual address (VA)
- Computer translates the address to the physical address (PA) in memory
- 3. (If the physical address (PA) is not in memory, the operating system loads it in from disk)
- The computer then reads the RAM using the physical address (PA) and returns the data to the program

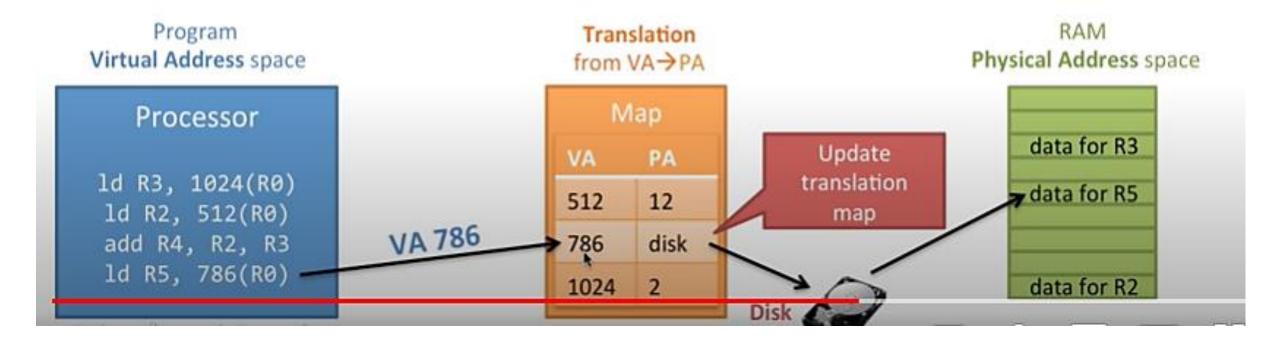

Virtual Memory Concept



- Use main memory as a "cache" for secondary (disk) storage
 - Managed jointly by CPU hardware and the operating system (OS)
- Programs share main memory
 - Each gets a private virtual address space holding its frequently used code and data
 - Protected from other programs
- CPU and OS translate virtual addresses to physical addresses
 - VM "block" is called a page
 - VM translation "miss" is called a page fault

Virtual Memory Concept




- Use main memory as a "cache" for secondary (disk) storage
 - Managed jointly by CPU hardware and the operating system (OS)
- Programs share main memory
 - Each gets a private virtual address space holding its frequently used code and data
 - Protected from other programs
- CPU and OS translate virtual addresses to physical addresses
 - VM "block size" is called a page
 - VM translation "miss" is called a page fault

Indirection in Virtual Memory



With Virtual Memory, Program Address MAPS to RAM Address

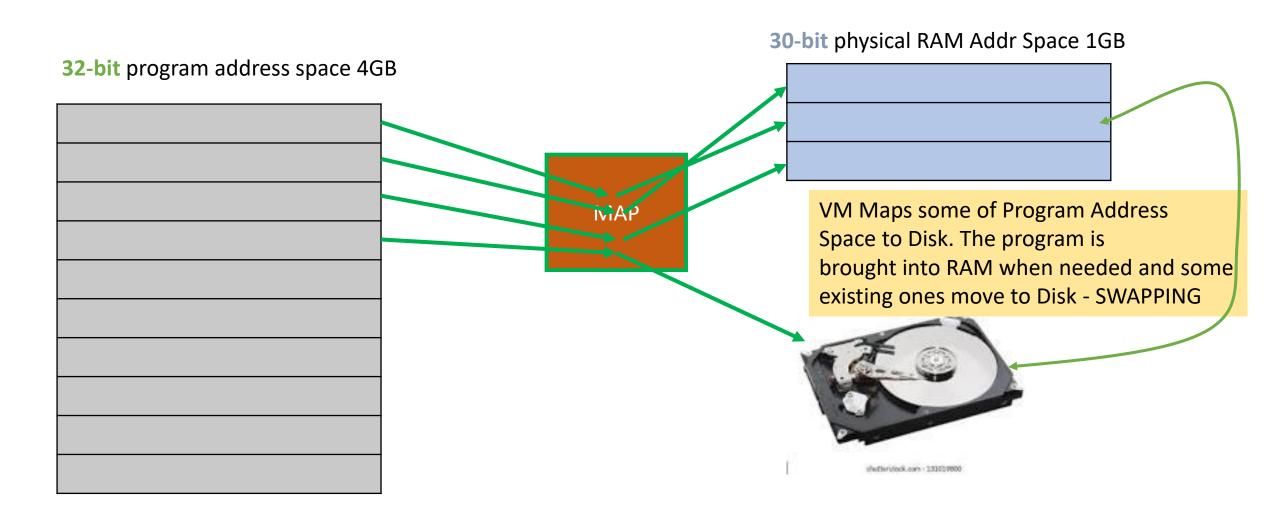

Making VM Work through Translation



How does a program access memory?

- Program executes a load with a virtual address (VA)
- Computer translates the address to the physical address (PA) in memory
- 3. (If the physical address (PA) is not in memory, the operating system loads it in from disk)
- The computer then reads the RAM using the physical address (PA) and returns the data to the program

Program
Virtual Address space

Processor

ld R3, 1024(R0) ld R2, 512(R0)



Translation from VA→PA

Мар			
VA	PA		
512	12		
786	disk		
1024	2		



RAM
Physical Address space


data for R3

VM Translation and Disk




How does a program access memory?

- Program executes a load with a virtual address (VA)
- 2. Computer translates the address to the physical address (PA) in memory
- 3. (If the physical address (PA) is not in memory, the operating system loads it in from disk)
- The computer then reads the RAM using the physical address (PA) and returns the data to the program

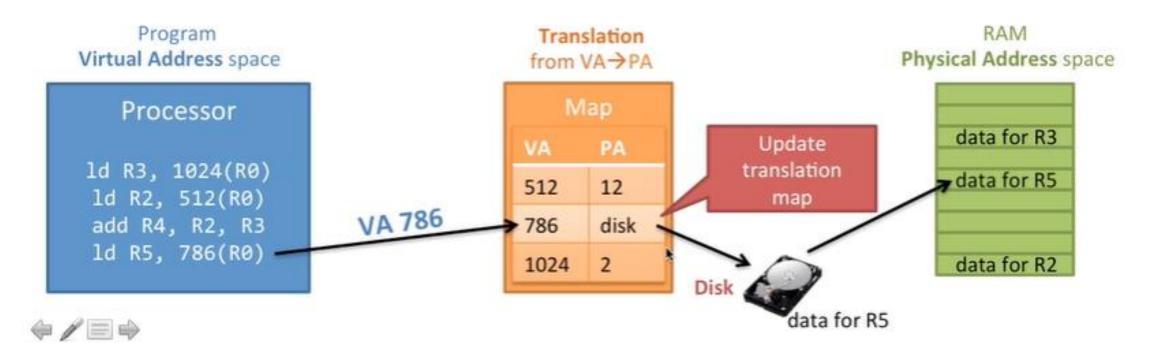

Mapping Pages to Storage



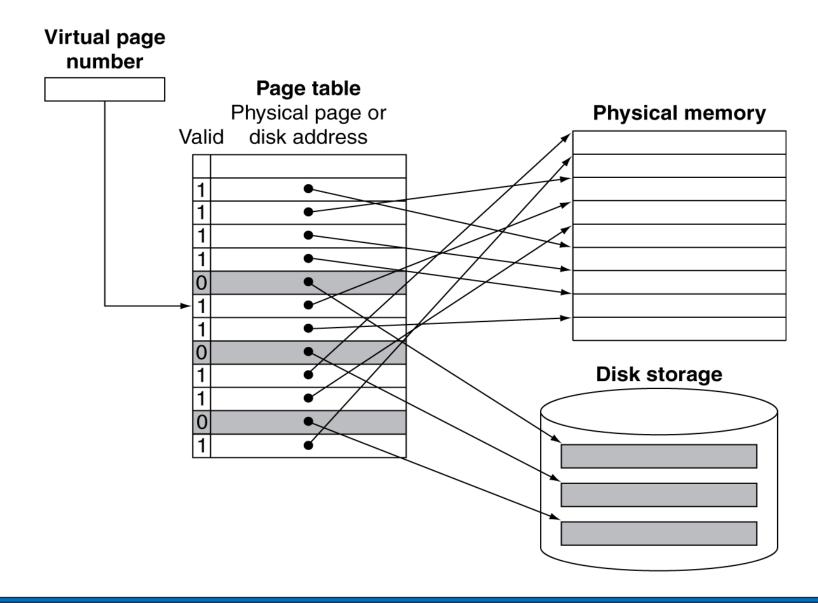

Page Table Size Management



We need to translate every possible address in 32-bit Virtual Address Space This is 1 Giga Word (32 bit) Locations or 4 Giga Byte (8 bits) locations We need extra 1 Giga locations to store Page Tables !!!

We divide memory into PAGES instead of WORDS

Fine Grain – VA to PA MAP

Maps each VA address location to PA


Fine Grain

VA	PA
512	12
786	3
1024	2

Coarse Grain – VA to PA MAP

Maps each 4KB chunk 'page' to PA

Coarse Grain

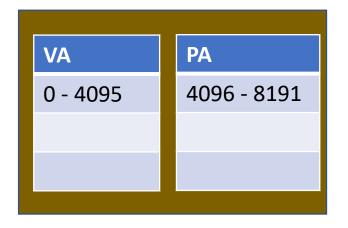

Use Page Address Instead of Word Address



Coarse Grained Addressing

- The Page Table manages larger chunks (pages) of data:
 - Fewer Page Table Entries needed to cover the whole address space
 - But, less flexibility in how to use the RAM (have to move a page at a time)
- Today:
 - Typically 4kB pages (1024 words per page)
 - Sometimes 2MB pages (524,288 words per page)


Q: How many entries do we need in our Page Table with 4kB pages on a 32-bit machine?

- O 1 for every word = 2³⁰ = 1 billion
- O 1 for every 1024 words = 1 million
- O 1 for every 4096 words = 262,144

A: 1 for every 1024 words = 1 million
With 4kB pages we have 1024 words per
page. That means we need 1 Page Table
Entry for every 1024 words. In total we
have 1 billion words, so 1 billion ÷ 1024
is 1 million Page Table Entries. This is
much more manageable.

Coarse-grain: maps chunks of address


Page Table translates VA→PA

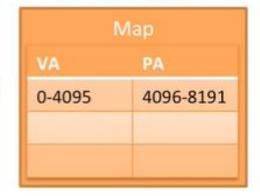




How to Map Address with Pages?



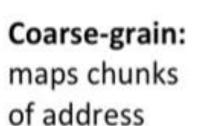




Page Table

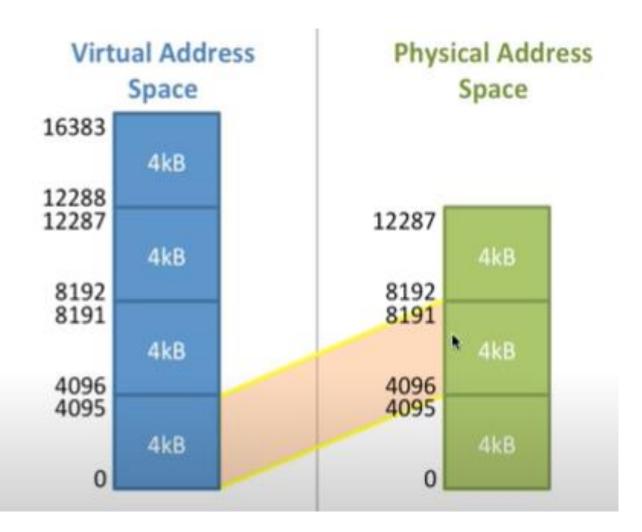

Address Translation - Concept




- What happens on a 32-bit machine with 256MB of RAM and 4kB pages?
 - 32-bit Virtual Addresses
 - 28-bit Physical Addresses

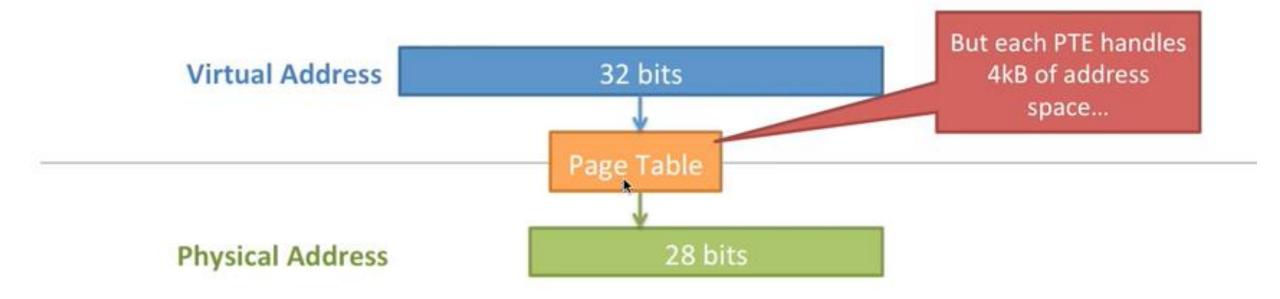

Address Translation



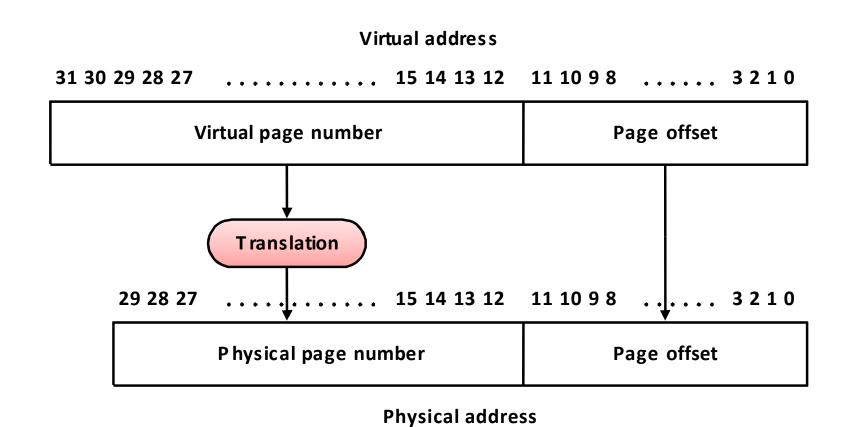

Where is Page Table Stored?




How big is Page Table?

- Suppose virtual address = 32 bits, page size = 4 KB,
 page table entry = 4 B
- then number of page table entries = number of pages = $2^{32} / 2^{12} = 2^{20}$
- page table size = 2^{20} x 2^2 = 4 MB
- hundreds / thousands of processes

Store in dedicated memory? main memory?

How to Do a Page Table Lookup?

How to do a page table lookup

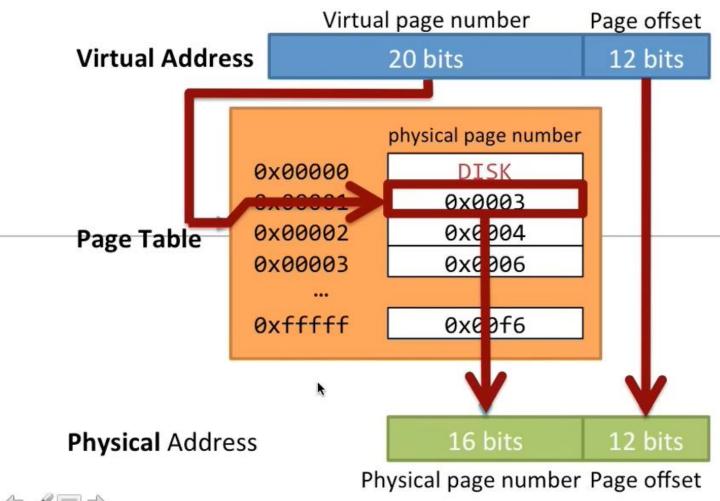


- Virtual page number translated to the physical page number
- Page offset untranslated
- Page Table keeps mappings for every virtual page > physical page

Address Translation in Page Tables




 What happens on a 32-bit machine with 256MB of RAM and 4kB pages?

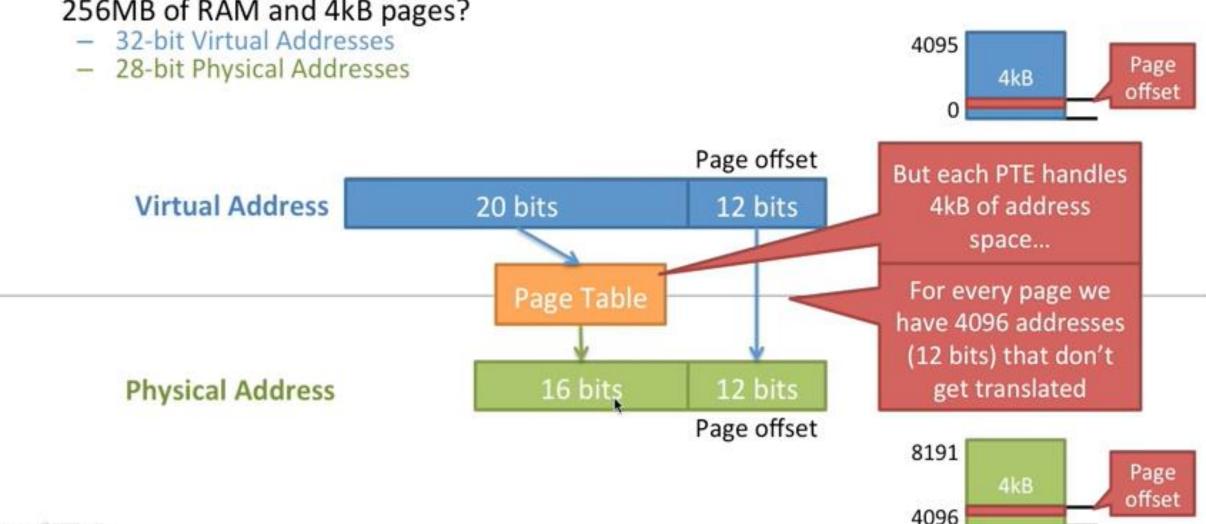

Pages, Offset and Translation




 What happens on a 32-bit machine with 256MB of RAM and 4kB pages?

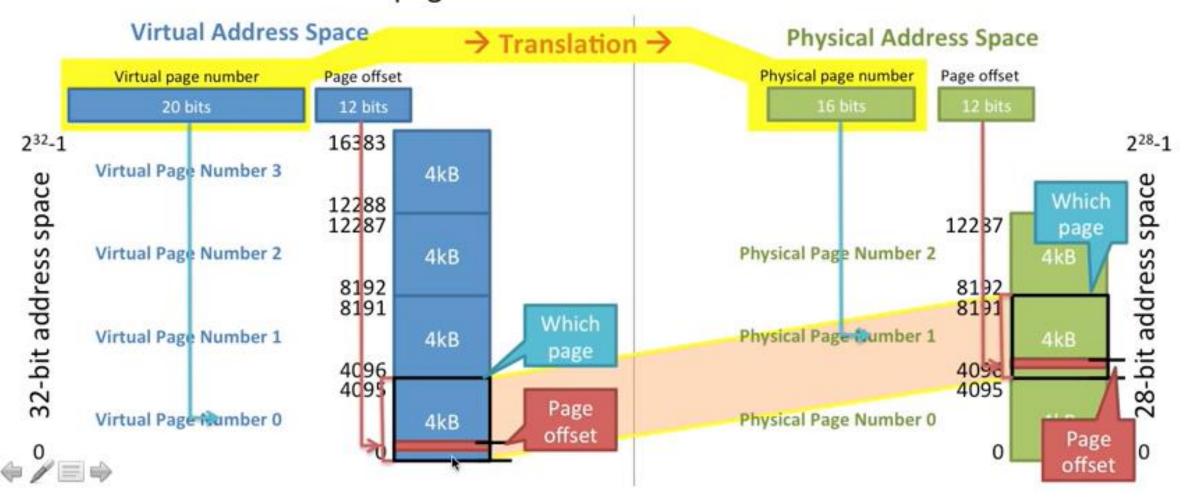


How to do a Page Table Lookup?



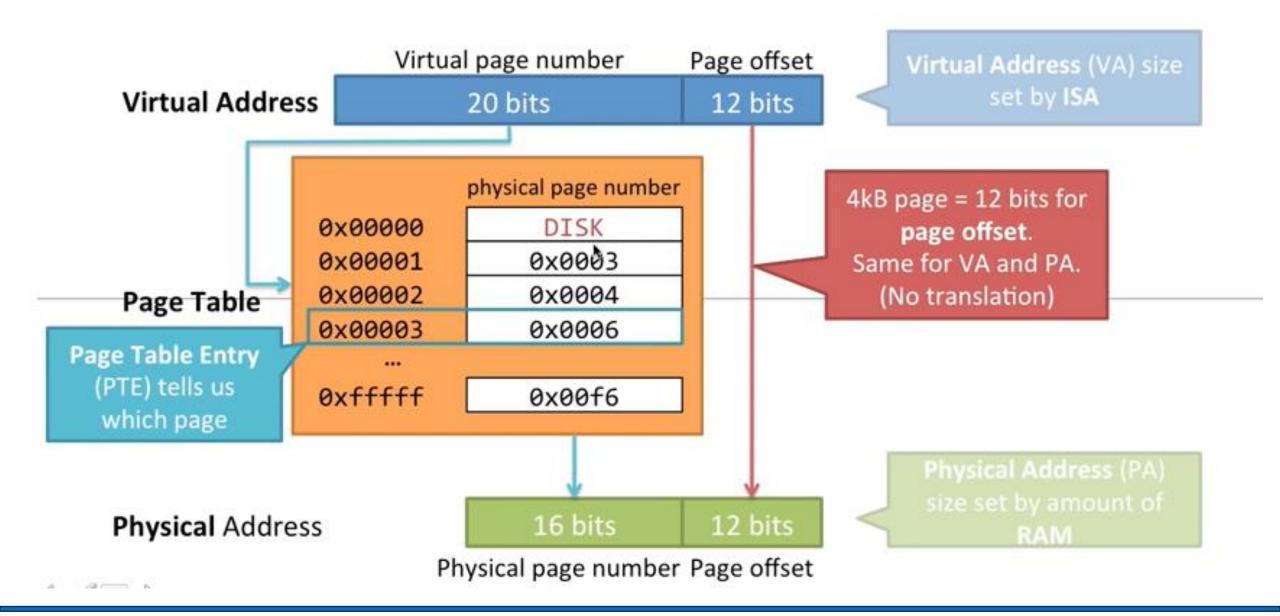


Example Translation (1)



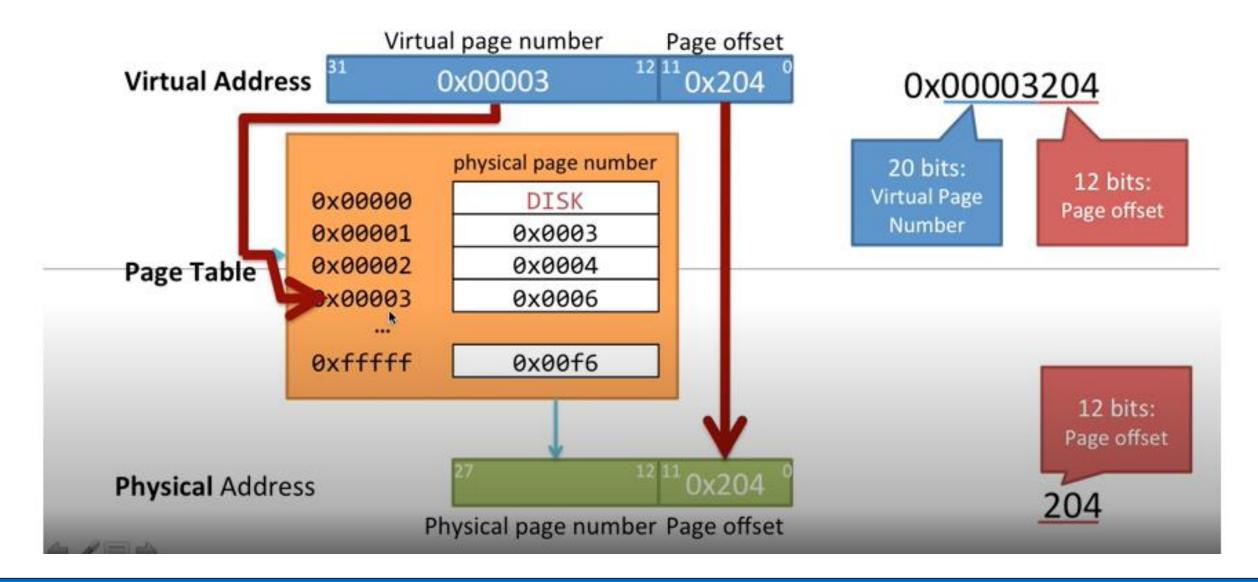


Example Translation (2)



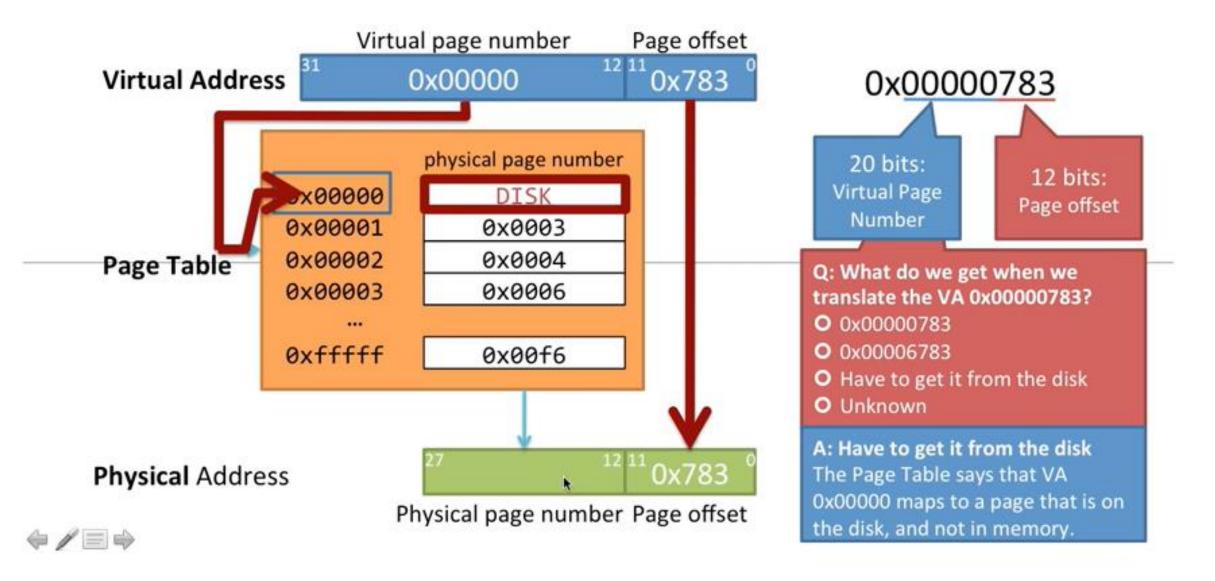

Example Translation for 64KB Pages



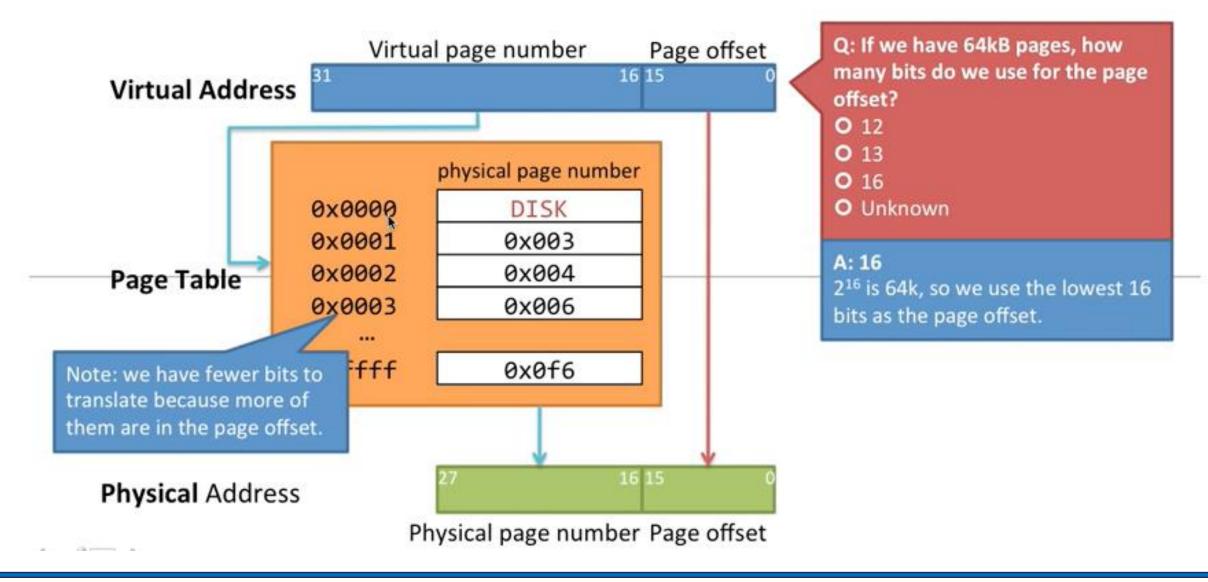

What happens if a Page is not in RAM - Fault



- Page Table Entry says the page is on disk
- Hardware (CPU) generates a page fault exception
- The hardware jumps to the OS page fault handler to clean up
 - The OS chooses a page to evict from RAM and write to disk
 - If the page is dirty, it needs to be written back to disk first
 - The OS then reads the page from disk and puts it in RAM
 - The OS then changes the Page Table to map the new page
- The OS jumps back to the instruction that caused the page fault.
 - (This time it won't cause a page fault since the page has been loaded.)

Q: How long does this take?

- No time
- O A short time
- A long time
- An amazingly, incredibly, painfully long time

A: An amazingly, incredibly, painfully long time
Disks are much slower than RAM, so every time you have a page fault it takes an amazingly, incredibly, painfully long time.

"Dirty" means the data has been changed (written). If the page has not been written since it was loaded from disk, then it doesn't have to be written back.

How long does a Page Fault Take?



- Hardware (CPU) generates a page fault exception ~100 cycles
- The hardware jumps to the OS page fault handler to clean up
 - The OS chooses a page to evict from RAM and write to disk
 - If the page is dirty, it needs to be written back to disk first
 - The OS then reads the page from disk and puts it in RAM
 - The OS then changes the Page Table to map the new page
- The OS jumps back to the instruction that caused the page fault.
 - (This time it won't cause a page fault since the page has been loaded.)

~10,000 cycles

~10,000 cycles

~40,000,000 cycles

~40,000,000 cycles

~1,000 cycles

In the time it takes to do handle one page fault you could execute 80 million cycles on a modern CPU.

Page faults are the SLOWEST possible thing that can happen to a computer (except for human interaction).



Virtual Memory in Practice




- VM is great:
 - Unlimited programs/memory, protection, flexibility, etc.
- But it comes at a high cost:
 - Every memory operation has to look up in the page table
 - Need to access 1) the page table and 2) the memory address (2x memory accesses)
 (Remember, 1.33 memory accesses per instruction. This is going to hurt.)
- How can we make a page table look up really really fast?
 - Software would be far too slow (e.g., an extra 5 instructions for every memory access would kill performance)
- Perhaps a hardware page table cache?

Making VM Fast through the TLB



- To make VM fast we add a special Page Table cache: the Translation Lookaside Buffer (TLB)
 - Fast: less than 1 cycle (have to do it for every memory access)
 - Very similar to a cache
- To be fast, TLBs must be small:
 - Separate TLBs for instructions (iTLB) and data (dTLB)
 - 64 entries, 4-way (4kB pages)
 - 32 entries, 4-way (2MB pages)
 (Page Table is 1M entries)

Lots of locality!
Miss rates are typically
only a few percent.

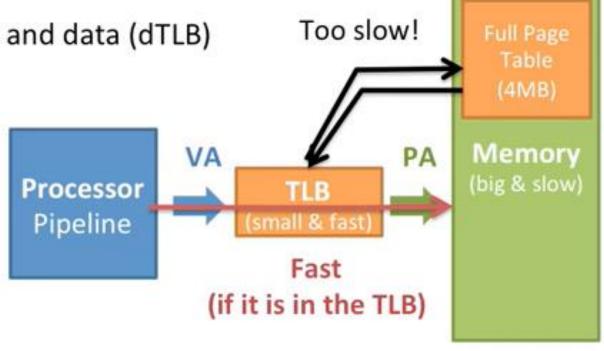

What happens when we Access Memory?




Good: Page in RAM

- PTE in the TLB
 - Excellent
 - <1 cycle to translate, then go to RAM (or cache)
- PTE not in the TLB
 - · Poor
 - 20-1000 cycles to load PTE from RAM, then go to RAM

Bad: Page not in RAM

- PTE in the TLB (unlikely)
 - Horrible
 - 1 cycle to know it's on disk
 - ~80M cycles to get it from disk
- PTE not in the TLB
 - (ever so slightly more) horrible
 - ~80M cycles to get it from disk


With 1.33 memory accesses per instruction we can't afford 20-1000 cycles very often.

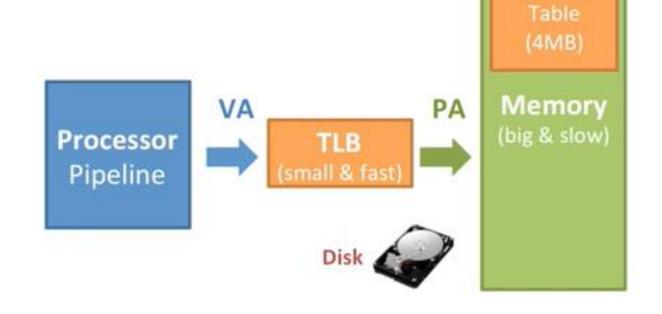



Example TLB Translation

Example translation (empty TLB)

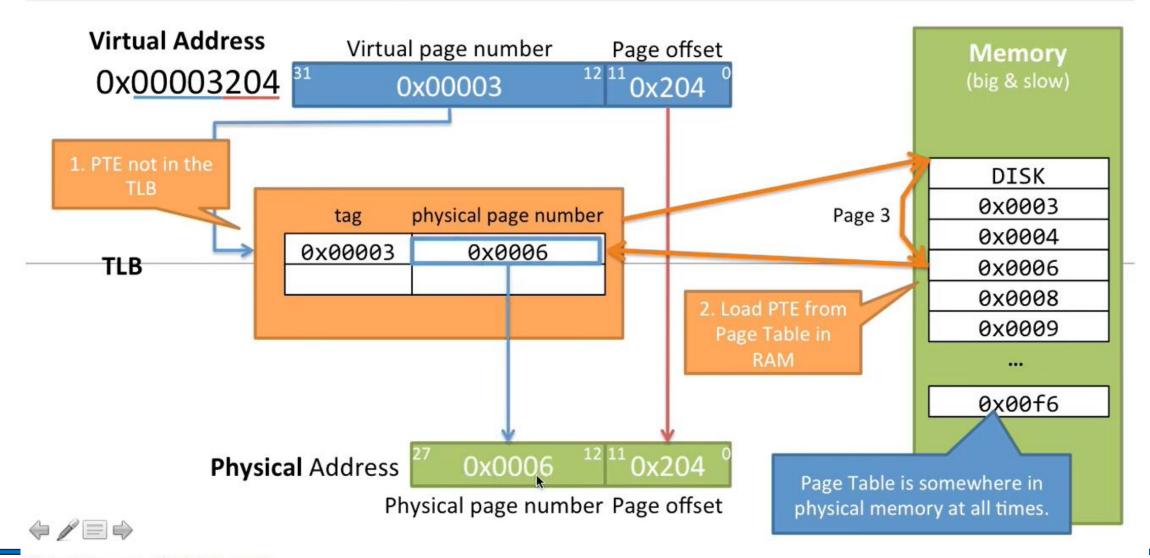

Readings

• Chap 5, 6 of P&H Textbook

Acknowledgement: Youtube channel of David Schaffer