

C\$ / EE 320 Computer Organization and Assembly Language Spring 2024 Lecture 23

Shahid Masud

Topics: Address Decoding Examples, Cache and Memory Hierarchy, Direct Mapped Cache, Some Examples

Topics

- Examples of Memory Address Decoding
- Caches and Memory Hierarchy
- Direct Mapped Caches
- Example of Direct Mapped Caches



Memory Organization and Address Decoding Examples






Question?

Is this

2D Momory organization


2D Memory organization OR

2.5D Memory Organization

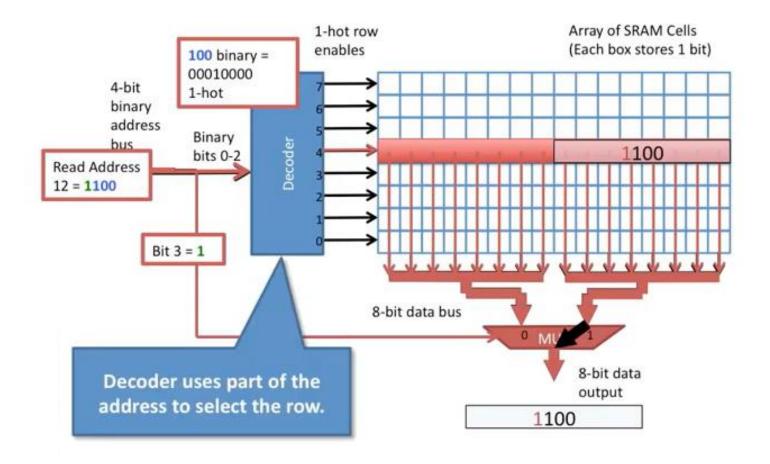


Organization of a 1Kx1 Memory Chip

2.5 D Memory Organizationof a 1K x 1 Chip made from32 x 32 Memory Cell Array

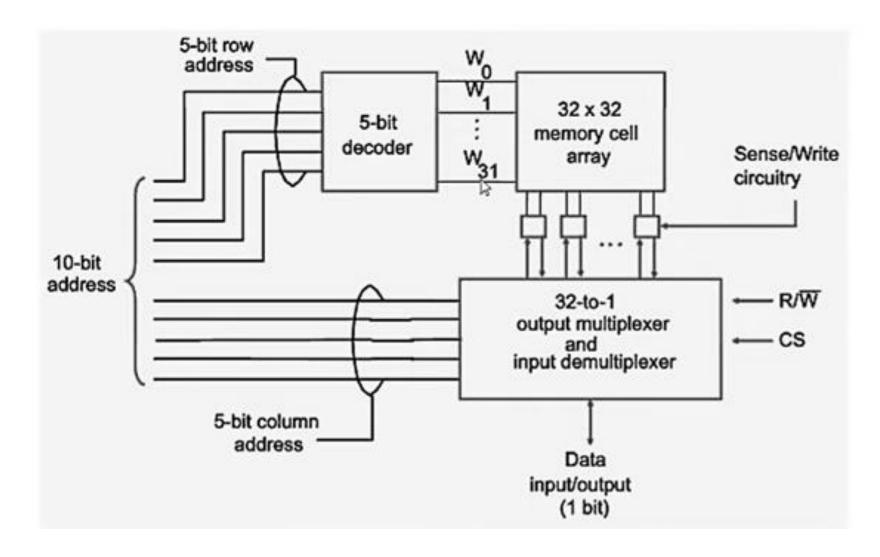


Example 2

Two Four-Word by Four-Bit RAMs are Used in Creating a Four-Word by Eight-Bit RAM

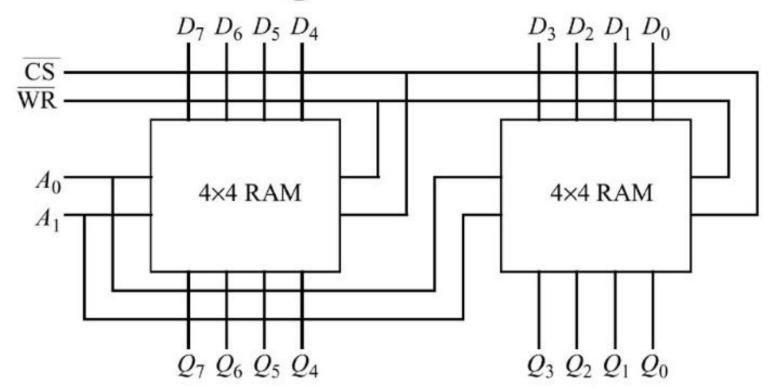

Typical 16 Mb DRAM (4M x 4)



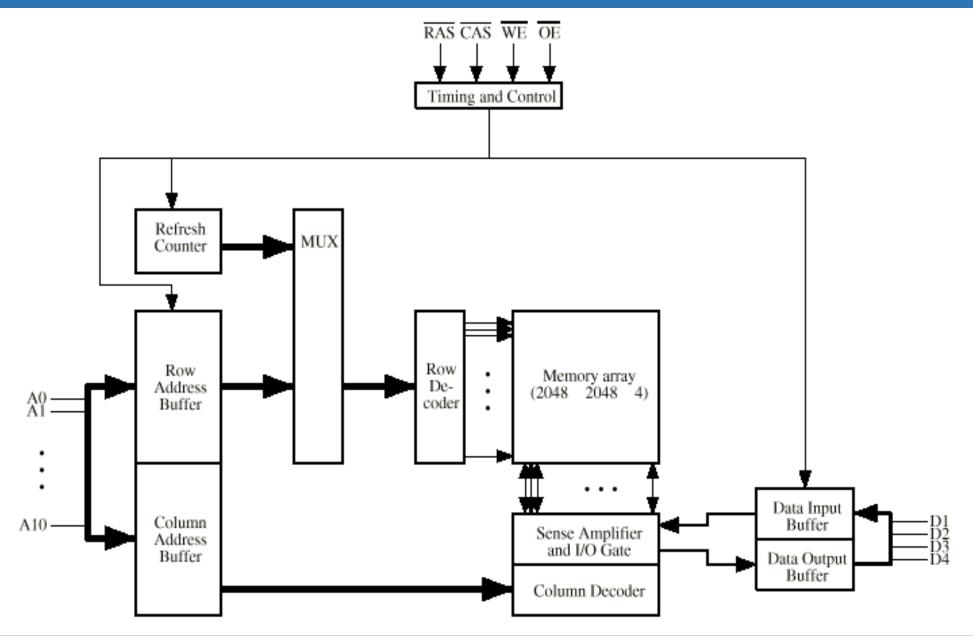

Example 1 to Solve – Memory Organization

Design a 512 Bytes RAM Memory using blocks of size 128 x 8 bits

- A. No of blocks needed?
- B. Address Bits needed?
- C. Size of Address Decoder?
- D. Draw the Organization

Example 2 to Solve – Memory Organization

Design a 16 Kilo Bytes RAM memory using blocks of size 128 x 1 bit

- A. No of blocks needed?
- B. Address Bits needed?
- C. Size of Address Decoder?
- D. Draw the Organization



Locality of Reference in Memory Access

Locality of Reference

- During the course of the execution of a program, memory references tend to cluster
- e.g. loops

Principle of Locality

- Programs access a small proportion of their address space at any time
- Temporal locality
 - Items accessed recently are likely to be accessed again soon
 - e.g., instructions in a loop, induction variables
- Spatial locality
 - Items near those accessed recently are likely to be accessed soon
 - E.g., sequential instruction access, array data

Taking Advantage of Locality

- Distribute total Memory in hierarchy
- Store everything on disk
- Copy recently accessed (and nearby) items from disk to smaller DRAM memory
 - Main memory
- Copy more recently accessed (and nearby) items from DRAM to smaller SRAM memory
 - Cache memory attached to CPU


The Memory Hierarchy


The BIG Picture

- Common principles apply at all levels of the memory hierarchy
 - Based on notions of caching
- At each level in the hierarchy
 - Block placement
 - Finding a block
 - Replacement on a miss
 - Write policy

Memory Hierarchy Levels



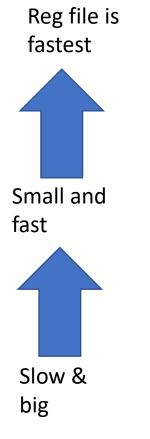


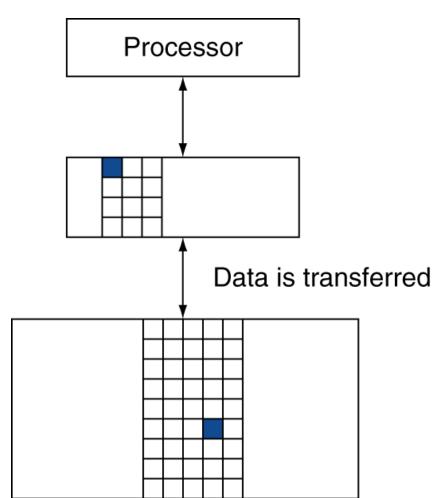

- Block (or line): one unit of copying
 - May be multiple words
- If accessed data is present in upper level
 - Hit: access satisfied by upper level
 - Hit ratio: hits/accesses
- If accessed data is absent
 - Miss: block copied from lower level
 - Time taken: miss penalty
 - Miss ratio: misses/accesses
 = 1 hit ratio
 - Then accessed data supplied from upper level

Average access time vs Hit ratio



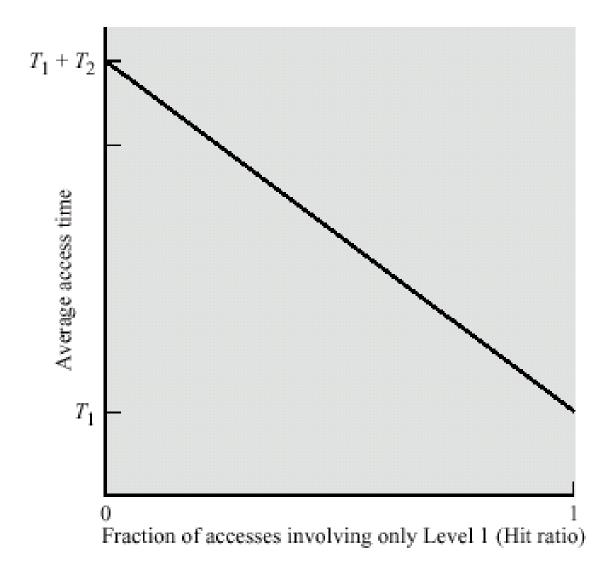





Cache Memory

Cache and Memory

- Small amount of fast memory
- Sits between normal main memory and CPU
- May be located on CPU chip or module

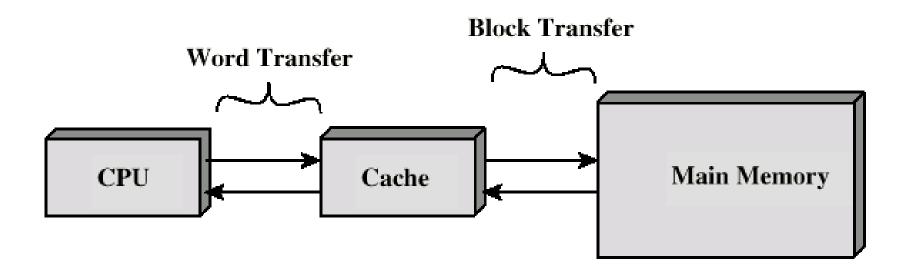


Typical Cache Organization

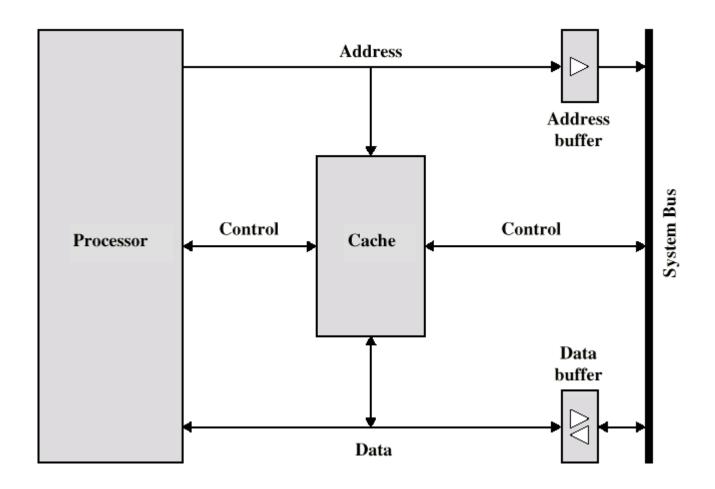

Idea of Cache Memory


- Put the important data in a small fast memory (cache)
- If we access (load/store) that important data, we can do it quickly
- If we access (load/store) other data, we move it into the cache

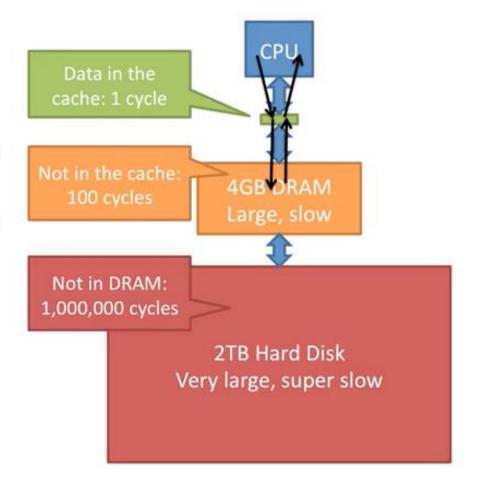

Performance of Caches and Memory

- Accessing data in DRAM takes 100 cycles
- Accessing data in Cache (SRAM) takes 1 cycle
- 33% of instructions are load/stores

Ignore loading instructions for now (we'll add a second memory for this later)

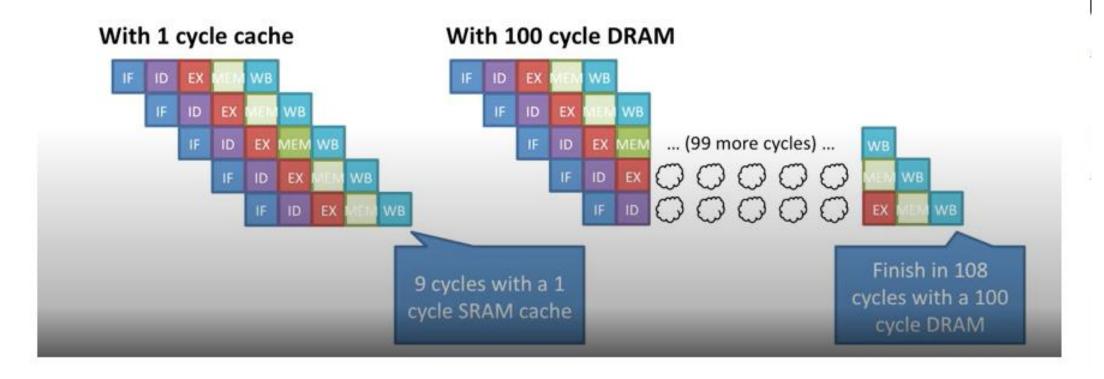

Cache operation - Overview

- CPU requests contents of memory location
- Check cache for this data
- If present, get from cache (fast)
- If not present, read required block from main memory to cache
- Then deliver from cache to CPU
- Cache includes tags to identify which block of main memory is in each cache slot

Cache Design Parameters

- Size
- Mapping Function
- Replacement Algorithm
- Write Policy
- Block Size
- Number of Caches

Cache Size vs Speed

- Cost
 - More cache is expensive
- Speed
 - More cache is faster (up to a point)
 - Checking cache for data takes time

Cache Capacity Limits

What do we do when we run out of space?

Replacement policy

- Need to choose some data in the cache to remove (evict)
- Want to choose data that isn't going to be used soon

Approaches:

- Direct-mapped: only one block we can evict (because each block can only go in one place)
- Set/Fully-associative:
 - Choose a random block to evict
 - Choose the least recently used (LRU) block to evict



Direct Mapped Cache

Direct Mapping

- Each block of main memory maps to only one cache line
 - i.e. if a block is in cache, it must be in one specific place
- Address is in two parts
- Least Significant w bits identify unique word
- Most Significant s bits specify one memory block
- The MSBs are split into a cache line field r and a tag of s-r (most significant)


Mapping Function

- Cache of 64kByte
- Cache block of 4 bytes
 - i.e. cache is 16k (2¹⁴) lines of 4 bytes
- 16MBytes main memory
- 24 bit address
 - (2²⁴=16M)

Direct Mapped Cache




- Location determined by address
- Direct mapped: only one choice
 - (Block address) modulo (No. of Blocks in cache)

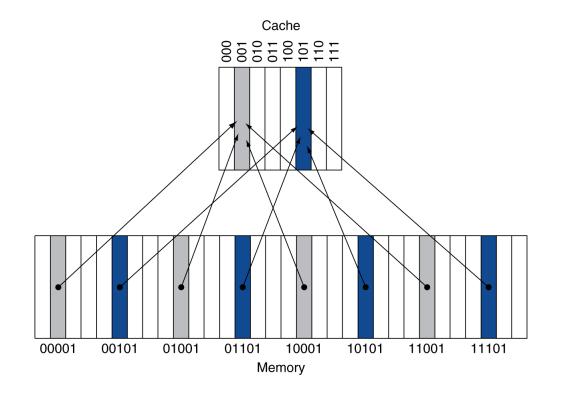

- #Blocks is a power of 2
- Use low-order address bits

Direct Mapping Example



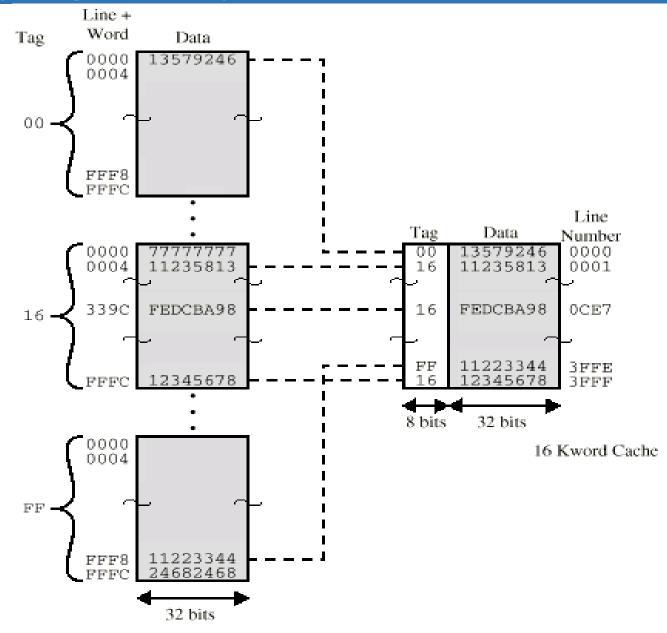

Direct Mapping Cache Line Table



Cache line

Main Memory blocks held

• 0

0, m, 2m, 3m..., 2s-m

• 1

1,m+1, 2m+1...., 2s-m+1

•

• m-1

m-1, 2m-1, 3m-1,, 2^s-1

Direct Mapping Address Structure



Tag s-r	Line or Slot r	Word w
8	14	2

- 24 bit address
- 2 bit word identifier (4 byte block)
- 22 bit block identifier
 - 8 bit tag (=22-14)
 - 14 bit slot or line
- No two blocks in the same line have the same Tag field
- Check contents of cache by finding line and checking Tag

Direct Mapping Cache Organization



