
# SmartPlant 3D Drawing Configuration Practice Labs







Process, Power & Marine

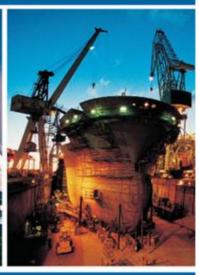



#### Copyright

Copyright © 2010 Intergraph Corporation. All Rights Reserved.

Including software, file formats, and audiovisual displays; may be used pursuant to applicable software license agreement; contains confidential and proprietary information of Intergraph and/or third parties which is protected by copyright law, trade secret law, and international treaty, and may not be provided or otherwise made available without proper authorization from Intergraph Corporation.

#### U.S. Government Restricted Rights Legend

Use, duplication, or disclosure by the government is subject to restrictions as set forth below. For civilian agencies: This was developed at private expense and is "restricted computer software" submitted with restricted rights in accordance with subparagraphs (a) through (d) of the Commercial Computer Software - Restricted Rights clause at 52.227-19 of the Federal Acquisition Regulations ("FAR") and its successors, and is unpublished and all rights are reserved under the copyright laws of the United States. For units of the Department of Defense ("DoD"): This is "commercial computer software" as defined at DFARS 252.227-7014 and the rights of the Government are as specified at DFARS 227.7202-3.

Unpublished - rights reserved under the copyright laws of the United States.

Intergraph Corporation P.O. Box 240000 Huntsville, AL 35813

Street address: 170 Graphics Drive, Madison, AL 35758

#### Terms of Use

Use of this software product is subject to the End User License Agreement and Limited Product Warranty ("EULA") delivered with this software product unless the licensee has a valid signed license for this software product with Intergraph Corporation. If the licensee has a valid signed license for this software product with Intergraph Corporation, the valid signed license shall take precedence and govern the use of this software product. Subject to the terms contained within the applicable license agreement, Intergraph Corporation gives licensee permission to print a reasonable number of copies of the documentation as defined in the applicable license agreement and delivered with the software product for licensee's internal, non-commercial use. The documentation may not be printed for resale or redistribution.

#### **Warranties and Liabilities**

All warranties given by Intergraph Corporation about equipment or software are set forth in the EULA provided with the software or applicable license for the software product signed by Intergraph Corporation, and nothing stated in, or implied by, this document or its contents shall be considered or deemed a modification or amendment of such warranties. Intergraph believes the information in this publication is accurate as of its publication date.

The information and the software discussed in this document are subject to change without notice and are subject to applicable technical product descriptions. Intergraph Corporation is not responsible for any error that may appear in this document.

The software discussed in this document is furnished under a license and may be used or copied only in accordance with the terms of this license. No responsibility is assumed by Intergraph for the use or reliability of software on equipment that is not supplied by Intergraph or its affiliated companies. THE USER OF THE SOFTWARE IS EXPECTED TO MAKE THE FINAL EVALUATION AS TO THE USEFULNESS OF THE SOFTWARE IN HIS OWN ENVIRONMENT.

Intergraph is not responsible for the accuracy of delivered data including, but not limited to, catalog, reference and symbol data. Users should verify for themselves that the data is accurate and suitable for their project work.

#### **Trademarks**

Intergraph, the Intergraph logo, PDS, SmartPlant, SmartMarine, FrameWorks, I-Convert, I-Export, I-Sketch, IntelliShip, INtools, ISOGEN, MARIAN, SmartSketch, SPOOLGEN, SupportManager, and SupportModeler are trademarks or registered trademarks of Intergraph Corporation or its subsidiaries in the United States and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation. MicroStation is a registered trademark of Bentley Systems, Inc. Other brands and product names are trademarks of their respective owners.

### **Contents**

| Lab 1 New Drawing Border Template                 | 1  |
|---|----|
| Lab 2 Defining Layout Template                    | 5  |
| Lab 3 New View Style and Filter Behavior          | 10 |
| Lab 4 Creating New Line Styles                    | 14 |
| Lab 5 Using Layers                                | 16 |
| Lab 6 Refining view style with additional filters | 19 |
| Lab 7 Aspects                                     | 22 |
| Lab 8 Make Transparent and Fill Styles            | 26 |
| Lab 9 Clipped Solid Fill (Optional)               | 34 |
| Lab 10 Single Line Piping                         | 39 |
| Lab 11 Resymbolizing Structure Openings           | 42 |
| Lab 12 Turning 'Clipping' Off                     | 48 |
| Lab 13 View Rules                                 | 50 |
| Lab 14 Key Plan Rules                             | 54 |
| Lab 15 Using Label Rules                          | 59 |
| Lab 16 Reference Labels                           | 62 |
| Lab 17 Grid Labels for Elevation Views            | 64 |
| Lab 18 Control Point Coordinate Labels            | 69 |
| Lab 19 Creating New Label                         | 74 |
| Lab 20 Dimension Rule for Equipment               | 79 |
| Lab 21 Dimension Rule for Piping                  | 82 |
| Lab 22 Equipment Drawing by Query Package         | 89 |
| Lab 23 WBS Project based View Style (Optional)    | 96 |

### New Drawing Border Template

| Lab 24 MicroStation 3D DGN Output | 100 |
|-----------------------------------|-----|
| Lab 25 Search Folder              | 103 |
| Lab 26 Batch Management           | 105 |


### **Lab 1 New Drawing Border Template**

#### **Objective**

- Create a new drawing border template by importing a MicroStation file
- Add border (title block) labels

### Using a DGN template to seed a Drawing template


- 1. This procedure shows you how to import a file so you can edit it in the **Drawings and Reports** task to become a SmartPlant3D border template. The drawing editor used with SmartPlant3D is called the **SmartSketch Drawing Editor** and will accept a DGN or DWG as a seed file to create a border template. The following lab instructs how to import a DGN which can be used as a SP3D drawing template.
- 2. Start the (SmartSketch) Drawing Editor
  - a. For SP3D2009: Open Windows Explorer and navigate to [Installation Dir]\\Common2D\\Shape2D\\Bin. Right click on select "Send to" and on the flyout menu select **Desktop** (**create shortcut**), as shown below:

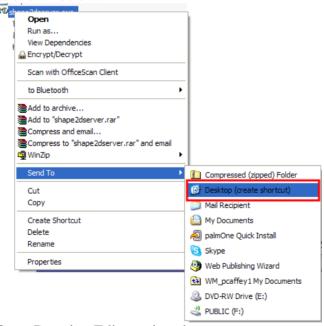

Open Drawing Editor using shortcut.

- b. For SP3D2009.1: Open Start → Programs → Intergraph SmartPlant 3D → SmartSketch Drawing Editor
- 3. Select File Open from the main menu to open the DGN provided by the instructor, the file contents are automatically converted to SHA format.

4. After the DGN file is open in the **SmartSketch Drawing Editor** application, select File – Move Sheet Border. Change the X and Y values for the **Sheet origin** (**lower left**) to X = 0 ft and Y = 0 ft, as shown below, and click OK

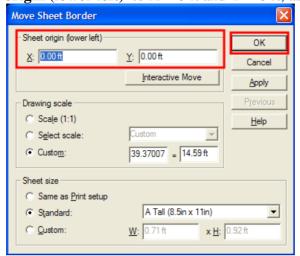


5. Select File → Sheet Setup. On the **Size and Scale** tab change the **Sheet Size** to "Arch. D Wide (36in x 24in)" from the drop down select list. Select the radio button **Scale** (1:1) for the **Drawing scale** and click OK, as shown below:



- 6. Start PinPoint using menu Tools → PinPoint and press the select command to dismiss the reposition target.
- 7. Use the keystroke combination  $\mathbf{Ctrl} + \mathbf{A}$  to select all graphical objects.
- 8. Start the Move command from the Change toolbar.



9. Click on the bottom left corner of the border graphics.

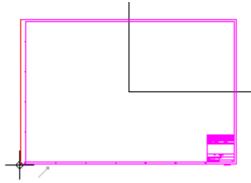


- 10. Move mouse to X=0, Y=0 and click to finish the move.
- 11. From the main menu, select File Save As and navigate to the symbol share for the catalog to the following location: \\[Symbol Share]\Drawings\Catalog\templates\Imperial. Save the templates as ArchDWide.sha.
- 12. Close Drawing Editor.

### Adding Drawing Property Labels and Drawing Area

- 13. Change the Tasks to **Drawings and Reports** task and select **Tools Edit Border Template** from the main menu.
- 14. Select "ArchDWide.sha" from the **Imperial** folder and OK the form.
- 15. Select the Place Drawing Property Label command



- 16. In the Label Set pull down, pick Title Area
- 17. In the **Field** pull down, pick **Drawing Number**, as shown below:



- 18. Select the **Display Label Names** located at the far right of the **Place Drawing Property Label** ribbon bar.
- 19. Zoom into the title block area close to the bottom right corner of the sheet.
- 20. Click in the rectangle labeled 'DRAWING NO'.
- 21. Right mouse click to exitexist the label placement command. Position the label by dragging it and resize the label to the desired width using the handles on the label.

- 22. Select the **Place Drawing Property Label** command again and select **SignatureArea** from the **Label Set** pull down.
- 23. In the **Field** pull down, pick **DrawnBy**, as shown below




- 24. Click to position the label in the cell provided in the Title area of the document labeled "DRAWN BY". Resize the label to fit the cell provided.
- 25. The labels placed should look as follows:

| DRAWN BY    | Dra | PROJECT NO    |  |  |  |
|-------------|-----|---------------|--|--|--|
| APPROVED BY |     |               |  |  |  |
| APPROVED BY |     | DRAWING NO    |  |  |  |
| APPROVED BY |     | DrawingNumber |  |  |  |

- 26. Click the select command to deselect everything and use the fit command to fit the entire drawing.
- 27. Next, place a **Drawing Area** in the document by selecting the **Place**

**Drawing Area** button located in the top left of the document. This will enable us to use **Layout Templates** with this border.

28. With this command active, left click once on the top corner of the document where the ruler starts. Drag your mouse to the bottom corner of the document just above the **Title Area** designation and left click again to finish the command.

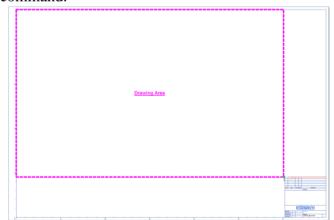

29. Close the document and select "Yes" when prompted to save the changes made to the border template.


### **Lab 2 Defining Layout Template**

### **Objective**


 Create a new layout template that contains a region and a view to predefine the layout

### Define the layout template

1. In the **Drawings and Reports** task, select Tools – Edit Layout Template... This will open the **Select Layout Template** dialog as shown below:

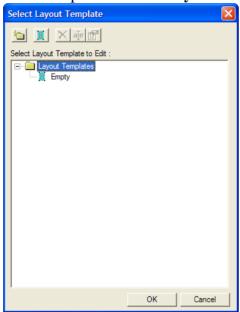



- 2. Click on the **New** button which will create a new layout called "New Layout". With this layout selected, change the name of it by selecting the **Rename** button and type in "Piping Plan 0.25 in = 1 ft".
- 3. With the new layout highlighted, click OK. This will open the layout template in the **SmartSketch Drawing Editor**.
- 4. When the document opens you will be prompted with a dialog labeled **Select Border Family**. Expand the **Imperial** folder and select the templates "ArchDWide" and "D Wide" using the **Ctrl** key while selecting. When you

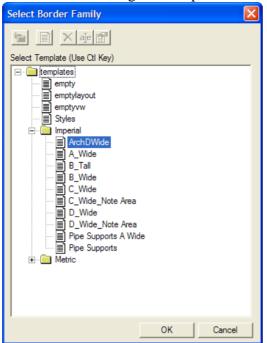

are finished selecting the compatible borders, click OK.

- 5. On the horizontal toolbar, select the **Place Region** button and left click once on the top left corner of the magenta view and drag your mouse to the bottom right corner of the magenta view. Left click again to place the region. After this mouse click you will be presented with the **Region Properties** dialog.
- 6. On the **General** tab of the dialog, click in the **Layout Style** value field and select "More..." from the drop down list.

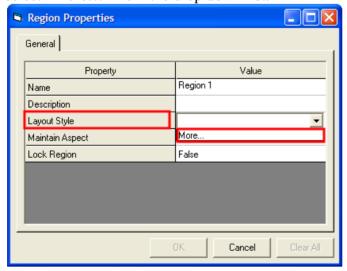

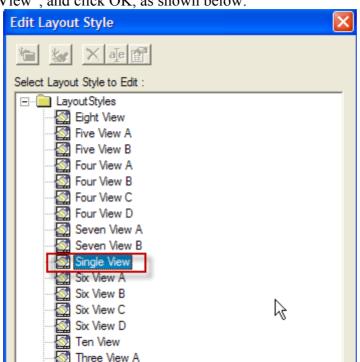

7. This will open the **Edit Layout Style** dialog where you will select "Single View", and click OK, as shown below:

8. Click OK on the **Region Properties** dialog.

Three View B Two View A Two View B


9. Select the **Place View** button once in the magenta view. Drag your mouse to create a small square and left click again. This will place a drawing view in the region placed in the previous steps. You will now be presented with the **Drawing View Properties** dialog.

Cancel

10. On the **View** tab of the dialog, drop down the select list for the **Style** and select "More ..."



11. This will present you with the **Select View Style** dialog where you will select the "Piping Plan" view style under the **Orthographic** list.

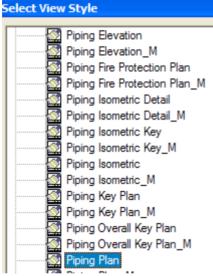

12. After the style is selected, the dialog box will present more view properties that can be filled in. Fill in the properties as follows, omitting fields in the dialog that are not mentioned below, and click OK:

Name = Piping Plan

Scale Family = Architectural Scales

User Selected Scale =  $\frac{1}{4}$  in = 1 ft

Look Direction = Looking Plan

Margin Top = 4.0 in

Margin Bottom = 4.0 in

Margin Left = 4.0 in

Margin Right = 4.0 in

13. Once you click OK on the dialog, notice how the view will automatically reposition itself in the region.

14. Exit the **SmartSketch Drawing Editor** when you have completed the view placement and save the changes made to this document by select "Yes" when prompted.


## Lab 3 New View Style and Filter Behavior

### **Objective**


- Create a new view style that includes specific object type in the view
- Create a new graphic rule that uses a specific color/line style to draw the objects
- Modify view style behavior from volume (include) to snapshot (override)
- Modify graphic rule to draw the hidden line style
- Draw the centerlines for a linear object


### Create New View Style

- 1. Switch to Drawings and Reports task using Tasks → Drawings and Reports
- 2. Select menu Tools → Define View Style
- 3. Select view style type of 'Orthographic' and click the 'New Style' button.

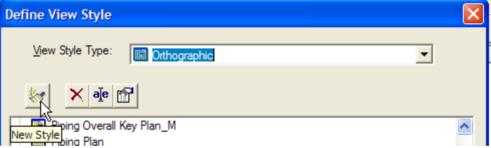


- 4. Name the newly created style 'Training' and click the Properties button.
- 5. In the first row in the grid, click in the 'Filter Name' column and select More...

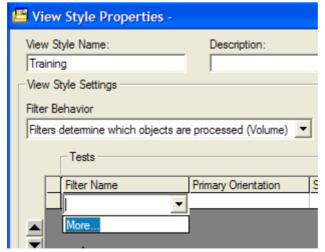

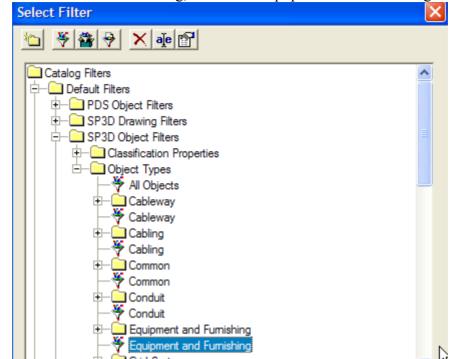

6. In the 'Select Filter' dialog, select the 'Equipment and Furnishing' filter

- 7. Click in the 'Graphic Rule' column and select More...
- 8. In the 'Select Graphic Rule' dialog, click the 'New...' button
- 9. Name the rule 'Blue' and in the 'Visible Line Style' field, pick 'Normal Blue'

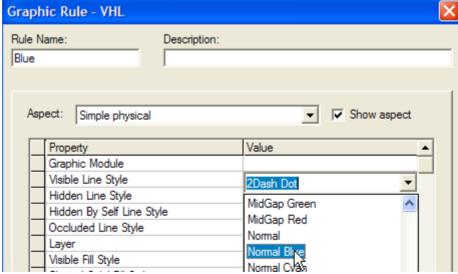


- 10. Click OK to define the graphic rule.
- 11. Click OK to use the graphic rule 'Blue' to use for the selected row.
- 12. Click OK to define the view style.
- 13. Click Close to close the view style form

### Apply View Style

- 14. Edit the drawing 'Piping Plan 1'
- 15. Select the view, right-mouse click and open properties.
- 16. In the drawing view properties form, select the 'Training' view style and click OK.
- 17. Right-mouse click the view and update view.
- 18. Review the output (notice that only equipment is shown in blue) but do not close Drawing Editor.

### Change Filter Behavior

- 19. Select menu Tools → Define View Style
- 20. Select the view style 'Training' and click Properties button.
- 21. Change the 'Filter behavior' to 'Snapshot' and click OK.

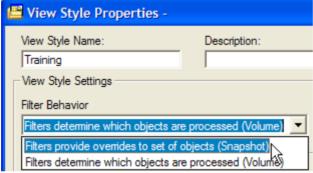


22. Switch to Drawing Editor, and update the view. Notice that equipment continues to be shown in blue but other objects are shown in black color.

### Add Row to View Style

- 23. Select the view style 'Training' and click Properties button.
- 24. Add a row with filter 'Piping' and graphic rule 'Red' with visible line style 'Normal Red' and click OK
- 25. Switch to drawing editor and update view.

### Add Hidden Lines to Graphic Rule 'Blue'

- 26. Select the view style 'Training' and click Properties button.
- 27. Click in the Graphic Rule field in the first row and select More...
- 28. Select the graphic rule 'Blue' and edit properties

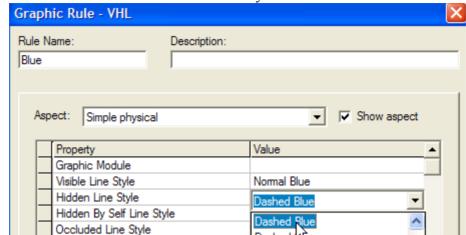

29. Add 'Dashed Blue' to 'Hidden Line Style' and click OK.

30. Switch to drawing editor and update view. Notice how lines of equipment hidden under other objects are shown dashed.

### Add Centerline to Pipes

- 31. Select the view style 'Training' and click Properties button.
- 32. Click in the Graphic Rule field in the second row and select More...
- 33. Select the graphic rule 'Red' and edit properties
- 34. Set 'Show Centerline' to 'Yes'
- 35. In the 'Centerline Visible Line Style' filed select 'Chain Red'.
- 36. Click OK to finish graphic rule modification.
- 37. Switch to drawing editor and update view. Notice how center lines of pipes are shown as chain
- 38. Close the drawing editor and close and save the SP3D session.


### **Lab 4 Creating New Line Styles**


### **Objective**

- Create new line styles in the Styles.sha file
- Use the new line styles in a view style to apply them to different object types

### **Defining Line Styles**

- 1. Open the file Styles.sha in the [Symbol Share]\Drawings\Catalog\Templates folder
- 2. Format Style and pick the Line option
- 3. Select the 'Normal' line style and click New.
- 4. Name the style Normal Dk Blue

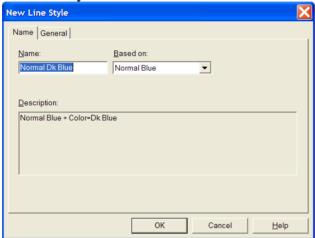

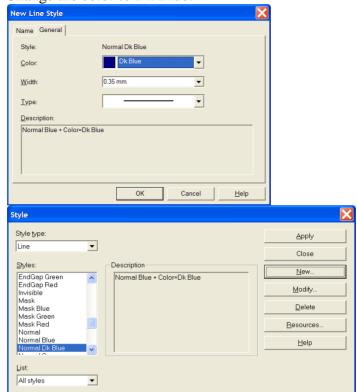

5. Change the color to Dk Blue.

- 6. Similarly create line styles for 'Nomal Cyan' and 'Normal Magenta'
- 7. Close and Save and Exit the Styles.sha file.


### **Using Line Styles**

- 8. Open the SP3D session and switch to the Drawings and Reports task.
- 9. Edit the drawing 'Piping Plan 1'
- 10. Tools → Define View Style and edit properties of the 'Training' style
- 11. Add a row with filter 'Structure' and graphic rule 'Magenta' with visible line style 'Normal Magenta'
- 12. Add a row with filter 'Cableway' and graphic rule 'Cyan' with visible line style 'Normal Cyan'
- 13. Cick OK to save the view style.
- 14. Switch to drawing editor and update view.

### Lab 5 Using Layers

### **Objective**


- Add layers to graphic rules to draw objects on named layers
- Copy graphic rules by renaming existing rules
- Turn display of specific named layers on and off using the display manager
- 1. Edit the properties of the 'Training' view style.
- 2. Click in the Graphic Rule field in the first row and select More...
- 3. Select the graphic rule 'Blue' and edit properties
- 4. Rename the rule 'Training Equipment' and in the layer field, enter 'Equipment'

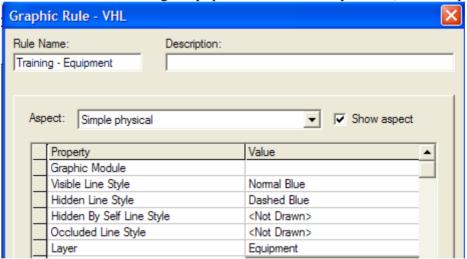

- 5. Click OK and answer 'Yes' to the prompt to create a new rule.
- 6. Similarly edit the other three graphic rules and create new rules as below

| Old Rule Name | New Rule Name         | Layer      |
|---------------|-----------------------|------------|
| Red           | Training – Piping     | Piping     |
| Magenta       | Training – Structure  | Structure  |
| Cyan          | Training – Electrical | Electrical |


Training - Electrical

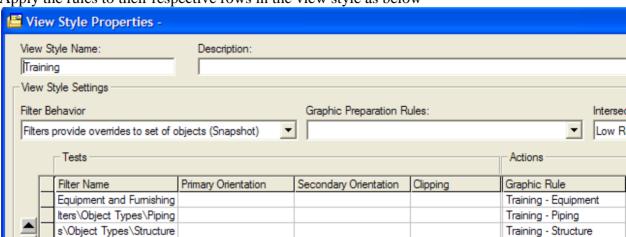


7. Apply the rules to their respective rows in the view style as below

- 8. Switch to the drawing editor and update the view. Notice that there is no visible graphical impact.
- 9. Right mouse click on the view and select 'Display Manager'

:\Object Types\Cableway

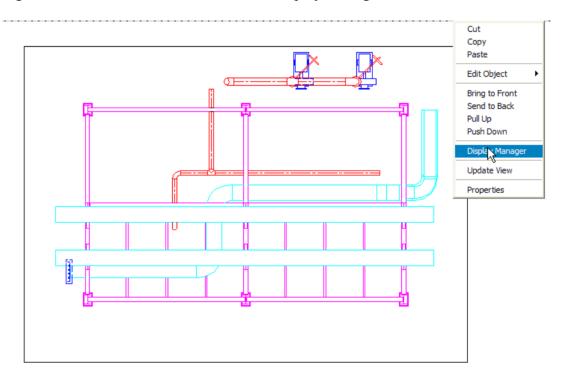

10. Switch to the 'Layers' tab to notice additional layers. Uncheck the box next to the 'Equipment' layer and click Apply. The equipment is no longer displayed.

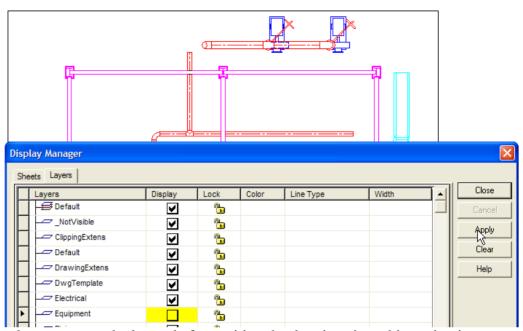

11. Remember to turn on the layers before exiting the drawing since this setting is remembered when you close and reopen the drawing editor.


## Lab 6 Refining view style with additional filters

### **Objective**

- Use predefined classification filters to change output of "typed" equipment objects
- Use more specific object type filters to override generic filters used earlier in the view style

### Using Classification Filters

- 1. Edit the properties of the 'Training' view style.
- 2. Add a row with filter 'Electrical Equipment' and use graphic rule 'Training Electrical'

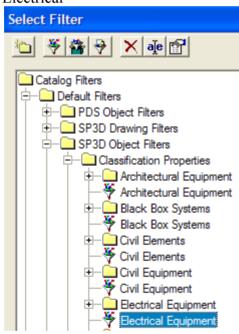


- 3. Click OK to save the view style.
- 4. Switch to Drawing Editor and update the view. Notice that the new filter overrides the 'Equipment and Furnishing' filter in the first row and the electrical device is shown in Cyan.

### Using Object Type Filters

- 5. Edit the properties of the 'Training' view style.
- 6. Add a row with the filter 'Beams' and create a new graphic rule named 'Training Beams' that uses the 'Normal Dk Blue' line style created earlier. Continue to

use the 'Structure' layer.

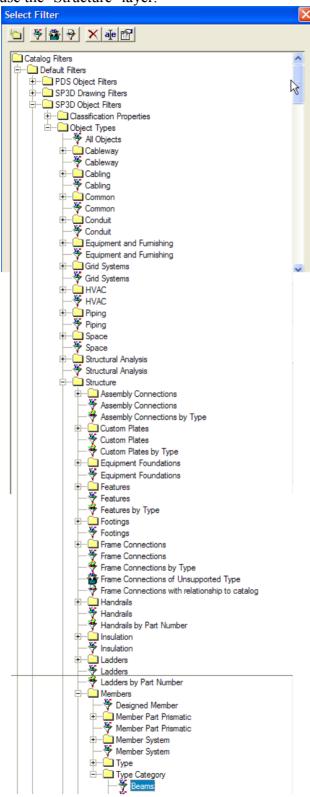

- 7. Save the view style.
- 8. Switch to Drawing Editor and update the view.


### Lab 7 Aspects


### **Objective**

- Create graphic rule to draw different aspects using different line style
- Use the 'Make transparent for other aspects of object' property of a graphic rule to draw both physical and insulation aspects of piping

### **Defining View Style**

- 1. Create a new view style named 'Training Aspects'
- 2. Define the view style to include a row for piping parts and a graphic rule named 'Training Insulation' defined as shown in the pictures below

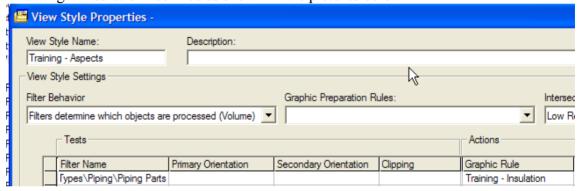


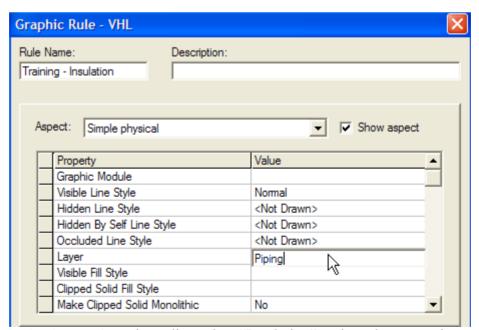

3. In the Aspect drop-down list, select "Insulation" and set the properties as displayed below:

Visible Line Style: Dotted Green

Make Transparent: For other aspects of the same object

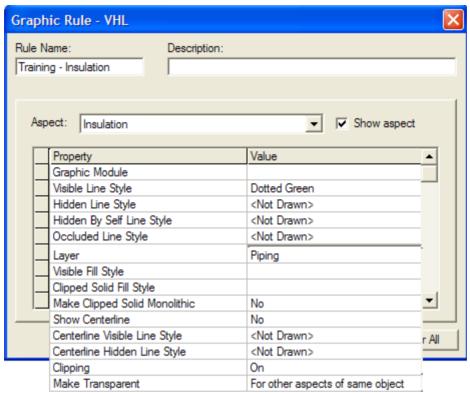


- 4. Click OK to save the rule
- 5. Click OK to select the rule for the row in the view style.
- 6. Click OK to save the view style and click Close to close the view style dialog.


### **Create New Drawing**

- 7. Switch to Space Management task.
- 8. Define workspace using filter Plant Filters Training Filter U04
- 9. Format View and turn on insulation aspect
- 10. Format Surface Style Rules and add the 'Piping Insulation Delivered' rule to the workspace

11. Zoom and clip into pipeline 402-P roughly as shown by drawing a fence around the piping and clipping the view.

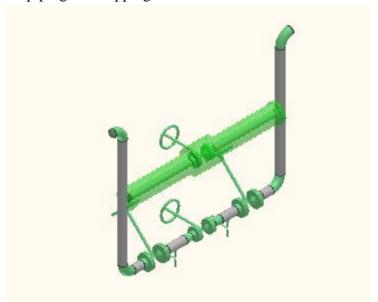


- 12. Use Tools → Snapshot View to snapshot the screen. Put it in the 'Composed Drawings' folder, and use the 'Training Aspects' view style. Use the space folder 'Drawings'
- 13. Create a new drawing named 'Aspects' in the 'Composed Drawings' folder

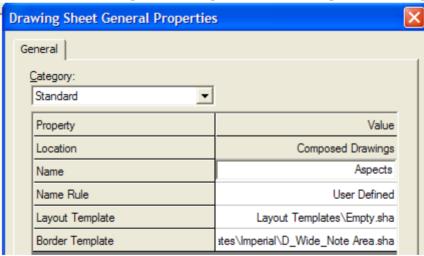

14. Place the snapshot view on the sheet.

15. Update the view, see the results as below.

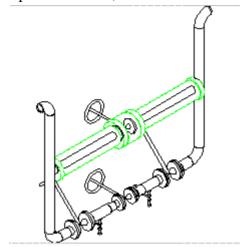


## Lab 8 Make Transparent and Fill Styles


### **Objective**

- Use 'Make transparent for all objects in view' property in graphic rule to draw an object in wireframe mode
- Use a visible fill style to fill the visible portion of objects with a predefined pattern
- Copy a fill style in Styles.sha and edit its properties and then use the modified fill style in a graphic rule


### Create New Drawing

- 1. Switch to the Space Management task
- 2. Define Workspace using the filter Plant Filters Training Filters U03
- 3. Define a volume by selection set and select the gridlines at elevation 0 and the slab as shown in the picture below.

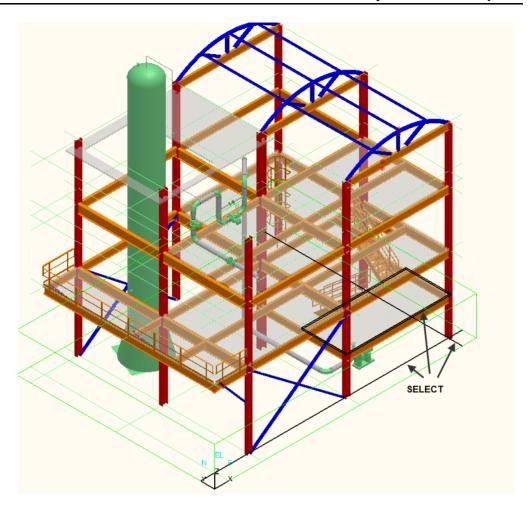

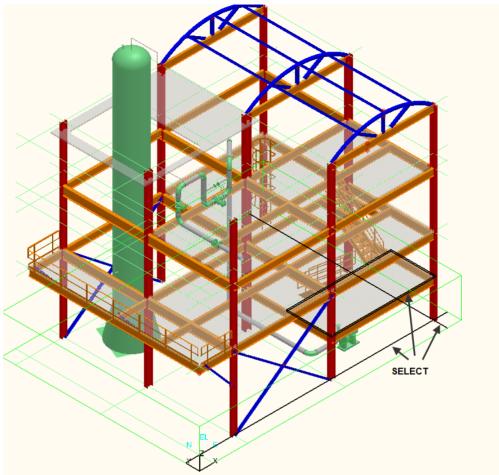

4. Name the volume 'U03 Ground Floor'

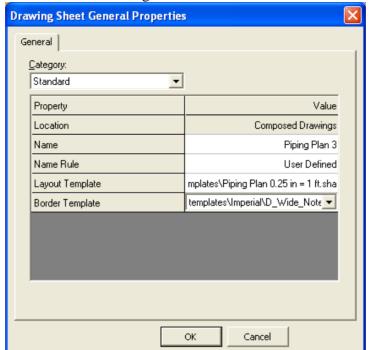


5. Create a New Drawing as below

- 6. Associate the view in the drawing to the newly placed volume and the U03 filter.
- 7. Edit properties on the view and use the 'Training' view style.
- 8. Update the view.
- 9. Notice that the pump is shown in a dashed blue line style (indicating that its hidden).
- 10. Close the drawing.

### Make Slabs Transparent

- 11. Switch to the 'Drawings and Reports' task.
- 12. Edit the view style 'Training' and add a row that selects the 'Slabs' filter.

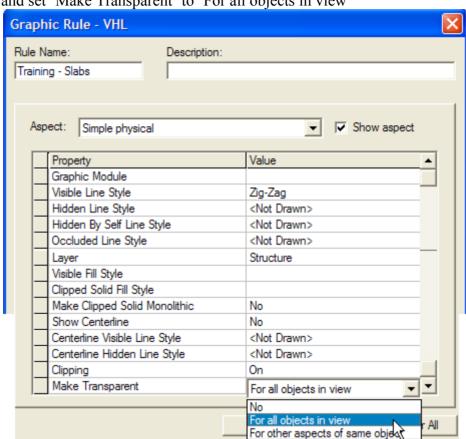


13. Add a new graphic rule 'Training – Slabs' that uses the 'Zig-Zag' line style and set 'Make Transparent' to 'For all objects in view'

- 14. Save and close the view style.
- 15. Edit the drawing 'Piping Plan 3' and update the view. Notice that the pump under the slab is no longer shown hidden. Additionally pipe is also seen.


### Add a fill style

16. Edit the view style 'Training' and edit the graphic rule 'Training – Slabs'

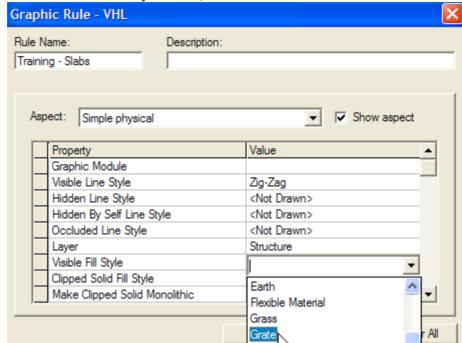

17. In the 'Visible Fill Style' field, select 'Grate'


- 18. Click OK to save the graphic rule.
- 19. Click OK to accept the graphic rule.
- 20. Change the 'Intersection Edges' option to 'High Resolution'

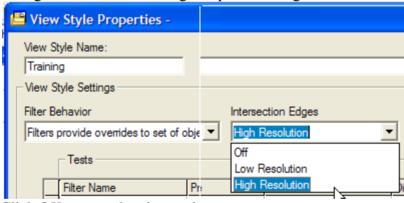


- 21. Click OK to save the view style.
- 22. Switch to Drawing Editor and update the view.
- 23. Close the drawing and exit the SP3D session.


### Create New Fill Style


- 24. Open the file Styles.sha in the [Symbol Share]\Drawings\Catalog\Templates folder
- 25. Select menu Tools → Line Style Editor



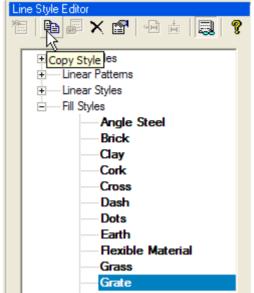

27. Name the style 'Training – Grate' and click OK.

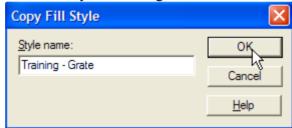

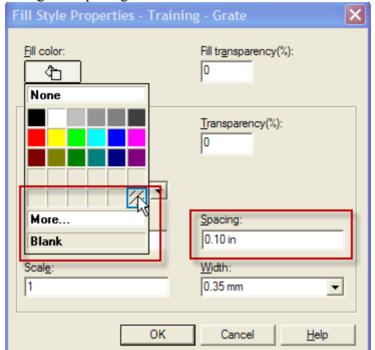

28. Change the spacing to 0.10 in and the fill color to 'Blank' and click OK.

29. Save and exit the styles.sha file.

### Apply New Fill Style

- 30. Open SP3D session and edit the properties of the 'Training' view style and 'Training Slabs' graphic rule.
- 31. Select the new fill style 'Training Grate' and save the graphic rule and the view style.
- 32. Edit 'Piping Plan 3' and update the view.


# Lab 9 Clipped Solid Fill (Optional)


#### **Objective**

- Use 'Clipped Solid Fill' property in a graphic rule to fill the clipped portions of true solids such as walls and slabs
- Use 'Make Clipped Solid Monolithic' property to remove lines between clipped portions of solids in the drawing

#### View Style

- 1. Define a view style named 'Training Clipped Solid Fill'
- 2. Add a row and choose the Walls filter
- 3. Add a graphic rule that has Clipped Solid Fill as 'Brick'

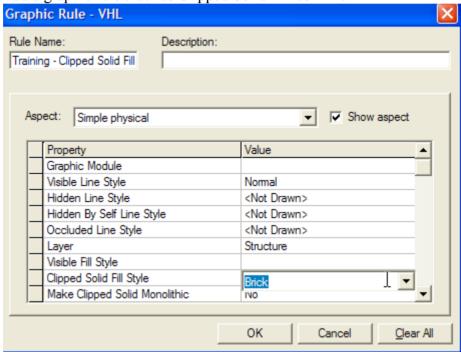


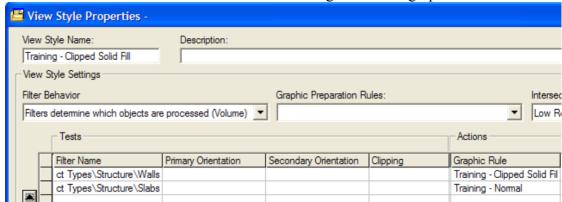

4. Add another row for slabs and choose the 'Training – Normal' graphic rule


#### Test View Style

- 5. Switch to Space Management task
- 6. Define a workspace using Plant Filters Training Filters U05
- 7. Format View and choose mode shaded with enhanced edges
- 8. Define volume by 2 points from (-35, -105, 0) to (5, -85, 16)
- 9. Clip by object using the volume defined and hide the volume

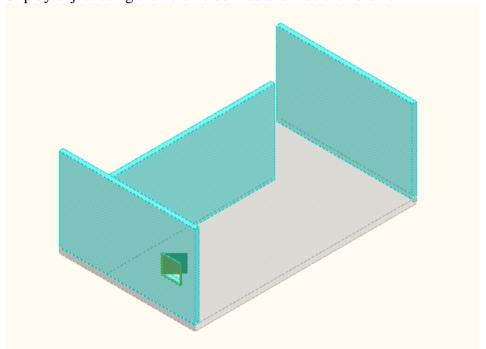


10. Set view to north and snapshot a view using the Clipped Solid Fill view style defined above

11. Place the view on a drawing and update the view to see a result like shown in the picture

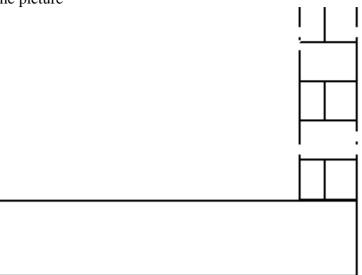


### **Update View Style**

12. Edit the view style to use the same graphic rule for slabs

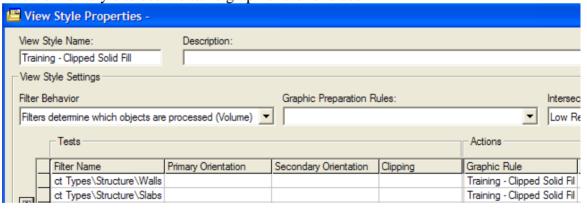

13. Update the view and notice the result showing a thick solid line at the boundary of the wall and the slab

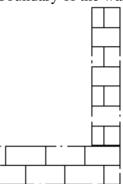


14. Edit the graphic rule and set the 'Make Clipped Solid Monolithic' option to


Yes.


|  |                               | <b>→</b> • | 200000000 |
|--|-------------------------------|------------|-----------|
|  | Visible Fill Style            |            |           |
|  | Clipped Solid Fill Style      | Brick      |           |
|  | Make Clipped Solid Monolithic | Yes        | •         |

15. Edit the view style row to use the filter for Structure

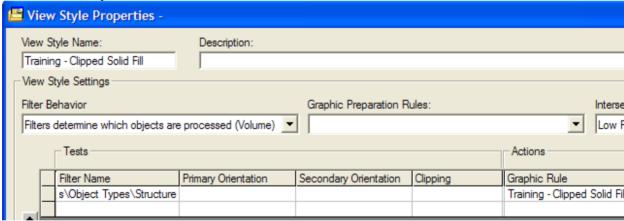


- 16. Open the Styles.sha and start the Line Style Editor
- 17. Select the Brick fill style and edit properties



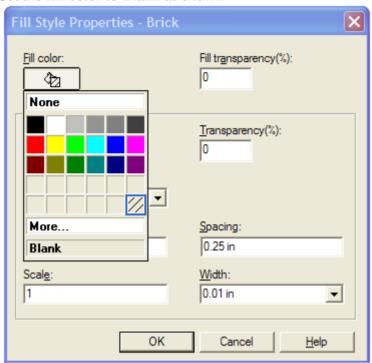

19. Update the view again and see the result as below – the line is gone

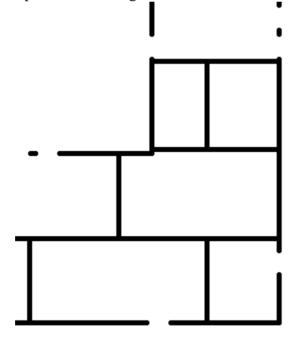


## Lab 10 Single Line Piping

#### **Objective**

- Use graphic preparation rules to change the 3D graphics that are sent into VHL process
- Draw elbows as arcs
- Draw welds as lines to effectively eliminate them from the view


#### **Define View Style**

- 1. Switch to the 'Drawings and Reports' task
- 2. Select menu Tools → Define View Style
- 3. Create 'New Style'
- 4. Name the style 'Training Single Line Piping' and edit Properties.
- 5. In the 'Graphic Preparation Rule' field, select More...
- 6. Click 'New ...' to create a new custom graphic rule.
- 7. Select filters and custom modules as shown below

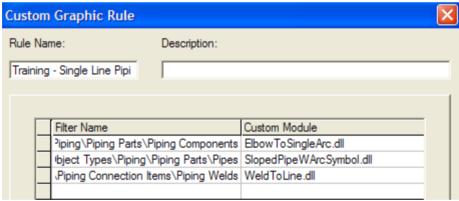


- 8. Click OK to define the rule.
- 9. Click OK to select the rule.

10. In the first row click in the 'Filter Name' field, select More... and then select the 'Piping Components' filter.

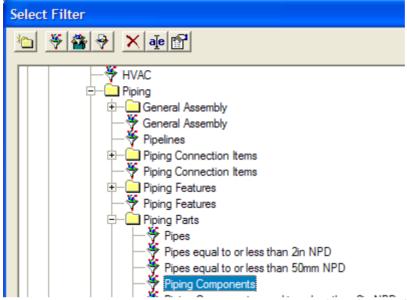

- 11. Click in the graphic rule field, select 'More...', select the 'Training Piping' graphic rule and click OK.
- 12. Click in the 'Filter Name' field in the second row and add the 'Pipes' filter
- 13. Click in the graphic rule field, select 'More...'
- 14. In the 'Select Graphic Rule' dialog, select the 'Replace Object(s) with Line' option.

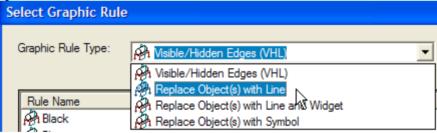

15. Click 'New...' to create a new rule

Graphic Rule - Line

Rule Name: Description:

Training - Single Line Pipi

Property Value
Graphic Module
Visible Line Style Normal Red
Hidden Line Style <Not Drawn>
Occluded Line Style <Not Drawn>
Layer Piping

16. Define the rule 'Training – Single Line Piping' as shown and click OK.

17. Click OK to select the rule.

#### **Test View Style**

- 18. Edit the 'Piping Plan 1' drawing
- 19. Select the view and right mouse click, the select Properties
- 20. Select the 'Training Single Line Piping' view style and click OK
- 21. Update the view to see that all pipes and elbows are now single line.


# Lab 11 Resymbolizing Structure Openings

#### **Objective**


• Use graphic preparation rule to resymbolize structure openings

#### **Define View Style**

- 1. Select Tools → Define View Style
- 2. Create a new style named 'Training Openings'
- 3. Edit the new style properties
- 4. Click in the 'Graphic preparation rule' field and select 'More...'
- 5. Click 'New...'
- 6. Create rule 'Training Openings' as below

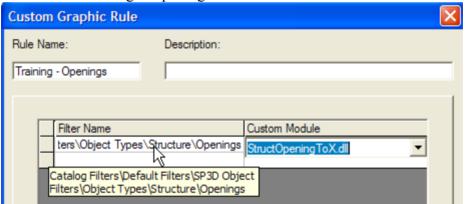


- 7. Click in the 'Filter Name' field in the first row in the view style and pick the Openings filter selected above.
- 8. Pick the 'Training Structure' graphic rule.
- 9. Change view style behavior to 'Snapshot'

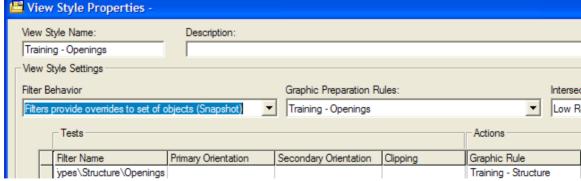


10. Click Ok to save view style.

#### **Test View Style**


- 11. Switch to Space Management task
- 12. Define a workspace using Plant Filters Training Filters U03
- 13. Start 'Place Volume by Selection' command
- 14. Name the volume 'U03 El 18 ft' and put it in the space folder 'U03'

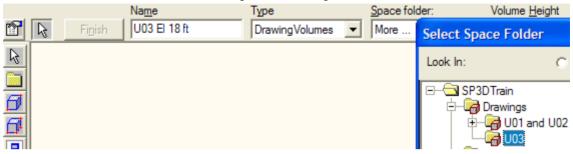


15. Select the beam at the south side and two neighboring gridlines and the slab as shown and click 'Finish' to place the volume.

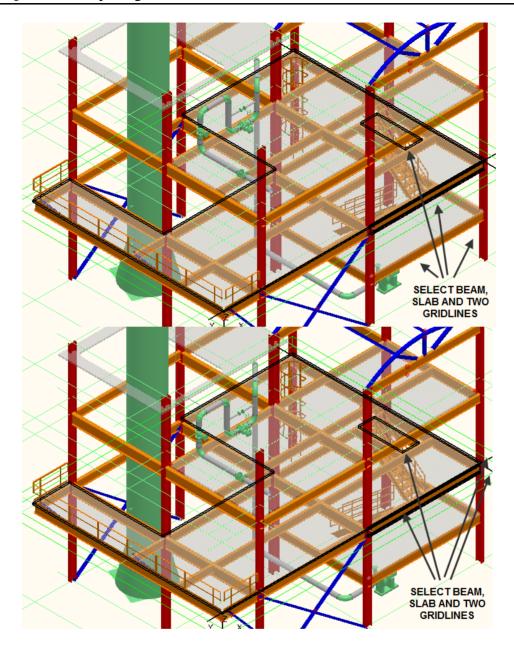


16. Create a new drawing in the 'Composed Drawings' folder as shown

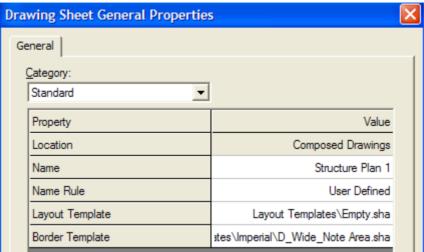


17. Place a graphic view that uses the 'Training – Openings' view style, fit to scale, looking plan.

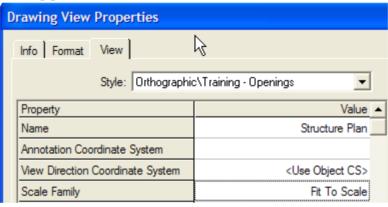

18. Associate view to volume 'U03 El 18 ft' and define a new filter 'Plant Filters – Composed Drawing Filters – U03 – U03'

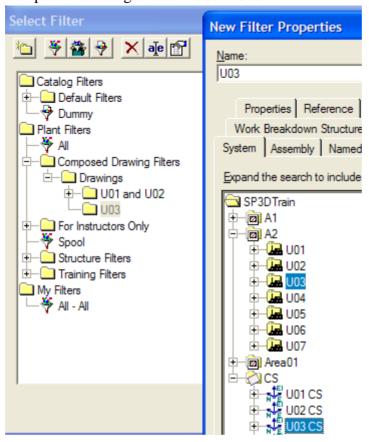

### 19. Update view and see results as below.

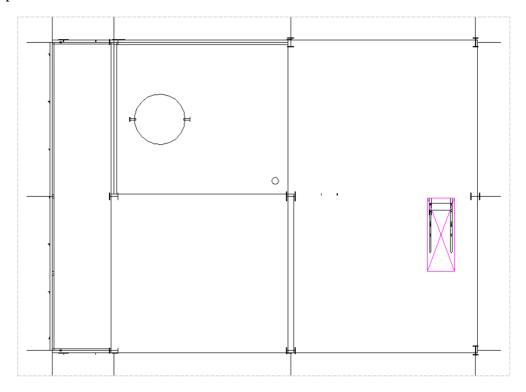


# Lab 12 Turning 'Clipping' Off

#### **Objective**

• Use the 'Clipping' property to draw clipped objects as if they were not clipped

#### **Define View Style**


- 1. Switch to 'Drawings and Reports' task.
- 2. Select Tools  $\rightarrow$  Define View Style
- 3. Edit properties for the style named 'Training Openings'
- 4. Click in the 'Filter' field in the first row and select More... and select the 'Catalog Filters\Default Filters\SP3D Object Types\Structure\Ladders' filter
- 5. Click in the 'Graphic Rule' field and select More...
- 6. Select the 'Training Structure' graphic rule and click Properties.
- 7. Change the name of the rule to be 'Training Ladders'
- 8. Scroll down to the bottom of the rule and set 'Clipping' = 'Off'

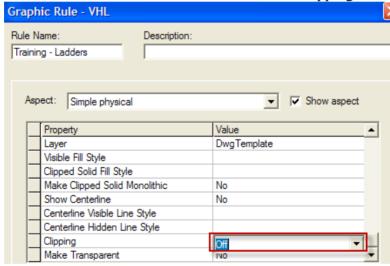

- 9. Click 'OK' to save the rule, click 'Yes' to create a new rule.
- 10. Click 'OK' to apply the new graphic rule to the style.
- 11. Click 'OK' to save the view style.

#### Test View Style

- 12. Edit the 'Structure Plan' drawing and update the view.
- 13. Notice that the ladder is now shown in full even though only part of it was in the original view.

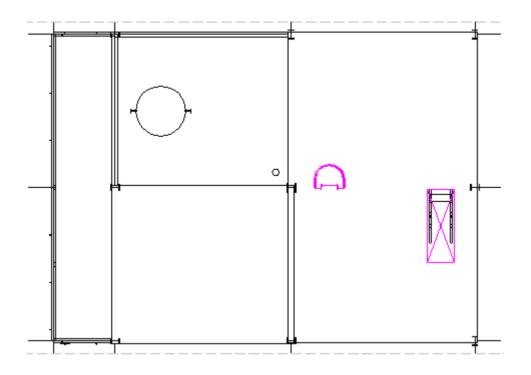


## Lab 13 View Rules

#### **Objective**


- Copy delivered view rule
- Modify the view rule to change line symbology for cutting planes

#### Edit View Style

- 1. Tools → Define View Style
- 2. Edit the 'Training' view style
- 3. In the View Rule field, select More...

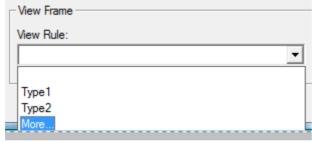

- 4. Select the 'Type1' rule and edit properties.
- 5. Name the rule 'Training View'
- 6. Change the Section Cutting Plane Style to '2Dash Dot Blue'

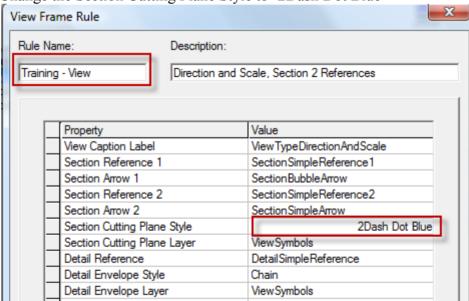

- 7. Click OK to save the rule.
- 8. Click 'Yes' to create a new rule.
- 9. Click OK to select the rule for the view style.
- 10. Click OK to save the view style.

#### Test View Style

- 11. Edit the 'Piping Plan 1' drawing.
- 12. Update View
- 13. Notice that a view label has now appeared below the view showing the view orientation and the scale.


Drawing limit E 72 ' 0 "

#### Plan SCALE: 1/4 in: 1 ft


- 14. Start the 'Cutting Plane' command
- 15. Enter B for reference 1 and 2



- 16. Select the view boundary
- 17. Draw a cutting plane roughly between the pipes from U01 and the pipes from U04 as shown (left click two times, right click once)

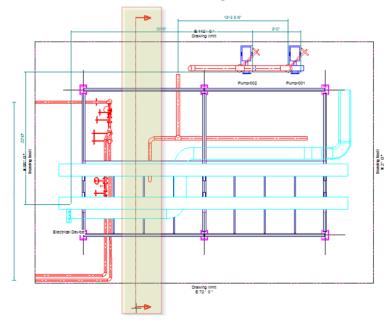


18. Move mouse to the left side and locate the matchline. Click once to place the cutting plane.

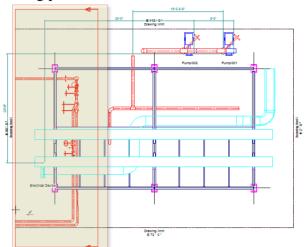

19. Check the Update Section box in the ribbon bar.



- 20. A view appears on your cursor, place the view somewhere in an empty area of the sheet by clicking once. The view will begin to update.
- 21. After the view completes updating, right mouse click the plan view and update it. The section mark is shown in 2Dash Dot Blue line style along with arrows.

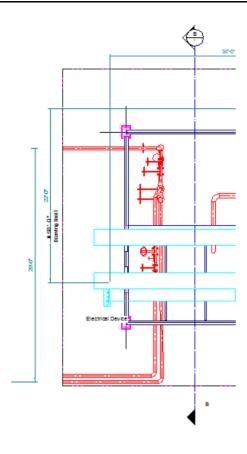

## Lab 14 Key Plan Rules

#### **Objective**


- Create key plan view style of the type 'One Volume with Plant View'
- Create key plans of different orientation and content

#### **Define View Style**

1. Tools  $\rightarrow$  Define View Style


2. Change 'View Style Type' to 'Key Plan', select the 'Equipment Key Plan' style

and edit properties.

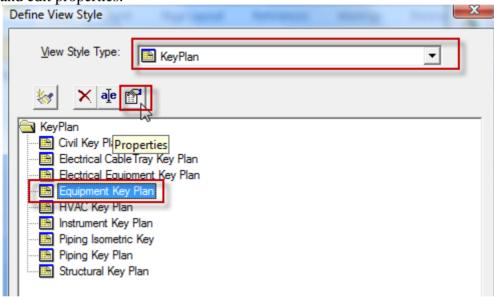


- 3. Change the name to 'Training Key Plan' and the description to 'Training Key Plan View Style'
- 4. In the 'Range Filter' field, select More...
- 5. In the select filter dialog, select the 'Catalog Filters\Default Filters\SP3D Object Filters\Object Types\Equipment and Furnishing' filter.

#### 6. Click OK.

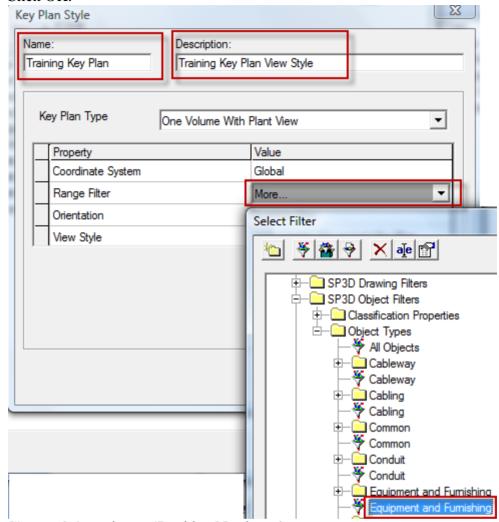


- 7. Change Orientation to 'Looking Northeast'.
- 8. In the 'View Style' field, select More...

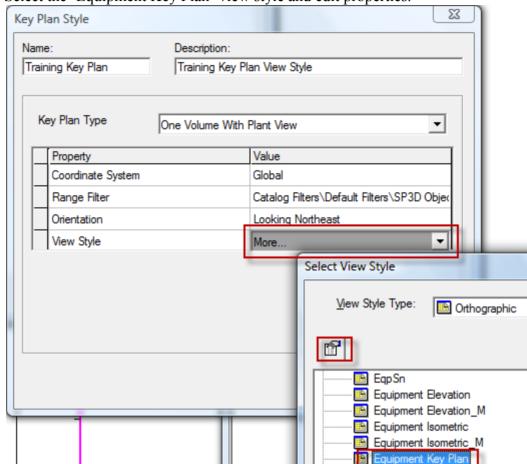

9. Select the 'Equipment Key Plan' view style and edit properties.

10. Change the view style name and description and select the 'Equipment and Furnishing' filter in the first row of the view style.

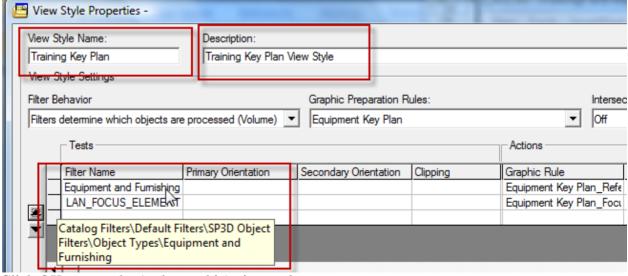


11. Click OK to save the (orthographic) view style.

- 12. Click 'Yes' to create a new (orthographic) view style.
- 13. Select the newly created 'Orthographic\Training Key Plan view style'
- 14. Click OK to select the newly created orthographic view style for use in the key plan view style.
- 15. Click OK to save the (key plan) view style.
- 16. Click Yes to create a new (key plan) view style.

#### Test View Style

- 17. Edit the 'Equipment Plan 1' drawing
- 18. Right mouse click on the key plan view and edit properties.
- 19. In the 'Drawing View Properties' dialog, select More... in the Style field.
- 20. Select the 'Training Key Plan' view style and click OK.

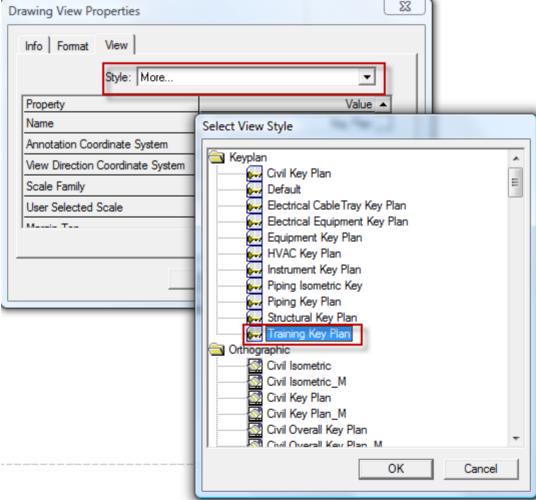

21. Right mouse click and update the key plan view. View should resemble picture below.




## Lab 15 Using Label Rules

#### **Objective**


- Label objects automatically using a delivered label rules in a view style
- Copy label rule and associated label template using copy tool and use copied label rule in the view style
- Modify a label template to change the position of the label relative to the object

#### Add Label Rule to View Style

- 1. Select Tools → Define View Style
- 2. Select the 'Training' view style and edit properties
- 3. In the first row (Equipment), click in the 'Label Rule' field and select 'More...'
- 4. Select the 'Name\_None\_CA\_JL' rule and click OK.

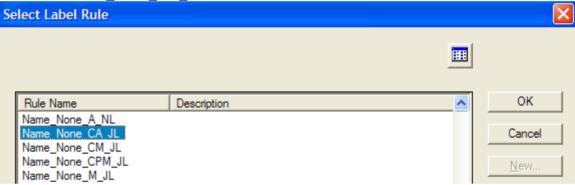

5. Select the seventh row (Slabs) by clicking the square to the left of the row.

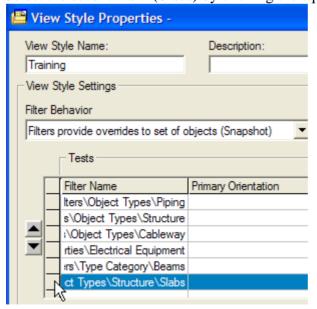


- 6. Press the 'Delete' key on the keyboard to delete the row.(to avoid slabs getting a fill).
- 7. Click OK to save the view style.

#### Test the View Style

- 8. Edit the 'Piping Plan 1'drawing.
- 9. Select the view and right mouse click, then select Properties
- 10. Select the 'Training' view style and click OK
- 11. Update the view.

#### Copy Label Rule

- 12. Run the 'Copy Annotation Rule' application using the shortcut on the desktop.
- 13. Click the Browse.. button and browse to the [Symbols Share]\Drawings\Catalog\Rules\LabelRules folder
- 14. Select the 'Name None A NL' rule and click 'Open'
- 15. Enter 'Training\_Name' in the lower box and click 'Create New'

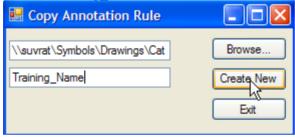

- 16. Click 'OK' on any prompts shown.
- 17. Click 'Exit' to exit the copy rule application

#### Use new label rule

- 18. Tools → Define View Style and edit the 'Training' view style.
- 19. Replace the 'Name\_None\_CA\_JL' label rule by the 'Training\_Name' label rule and click OK.
- 20. Switch to Drawing Editor.
- 21. Update View to see labels positioned right on top of the equipment.



#### Edit label rule


22. Open Windows Explorer and browse to [Symbols Share]\Drawing\Catalog\Labels\Templates folder

- 23. Locate the 'Training Name.xml' file and open it using a text editor.
- 24. Locate the <connectpoint> tag using a search function or by scrolling through the file.

```
<connectPoint>4</connectPoint>
<!--Determine the X and Y offsets for the label relative an objects
   key point or control point.-->
<posModules>
   <posModule value="DrawingAbsolute">
        <hoffset>0</hoffset>
        <voffset>0</voffset>
        </posModule>
</posModules>
```

25. Change the connectpoint to 7 (BottomMiddle) and the voffset to -0.01 (1 cm below)

- 26. Switch to Drawing Editor.
- 27. Update View to see labels positioned 1 cm below the equipment. (Note: if this does not work, exit the session and re-enter and re-update the view).



28. Close the drawing and exit drawing editor.


## Lab 16 Reference Labels

#### **Objective**


• Use a delivered label to label objects with item numbers from a report associated to the drawing view

#### **Define View Style**

- 1. Tools → Define View Style
- 2. Select the view style 'Training' and edit properties.
- 3. Rename the style 'Training Equipment'
- 4. Select the label rule 'Reference\_Circle\_CA\_L' instead of the currently selected label rule.

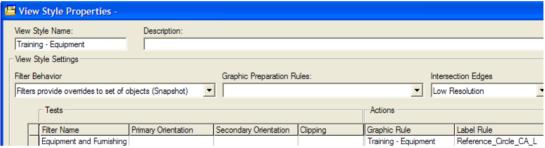


- 5. Click OK to save the view style.
- 6. Click 'Yes' on the name change prompt.



#### Test View Style

- 7. Edit the 'Equipment Plan 1' drawing.
- 8. Select the view, edit properties and select the 'Training Equipment' view style and click OK.
- 9. Save the drawing and exit drawing editor.
- 10. Right mouse click the drawing 'Equipment Plan 1' and update now.
- 11. Edit the drawing to view. Notice that instead of the labels appearing on the drawing, now bubble labels appear pointing to item numbers in the associated report.

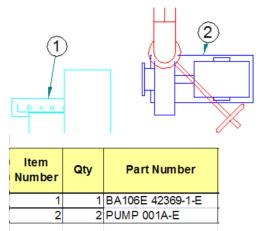

12. Close drawing and exit drawing editor.


# **Lab 17 Grid Labels for Elevation Views**

#### **Objective**

- Use a graphic preparation rule to resymbolize grid planes as vertical gridlines
- Edit label template XML to position the labels relative to the gridplanes
- Edit label template SYM to modify the look and feel of the label

#### Copy Label Rule

- 1. Run the 'Copy Annotation Rule' application using the shortcut on the desktop.
- 2. Click the Browse.. button and browse to the [Symbols Share]\Drawings\Catalog\Rules\LabelRules folder
- 3. Select the 'Name Circle CA L' rule and click 'Open'
- 4. Enter 'Training GridPlane' in the lower box and click 'Create New'

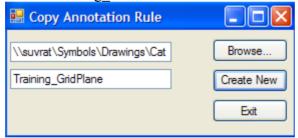


- 5. Click 'OK' on any prompts shown.
- 6. Click 'Exit' to exit the copy rule application


### Define View Style

- 7. Select Tools → Define View Style
- 8. Select the 'Training' view style and edit properties
- 9. Rename the style 'Training Elevation'
- 10. In the 'Graphic Preparation Rule' field, select More...
- 11. Click 'New ...' to create a new custom graphic rule.
- 12. Name the rule 'Training Elevation'

13. Click in the 'Filter Name' field in the first row and select the 'Grid Plane Elevation' filter as shown below

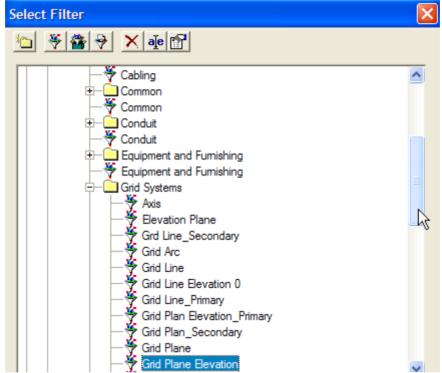


14. Select the custom module 'GridLinesDrawingWrapperEntity.dll'

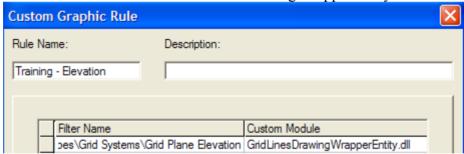

- 15. Click OK to define the rule.
- 16. Click OK to select the rule to use in the view style.
- 17. In the last row in the view style, add the 'Grid Plane Elevation' filter.
- 18. Click in the graphic rule field, select 'More...' and define a new graphic rule named 'Training Grid Planes' for grid planes that uses the 'Fully Transparent'

line style.

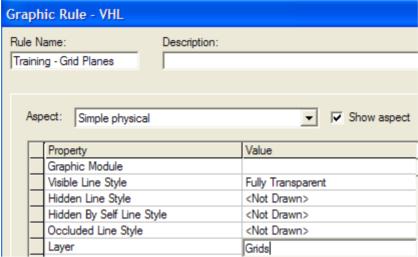

- 19. Click OK to select the rule.
- 20. Click in the label rule field, select 'More...' and select the 'Training\_GridPlane' label rule.
- 21. Click OK to save the view style.

#### Edit Label Rule

- 22. Open Windows Explorer and browse to [Symbols Share]\Drawing\Catalog\Labels\Templates folder
- 23. Locate the 'Training GridPlane.xml' file and open it using a text editor.
- 24. Locate the <connectpoint> tag using a search function or by scrolling through the file.

25. Change connectpoint to 1, positioningpoint to 1, delete the rows with DrawingQuadxxx posmodules, and change hoffset to 0 and voffset to 0.04

#### Test View Style


- 26. Edit the 'Piping Plan 1' drawing
- 27. Select the view and edit properties.
- 28. Change the view style to 'Training Elevation' and the 'Look Direction' to 'Looking West'
- 29. Update the view. Notice the grid bubbles are above the view




30. Close the drawing and exit drawing editor.

### Edit label symbol

- 31. In Windows Explorer, double-click the Training\_GridPlane.sym file to open it.
- 32. Select menu File → Sheet Setup and change paper units precision to 0.01



33. Select the text box in the sym file and change the text size to 0.25 in using the ribbon bar.



34. Save the sym file and exit drawing editor.

- 35. Edit the 'Piping Plan 1' drawing and update view.
- 36. Notice that grid bubbles now reflect the new size.




# Lab 18 Control Point Coordinate Labels

#### **Objective**

- Use a graphic preparation rule to draw reference objects that are normally not drawable into the drawing view
- Copy a coordinate label and modify it to use the desired point generator, geometric analyzer and positioning modules
- Modify label template XML to add a jog to the leader line
- Modify label rfm file to show all three coordinates for the control point

#### Copy Label Rule

- 1. Run the 'Copy Annotation Rule' application using the shortcut on the desktop.
- 2. Click the Browse.. button and browse to the [Symbols Share]\Drawings\Catalog\Rules\LabelRules folder
- 3. Select the 'SP3DCoordinate CA JL' rule and click 'Open'
- 4. Enter 'Training Coordinate' in the lower box and click 'Create New'

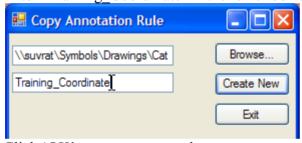

- 5. Click 'OK' on any prompts shown.
- 6. Click 'Exit' to exit the copy rule application

#### Edit Label Rule

- 7. Open Windows Explorer and browse to [Symbols Share]\Drawing\Catalog\Labels\Templates folder
- 8. Locate the 'Training\_Coordinate.xml' file and open it using a text editor.


9. Locate the line <pgmodule>DrawingPGPipeSegments</pgmodule> and comment it out.

```
<pgModule>DrawingPGPipeSegments</pgModule>
        <!--This module will place a label point on an obje
<!--If there is no control point then no point will
<!--<pgModule>DrawingPGCPThenNone</pgModule>-->
        <!--This module will place a label point on an obje
        <!--If there is no control point then the objects o
        <!--there is no origin its center of range is used.
        <!--<pgModule>DrawingPGControlPoint</pgModule>-->
10. Uncomment the line <!--<pgmodule>DrawingPGControlPoint</pgmodule>→
   <!--<pgModule Drawing PGPipe Segments (/pgModule>--> <!--This module will place a label point on an obj
   <!--If there is no control point then no point wil
   <!--<pgModule>DrawingPGCPThenNone</pgModule>-->
   <!--This module will place a label point on an obj
   <!--If there is no control point then the objects
   pgModule>DrawingPGControlPoint</pgModule>
11. Uncomment the line
   <!--<gaModule>DefaultLabelGeometricAnalyzer</gaModule>-->
12. Comment out the lines
    <gaModule>DrawingGALongestSegment</gaModule>
    kequivalenceLabel>SP3DCoordinate.rtp</equivelenceLabel>
13. Uncomment the (tagged) lines as shown
   <!--<posModule value="DrawingAbsolute">-->
<!--<noffset>0.02</hoffset>-->
<!--<voffset>0.02</voffset>-->
   <!--The angle value is in radians.-->
    <!--<angle>0</angle>-->
    <!--</posModule>-->
    kposModule value="DrawingAbsolute">
    <hoffset>0.02</hoffset>
    <v0ffset>0.02</v0ffset>
    <!--The angle value is in radians.-->
    <angle>0</angle>
</posModule>
14. Comment out the line
    <posModule value="DrawingCenterThenAbove"></posModule>
15. Comment out the lines
    <posModule value="DwgLinearAbsPos">
      <percentageOffset>0.50</percentageOffset>
      <offsetFromMember>0.01</offsetFromMember>
    </posModule>
16. Edit <br/>breakline> to be -1
    <bre><breakline><breakline>
17. Save the XML file.
```


### Edit View Style

- 18. Tools  $\rightarrow$  Define View Style
- 19. Edit the 'Training Elevation' view style
- 20. Edit the 'Training Elevation' graphic preparation rule.

21. Add the 'Control Points' filter

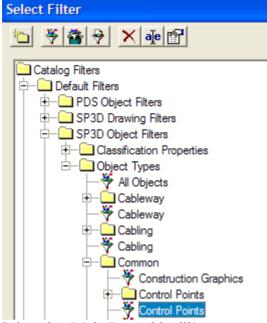


22. Select the 'MakeDrawable.dll' custom module.

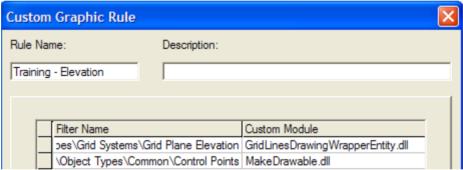


- 23. Click OK to save the rule.
- 24. Click OK to select the rule.
- 25. In the last row in the view style add the 'Control Points' filter.
- 26. Select the graphic rule field, click 'More...'
- 27. Select the 'Training Grid Planes' graphic rule and edit properties.

28. Change rule name to 'Training – Control Points', Hidden Line Style to 'Fully Transparent' and layer to 'Common' as shown and click OK.

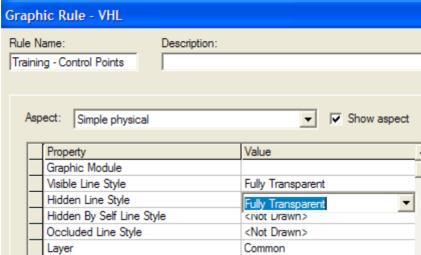

- 29. Click 'Yes' to create a new rule.
- 30. Click OK to select the rule.
- 31. In the 'Label Rule' field, click 'More..'
- 32. Select the 'Training Coordinate' label rule and click OK.
- 33. Click OK to save the view style.
- 34. Test View Style
- 35. Edit the 'Piping Plan 1' drawing
- 36. Update the view.
- 37. Notice that elevation is shown for control point.

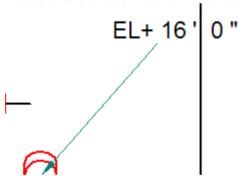

#### Edit label content

38. Locate the 'Training Coordinate.rfm' file and open it using a text editor.

```
39. Change the Visible="No" to Visible="Yes" on the following lines.

<POSITION Axis="X" Point="BopLocation" Visible="Yes" />


<TEXT Value=" \par " TOPARSE="no" Visible="Yes" />

<POSITION Axis="Y" Point="BopLocation" Visible="Yes" />

<TEXT Value=" \par " TOPARSE="no" Visible="Yes" />
```

40. Save the rfm file.

41. Switch to drawing editor and update the view. Notice that all three coordinates are now shown.

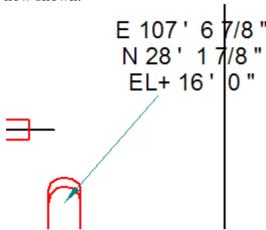


# **Lab 19 Creating New Label**

#### **Objective**

- Create a new label in the catalog task to decide the data portion of a drawing label
- Modify the SYM file of a label template to change the look and feel of the label

#### Copy Label Rule


- 1. Run the 'Copy Annotation Rule' application using the shortcut on the desktop.
- 2. Click the Browse.. button and browse to the [Symbols Share]\Drawings\Catalog\Rules\LabelRules folder
- 3. Select the 'SectionSize None APO NL' rule and click 'Open'
- 4. Enter 'Training MemberType in the lower box and click 'Create New'

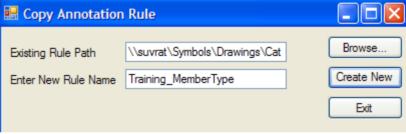



- 5. Click 'OK' on any prompts shown.
- 6. Click 'Exit' to exit the copy rule application

### Label Template


- 7. Switch to the Catalog task
- 8. Select Tools Define Label from the main menu
- 9. Select the Labels folder and create a new folder named 'Drawing Labels'

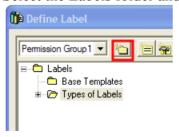




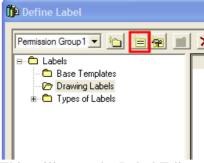


- 11. This will open the Label Editor dialog. Name the label "Training\_MemberType" by typing in the name in the Name field.
- 12. In the Properties section of the dialog, click on the Add button attribute to the selection. This will open the Select Properties dialog.
- 13. Add a property 'Type' to the label from the Member Part Prismatic in Catalog Filters, and click OK to close the dialog, as shown below:

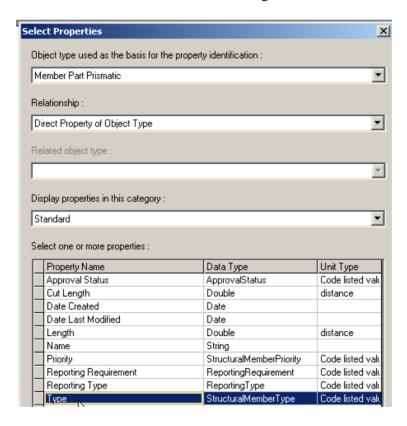

14. Select the "Type" property and insert it to the layout by selecting the Insert a field to layout button , as shown below:

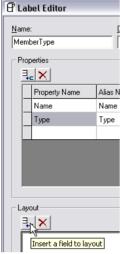

- 15. With the blinking cursor in the Layout text box, strike the RETURN/ENTER key to go to the next line. Similar to inserting the "Type" property to the layout, insert the "Name" property.
- 16. Key-in text Name: and Type: before the property fields.



- 17. Click OK on the Label Editor dialog to save the label.
- 18. Using Windows Explorer, browse to [Symbols Share]\Labels\Drawing Labels\Training\_MemberType and copy all the files.
- 19. Browse to [Symbols Share]\Drawings\Catalog\Labels\Templates and paste the files.


#### Label Symbol File

- 20. In [Symbol Share]\Labels\Drawing\Catalog\Labels\Templates (should already be in this location from the previous step),double-click "Training MemberType.sym" to open it
- 21. Double-click the word "SectionSize" until it highlights with a yellow background and then type word "Training\_MemberType". (This is for your information only, software does not care what text you put here.)

22. Right-click the word "Training\_MemberType" and select **Properties**, as shown below:



23. You can change the **Border and Fill** attributes as desired, e.g. choose **Border** color as Dk Blue and **Fill** color as Yellow.

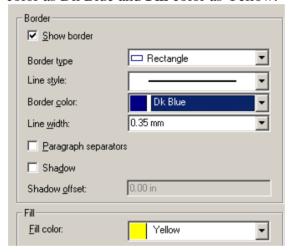


24. Click OK and then save the symbol and exit.

#### Label XML File


- 25. Open the "Training\_MemberType.xml" using NotePad, CookTop or other text editor.
- 26. Search for the tag <content>, note that the proper rtp file for the report label is already being referred.

- 27. In SmartPlant3D, in the Drawings and Reports task, edit the drawing 'Piping Plan 1'
- 28. In the Drawing Editor, click on the 'Place a Label' button located on the horizontal toolbar.

29. On the horizontal ribbon bar, drop down the select list and select the "Training MemberType" labels as shown below:

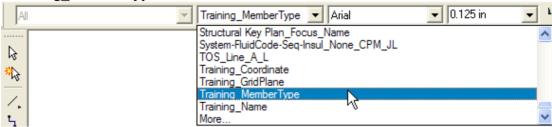

- 30. With the mouse pointer, select a structural member.
- 31. Left mouse click to place the label where desired.




# Lab 20 Dimension Rule for Equipment

#### **Objective**

- Copy dimension rule and its template using a tool
- Modify the dimension template XML tags to decide which dimensions are to be drawn
- Use the new dimension rule in a view style to dimension equipment to each other

#### Copy Dimension Rule

- 1. Run the 'Copy Annotation Rule' application using the shortcut on the desktop.
- 2. Click the Browse.. button and browse to the [Symbols Share]\Drawings\Catalog\Rules\DimensionRules folder
- 3. Select the 'Linear M HV' rule and click 'Open'
- 4. Enter 'Training M H in the lower box and click 'Create New'

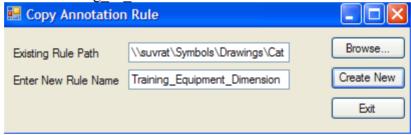

- 5. Click 'OK' on any prompts shown.
- 6. Enter 'Training M V' in the lower box and click 'Create New'
- 7. Click 'OK' on any prompts shown.
- 8. Click 'Exit' to exit the copy rule application

#### **Edit Dimension Rule**

- 9. Open Windows Explorer and browse to [Symbols Share]\Drawing\Catalog\Dimensions\Templates folder
- 10. Locate the 'Training M H.xml' file and open it using a text editor.
- 11. Locate the <vert> tag and set it to 0

```
<horiz>-1</horiz>
<vert>0</vert>
```


- 12. Save the file.
- 13. Locate the 'Training M H.xml' file and open it using a text editor.
- 14. Locate the <horiz> tag and set it to 0

```
<horiz<mark>>0</mark></horiz>
<vert>-1</vert>
```


15. Save the file.

#### Edit view style

- 16. Tools → Define View Style
- 17. Edit the 'Training' view style
- 18. In the first row, click in the 'Dimension Rule' field, select 'More...'
- 19. Select the 'Training M H' dimension rule and click OK.
- 20. Add a row below the last row.
- 21. Click in the 'Filter Name' field and add the Equipment filter (hint: you can copy and paste the filter name from the first row)
- 22. At the end of the last row in the view style, click in the 'Dimension Rule' field, and select 'More...'
- 23. Select the 'Training M V' dimension rule and click OK.
- 24. Select the last row in the view style using the "Up" arrow square to the left.

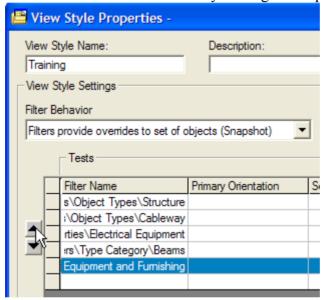

25. Repeatedly click the upwards triangle till it is just below the first row. While this does not impact functionality, it makes for a clearer view style.

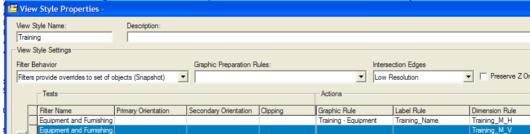

26. Click OK to save the view style.

## Test View Style

- 27. Edit the 'Piping Plan 1' drawing.
- 28. Select view and edit properties.

- 29. Change to use view style 'Training' and Look Direction 'Looking Plan' and click OK.
- 30. Update View. You should see the equipment dimensioned both horizontally and vertically.

# **Lab 21 Dimension Rule for Piping**

#### **Objective**


- Modify the filter its associated with a composed drawing view
- Use the orientation tests in a view style to dimension pipes
- Modify dimension rule to dimension objects close to the margin in the margin using the "range" feature and turn off internal dimensioning
- Modify dimension rule to consume small dimensions within larger neighbouring dimensions

#### Modify Piping Plan 1 to use U01 and U04

- 1. Switch to the 'Space Management' task.
- 2. Tools → Drawing Console
- 3. Edit the 'Piping Plan 1' drawing
- 4. Select the view and click the 'Associate Objects to View' command
- 5. Switch to the 3D environment and the ribbon bar, select the 'Plant Filters Training Filters U01 and U04' filter.

#### Copy Dimension Rule

- 6. Run the 'Copy Annotation Rule' application using the shortcut on the desktop.
- 7. Click the Browse.. button and browse to the [Symbols Share]\Drawings\Catalog\Rules\DimensionRules folder
- 8. Select the 'Piping Plan Pipes Horizontal' rule and click 'Open'
- 9. Enter 'Training Pipes H in the lower box and click 'Create New'

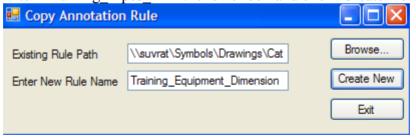


- 10. Click 'OK' on any prompts shown.
- 11. Click Browse... button
- 12. Select the 'Piping Plan Pipes Vertical' rule and click 'Open'
- 13. Enter 'Training Pipes V' in the lower box and click 'Create New'
- 14. Click 'OK' on any prompts shown.
- 15. Click 'Exit' to exit the copy rule application

#### Edit View Style

- 16. Switch to the Drawings and Reports task.
- 17. Tools → Define View Style
- 18. Edit the 'Training' view style
- 19. Click in the last empty row and select the 'Catalog Filters\Default Filters\SP3D Object Filters\Object Types\Piping\Piping Parts\Pipes' filter
- 20. Click in the Primary Orientation column and select 'Parallel, Horizontal'
- 21. Click in the Dimension Rule column ad select 'More...'
- 22. Select the 'Training Pipes V' rule and click OK.
- 23. Click in the last empty row and select the 'Catalog Filters\Default Filters\SP3D Object Filters\Object Types\Piping\Piping Parts\Pipes' filter
- 24. Click in the Primary Orientation column and select 'Parallel, Vertical'
- 25. Click in the Dimension Rule column ad select 'More...'
- 26. Select the 'Training Pipes H' rule and click OK.

| Filter Name                 | Primary Orientation  | Secondary Orientation | Label Rule | Dimension Rule   |
|-----------------------------|----------------------|-----------------------|------------|------------------|
| Piping\Piping Parts\Pipes   | Parallel, horizontal |                       |            | Training_Pipes_V |
| Piping \Piping Parts \Pipes | Parallel, vertical   |                       |            | Training_Pipes_H |


27. Click in the Matchline Rule field and select the 'Matchline None A' rule



28. Click OK to save the view style.

#### **Test View Style**

- 29. Edit the 'Piping Plan 1' drawing.
- 30. Update View

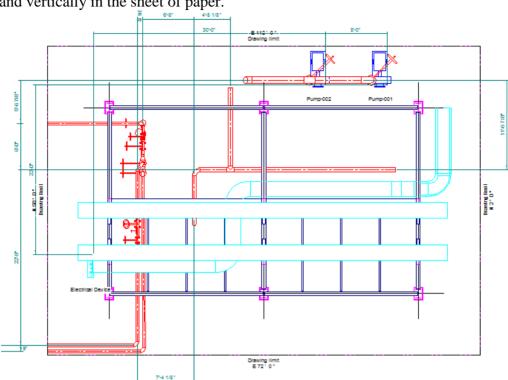

31. Notice that there are dimensions on all the pipes that are oriented horizontally and vertically in the sheet of paper.

#### Edit View Style


- 32. Tools → Define View Style
- 33. Edit the 'Training' view style
- 34. Click in the last empty row and select the 'Catalog Filters\Default Filters\SP3D Object Filters\Object Types\Piping\Piping Parts\Pipes' filter
- 35. Click in the Primary Orientation column and select 'Normal'
- 36. Click in the Dimension Rule column ad select 'More...'
- 37. Select the 'Training Pipes V' rule and click OK.
- 38. Click in the last empty row and select the 'Catalog Filters\Default Filters\SP3D Object Filters\Object Types\Piping\Piping Parts\Pipes' filter
- 39. Click in the Primary Orientation column and select 'Normal'
- 40. Click in the Dimension Rule column ad select 'More...'
- 41. Select the 'Training Pipes H' rule and click OK.

| Filter Name               | Primary Orientation  | Secondary Orientation | Label Rule | Dimension Rule   |
|---------------------------|----------------------|-----------------------|------------|------------------|
| Piping\Piping Parts\Pipes | Parallel, horizontal |                       |            | Training_Pipes_V |
| Piping\Piping Parts\Pipes | Parallel, vertical   |                       |            | Training_Pipes_H |
| Piping\Piping Parts\Pipes | Nomal                |                       |            | Training_Pipes_V |
| Piping\Piping Parts\Pipes | Nomal                |                       |            | Training_Pipes_H |

42. Click OK to save the view style.

#### Test View Style

- 43. Edit the 'Piping Plan 1' drawing.
- 44. Update View
- 45. Notice that there are dimensions on all the pipes that are oriented horizontally and vertically in the sheet as well as those oriented normal to the sheet of paper

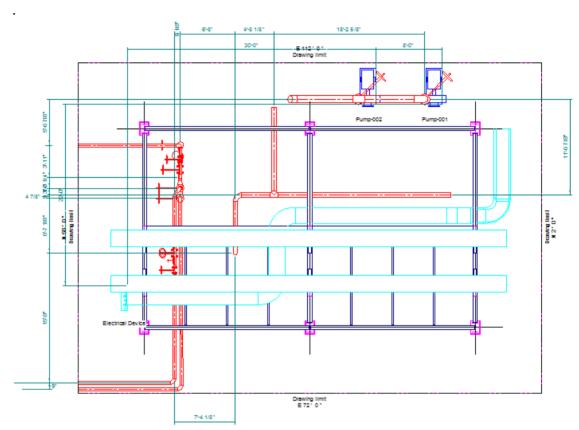

#### **Edit Dimension Rule**


- 46. Open Windows Explorer and browse to [Symbols Share]\Drawing\Catalog\Dimensions\Templates folder
- 47. Locate the 'Training Pipes H.xml' file and open it using a text editor.

48. Locate the <range> tag and set it to -1, set the rangeOffset to 0.05 and internalDimension to 0

- 49. Save the file.
- 50. Locate the 'Training Pipes V.xml' file and open it using a text editor.
- 51. Make the same changes as above.
- 52. Save the file.

#### Test View Style

- 53. Edit the 'Piping Plan 1' drawing.
- 54. Update View
- 55. Notice that the number of dimensions is vastly reduced because only the pipes within 50 mm of the matchline are now being dimensioned

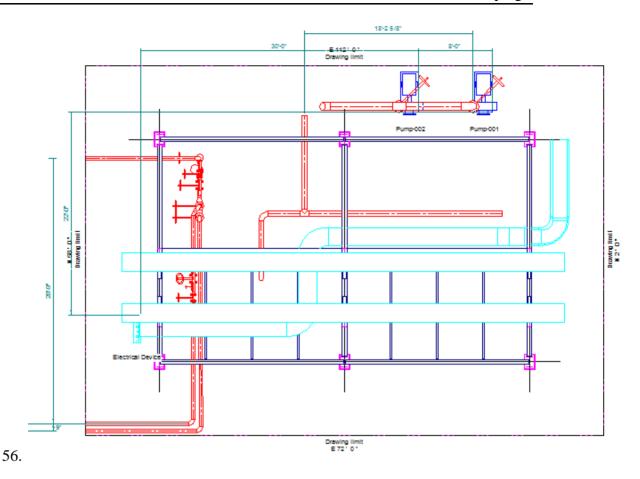


#### **Edit Dimension Rule**

- 57. Open Windows Explorer and browse to [Symbols Share]\Drawing\Catalog\Dimensions\Templates folder
- 58. Locate the 'Training Pipes H.xml' file and open it using a text editor.
- 59. Locate the <minimumDimension> tag and set it to 0.25 <minimumDimension> 0.25 </minimumDimension>
- 60. Save the file.
- 61. Locate the 'Training Pipes V.xml' file and open it using a text editor.
- 62. Make the same changes as above.
- 63. Save the file.

## Test View Style

- 64. Edit the 'Piping Plan 1' drawing.
- 65. Update View

66. Notice that the number of dimensions is further reduced because dimensions smaller than 10" are now included within their neighbouring dimensions.

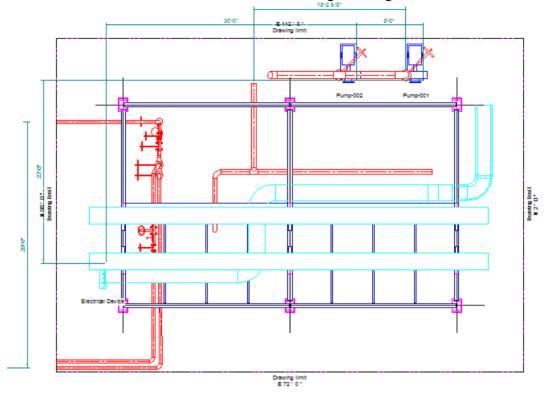


# Lab 22 Equipment Drawing by Query Package

#### **Objective**

- Use a graphic preparation rule to separate equipment body and nozzles to apply different graphic symbology to them.
- Create an orthographic drawing by query package to document equipment

#### **Define View Style**


- 1. Tools  $\rightarrow$  Define View Style
- 2. Create New Style named 'Training Nozzles'
- 3. Select style and Edit Properties
- 4. Click in the 'Graphic preparation rule' field and select 'More...'
- 5. Click 'New...'
- 6. Create rule 'Training Nozzles' as below

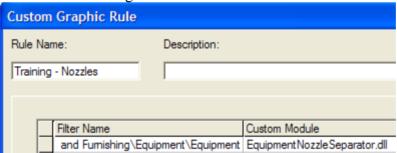

- 7. Click OK to save the rule.
- 8. Click OK to select the rule to use in the view style.
- 9. Click in the 'Filter Name' field in the first row in the view style and pick the Equipment filter selected above.
- 10. Press 'End' key to move to the end of the field.
- 11. Type ::Body




12. Click in 'Graphic Rule' field and select 'More..'

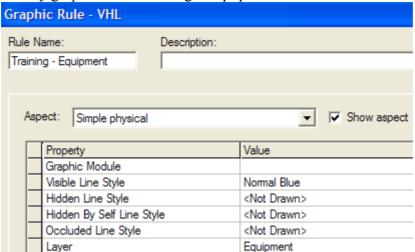


13. Modify graphic rule 'Training – Equipment' to remove the hidden line style.

- 14. Click OK to select graphic rule.
- 15. Click in the 'Filter Name' field in the second row and again pick the Equipment filter as above (hint: you can copy and paste from the first row).
- 16. Edit the filter name to be :: Nozzles
- 17. Click in 'Graphic Rule' field and select 'More..'
- 18. Define a new graphic rule 'Training Nozzles' as below.

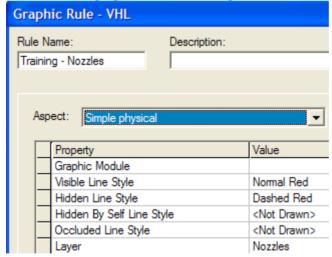


19. Select the label rule 'Name\_Line\_CA\_JL' for the first row and 'Name Circle CA L' for the second row as shown below

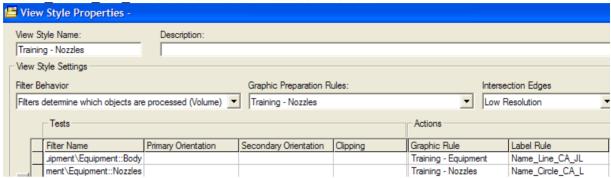


- 20. Click OK to save the view style.
- 21. Click Close to close the 'Define View Style' dialog.

#### **Define Template**


- 22. In the Management Console select the 'Drawings' folder, right mouse click and select 'New...'
- 23. In the 'Add Component' dialog, select 'Orthographic Drawings by Query' and click OK.

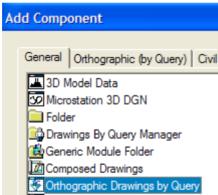


- 24. Select 'Orthographic Drawings' and rename to 'Equipment Drawings'
- 25. Right mouse click on 'Equipment Drawings' and click 'Setup...'

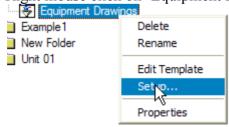


26. In the 'Select Filter' dialog, click 'More..' in the 'Filter' field and select the 'Equipment' filter.

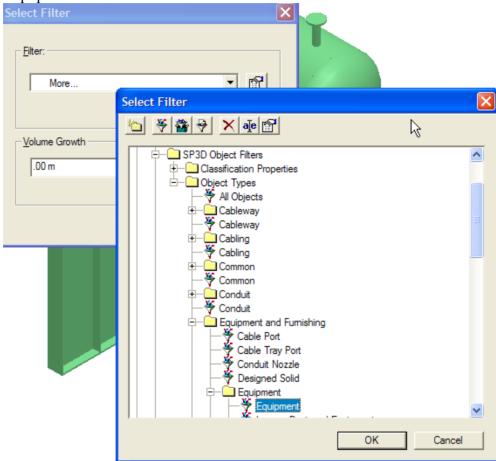


- 27. Click 'OK'.
- 28. Right mouse click on 'Equipment Drawings' and click 'Edit Template'




29. In the 'Select Template' dialog pick the 'D Wide' template and click OK.

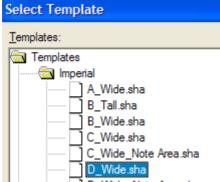


- 30. Place a drawing view from  $X = 0^{\circ}$  5",  $Y = 1^{\circ}$ 7" to  $X = 2^{\circ}$  6",  $Y = 0^{\circ}$  5"
- 31. Enter values as shown in the 'Drawing View Properties' and click OK. Be sure to select Orientation as 'Looking Northeast (ISO)'

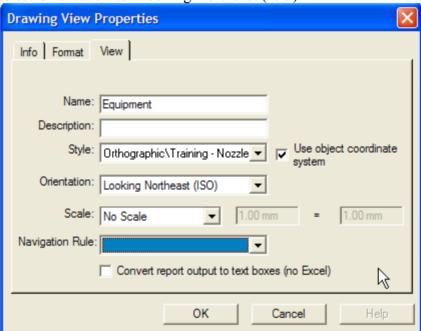

- 32. Close drawing editor and say 'Yes' when prompted.
- 33. Right mouse click on 'Equipment Drawings' and click 'Save Package...'

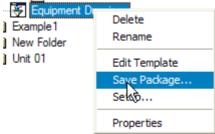


34. In the 'Save Package' dialog, enter name and description as shown and select the 'Orthographic (by Query)' tab.

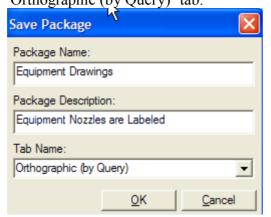

35. Click OK to save package.


#### Test Package

- 36. Right mouse click on the 'Drawings' folder and click 'New...'
- 37. In the 'Add Component' dialog, select 'Drawings By Query Manager' and click OK.
- 38. Rename the newly created component to 'Equipment Drawings by Query'
- 39. Right mouse click on 'Equipment Drawings by Query' and click 'Setup...'

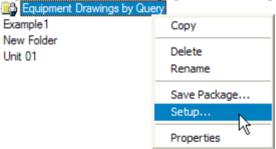


- 40. In the 'Filter' field, select the 'Plant Filters All' filter.
- 41. In the 'Package' field, select the 'Equipment Drawings' package.
- 42. Click OK.
- 43. Right mouse click on 'Equipment Drawings by Query' and click 'Run Query'

44. Expand hierarchy 'A2 – U04 – Equipment – Equipment Drawings' and click 'Create Drawing(s)'

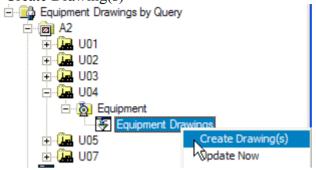

45. Right mouse click '40E-101A' and select 'Update Now'. You view should resembled the picture shown below.

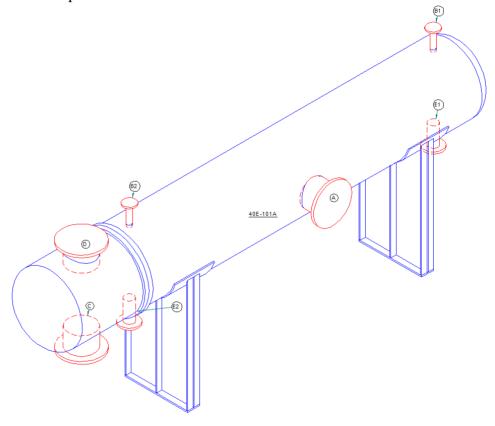

# Lab 23 WBS Project based View Style (Optional)


#### **Objective**

• Use 'Asking' filter in a view style, the answers to the parameters are WBS project names

#### **Define View Style**


- 1. Select Tools → Define View Style
- 2. Create a new style named 'Training WBS Project'

3. Add a filter in the first row named 'AllProject' (based on Project Purpose = Project) defined as follows

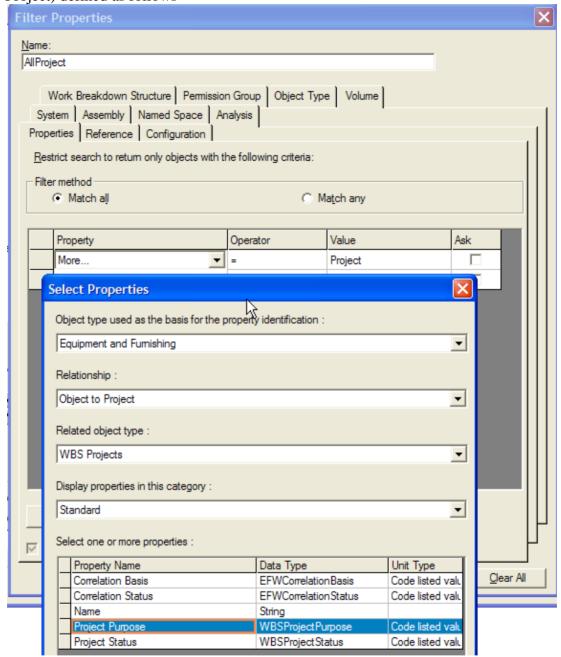


- 4. Use a graphic rule named 'Training Other Projects' that uses the 'Normal Green' line style.
- 5. Add a filter in the second row named 'Existing' (based on Project Purpose = As-Built) similar to the filter above.
- 6. Use a graphic rule named 'Training Existing' that uses 'Normal Lt Gray' as the line style.

7. Add a filter in the third row named 'Project' defined by selecting 'User of filter supplies value' check box on the 'Work Breakdown Structure' tab of the filter.

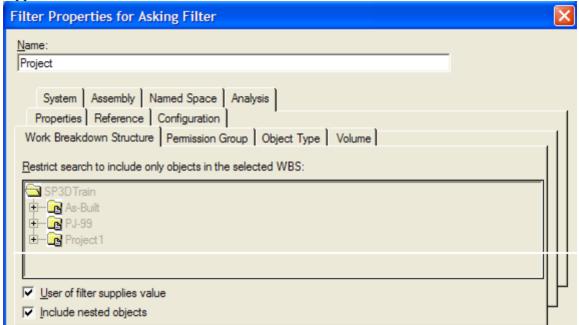

8. Use a graphic rule named 'Training – Current Project' that uses 'Normal Blue' as the line style.

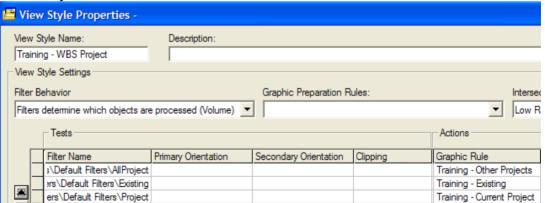

9. Note that the order of the lines in the view style is important and that current project must appear in the view style after the other projects.

### Test View Style

- 10. Switch to 'Space Management' task.
- 11. Define workspace using Plant Filters Training Filters U03
- 12. Define a volume that includes all objects from U03 and name it 'U03 Volume'
- 13. Switch to 'Structure' task.
- 14. Set locate filter to 'Member Parts'
- 15. Select all beams on the first floor.
- 16. Set 'Active Project' to 'Project1'

- 17. Select menu Project → Claim
- 18. Select all beams on the second floor.
- 19. Set 'Active Project' to 'PJ-99'
- 20. Select menu Project → Claim
- 21. Select all objects in workspace.
- 22. Set 'Active Project' to 'As-Built'
- 23. Select menu Project → Claim
- 24. A warning is shown, OK the warning.
- 25. Create a new drawing named 'WBS Test'
- 26. Place a view in the drawing that uses the 'Training WBS Projects' view style, scale family 'Fit to Scale' and look direction 'Looking Northeast (Down)'
- 27. Associate view to volume 'U03 Volume' and filter 'U03'
- 28. Close drawing editor.
- 29. Open drawing console.
- 30. Right mouse click on 'WBS Test', switch to Style tab, in the WBS Project field, pick 'Project1' and click OK.
- 31. Right mouse click on 'WBS Test' and 'Update Now'
- 32. Review the drawing. Note that object in Project1 are blue while those in PJ-99 are green.
- 33. Right mouse click on 'WBS Test', switch to Style tab, in the WBS Project field, pick 'PJ-99' and click OK.
- 34. Right mouse click on 'WBS Test' and 'Update Now'
- 35. Review the drawing. Note that object in Project1 are green while those in PJ-99 are blue.


# Lab 24 MicroStation 3D DGN Output

#### **Objective**

- Copy line styles from resource file into Styles.sha
- Create 3D MicroStation output graphics from SP3D objects

#### **Define Style**

- 1. Unzip the file DGN\_ViewStyle.zip into your Symbols share
- 2. Open the file Styles.sha in the [Symbol Share]\Drawings\Catalog\Templates folder
- 3. Select menu Format  $\rightarrow$  Style
- 4. Click the 'Resources' button
- 5. Click the 'Add' button

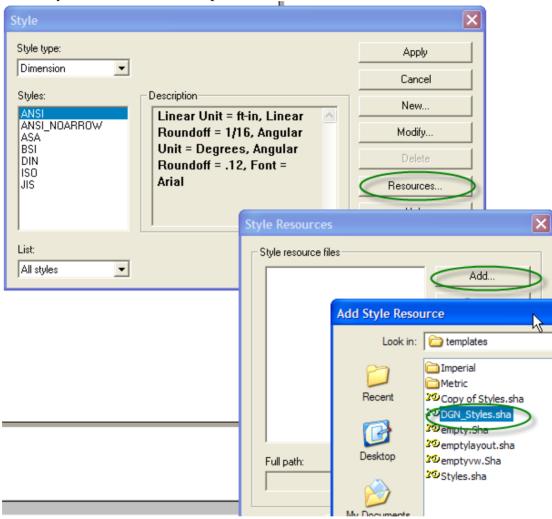


6. Navigate to [Symbol Share]\Drawings\Catalog\Templates and pick the DGN Styles.sha file and click Open

- 7. Click OK
- 8. Click Close.



- 9. Start the 'Line' command from vertical toolbar
- 10. Pick the 'Normal Cyan' style and place a line.
- 11. Similarly pick each of the colors shown in the picture below and place a line. As you place each line, the line style that uses the line is copied into your active

Styles.sha file.

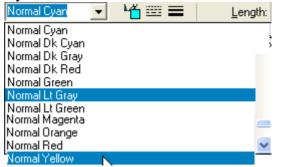


- 12. Select all lines and delete them.
- 13. Save file and exit.

#### Create DGN Output

- 14. Switch to 'Space Management' task
- 15. Define workspace using Plant Filters All
- 16. Select menu Tools → Drawing Console
- 17. Right mouse click on 'Drawings' and click 'New..'
- 18. From the 'Add Component' dialog, select 'MicroStation 3D DGN' and click OK.
- 19. Right mouse click on 'New 3D DGN Drawings' and click 'Setup...'
- 20. Select the 'DGN Export' view style and click OK.
- 21. Click OK again to finish Setup.
- 22. Select all objects in the plant using fence select.
- 23. Click 'Place Drawing Volume by Selection' command.



- 24. Select the 'New 3D DGN Drawings' as 'Drawing Type' and 'SP3DTrain' as the 'Space Folder' and click 'Finish'
- 25. Select menu Tools → Drawing Console
- 26. Right mouse click on 'New 3D DGN Drawings' and click 'Create Drawing(s)'
- 27. Right mouse click on 'New 3D DGN Drawings-1-0001' and click 'Update Now'



28. When the output completes, double-click to open the DGN.


## Lab 25 Search Folder

#### **Objective**


- The "Search Folder" component allows you to search for documents based on common properties such as out-of-date status, approval, or documents that have been published to a certain contract in integrated environments. You can create a Search Folder component in any folder in the Management Console. After running the query defined for a Search Folder, you can perform such tasks as Update or Publish as if you were working from the actual owning component location for the documents.
- 1. While in the Drawings and Reports Task, Right-Click on the root component "SP3D Train", then in the drop-down list Select "New".



- 2. From the "Add Component" dialog, on the General Tab, Select "Search Folder", and Click OK.
- 3. This will add a component called "New Search Folder" into the Drawings and Reports hierarchy.
- 4. Rename 'New Search Folder' to 'Out-of-date Drawings'
- 5. Right-Click on "Out-of-date Drawings" and Select "Setup".

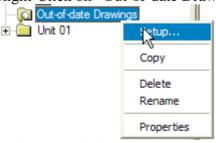


6. In the Setup dialog, for the "Filter" property, drop down the select list and choose "More".

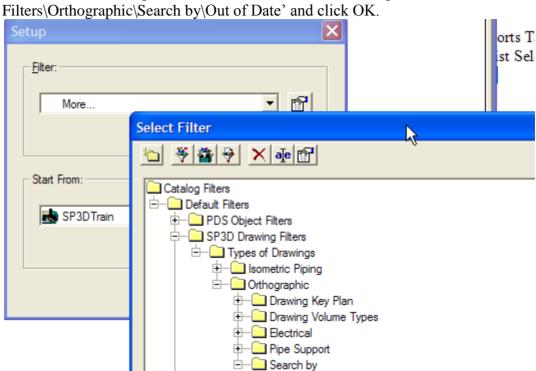

💝 Out of Date

7. Pick the filter 'Catalog Filters\Default Filters\SP3D Drawing Filters\Orthographic\Search bv\Out of Date' and click OK.

- 8. On the Setup dialog, set the "Start From:" property to "SP3DTrain". Click OK to save and exit this dialog.
- 9. In the Management Console, right click on the "Out-of-date Drawings" and select "Run Query". This will return the drawings that meet the criteria in the filter definition.

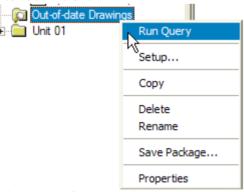

- 10. Select one of the drawings with a red X and click 'Update Now'. The drawing updates with a green check mark.
- 11. Run query again on the 'Out-of-date Drawings' folder, notice that the updated drawing falls off the list.


## Lab 26 Batch Management

#### **Objective**


• Setup a batch server and submit and review batch jobs

#### Setup Batch Server


- 1. Open Windows Explorer
- 2. Navigate to [SP3D Install Location]\Drawings\Middle\bin and run SetupBatchServer.exe
- 3. Check the box next to SP3DTrain\_MDB and click OK.

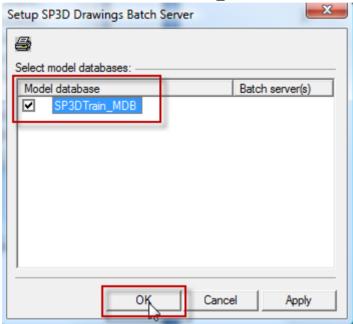

4. A message is shown about print devices, click OK to continue.

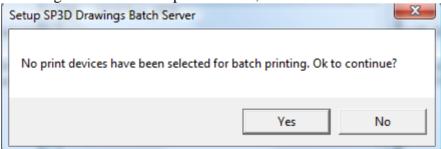



5. Enter username and password for the account under which batch jobs are to be run and click OK.

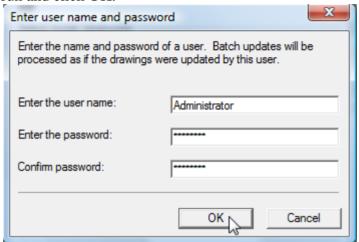

### Submit a batch job


- 6. Enter SmartPlant 3D and switch to the Drawings and Reports task.
- 7. Right mouse click on Piping Plan 1 and select Batch Update

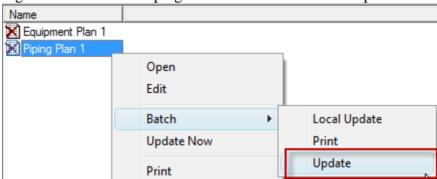


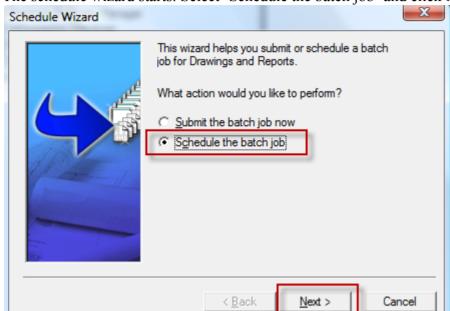

8. The schedule wizard starts. Select 'Schedule the batch job' and click Next.

9. Name the job 'Piping Plan 1', select 'One time only' and click Next

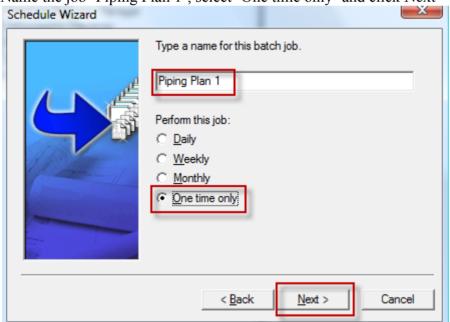

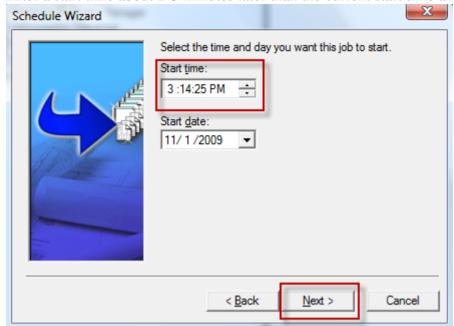


10. Enter a start time about 2-3 minutes later than the current start time and click Next


11. Click Finish to add the job to the batch server.

#### **Monitor Batch Jobs**

12. Select Tools → Batch Management. The batch management form is shown.

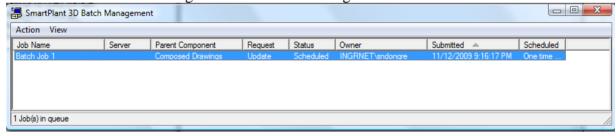

13. After about a minute, click View → Refresh. If the batch server has picked up the job, it is shown in the batch manager.

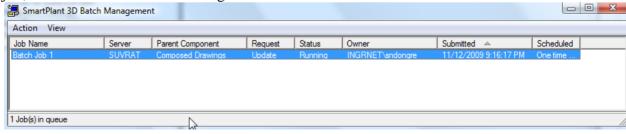

Windows Task Manager File Options View Applications Processes Services Performance Networking Image Name User Name CPU Memory (... Descrip ^ ApMsgFwd.exe 676 K ApMsg ≡ sndongre 00 ApntEx.exe 00 1,056 K Alps Pc sndongre Apoint.exe sndongre 00 1,684 K Alps Pc AsfIpMon.exe SYSTEM 1,348 K Broadc 00 9,824 K Windov audiodg.exe LOCAL ... 00 BatchServer.exe sndongre 00 3,156 K BatchS BatchTier.exe sndongre 00 22,368 K BatchT

14. Start Windows Task Manager, notice that a BatchTier.exe process has started.

15. After another minute or so, the job completes and vanishes from the batch server.